
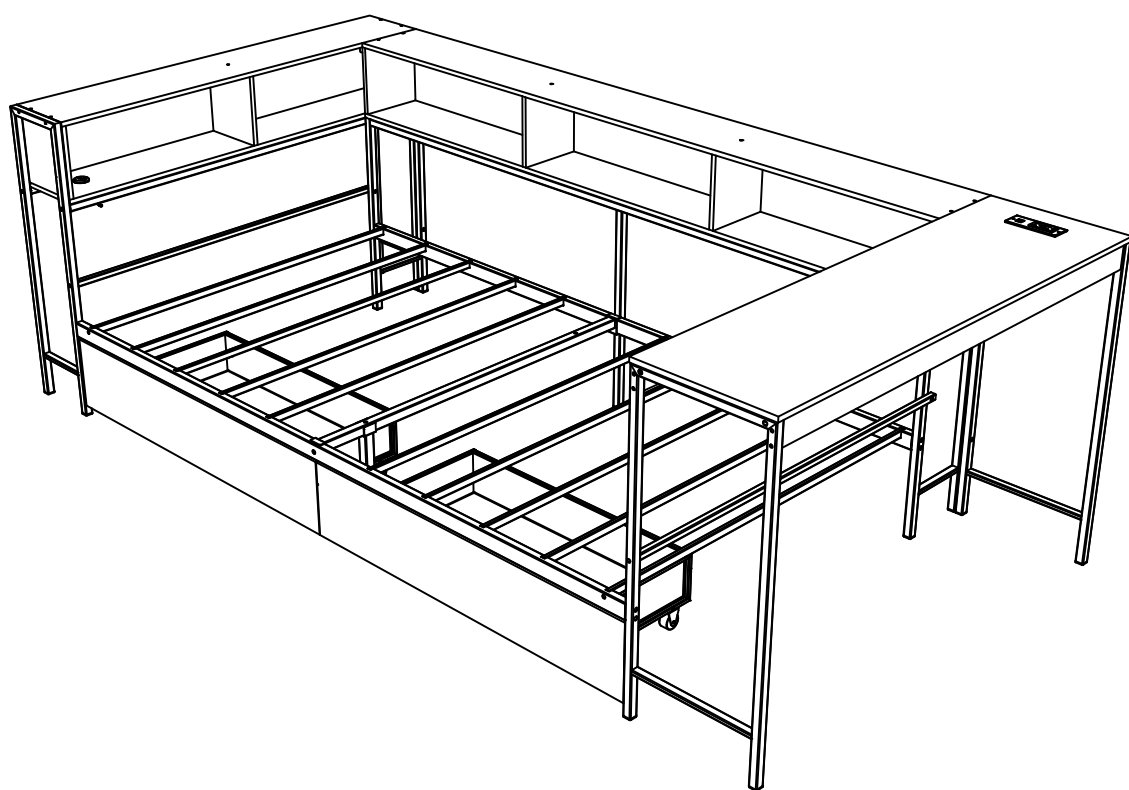




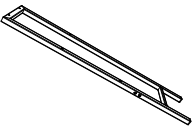
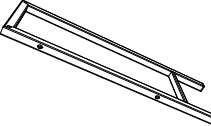

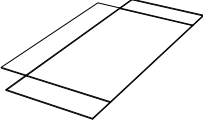























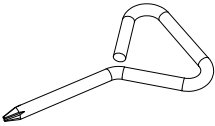



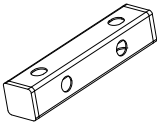





Assembly Instruction

①  1pcs	②  1pcs	③  2pcs
④  2pcs	⑤  1pcs	⑥  1pcs
⑦  1pcs	⑧  1pcs	⑨  1pcs
⑩  2pcs	⑪  1pcs	⑫  1pcs
⑬  8pcs	⑭  1pcs	⑮  2pcs
⑯  2pcs	⑰  2pcs	⑱  2pcs
⑲  2pcs	⑳  1pcs	㉑  1pcs
㉒  1pcs	㉓  1pcs	㉔  1pcs
㉕  1pcs	㉖  2pcs	㉗  2pcs
㉘  1pcs	㉙  3pcs	㉚  1pcs
㉛  1pcs	㉜  1pcs	㉝  1pcs
㉞  2pcs	㉟  2pcs	


Assembly Instruction

A  M5*40mm 35PCS	B  M6*30mm 29PCS	C  M6*35mm 22PCS	D  M6*35mm 4PCS
E  M4*10mm 5PCS	F  1PCS	G  M6*50mm 5PCS	H  M6 4PCS
I  M4*14mm 24PCS	J  4PCS	K  M6*25mm 8PCS	L  1PCS
M  1PCS	N  M4*18mm 24PCS	O  1.0 8PCS	P  1PCS
Q  1PCS	R  M4 1PCS	S  M6 1PCS	T  M6 1PCS
U  24.2cm 1PCS	V  1PCS	W  1PCS	

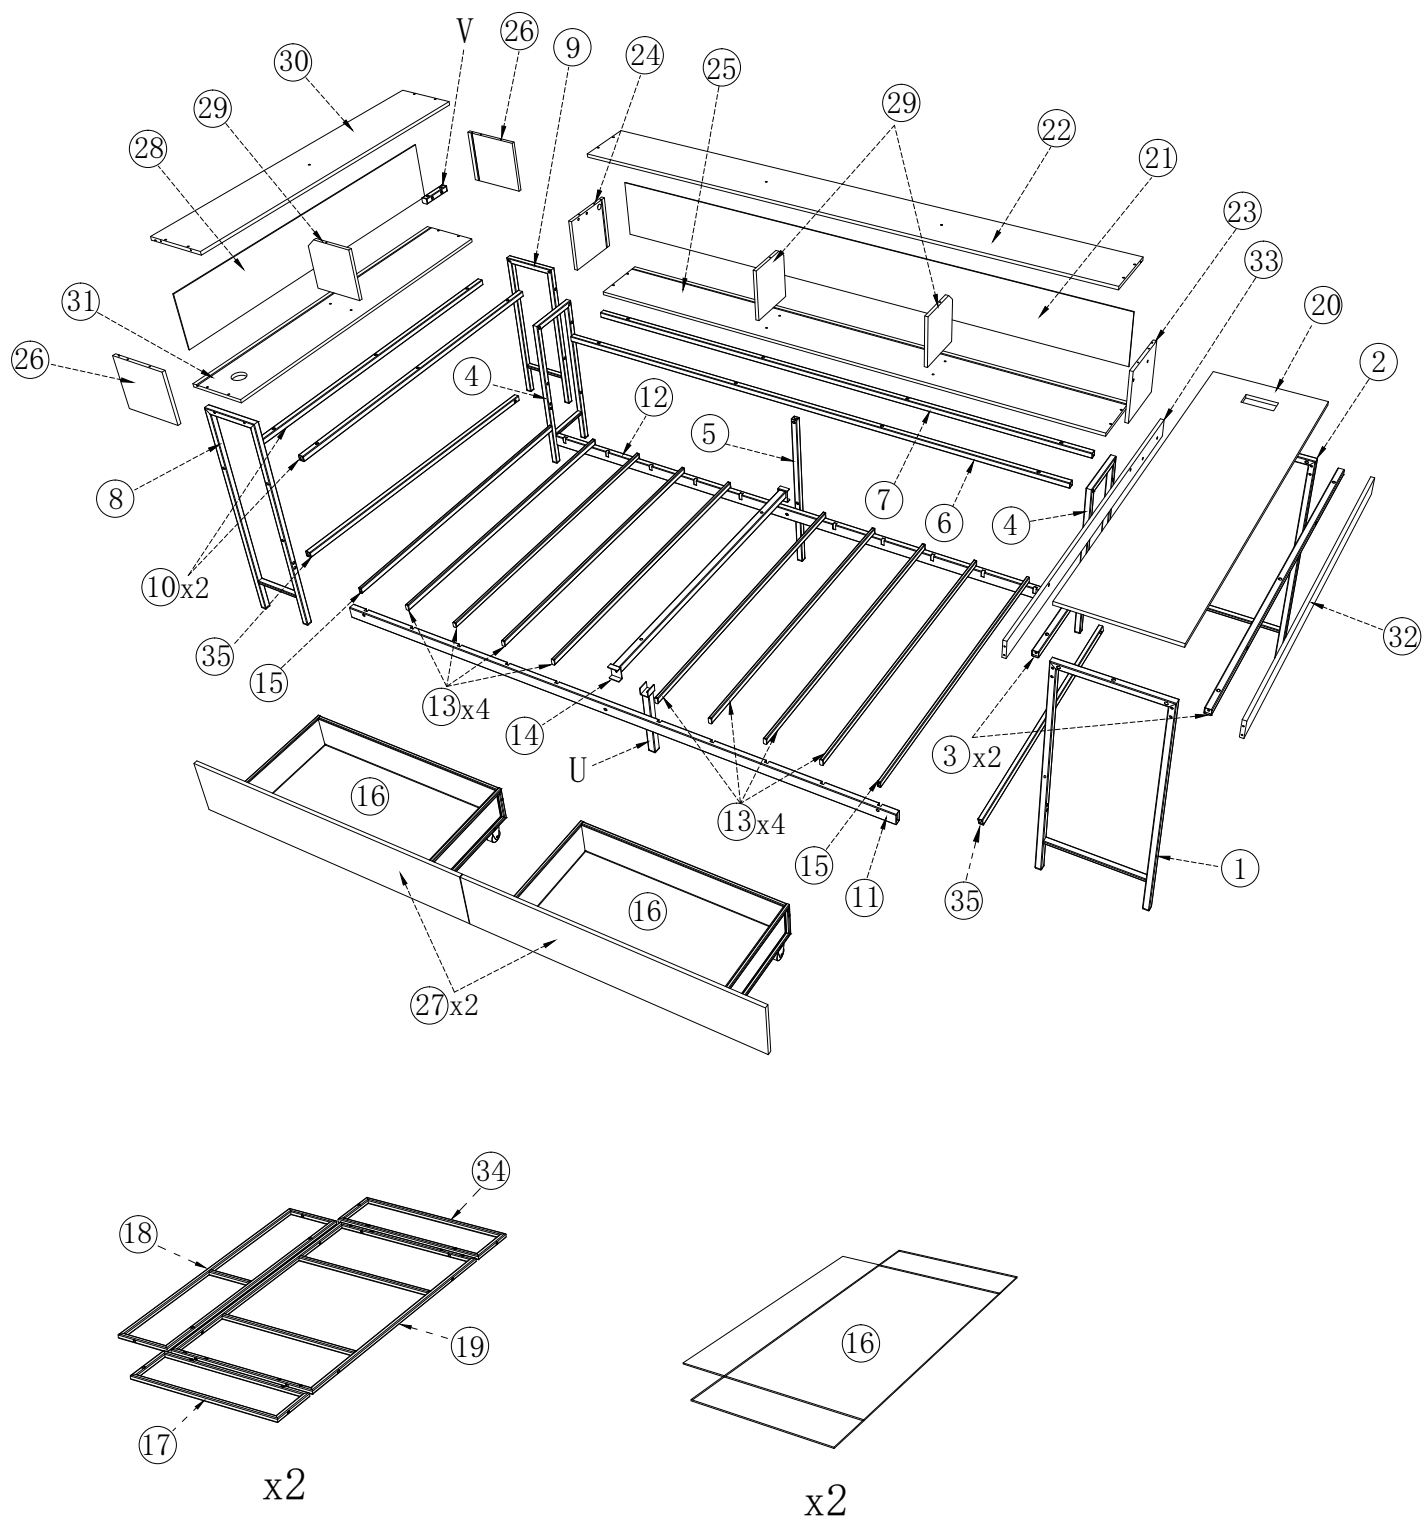


STEP 1

A		M5*40mm	6pcs
---	---	---------	------

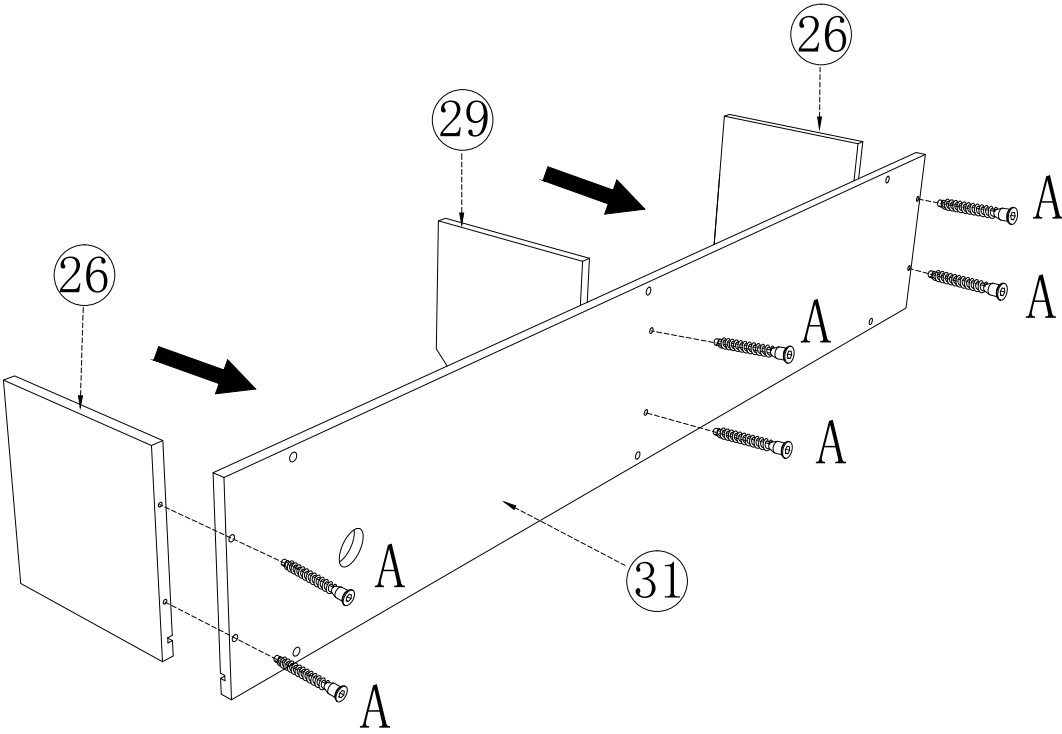


STEP 2

A		M5*40mm	5pcs
---	---	---------	------

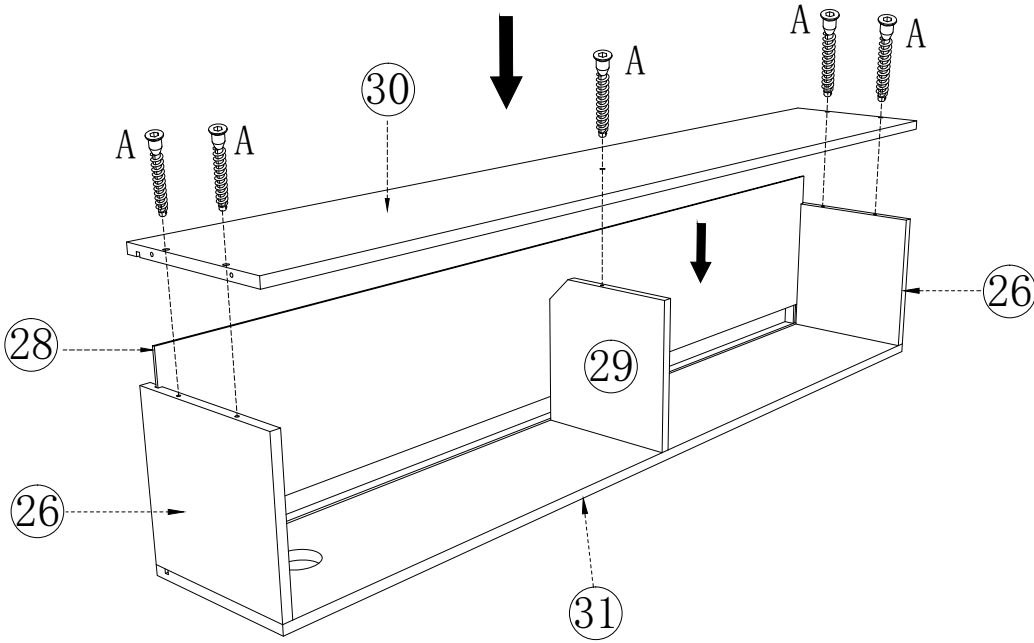


STEP 3

B  M6*30mm 2pcs

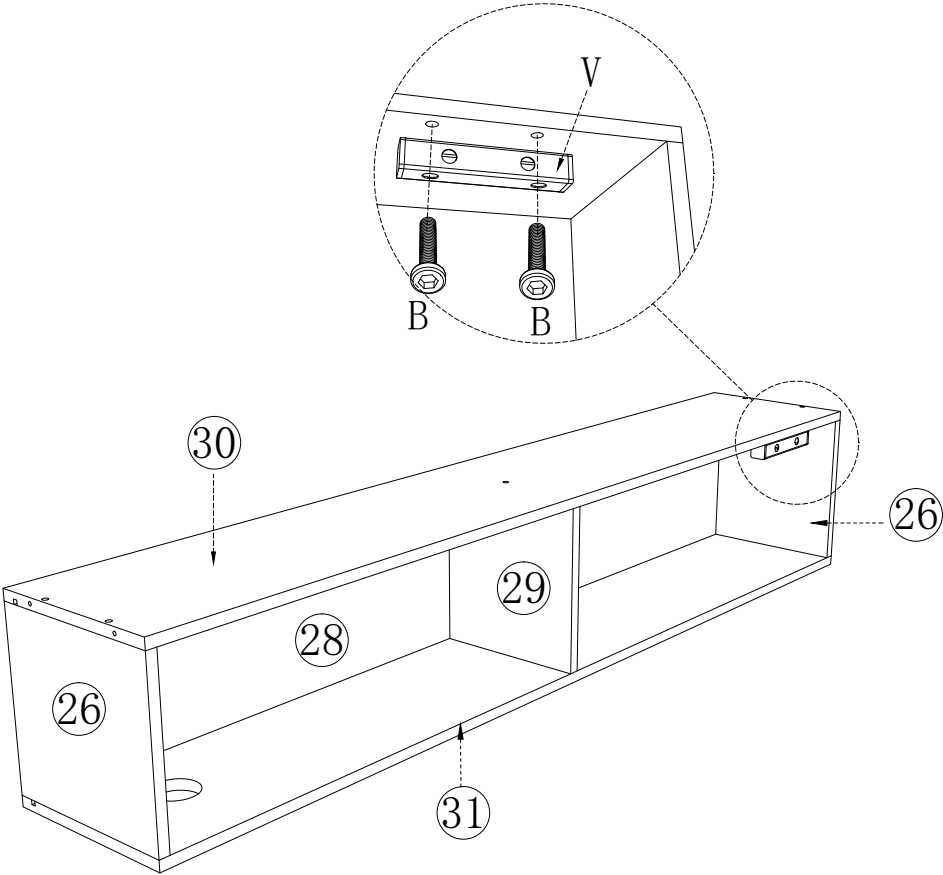


STEP 4

A  M5*40mm 8pcs

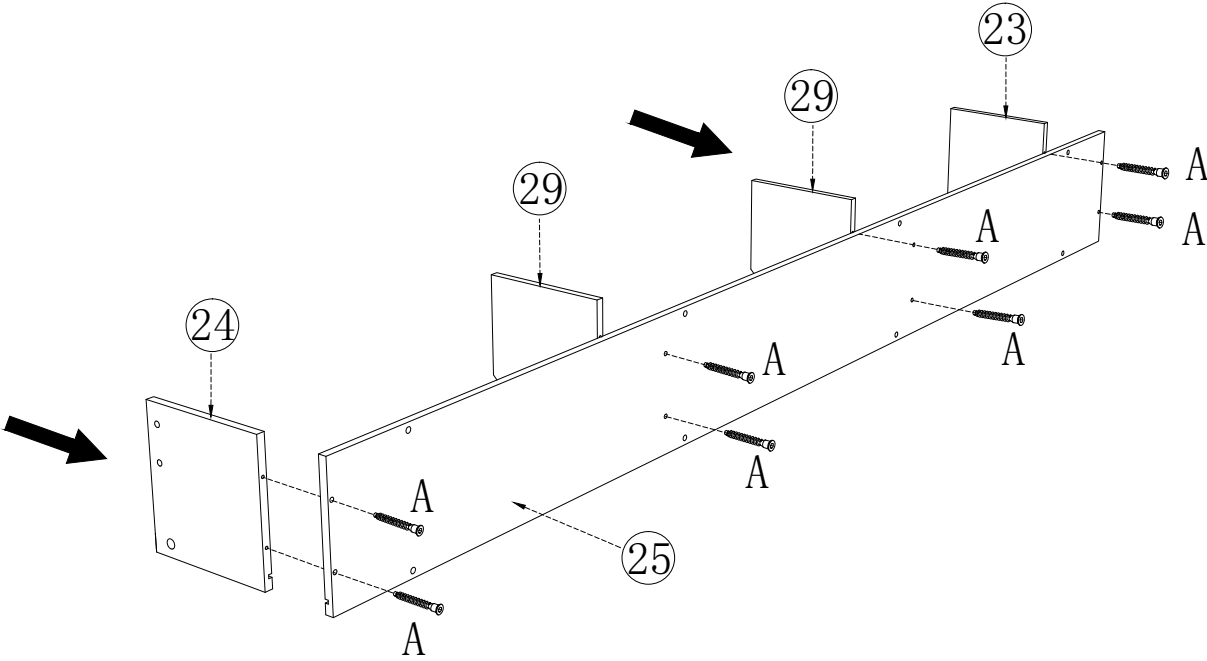


STEP 5

A		M5*40mm	6pcs
---	---	---------	------

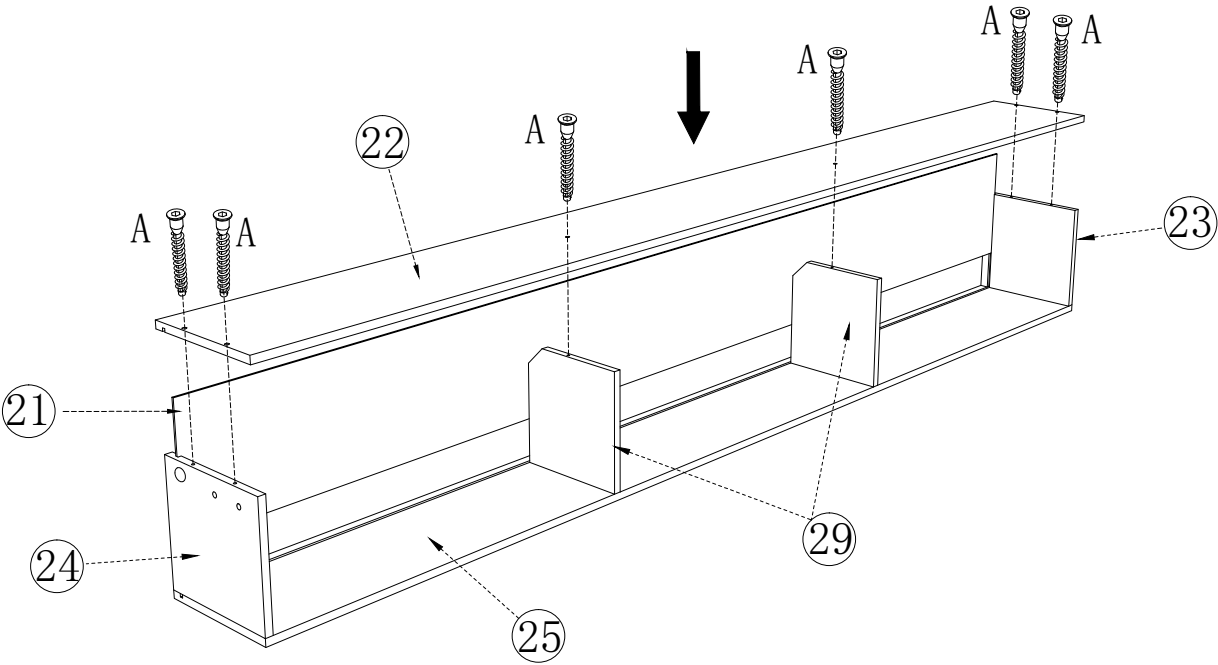


STEP 6

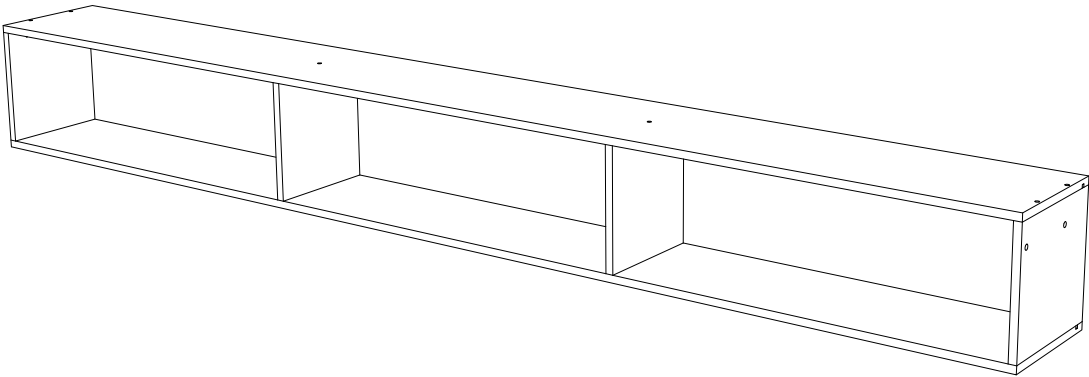


STEP 7

I		M4*14mm	8pcs
J			4pcs

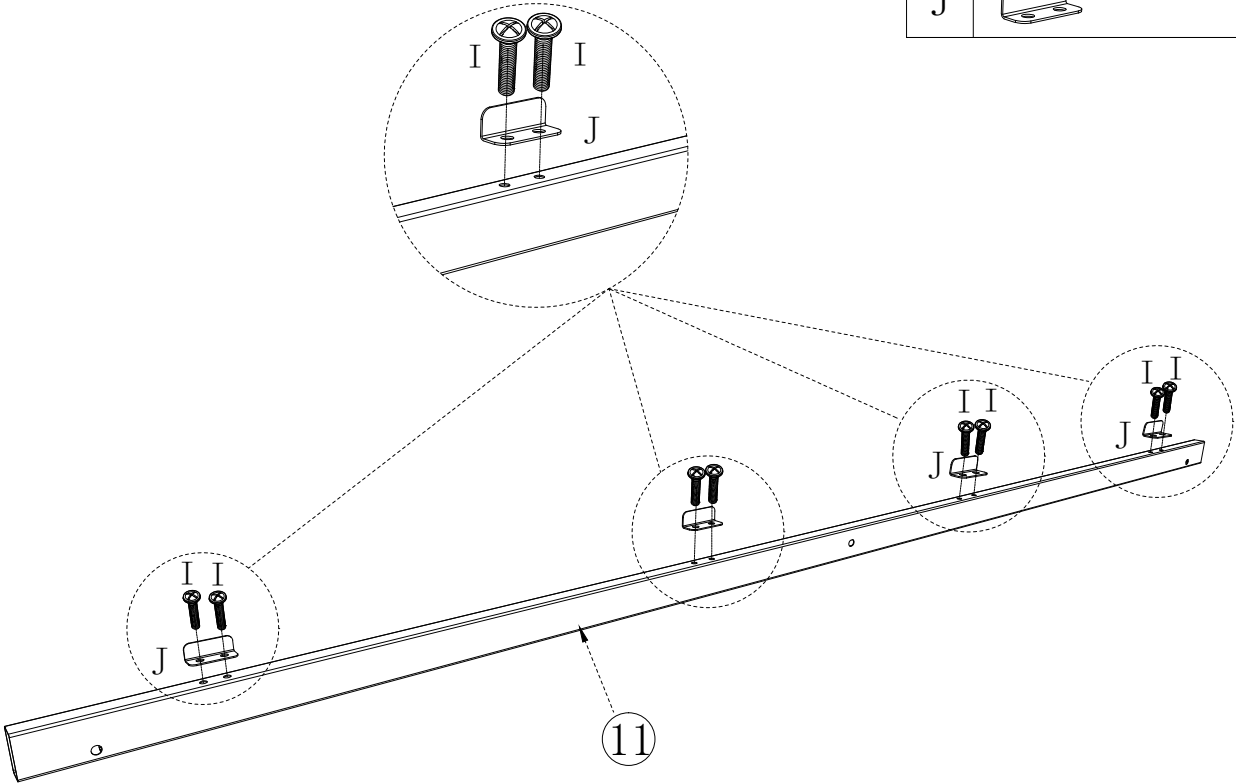


STEP 8

K		M6*25mm	4pcs
---	---	---------	------

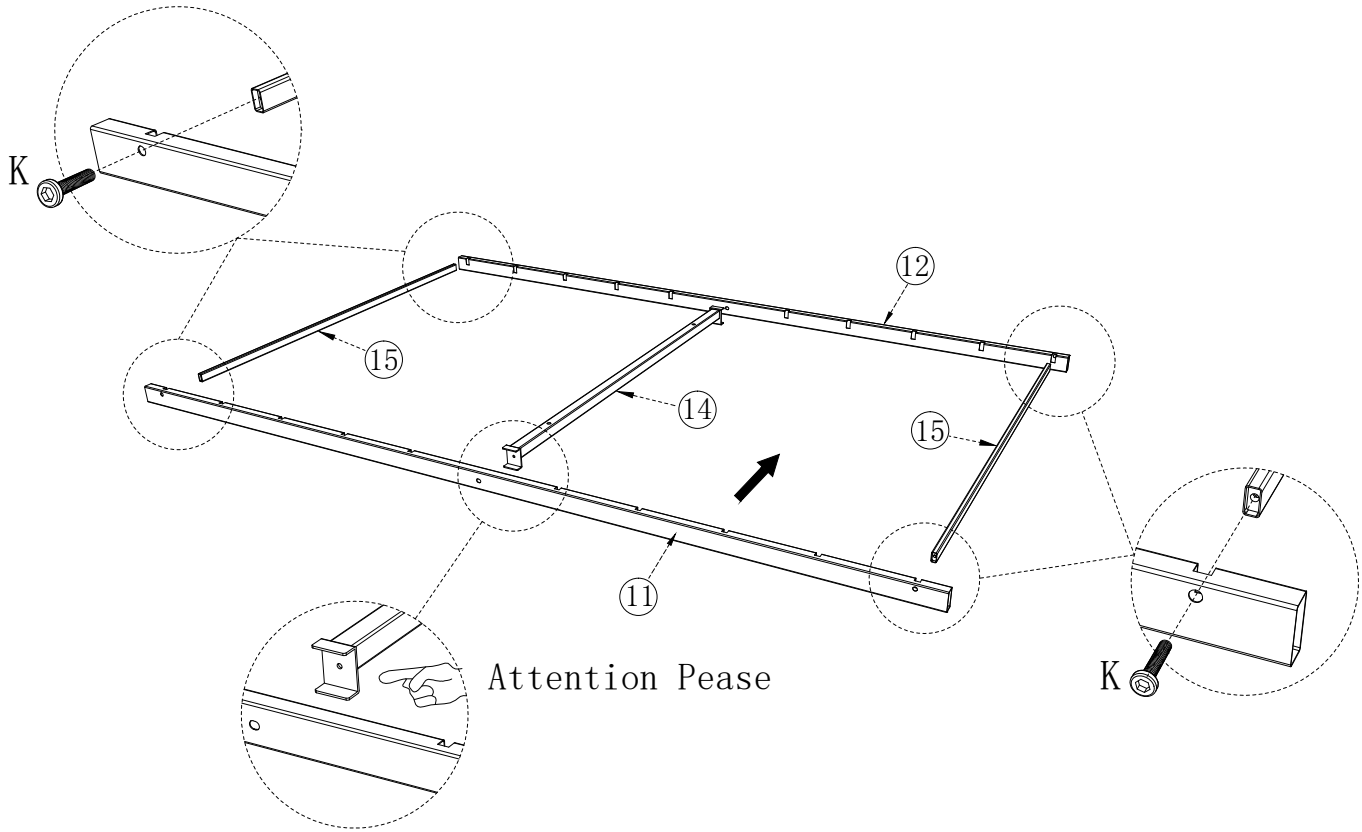


STEP 9

C		M6*35mm	8pcs
---	---	---------	------

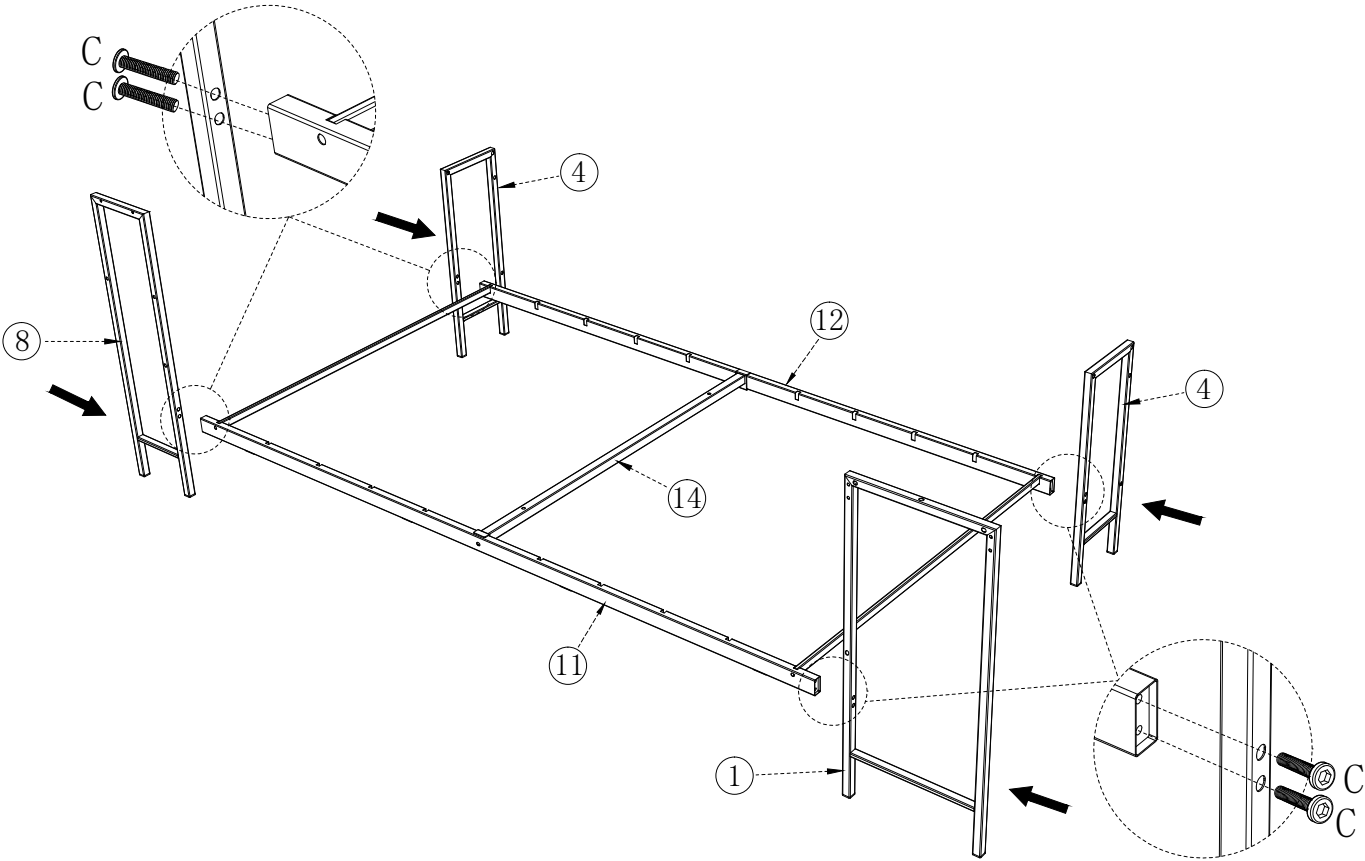


STEP 10

C		M6*35mm	1pcs
G		M6*50mm	1pcs

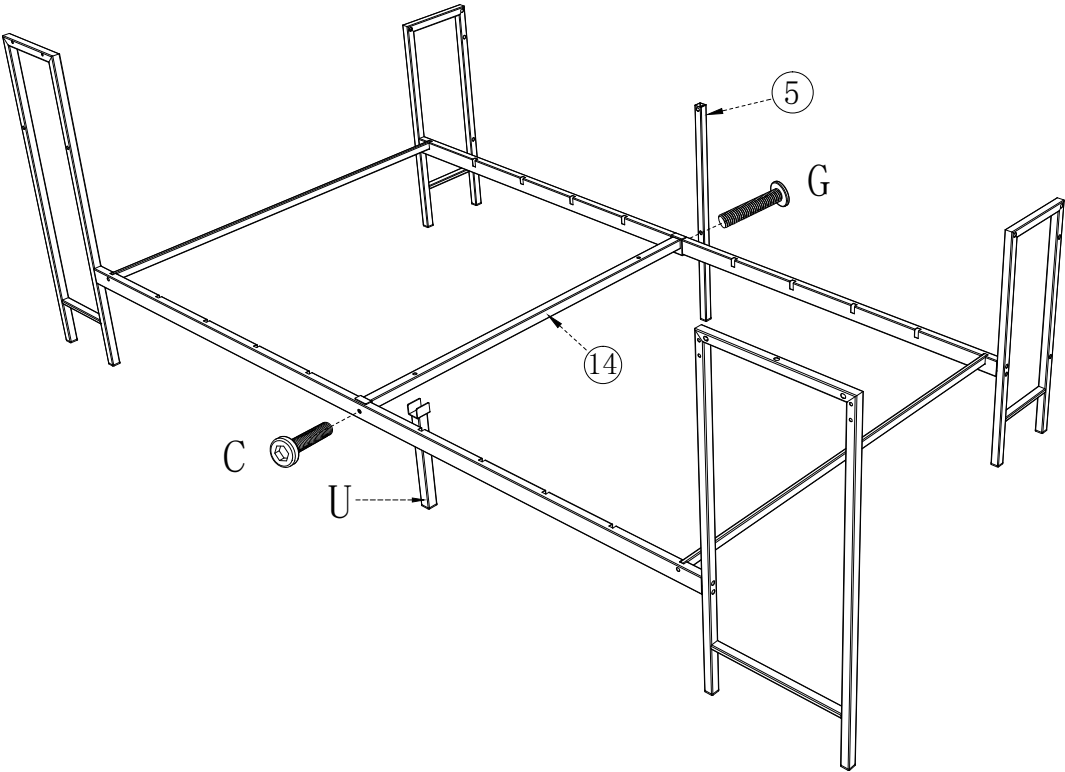


STEP 11

D		M6*35mm	4pcs
---	---	---------	------

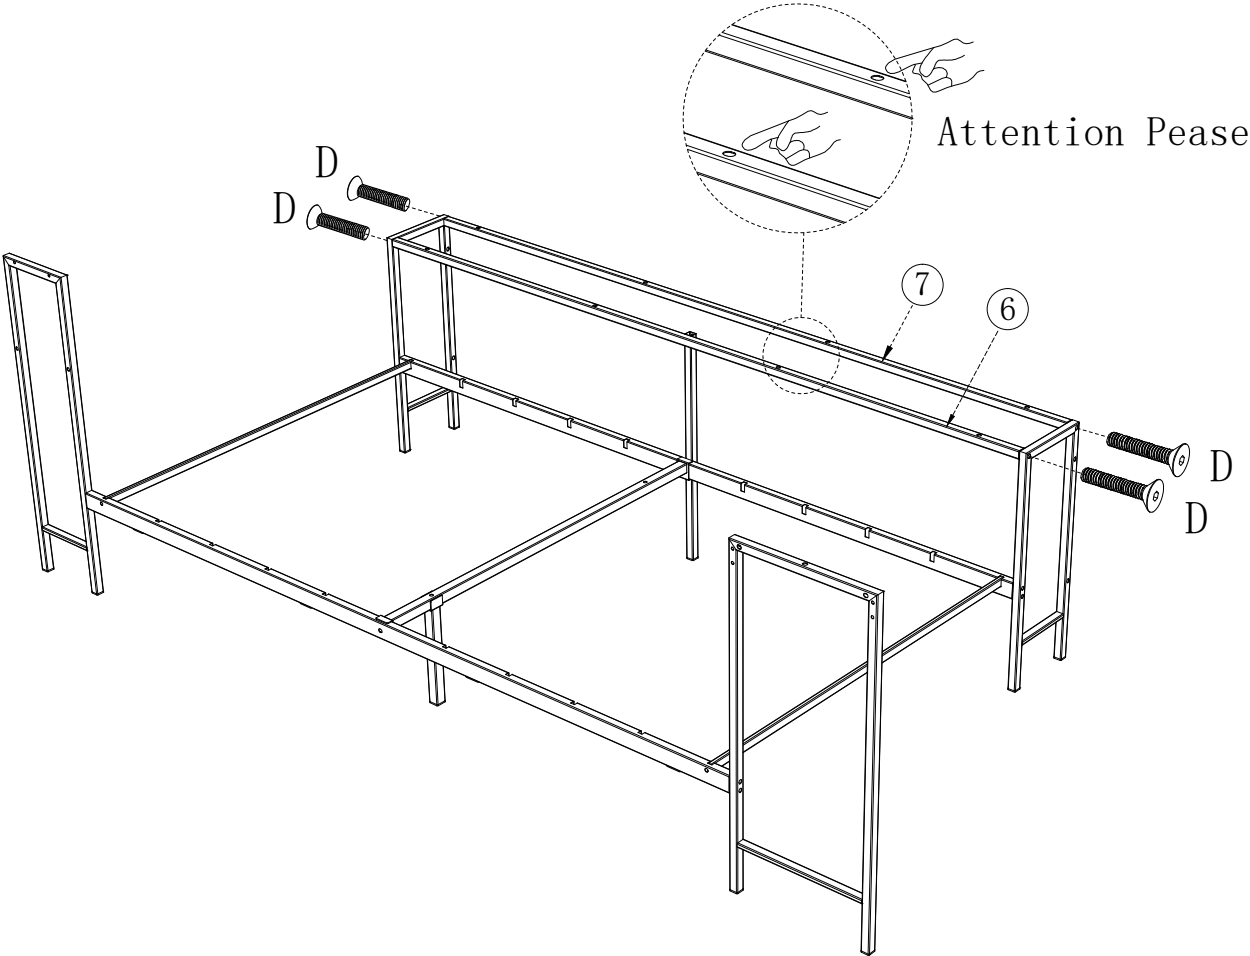


STEP 12

B		M6*30mm	1pcs
---	---	---------	------

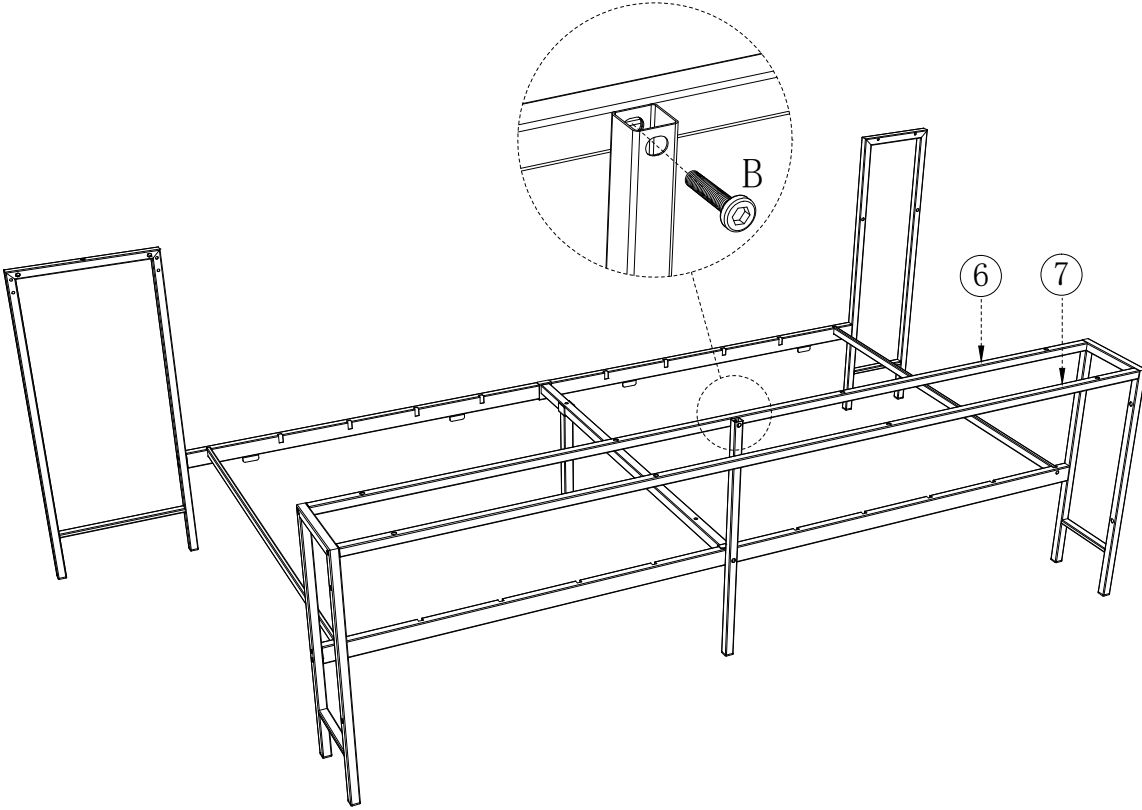

STEP 13


G		M6*50mm	2pcs
H		M6	2pcs

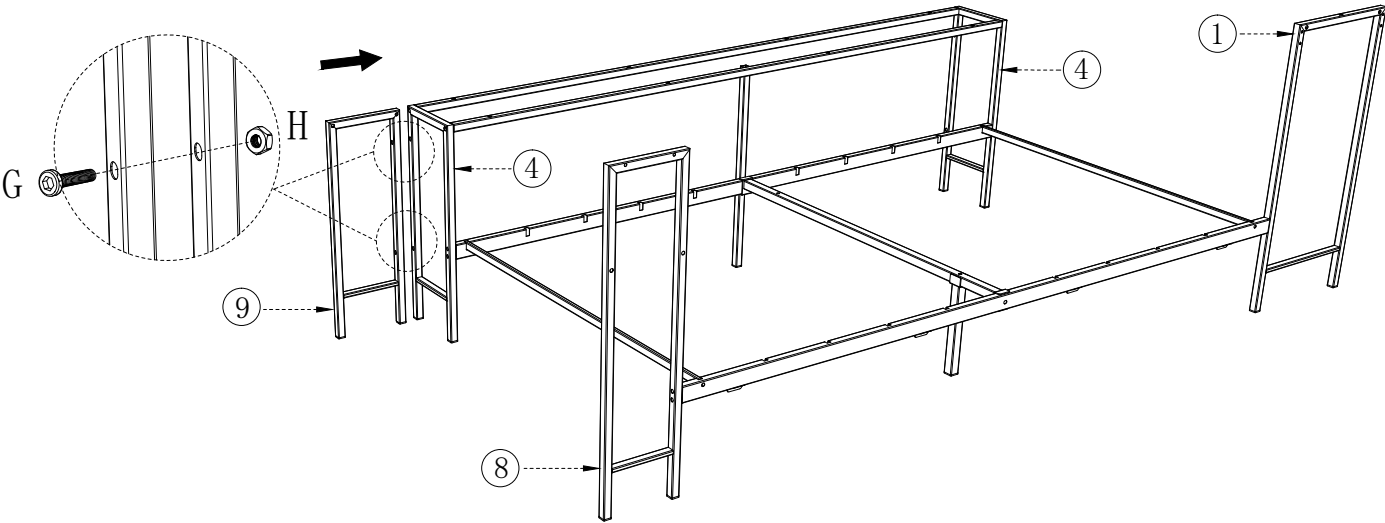


STEP 14

C		M6*35mm	4pcs
---	---	---------	------

Attention Pease

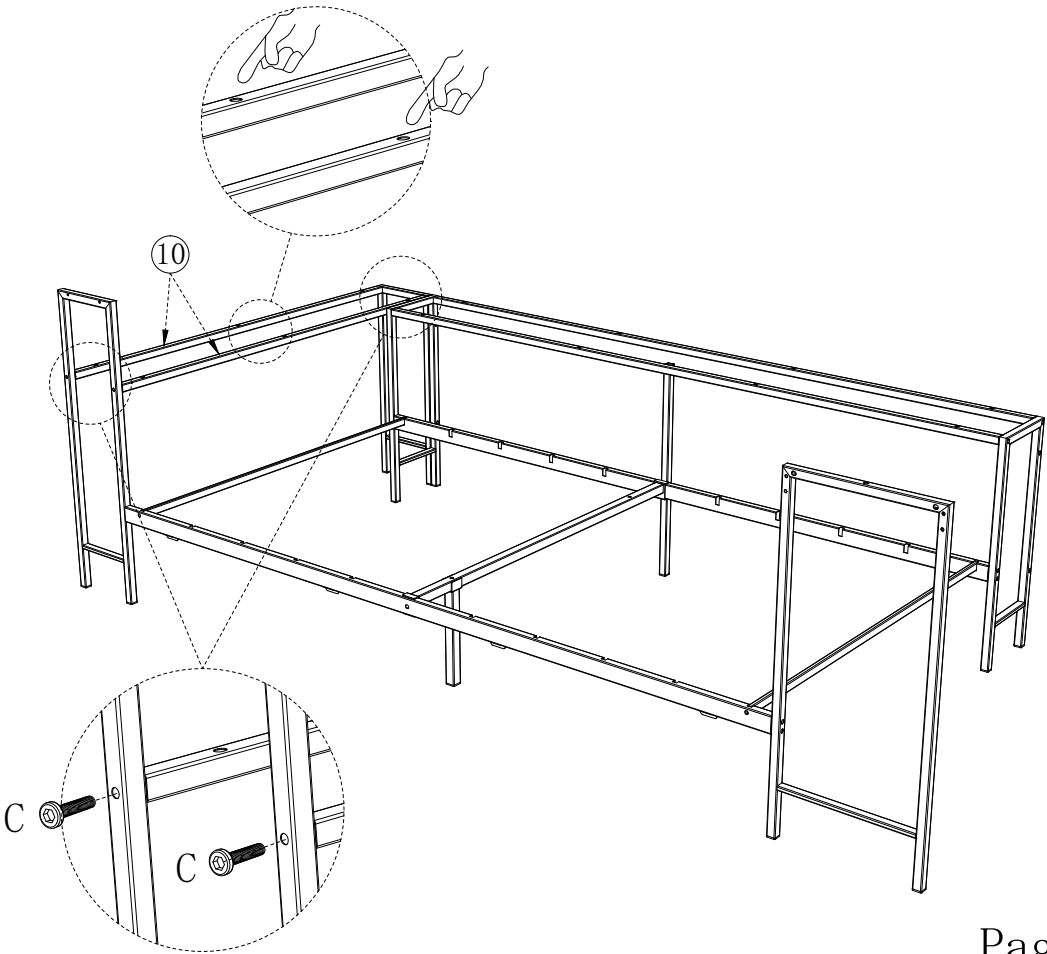


STEP 15

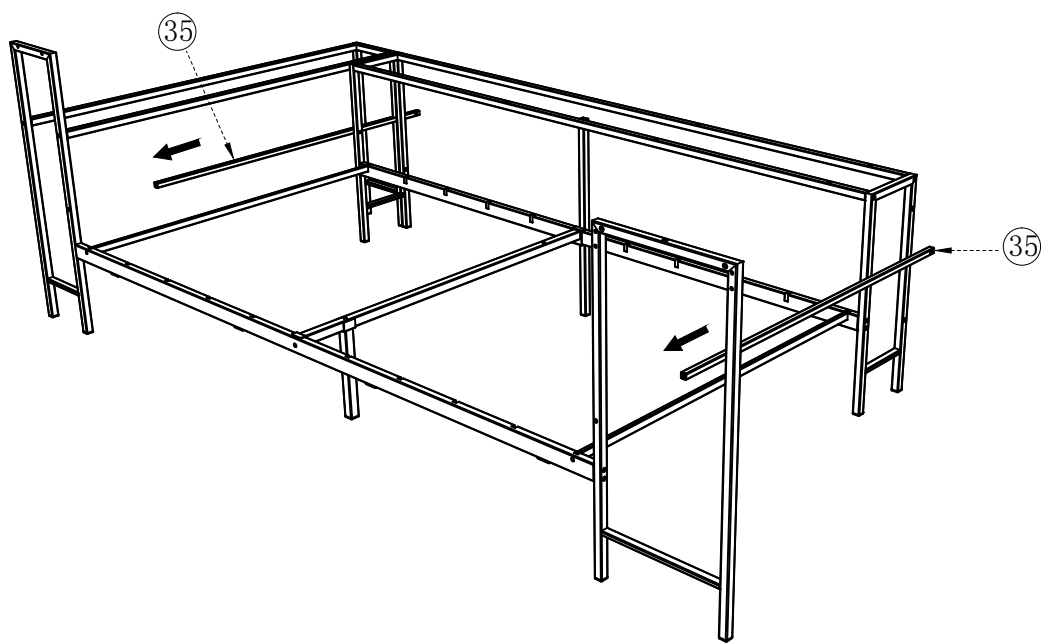


STEP 16

C		M6*35mm	4pcs
---	---	---------	------

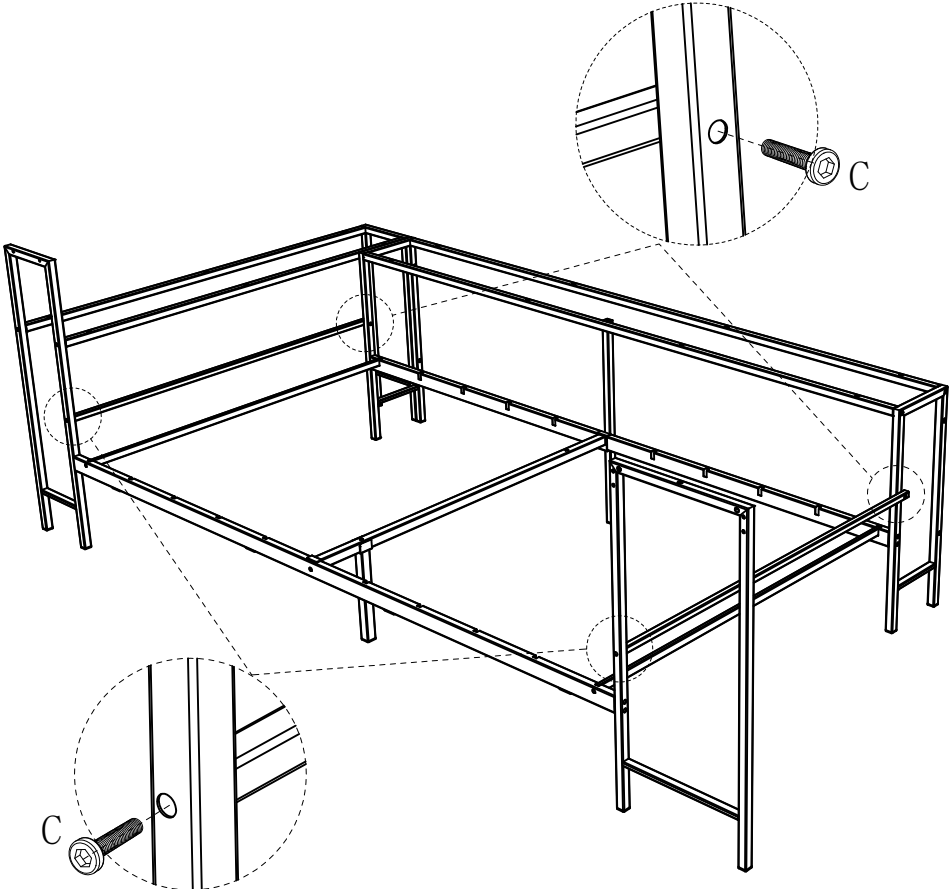


STEP 17

G		M6*50mm	2pcs
H		M6	2pcs

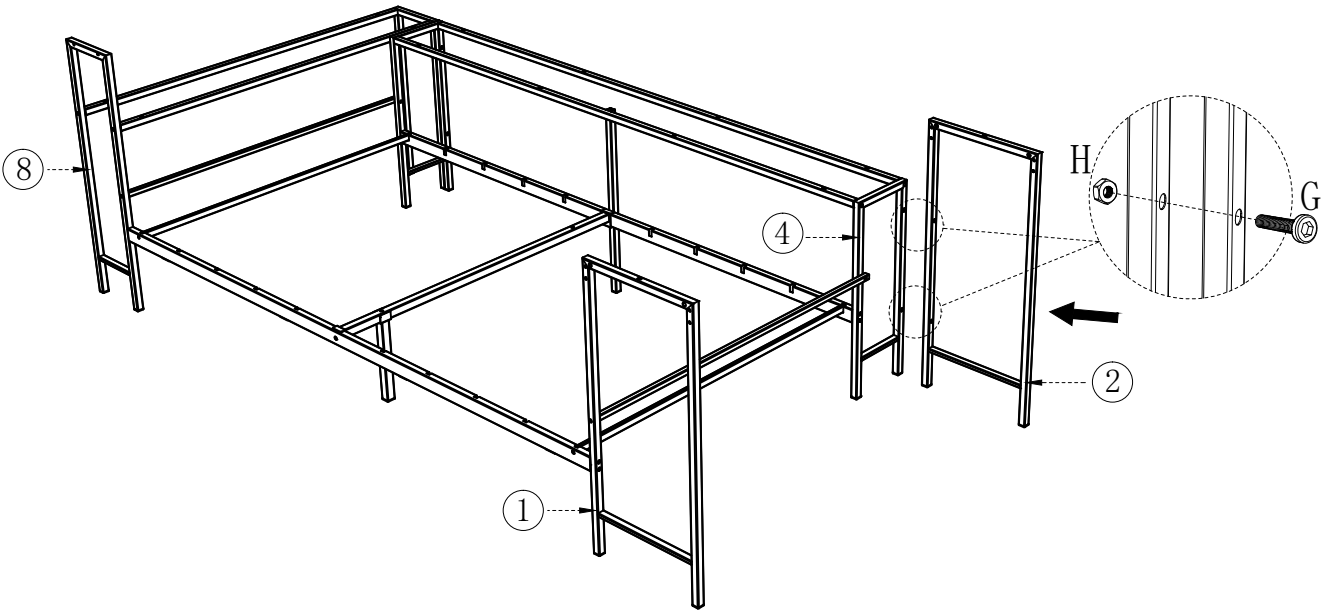


STEP 18

B		M6*30mm	4pcs
---	---	---------	------

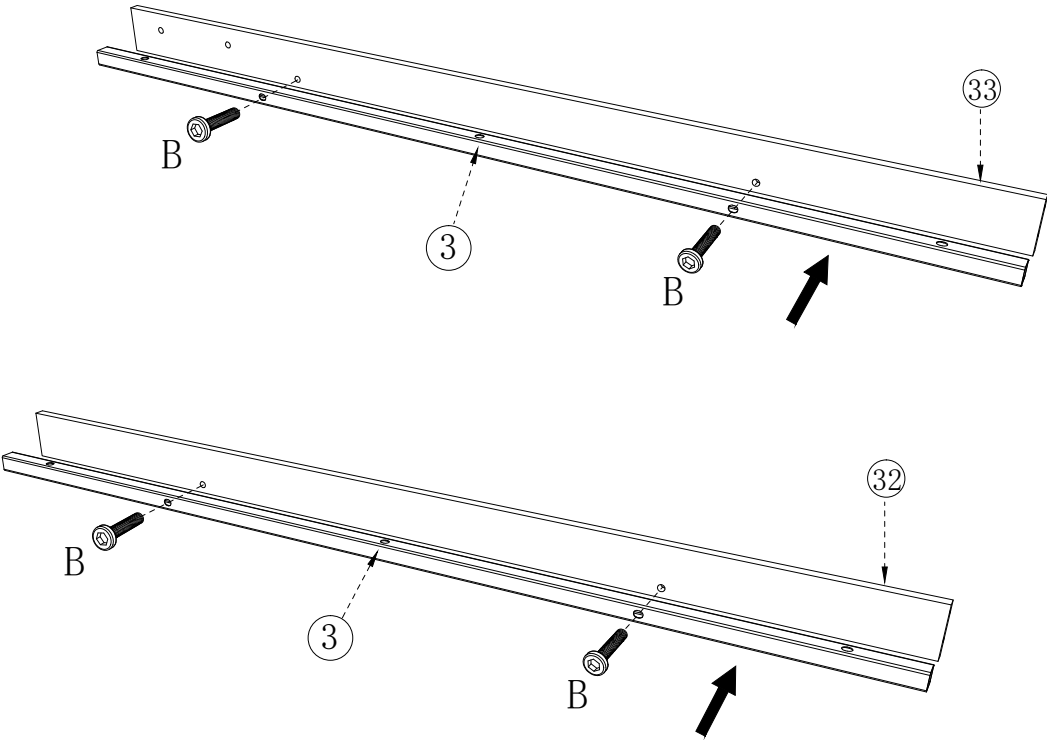


STEP 19

B		M6*30mm	6pcs
---	---	---------	------

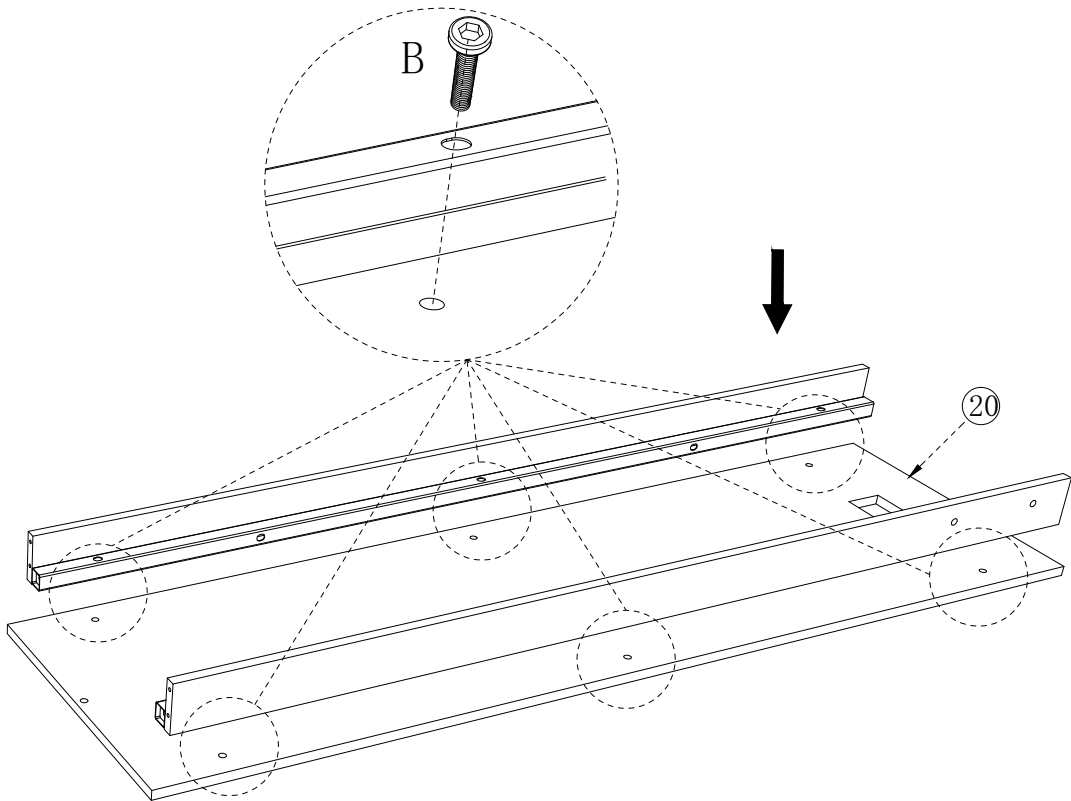


STEP 20

B		M6*30mm	2pcs
---	---	---------	------

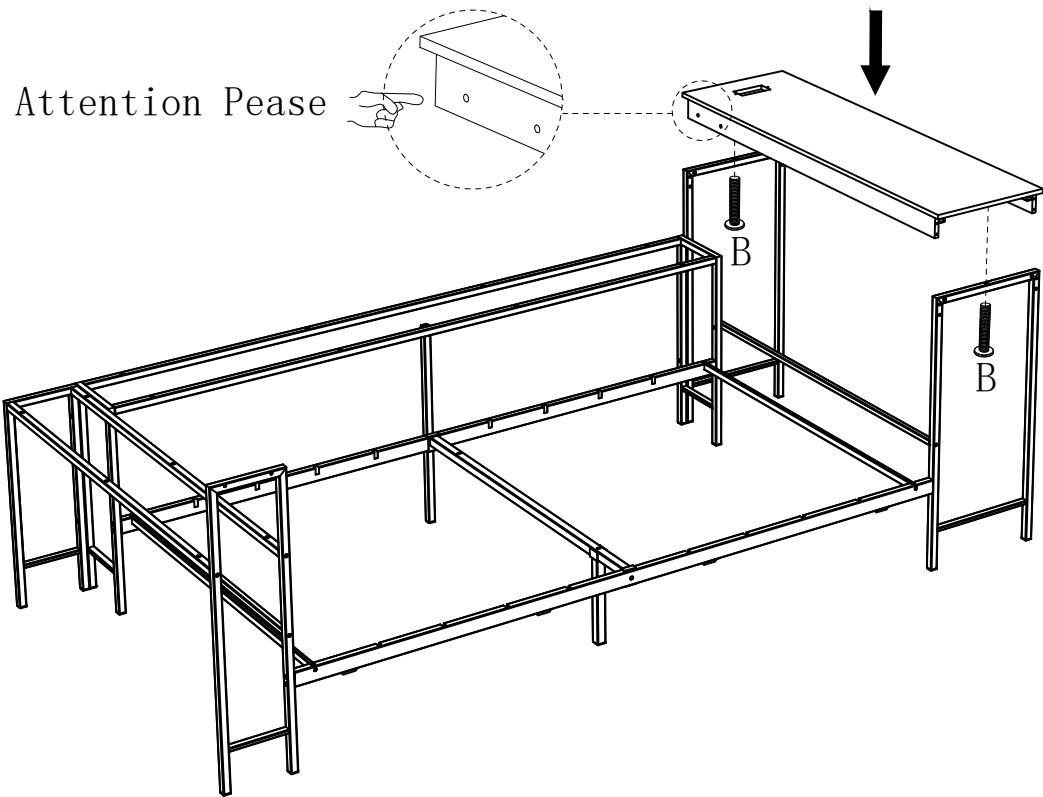


STEP 21

A		M5*40mm	8pcs
C		M6*35mm	4pcs
E		M4*10mm	2pcs
F			1pcs

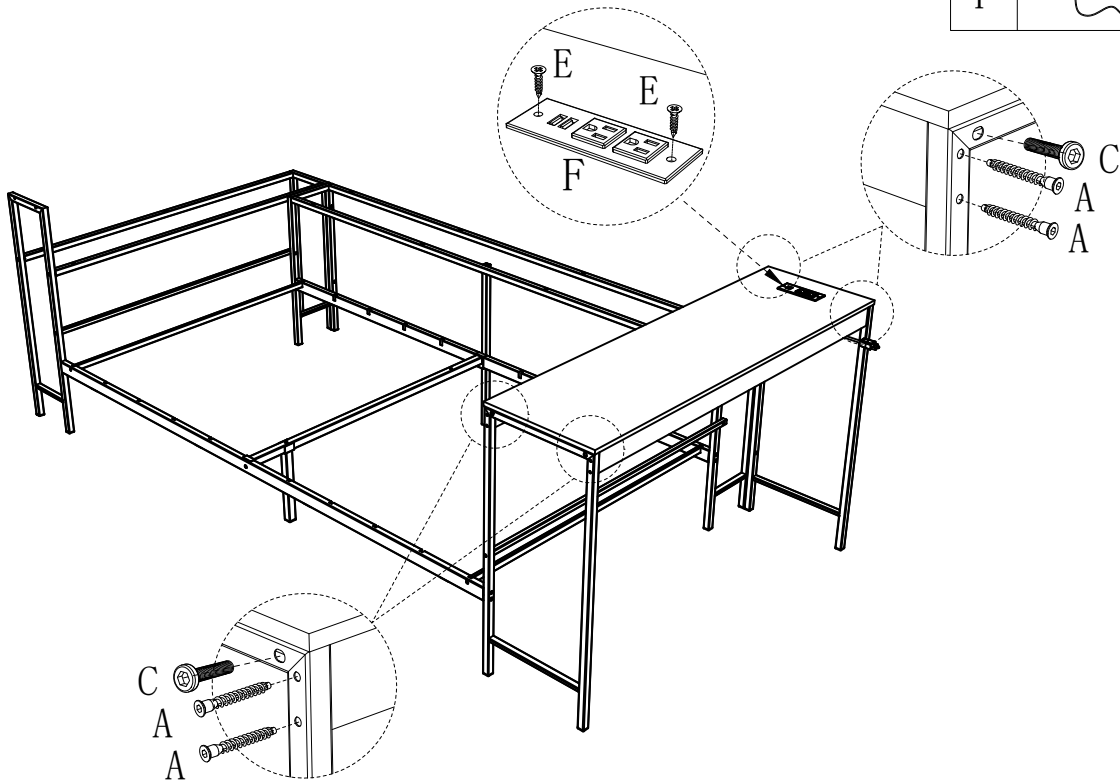


STEP 22


B		M6*30mm	8pcs
---	---	---------	------

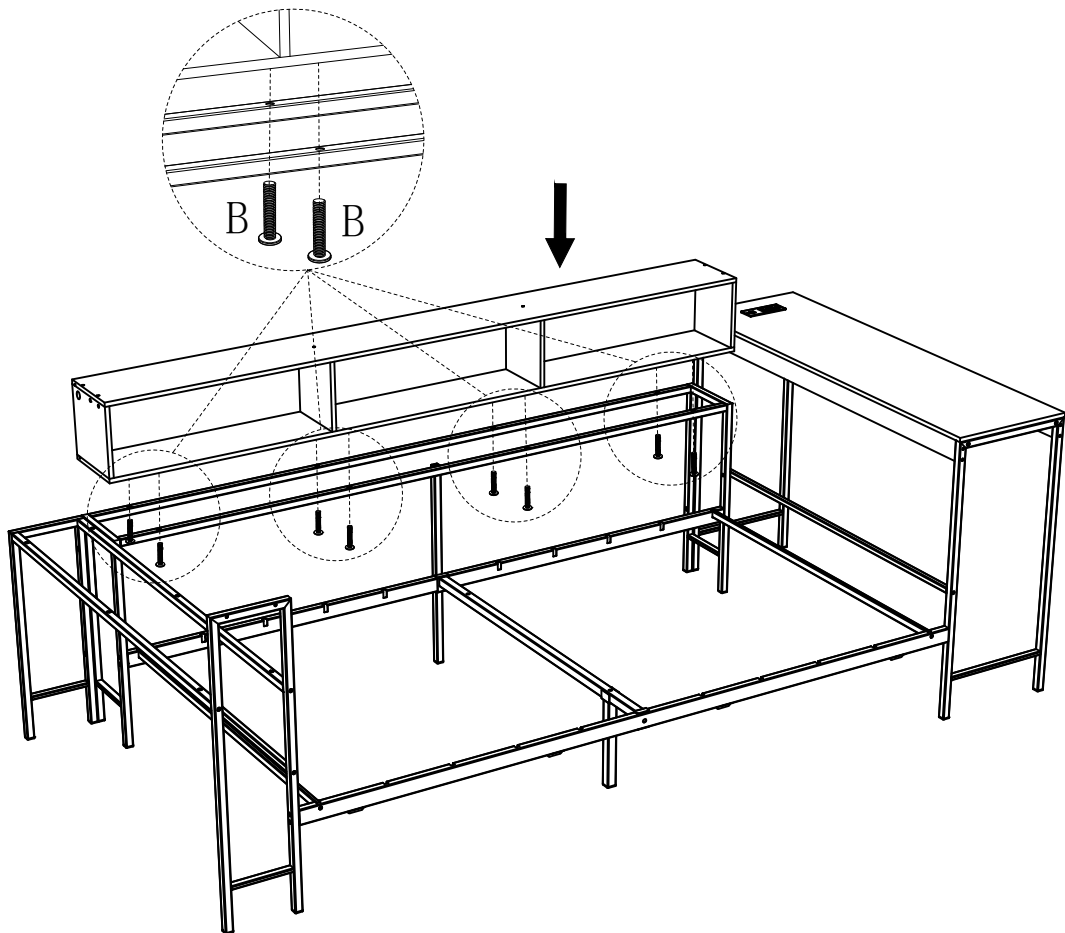

STEP 23

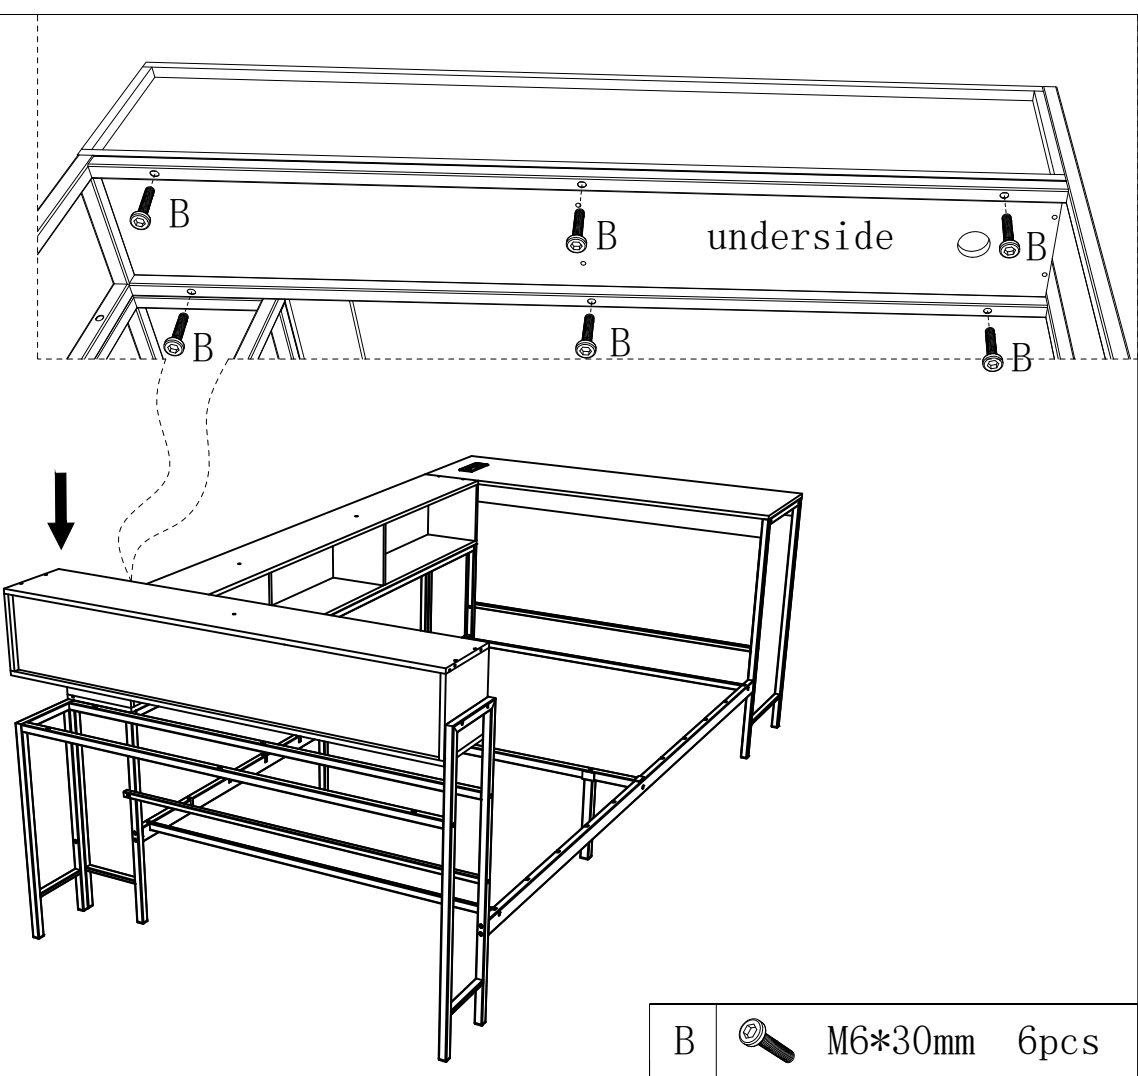


STEP 24

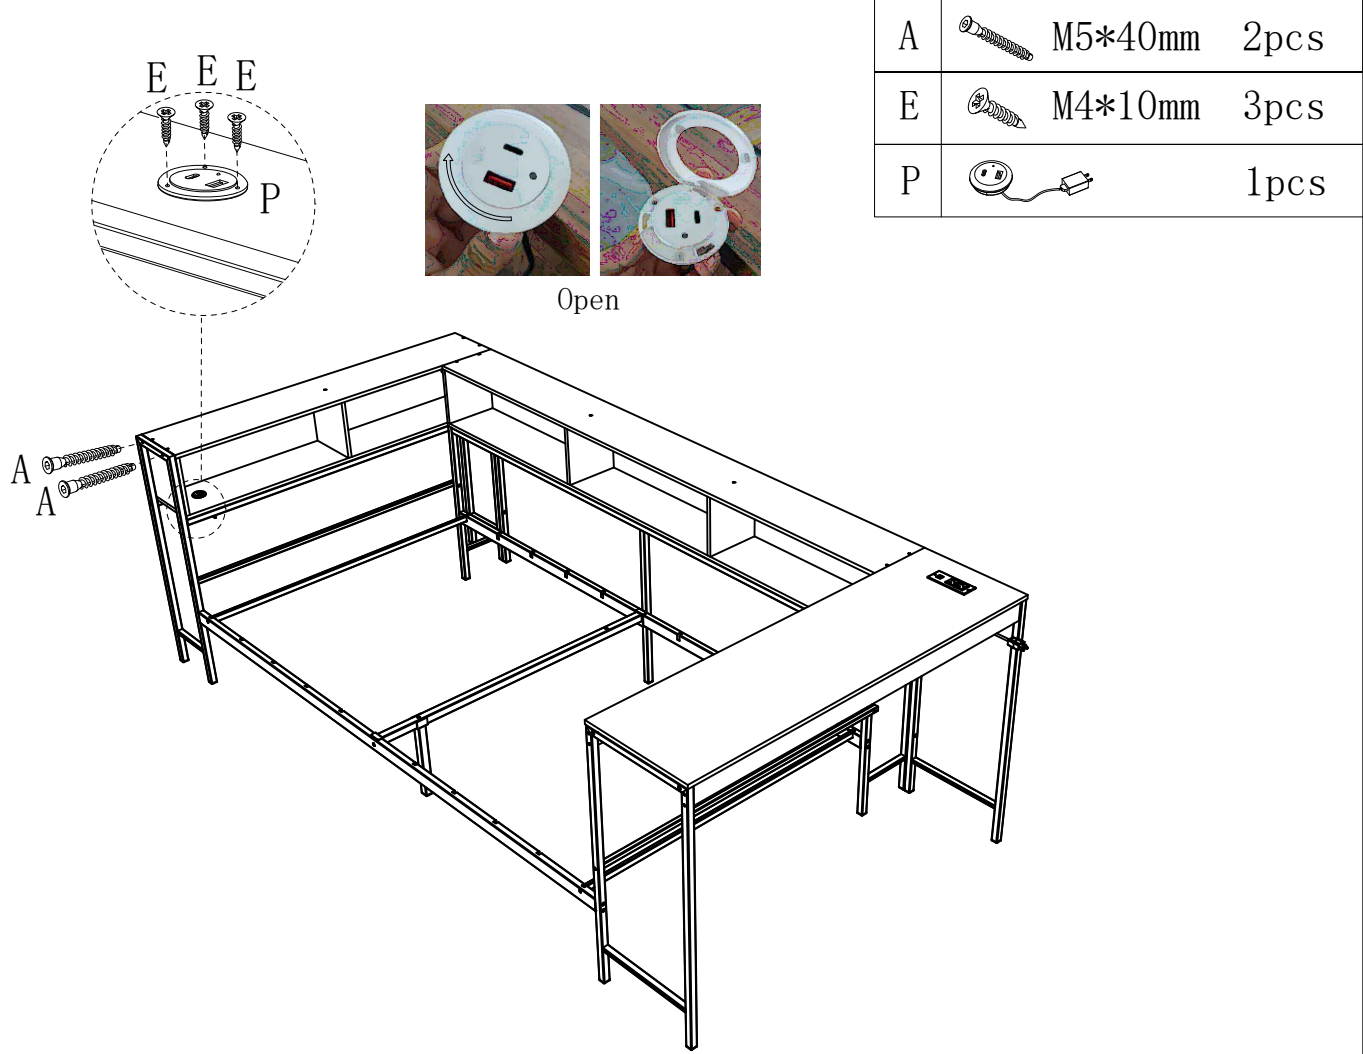

STEP 25


K		M6*25mm	4pcs
---	---	---------	------

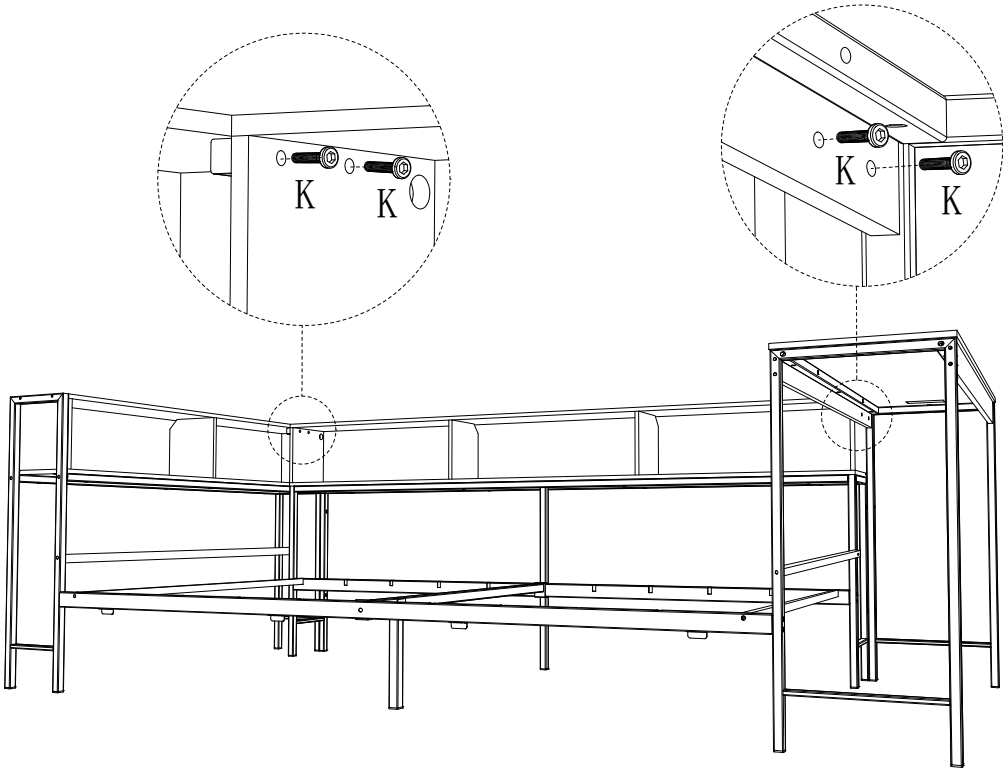


STEP 26

Step 1: The light belt first passes through the hole behind the board.

L		1pcs
M		1pcs

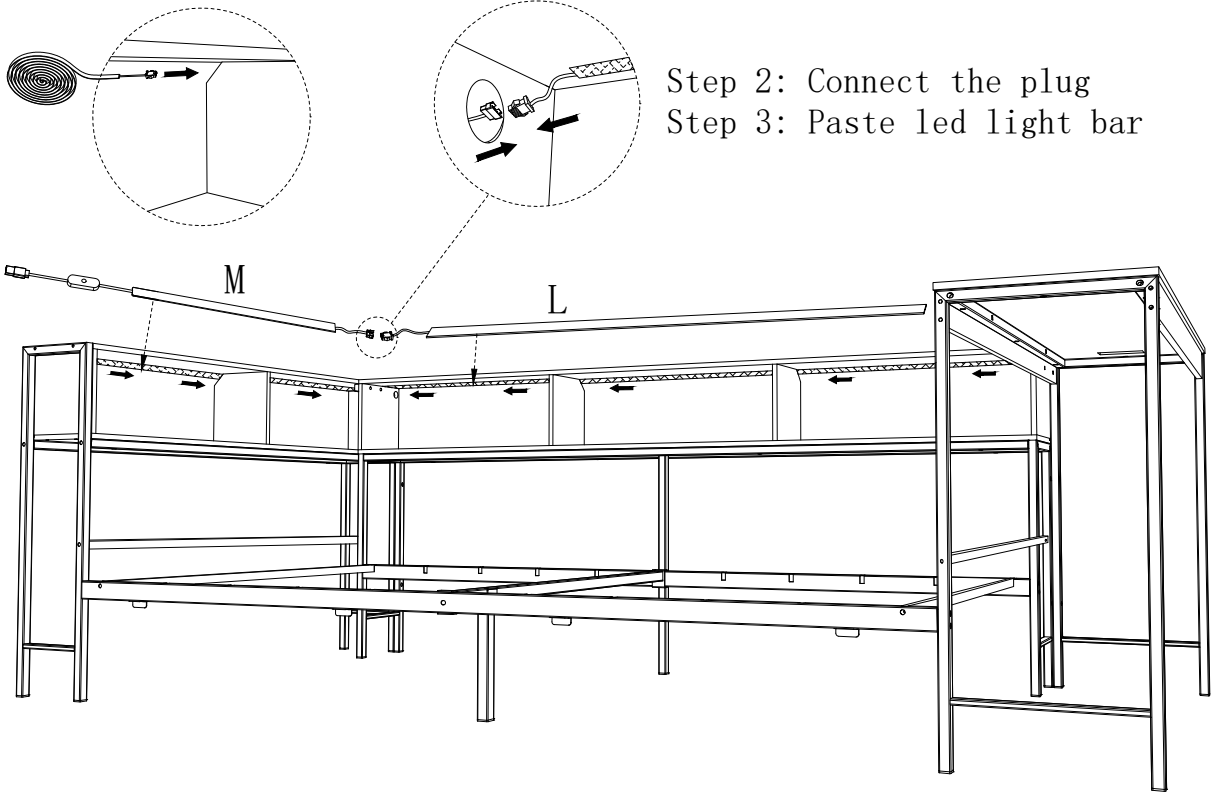


Step 2: Connect the plug
Step 3: Paste led light bar

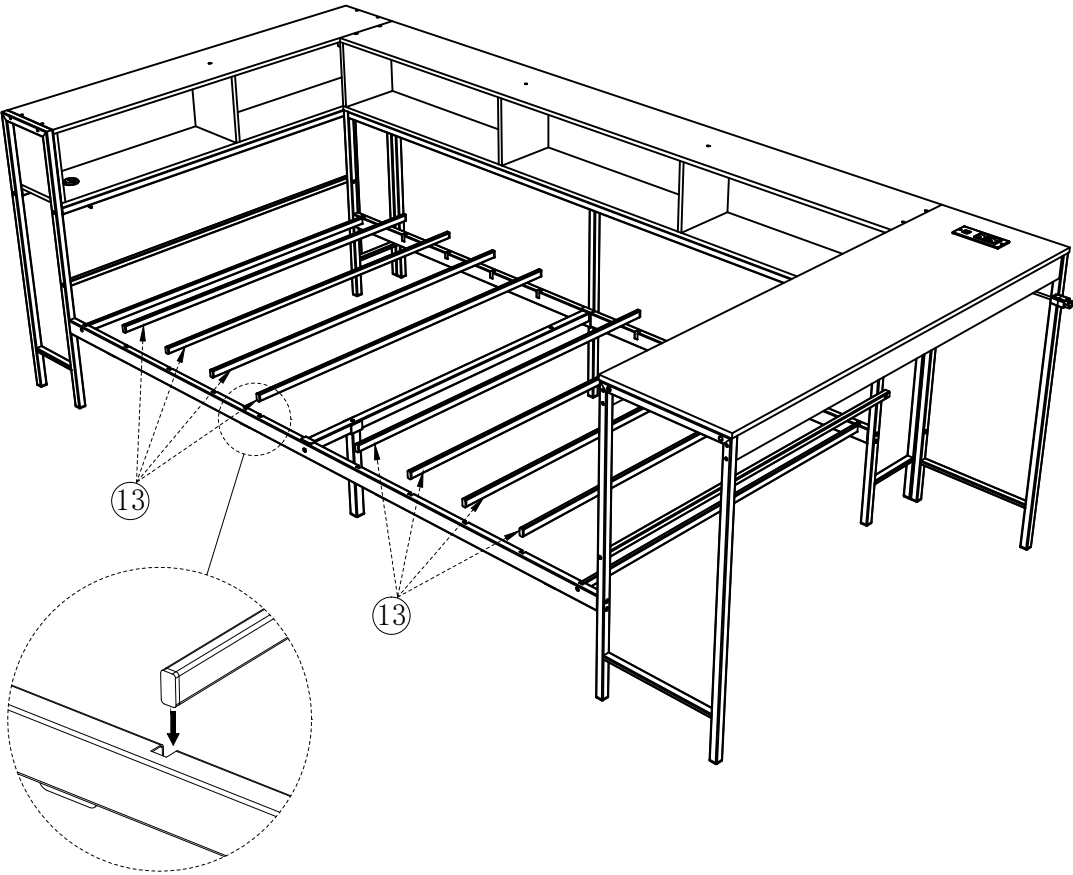


STEP 28



N		M4*18mm	12pcs
---	---	---------	-------

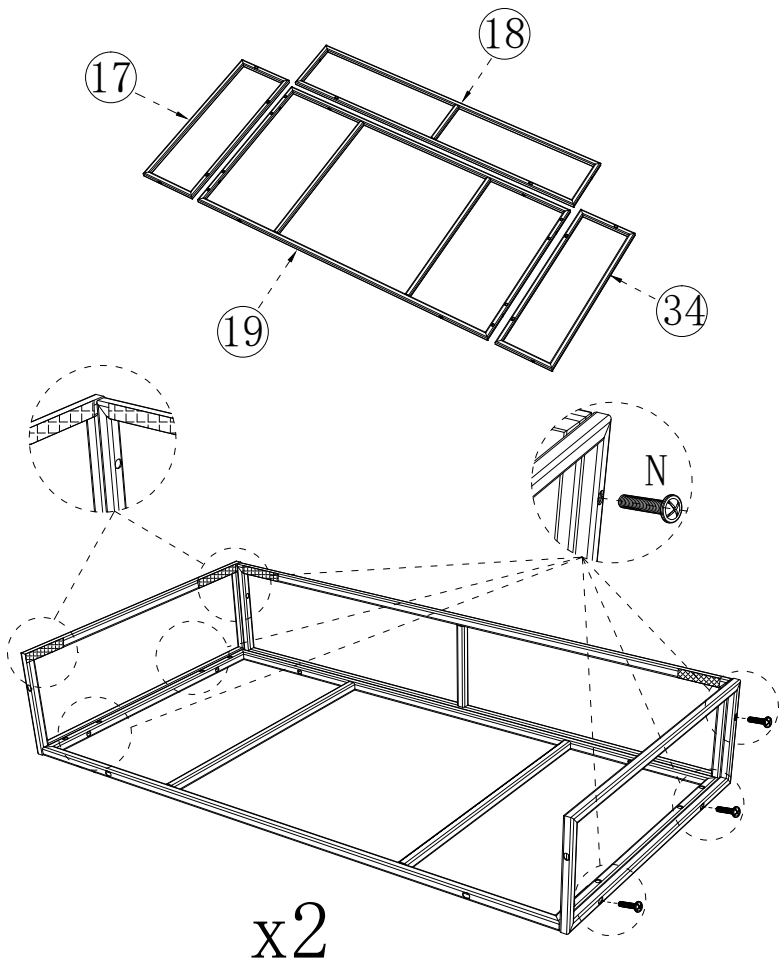


STEP 29

I		M4*14mm	16pcs
0		1.0	8pcs

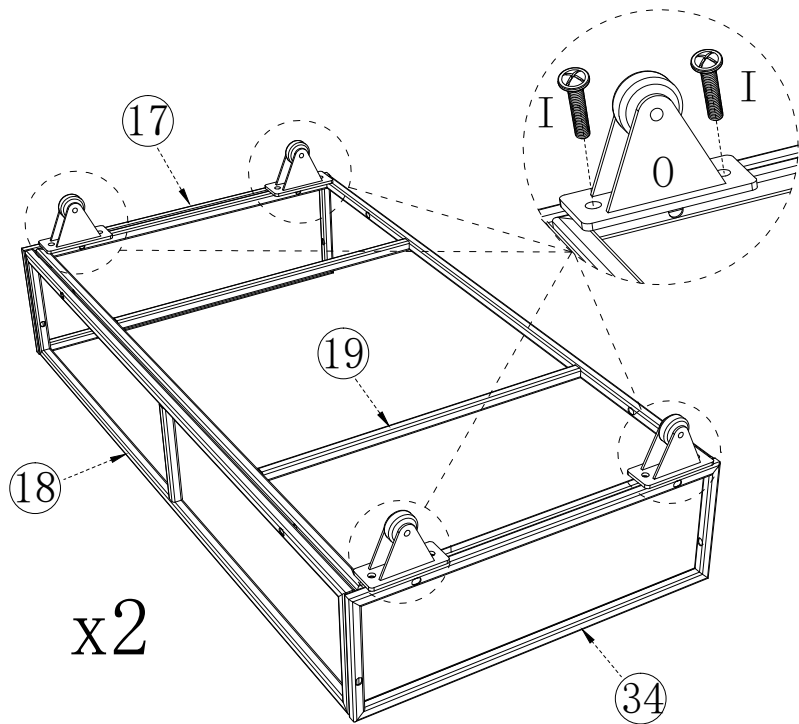

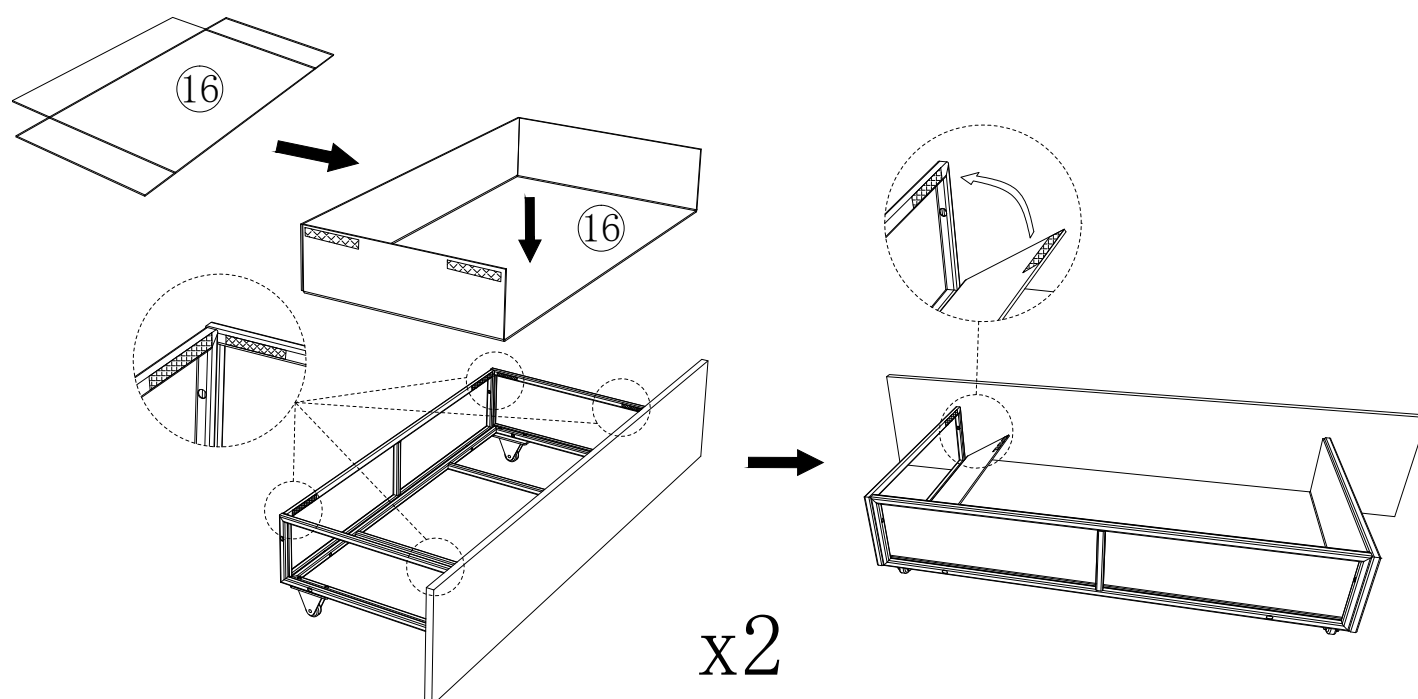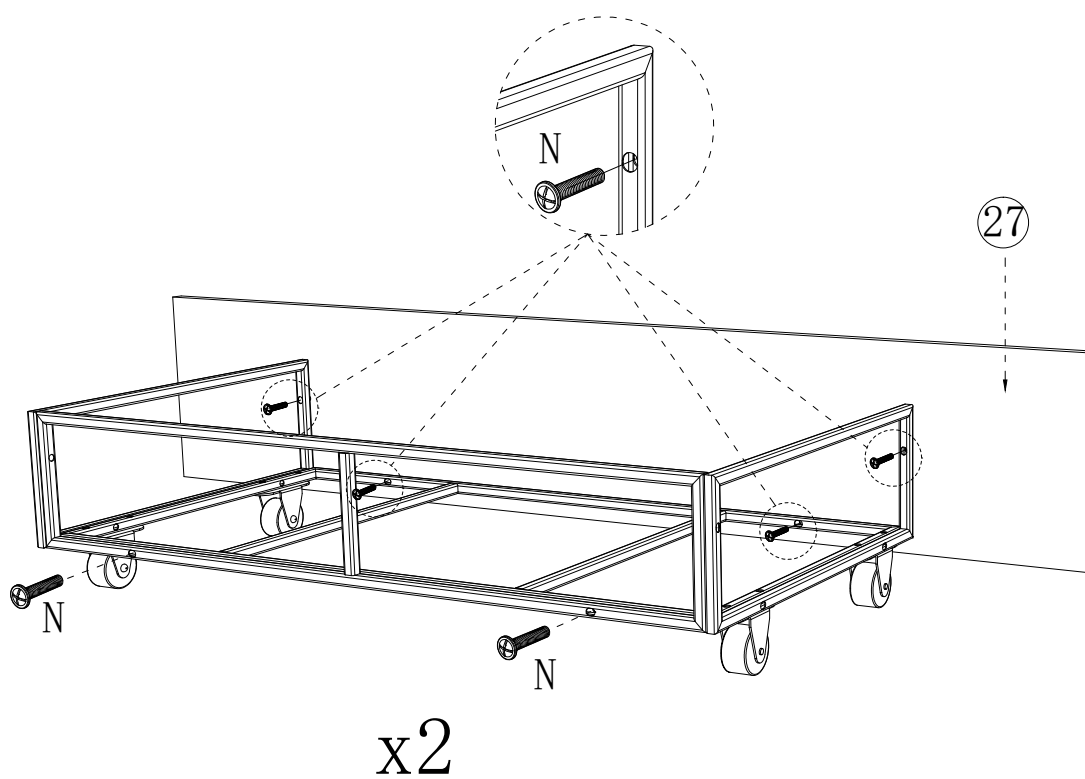

STEP 32

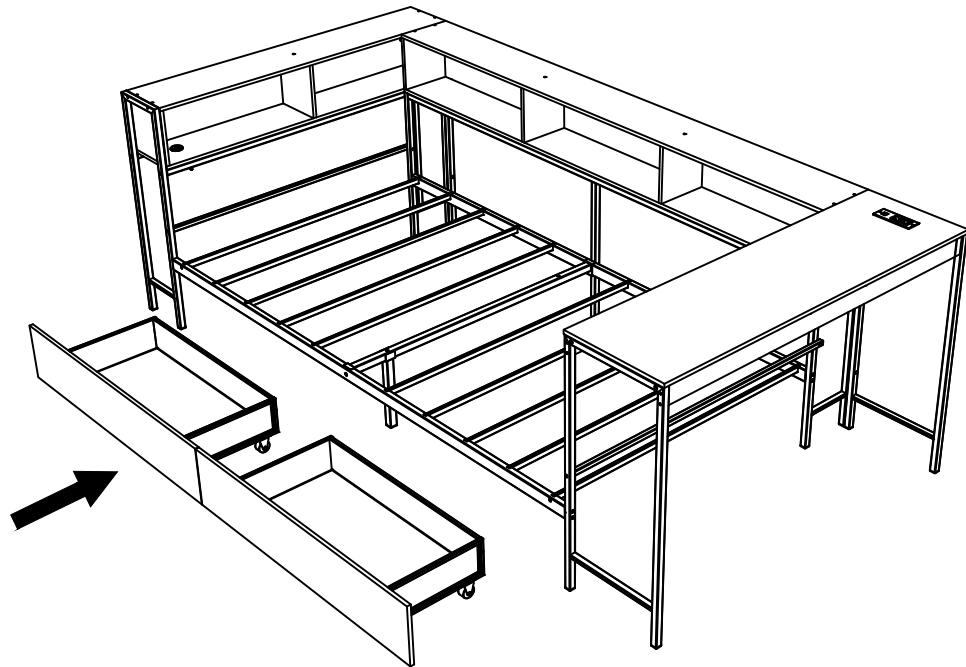

STEP 33

