

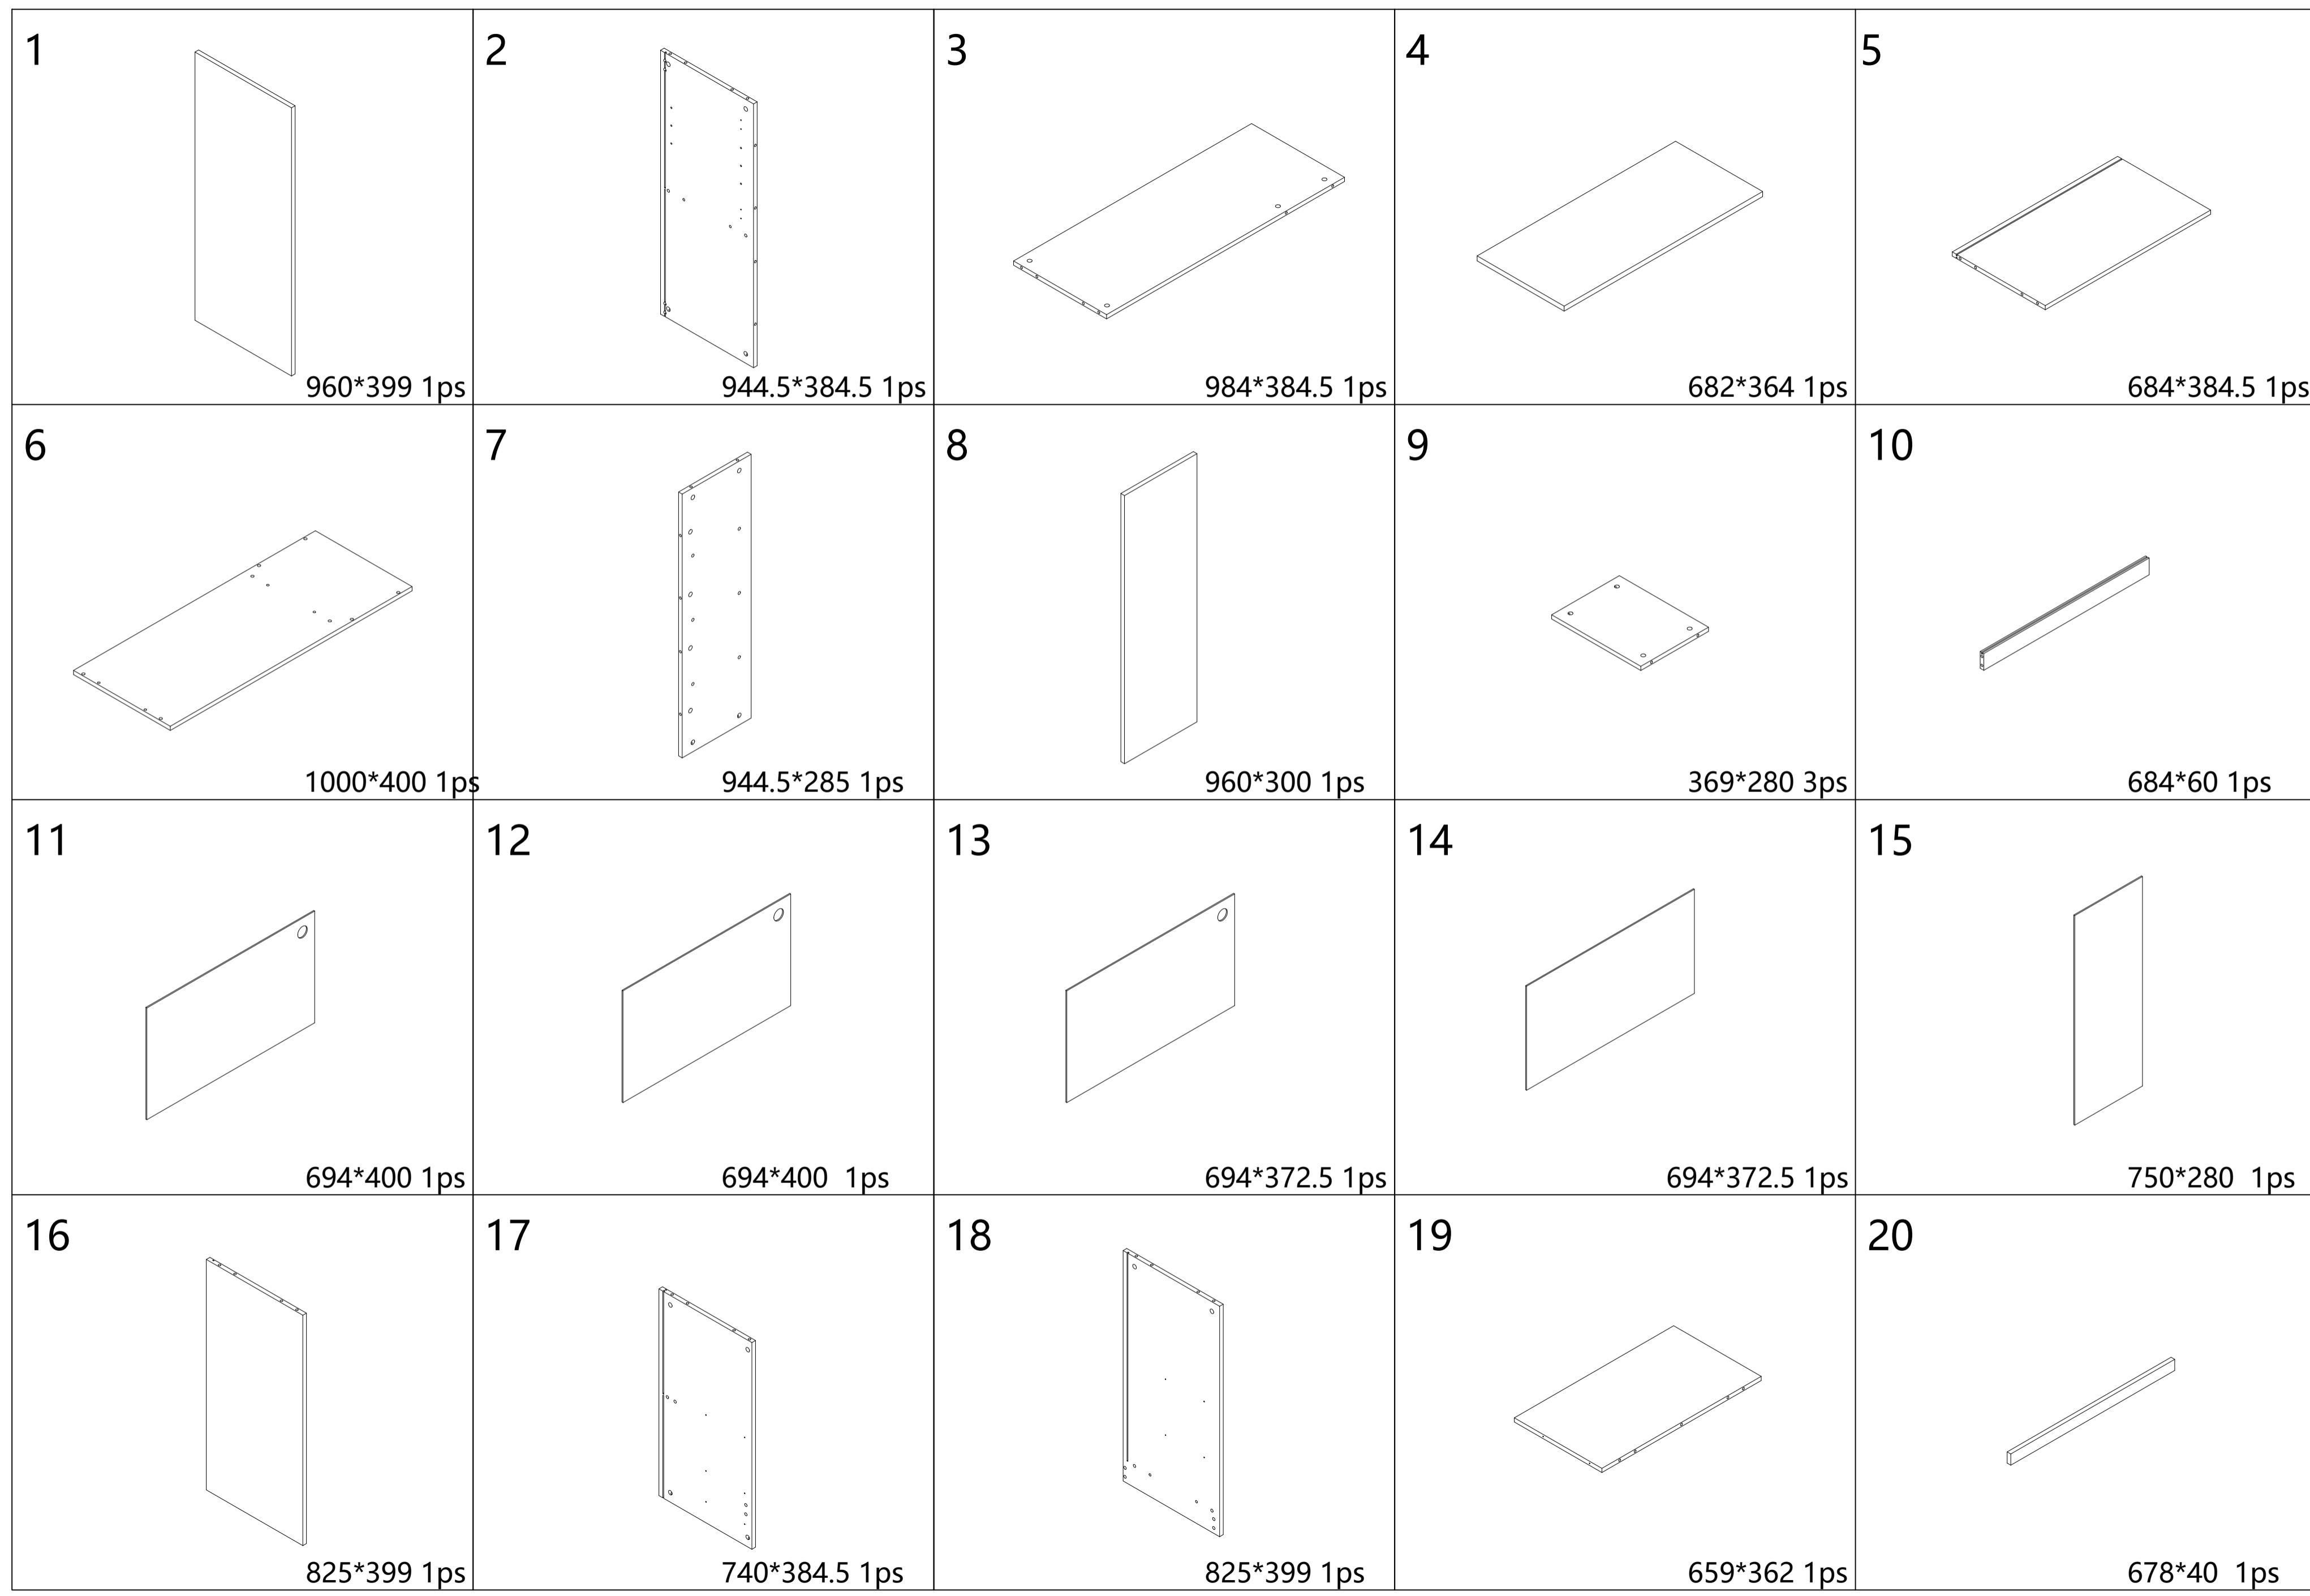
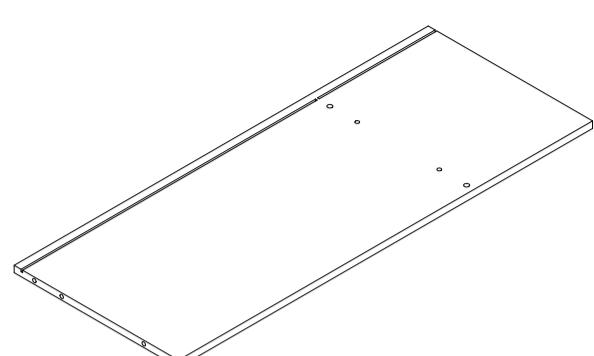
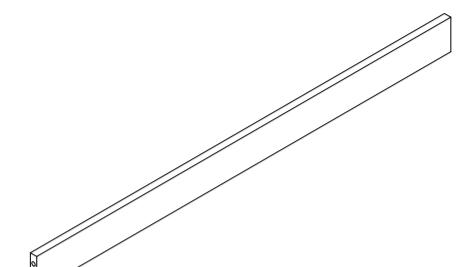
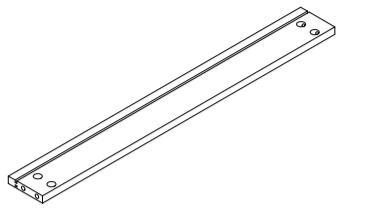
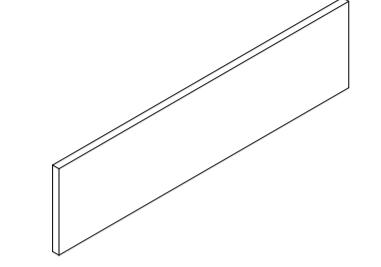
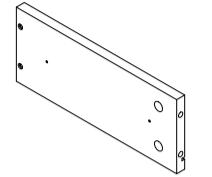
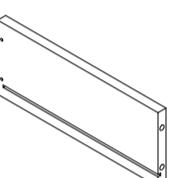
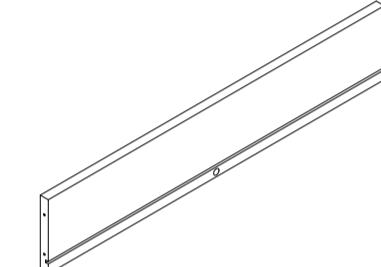
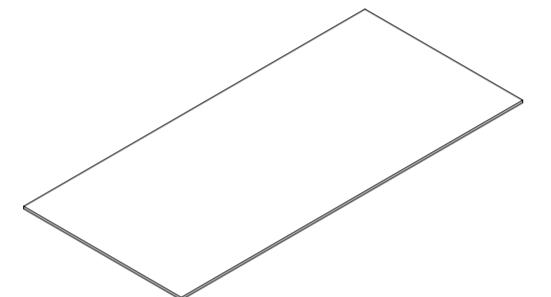
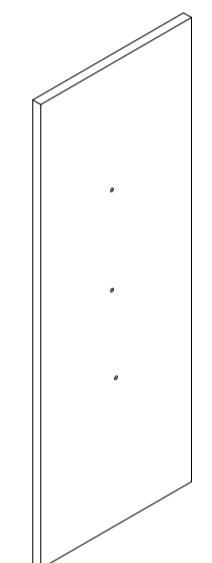
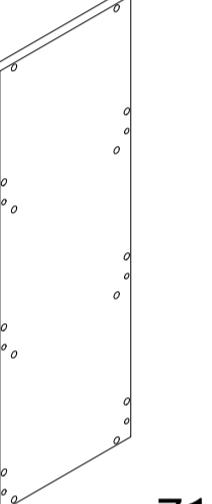
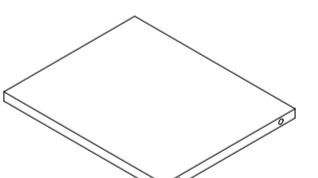
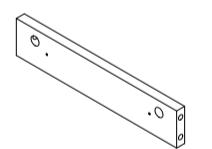
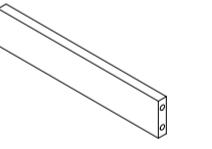
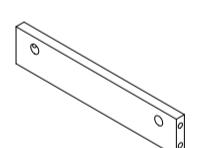
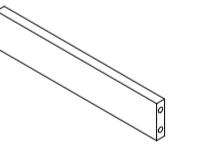
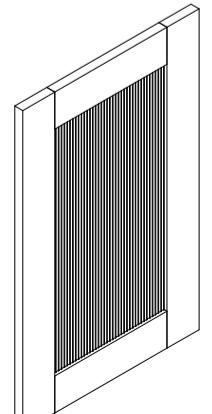

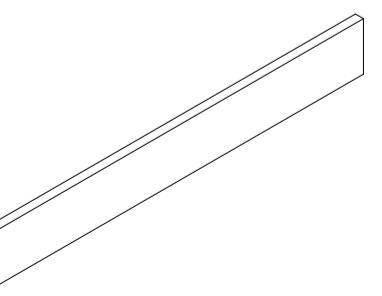


A	B 3.5*14	C	D 300MM	F 3.5*12	G	I	M	N	O
38PCS	48PCS	C1 103PCS C2	D1 D2 5PCS	16PCS	G1 G2 1PCS	4PCS	8PCS	119PCS	01 02 03 04 2PCS

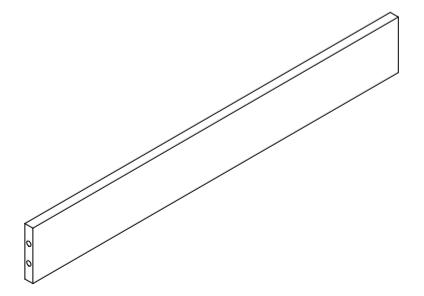

21		22		23		24		25	
	969*384.5 1ps		969*70 2ps		684*80 1ps		678*175 2ps		300*120 2ps
26		27		28		29		30	
	300*120 2ps		635*120 2ps		645*298 2ps		752*282 1ps		715*245 1ps
31		32		33		34		35	
	300*245 4ps		300*60 2ps		300*60 2ps		300*60 1ps		300*60 1ps
36		37		38		39			
	520*337.5 2ps		285*60 2ps		684*90 1ps		684*60 1ps		

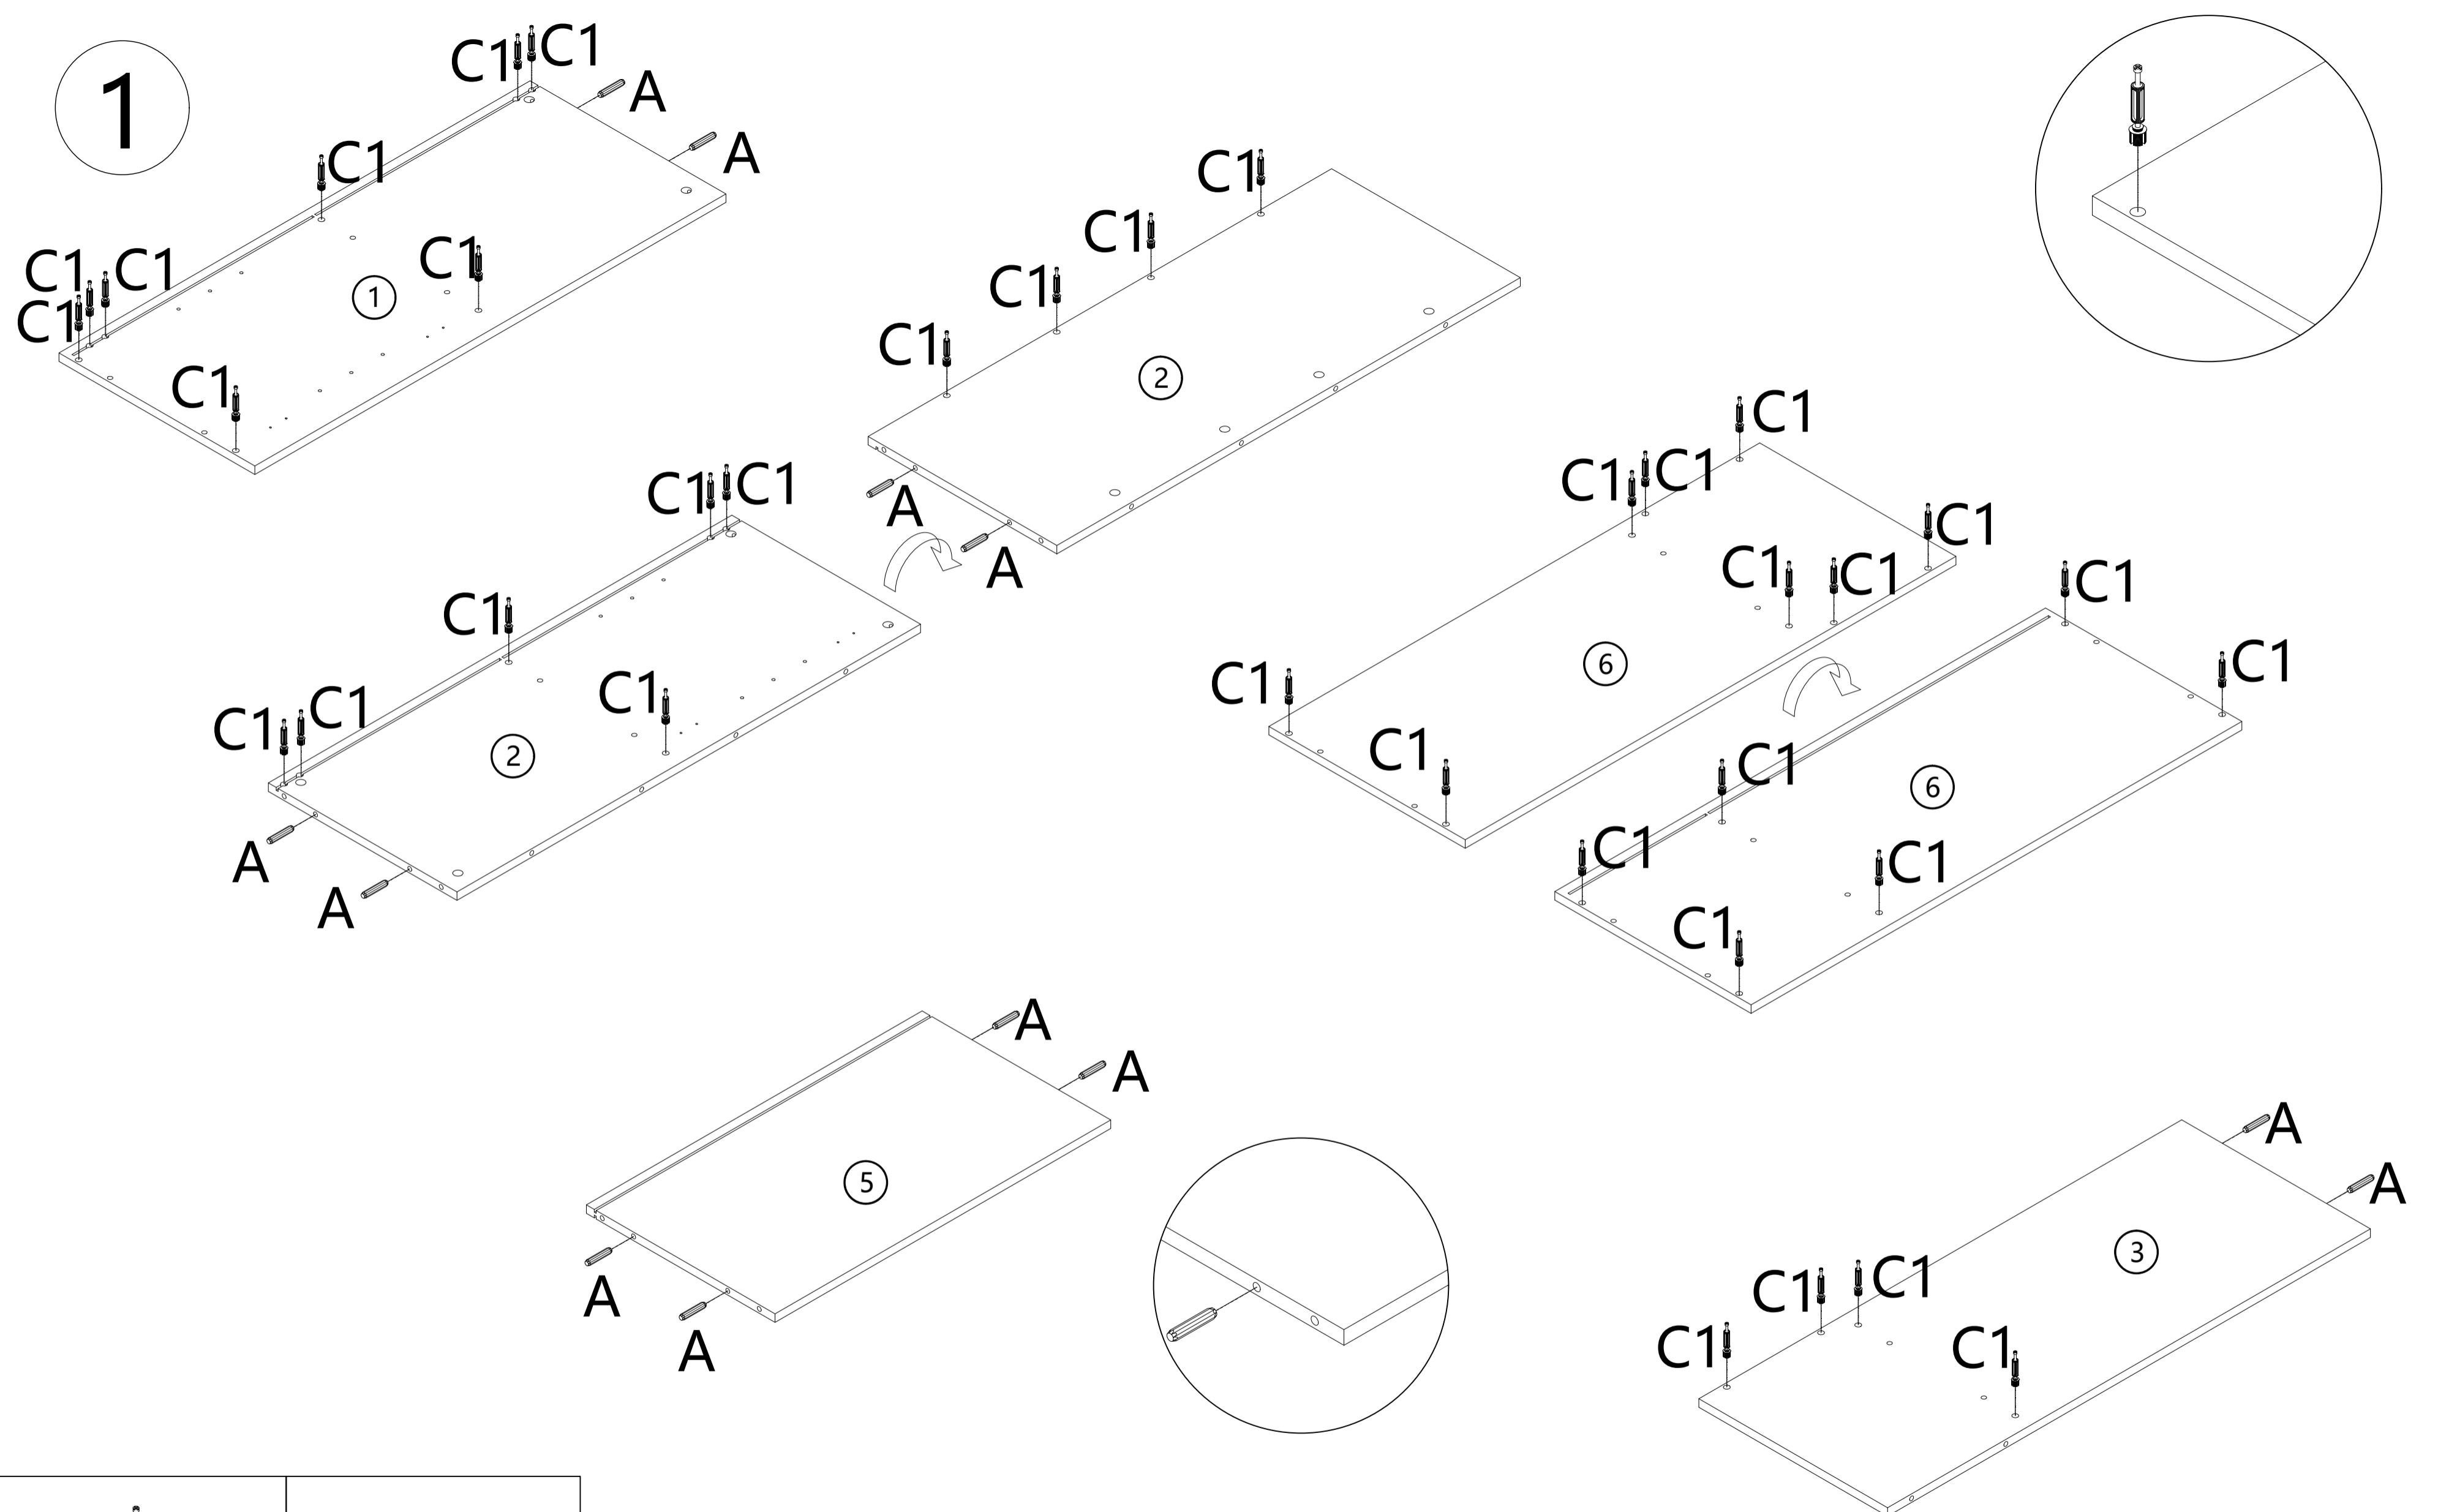

C1*36




A*12

put C1 on board ① ② ③ ⑥

put A on board ① ② ③ ⑤

2

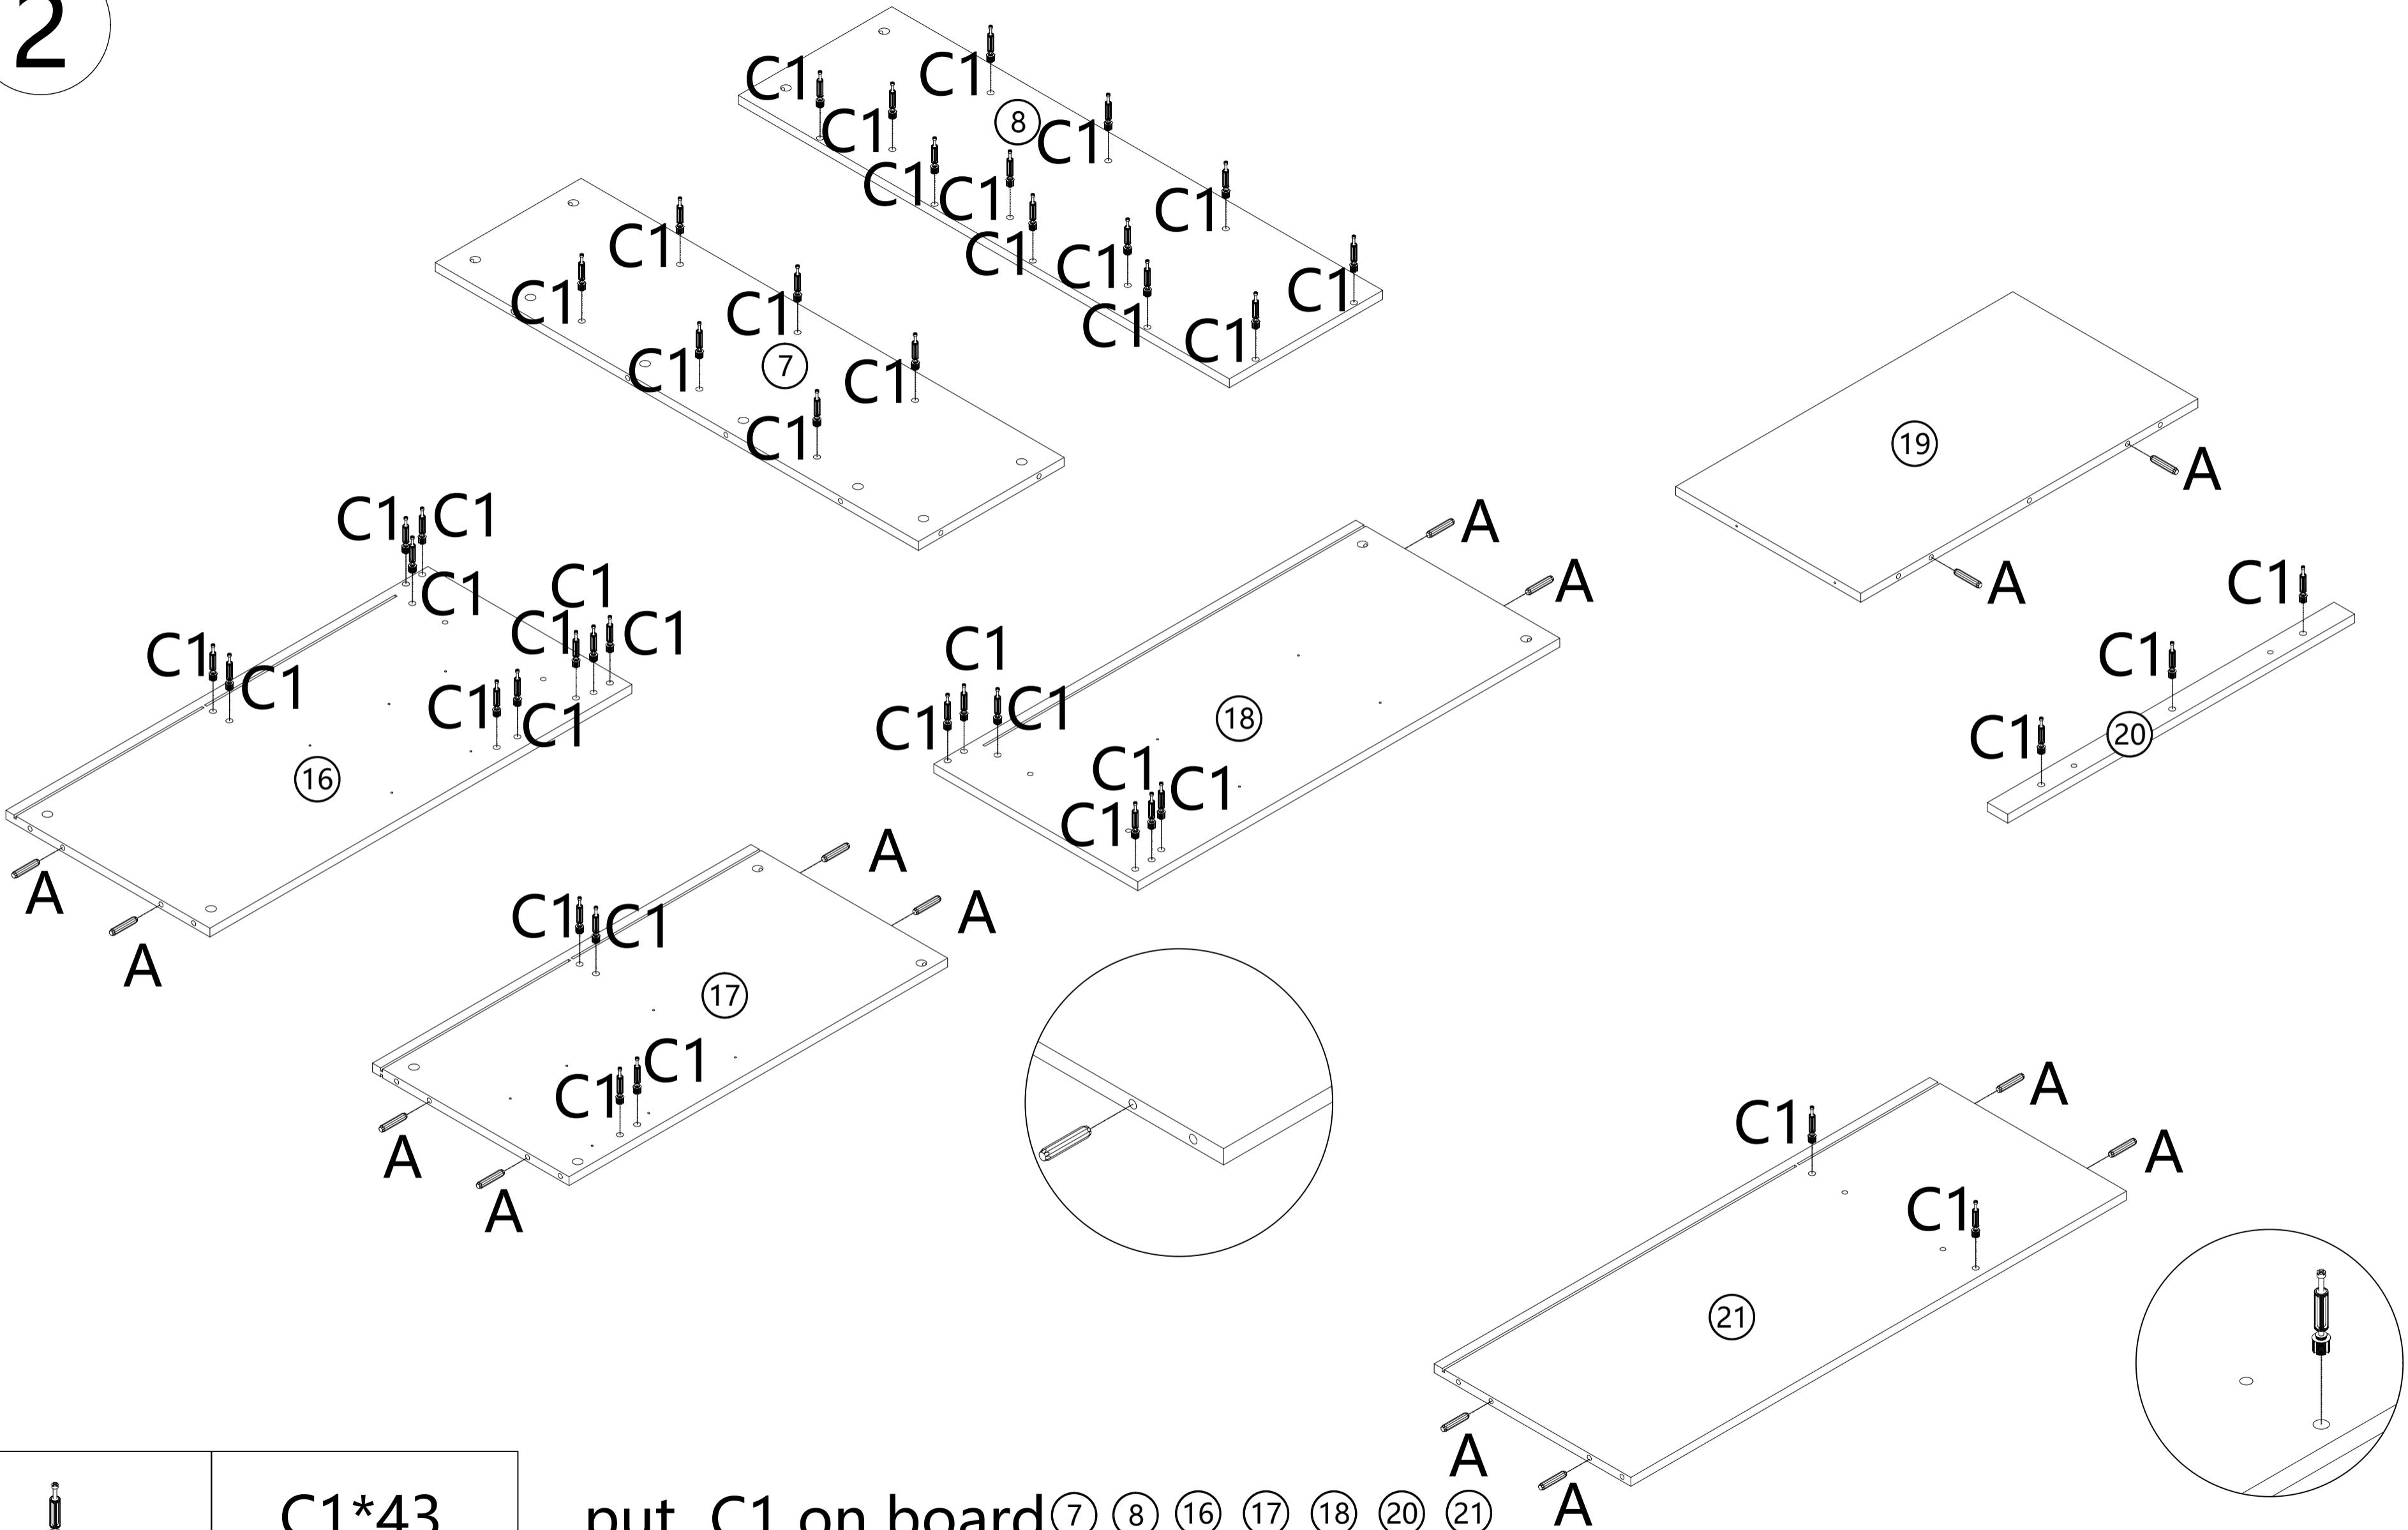

C1*43

put C1 on board ⑦ ⑧ ⑯ ⑰ ⑱ ⑳ ㉑










A*14



put A on board ⑯ ⑰ ⑱ ⑲ ㉑

3

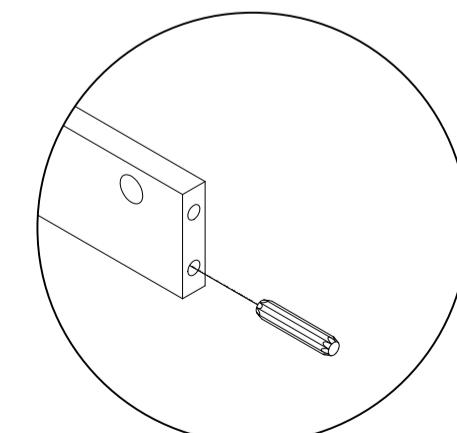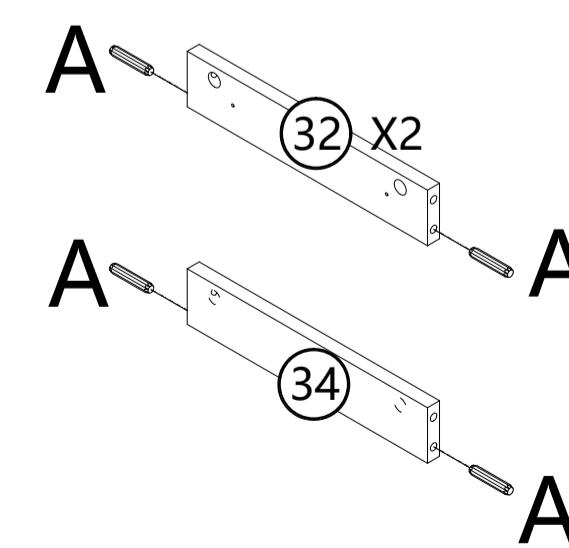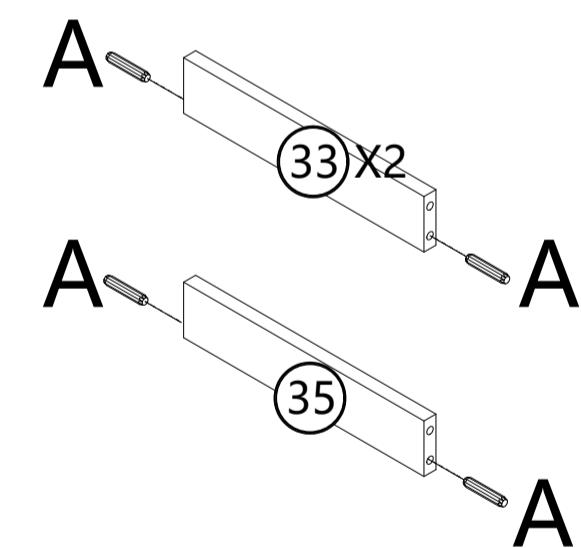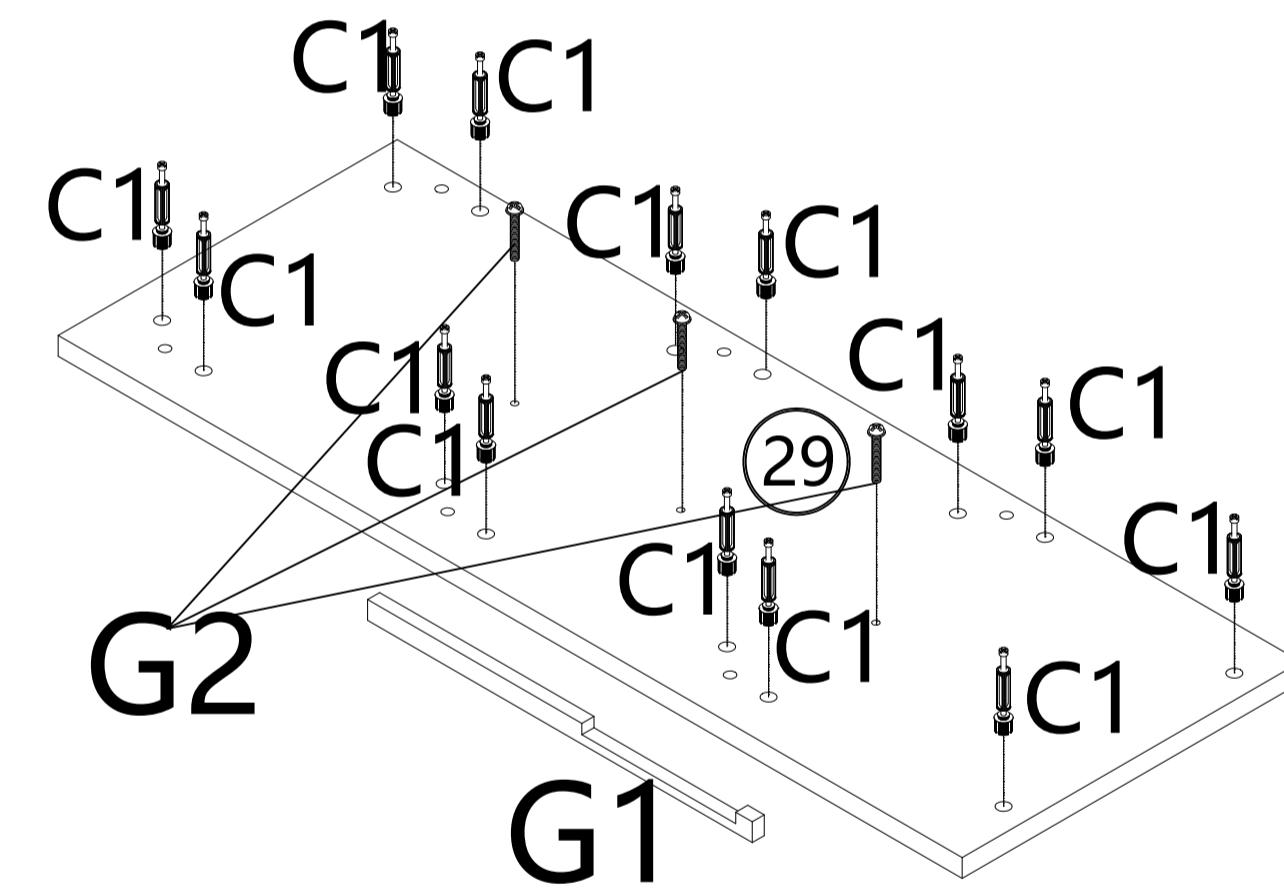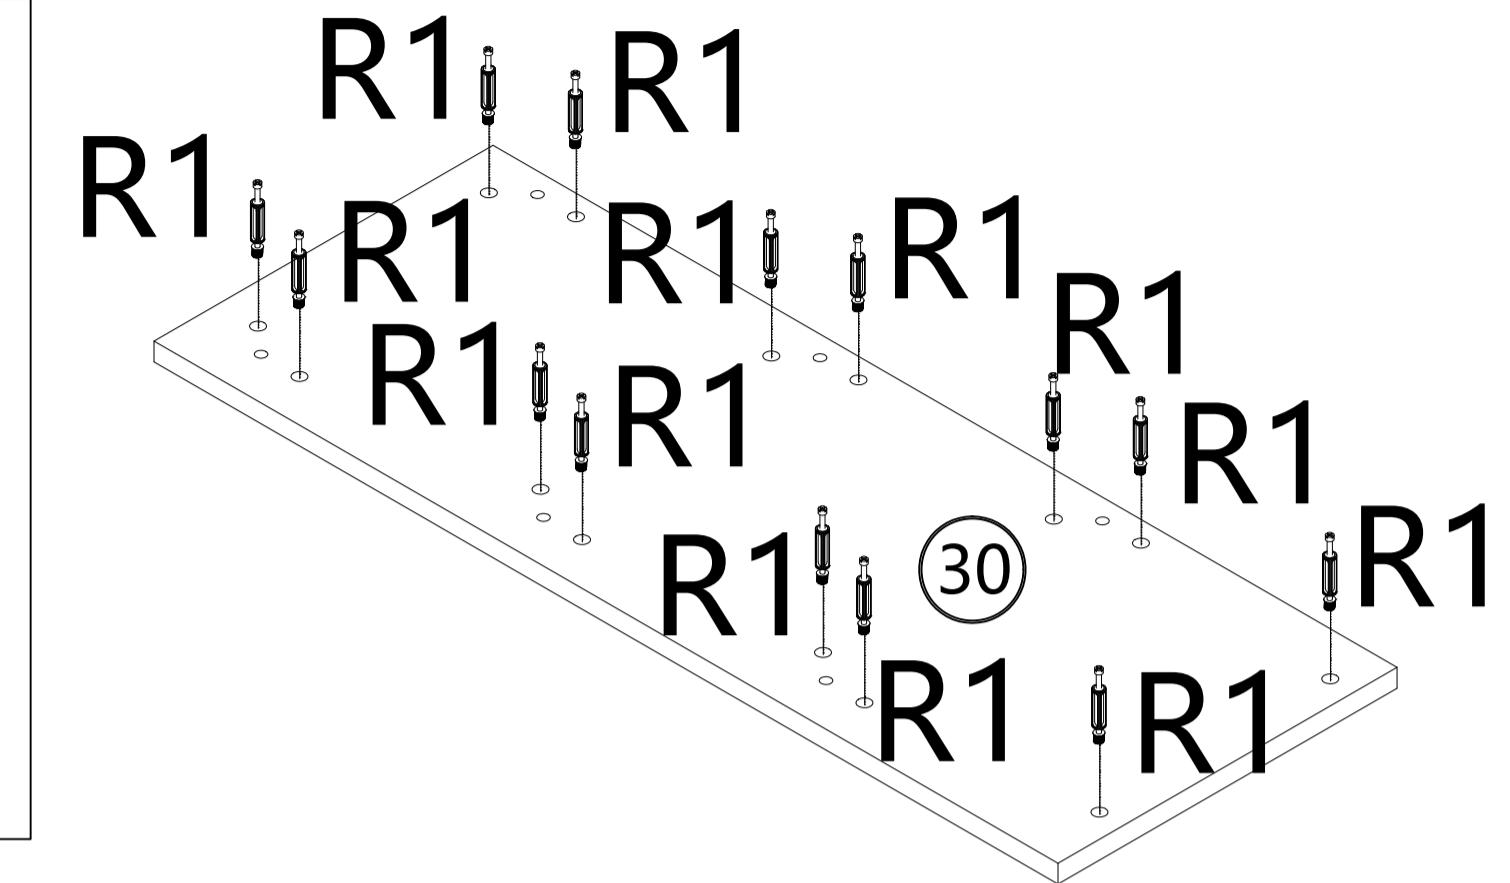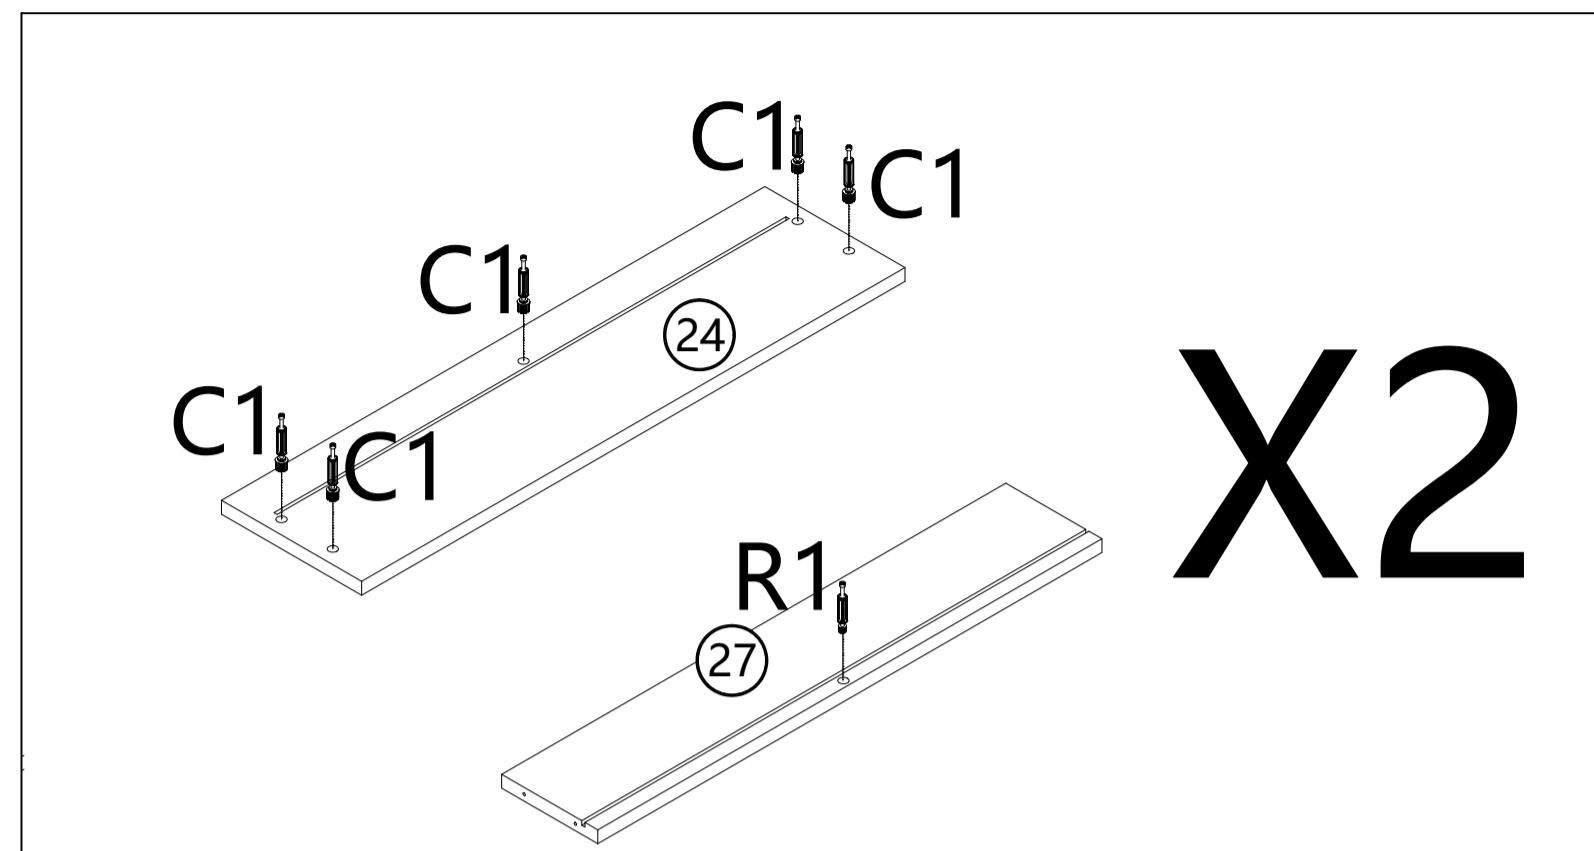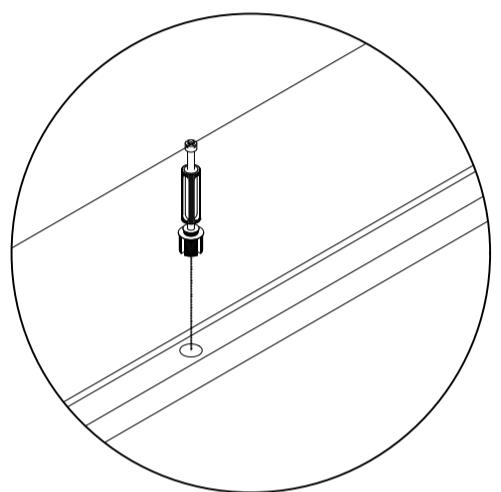

	R1*16
	G*1
	C1*24
	A*12




put R1 on board ②7 ③0

put G on board ②9

put C1 on board ②4 ②9

put A on board ③2 ③3 ③4 ③5

4

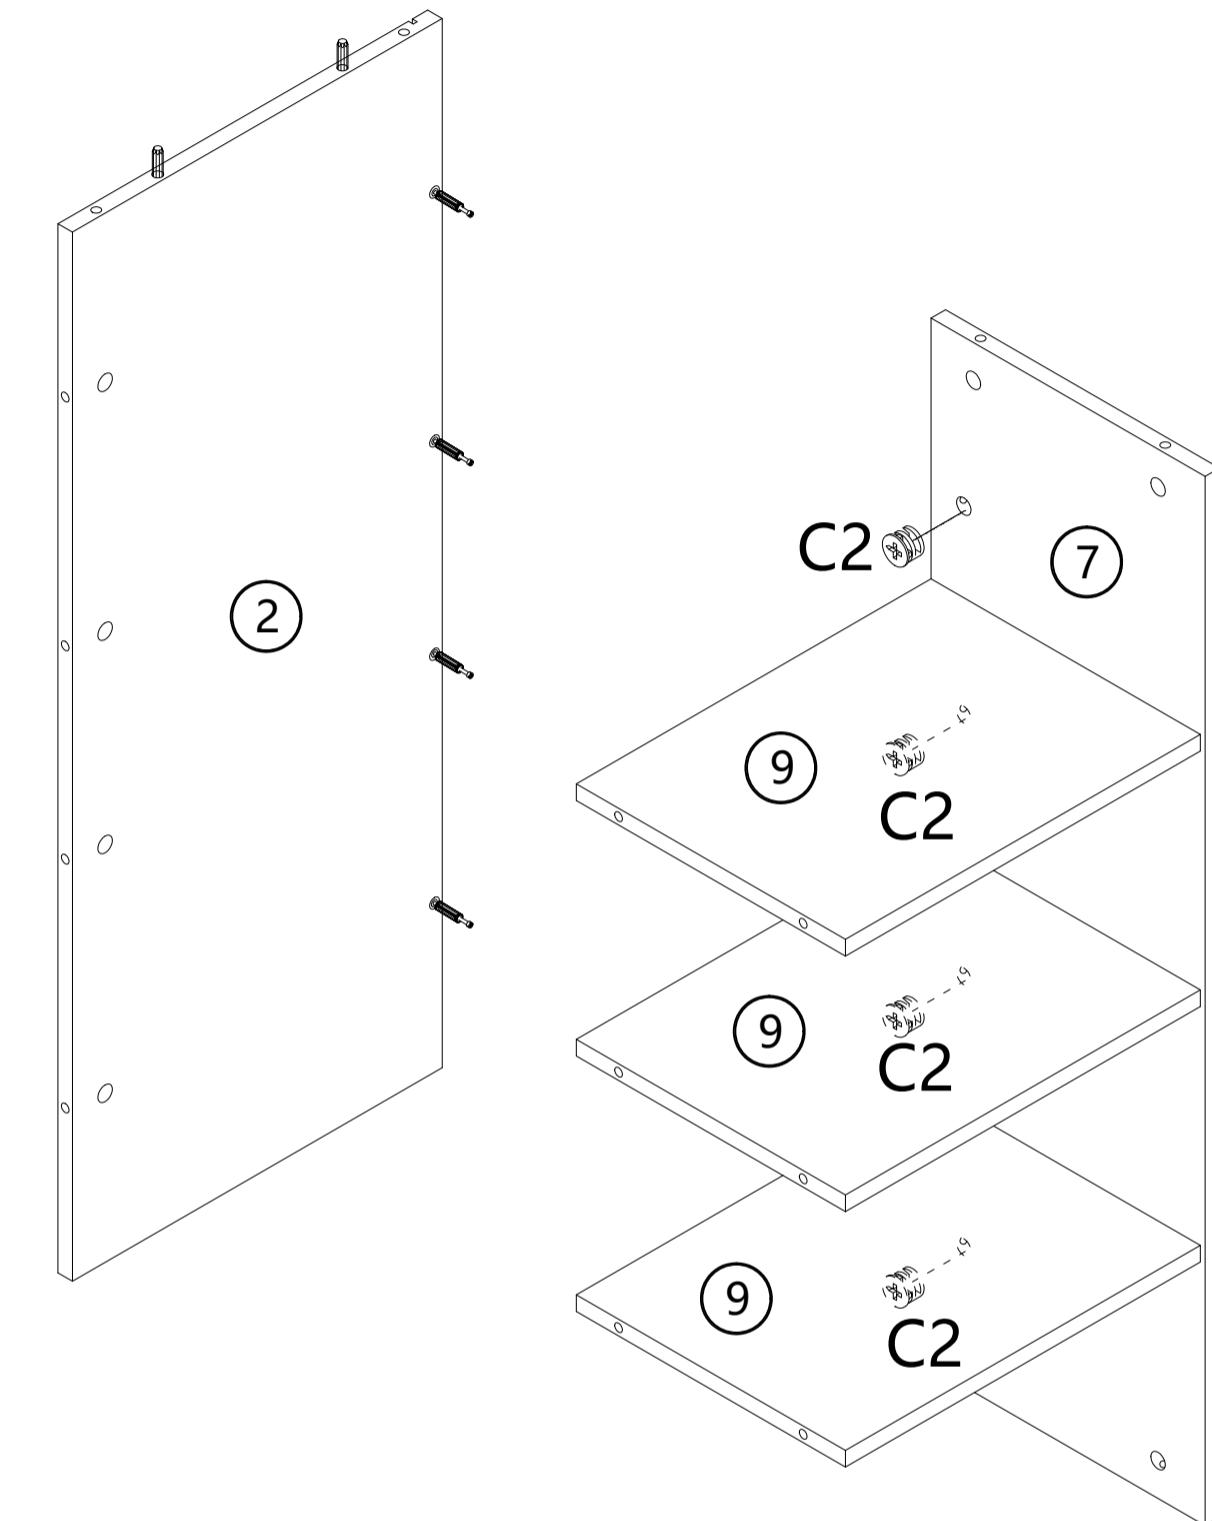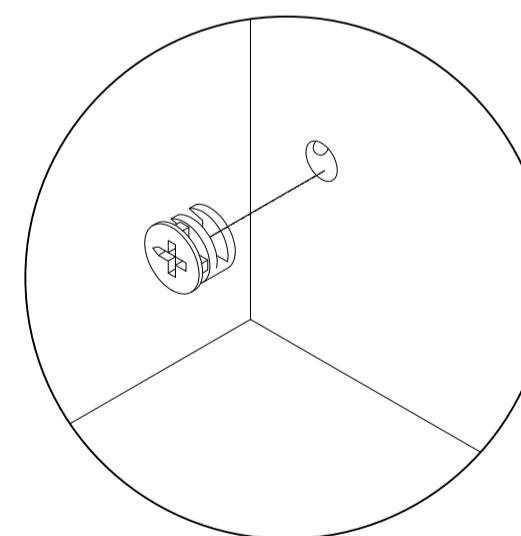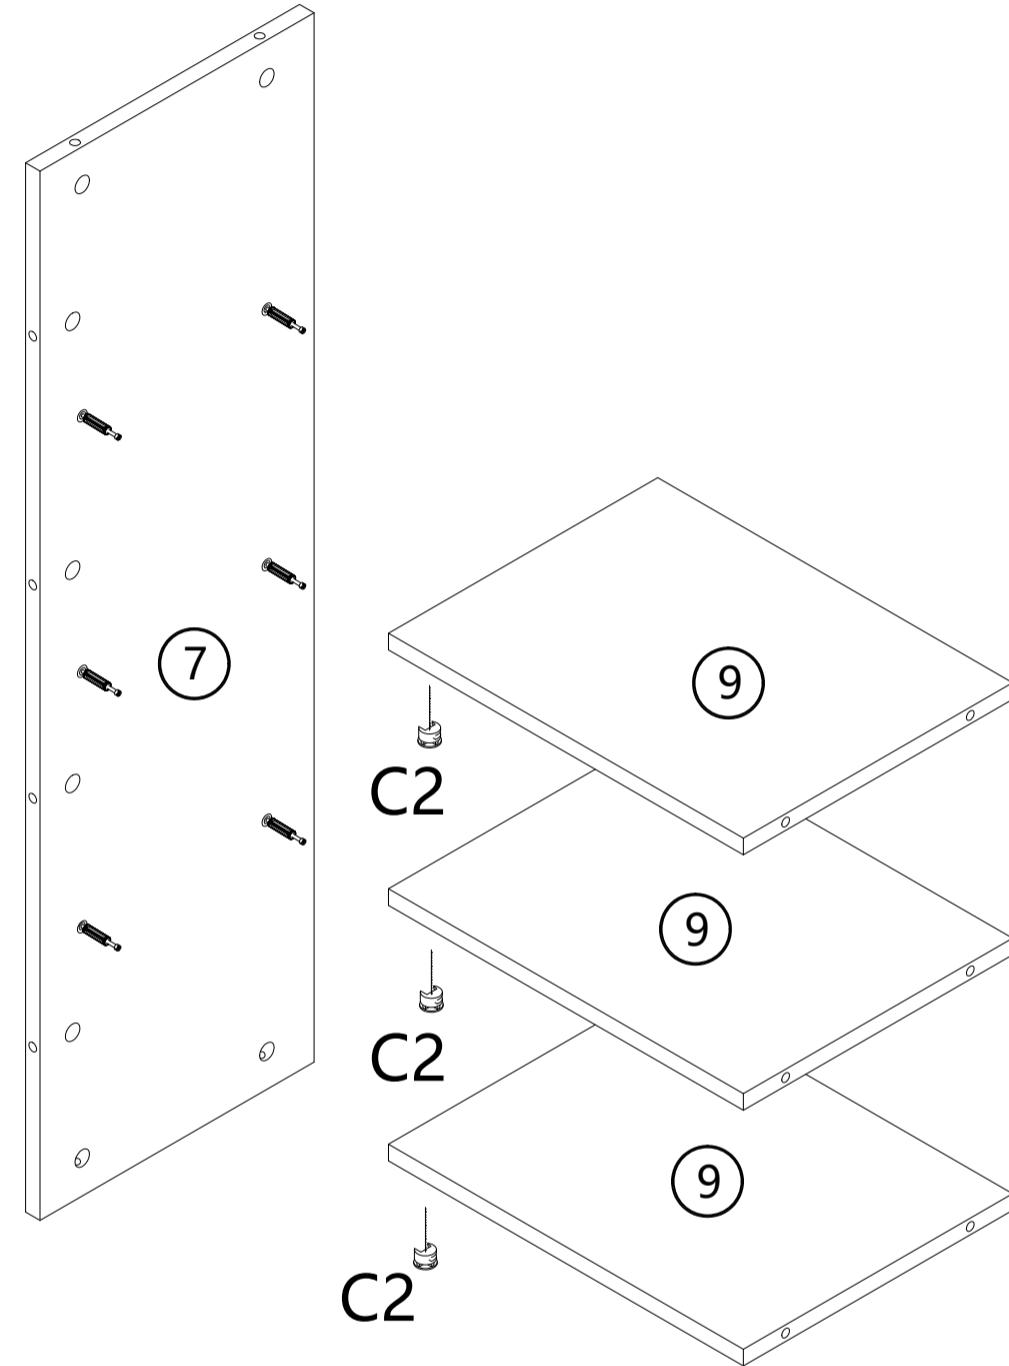

Make sure the arrow on the screw align to the hole on the side.





C2*10

put C2 on board

⑦ ⑨

5

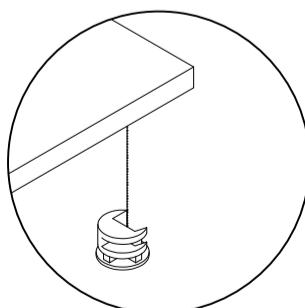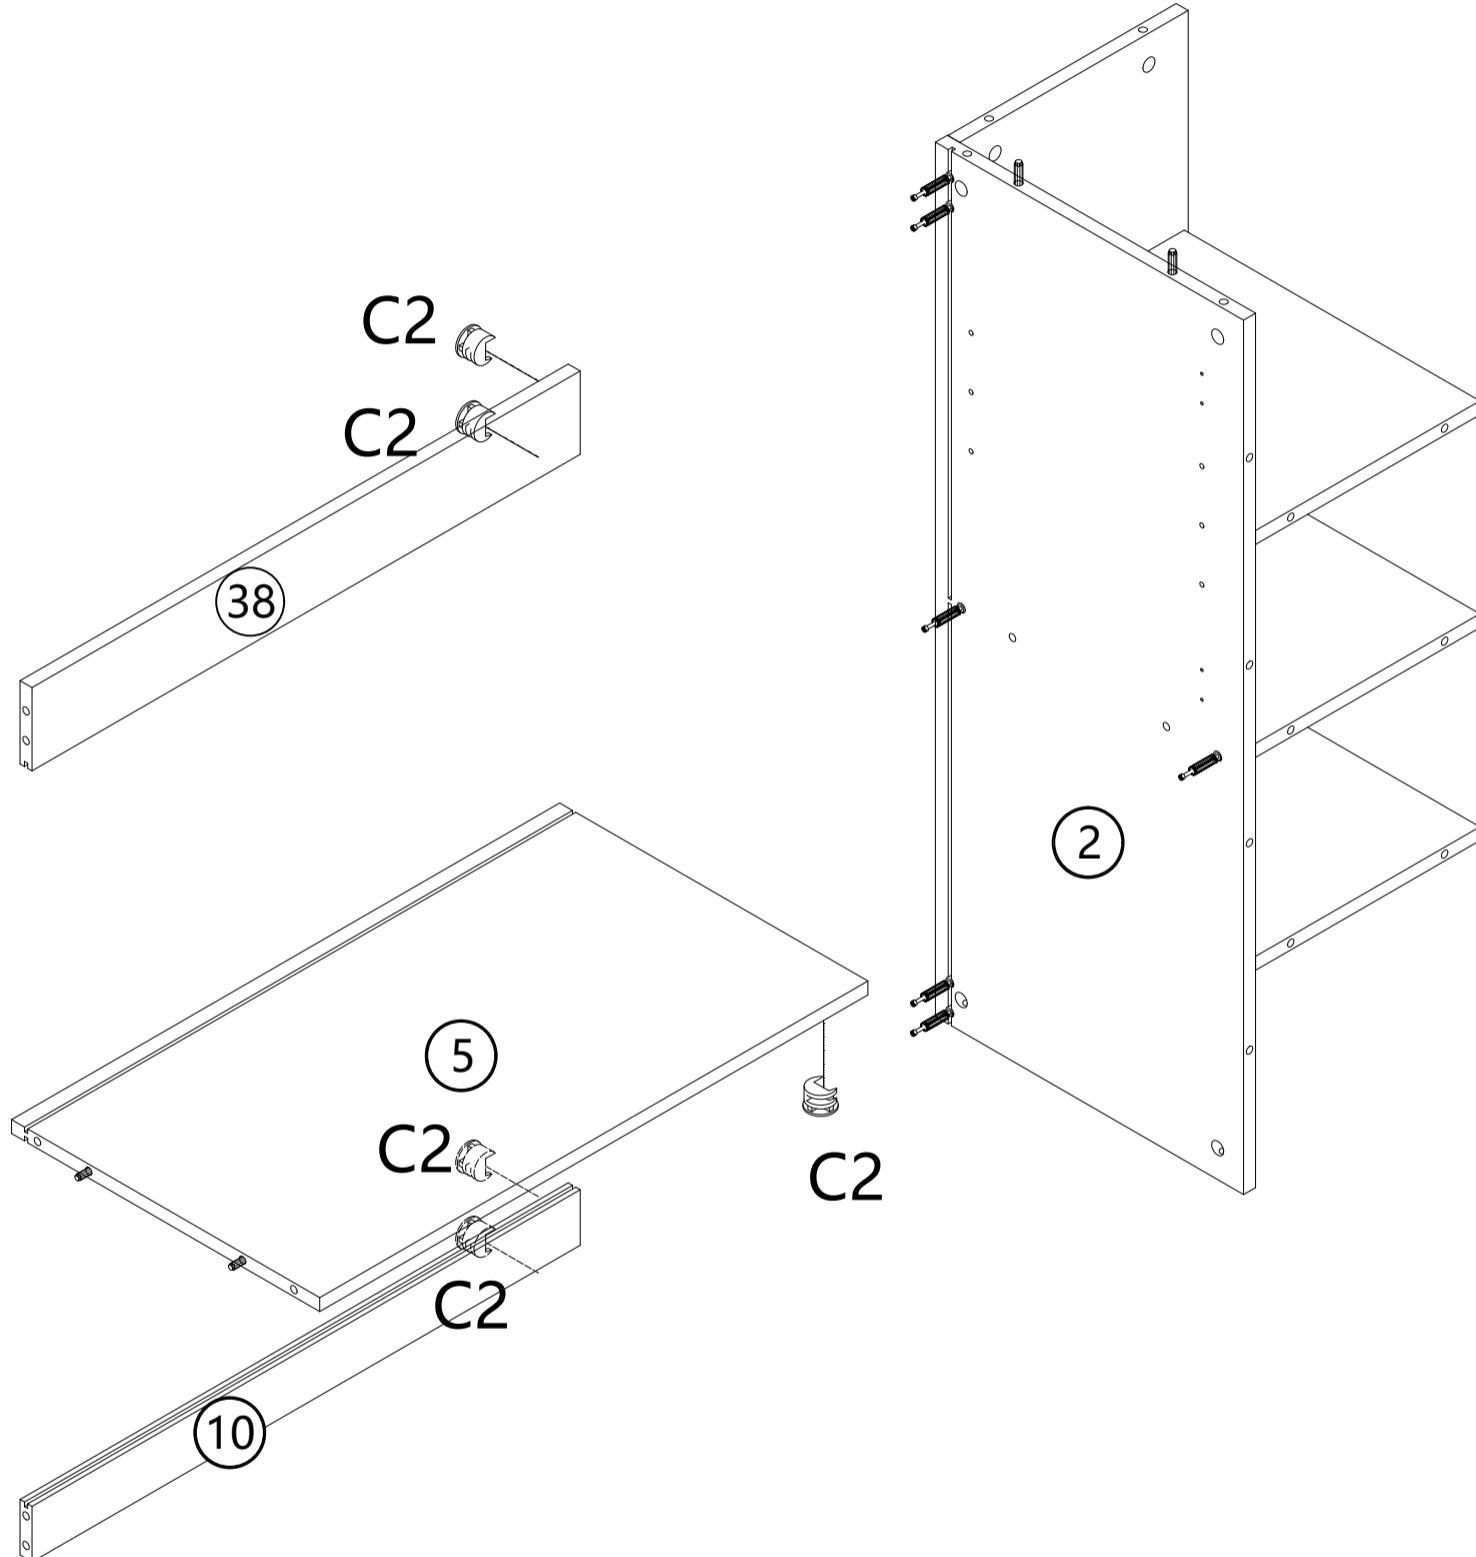


Make sure the arrow on the screw align to the hole on the side.




C2*6

put C2 on board


⑤ ⑩ ③8

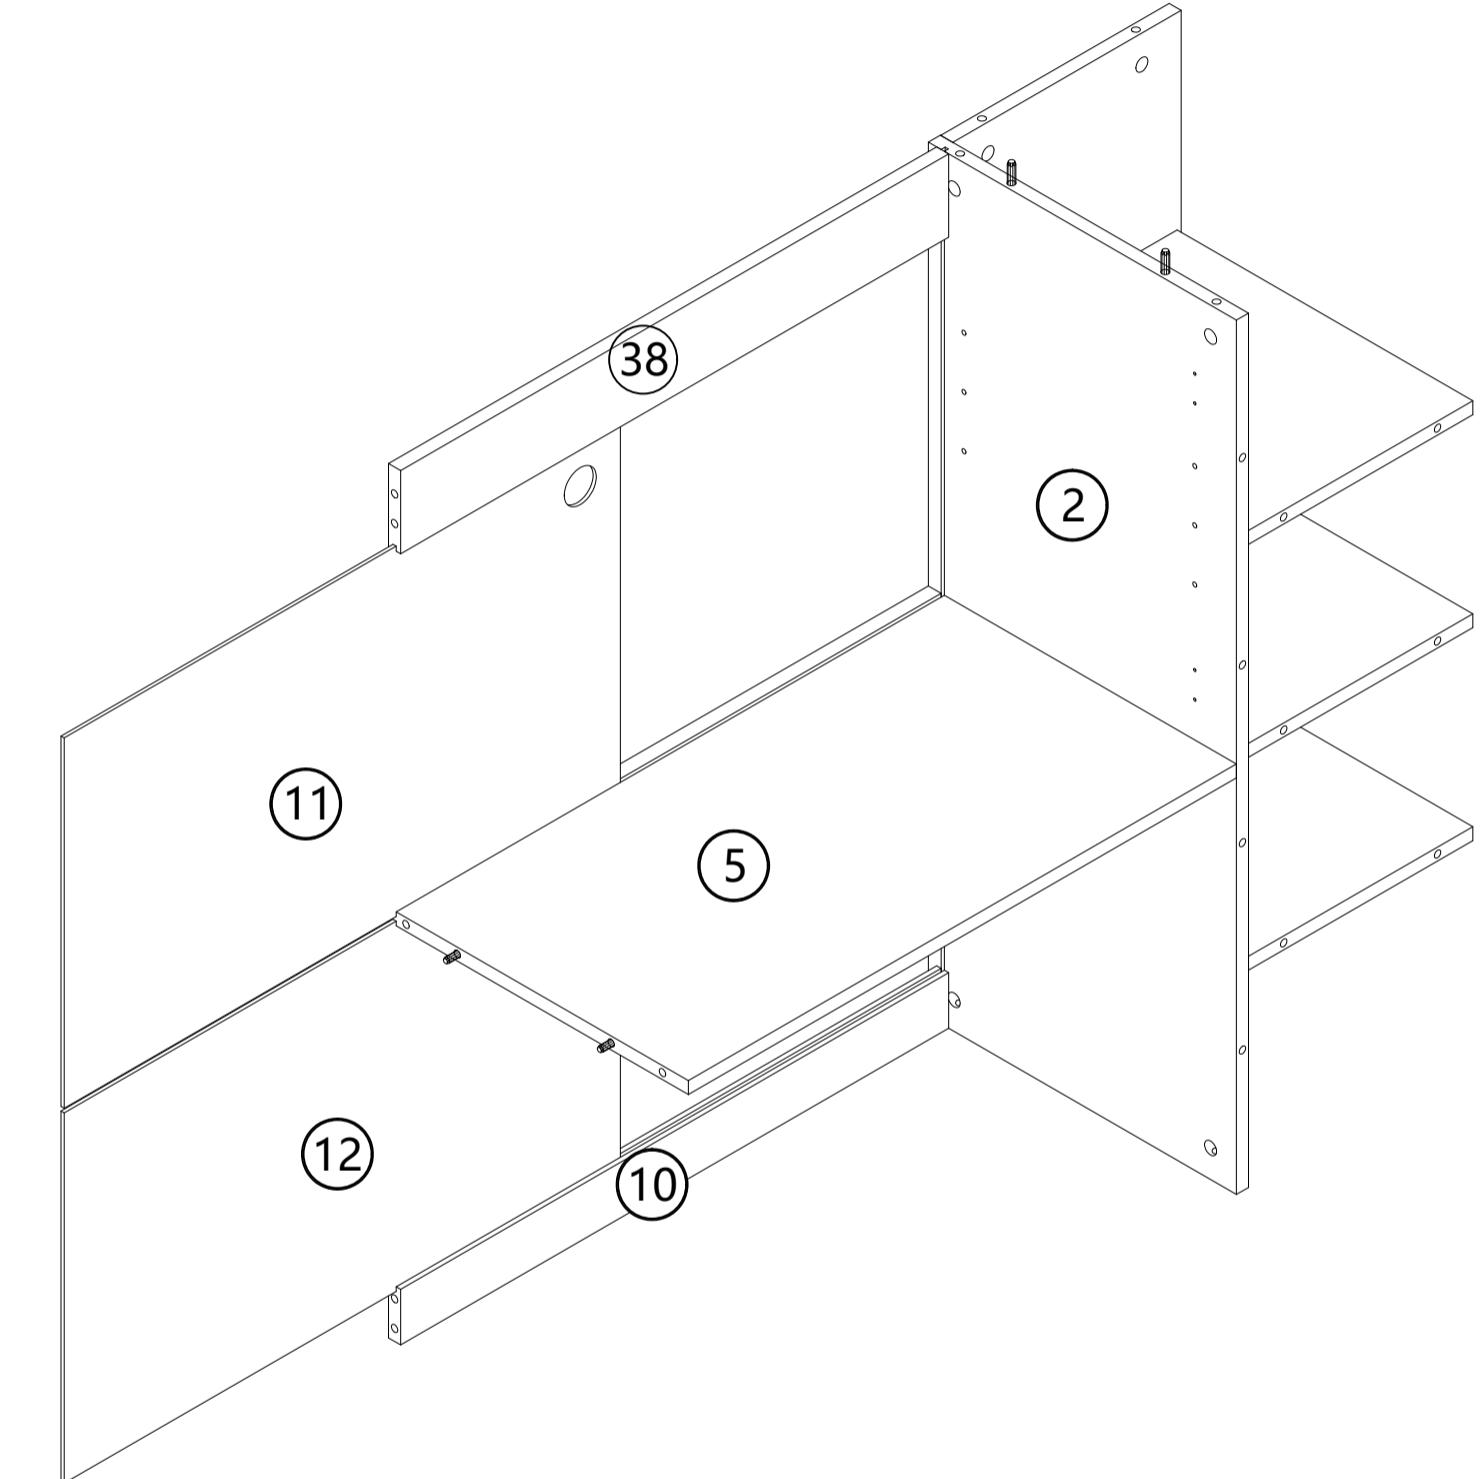

6

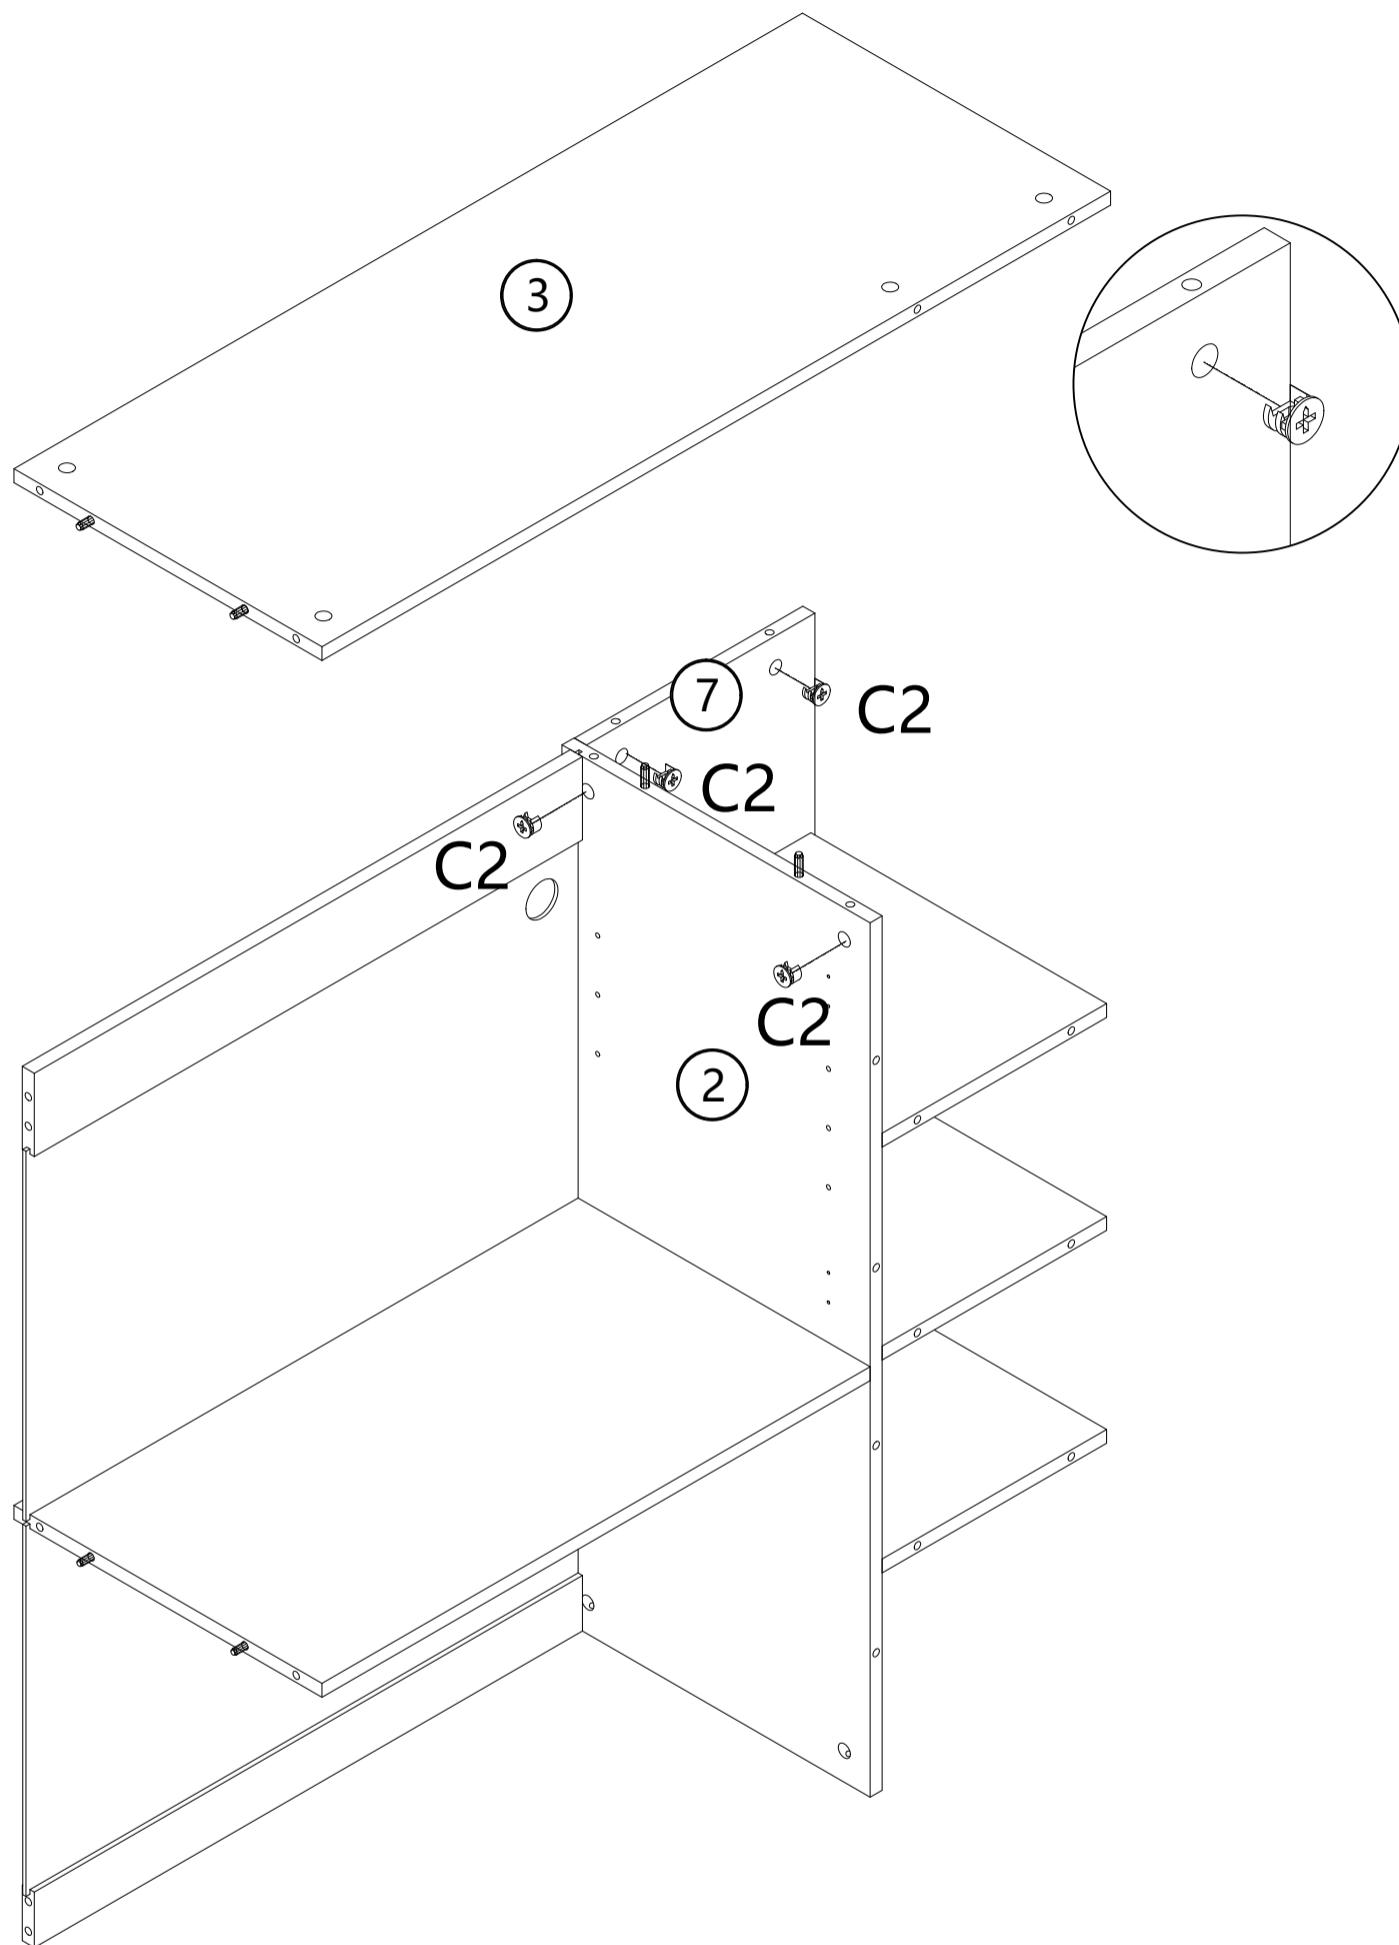

Make sure the arrow on the screw align to the hole on the side.

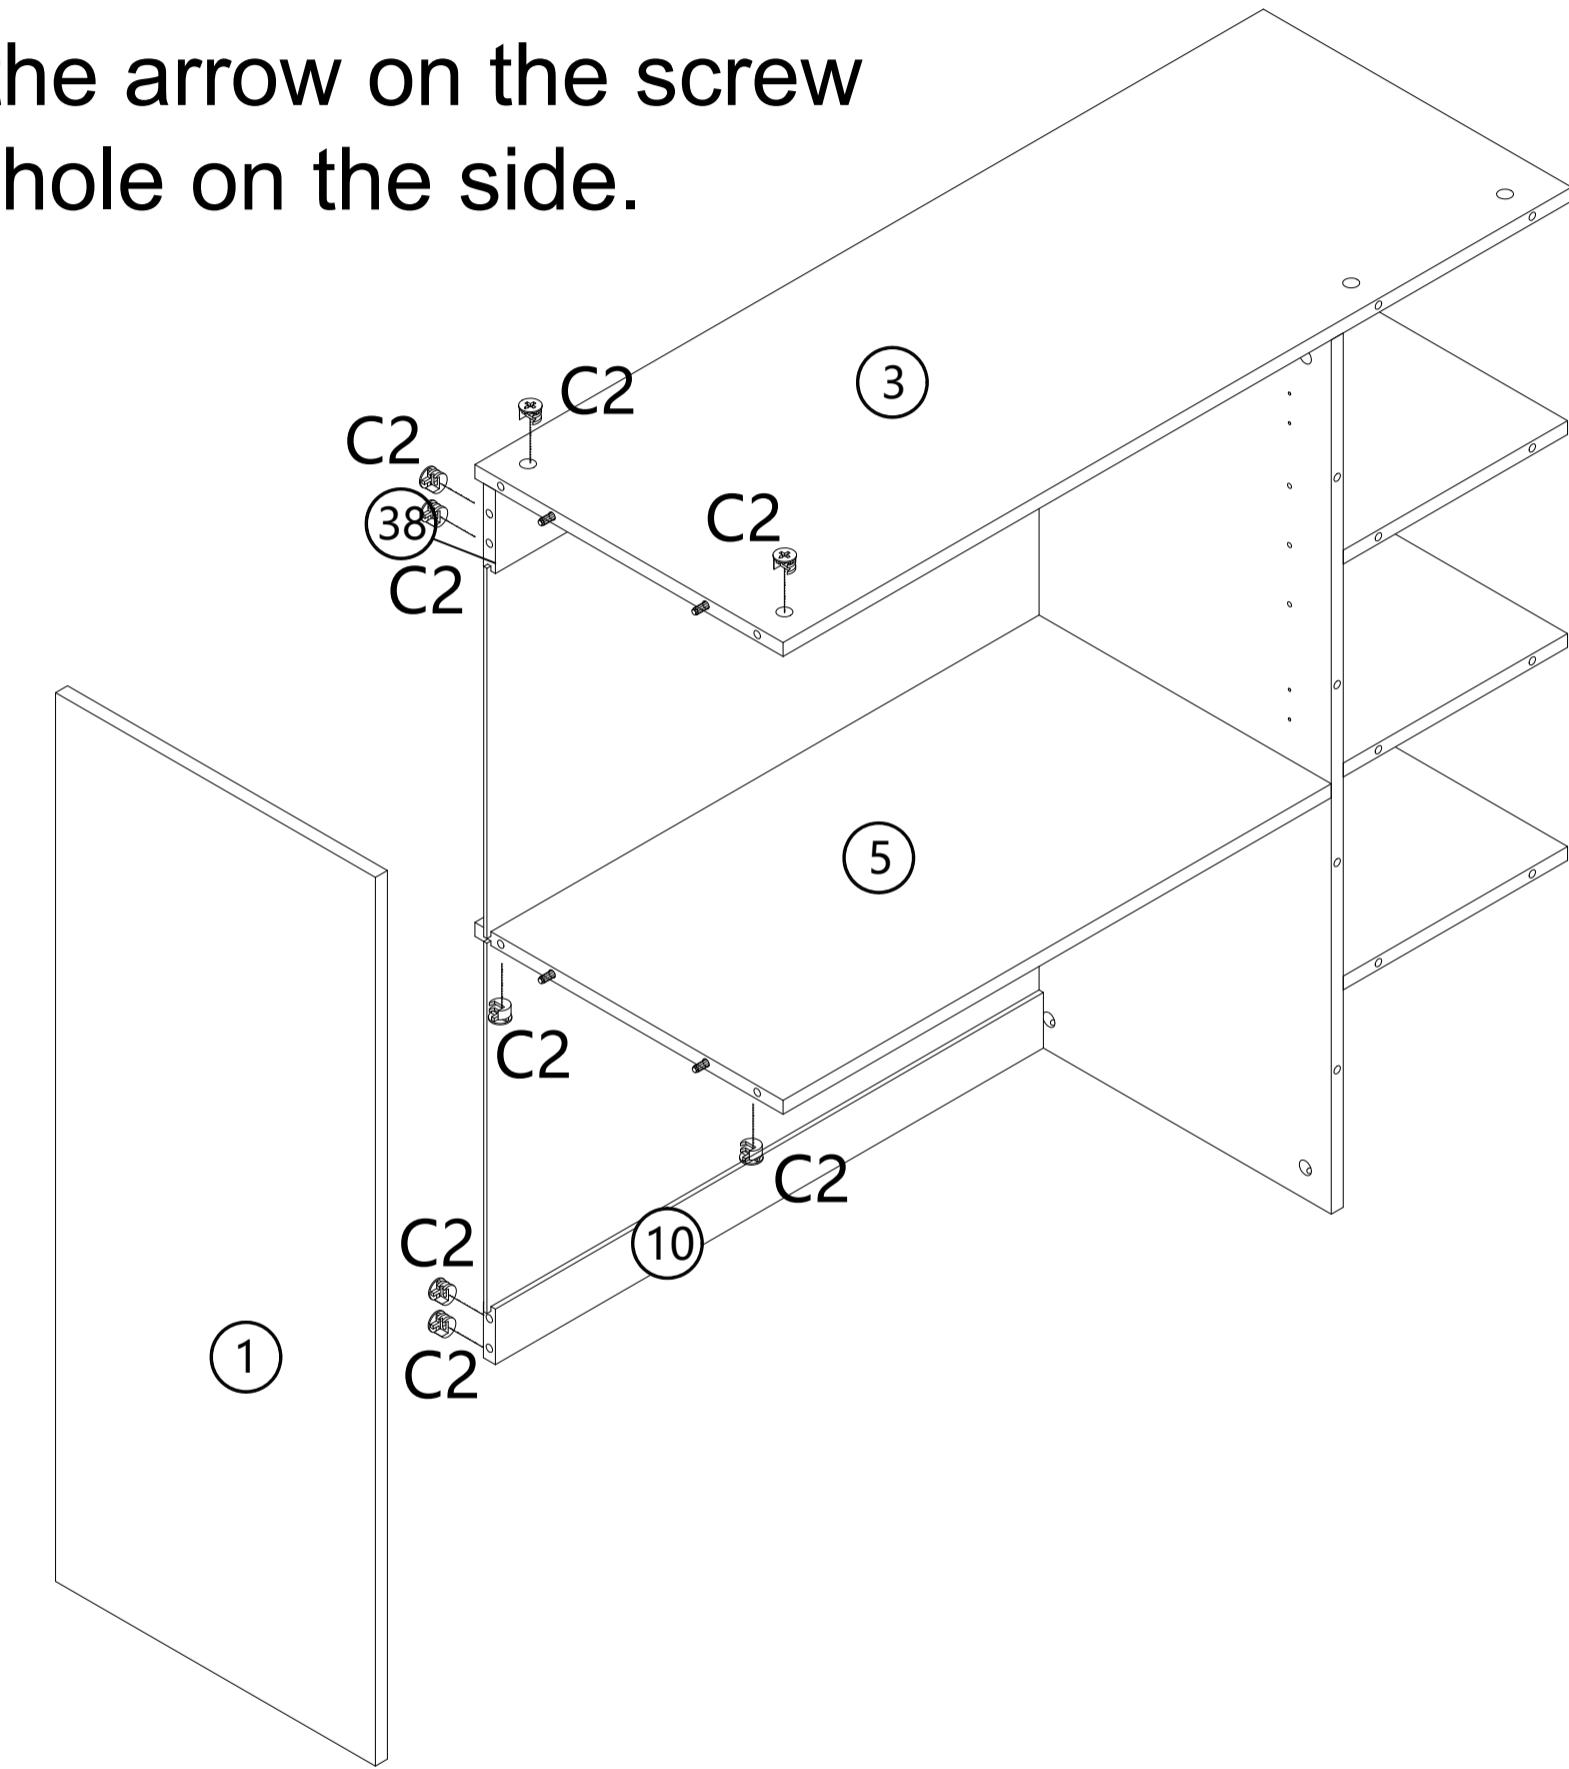


C2*12



put C2 on board

② ③ ⑤ ⑦ ⑩ ③8

7

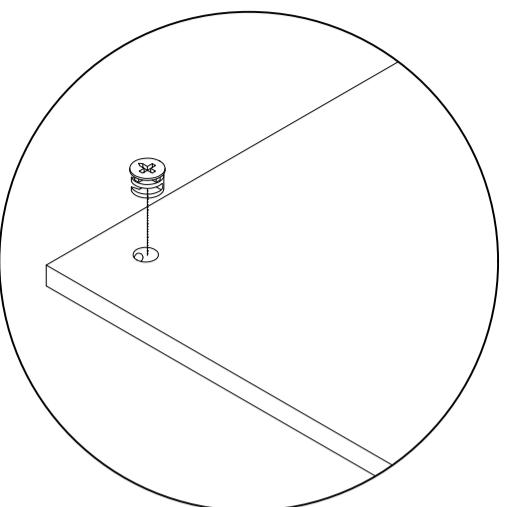

Make sure the arrow on the screw align to the hole on the side.


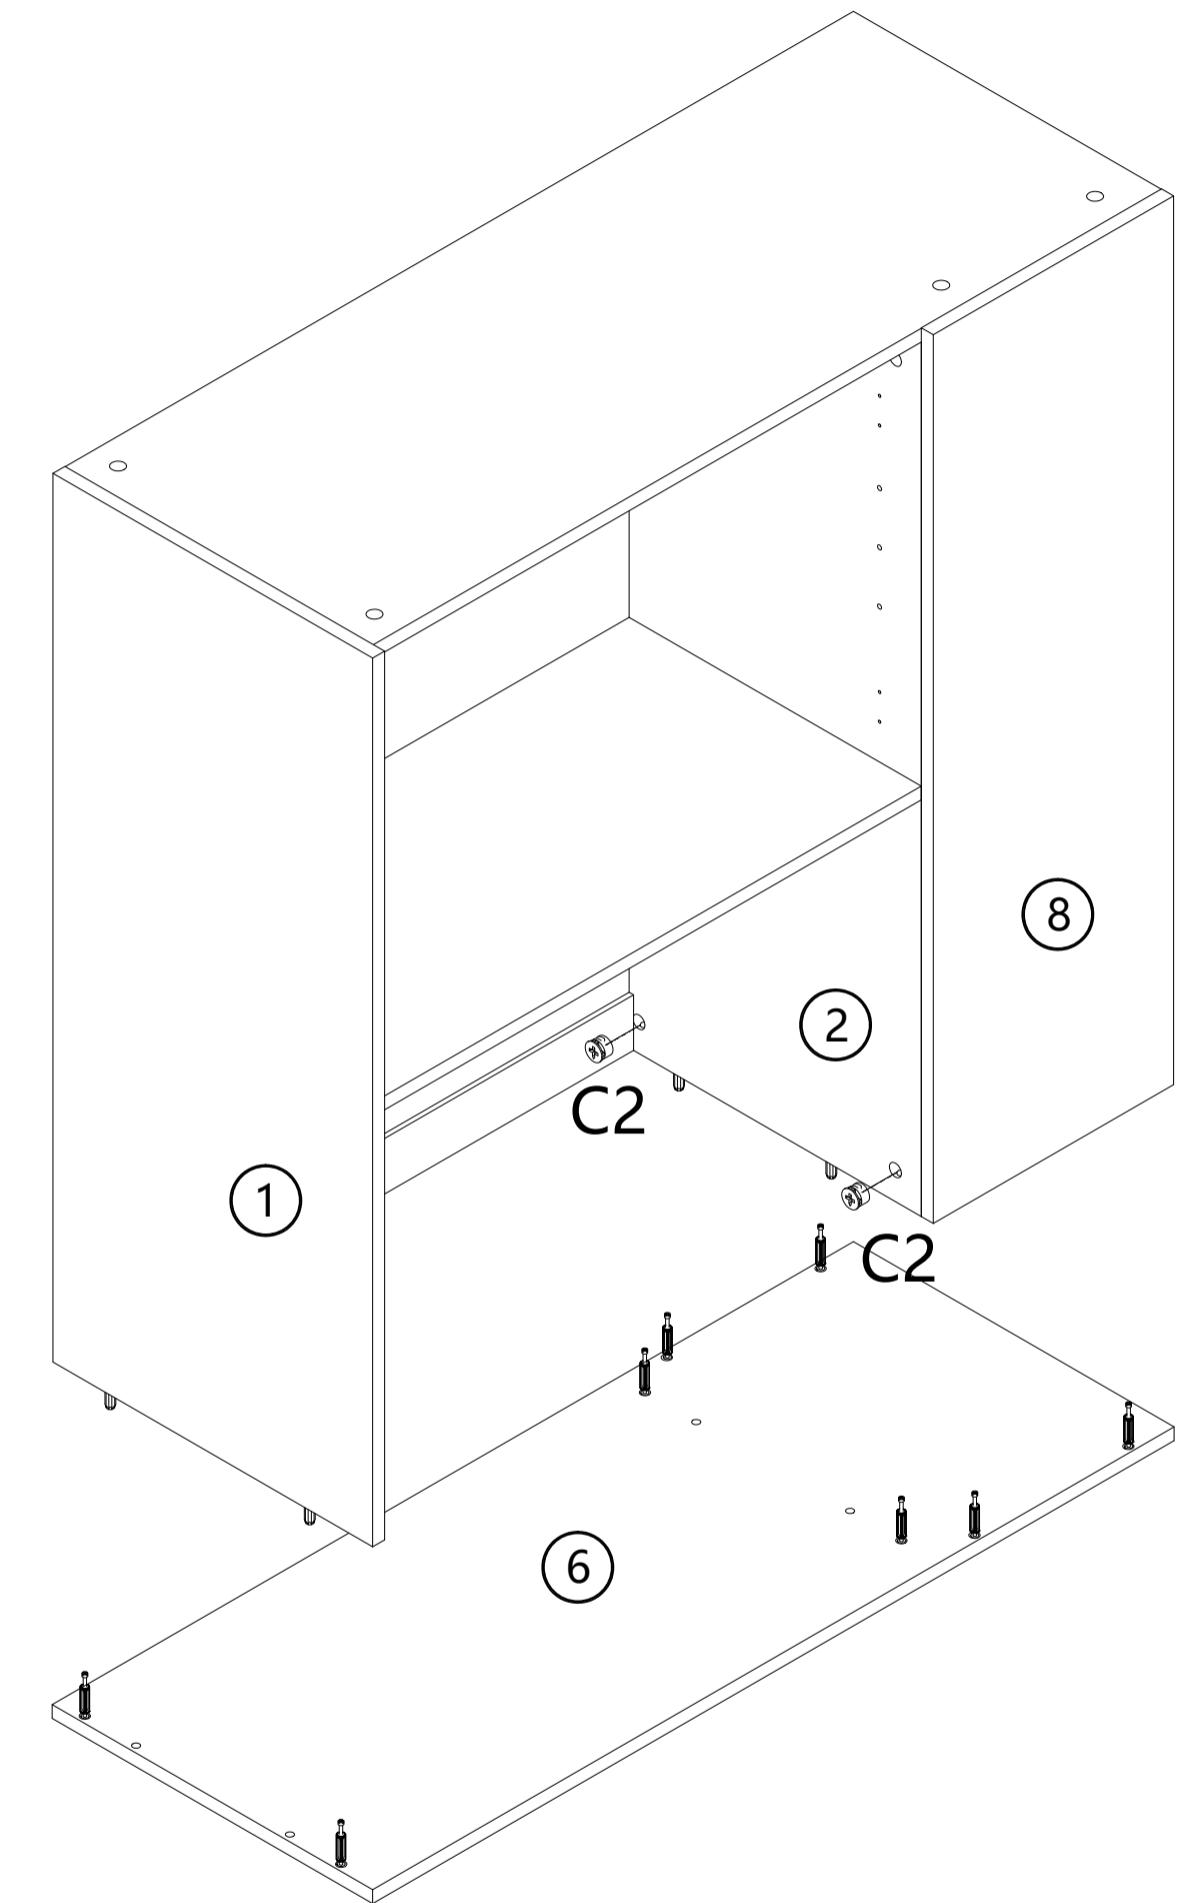
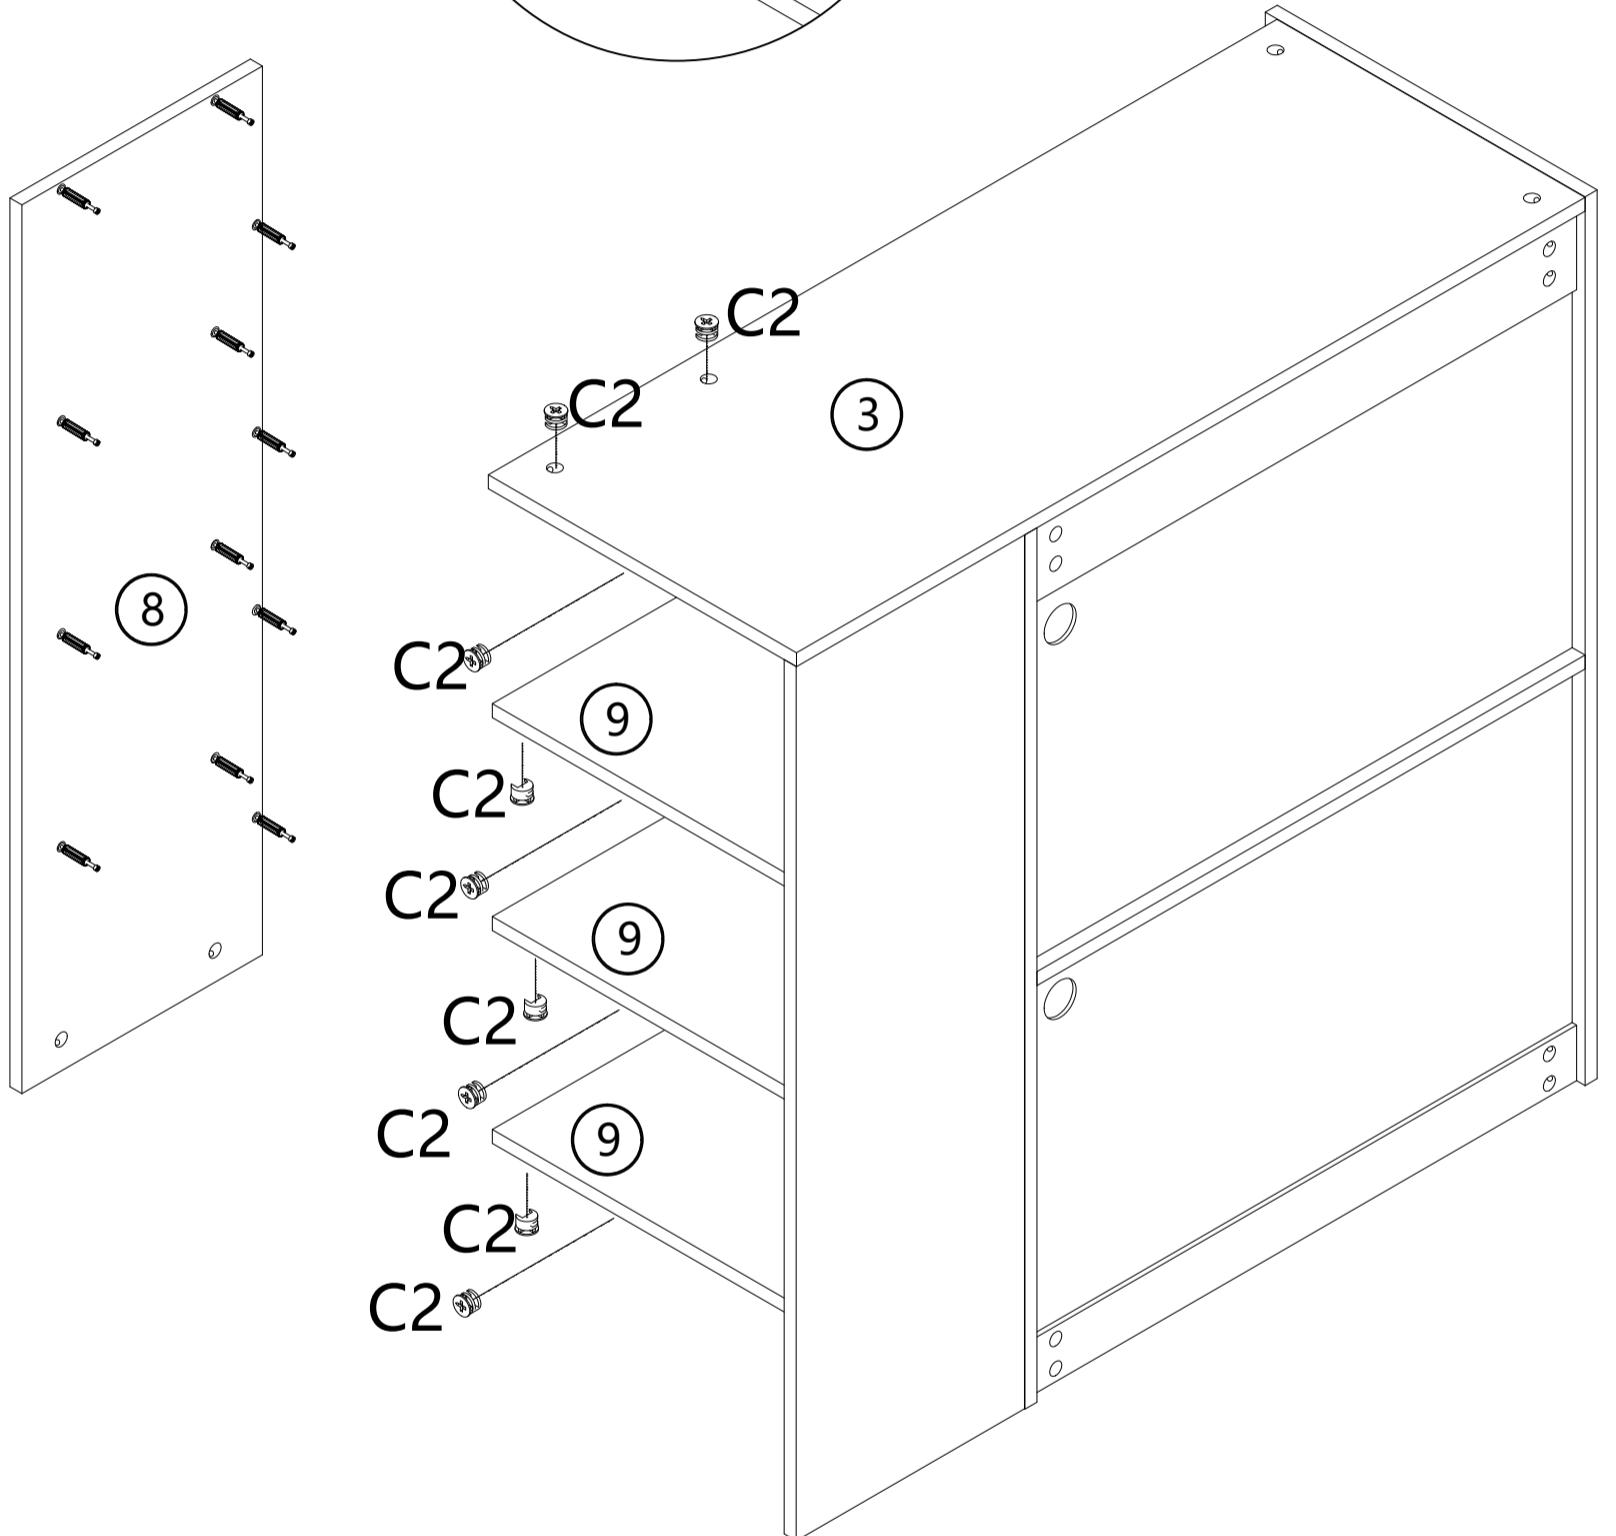


C2*14

put C2 on board

② ③ ⑨

8

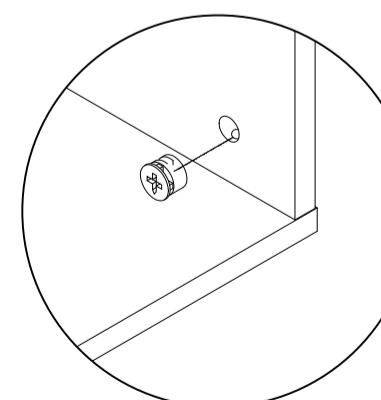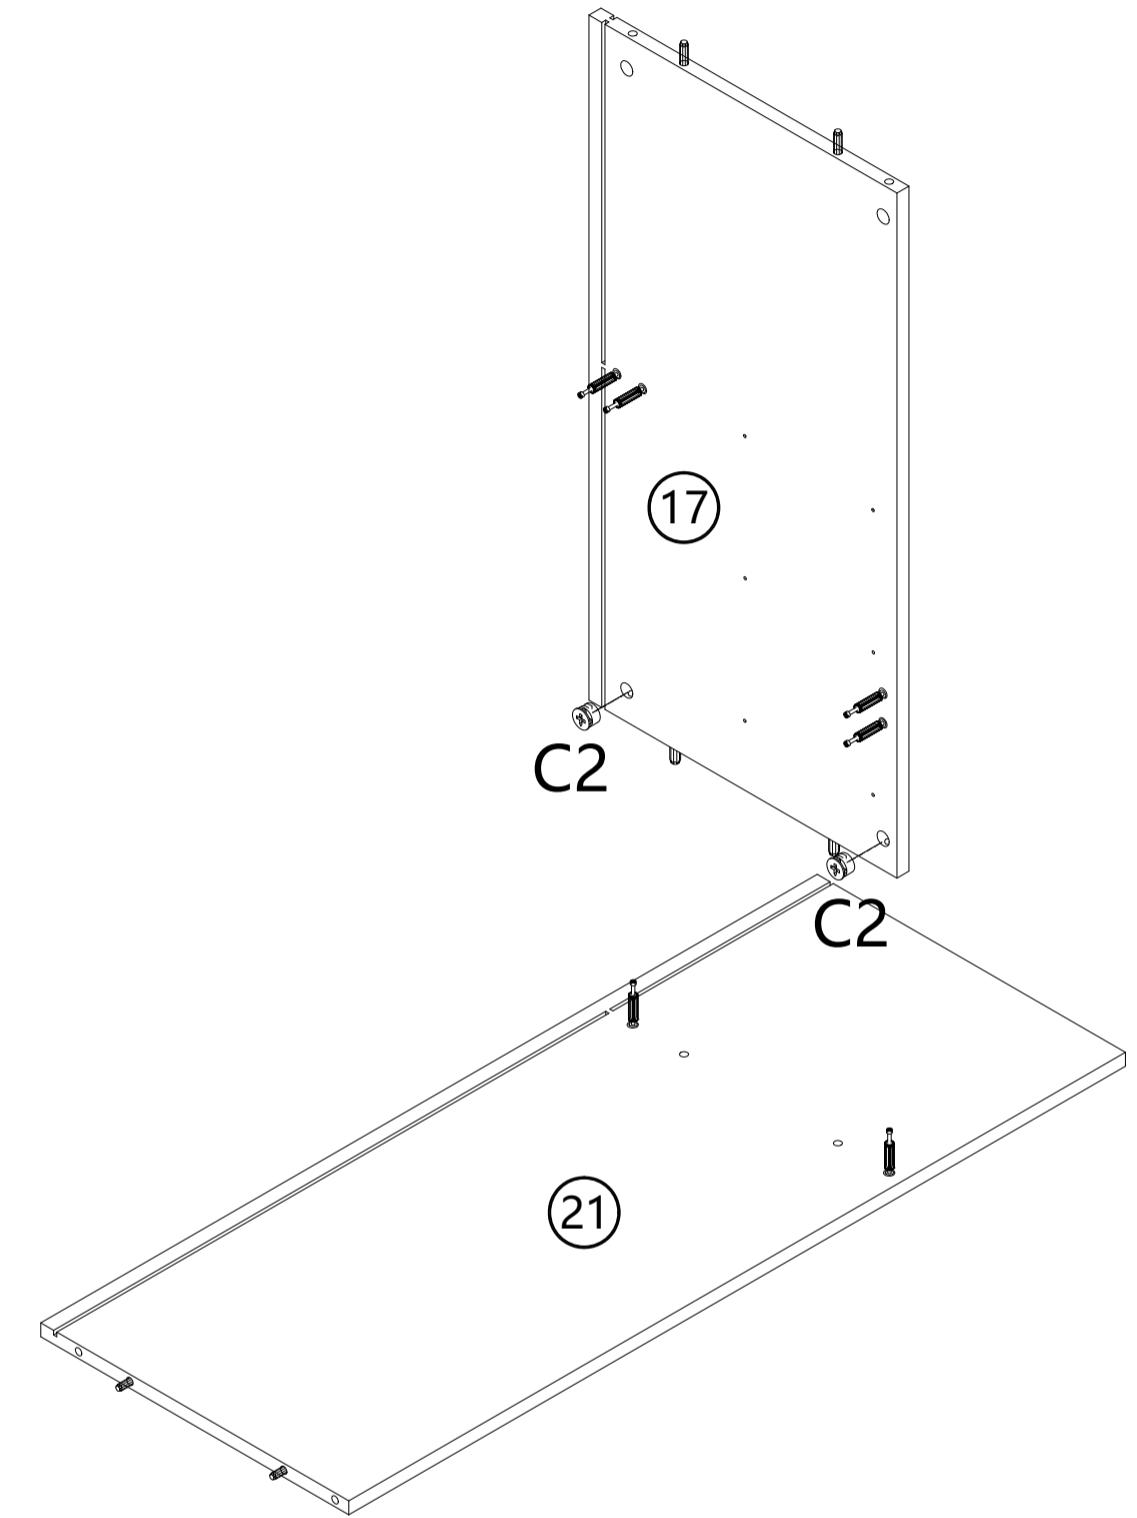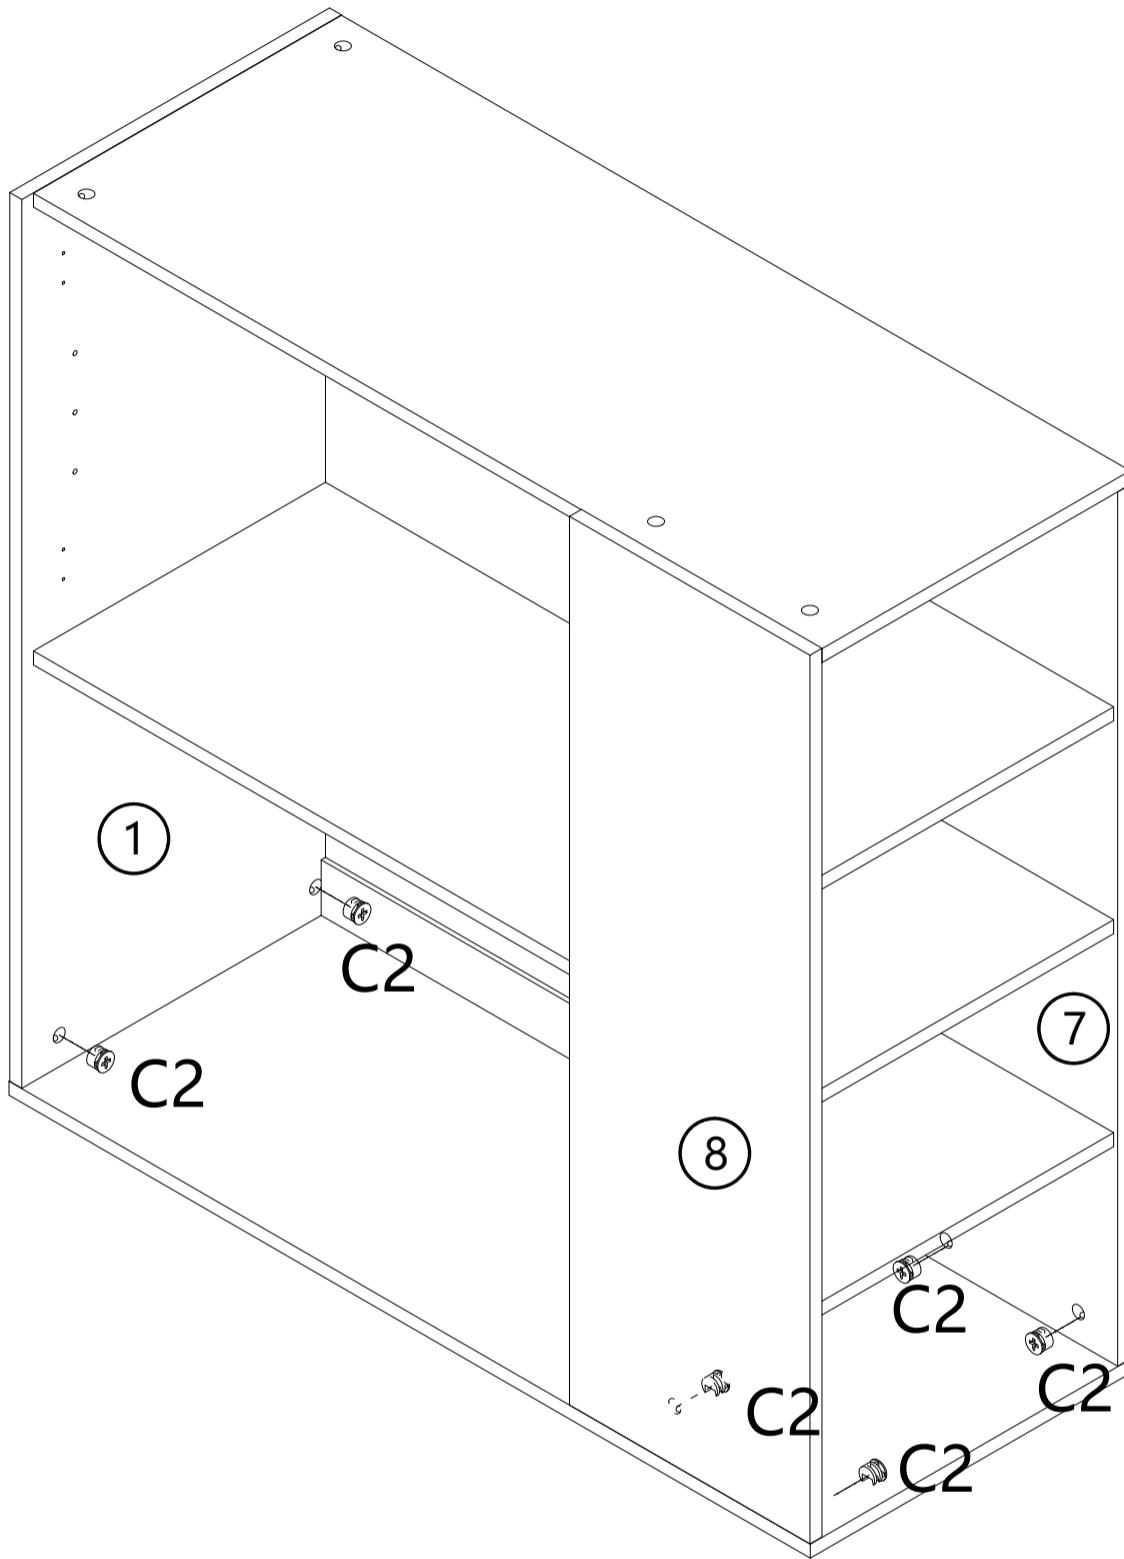


Make sure the arrow on the screw align to the hole on the side.




C2*8

put C2 on board ① ⑦ ⑧ ⑯

9

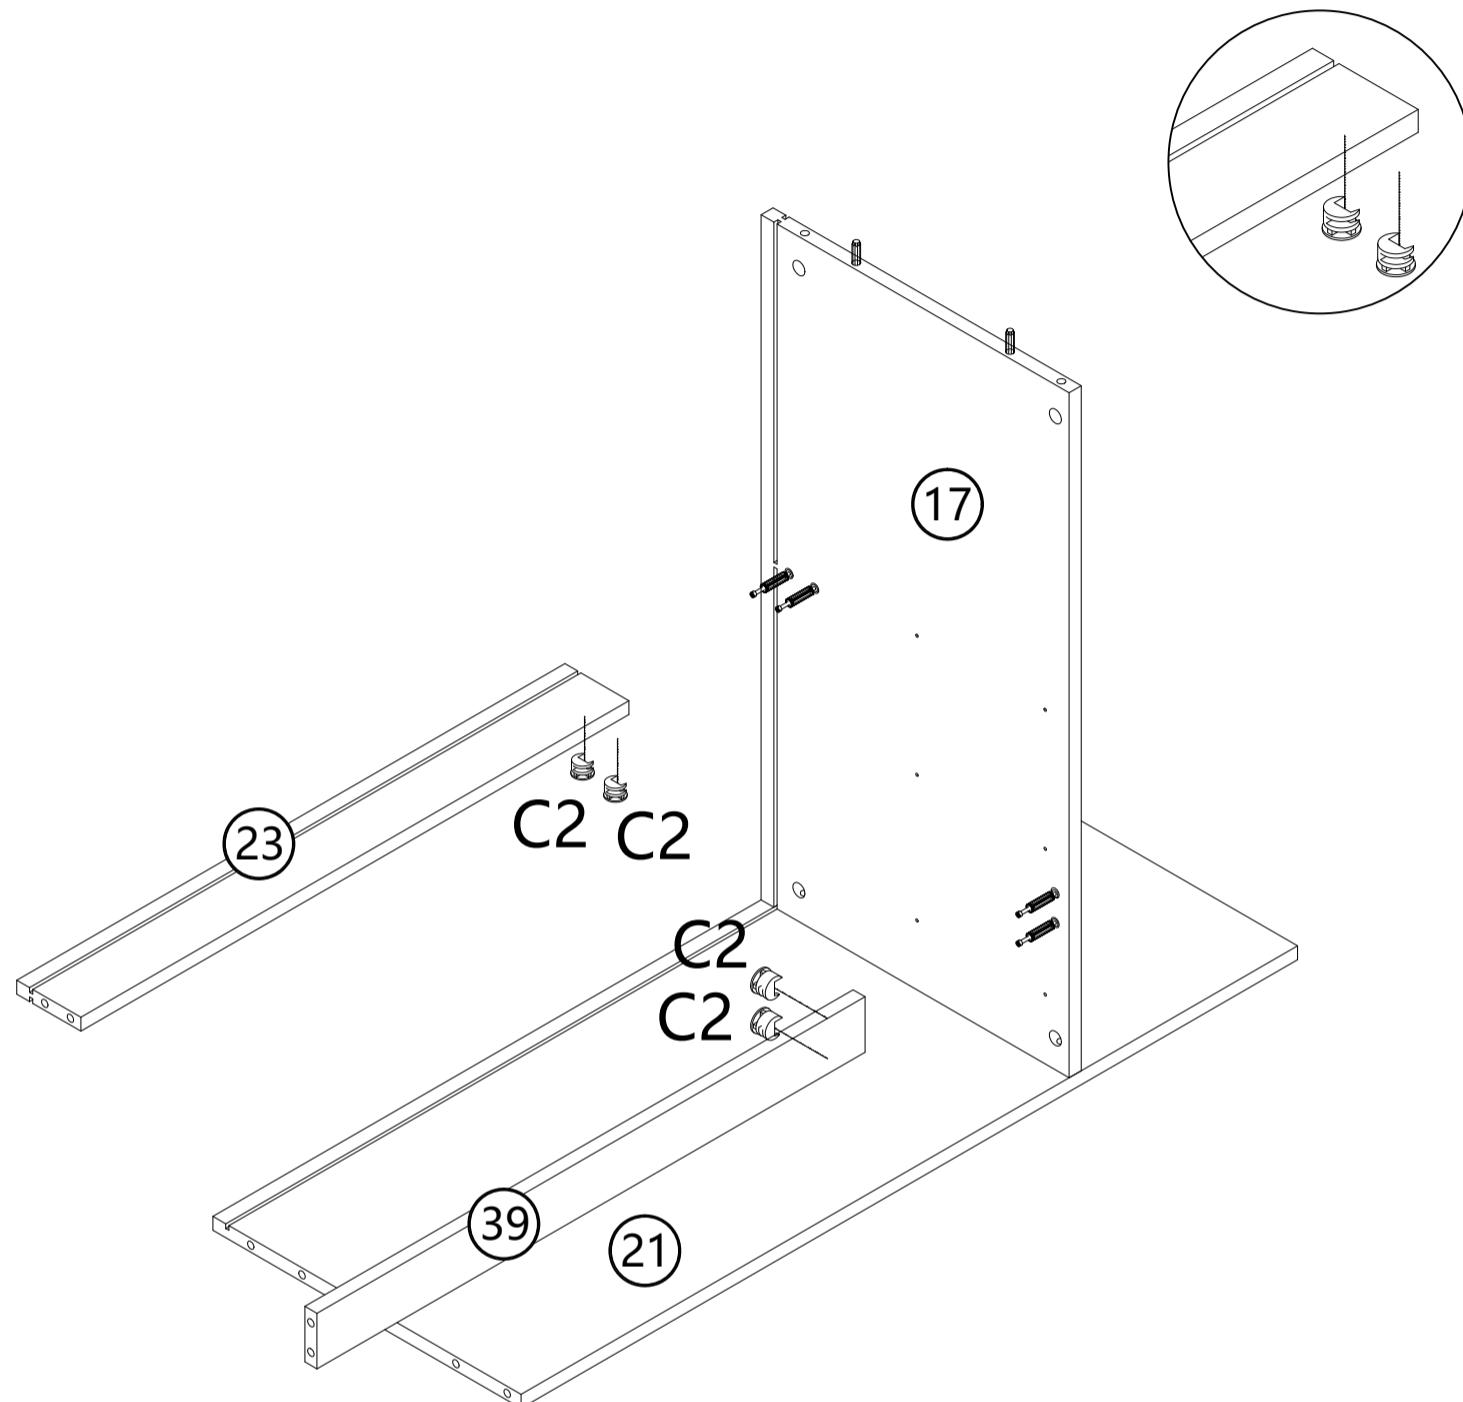

Make sure the arrow on the screw align to the hole on the side.


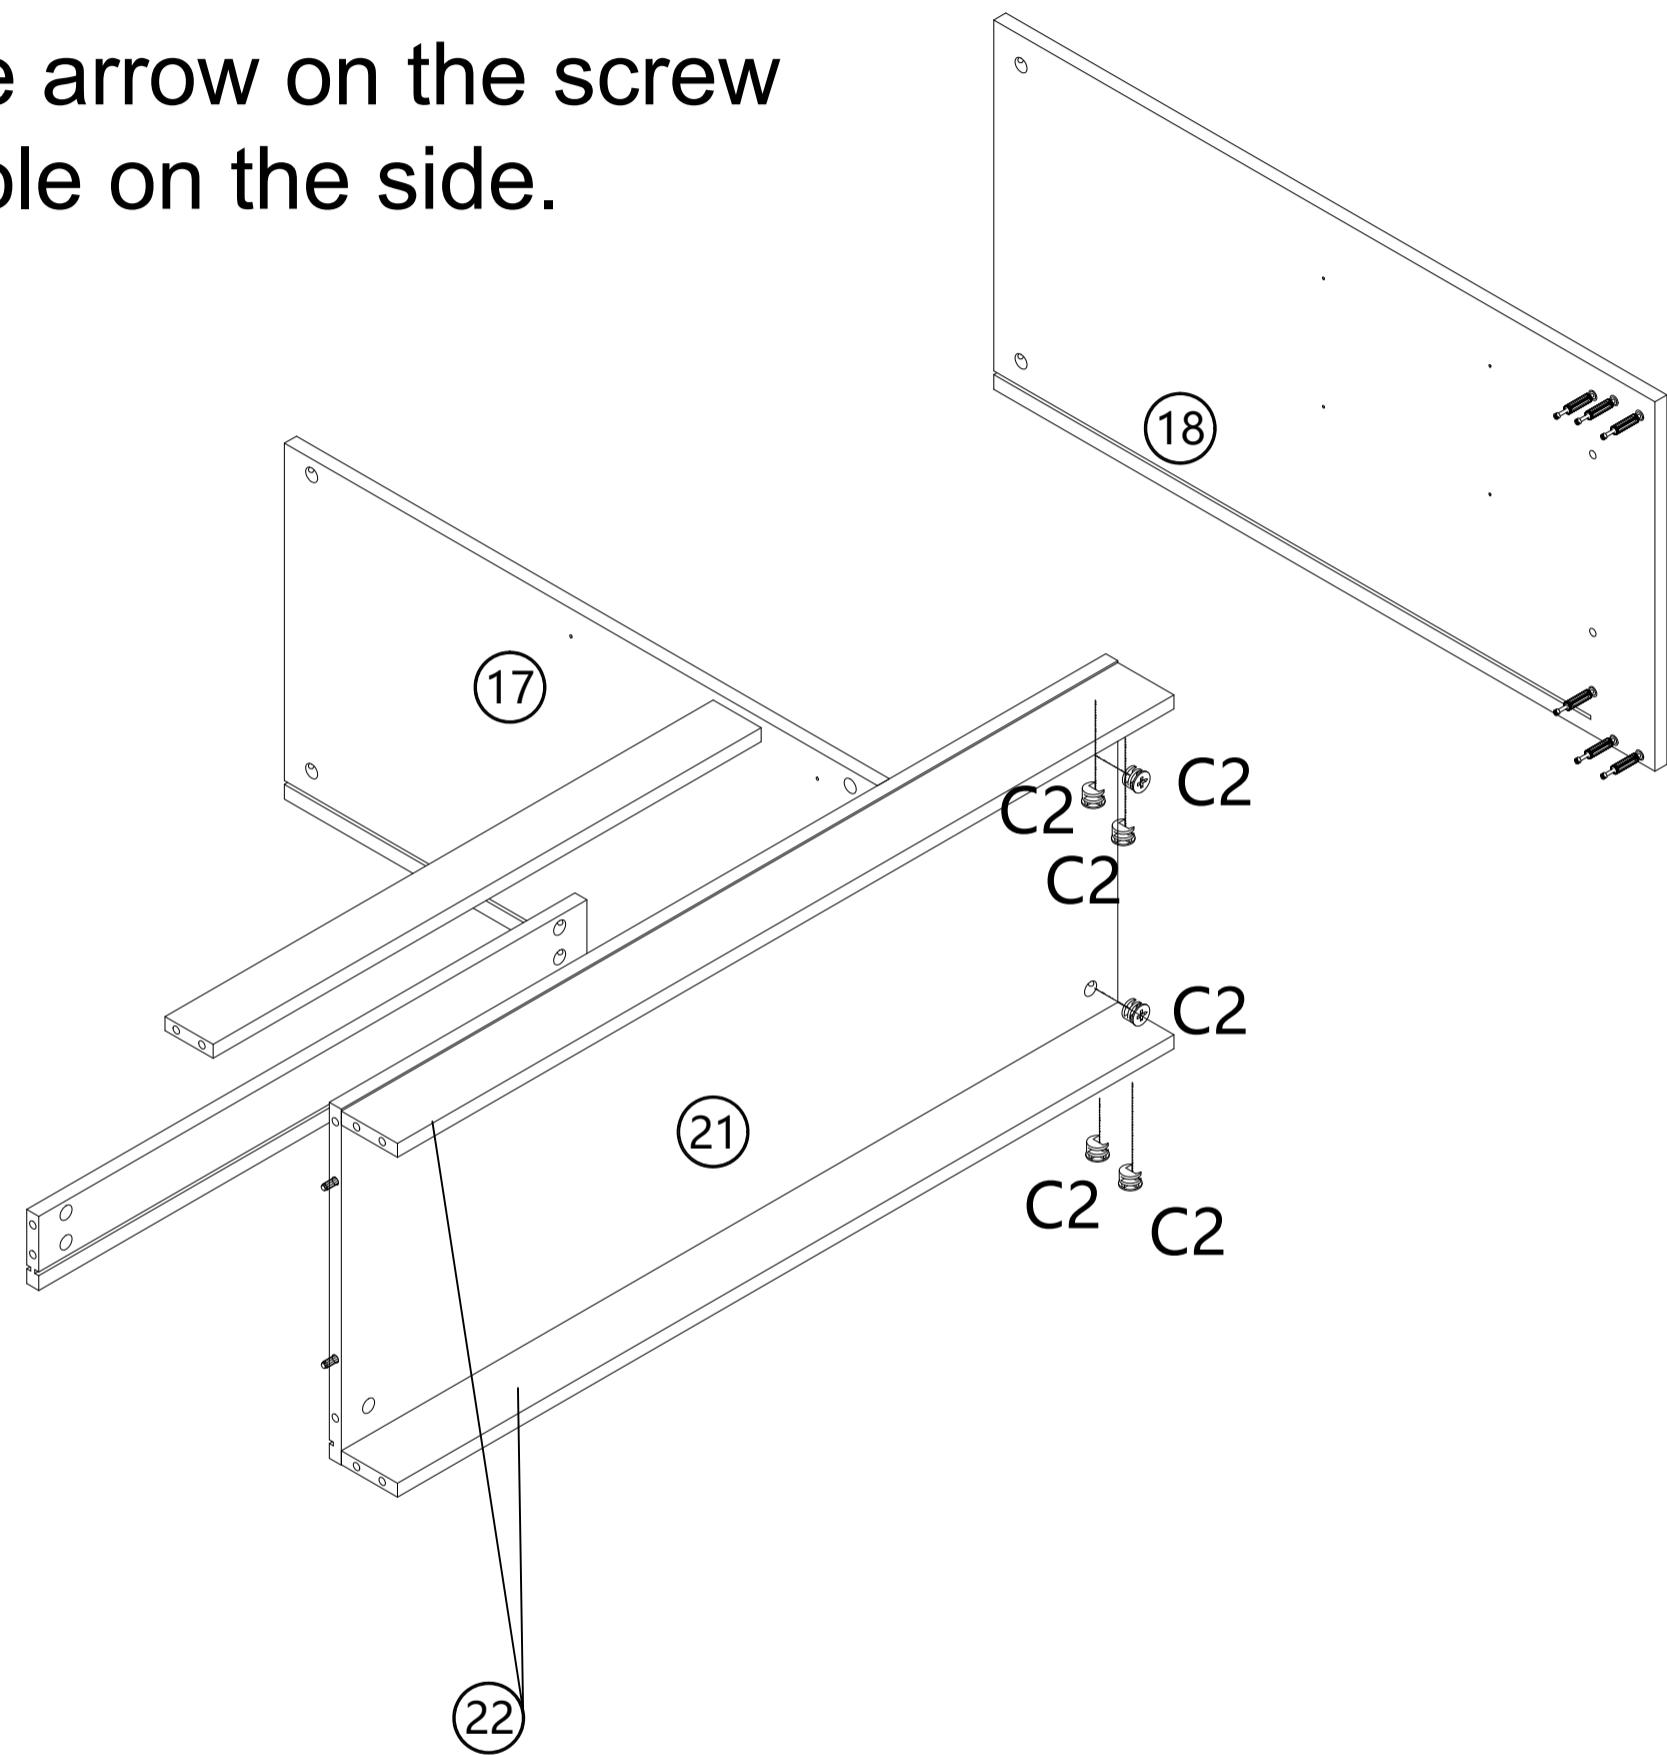


C2*10

put C2 on board

(21) (22) (23) (39)

10

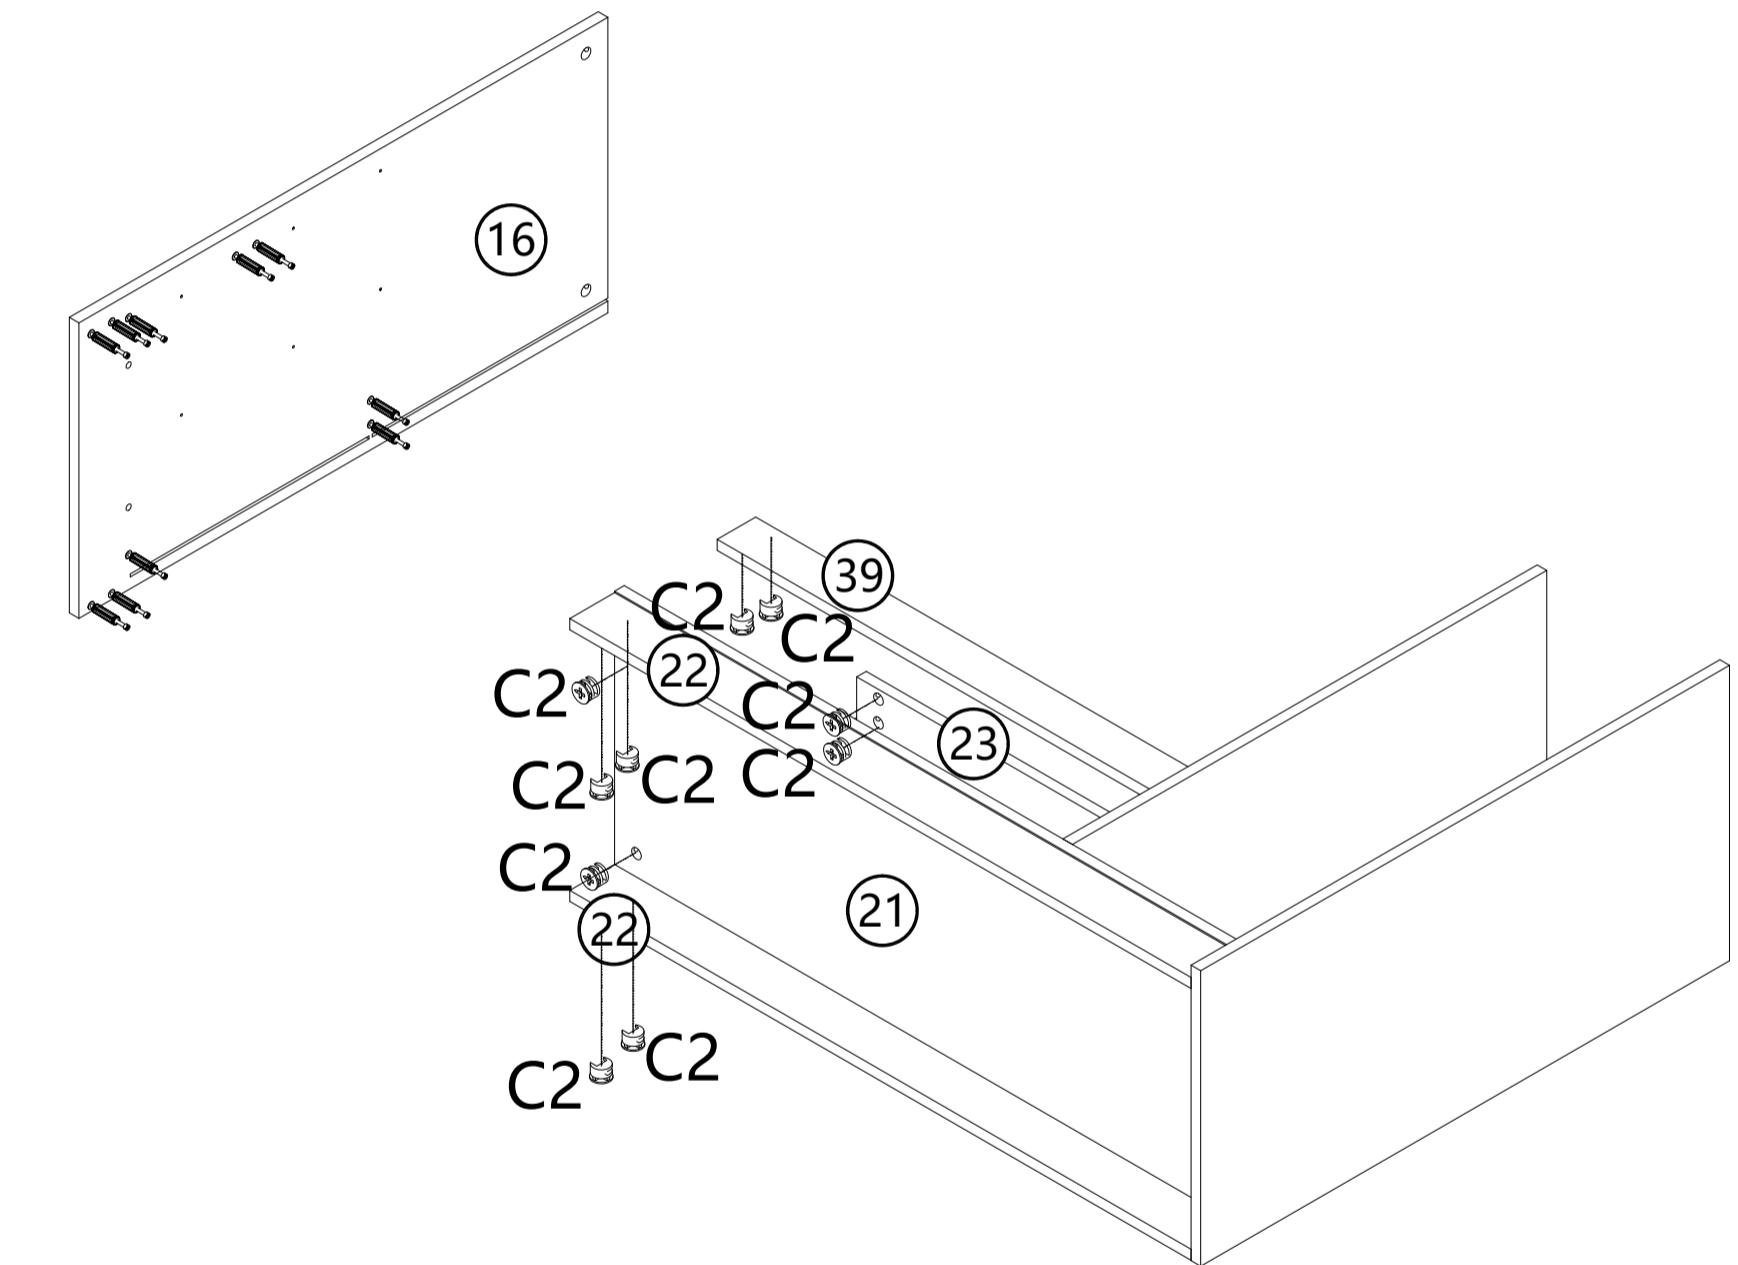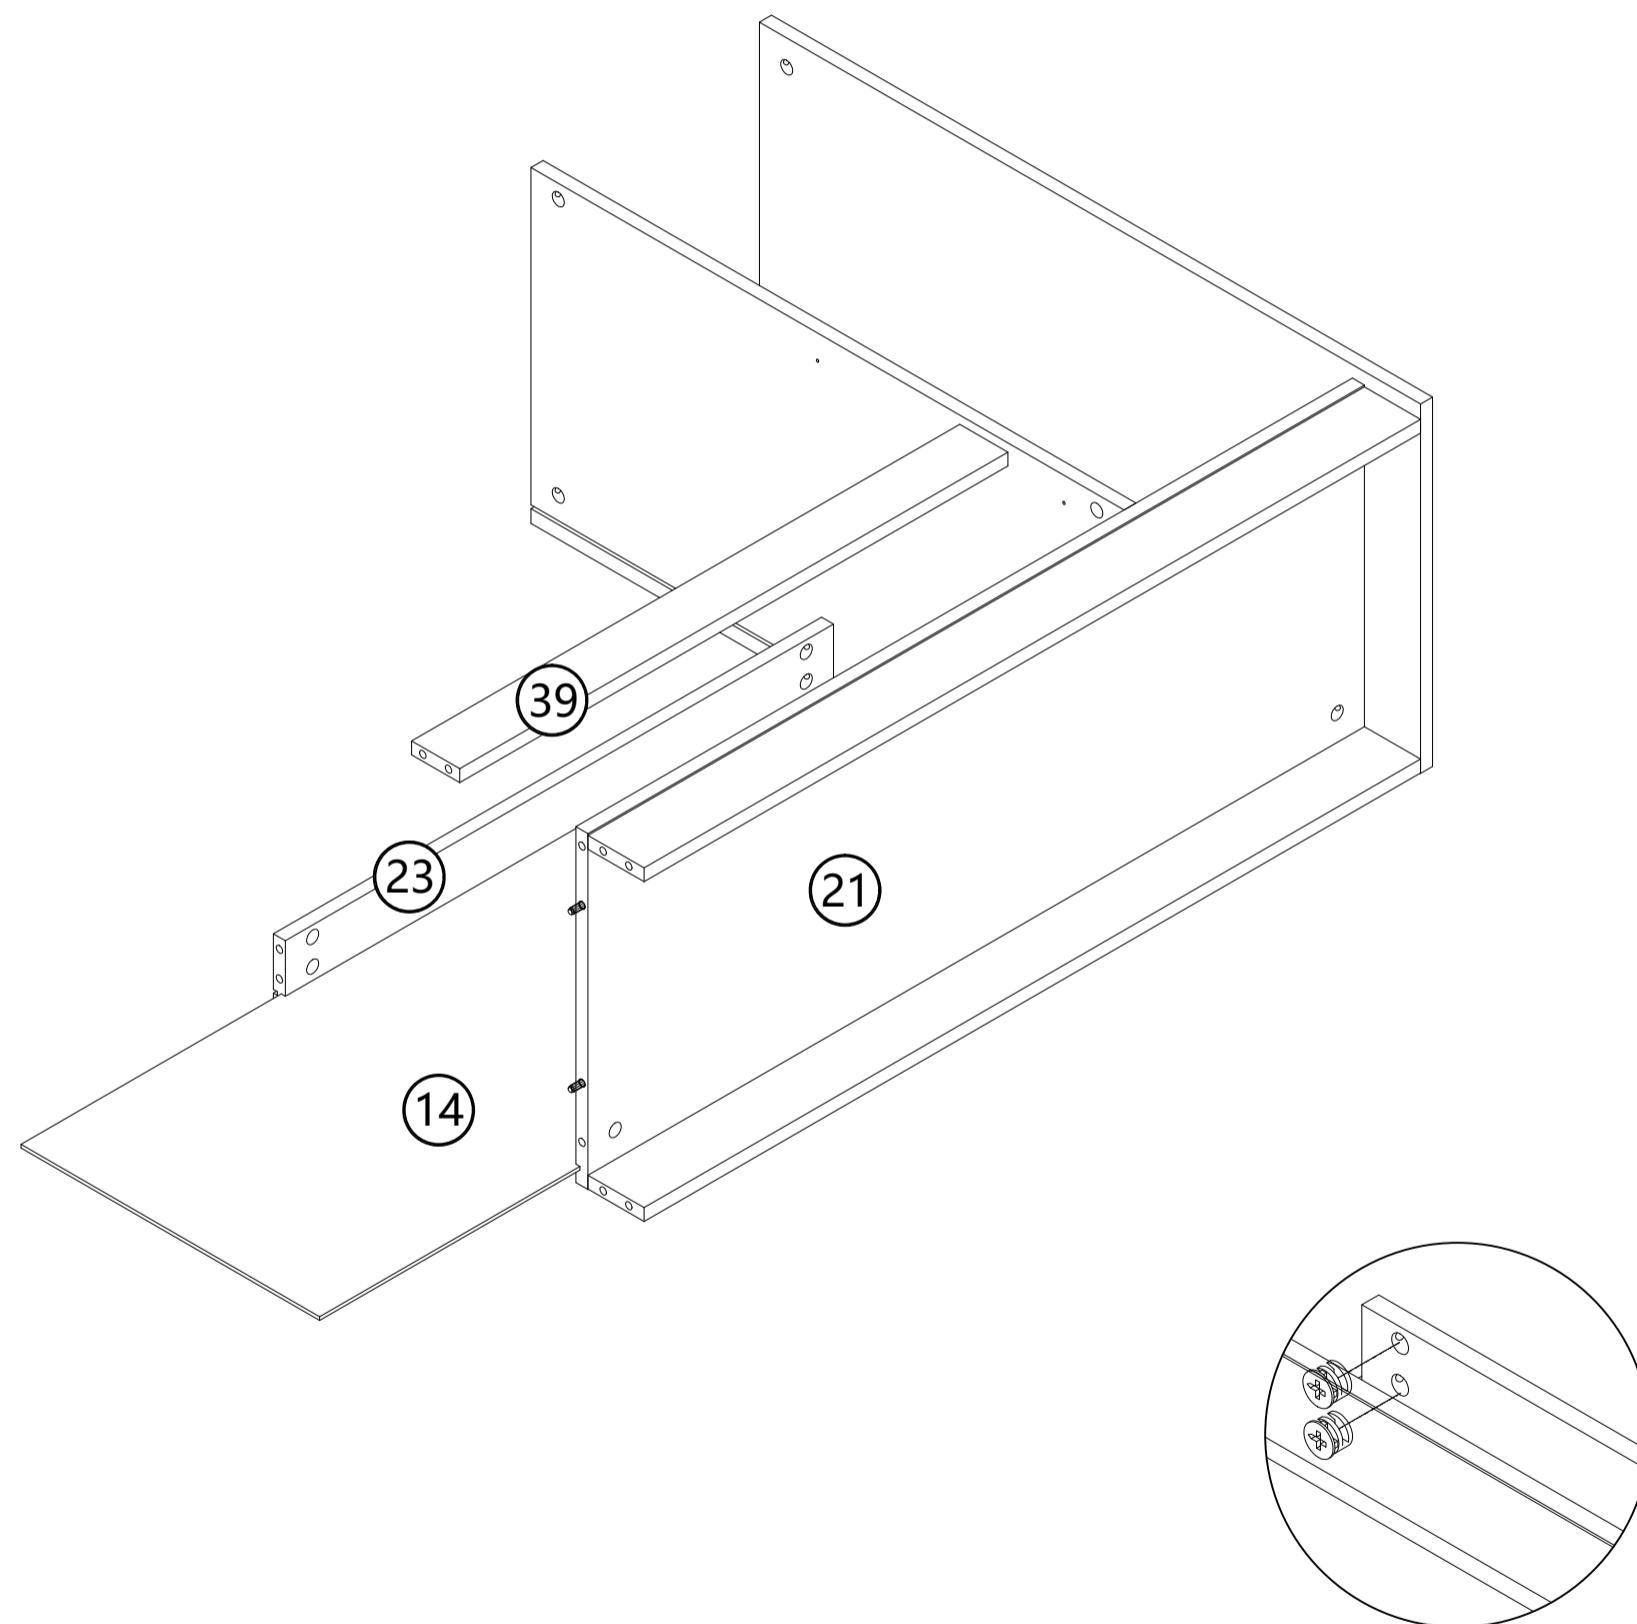

Make sure the arrow on the screw align to the hole on the side.





C2*10


put C2 on board

②1 ②2 ②3 ③9

11

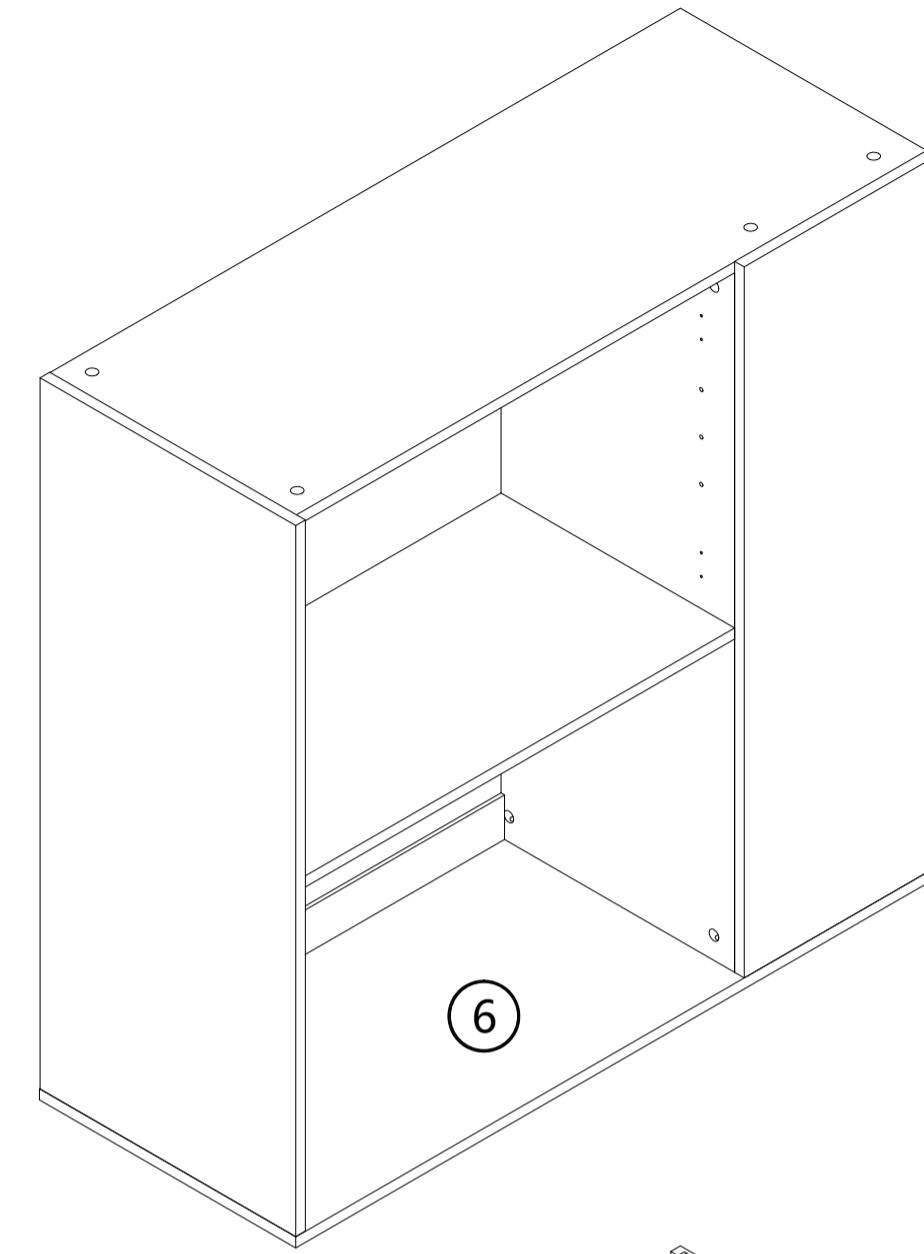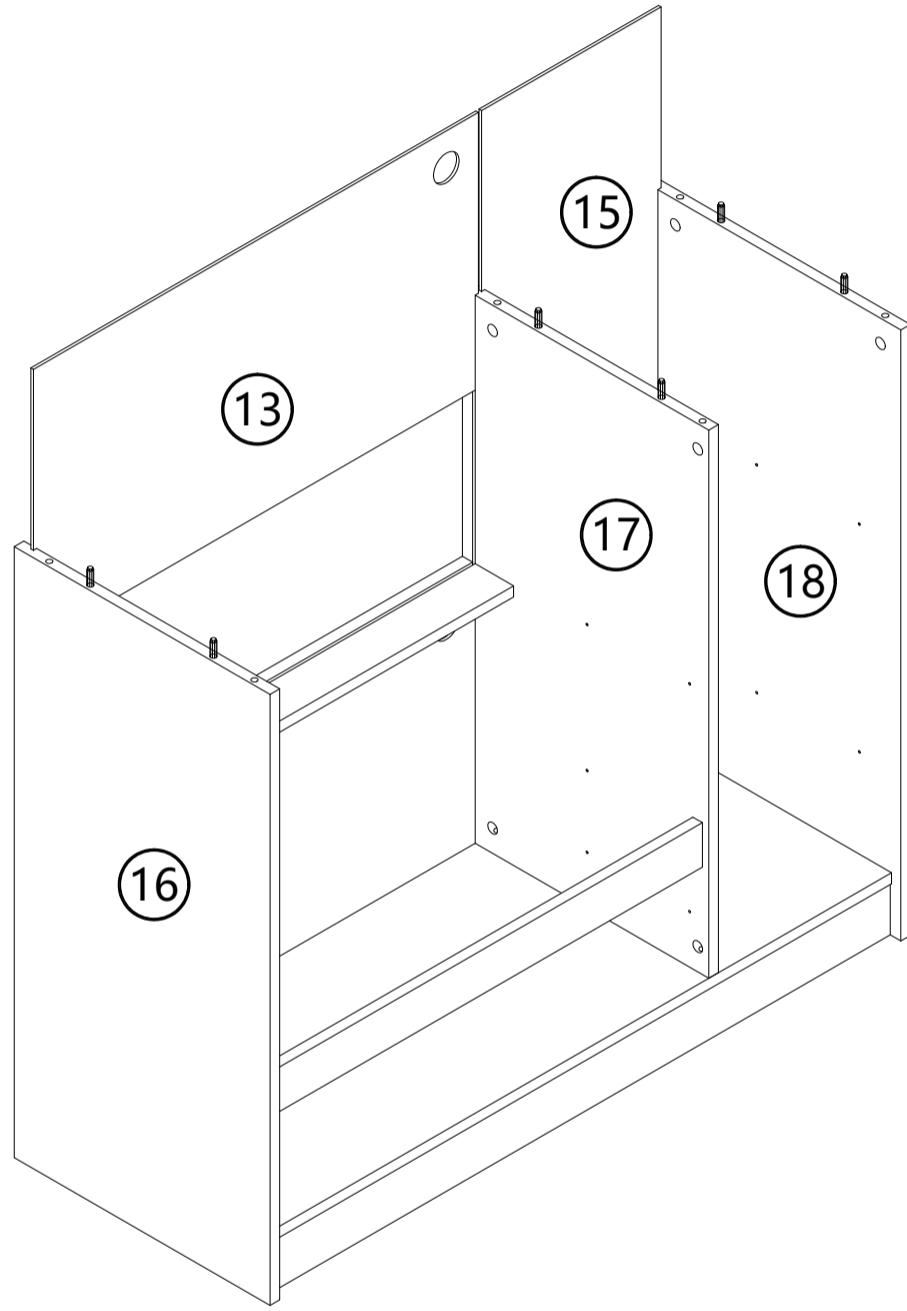

Make sure the arrow on the screw align to the hole on the side.

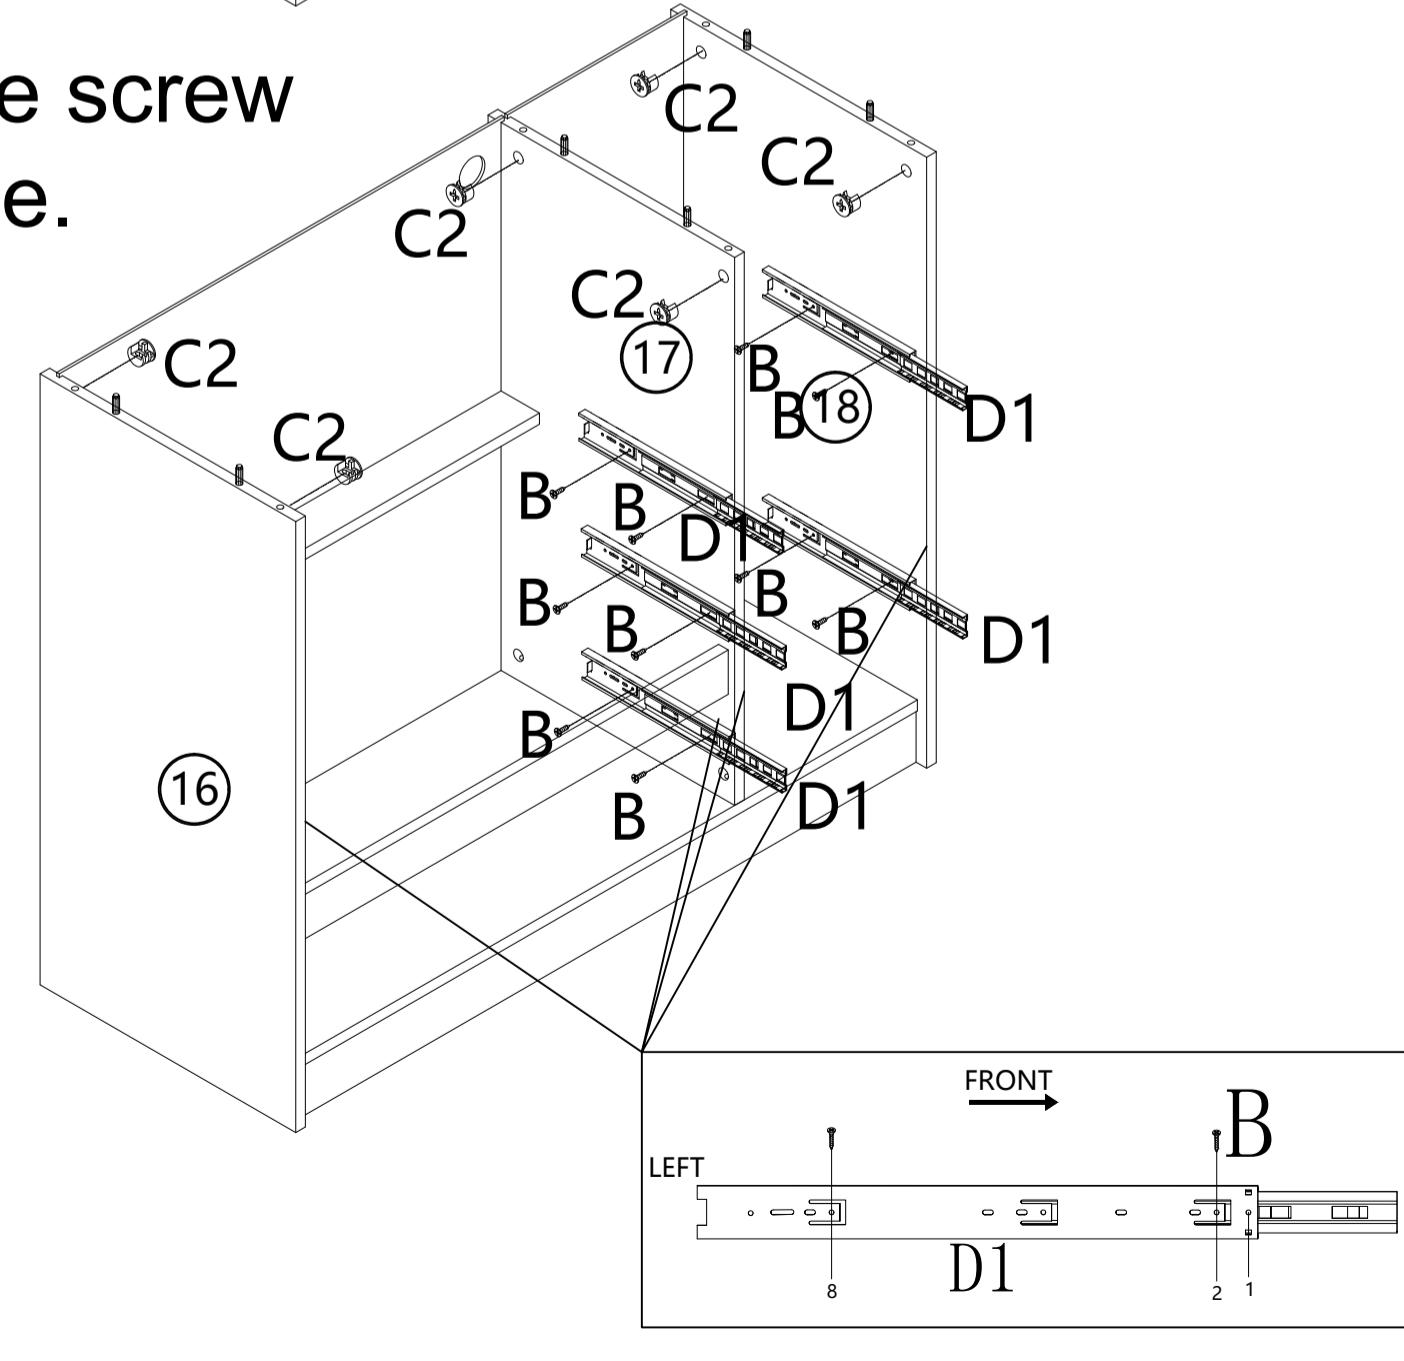




	C2*6
	B*20
	D1*10

put C2 on board ⑯ ⑰ ⑱

put B on board ⑯ ⑰ ⑱

put D1 on board ⑯ ⑰ ⑱

12

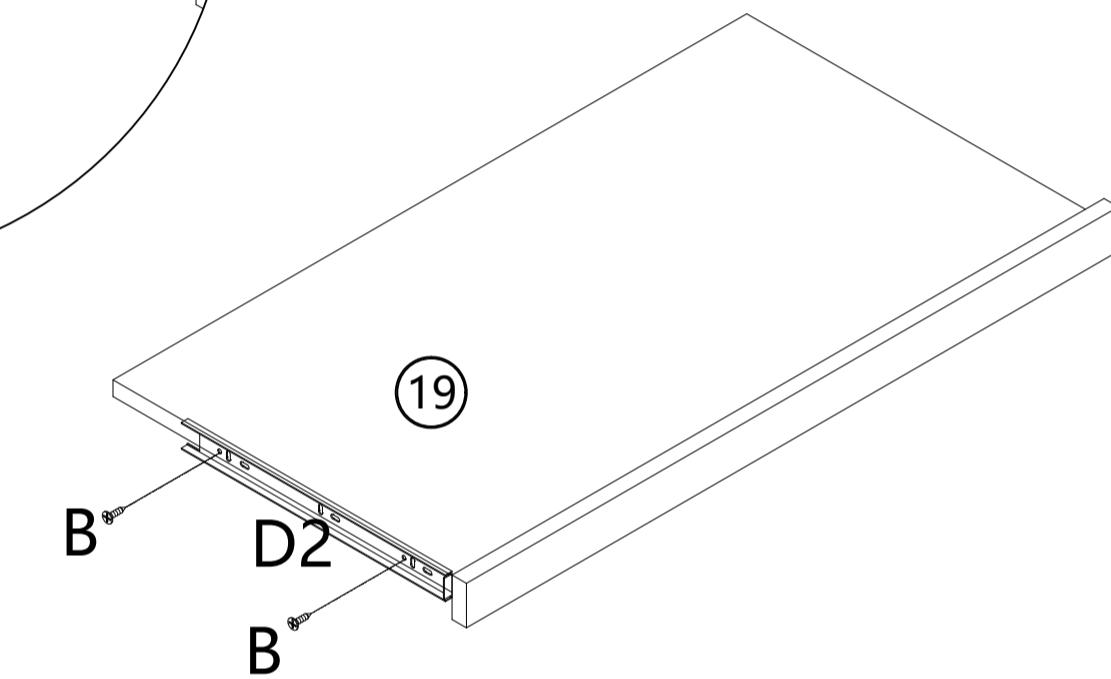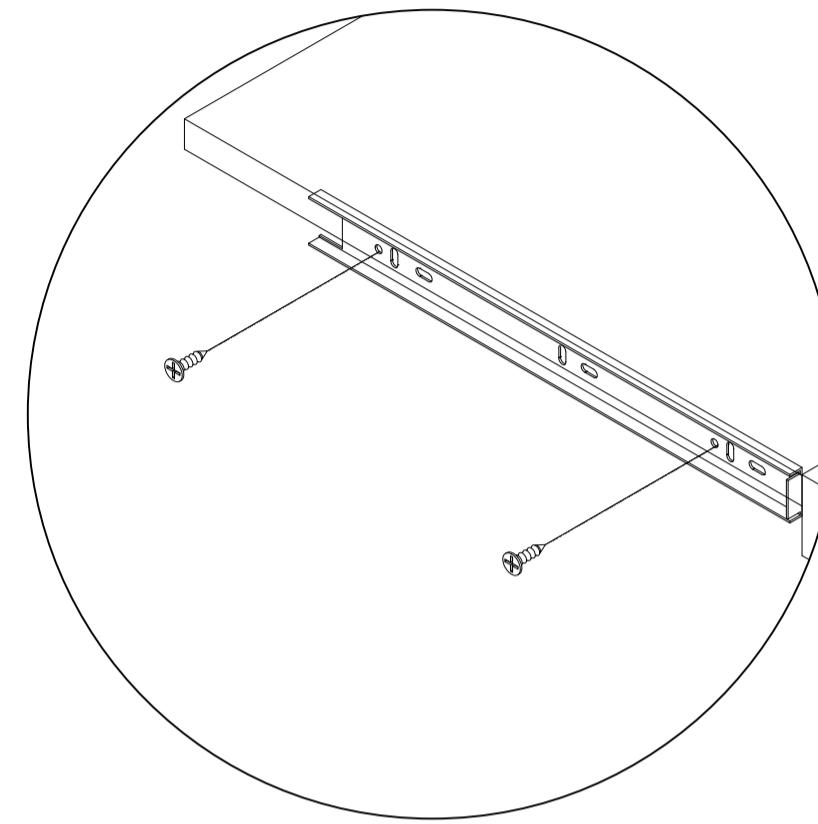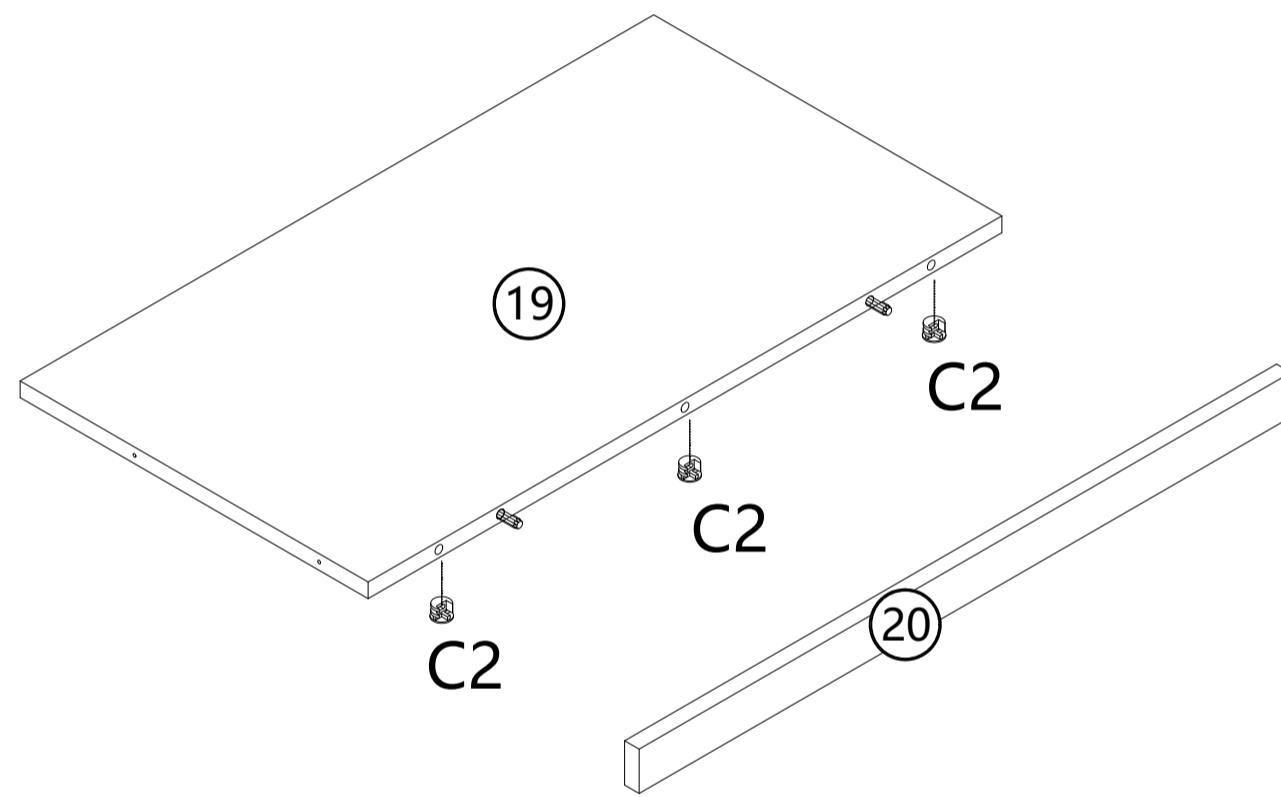


	B*4
	D2*2
	C2*3

put B on board ⑯


put D2 on board ⑯

put C2 on board ⑯

13

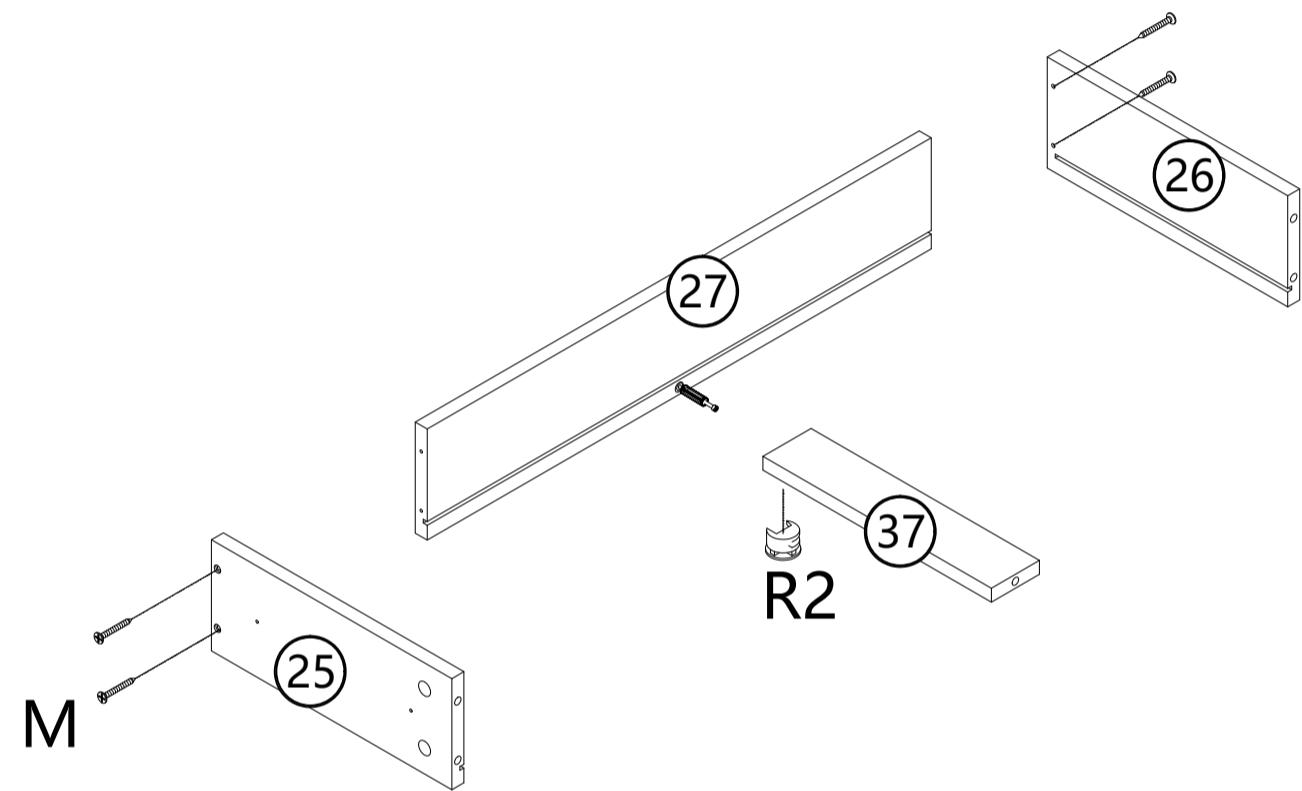

X2

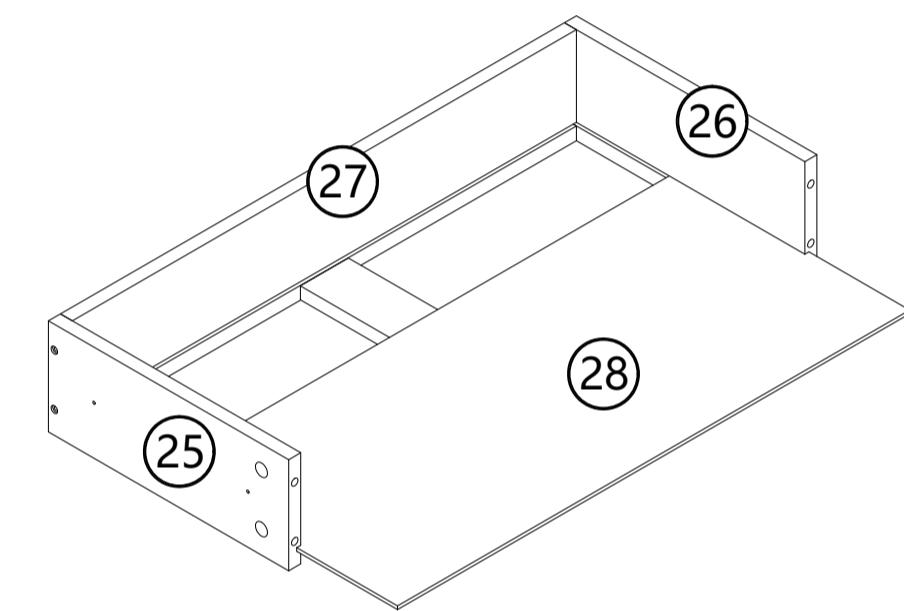

X2



M*8


put M on board ②5 ②6




R2*2

put R2 on board ③7

14

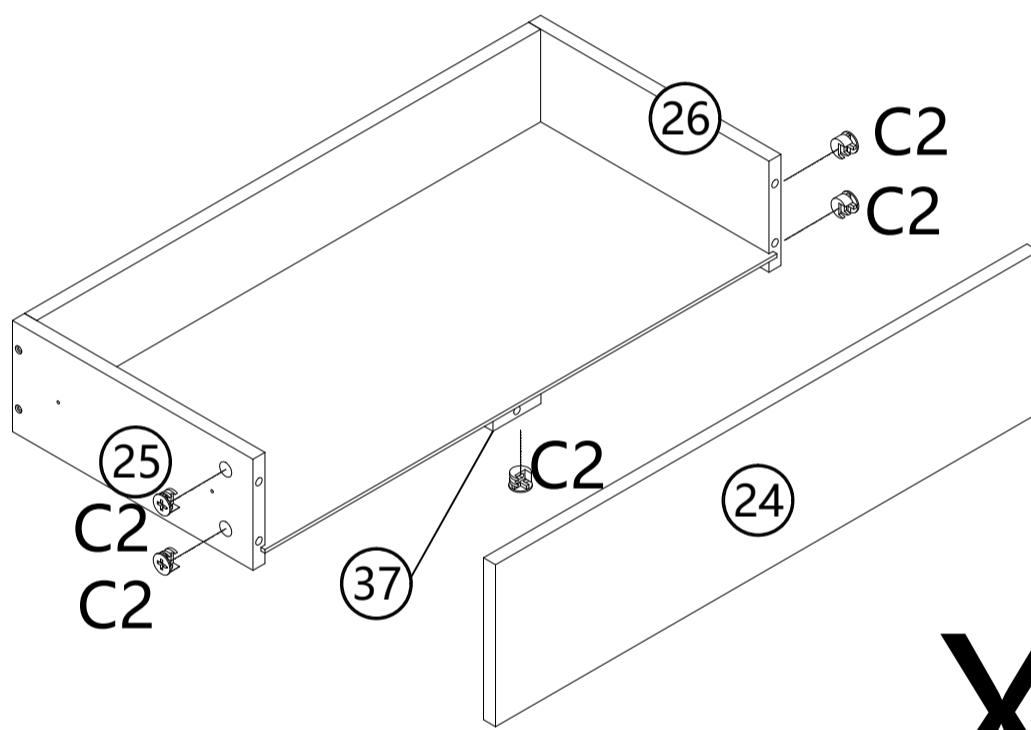

X2

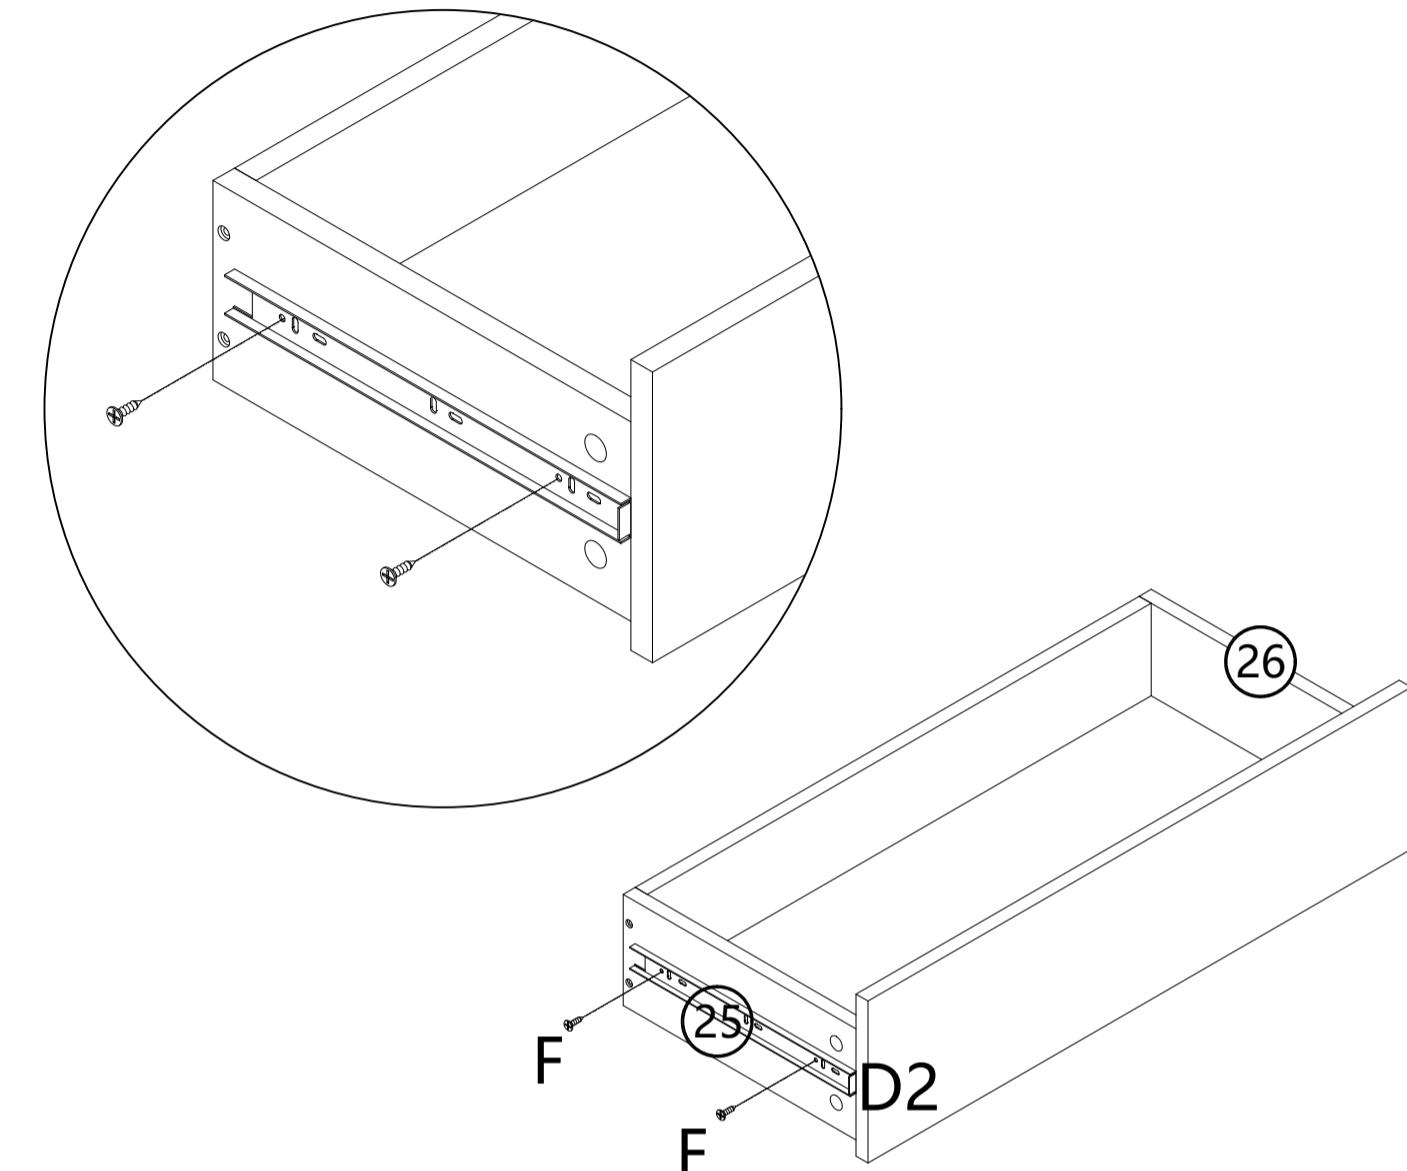

X2



	F*8
	D2*4
	C2*10

put F on board ②5 ②6

put D2 on board ②5 ②6

put C2 on board ②5 ②6 ③7

15

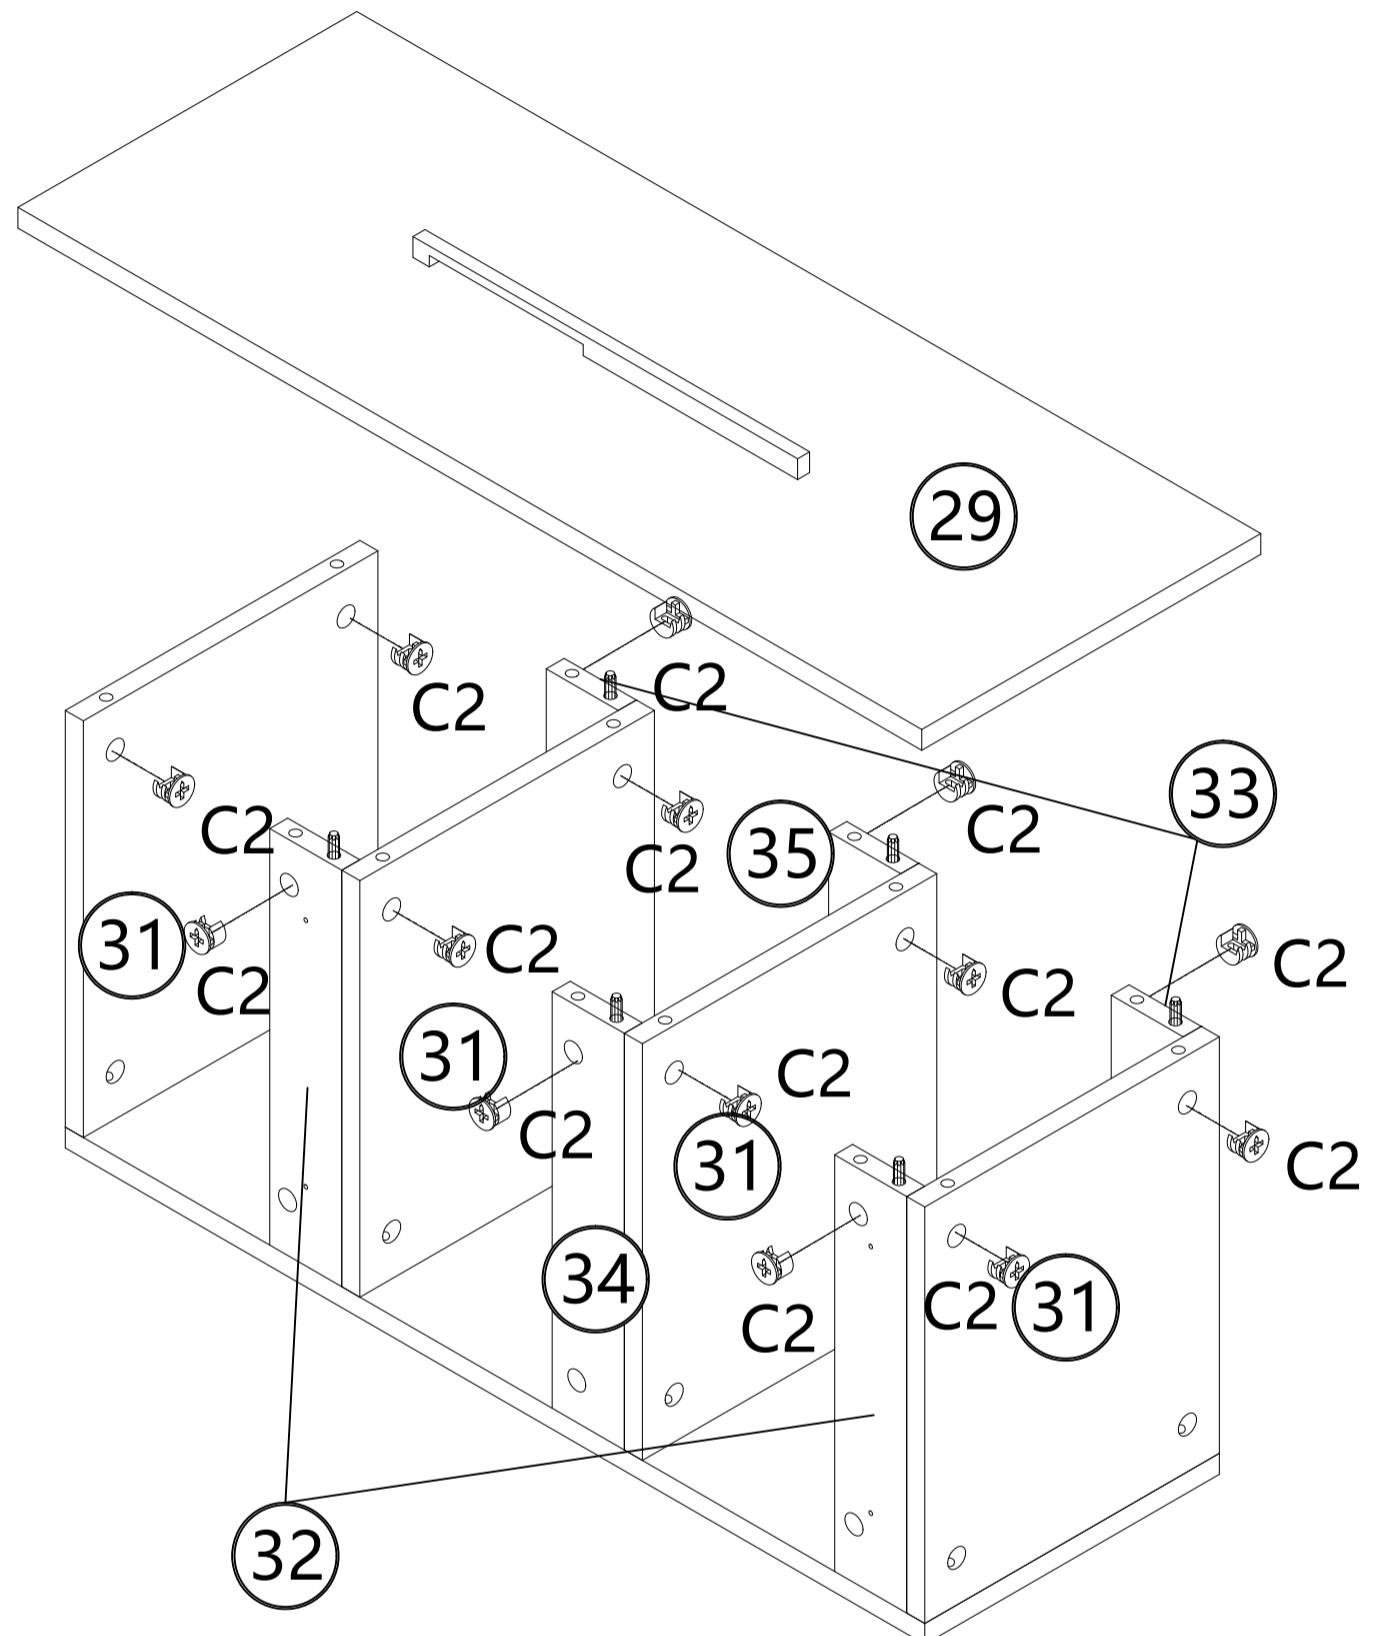
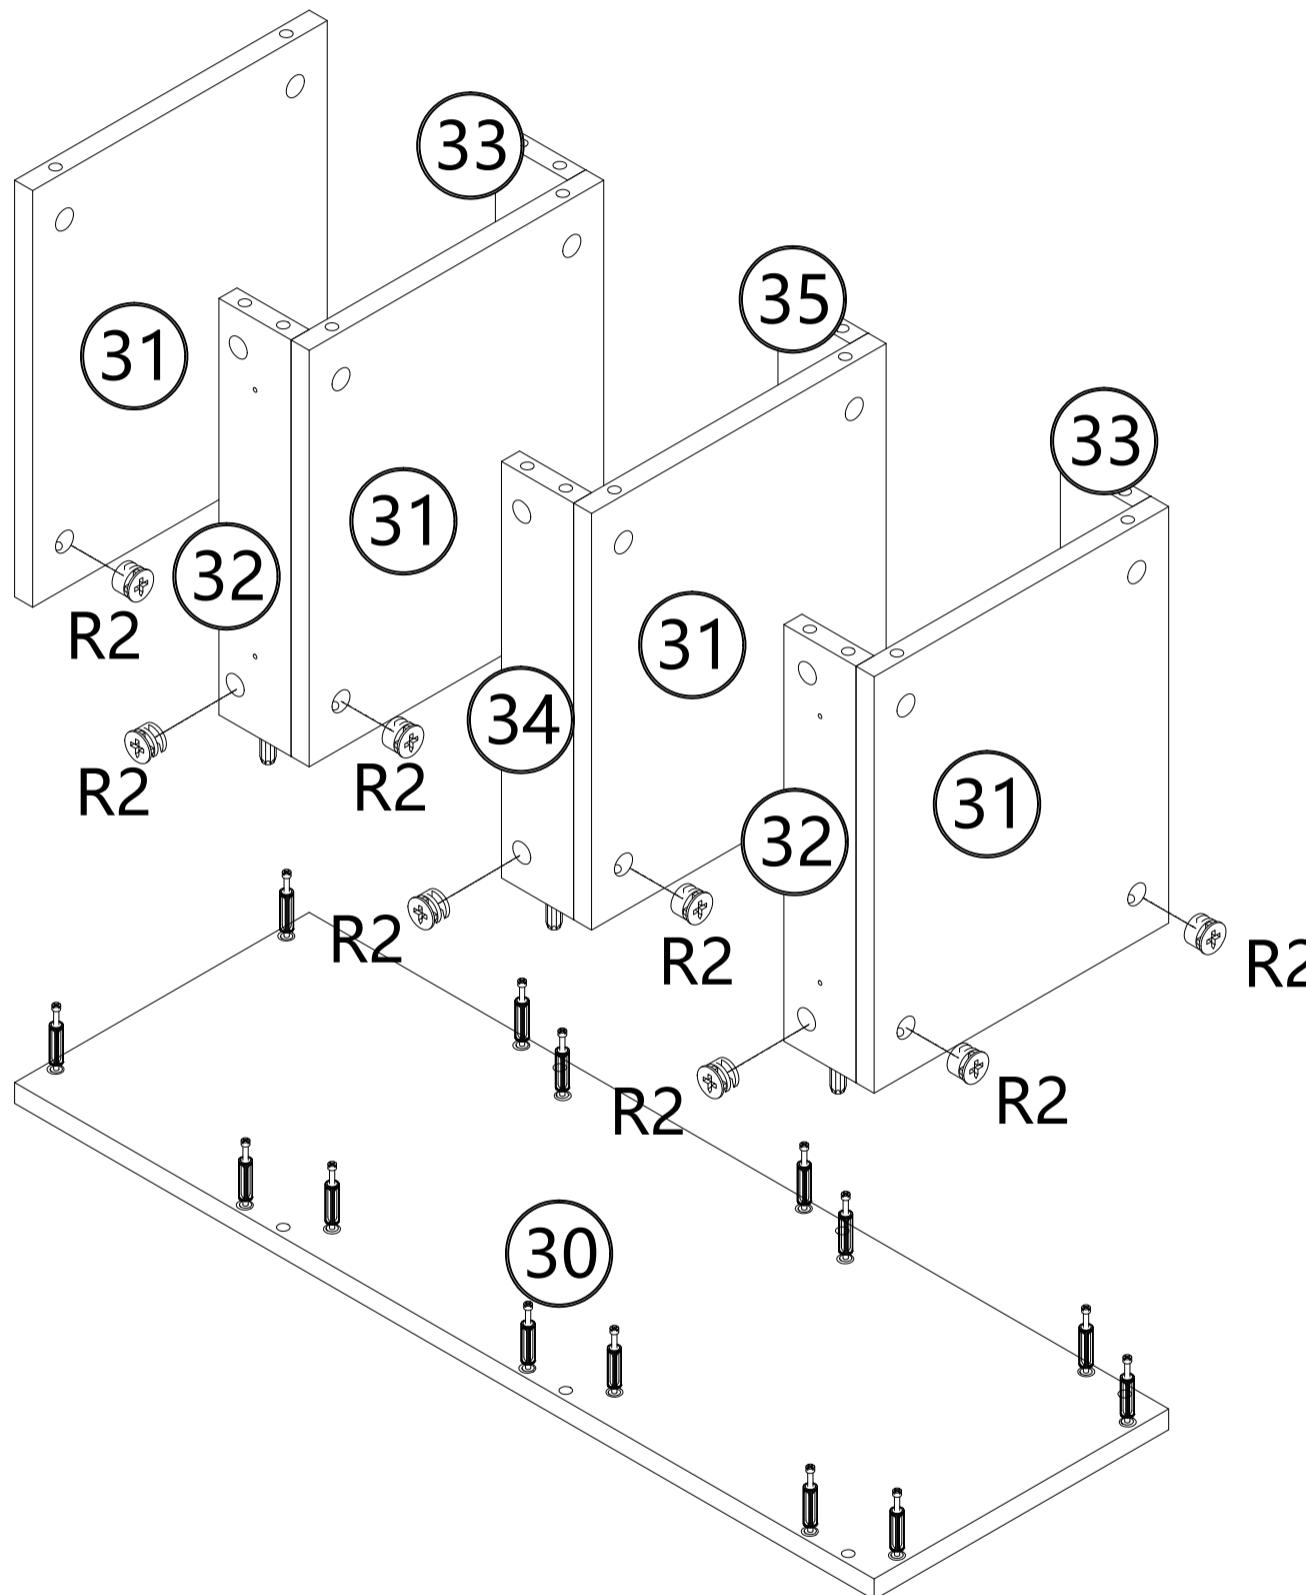


	R2*14
	C2*14

put R2 on board ③1 ③2 ③3 ③4 ③5

put C2 on board ③1 ③2 ③3 ③4 ③5




16

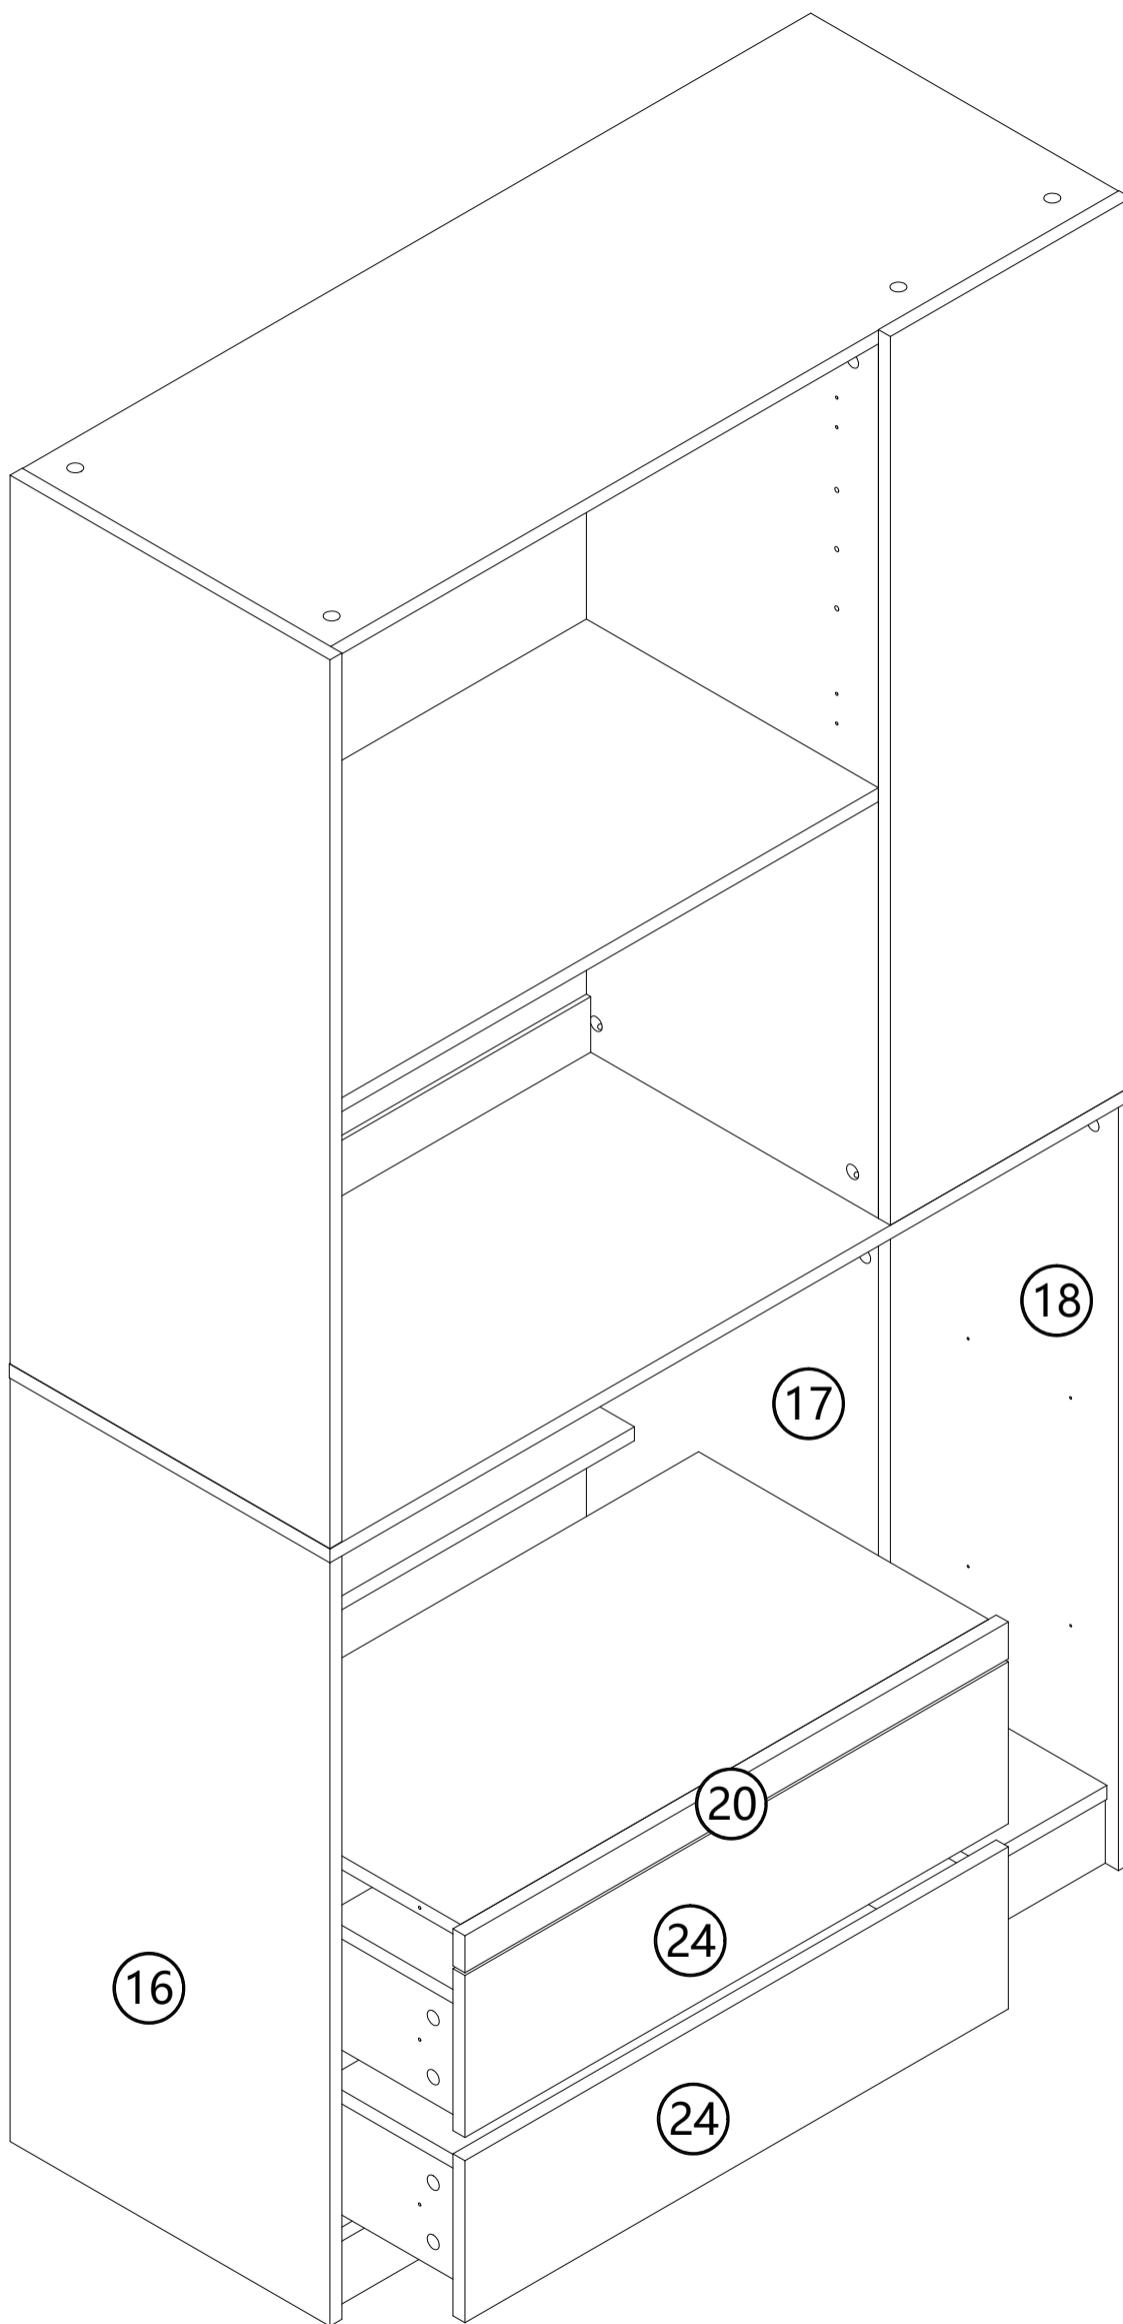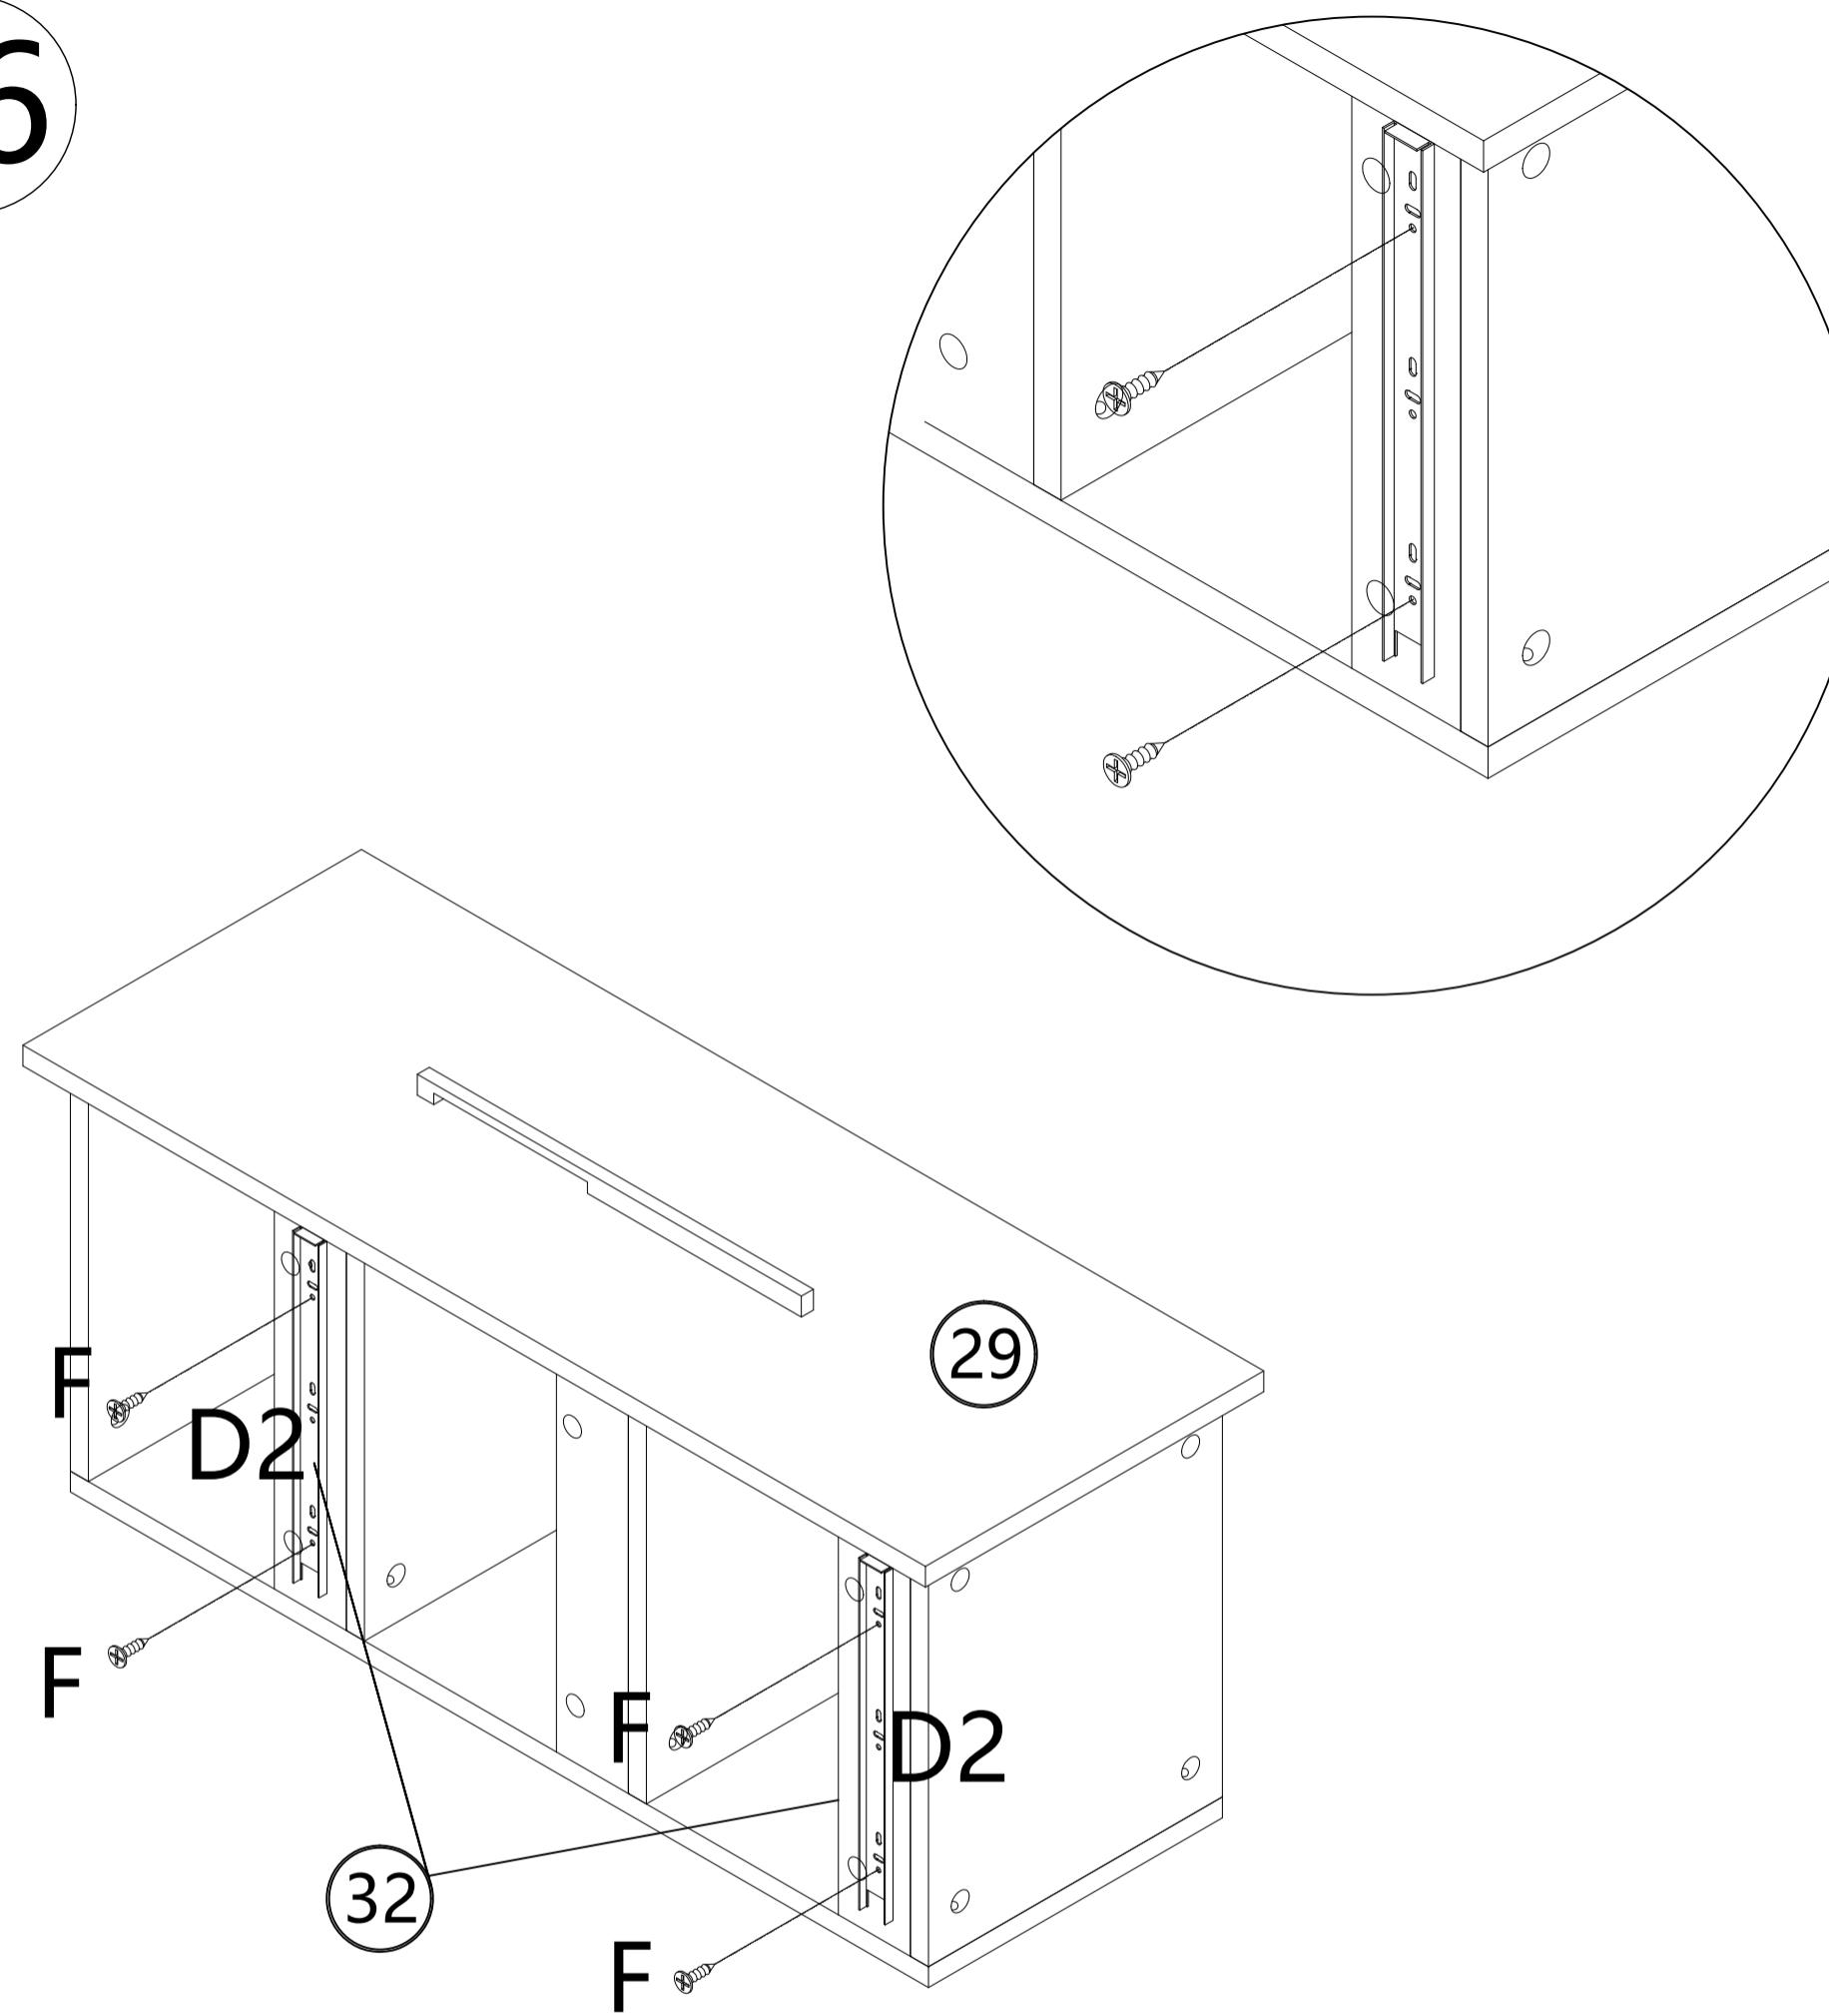

	F*8
	D2*4

put F on board ③② ③③
put D2 on board ③② ③③

17


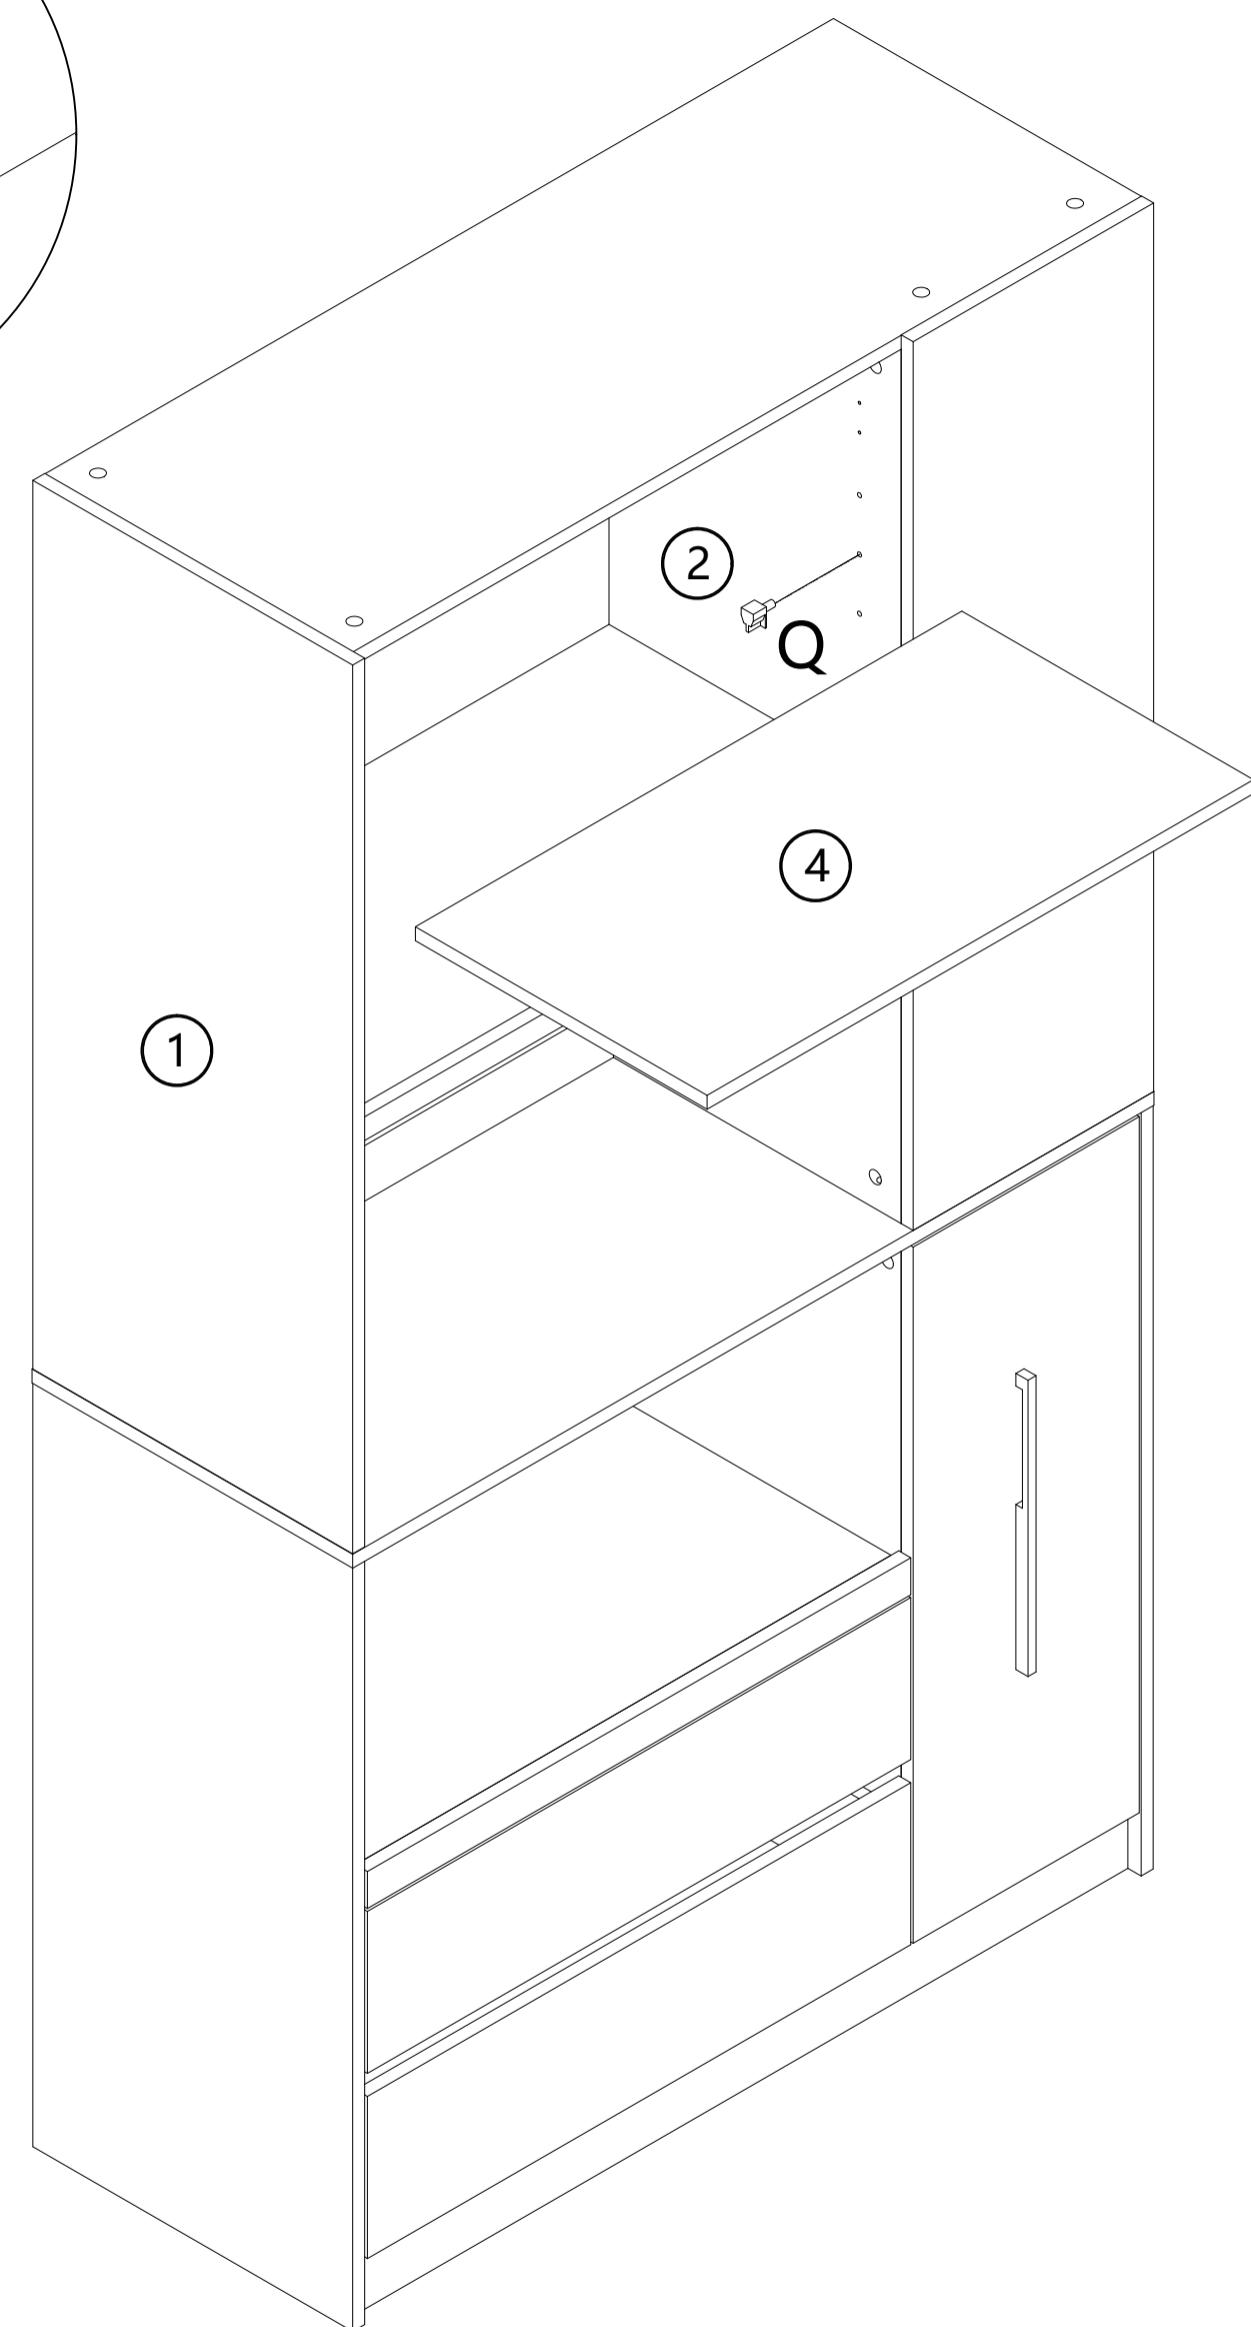
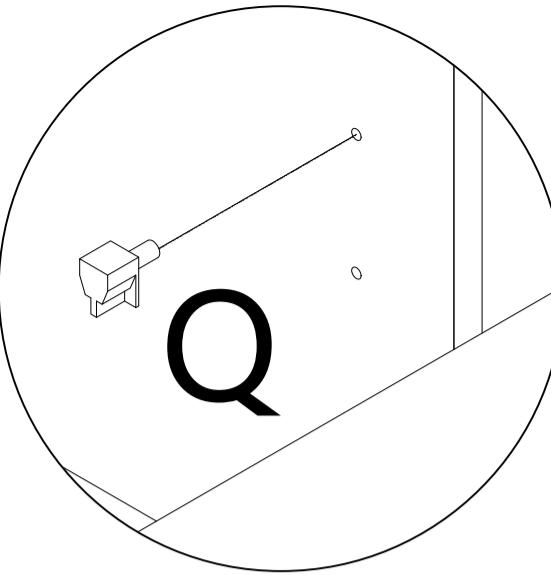
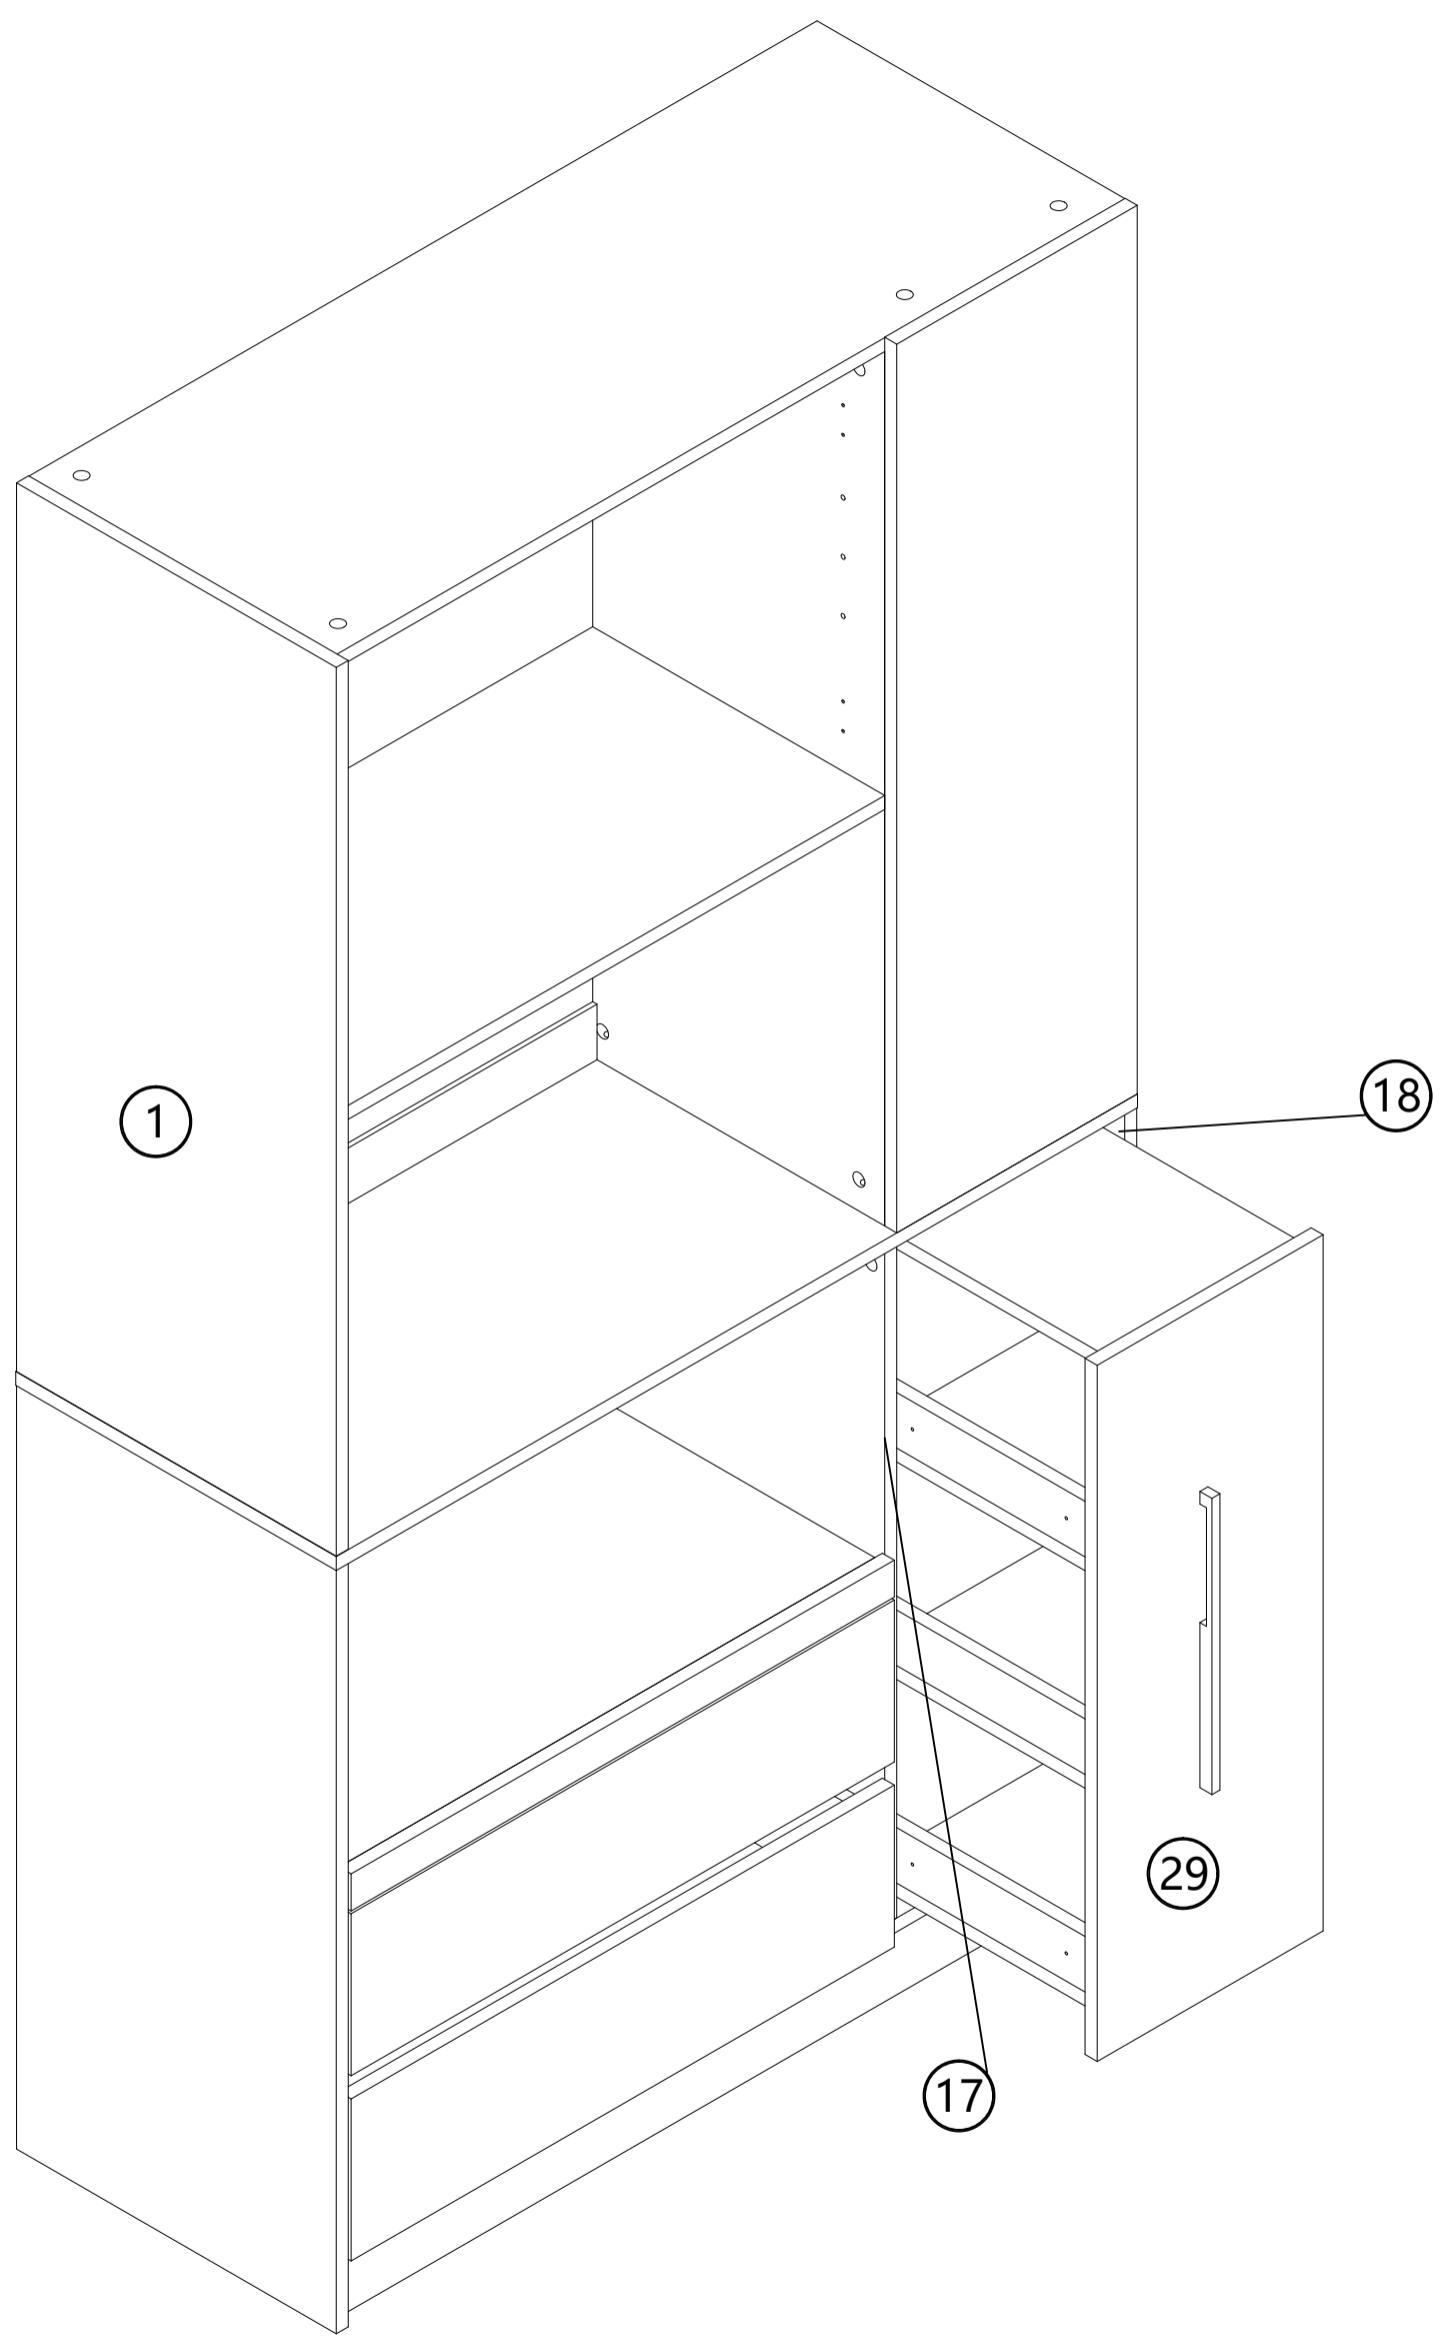


Q*4

put Q on board

① ②

18

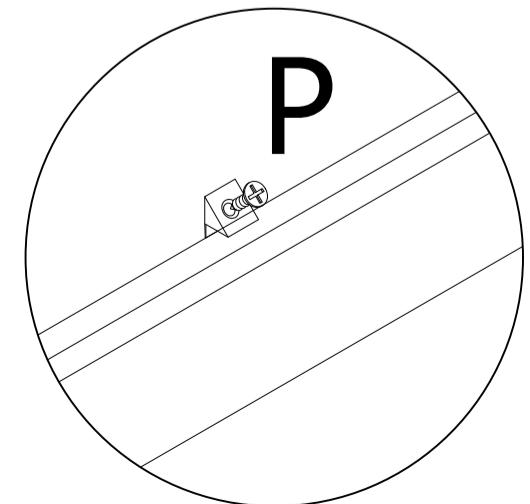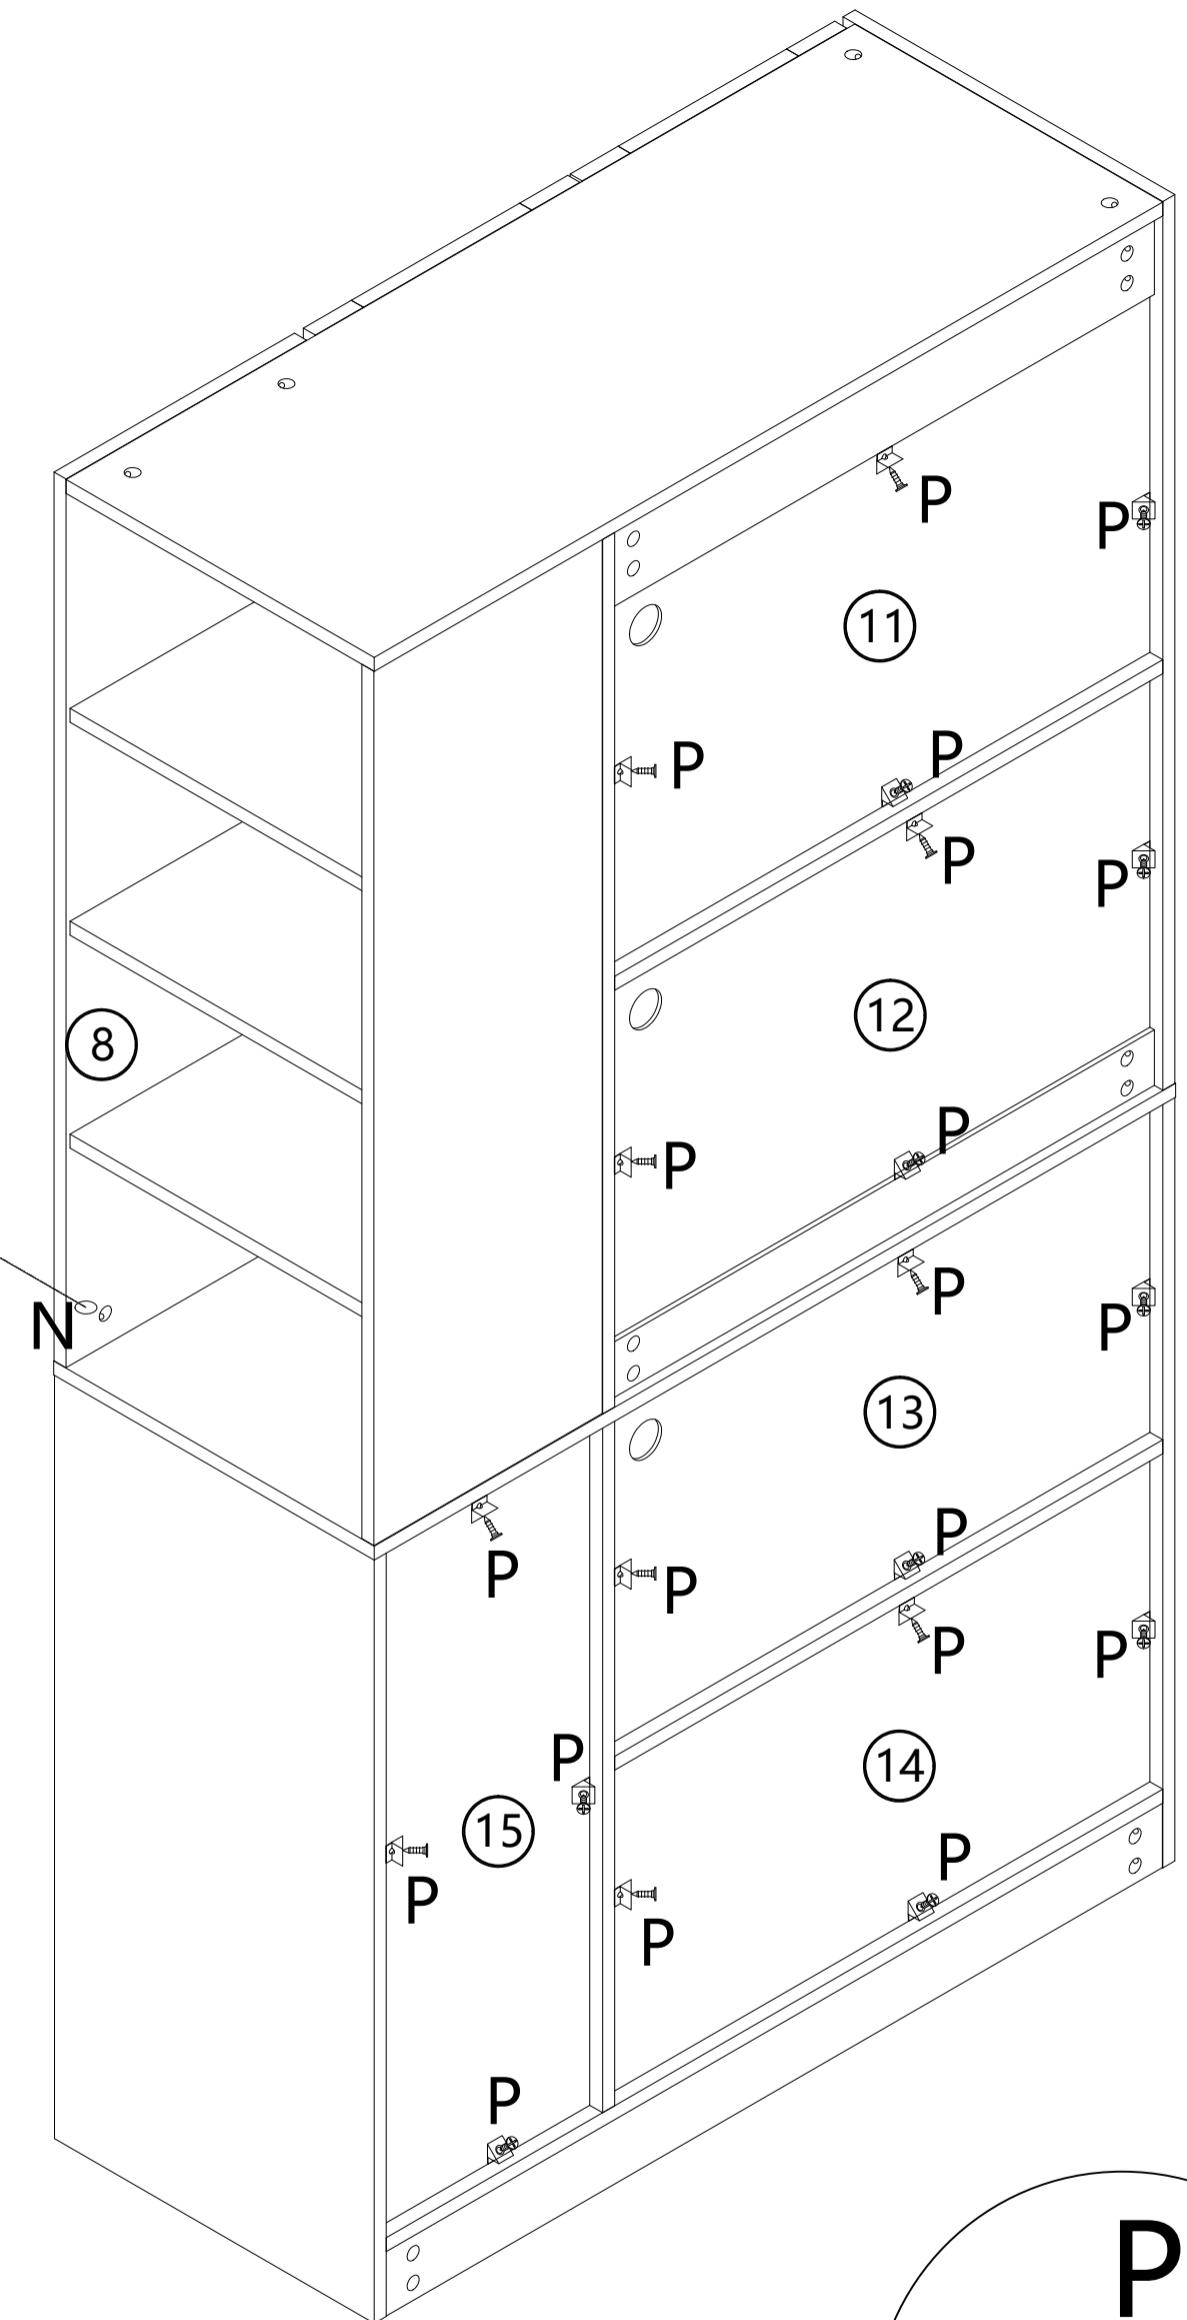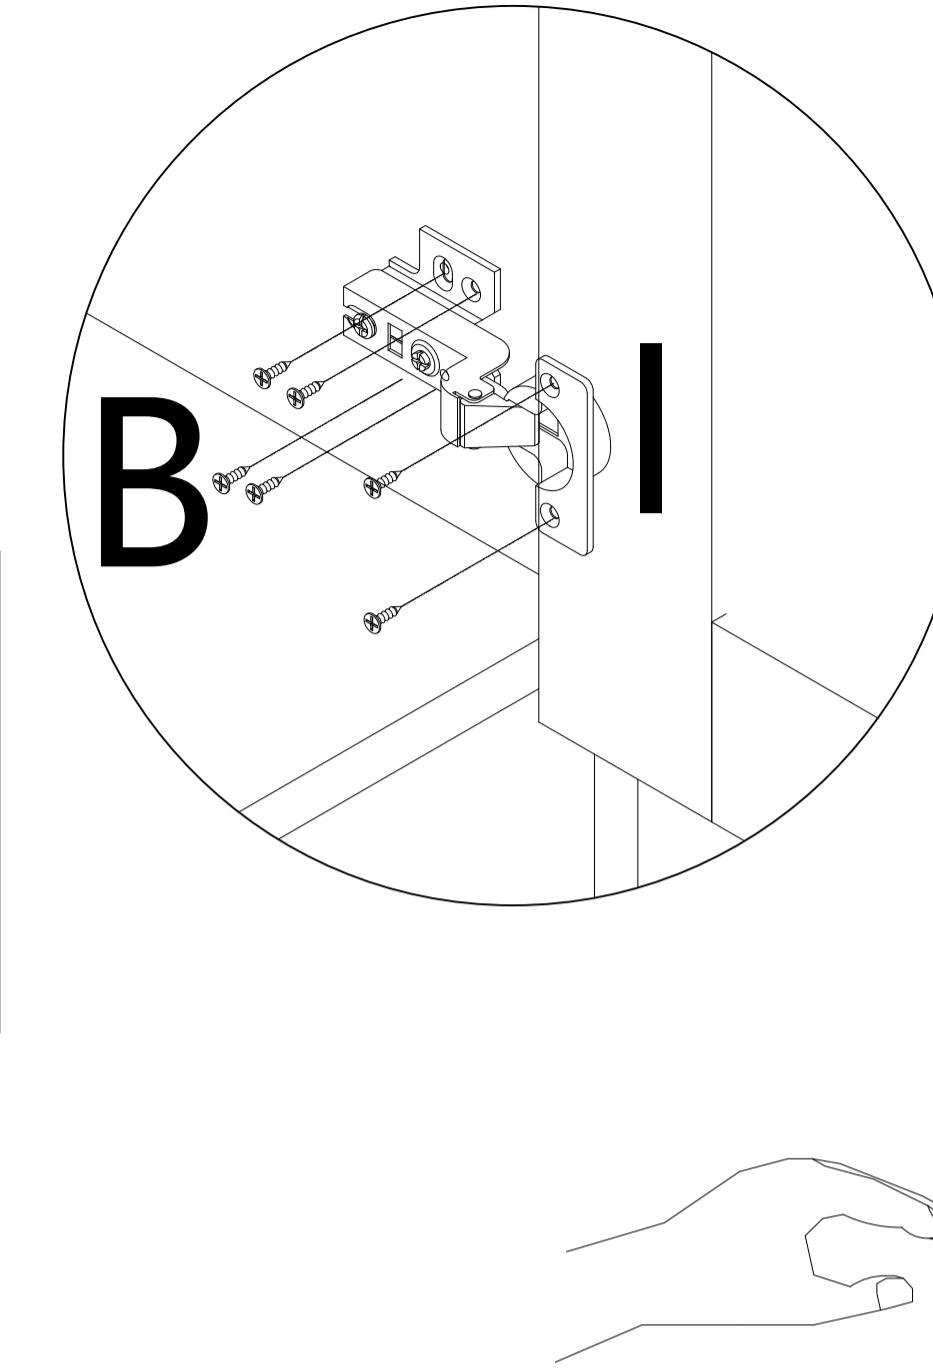
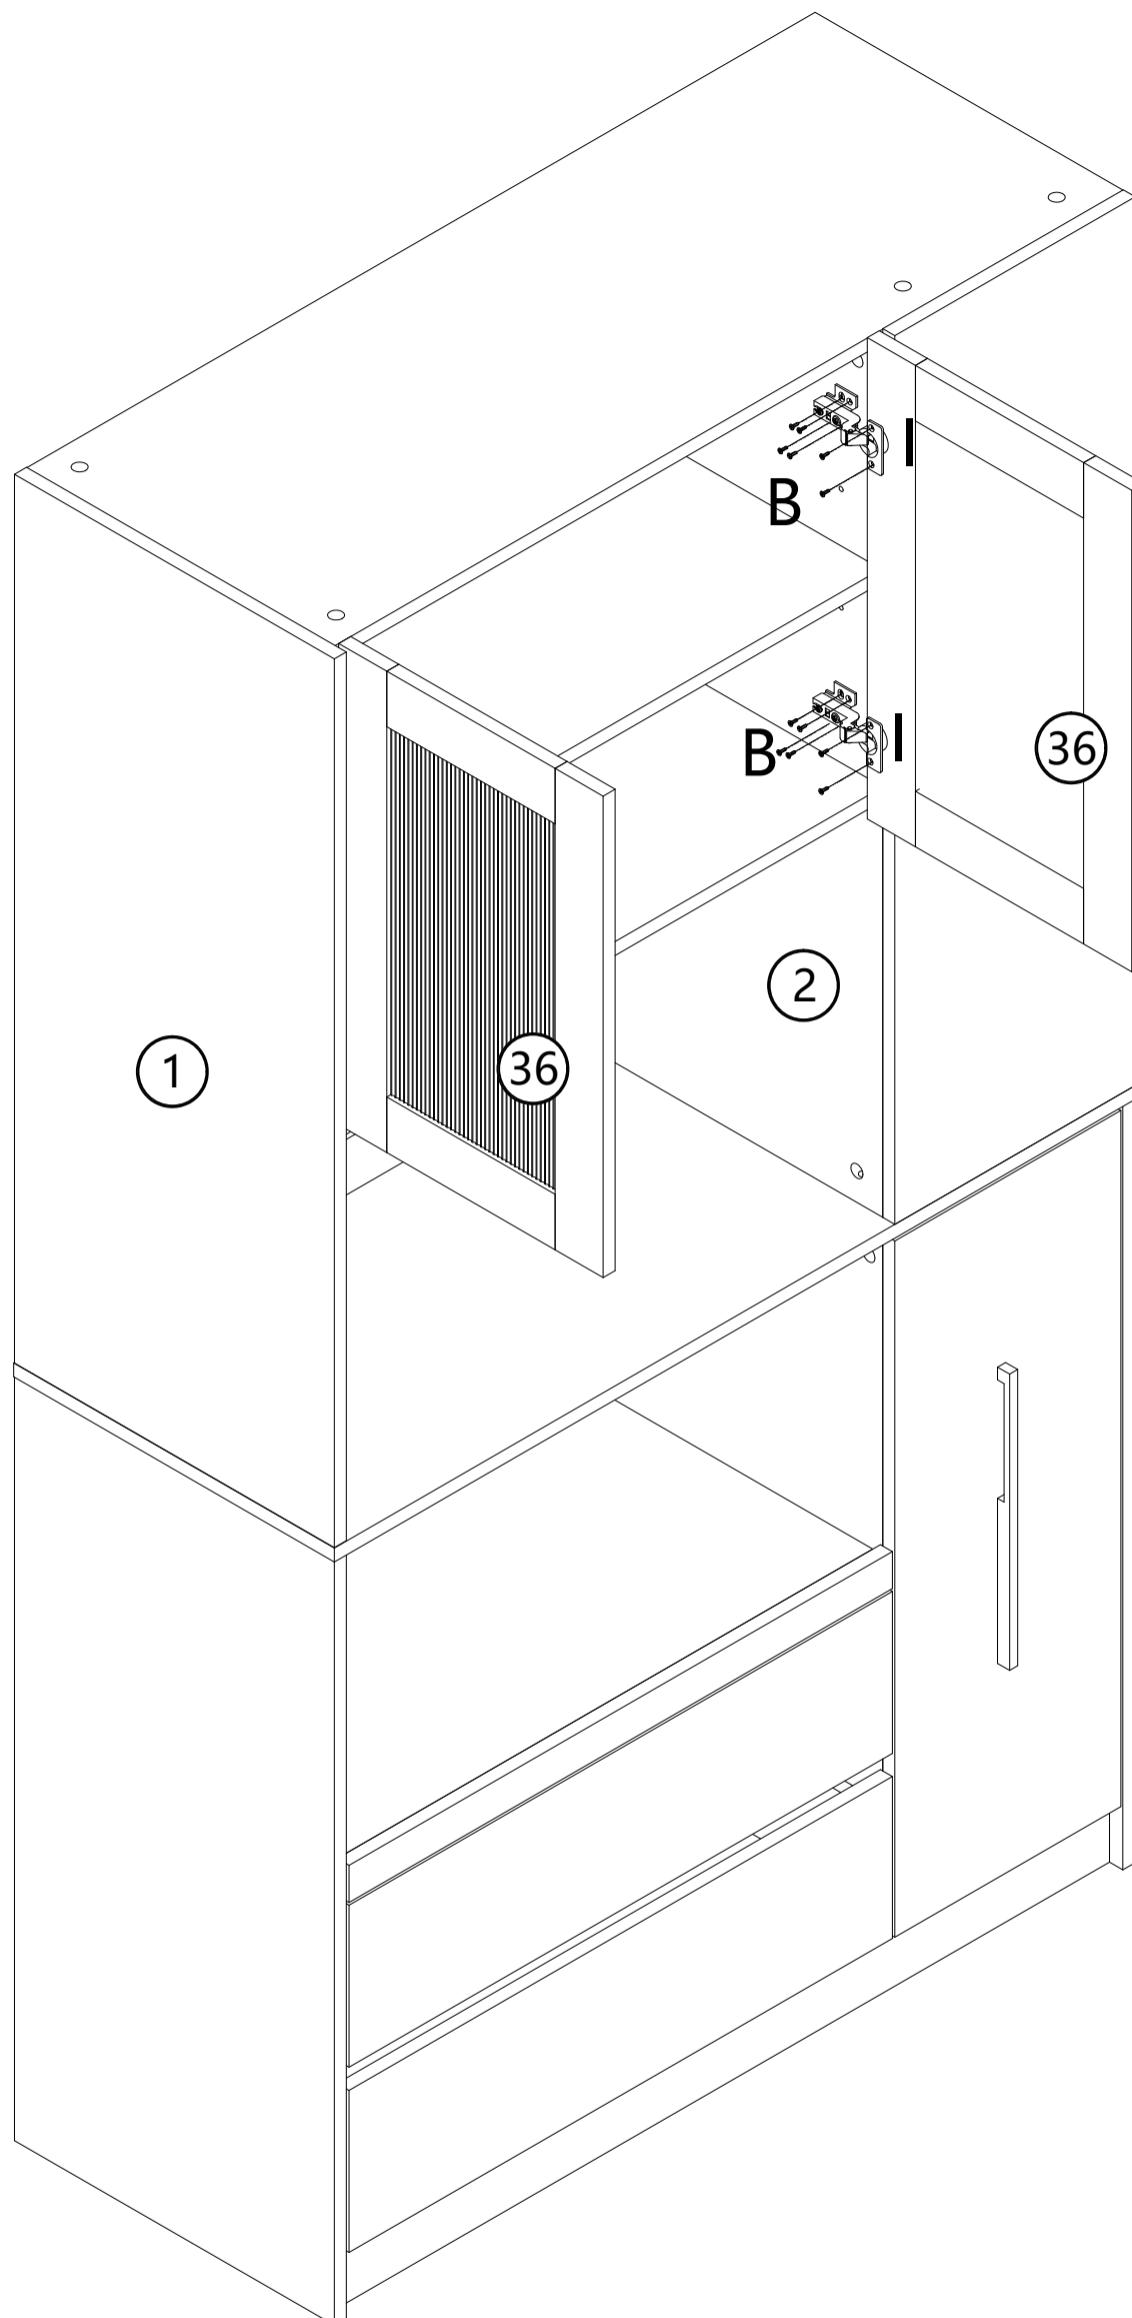


I	I*4
B	B*24

put I on board ① ② ③6
put B on board ① ② ③6

N	N*119
P	P*20

19

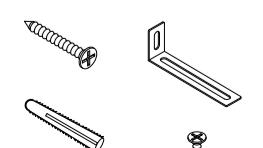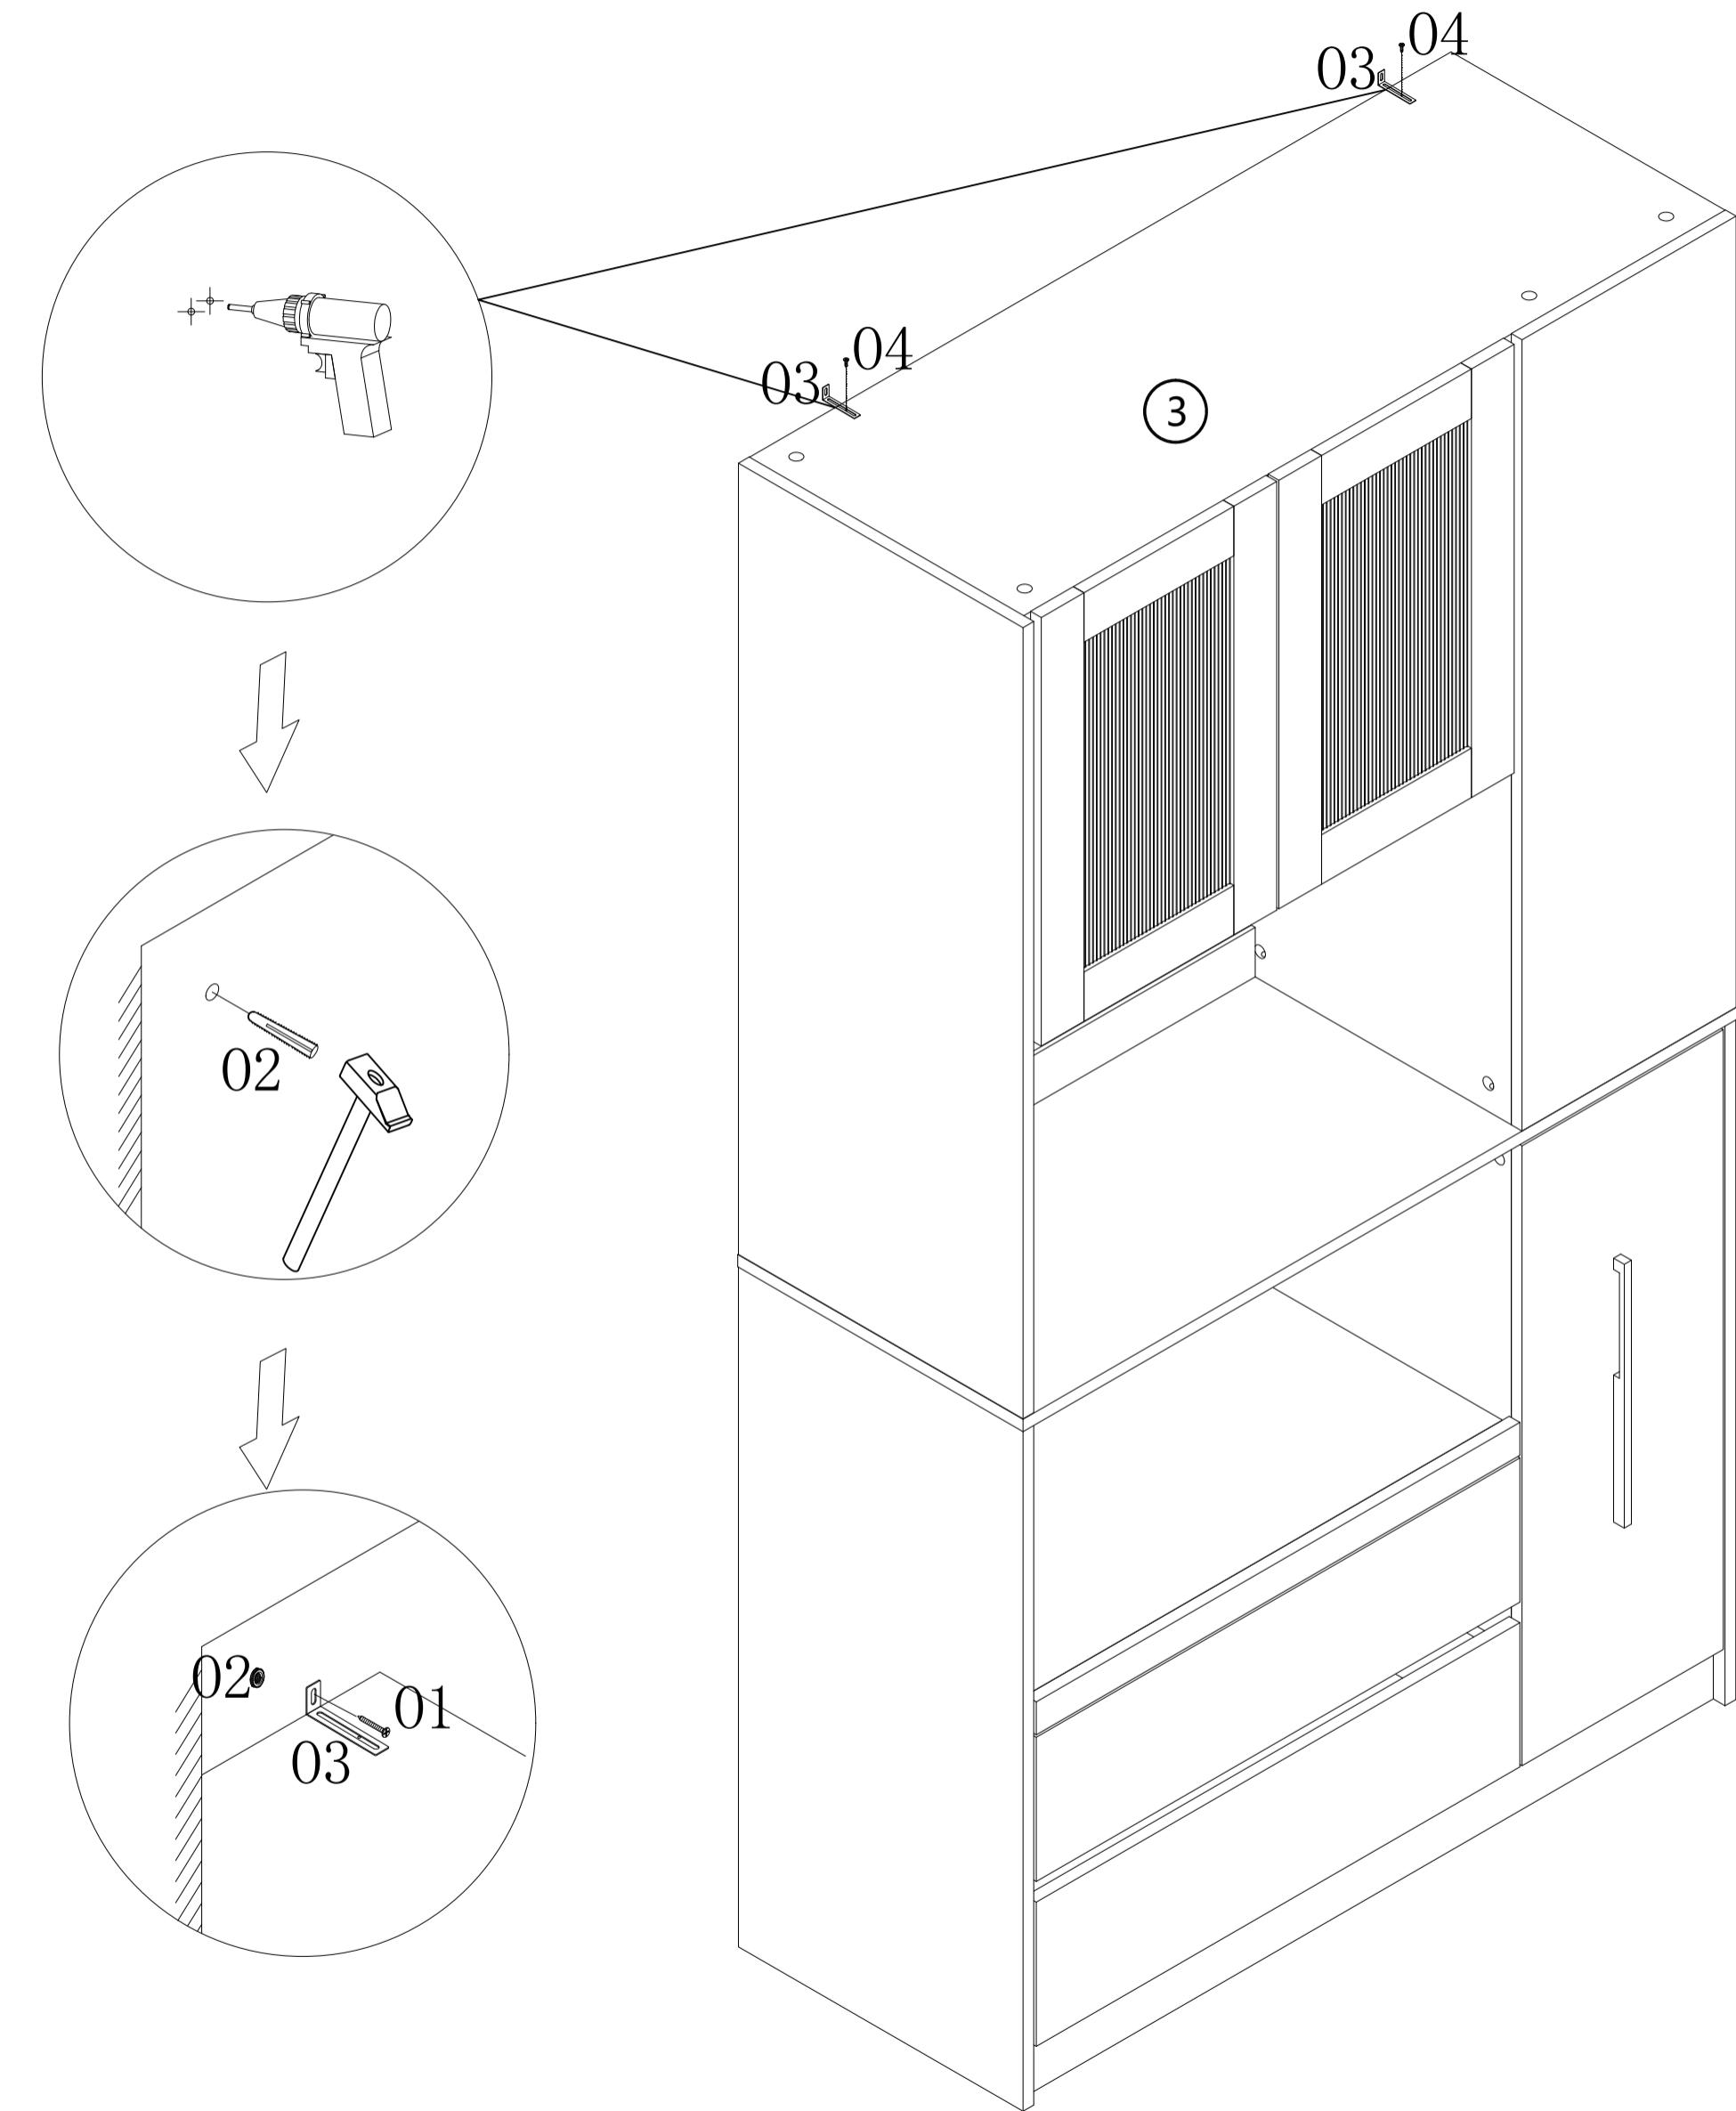

O*2