


ASSEMBLY INSTRUCTIONS


3600005

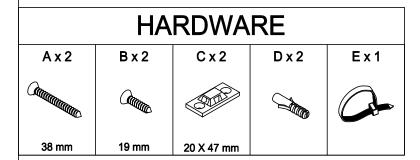

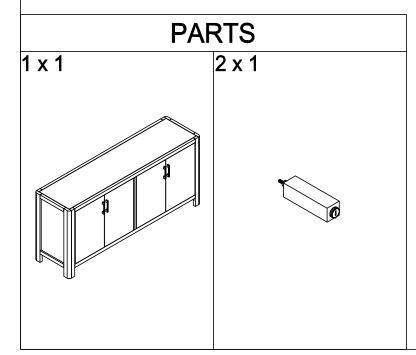


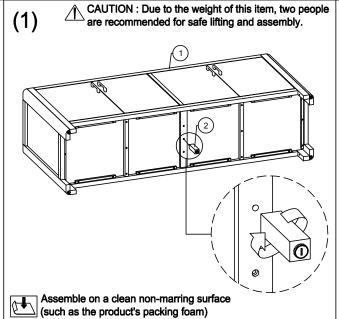

- Place the Body (1) on the floor. Attach the middle legs (2) to the bottom of the Body (1). Turn them outwards, counterclockwise to tighten.

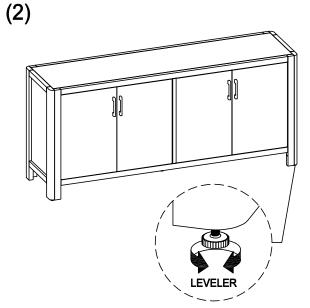

- Stand the Buffet upright, then adjust the levelers located at the bottom of each Leg. Turn them outward, counterclockwise, to help compensate for uneven surfaces.

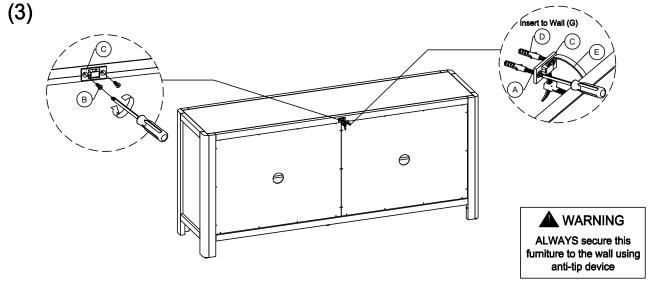

- Final step: Install the Anti-Tip Bracket (C) to the Top Panel using the Short Screws (B) in the pre-drilled holes provided. Use a screwdriver for installation.
- Make sure to complete this step. Attach the Anti-Tip Bracket (C) to the wall (where the wall plug (D) has been installed) using the Long Screws (A) and tighten them with a screwdriver.
- Secure the Anti-tip Bracket (C) with the Anti-tip Strap (E).