

ASSEMBLY INSTRUCTIONS

1270022

HARDWARE

Ax12



M6 x 35 mm

Bx12



Ø17 x 1.5 mm


Cx1




4 mm

PARTS


1x1

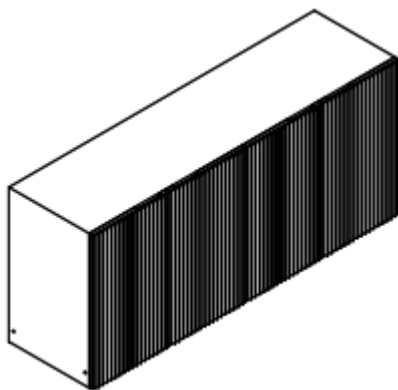


2x4

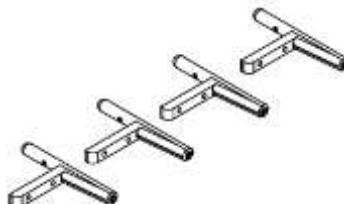

3x1

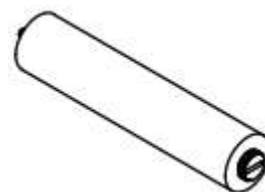


(1)

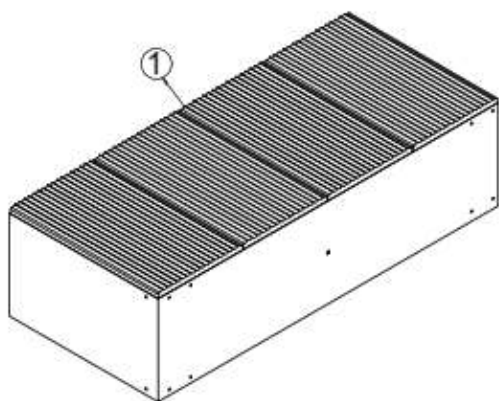


- Place Cabinet (1) in the position as shown in the picture.

(2)

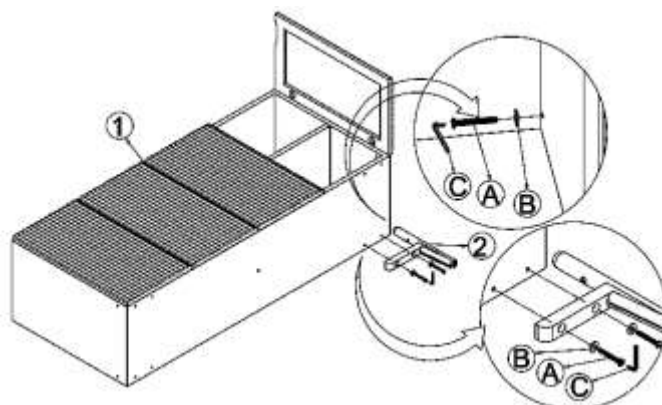


- Open the side door of the cabinet (1) then align the legs (2) with the side holes of the cabinet (1), as shown in the picture.
- Insert bolts (A) and flat washers (B) from inside the cabinet (1) for the side holes and from outside for the bottom of the cabinet (1) then tighten with the allen key (C).

(3)

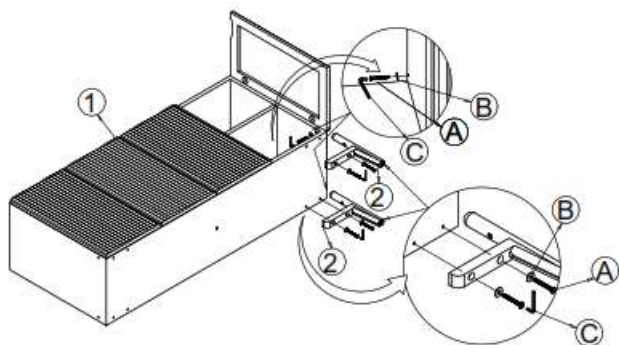


- For the installation of the front legs, please do the same thing as in step 2).

(4)

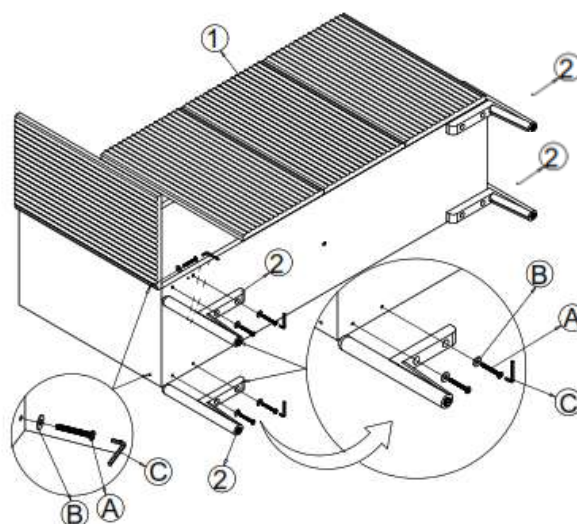


- Do the same thing in step 2 and step 3 for the right side of the cabinet (1). as shown in the picture above.

(5)

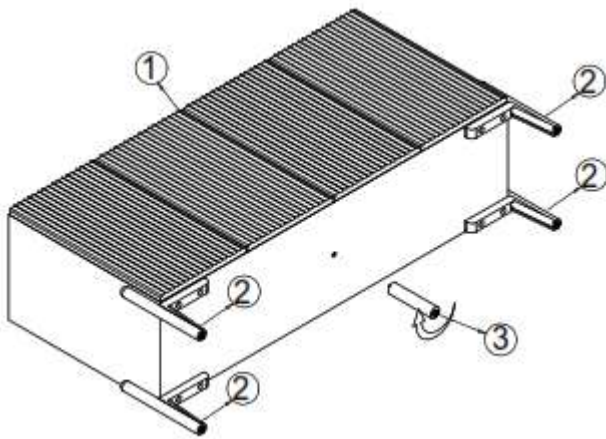


- Take the middle leg (3), insert it into the bottom middle hole of the cabinet (1) as shown in the picture above, then turn it clockwise until tight.

(6)

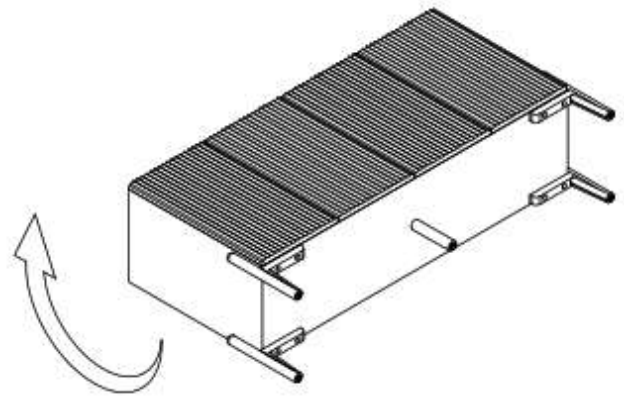

- Make sure all components are securely attached, then turn the product over so that it is in an upright position.

(7)

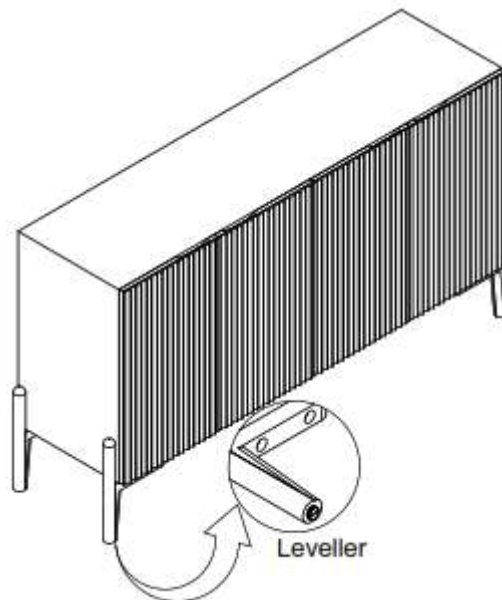

A Leveler is provided at the bottom of the leg to balance on uneven surface

- Completed