
ASSEMBLY INSTRUCTIONS


3600006

HARDWARE

| | A x 24 | B x 24 | C x 24 | D x 2 | Ex2 |
|--|------------|--------------|--------------|-----------|-------|
| | | @ | 0 | Committee | anno |
| | M6 X 40 mm | Ø11 X 1.5 mm | Ø12.5 X 1 mm | 38 mm | 19 mm |
| | Fx2 | G x 2 | H x 1 | lx1 | |
| | 20 X 47 mm | | a | | |


PARTS

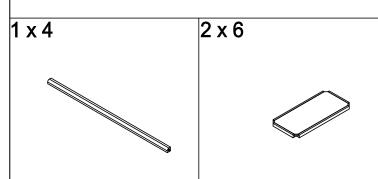

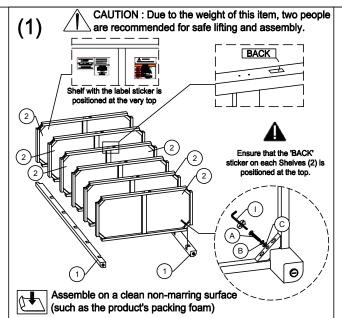


- Place the Leg (1) onto the floor. Attach each Shelf (2) to the Legs one by one using Bolts (A), Lock Washer (B), and Flat Washer (C). Attach to Both Legs using an Allen key (I). Ensure the Shelf (2) with the label sticker is positioned at the very top.

- Repeat this step for the remaining 6 Shelves (2).

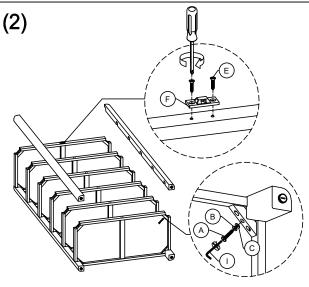


Position the Legs (1) on each shelf (2), then attach the Bolts (A),
 Lock Washer(B), and Flat Washer (C) using an Allen key (I). Perform this step for both Legs (1) and for each Shelf (2) one at a time.
 Install the Anti-tip Bracket (F) on the Top Shelf using the Short

 Install the Anti-tip Bracket (F) on the Top Shelf using the Short Screws (E) in the pre-drilled holes provided.

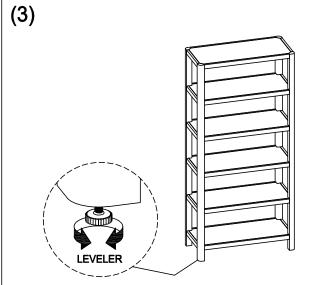

- Stand the Bookcase upright, then adjust the levelers located at the bottom of each Leg (2). Turn them outward, counterclockwise, to help compensate for uneven surfaces.

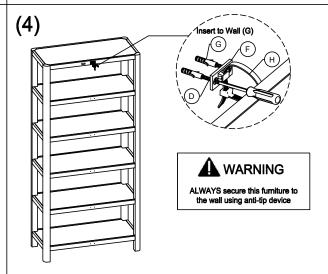

-Final step: Make sure to complete this step. Attach the Anti-Tip Bracket (F) to the wall (where the wall plug (G) has been installed) using the Long Screws (D) and tighten them with a screwdriver.

- Secure the Anti-tip Bracket (F) with the Anti-tip Strap (G).