


ASSEMBLY INSTRUCTIONS





















SKU CODE: N725P333573














ASSEMBLY INSTRUCTIONS

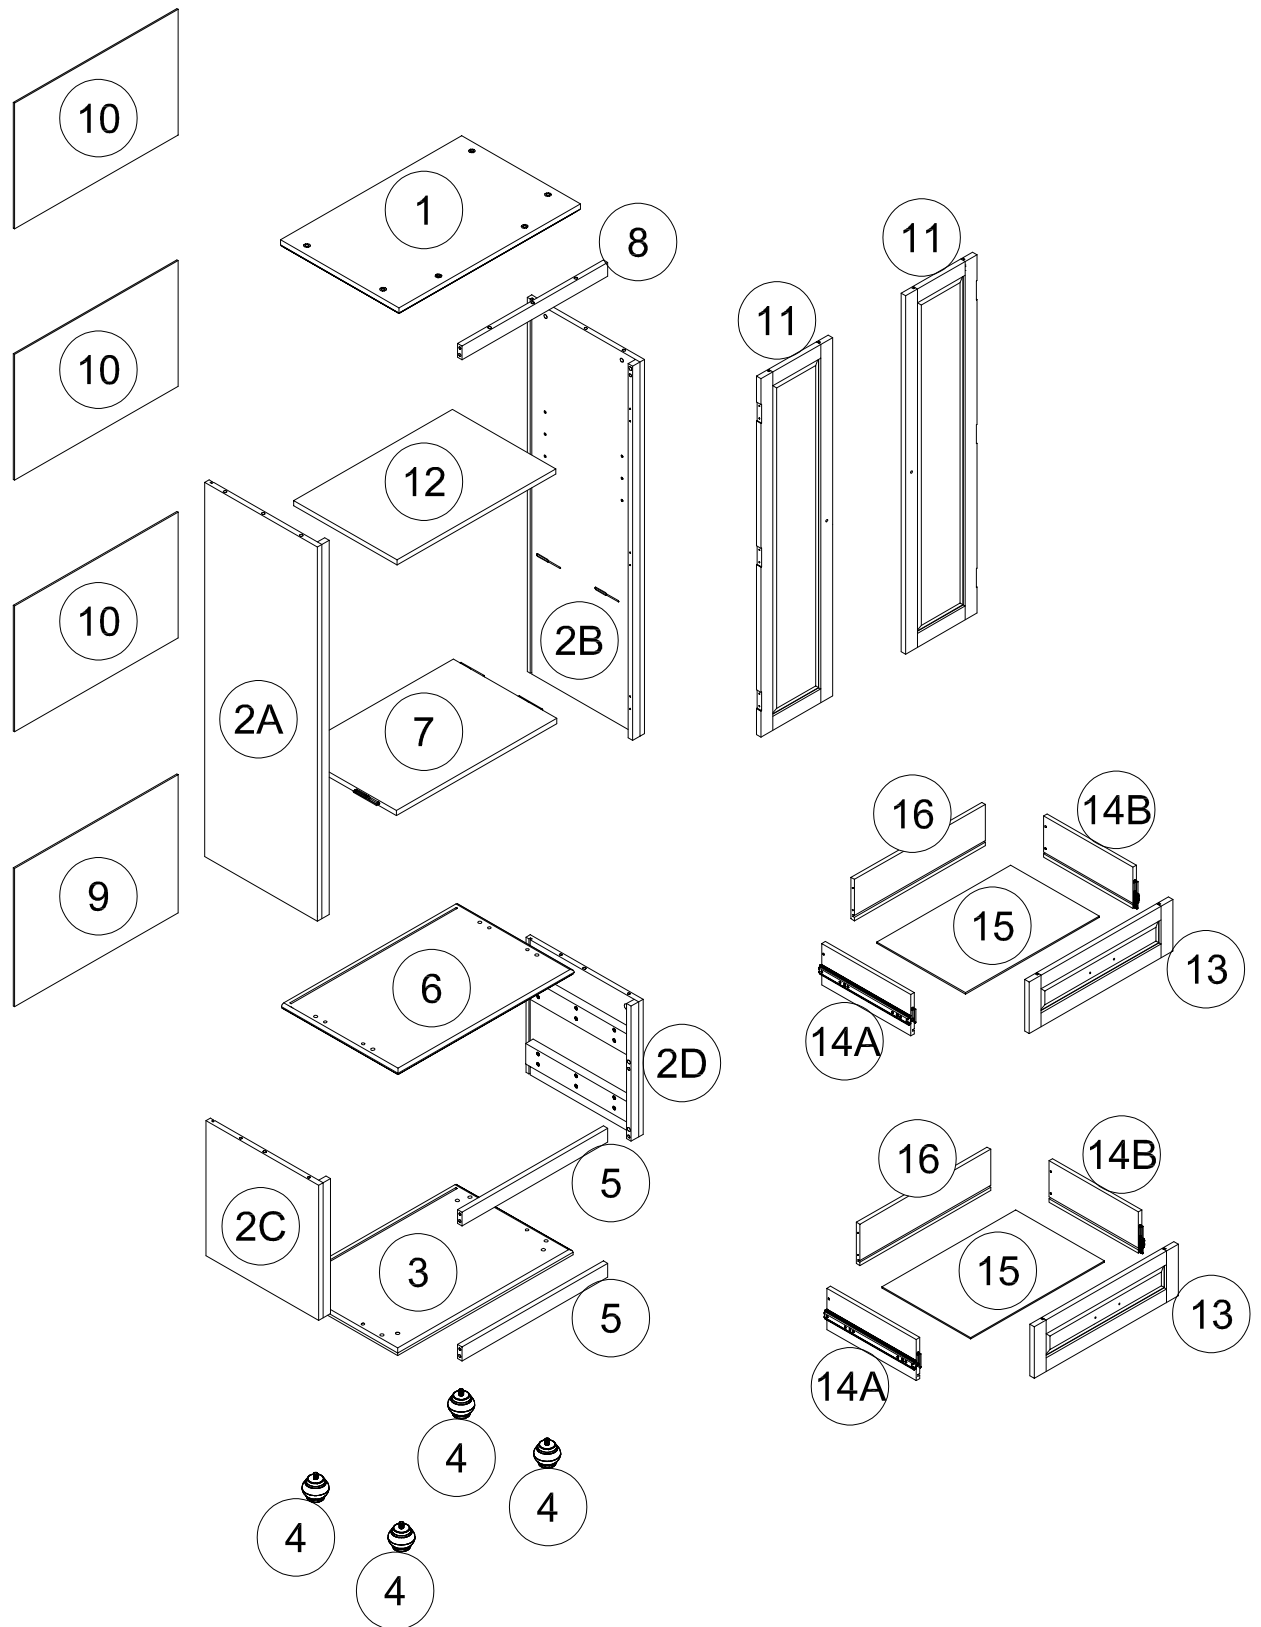


Part List (N725P333573)

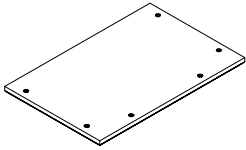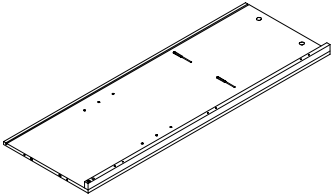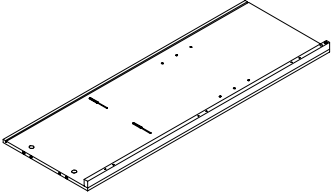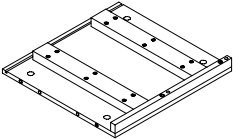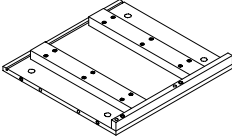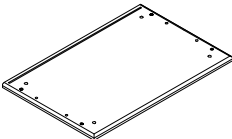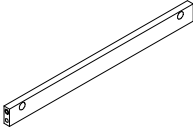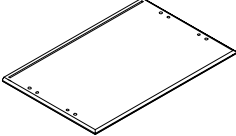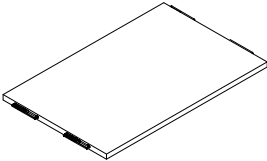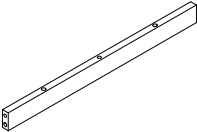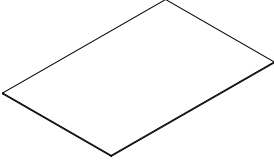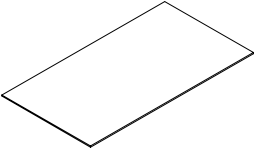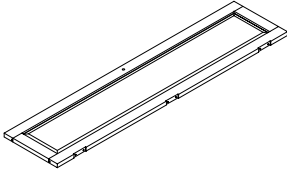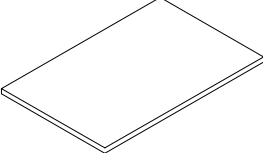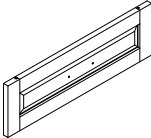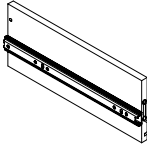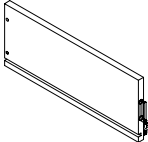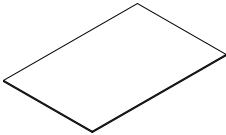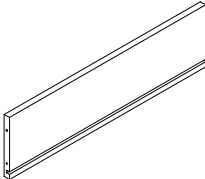1  Top of Cabinet - 1 pc	2A  Upper left side - 1 pc	2B  Upper right side - 1 pc
2C  Lower left side - 1 pc	2D  Lower right side - 1 pc	3  Bottom of the cabinet - 1 pc
4  Cabinet legs - 4 pcs	5  Horizontal bar - 2 pcs	6  Middle of the cabinet - 1 pc
7  Fixed shelf - 1 pc	8  Horizontal bar - 1 pc	9  Lower back panels - 1 pc
10  Upper back panels - 3 pcs	11  Cabinet door - 2 pcs	12  Adjustable shelf - 1 pc
13  Drawer - Front side - 2 pcs	14A  Drawer - Side rails - 2 pcs	14B  Drawer - Side rails - 2 pcs
15  Drawer - Bottom Panels - 2 pcs	16  Drawer - Back Panels - 2 pcs	


Hardware List (N725P333573)

A  Cam Bolt 18 pcs	B  Cam Lock 10mm 18 pcs	C  Ø8 x 30 mm Wood dowel 15 pcs
D  Ø8 x 60 mm Wood dowel 4 pcs	E  M4 x 50 mm Wood Screws 2 pcs	F  1/4" x 50 mm Wood Screws 4 pcs
G  Plastic Wedges 24 pcs	H  M4 x 20 mm Wood Screws 48 pcs	I  Hinge 6 pcs
J  M4 x 20 mm Truss Head Wood Screws 2 pcs	K  Cabinet Door Handle 2 pcs	L  Shelf Pin 9mm 4 pcs
M  M4 x 15 mm Wood Screws 4 pcs	N  M4 x 30 mm Wood Screws 8 pcs	O  M4 x 12 mm Truss Head Wood Screws 4 pcs
P  Drawer Handles 2 pcs	Q      1 2 3 4 5 Antifall 2 sets	R  Allen Key 1 pc
T  Drawer slide 4 pcs	U  M3.5 x 15 mm Wood Screws 16 pcs	




Assembly Tools Required (Not Included)

Step 1:

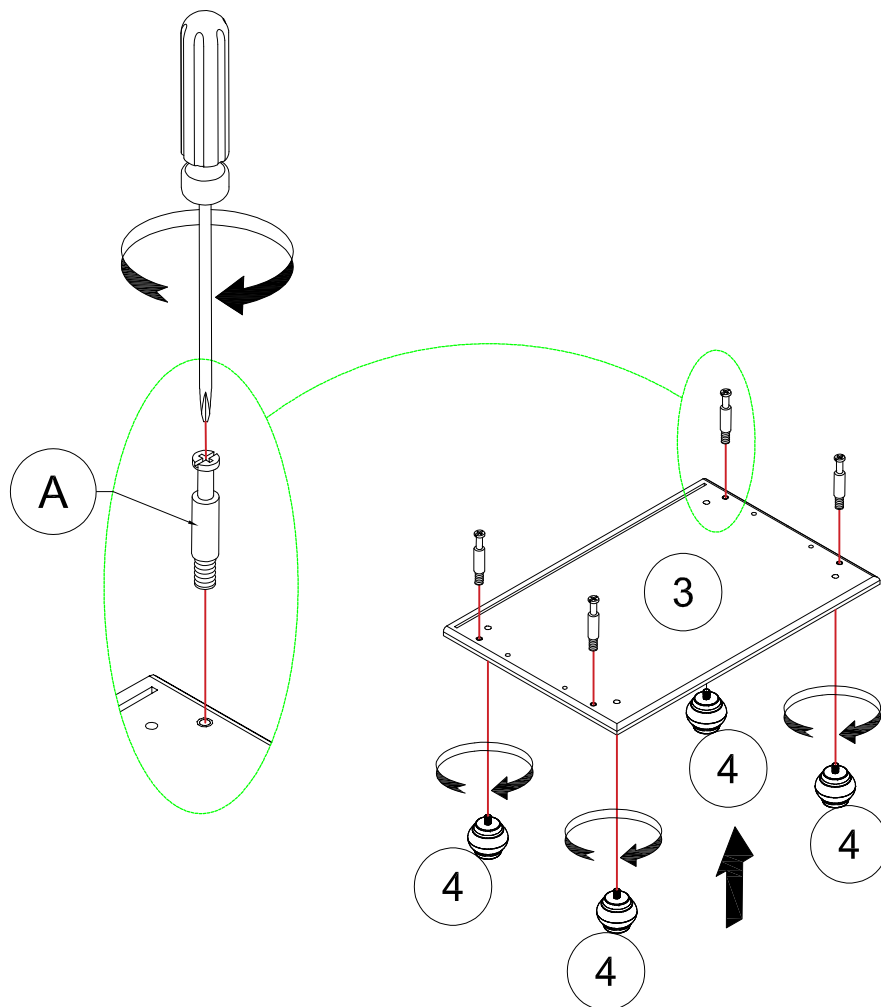


A



4pcs

Step 2:

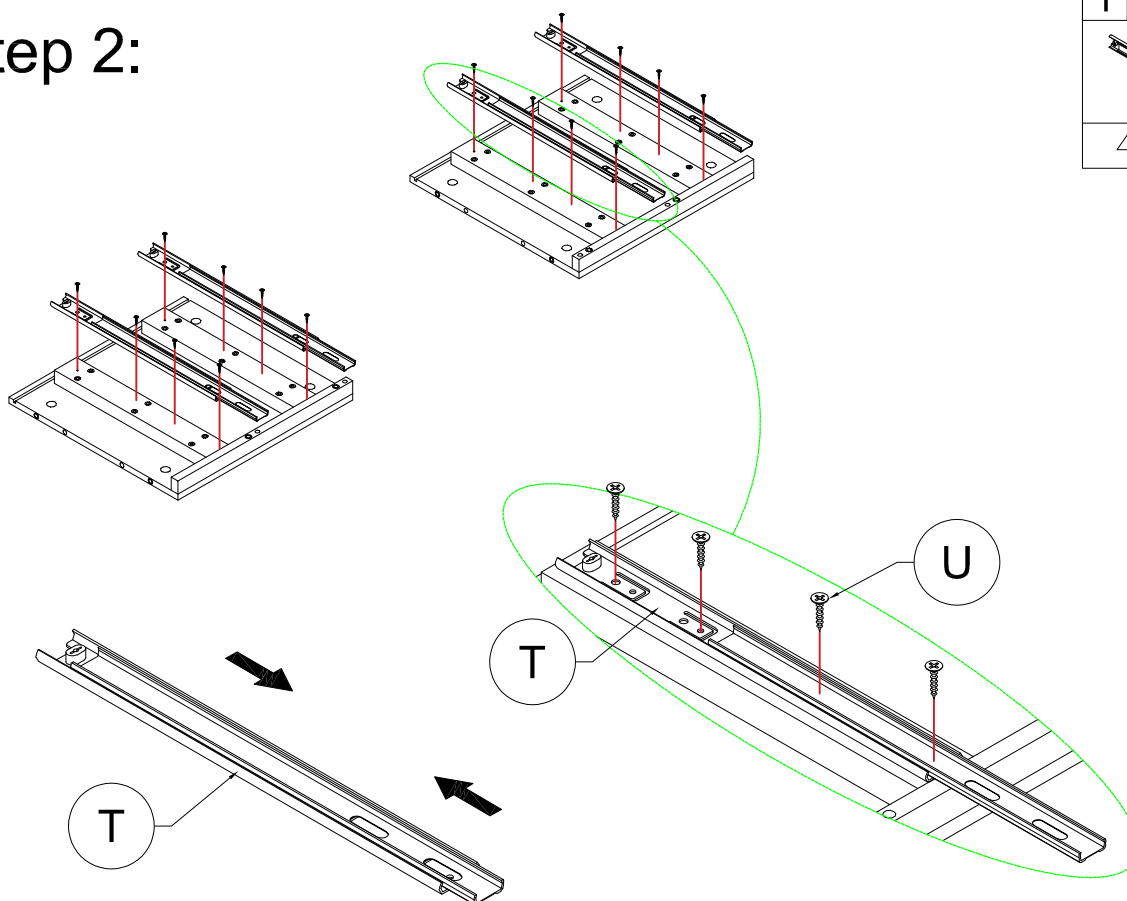

T



4pcs

U




16pcs


Move the slide rail to screw in

Step 3:

A



4pcs

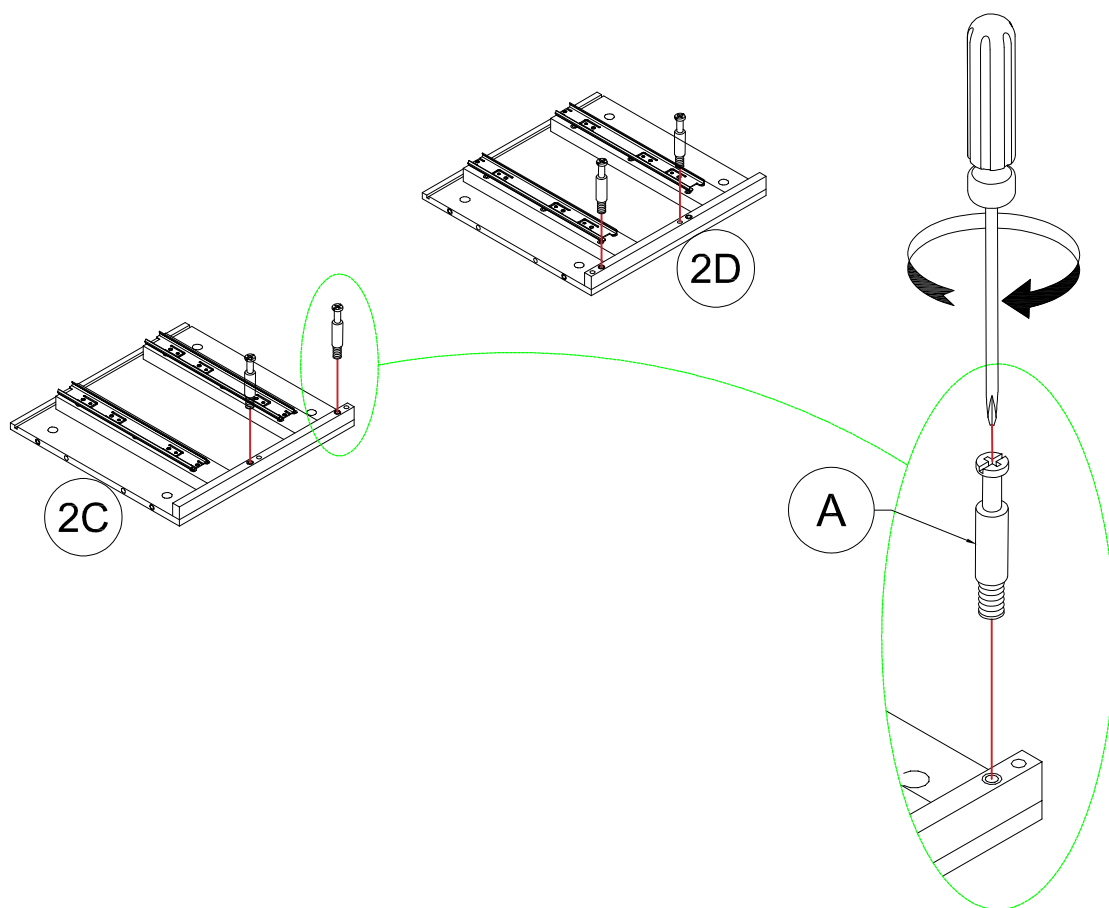


Step 4:

B




4pcs


C




4pcs

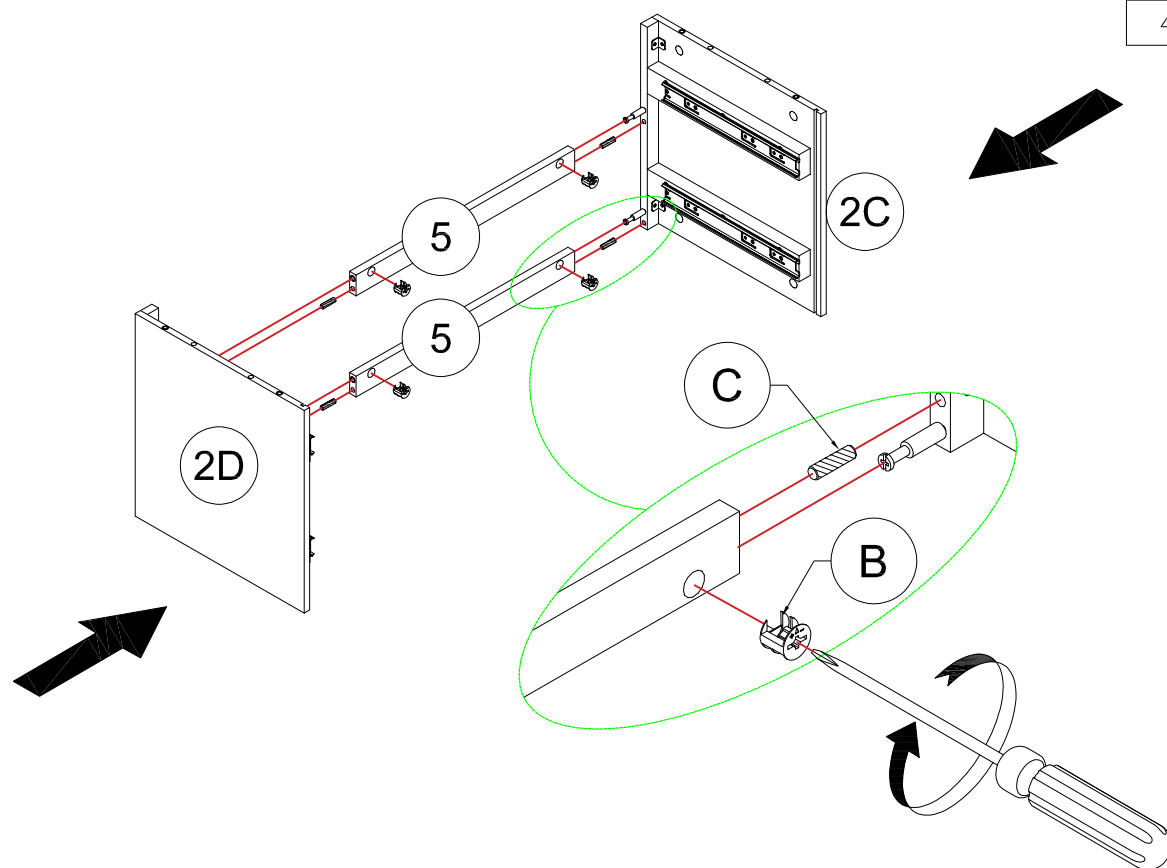

Step 5:

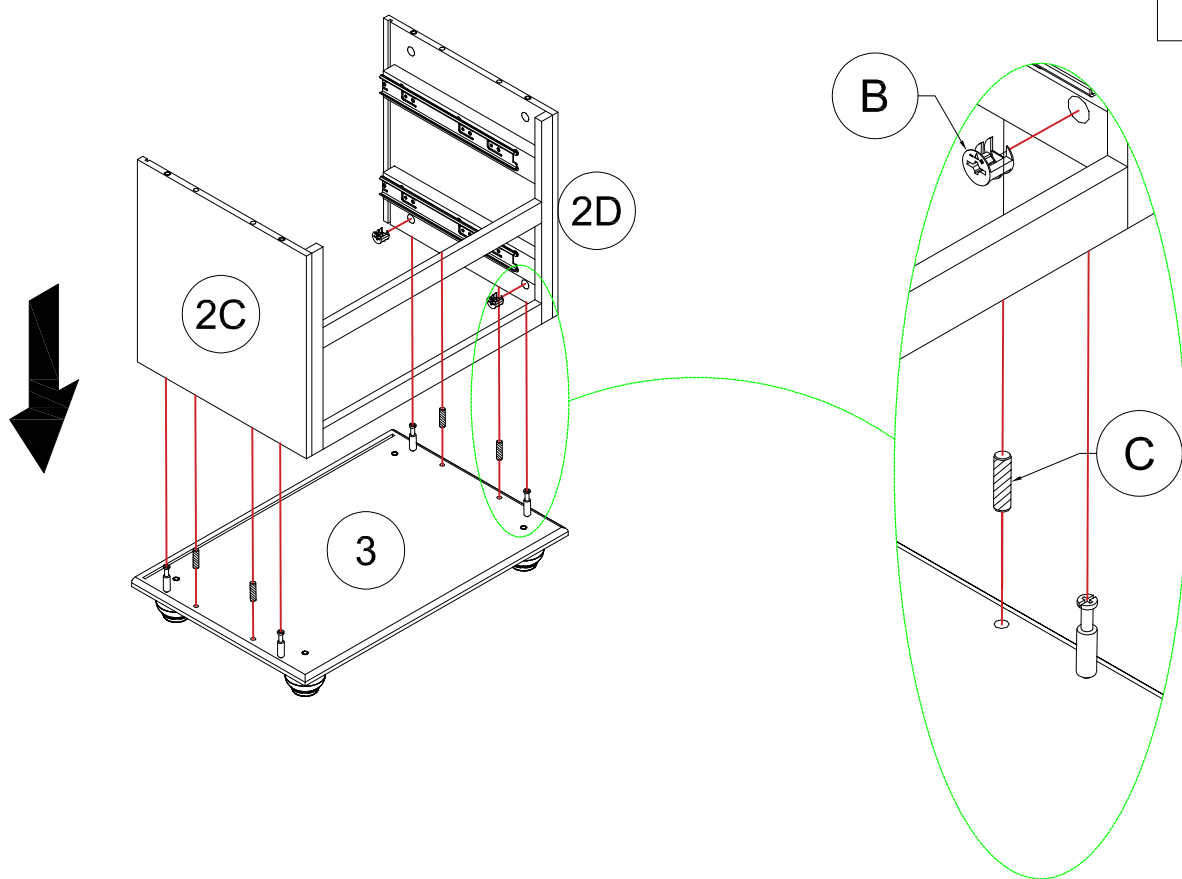


Step 6:



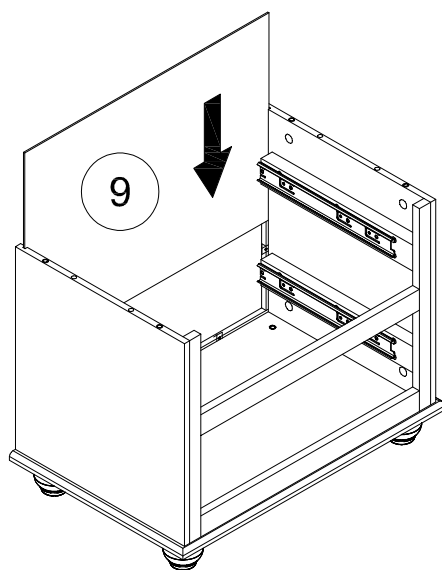


Step 7:

A



4pcs

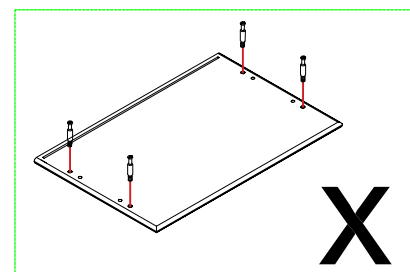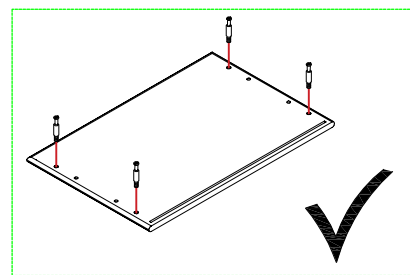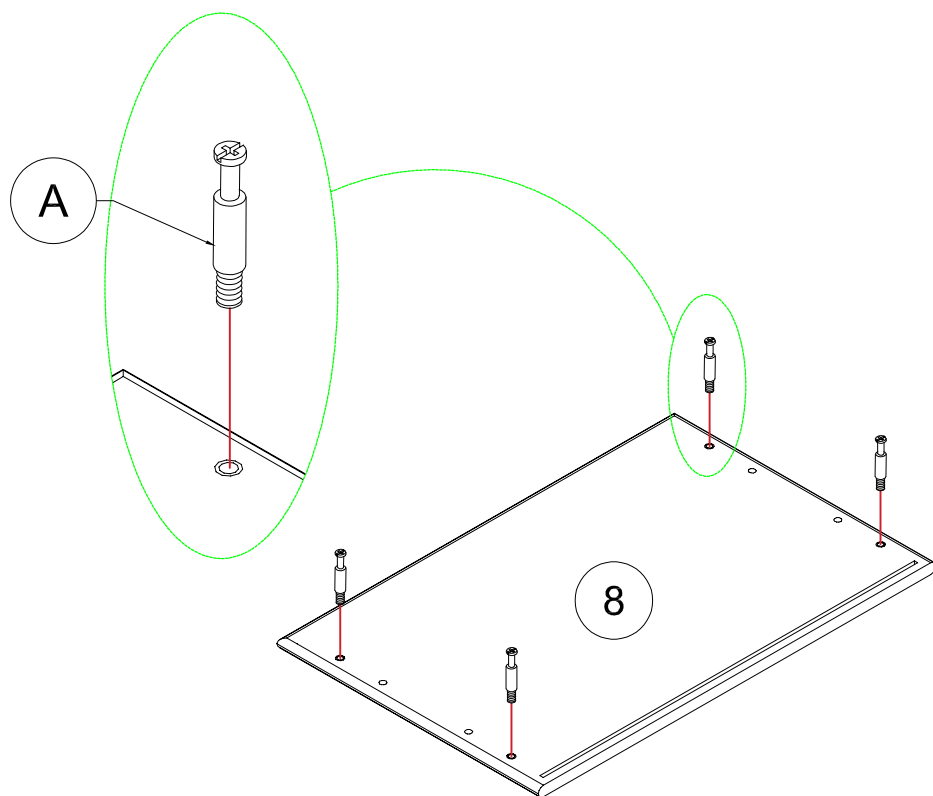


Step 8:

B




4pcs

D




4pcs

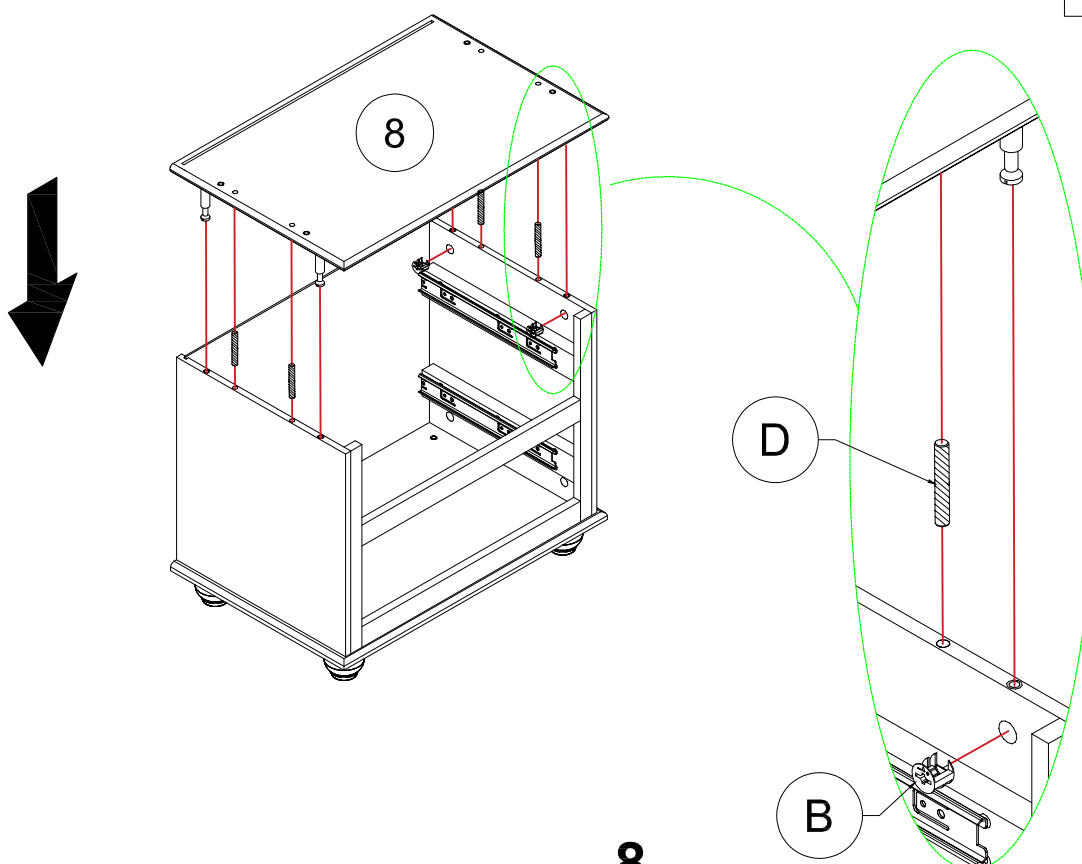


8

Step 9:

A




4pcs

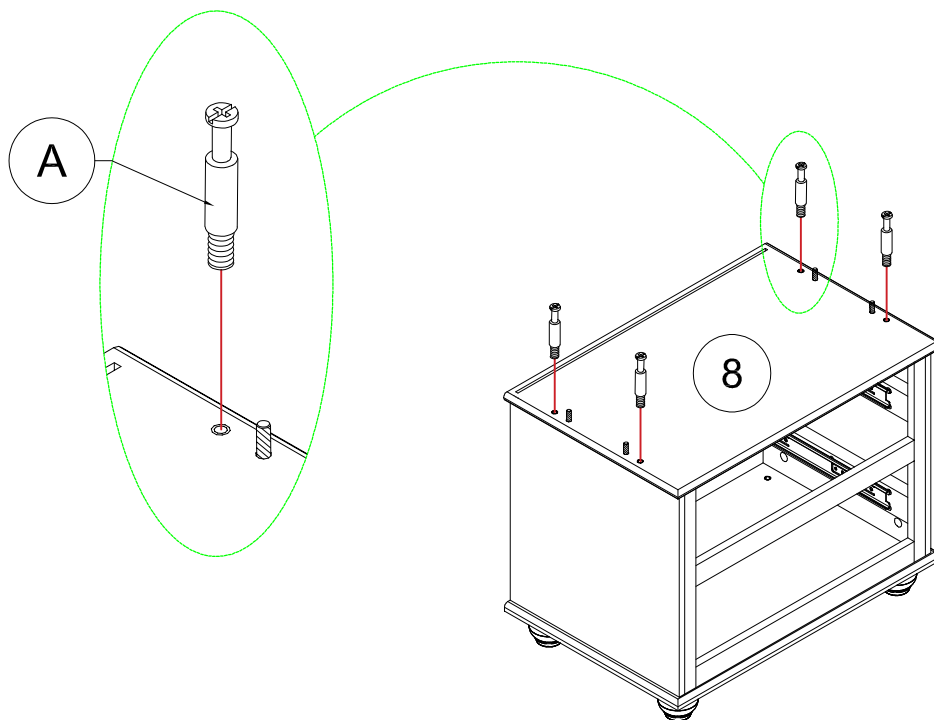


Step 10:


A




2pcs

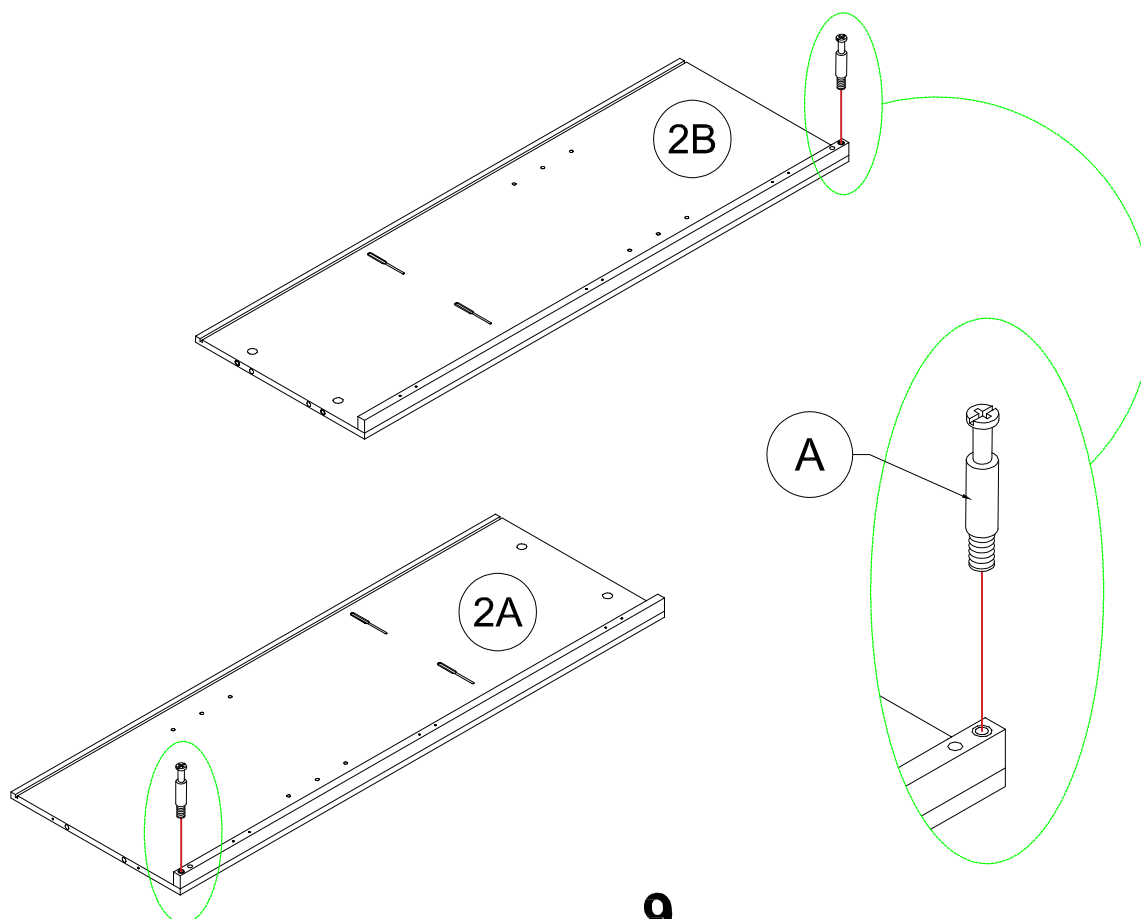


Step 11:

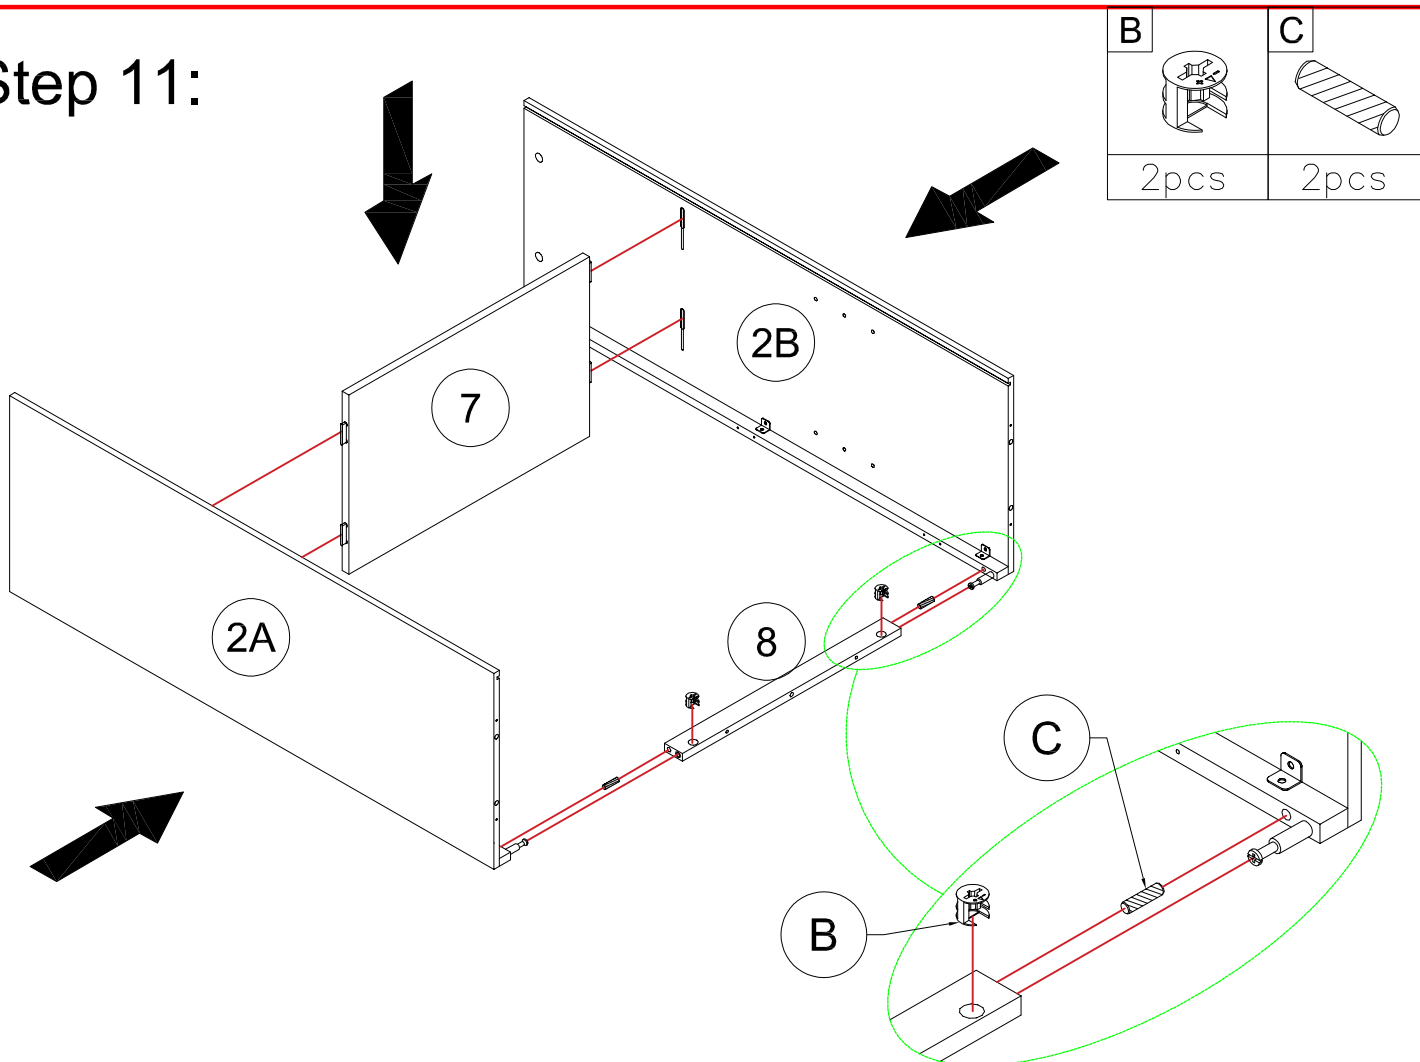




Step 12:



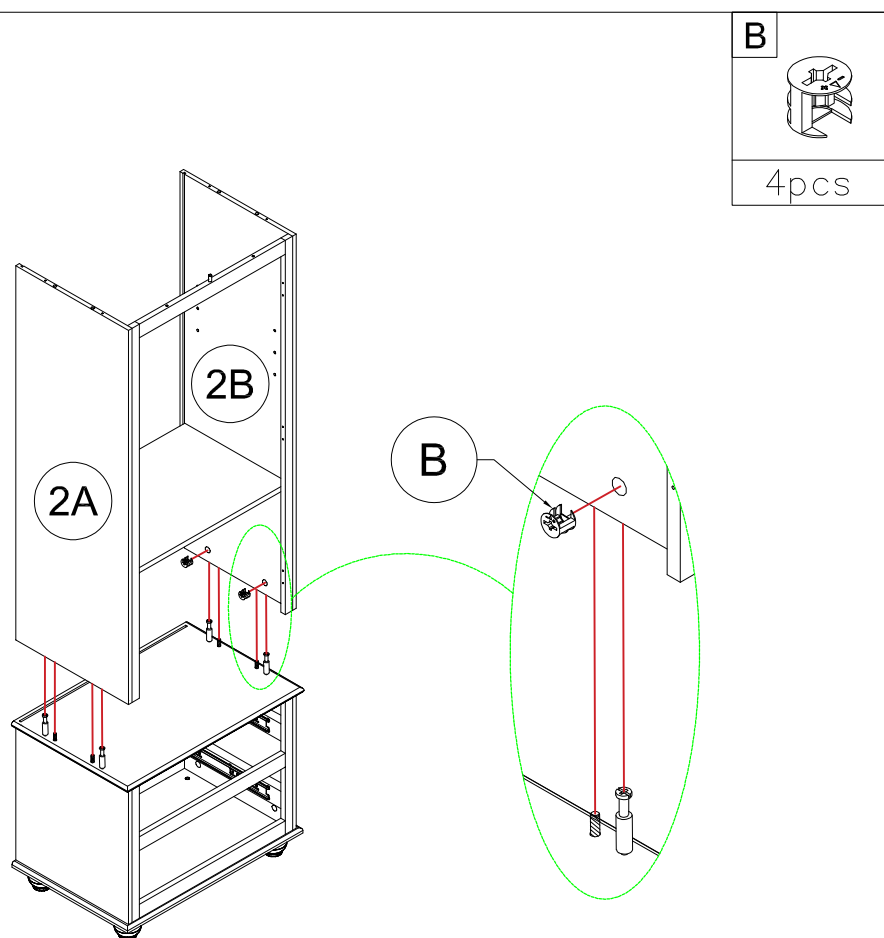


Step 13:


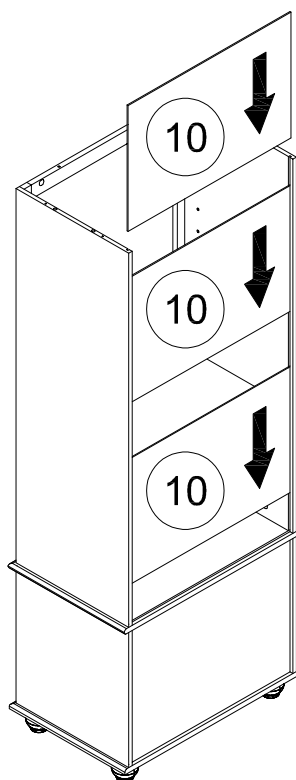


Step 14:

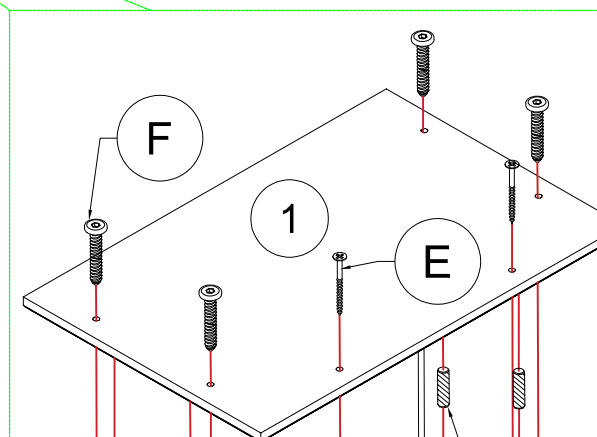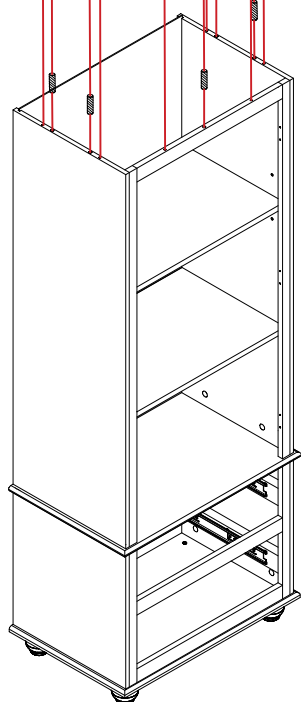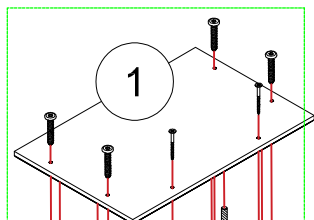


F	E	C
		
4pcs	2pcs	5pcs


Step 15:

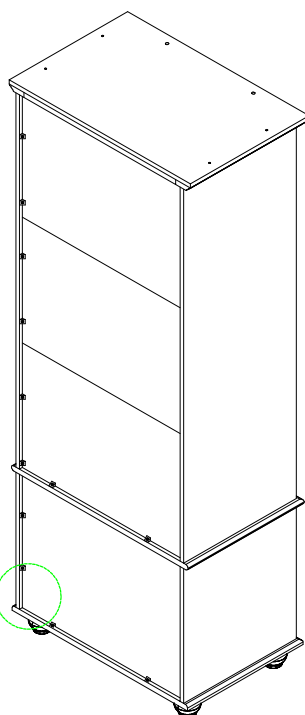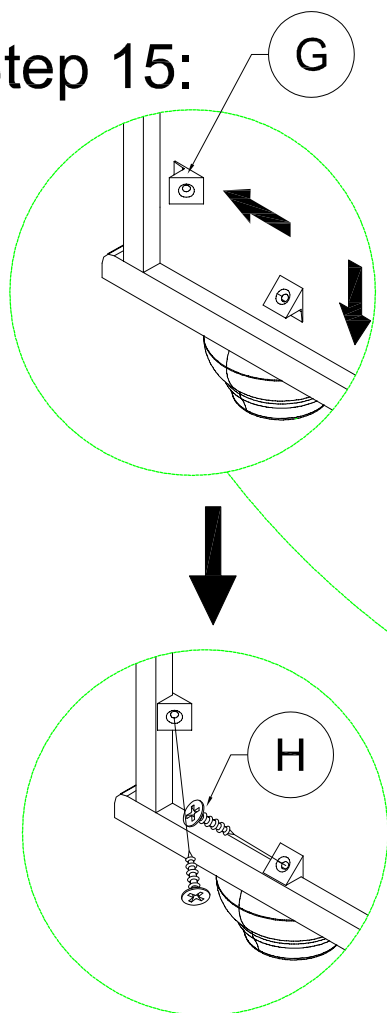

H	G
	
24pcs	24pcs

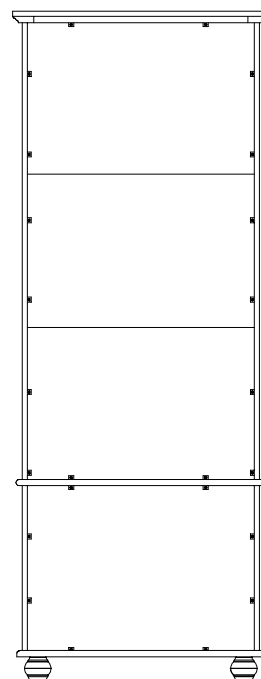


Step 16:

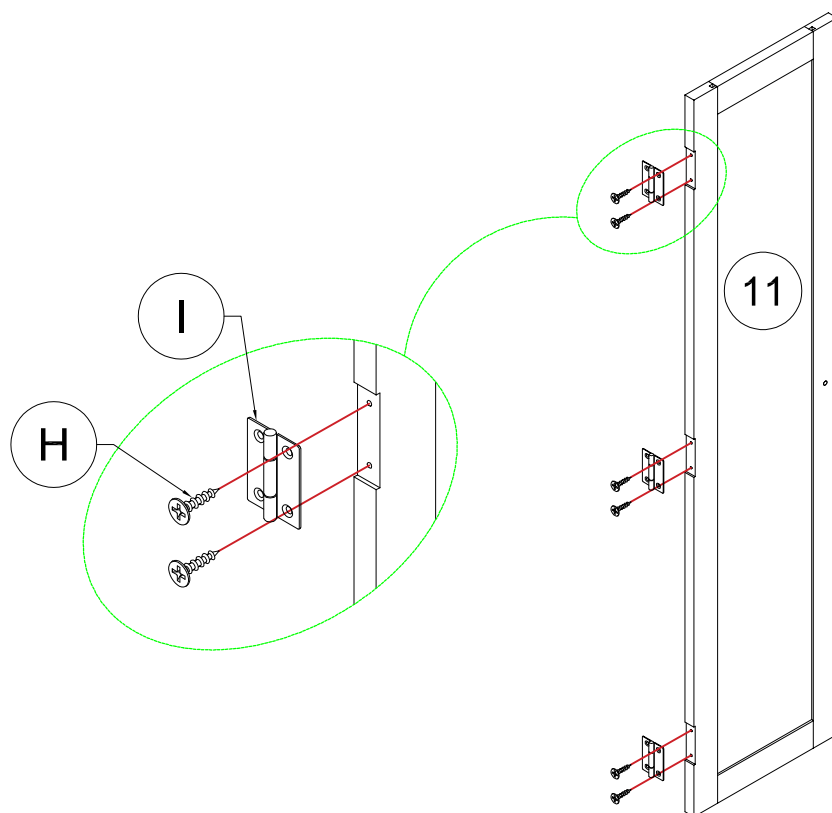


12

H	I
	
12pcs	6pcs

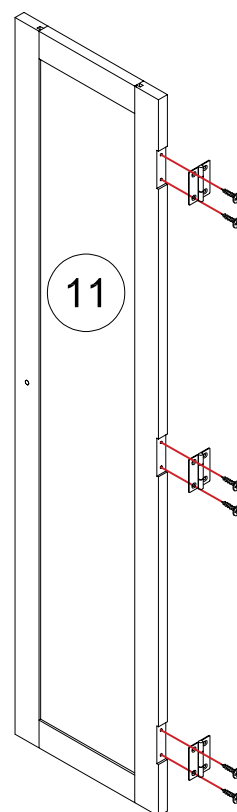


Step 17:

K	J	H
		
2pcs	2pcs	12pcs

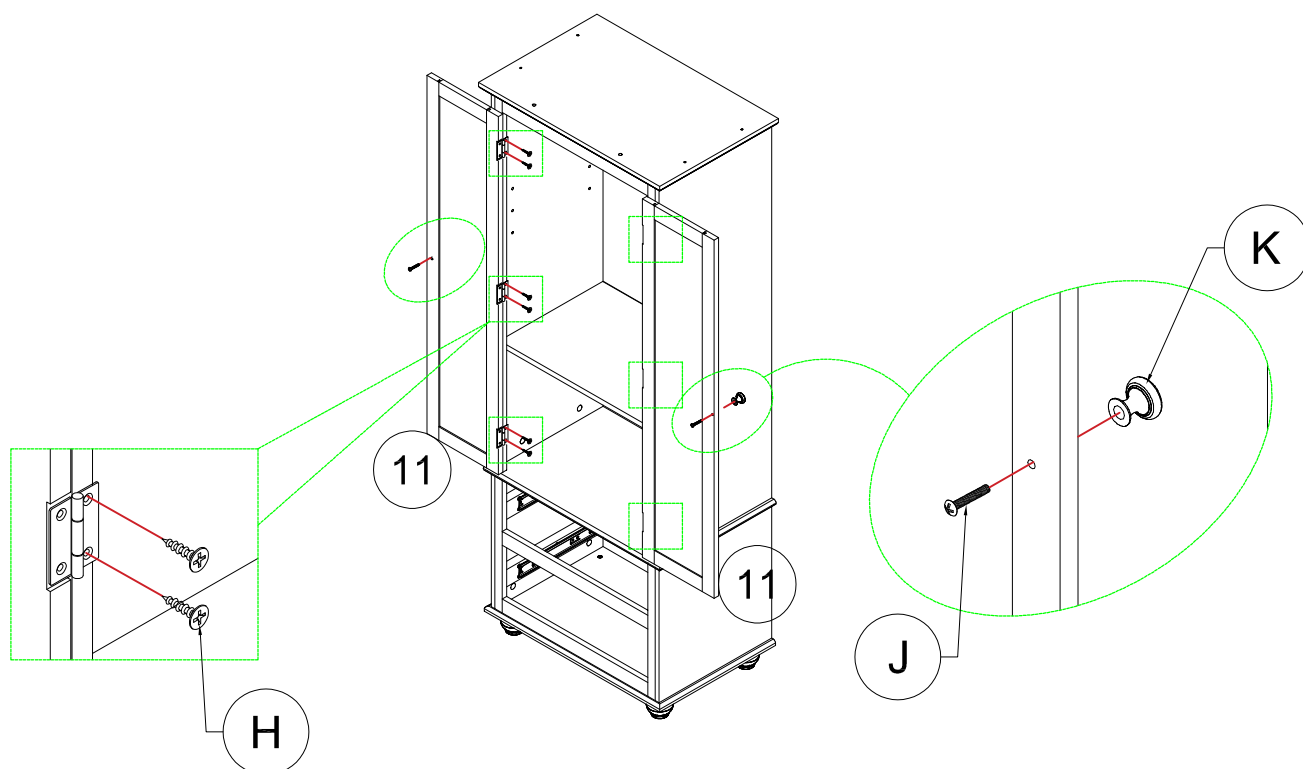


Step 18:


L	M
	
4pcs	4pcs

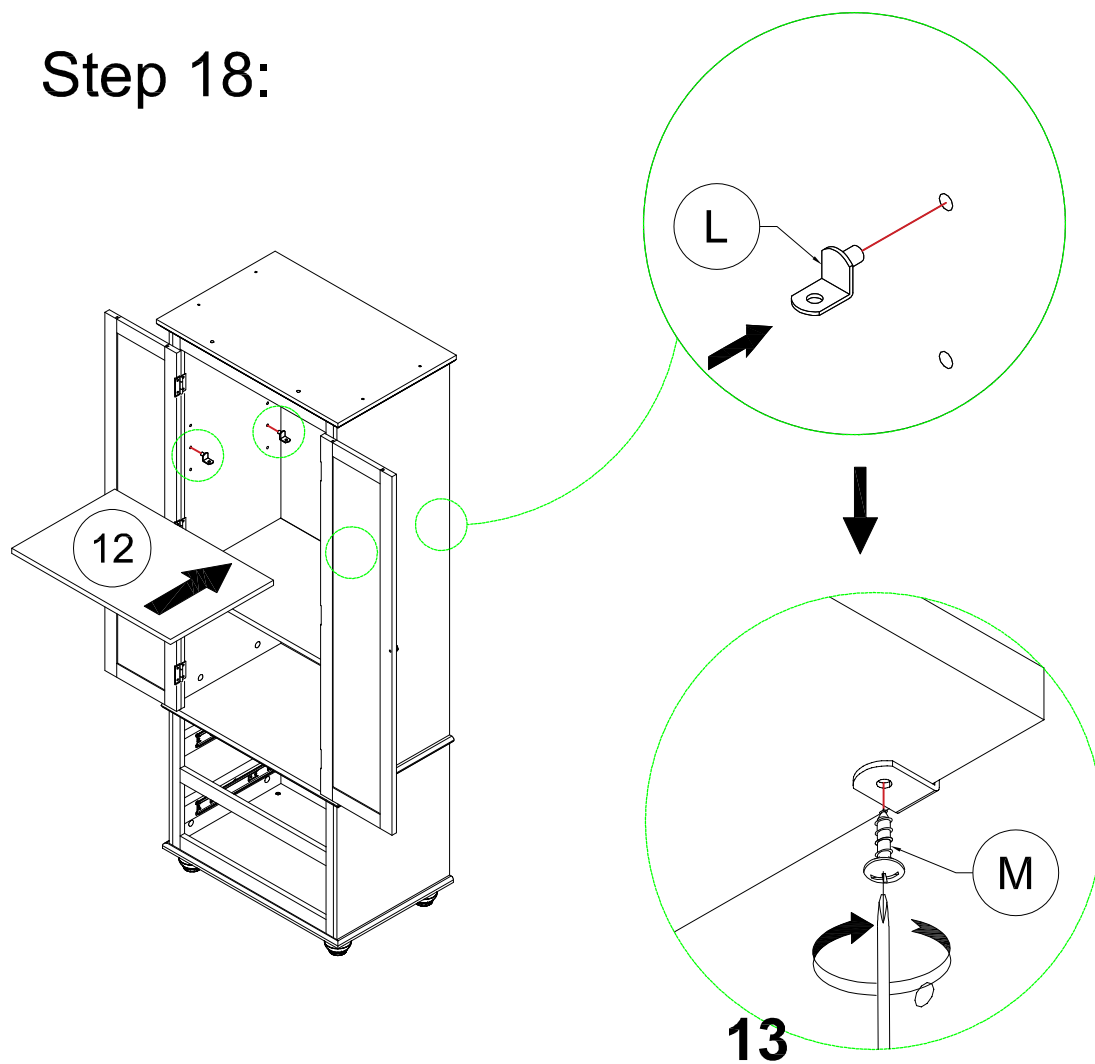



Step 19:

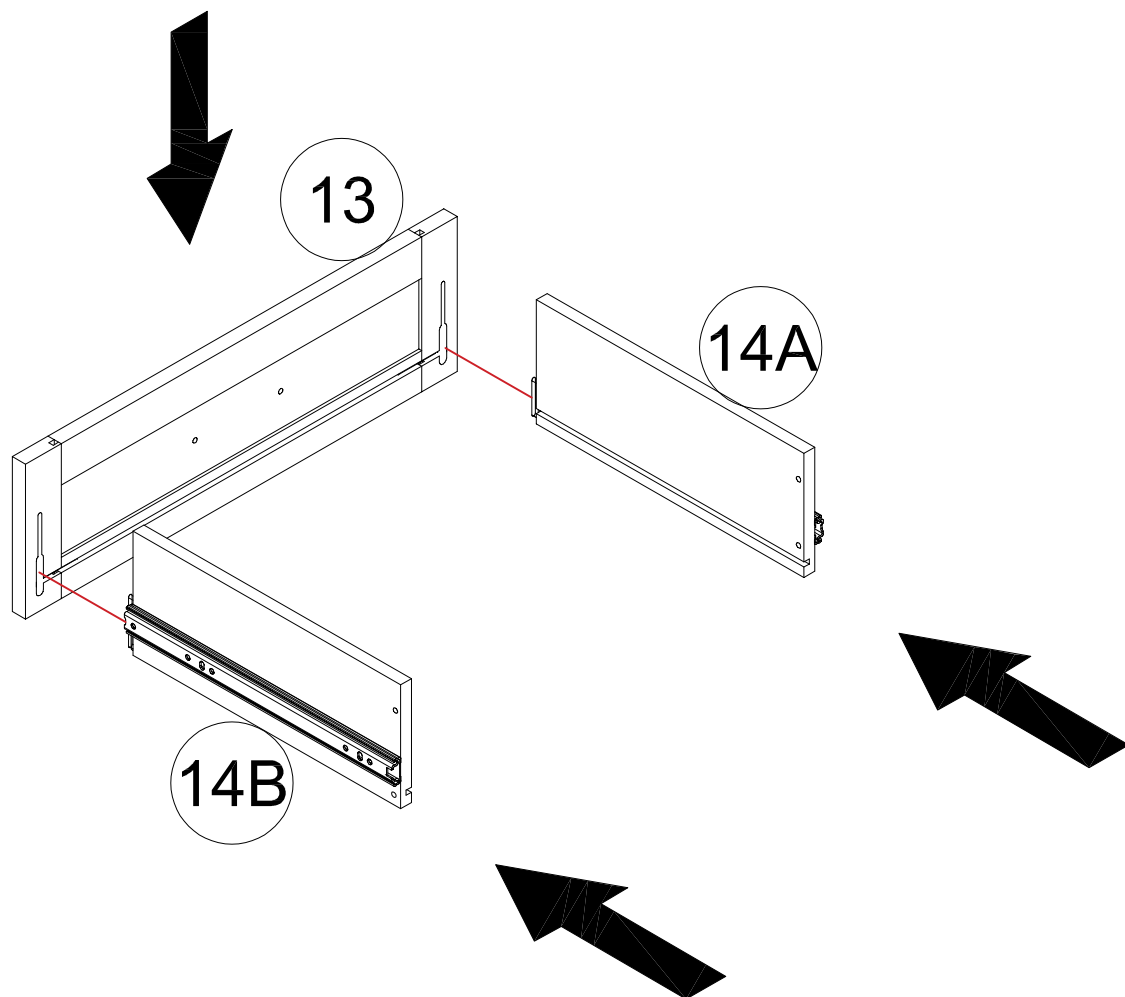


Step 20:



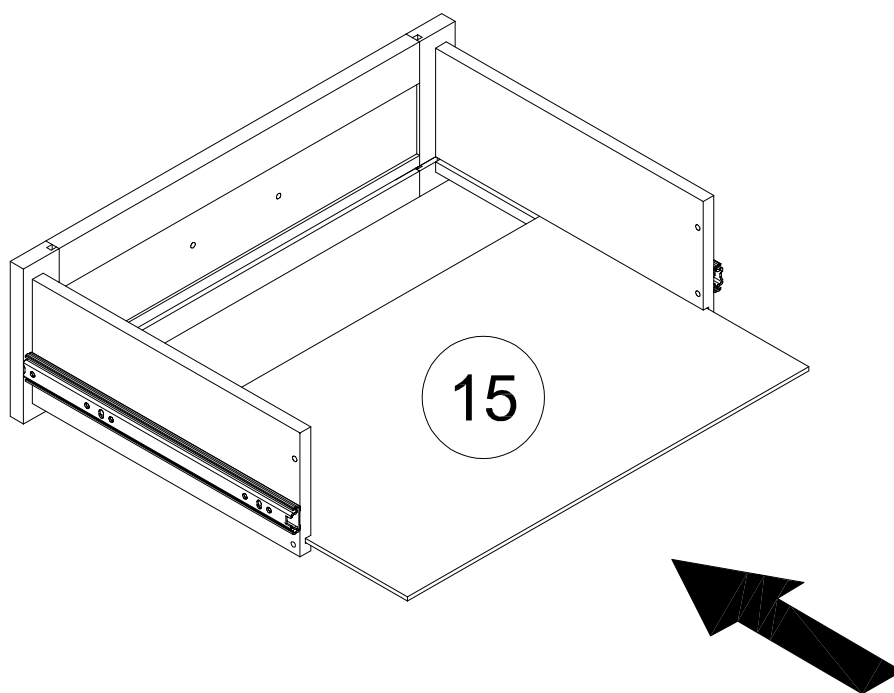


Step 21:

P	O	N
		
2pcs	4pcs	8pcs

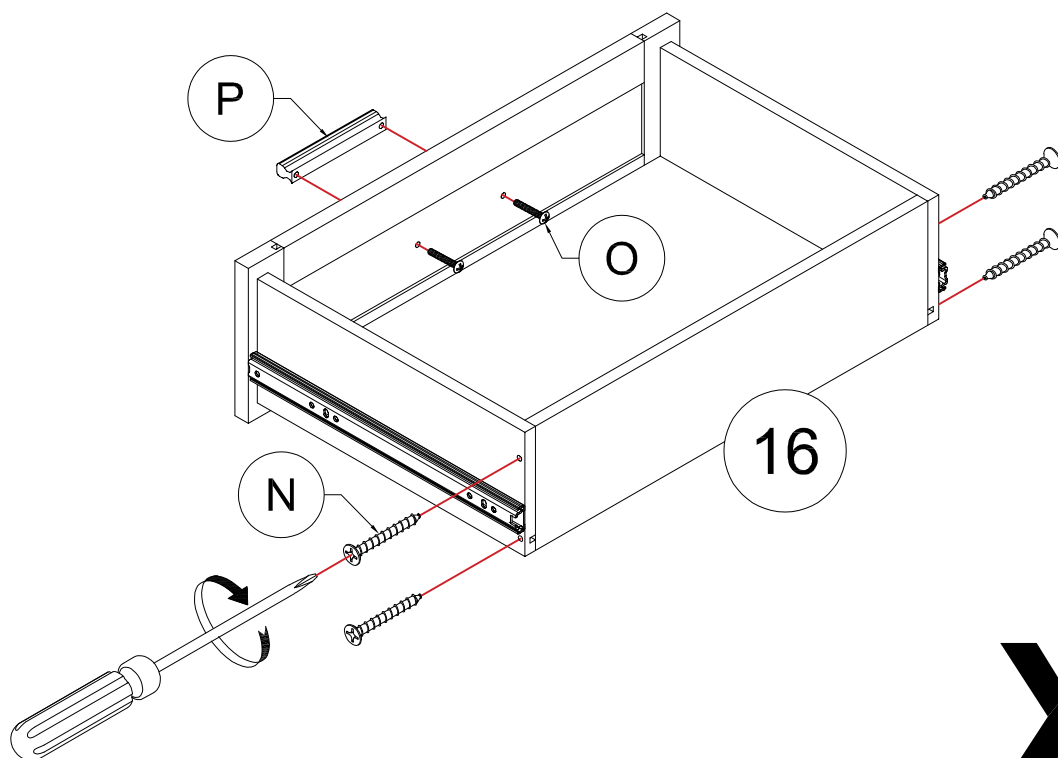


Step 22:

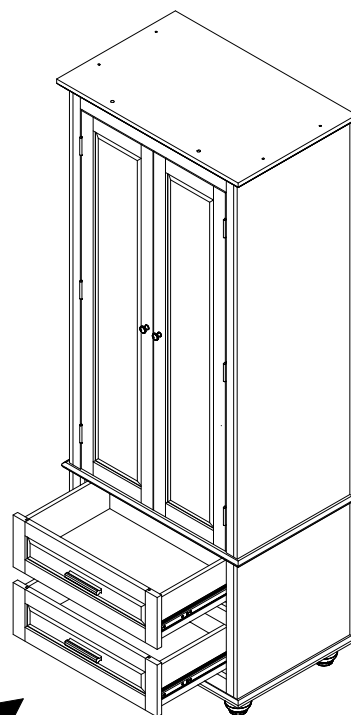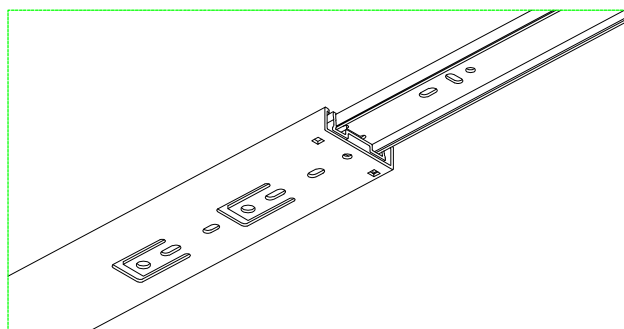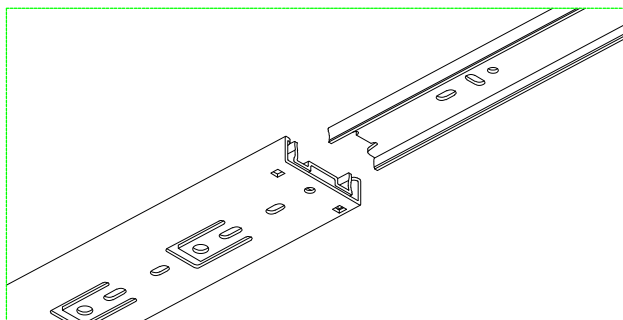


15

Step 23:

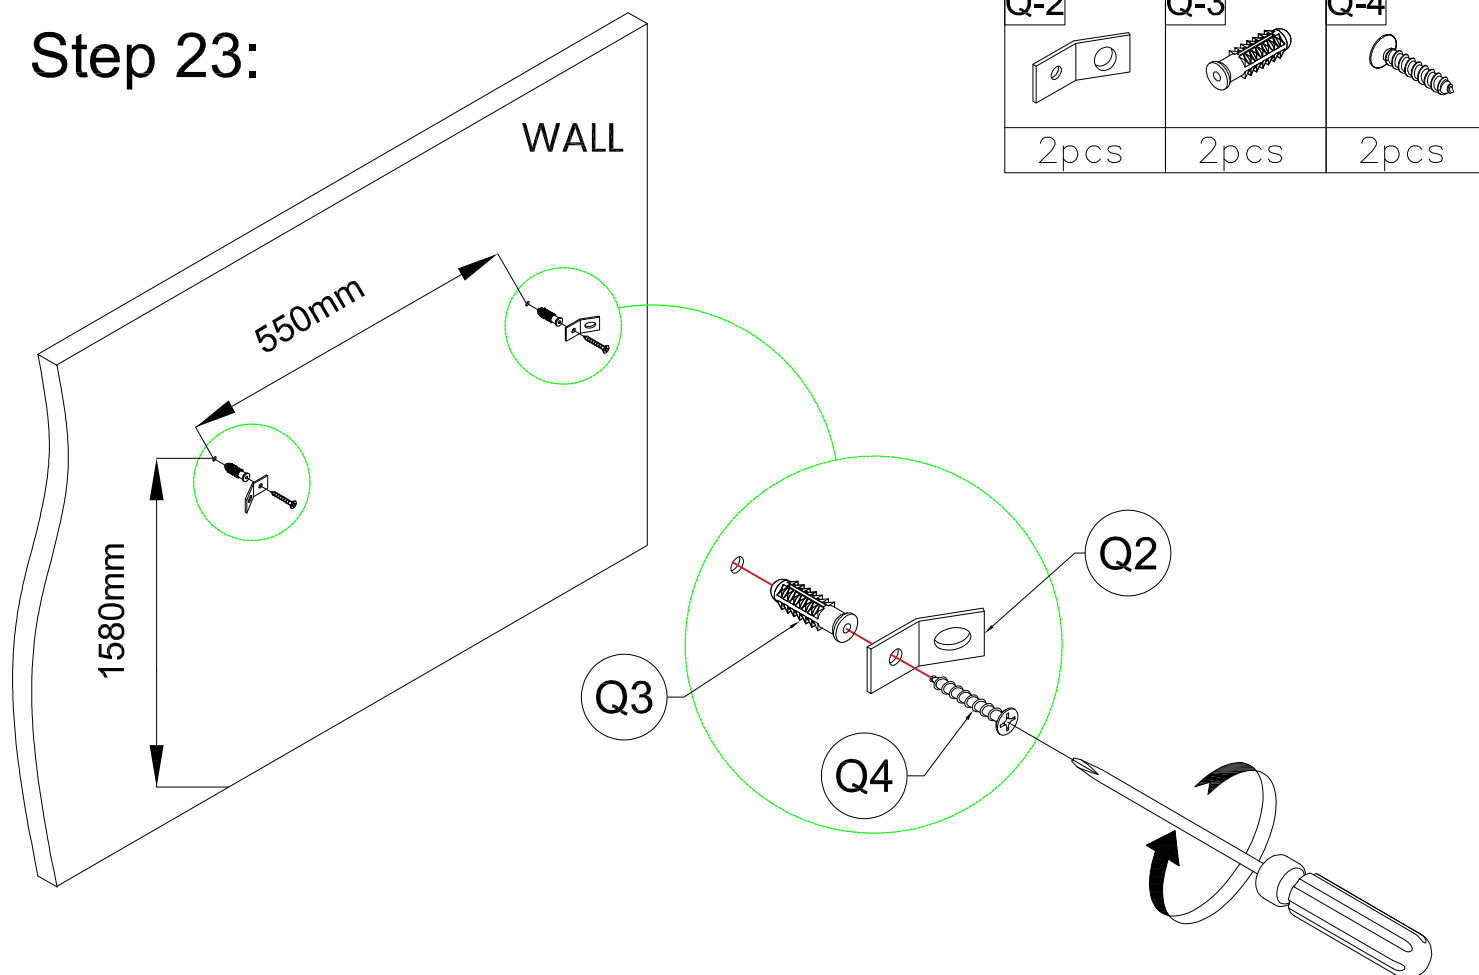

Step 24:

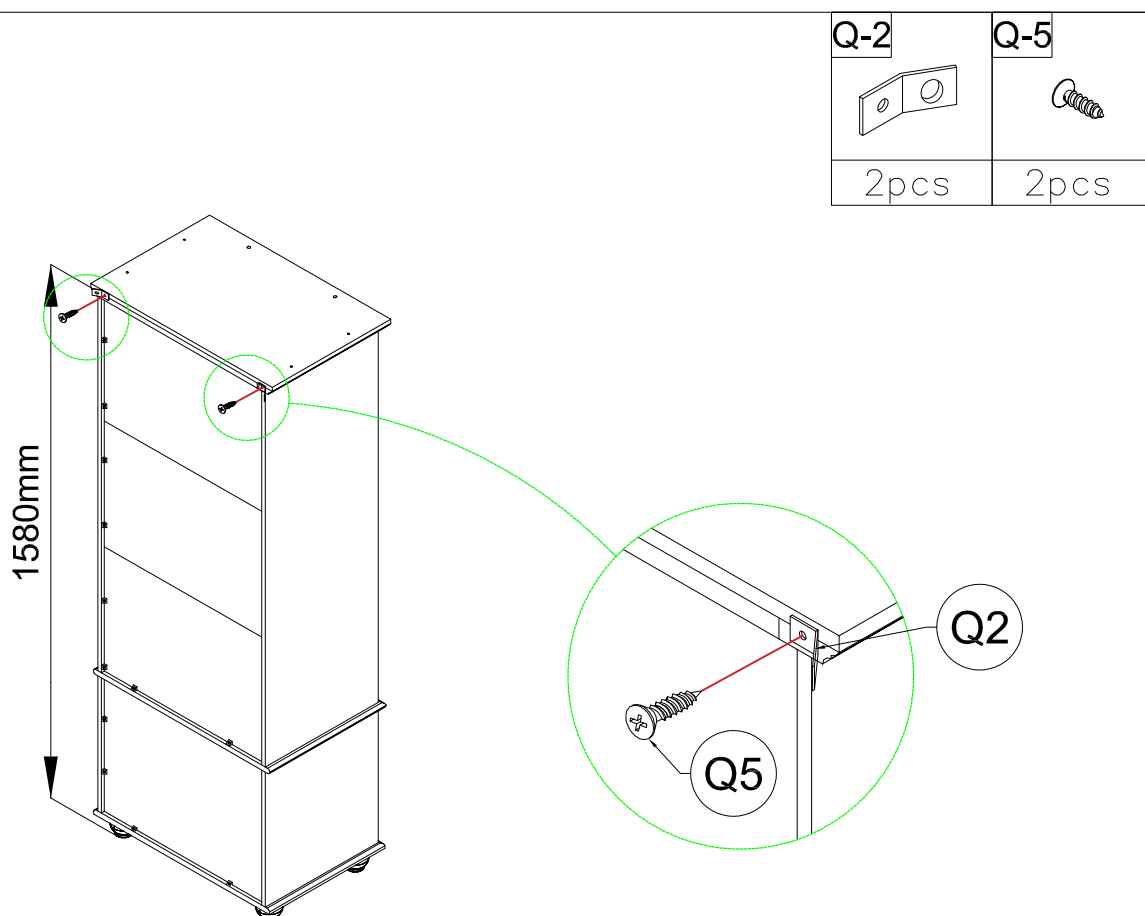


Step 25:

Q-1



2pcs

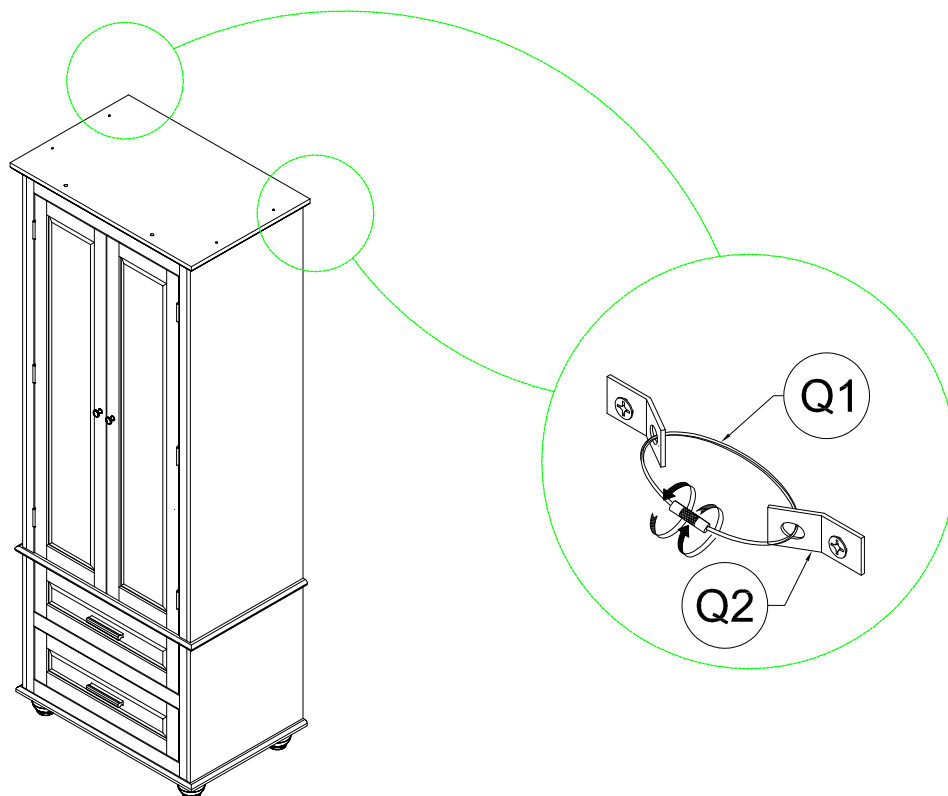

FINISH

