


ASSEMBLY INSTRUCTIONS


STOOL

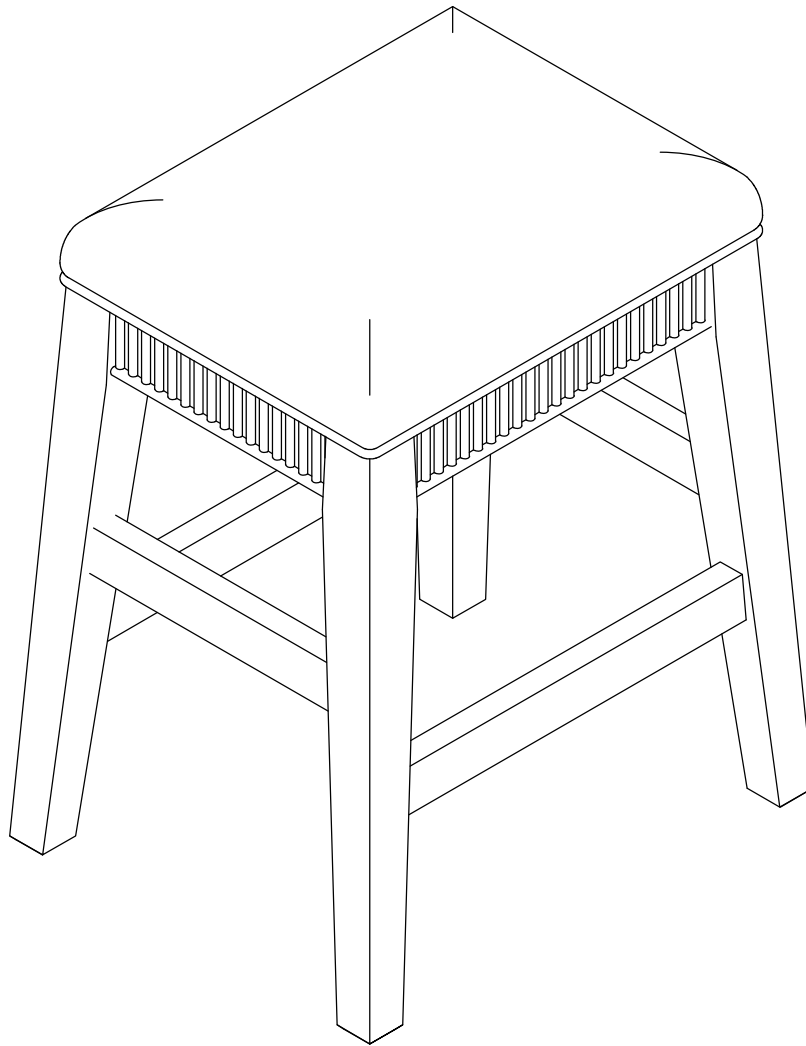

N715P336425


IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

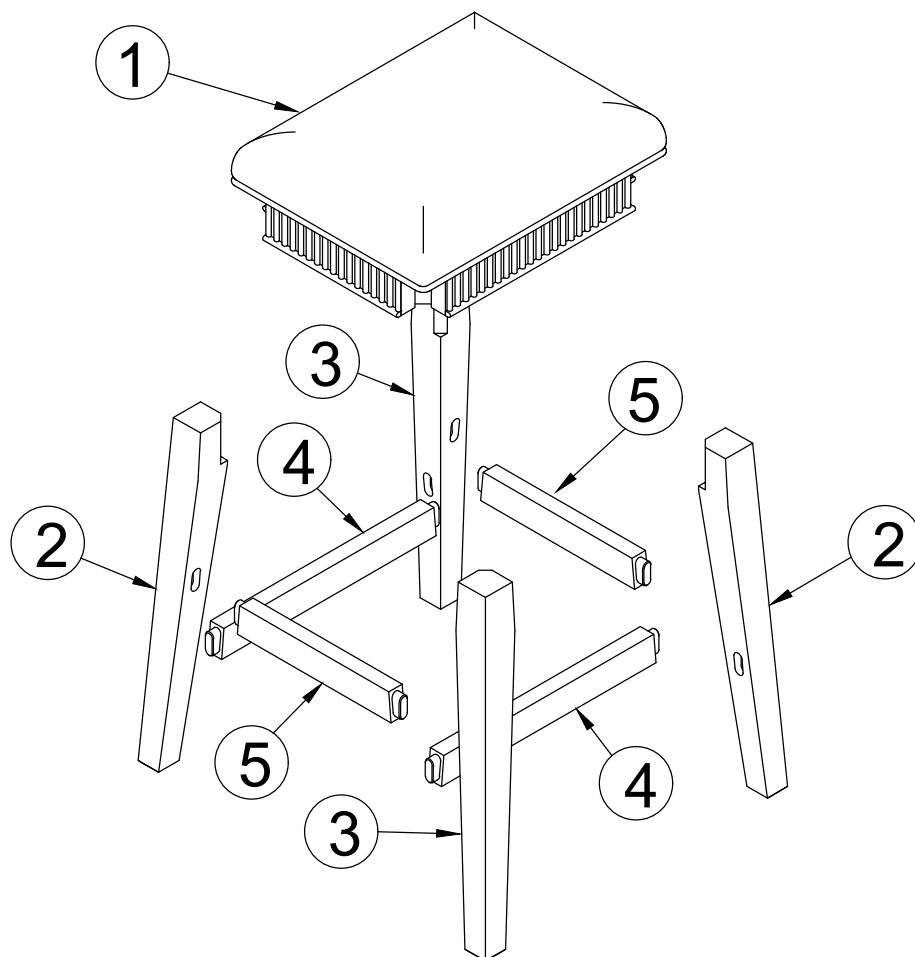

Hardware List For One Stool

A



Ø1/4" x 57mm

BOLT (8PCS)


B



Ø1/4" x 11mm

LOCK WASHER (8PCS)


C



Ø1/4" x 18mm

FLAT WASHER (8PCS)

D



4MM

ALLEN (1PC)




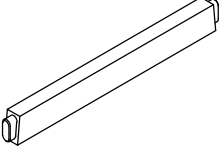
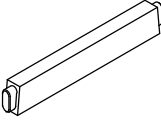
E




M4 x 45mm

SCREW (8PCS)

Part List For One Stool

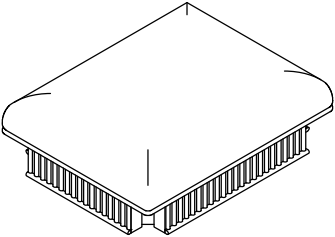
1		2		3	
SEAT CUSHION (1PC)		LEG 1 (2PCS)		LEG 2 (2PCS)	
4		5			
LONG STRETCHER (2PCS)		SHORT STRETCHER (2PCS)			

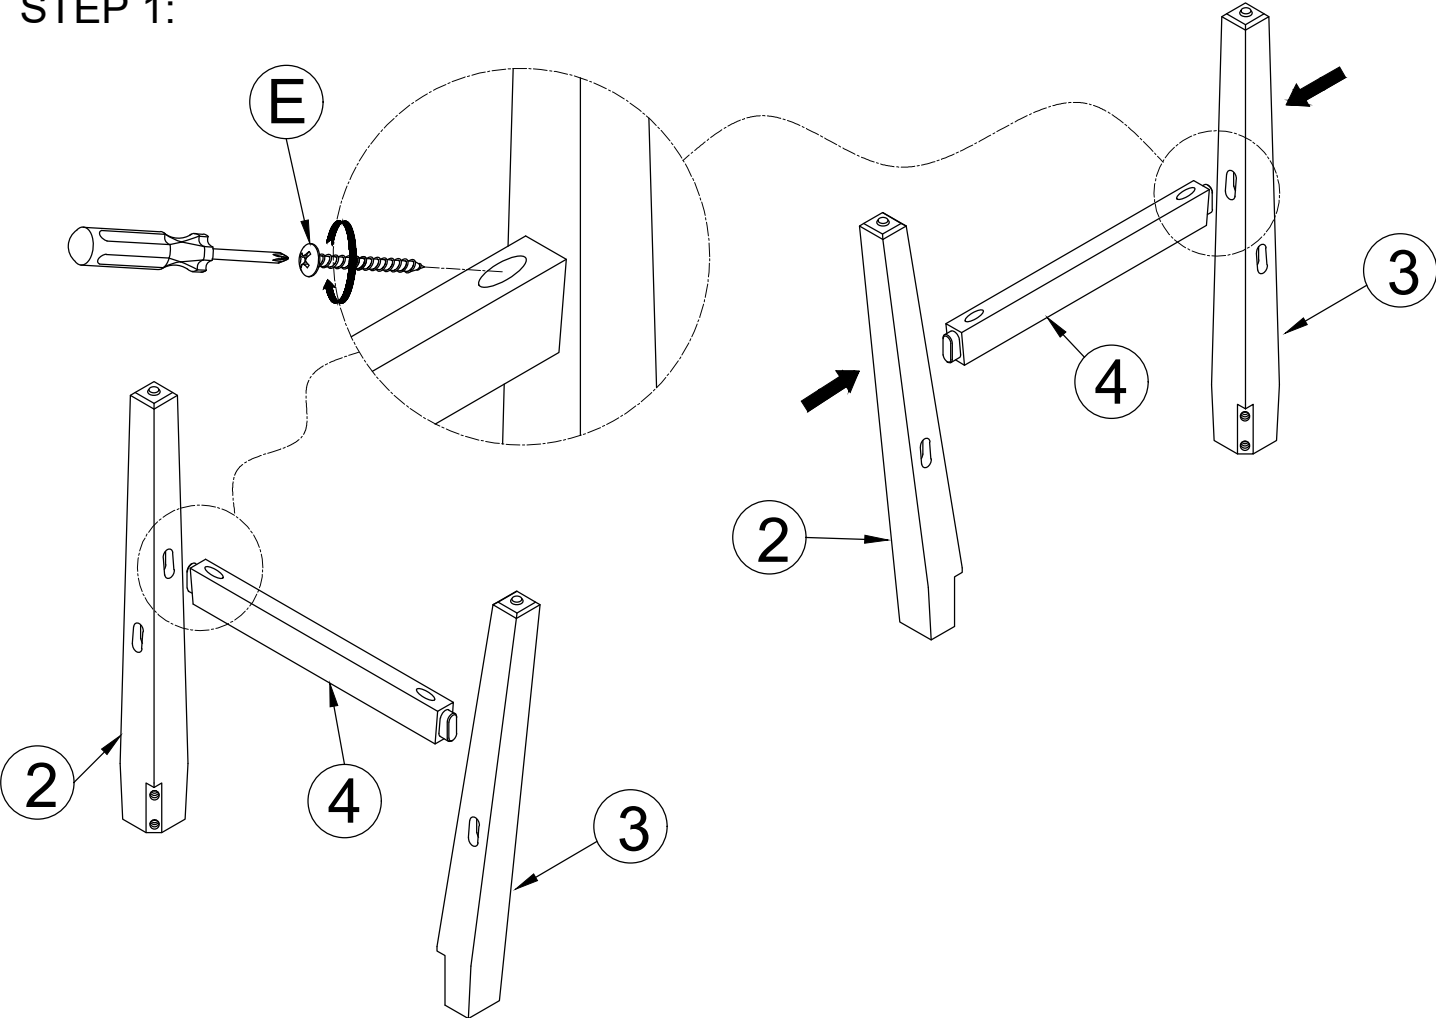



STEP 1:




E	M4 x 45mm		4pcs
---	-----------	---	------

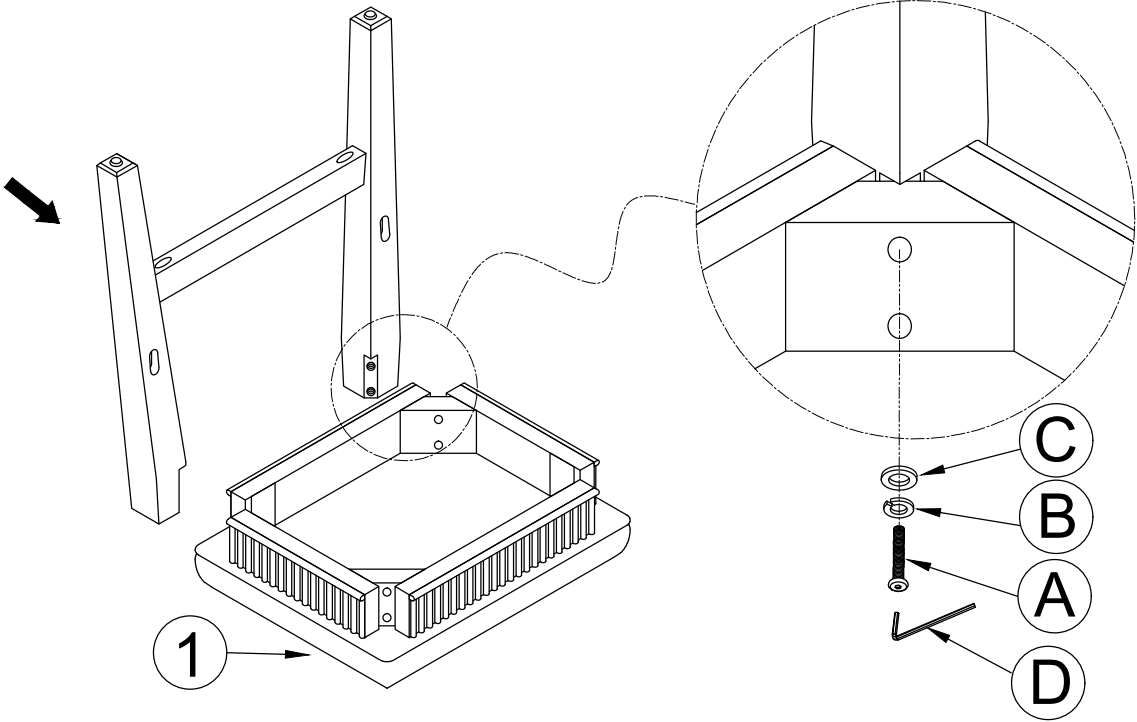STEP 2:







A	Ø1/4"x57mm		4pcs	B	Ø1/4"x11mm		4pcs
C	Ø1/4"x18mm		4pcs	D	4mm		1pc

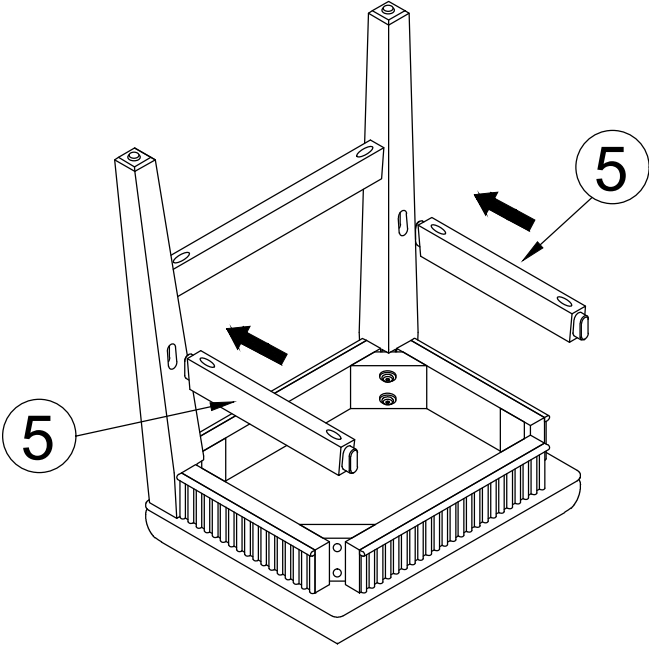

STEP 3:

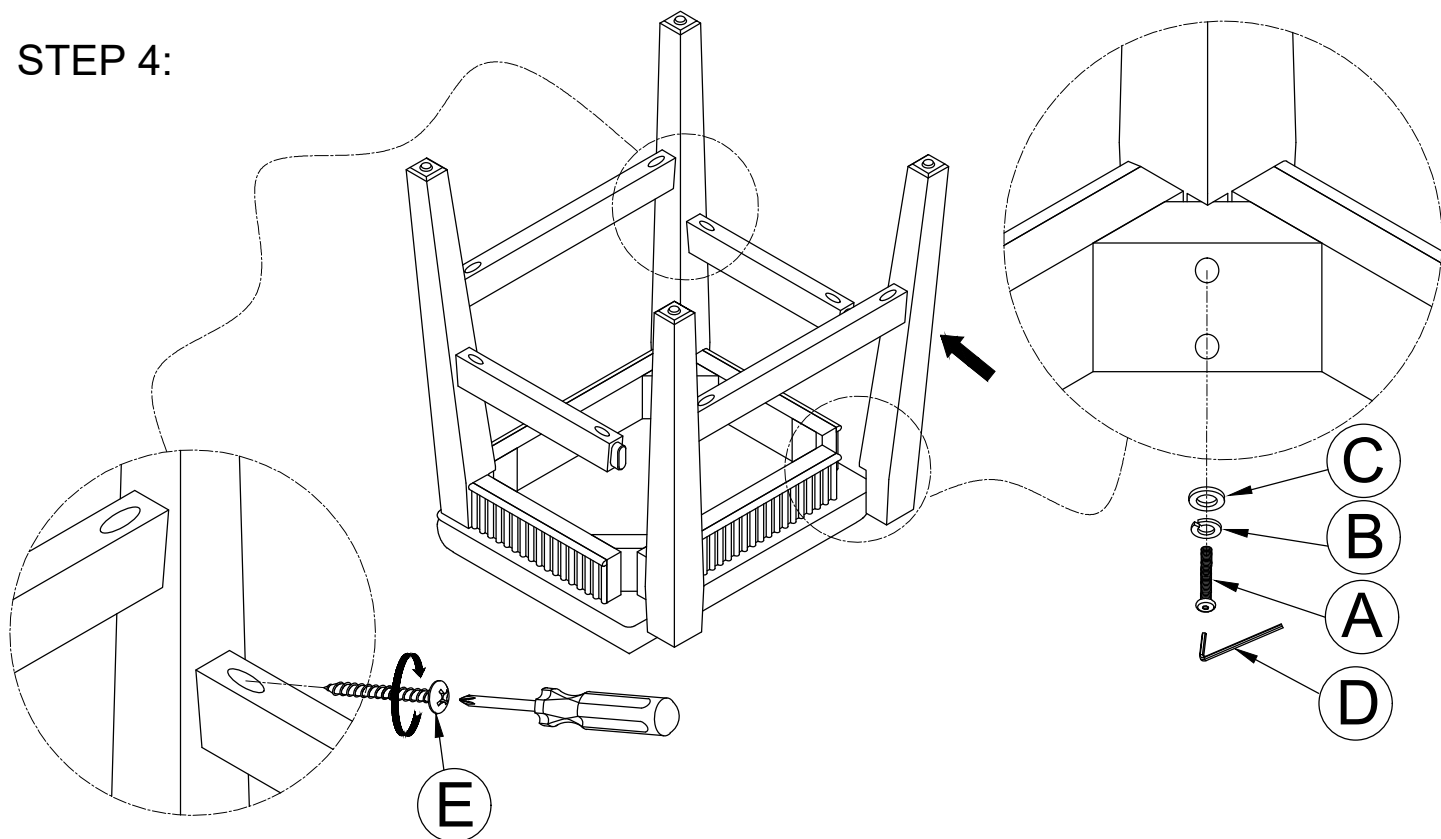

STEP 4:



A	Ø1/4"x57mm		4pcs
C	Ø1/4"x18mm		4pcs
E	M4 x 45mm		4pcs

B	Ø1/4"x11mm		4pcs
D	4mm		1pc

STEP 5:

