



SW 8650 - F/Q/K

1.

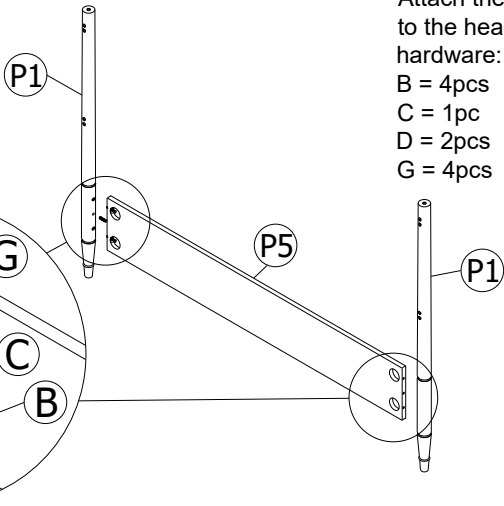


Attach the headboard post (P1)
to the headboard rail (P5) using
hardware:
B = 4pcs
C = 1pc
D = 2pcs
G = 4pcs

2.

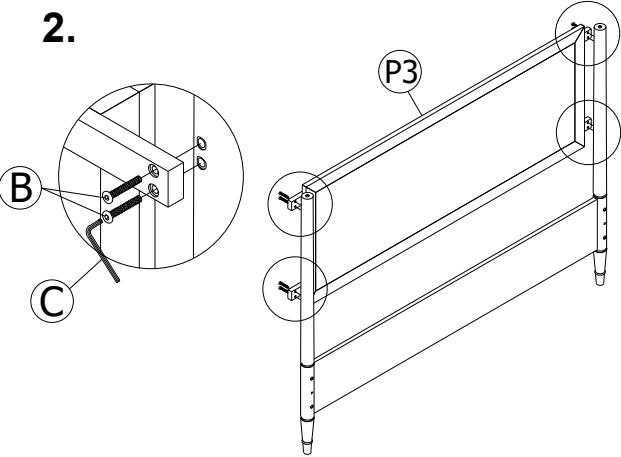


Attach the headboard panel (P3)
to the headboard post (P1) using
hardware:
B = 8pcs
C = 1pc

3.

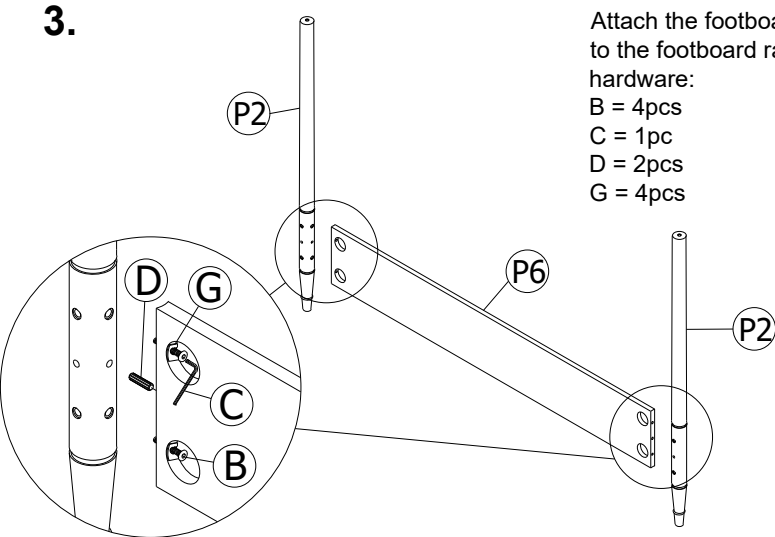

Attach the footboard post (P2)
to the footboard rail (P6) using
hardware:
B = 4pcs
C = 1pc
D = 2pcs
G = 4pcs

4.

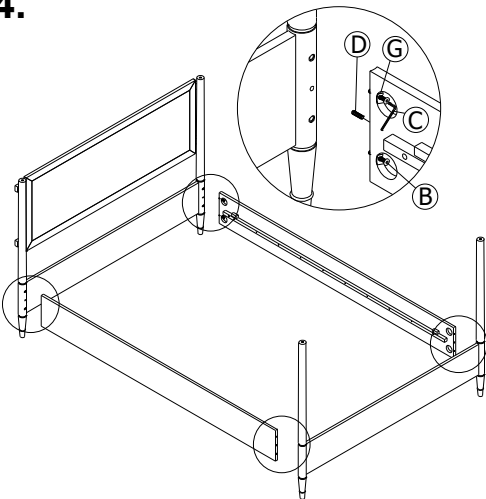

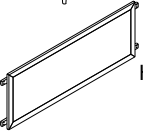









Attach the side rail(P7) to the
headboard post (P1) and
footboard post (P2). You
will need to use hardware:
B = 8pcs
C = 1pc
D = 4pcs
G = 8pcs








WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST


P1		Headboard Post	=	L - 1pc R - 1pc
P2		Footboard Post	=	L-1pc R-1pc
P3		Headboard Panel	=	1pc
P4		Headboard Upper Rail	=	4pcs
P5		Headboard Rail	=	1pc
P6		Footboard Rail	=	1pc
P7		Side Rail	=	2pcs
P8		Bed Slats	=	14pcs
P9		Center Support Rail	=	2pcs
P10		Support Leg	=	4pcs

HARDWARE LIST

A		M6 X 50MM JCBC	=	4pcs
B		M6 X 40MM JCBC	=	24pcs
C		ALLEN KEY M4 WITH BALL	=	1pc
D		Ø8 X 30 MM WOOD DOWEL	=	8pcs
E		M4 X 25MM SCREW	=	8pcs
F		ADJUSTER	=	4pcs
G		U WASHER	=	16pcs




5.

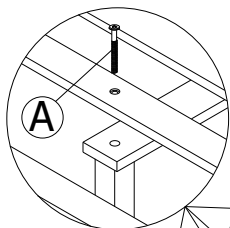


Attach the support leg (P10) to the center support rail (P9) and bed slats (P8) using hardware:
A = 4pcs
C = 1pc


Fix the adjuster (F) to the support leg (P10) using hardware:
F = 4pcs

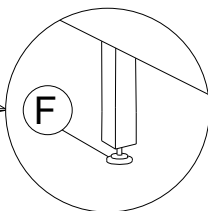

6.

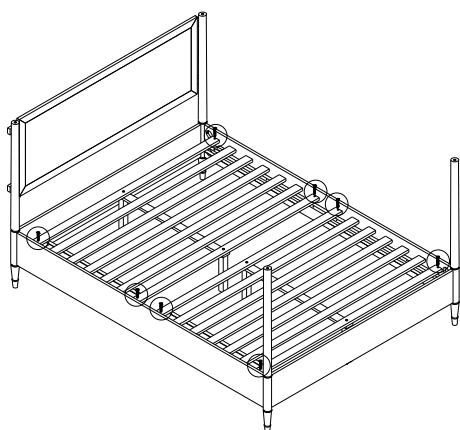


Lay the bed slats (P8) between the side rail (P7) using hardware:
E = 8pcs

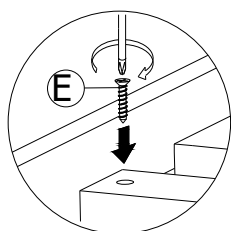


****Apply pressure with your knee to the side rail whilst attaching the slats to ensure that the slats are flush against the inside of side rail****

7.

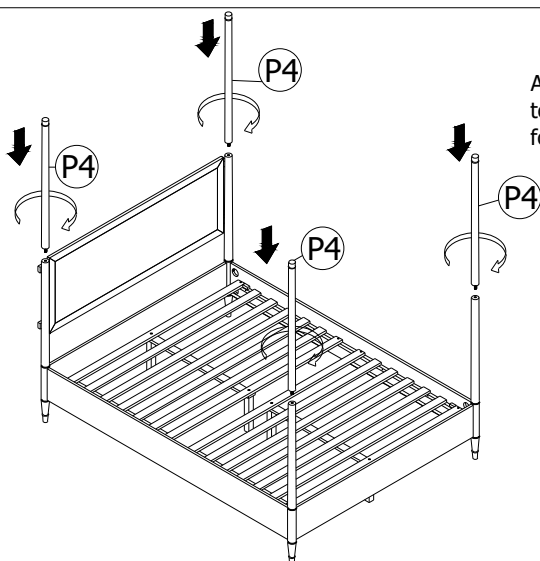

Attach the headboard upper rail (P4) to the headboard post (P1) and footboard post (P2)



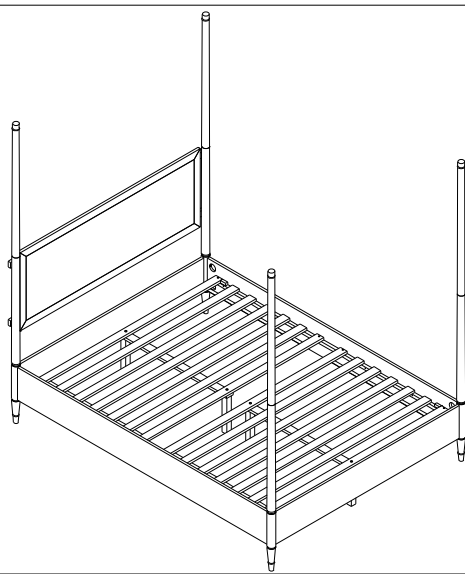







8. FULLY SET UP







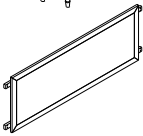


WARNING!!

- Remove hardware from box and sort by size.
- Please check to see that hardware and parts are present prior start of assembly.
- Please follow attached instruction in the same sequence numbered to ensure fast and easy assembly.
- Do not use this bed if any part is broken, torn or missing.
- The assembly of this product requires two people.
- Do not use any power tools as this may damage the frame and will invalidate any claim.

PART LIST

P1		Headboard Post	= L - 1pc R - 1pc
P2		Footboard Post	= L-1pc R-1pc
P3		Headboard Panel	= 1pc
P4		Headboard Upper Rail	= 4pcs
P5		Headboard Rail	= 1pc
P6		Footboard Rail	= 1pc
P7		Side Rail	= 2pcs
P8		Bed Slats	= 14pcs
P9		Center Support Rail	= 2pcs
P10		Support Leg	= 4pcs

HARDWARE LIST

A		M6 X 50MM JCBC	= 4pcs
B		M6 X 40MM JCBC	= 24pcs
C		ALLEN KEY M4 WITH BALL	= 1pc
D		Ø8 X 30 MM WOOD DOWEL	= 8pcs
E		M4 X 25MM SCREW	= 8pcs
F		ADJUSTER	= 4pcs
G		U WASHER	= 16pcs

