


ASSEMBLY INSTRUCTION

SW 8000-90D6D














REAR

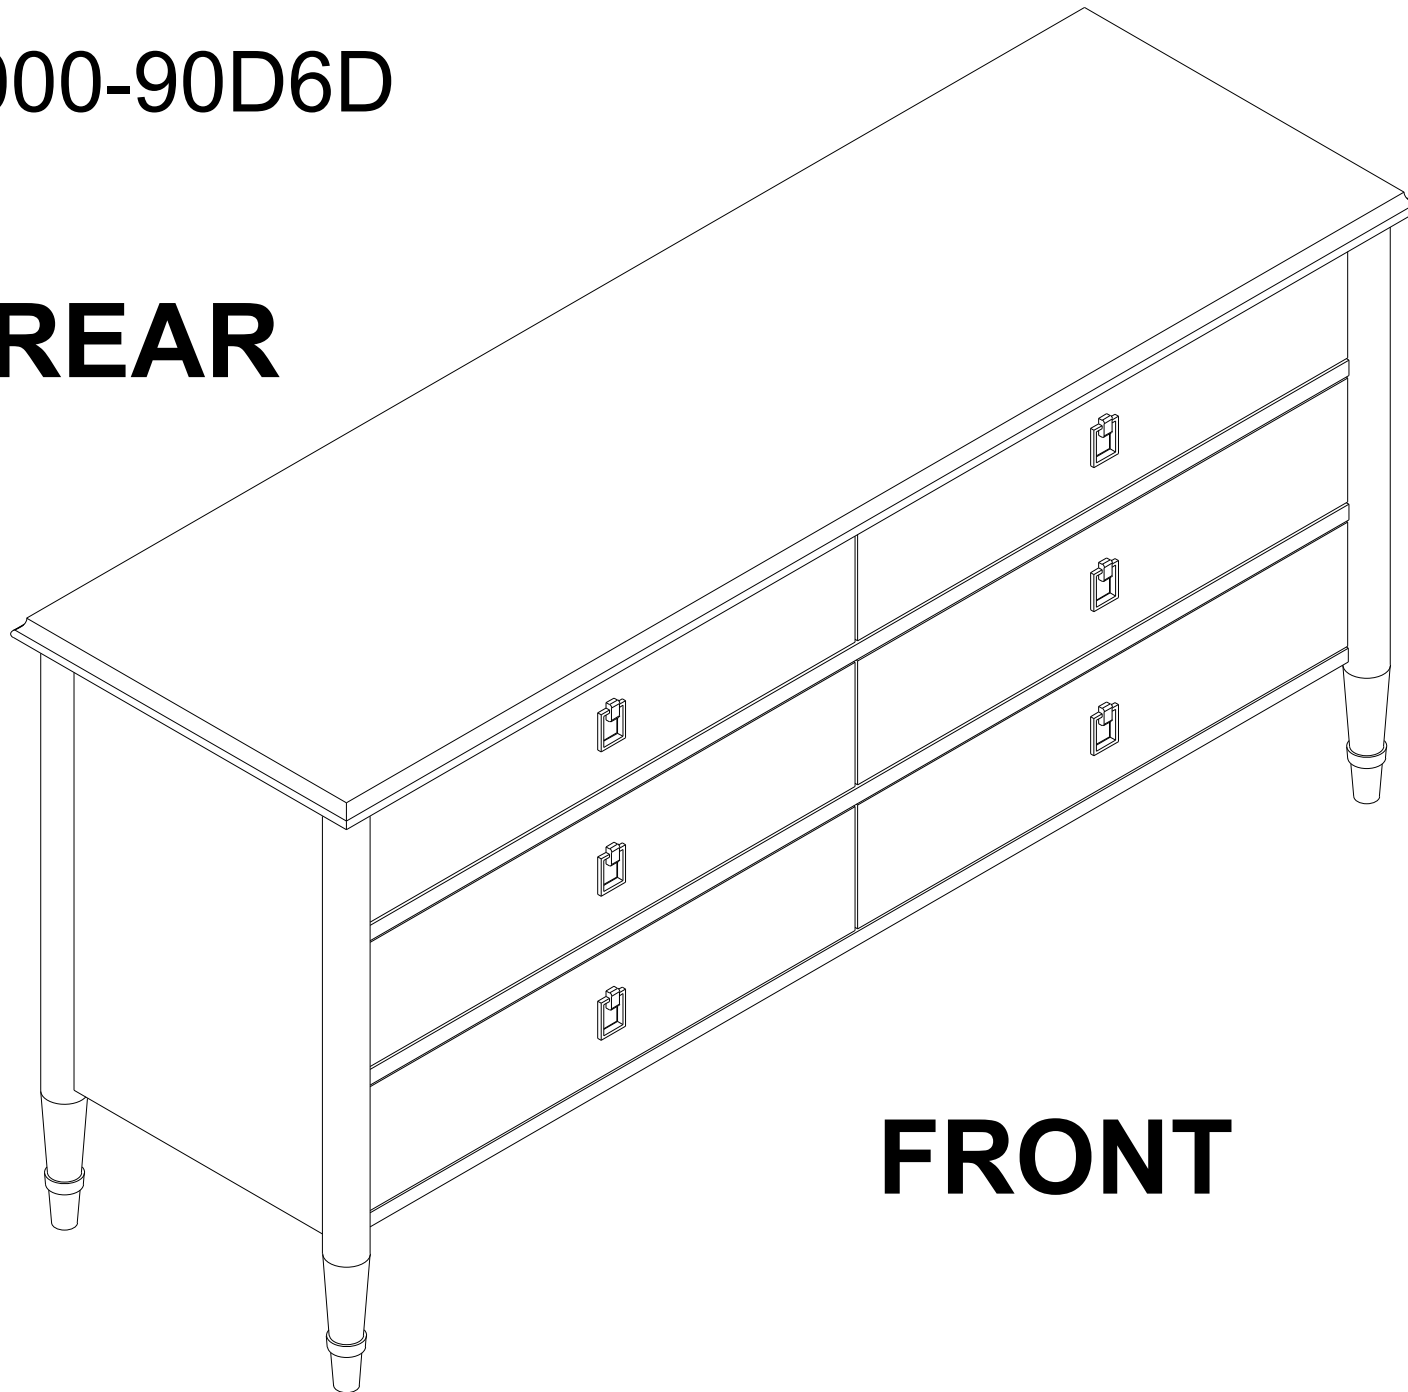






FRONT




PART LIST

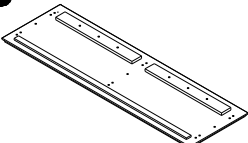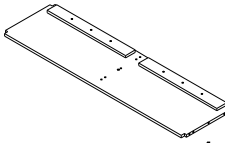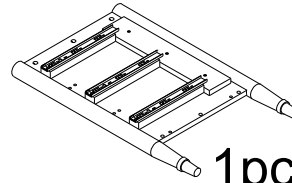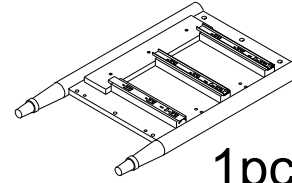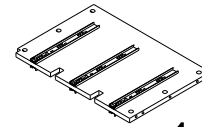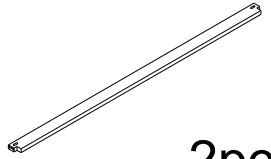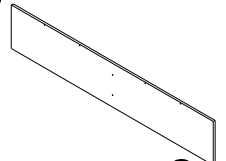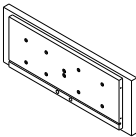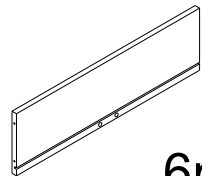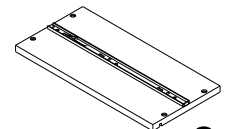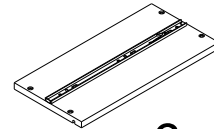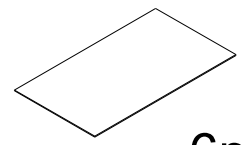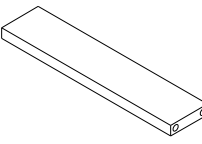1 Top Panel  1pc	2 Bottom Panel  1pc	3 Side Panel(left)  1pc	4 Side Panel(right)  1pc	5 Division  1pc	6 Front Rail  2pcs
7 Back Panel  2pcs	8 Drawer Front Panel  6pcs	9 Drawer Rear Panel  6pcs	10 Drawer Side Panel(left)  6pcs	11 Drawer Side Panel(right)  6pcs	12 Drawer Base Panel  6pcs
13 Drawer Support Rail  6pcs	14 Drawer Support Rail  1pc				


HARDWARE LIST

A MINI FIX SPREADING BOLT 24MM  18pcs	B MINIFIX HOUSING Ø15*12MM  18pcs	C WOOD DOWEL M8*30MM  44pcs	D CSK SCREW M4*30MM  16pcs	E CSK SCREW M4*25MM  48pcs	F HANDLE  6sets
G ADJUSTABLE  1pc	H JCBC M6*40MM  1pc	I ALLEN KEY M4  1pc			

STEP 1

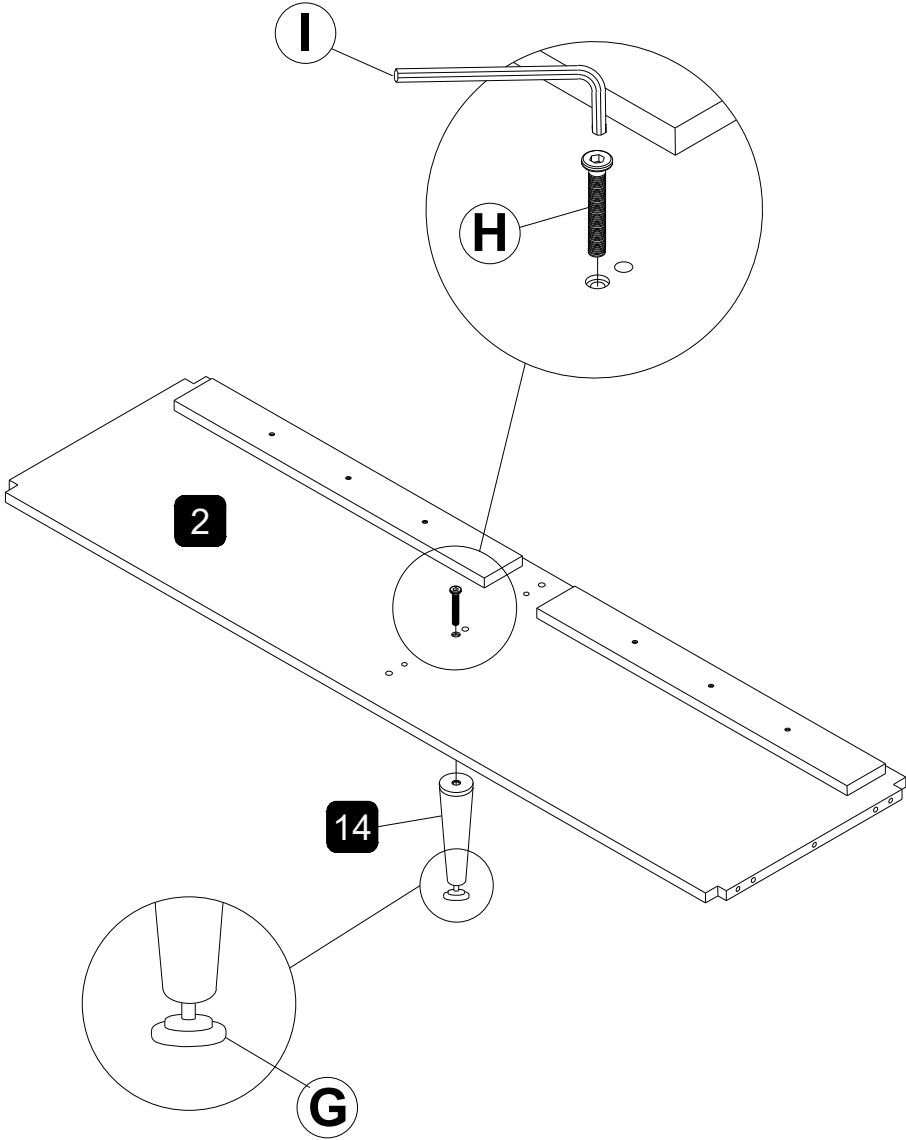


STEP 2

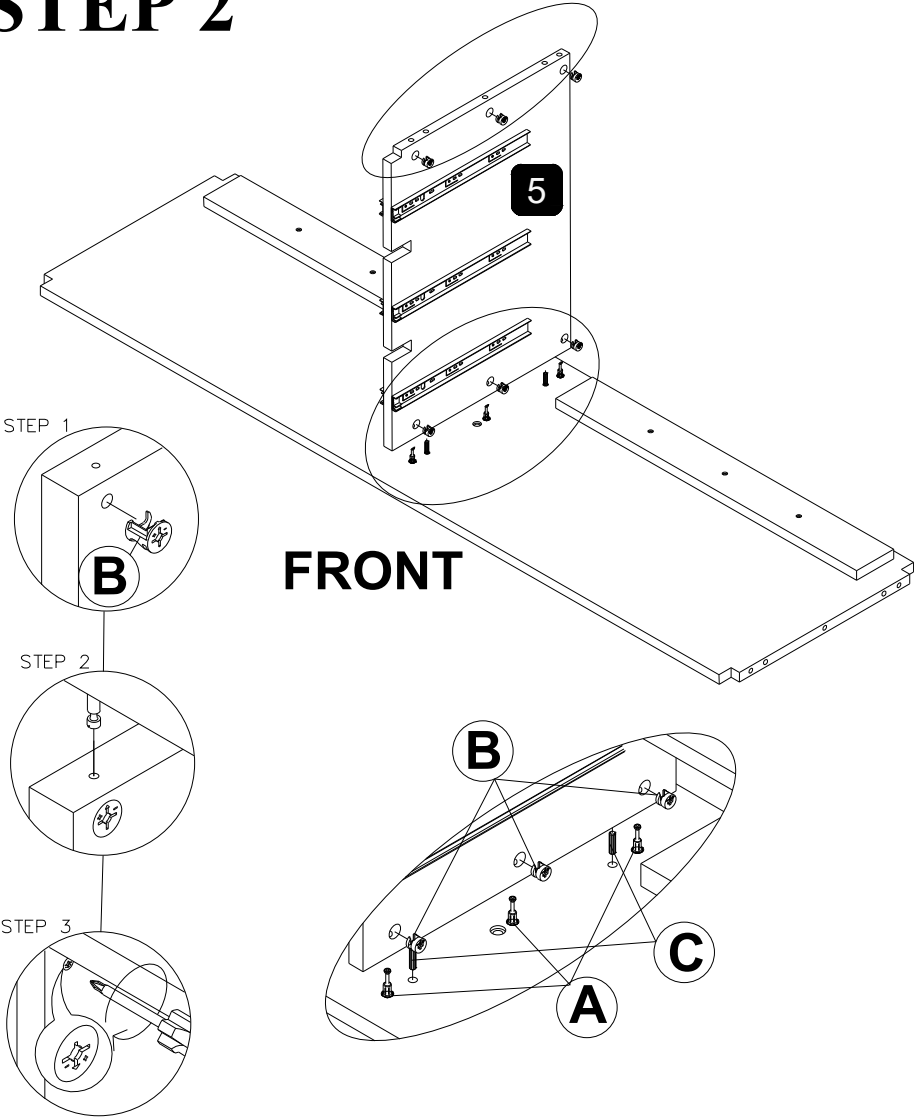



G X 1pc



H X 1pc


I X 1pc


A X 3pcs


B X 6pcs


C X 2pcs



STEP 3

Diagram illustrating the assembly of the back panel (2) onto the frame (5). The back panel is shown being aligned with the frame. A screwdriver is used to secure the back panel to the frame using screws (3). Callout B shows a screw being inserted into a hole in the back panel. Callout C shows a screw being inserted into a hole in the frame. Callout D shows a screw being inserted into a hole in the back panel. Callout E shows a screw being inserted into a hole in the frame.



D X 2pcs


STEP 4

B

C






D

4





D X 2pcs

STEP 5

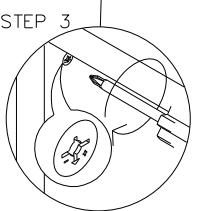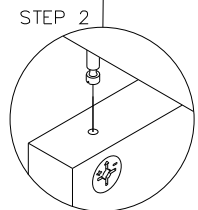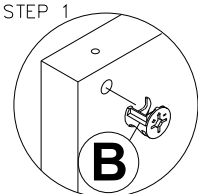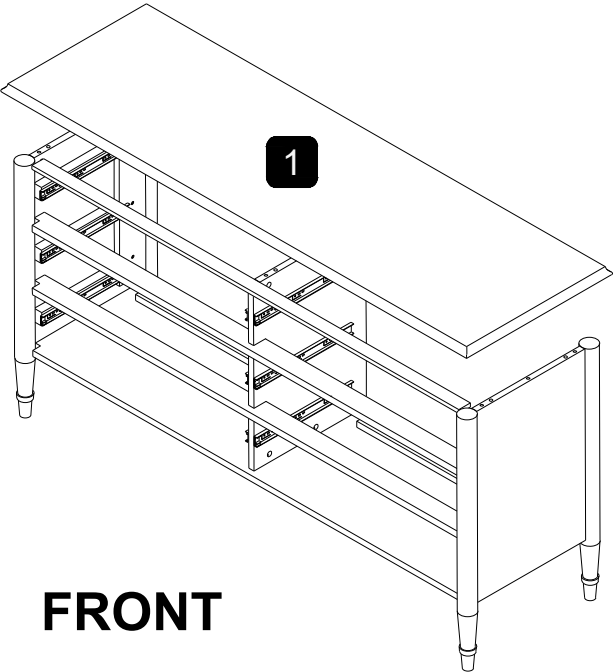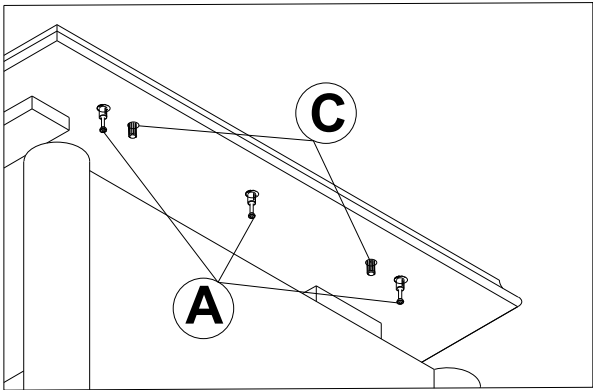


STEP 6

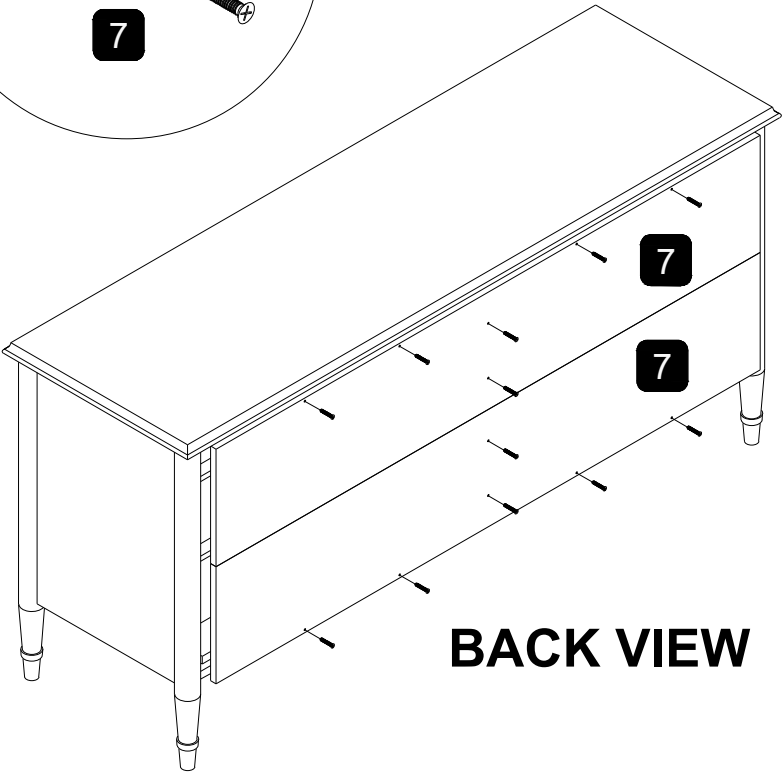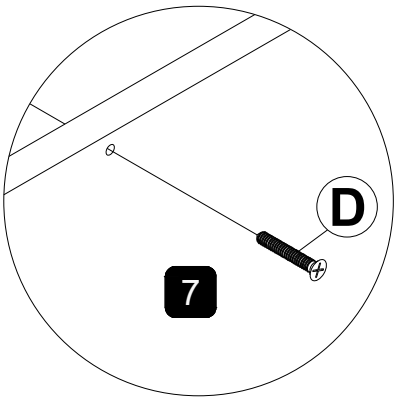

A X 9pcs




C X 6pcs



D X 12pcs


STEP 7


DRAWER X 6

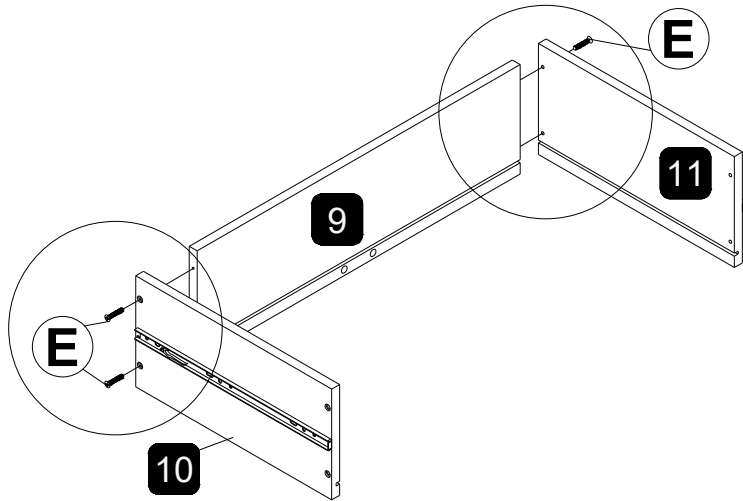

STEP 8


DRAWER X 6

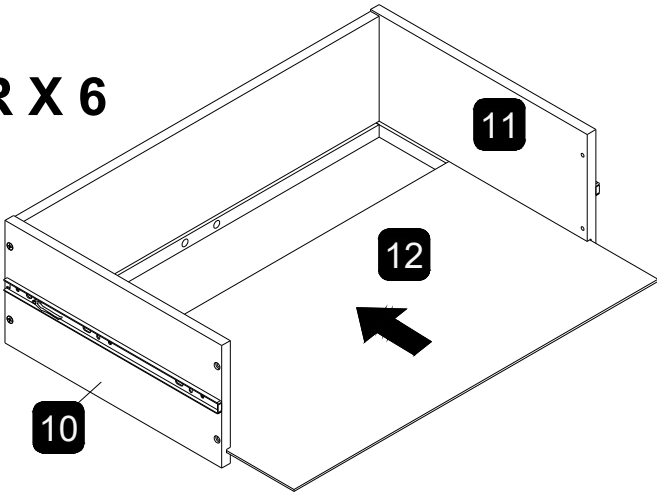

 E X 24pcs							
--	--	--	--	--	--	--	--

STEP 9



DRAWER X 6

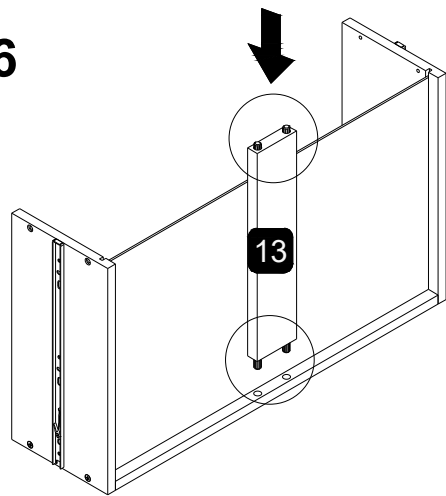

C X 24pcs

STEP 10

DRAWER X 6

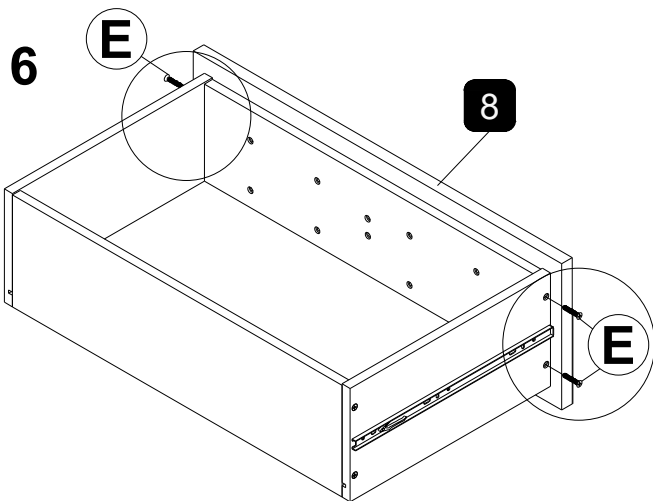


E X 24pcs




STEP 11


DRAWER X 6

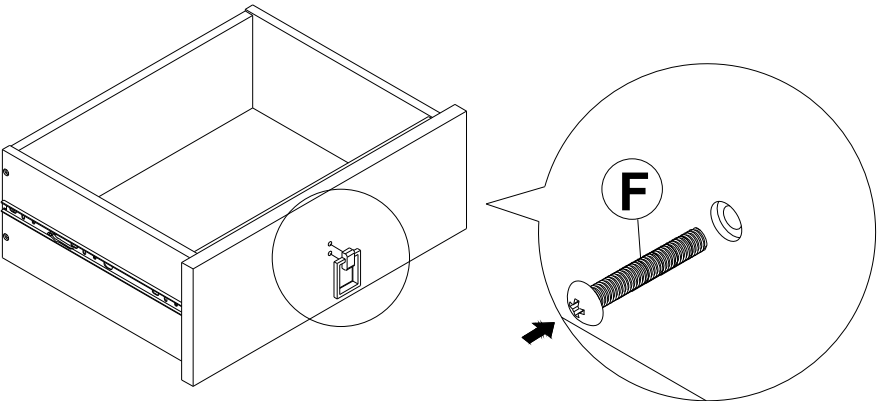

F X 6sets



STEP 12

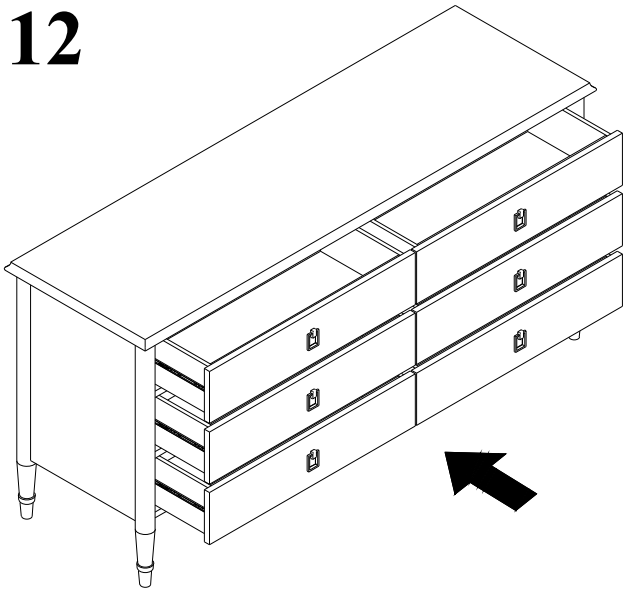

ASSEMBLY COMPLETE

**CONTINUE TO ASSEMBLY
ANTI TIPPING KITS**

