

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (Not included): Screwdriver

CARE AND MAINTENANCE


Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

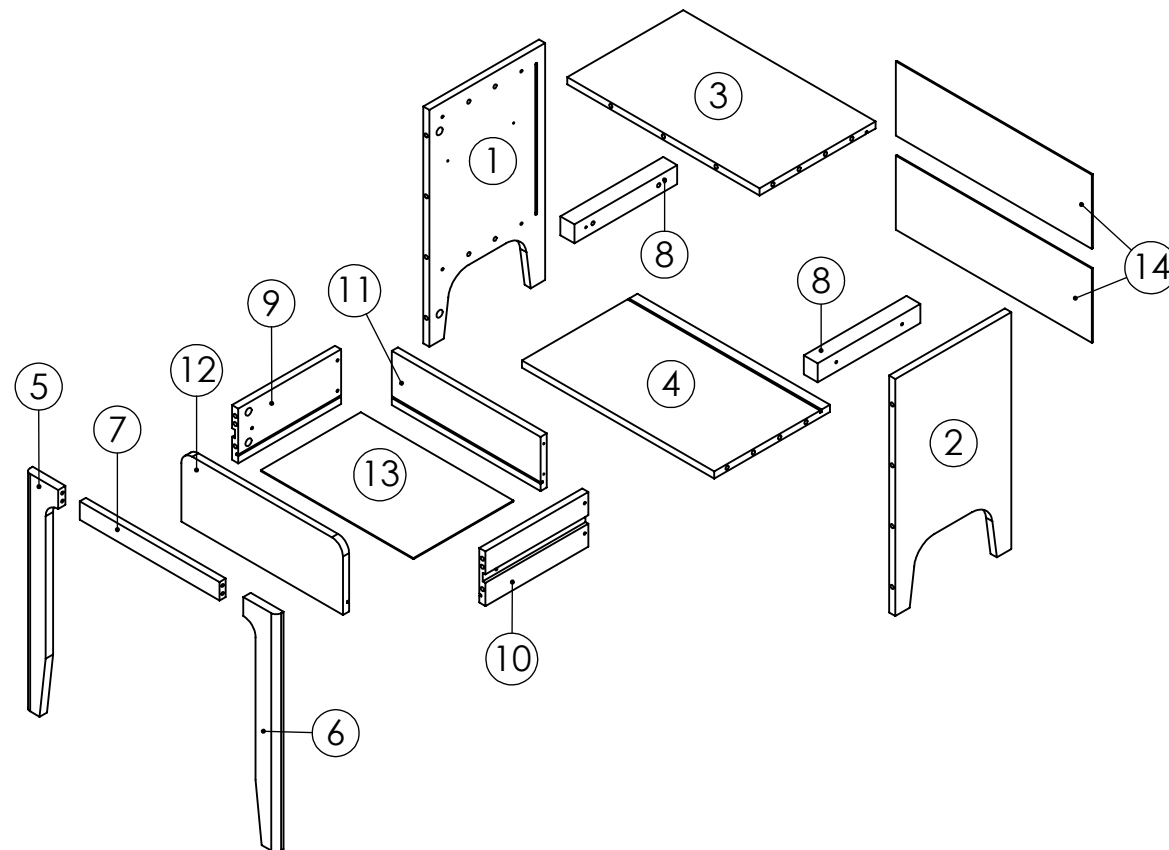

Model# NST3105

Product Dimensions: W 19.69" X D 11.81" X H 19.69"

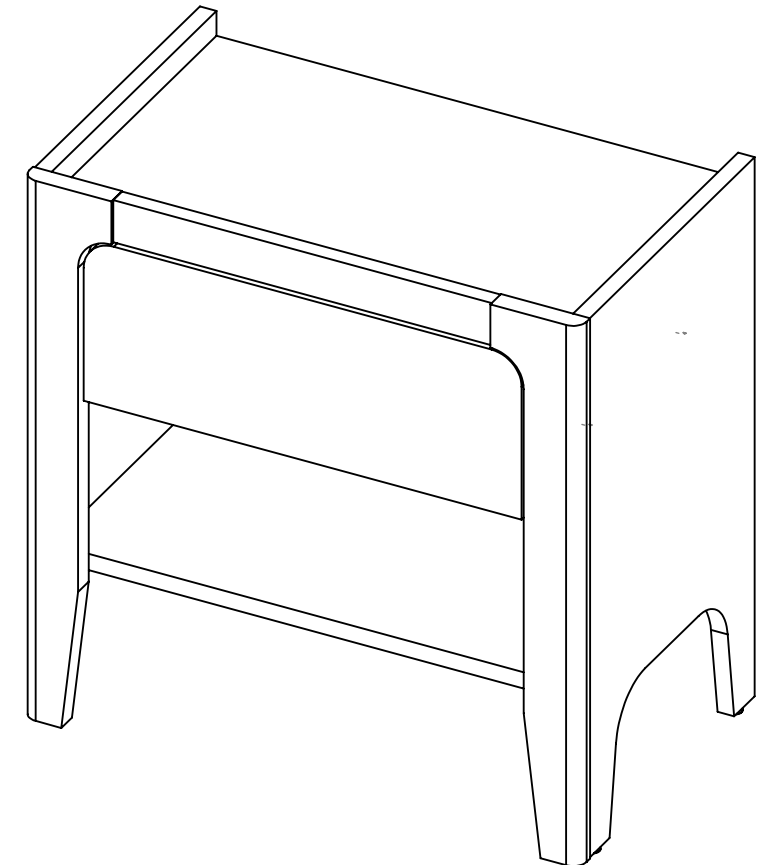

WARNING

WIGHT CAPACITY

Top load Limit: 14 lbs












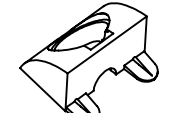
Drawer load Limit: 4 lbs

Shelf Load Limit : 11 Lbs

Warning : Do not stand on the product

Warning : Do not over torque bolts

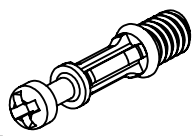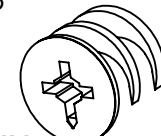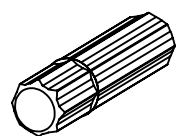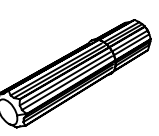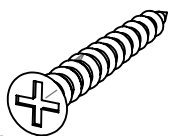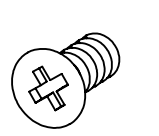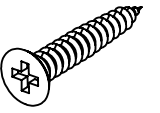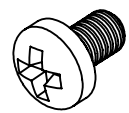Hardware List

<div>HW1X18</div> <div></div> <div>Ø 6x32 MM</div>	<div>HW2X18</div> <div></div> <div>Ø 15x12 MM</div>	<div>HW3X15</div> <div></div> <div>Ø 8x32 MM</div>	<div>HW4X4</div> <div></div> <div>Ø 6x30 MM</div>	<div>HW5X8</div> <div></div> <div>Ø 7x32 MM</div>	<div>HW6X4</div> <div></div> <div>Ø 5x8.5 MM</div>
<div>HW7X8</div> <div></div> <div>Ø 4x19 MM</div>	<div>HW8X2</div> <div></div> <div>Ø 4x10 MM</div>	<div>HW9X12</div> <div></div> <div>Ø 20 MM</div>	<div>HW10X1</div> <div></div> <div>246 MM</div>	<div>HW11X1</div> <div></div> <div>468 MM</div>	<div>HW12X8</div> <div></div> <div></div>


Part List & HW

piece	Description	Qty	Carton Call
1	Left Side Panel	1	1 Of 1
2	Right Side Panel	1	1 Of 1
3	Top Panel	1	1 Of 1
4	Bottom Panel	1	1 Of 1
5	Left Front Pillar	1	1 Of 1
6	Right Front Pillar	1	1 Of 1
7	Top Support	1	1 Of 1
8	Close	2	1 Of 1
9	Left Side Drawer	1	1 Of 1
10	Right Side Drawer	1	1 Of 1
11	Back Drawer	1	1 Of 1
12	Front Drawer	1	1 Of 1
13	Base Drawer	1	1 Of 1
14	Back Panel	2	1 Of 1


Piece	Description	Qty	Carton call
HW1	Cambolt	18	1 Of 1
HW2	Camlock	18	1 Of 1
HW3	Wooden Dowel Big	15	1 Of 1
HW4	Wooden Dowel Small	4	1 Of 1
HW5	Screw M7 x 32 mm	8	1 Of 1
HW6	Screw M5 x 12 mm	4	1 Of 1
HW7	Screw M4 x 19 mm	8	1 Of 1
HW8	Bolt M4 x 10 mm	2	1 Of 1
HW9	Cover Cap Sticker	12	1 Of 1
HW10	Mini Slide Runner	1	1 Of 1
HW11	List "H"	1	1 Of 1
HW12	Plastic Stopper	8	1 Of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

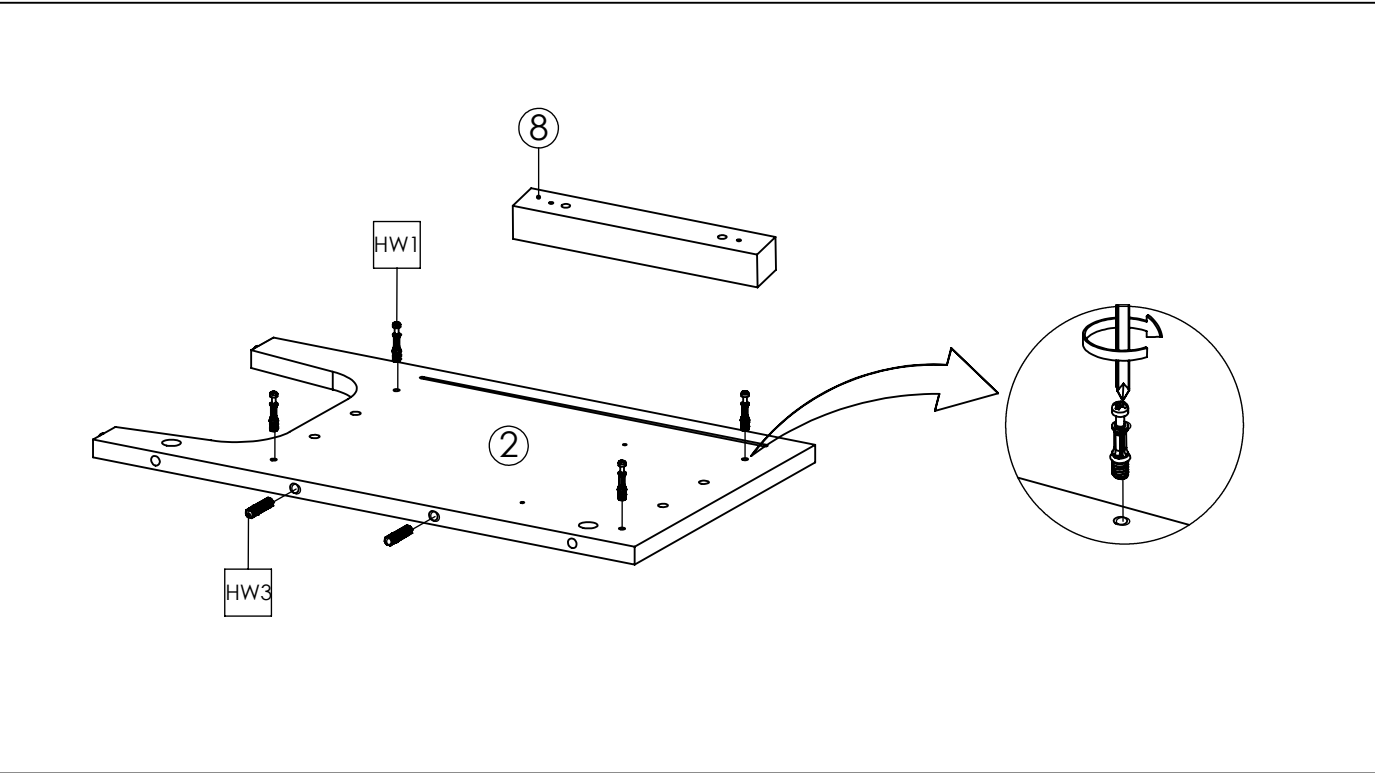


STEP1: Insert Cambolt (HW1) and Wooden Dowel Big (HW3) into Right Side Panel (2), Close (8).

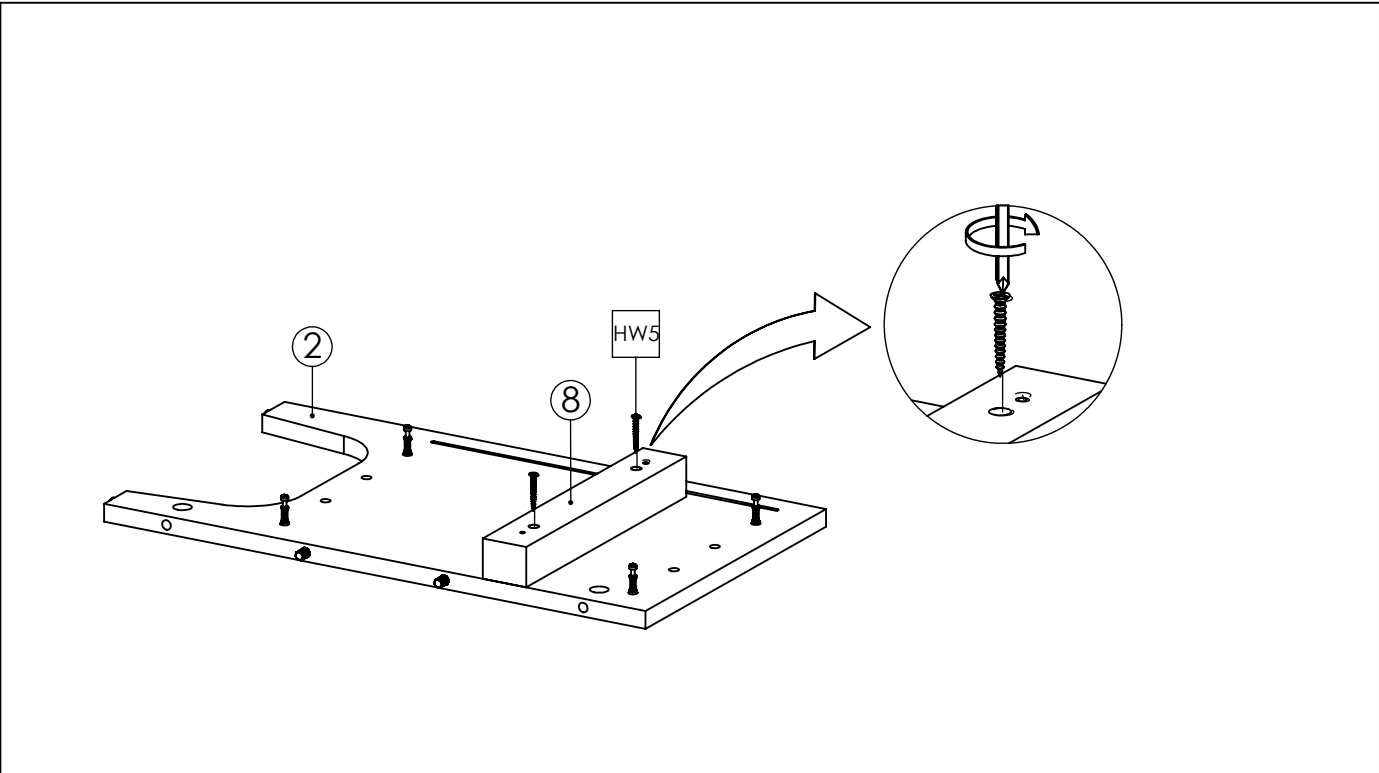


STEP2: Attach Klose (8) into Right Side Panel (2) Secure With Screw M7 x 32 (HW5) and tighten it using Screwdriver.

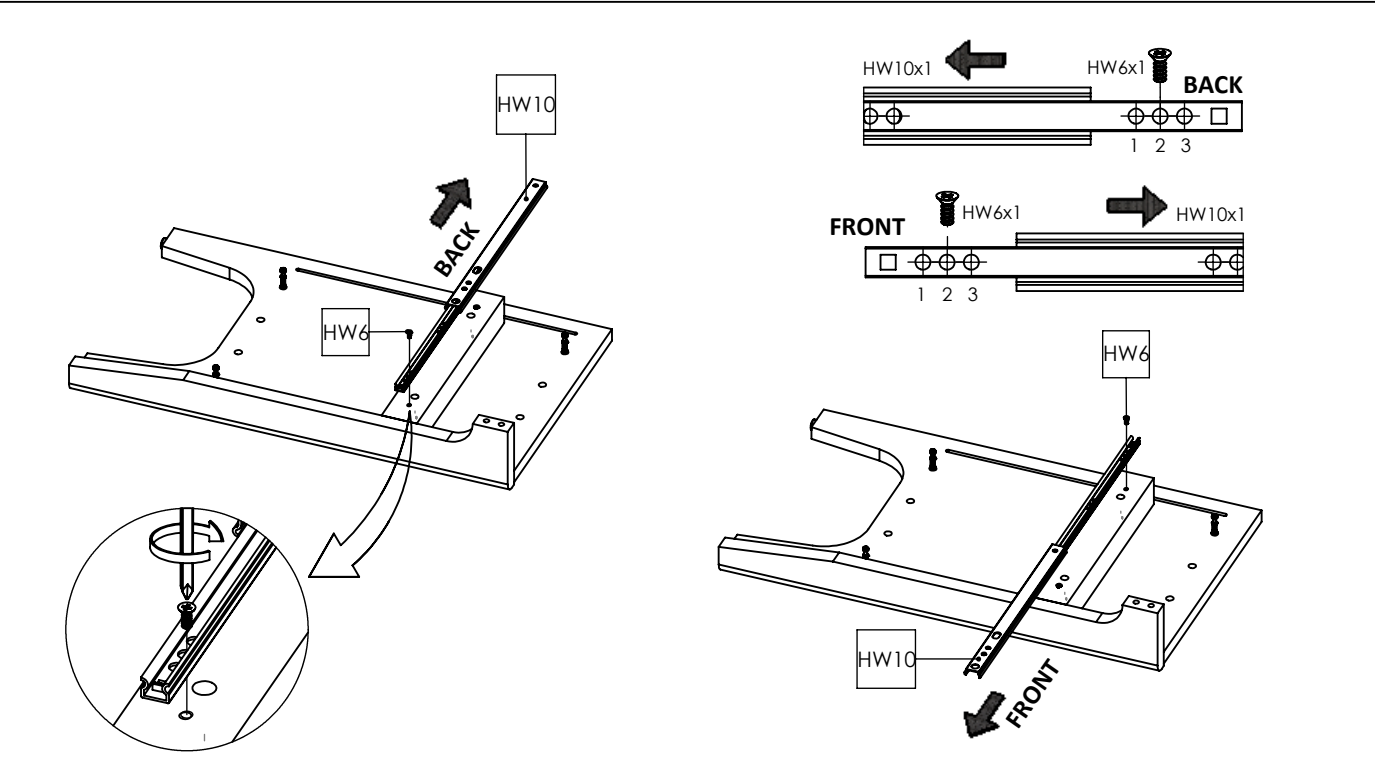


STEP3: Install the mini slide runner (HW10) into position as shown in picture. Secure with screws M5x8,5mm (HW6).

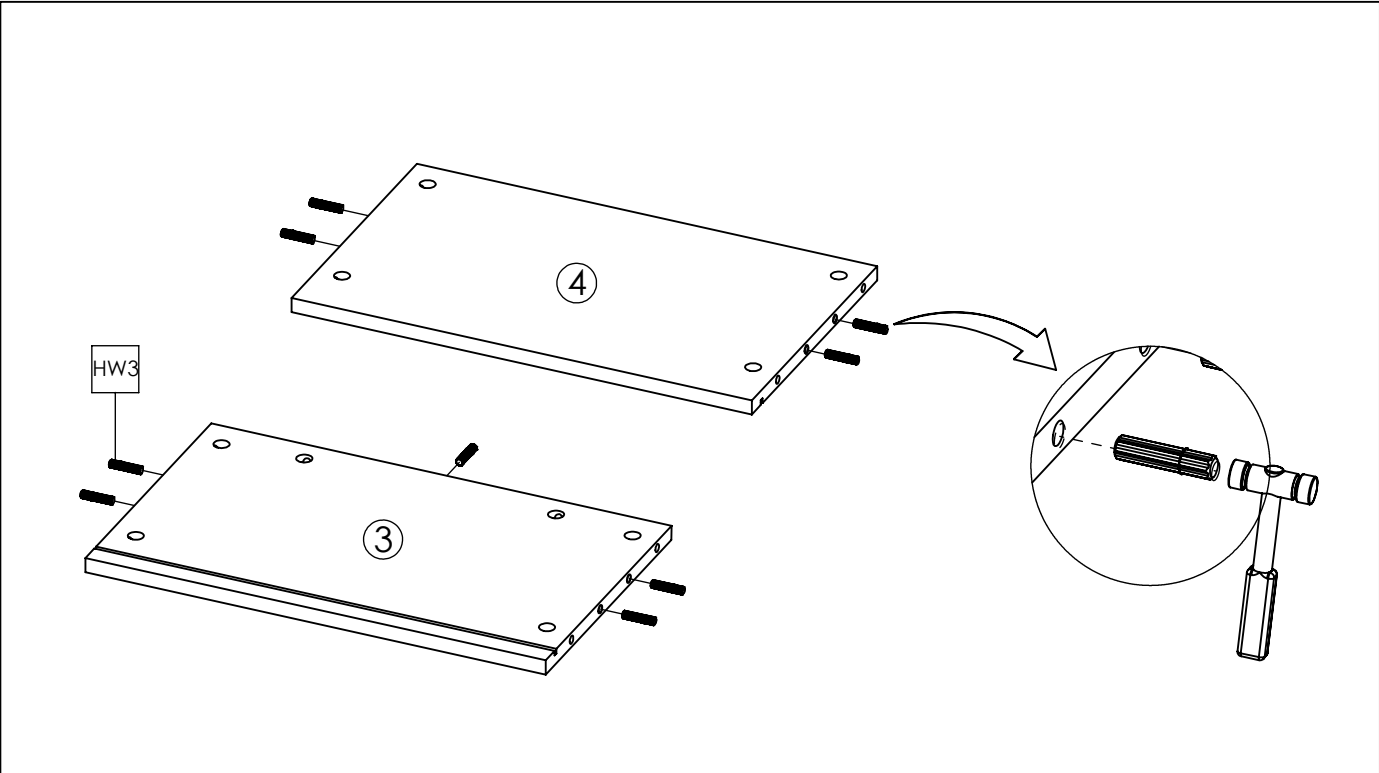


STEP4: Insert Wooden Dowel Big (HW3) into Top Panel and Bottom Panel (3 & 4)

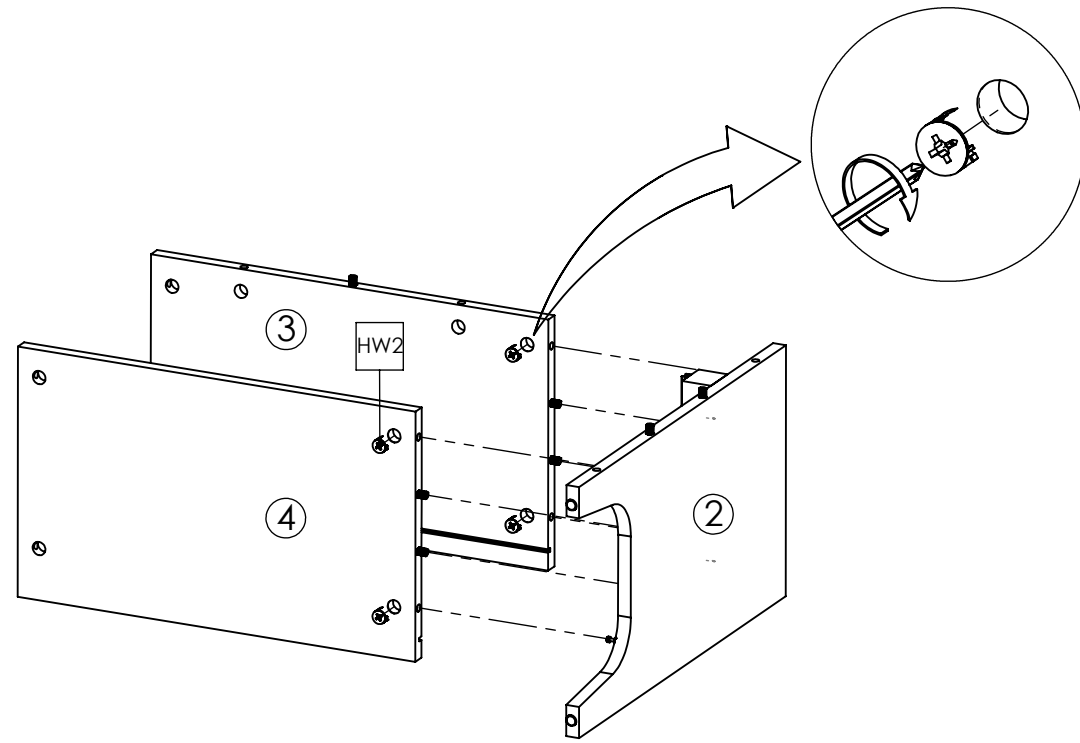


STEP5: Attach Right Side Panel (2) into Top Panel and Bottom Panel (3 & 4) Secure with Camlock (HW2) and tighten it using screwdriver.

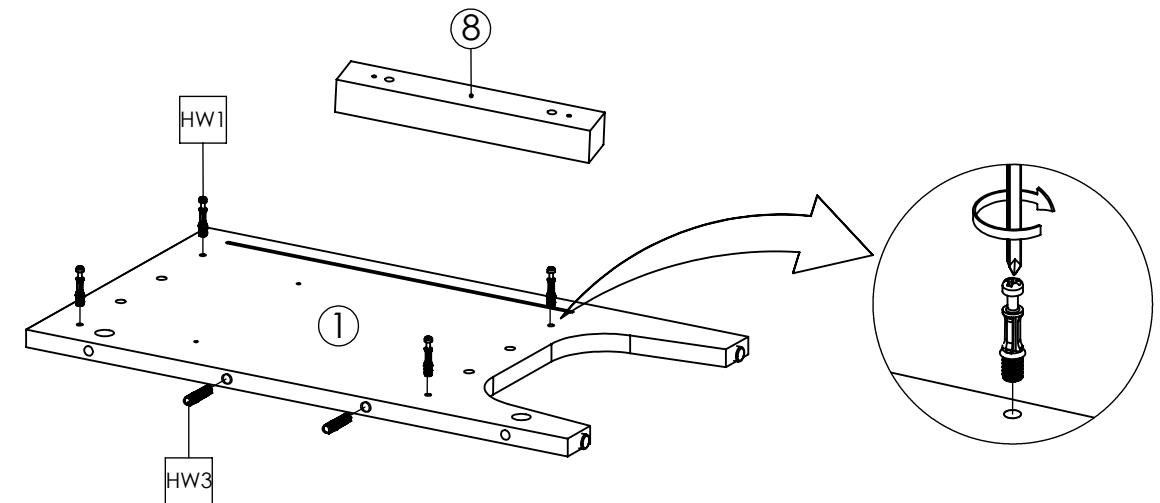


STEP6: Insert Cambolt (HW1) and Wooden Dowel Big (HW3) into left Side Panel (1), Close (8).

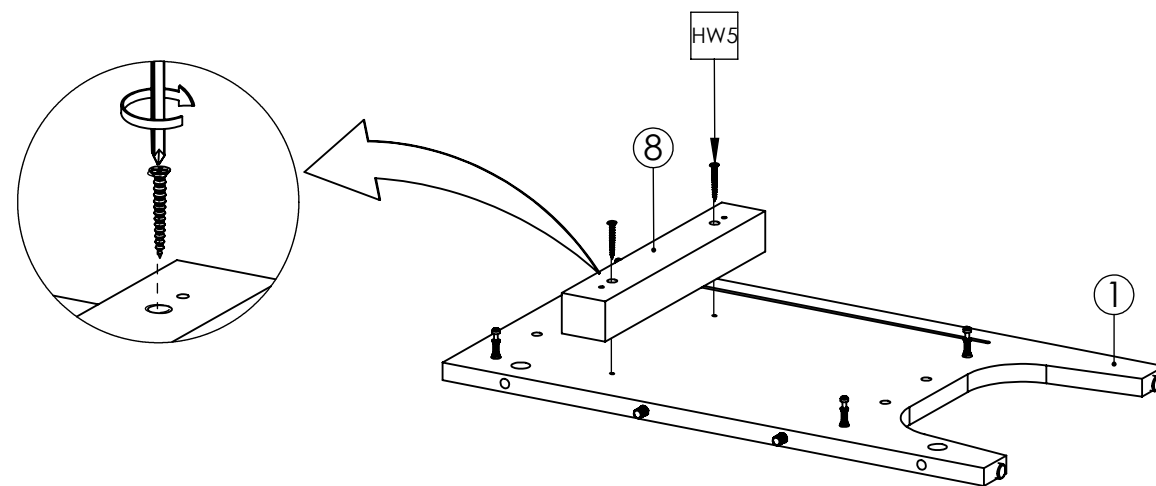


STEP7: Attach Close (8) into Right Side Panel (2) Secure With Screw M7 x 32 (HW5) and tighten it using Screwdriver.

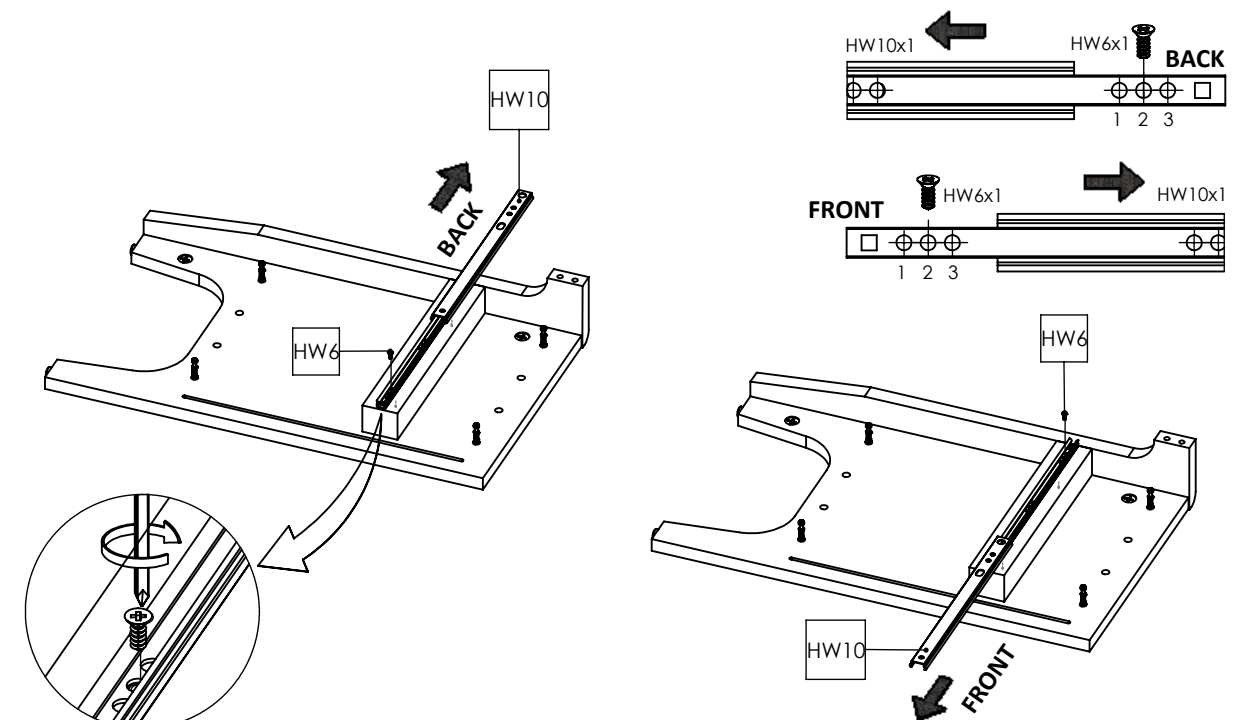


STEP8: Install the mini slide runner (HW10) into position as shown in picture. Secure with screws M5x8,5mm (HW6).

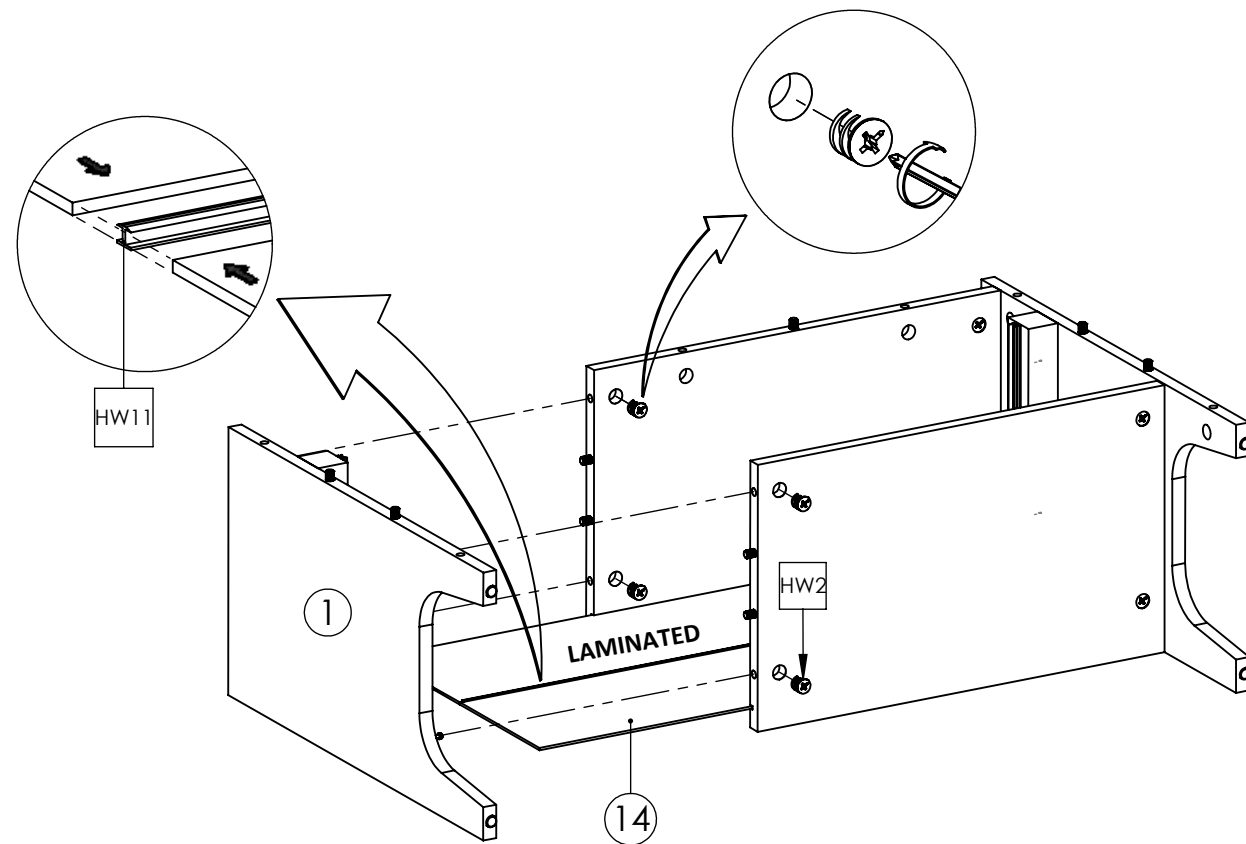


STEP9: Insert Back panel 2x (14) and List "H" (HW11), then put Left side panel (1) then tighten camlock (HW2) using screwdriver.

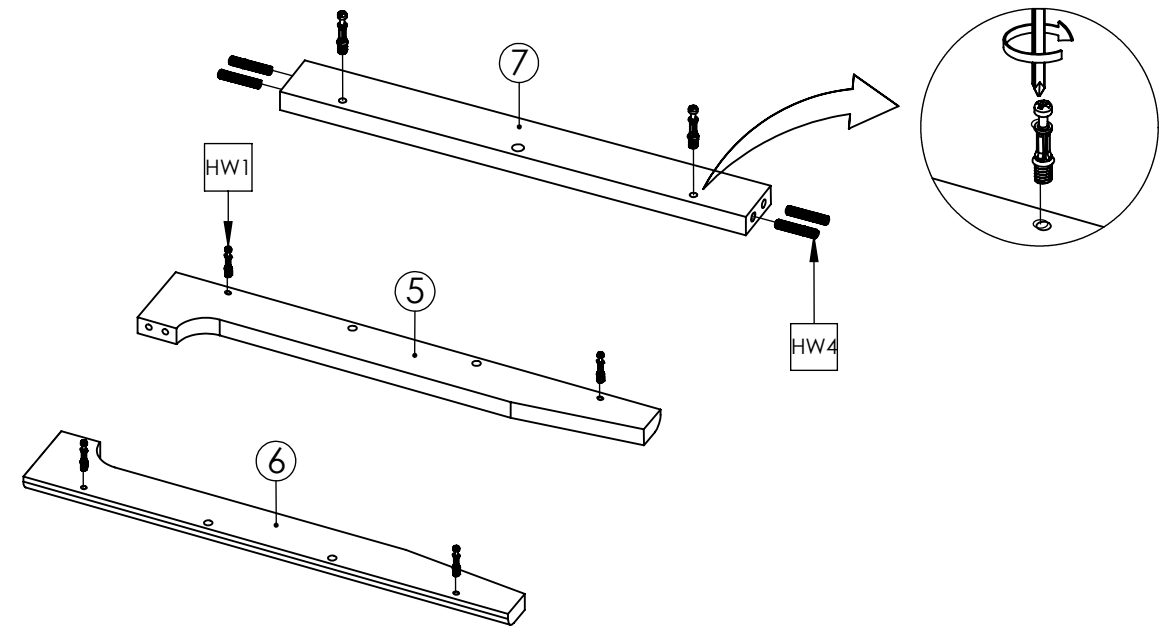





STEP10: Insert Cambolt (HW1) into Side Front Pillar (5 & 6), Insert Wooden Dowel Small (HW4) into Top Support (7), Klose (8).

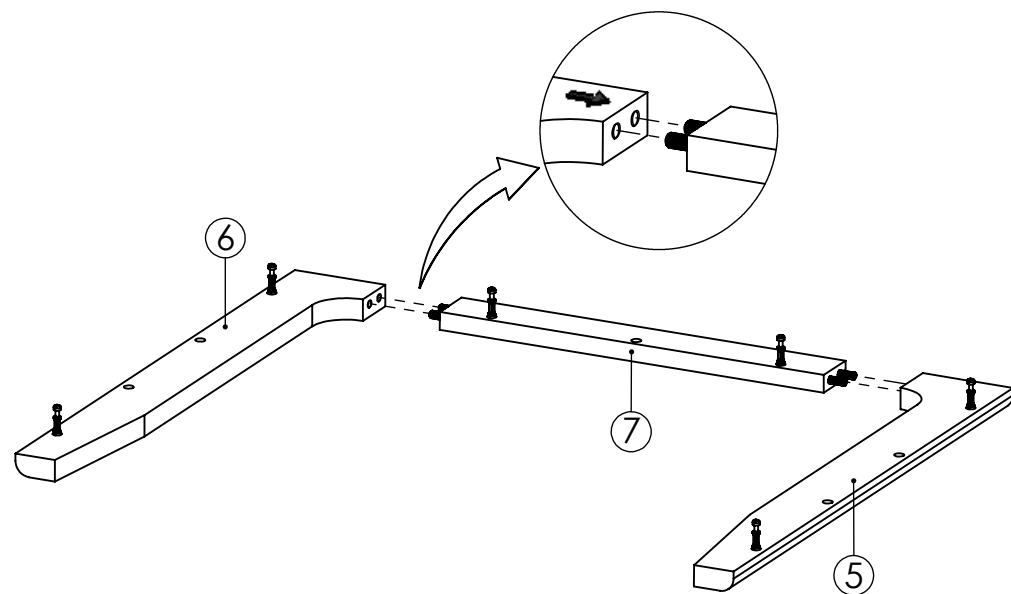


STEP11: Attach Side Front Pillar (5 & 6) into Top Support (7)

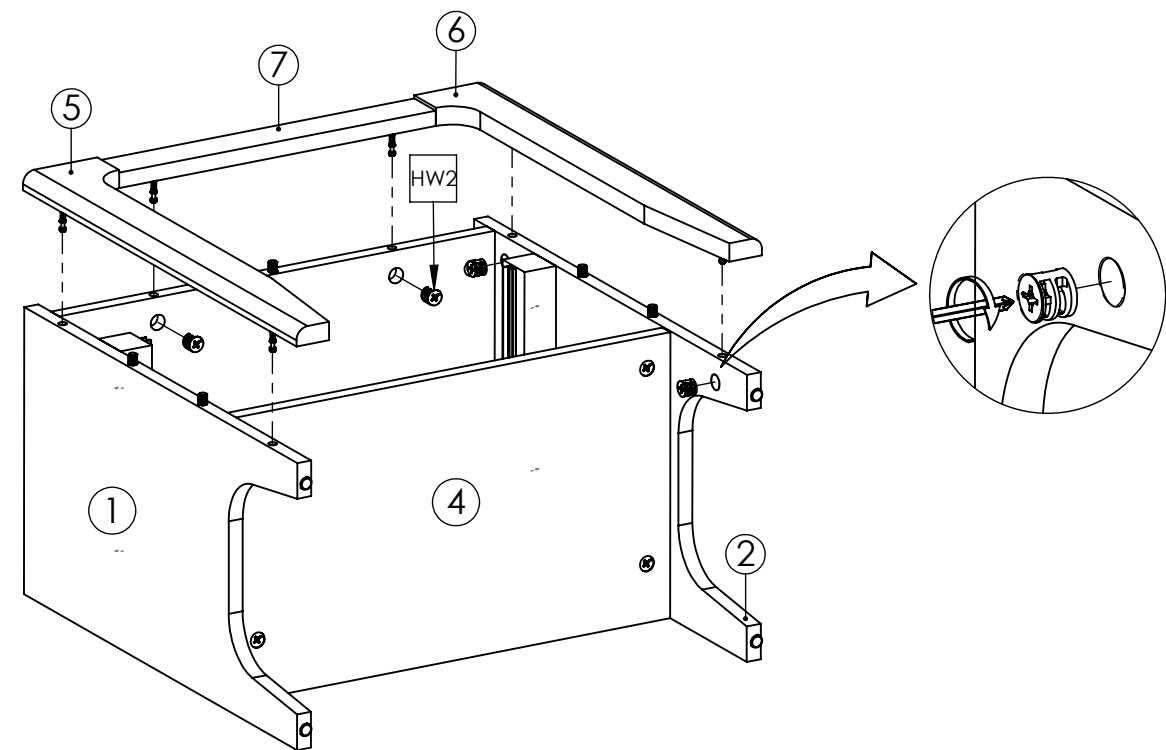

STEP12: Attach Side Front Pillar (5 & 6) and Top Support (7) into Side Panel (1 & 2) and tighten Camlock (HW2) using Screwdriver.

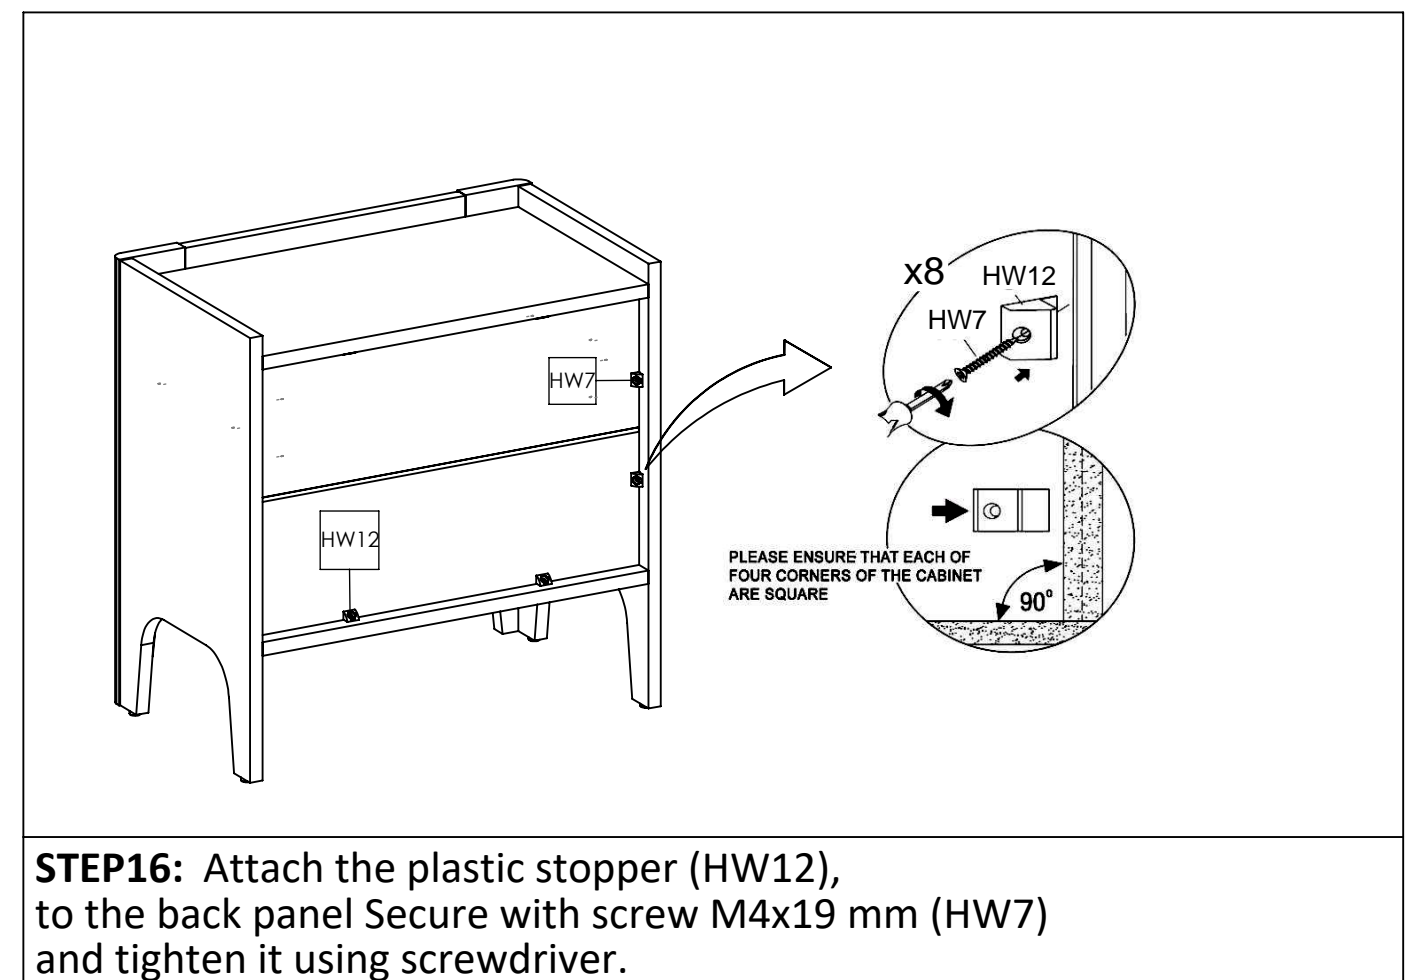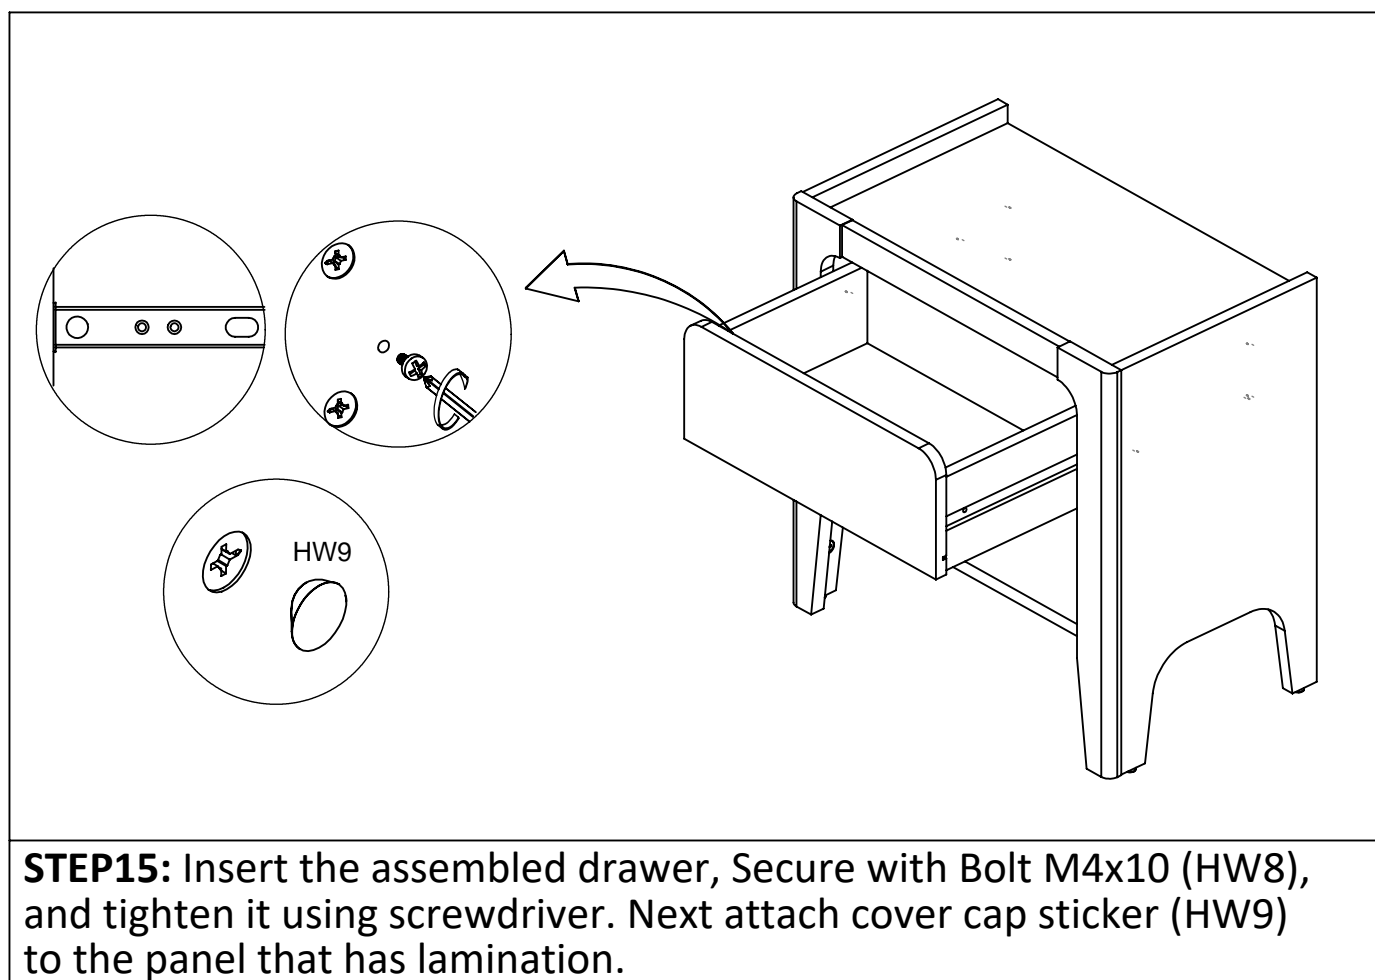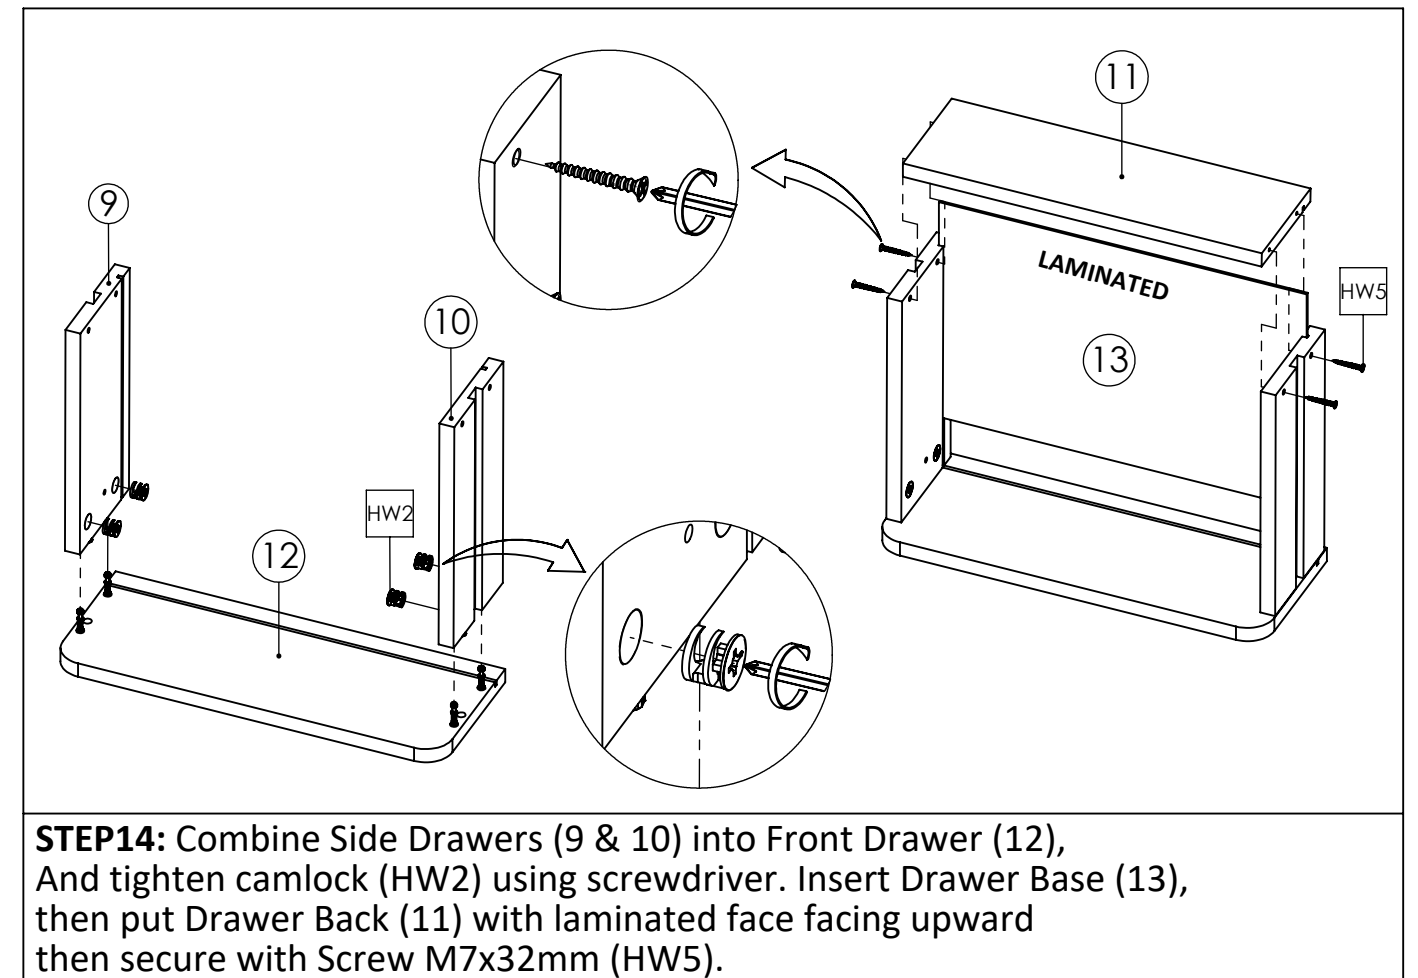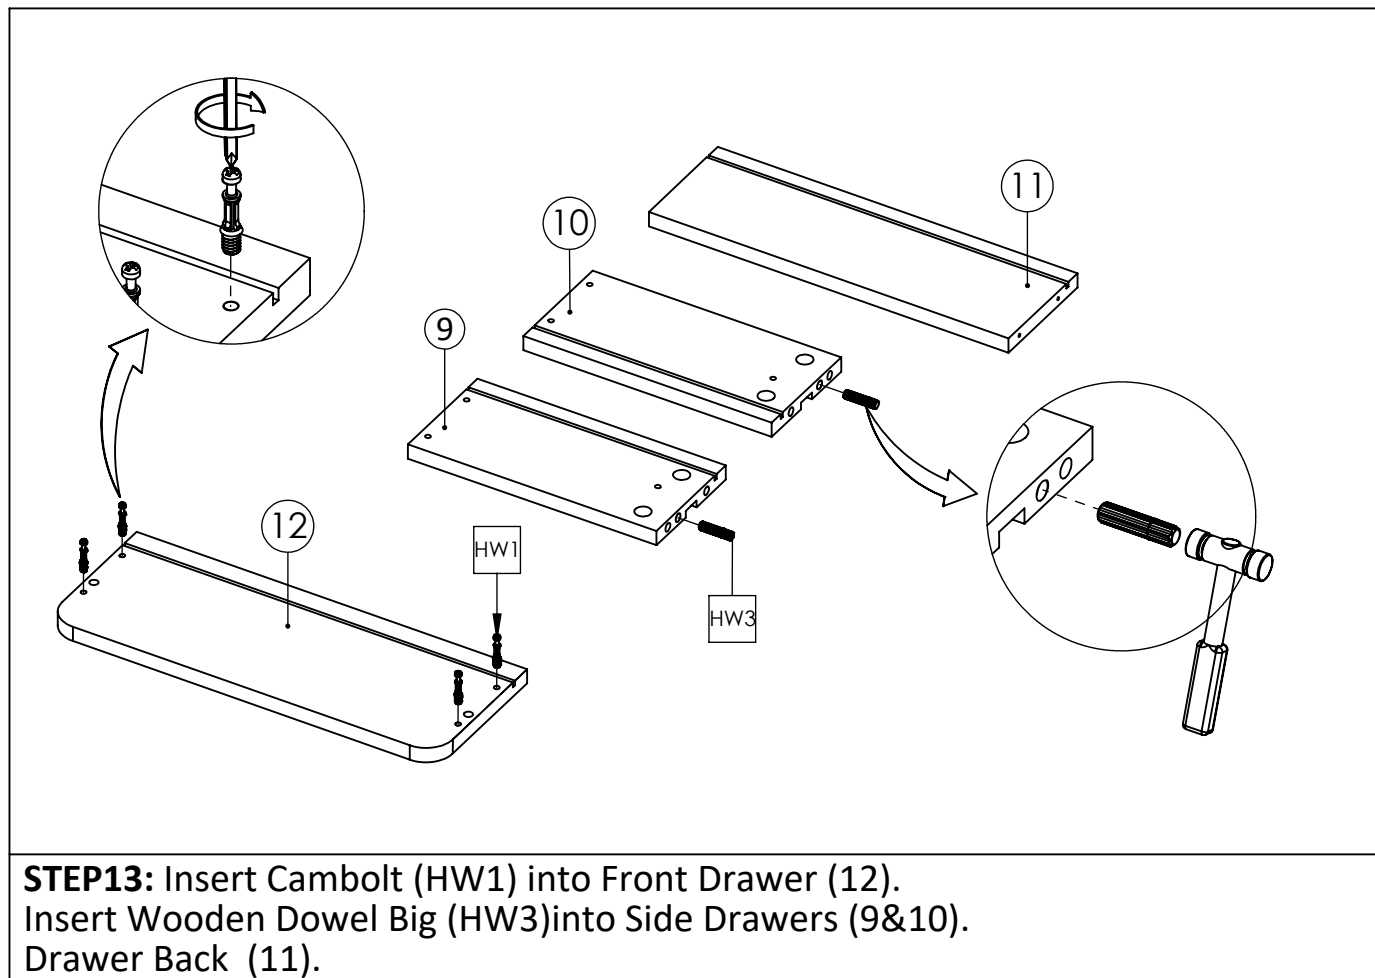

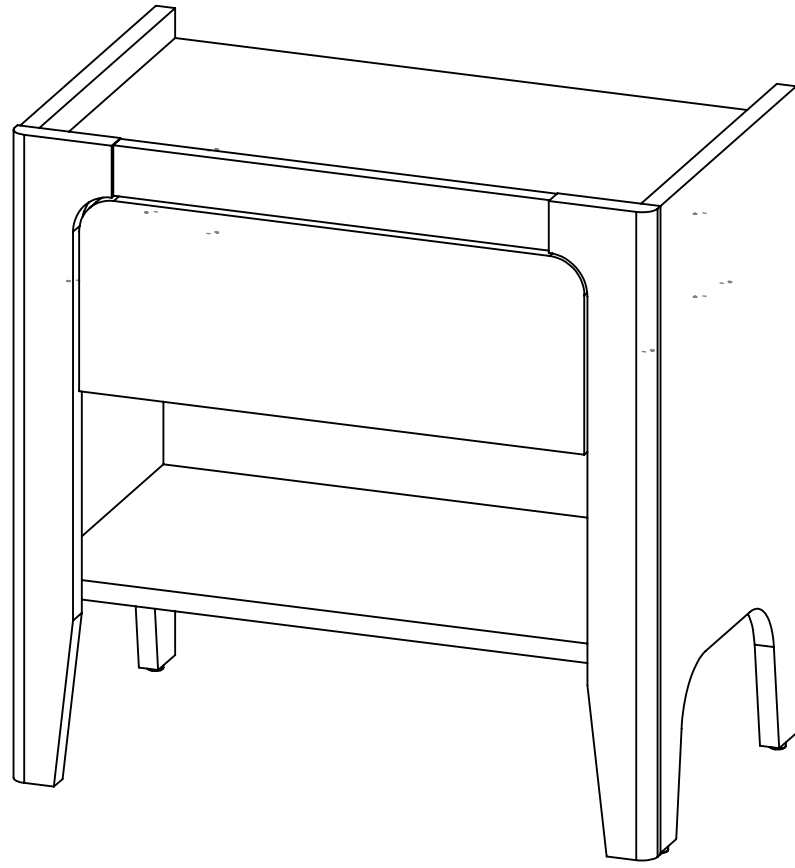

STEP17: Assembly is completed.