


RIVERSIDE OAK WOOD 3 DRAWER NIGHTSTAND

DESIGN# SFV9759

Assembly Instructions

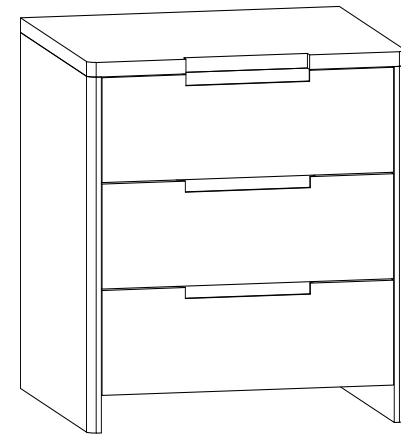

Need help?
Feel free to contact us via email or call
if you have any specific questions!

contact us:
cs@safavieh.com
866-422-9070


SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up, including your new nightstand. You won't need any additional tools.

Parts List

A X 1
Nightstand

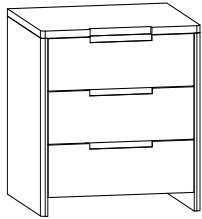

Hardware List

HW1 x 2
Wall Clip



HW2 x 2
Zip Tie



HW3 x 4
Screw (35x4mm)




HW4 x 4
Screw Plug




1

Insert the Screw Plugs (HW4) into the wall. Align the screw holes on the Wall Clip (HW1) to the Screw Plugs (HW4) in the wall. Use a screwdriver (not included) to screw in the screws (HW3).

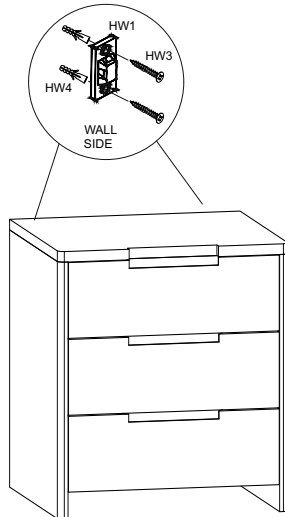

2

Attach the Nightstand (A) to the wall by inserting the Zip Ties (HW2) through the loops on the back of the nightstand and then through the loops on the Wall Clip (HW1) installed in the wall and pulling until its tight but not too tight.

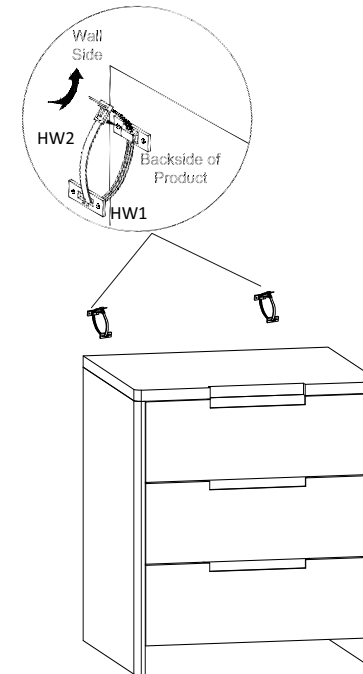

3

We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

