


# RIVERSIDE OAK WOOD 6 DRAWER DRESSER

DESIGN# SFV9760

Assembly Instructions

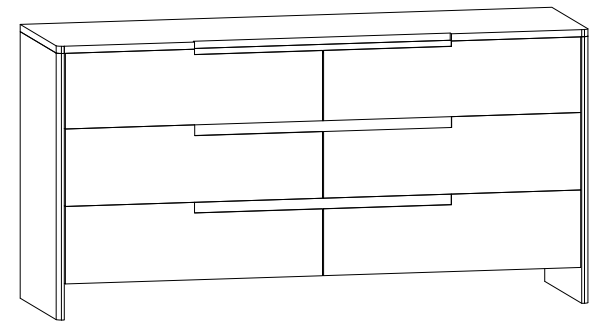

Need help?  
Feel free to contact us via email or call  
if you have any specific questions!

**contact us:**  
[cs@safavieh.com](mailto:cs@safavieh.com)  
866-422-9070

**SAFAVIEH**  
C O U T U R E

## Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up, including your new dresser. You won't need any additional tools.

### Parts List

A X 1  
Dresser

### Hardware List

HW1 x 2  
Wall Clip

HW2 x 2  
Zip Tie


HW3 x 4  
Screw (35x4mm)

HW4 x 4  
Screw Plug




1

Screw the wall clip to the wall as shown above using (HW1), (HW3), (HW4).

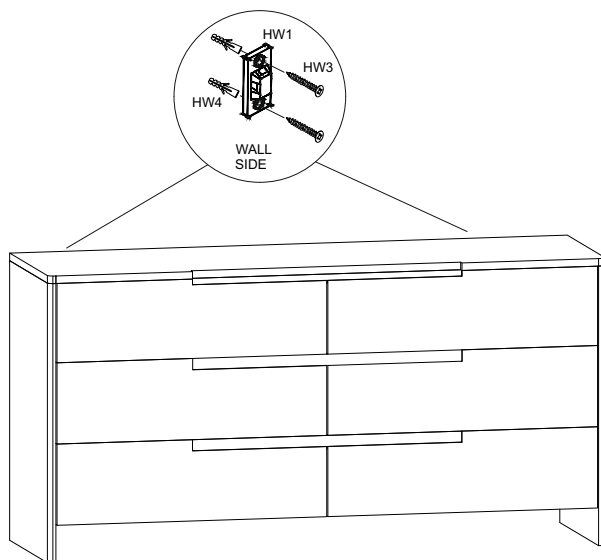

2

Attach the dresser with wall through given zip tie as shown above.

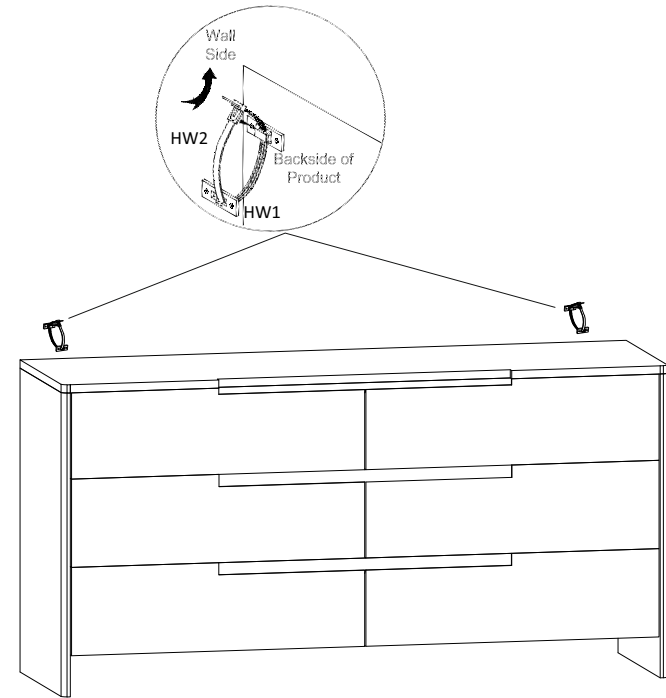

3

We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

