

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 120 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

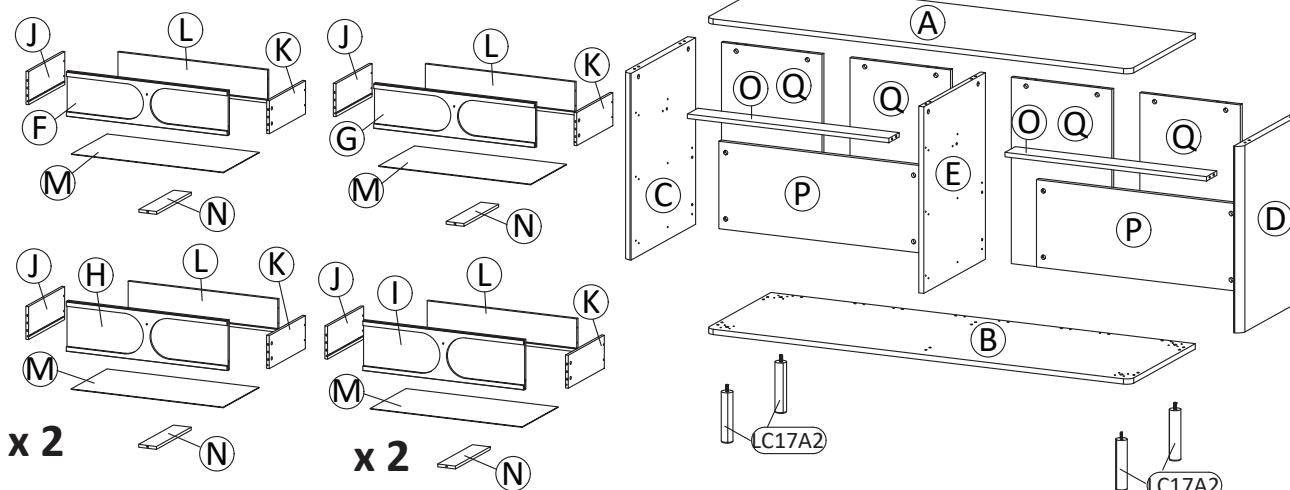

Model# DRS9603

Product Dimensions: 60.12" W x 19.69" D x 32.91" H

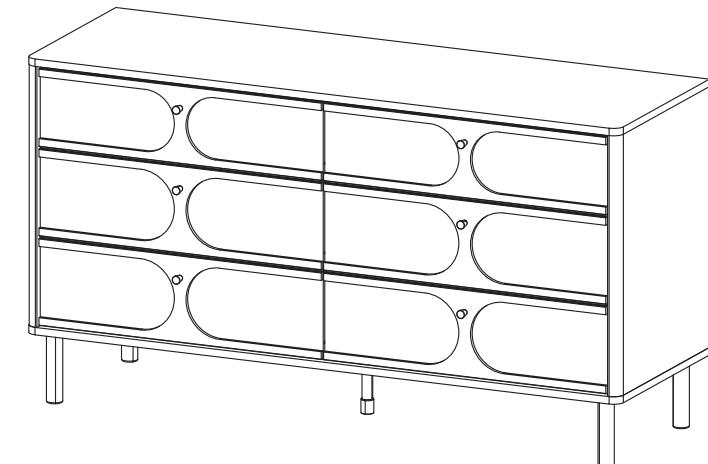

WARNING :




WEIGHT CAPACITY: 110 LBS.

DRAWER LOAD CAPACITY 33 LBS

Warning : Do not stand on chest.

Warning : Do not over torque bolts.

Hardware List

HW1x20  Ø 6 x 35 mm	HW2x26  Ø 15 mm	HW3x30  Ø 12 mm	HW4x34  Ø 8 x 30 mm	HW5x12  Ø 6 x 30 mm	HW6x20  M 4.5 x 12.5 mm	
HW7x24  M 3.5 x 15.5 mm	HW8x36  M 6 x 10.5 mm	HW9x36  M 3.5 x 13 mm	HW10x36  M 8 x 39 mm	HW11x24  M 4.5 x 24 mm	HW12x2  M 4.5 x 22 mm	
HW13x14  M 7 x 50 mm	HW14x6  M 4 x 25 mm	HW15x6  M 4 x 25 mm	HW16x3  M 4 x 16 mm	HW17x30  Ø 6 x 32 mm	HW18x3  Ø 8 x 50 mm	
HW PM3x4 	HW RM35Ax6 	HW LM14A1x1 				


Part List & HW For Multi-Box Items

Piece	Description	Qty	Carton Call
A	Top Board	1	2 of 2
B	Bottom Board	1	2 of 2
C	Side Board Left	1	1 of 2
D	Side Board Right	1	1 of 2
E	Center Board	1	1 of 2
F	Front Drawer Small Left	1	2 of 2
G	Front Drawer Small Right	1	2 of 2
H	Front Drawer Large Left	2	2 of 2
I	Front Drawer Large Right	2	2 of 2
J	Side Drawer Left	6	1 of 2
K	Side Drawer Right	6	1 of 2
L	Back Drawer	6	2 of 2
M	Bottom Drawer	6	2 of 2
N	Support Drawer	6	1 of 2
O	Support Board 1	2	2 of 2
P	Support Board 2	2	2 of 2
Q	Back Board	4	1 of 2
LC17A2	Leg	4	1 of 2

Piece	Description	Qty	Carton Call
HW1	Cambolt Long	20	1 of 2
HW2	CamLock Big	26	1 of 2
HW3	CamLock Small	30	1 of 2
HW4	Dowel Ø 8 x 30 mm	34	1 of 2
HW5	Dowel Ø 6 x 30 mm	12	1 of 2
HW6	Screw M 4.5 x 12.5 mm	20	1 of 2
HW7	Screw M 3.5 x 15.5 mm	24	1 of 2
HW8	Screw M 6 x 10.5 mm	36	1 of 2
HW9	Screw M 3.5 x 13 mm	36	1 of 2
HW10	Screw M 8 x 39 mm	36	1 of 2
HW11	Wedge	24	1 of 2
HW12	Allen Key	2	1 of 2
HW13	Screw M 7 x 50 mm	14	1 of 2
HW14	Handle	6	1 of 2
HW15	Screw M 4 x 25 mm	6	1 of 2
HW16	Double End Cambolt	3	1 of 2
HW17	Cambolt Short	30	1 of 2
HW18	Dowel Ø 8 x 50 mm	3	1 of 2
HW PM3	Mounting Plate	4	1 of 2
HW RM35A	Drawer Runner	6	1 of 2
LM14A1	Metal Leg	1	1 of 2


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

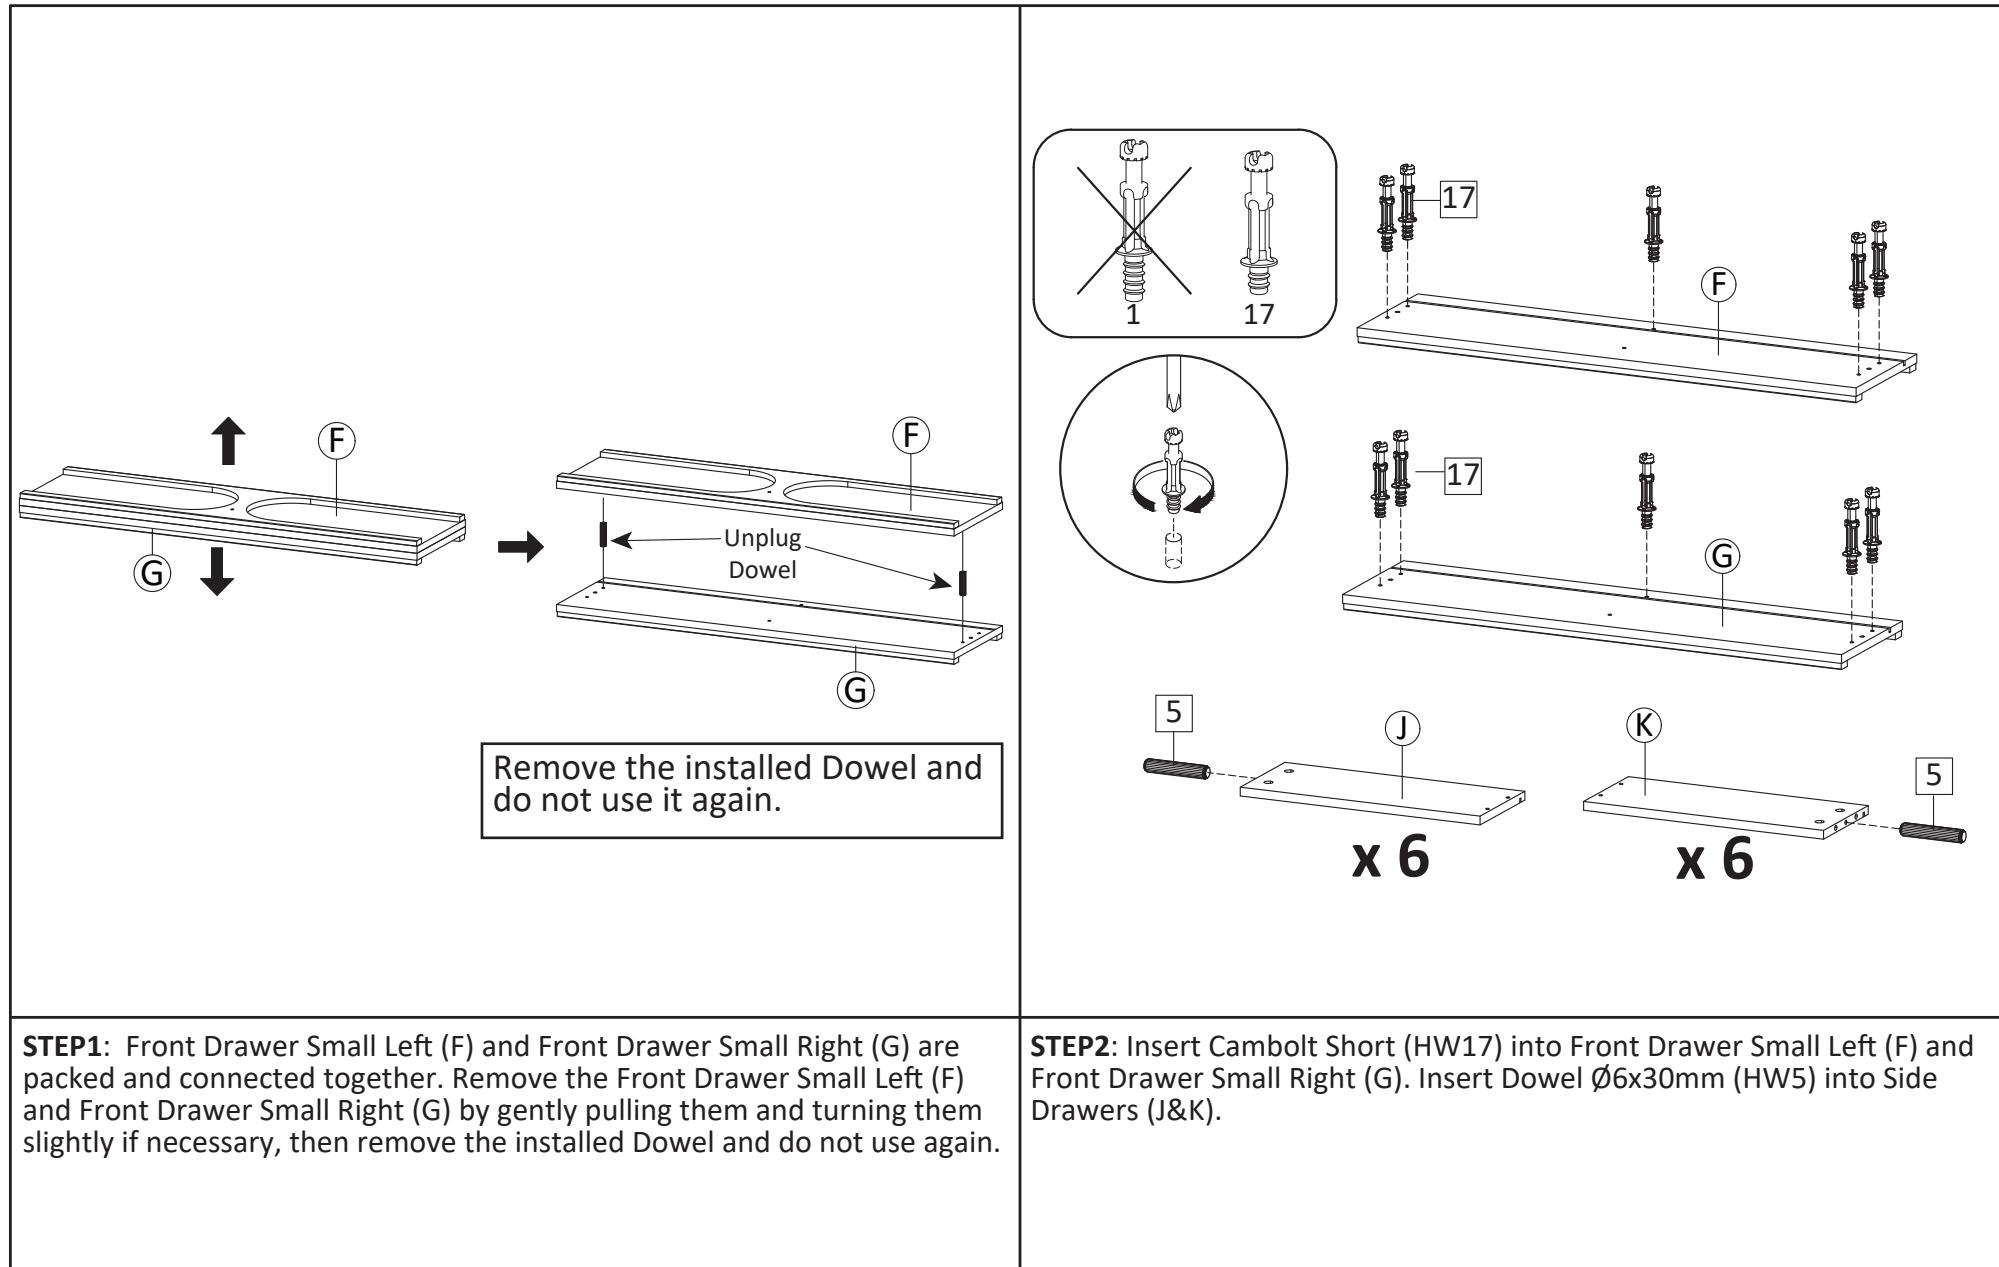


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

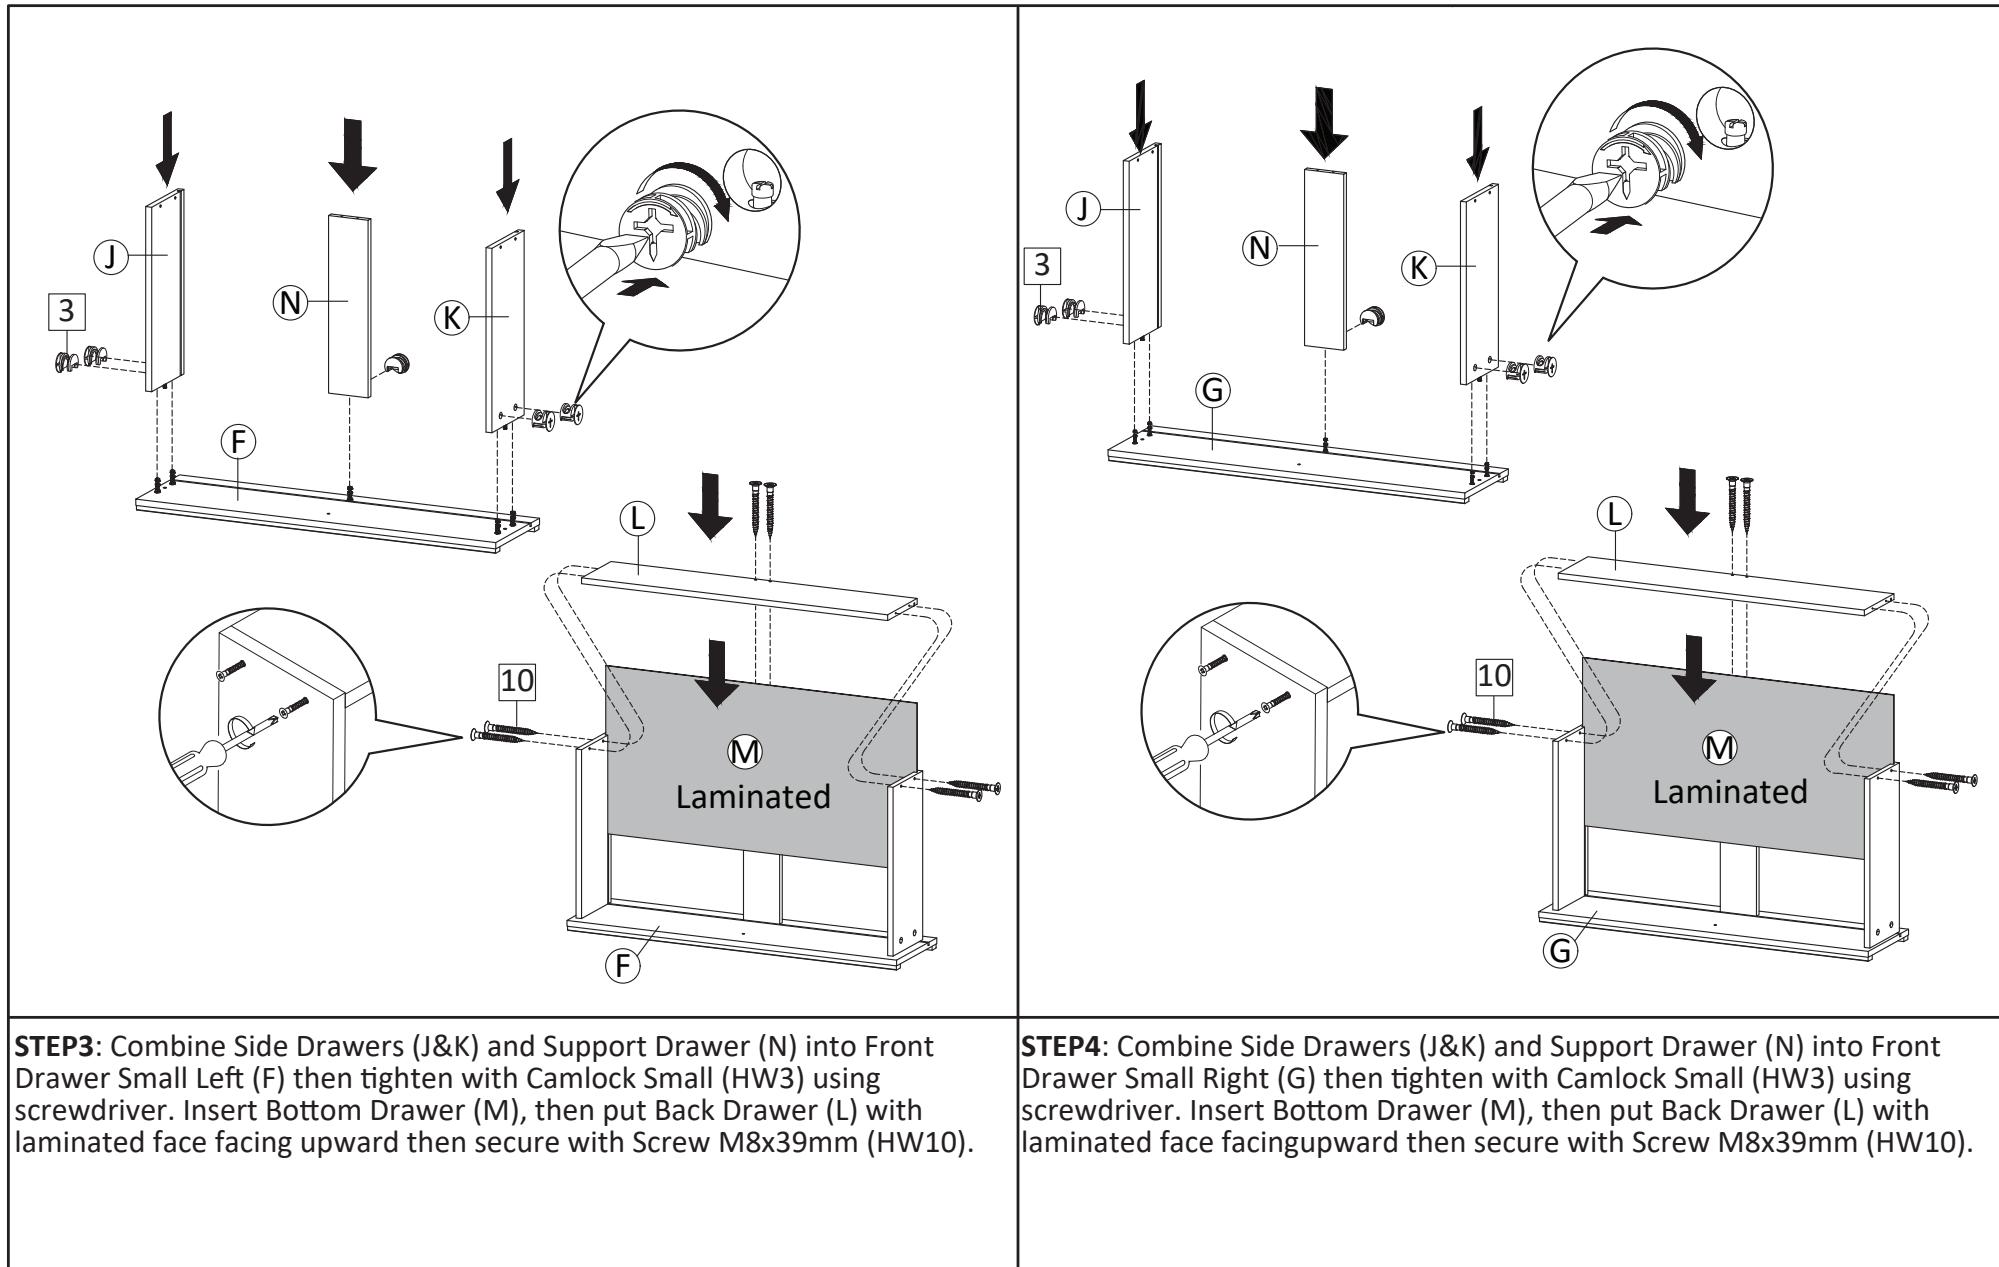


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

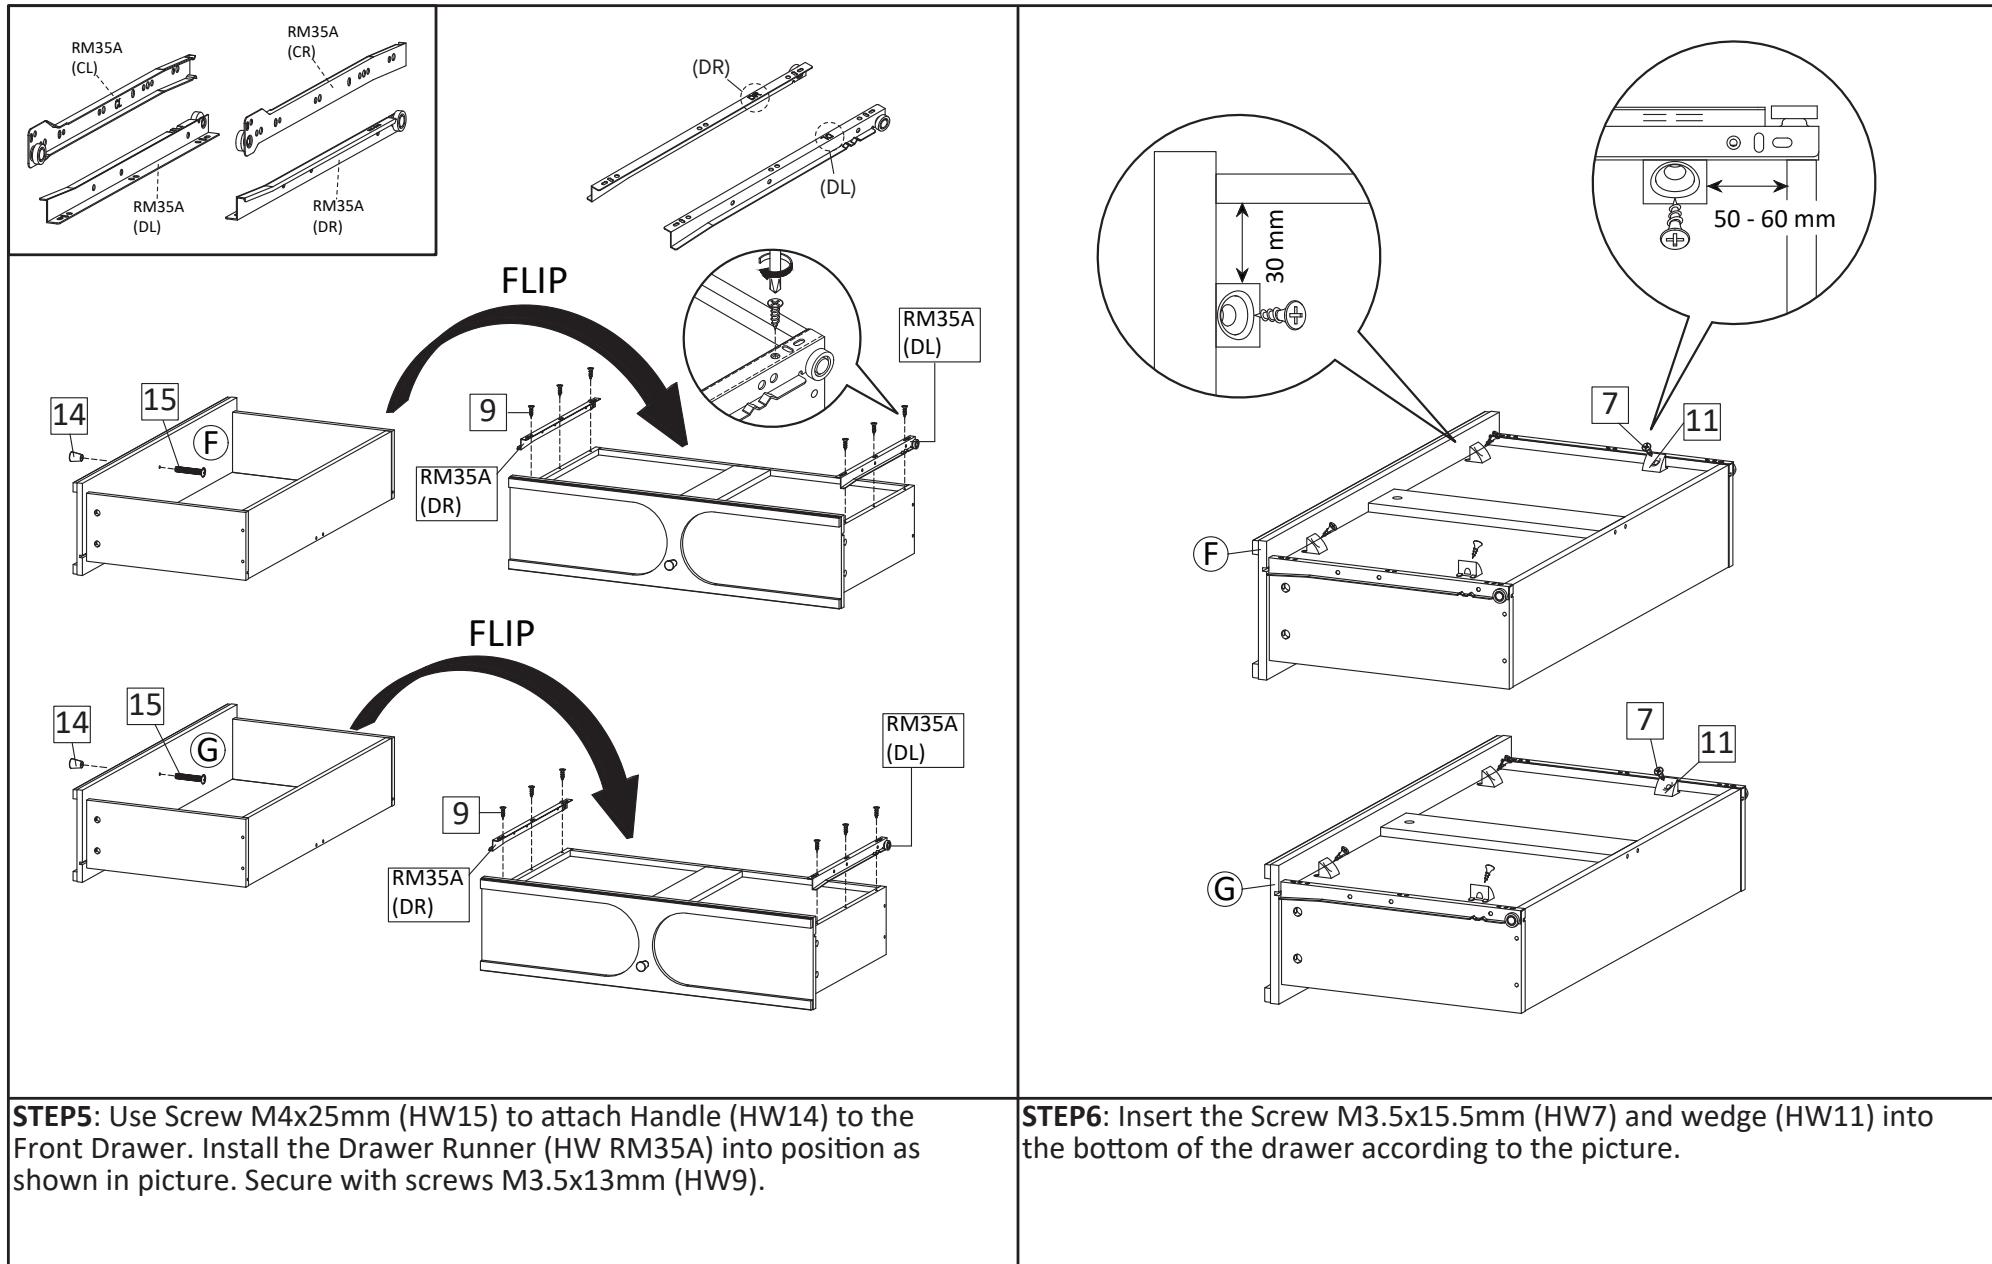


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

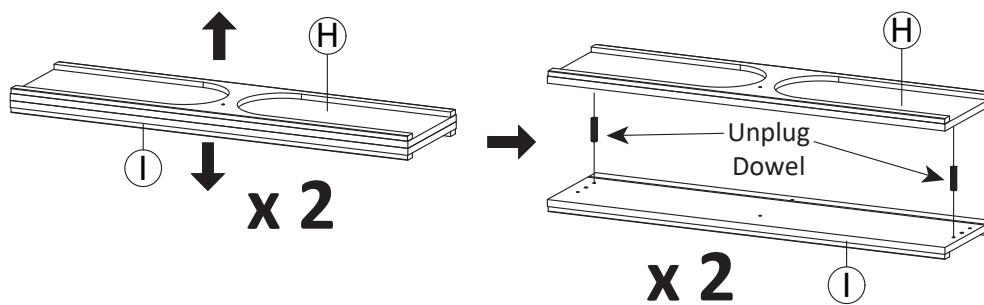

Remove the installed Dowel and do not use it again.

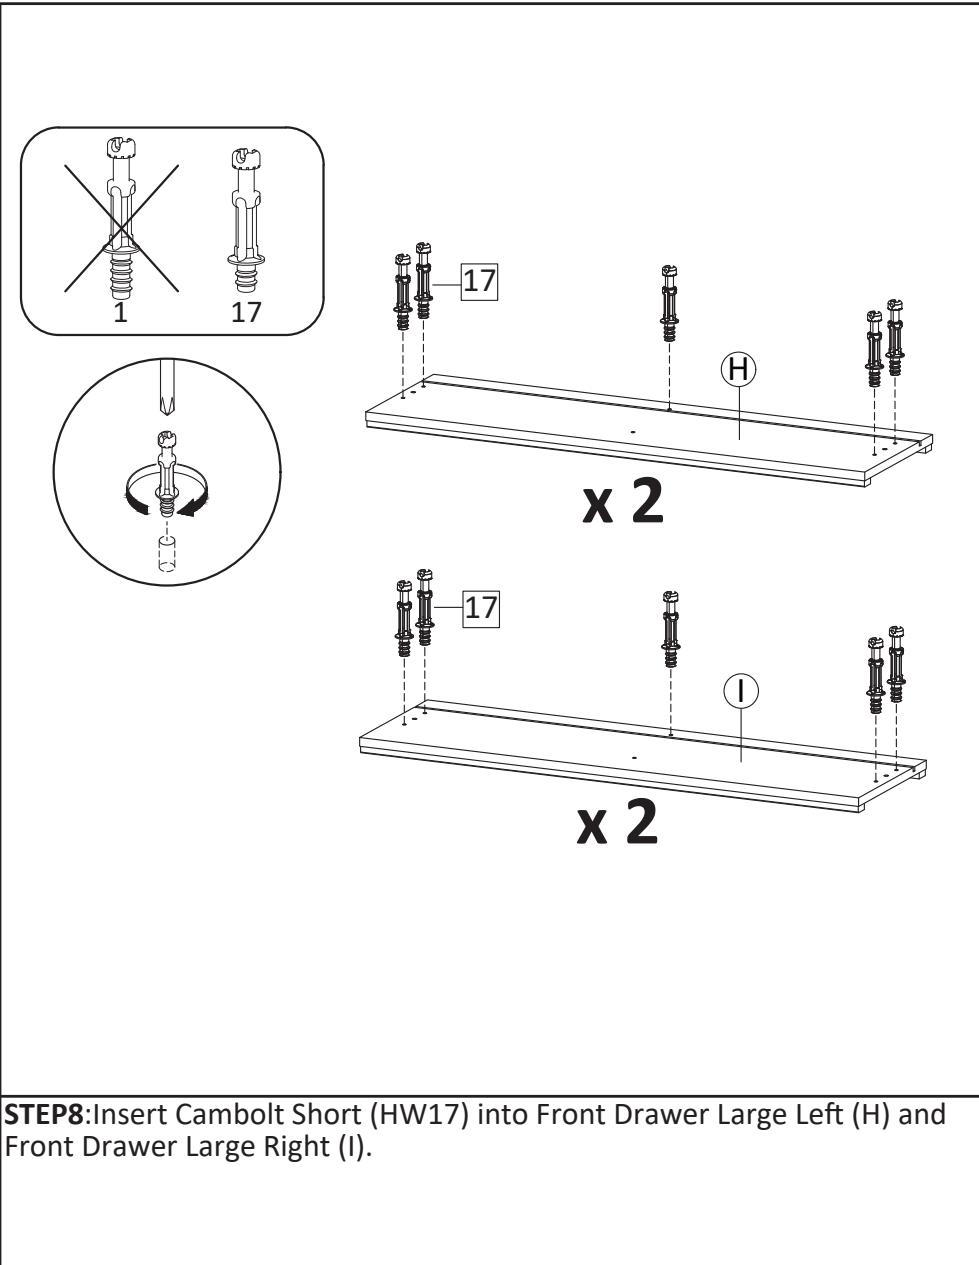


STEP7: Front Drawer Large Left (H) and Front Drawer Large Right (I) are packed and connected together. Remove the Front Drawer Large Left (H) and Front Drawer Large Right (I) by gently pulling them and turning them slightly if necessary, then remove the installed Dowel and do not use again.

STEP8: Insert Cambolt Short (HW17) into Front Drawer Large Left (H) and Front Drawer Large Right (I).


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

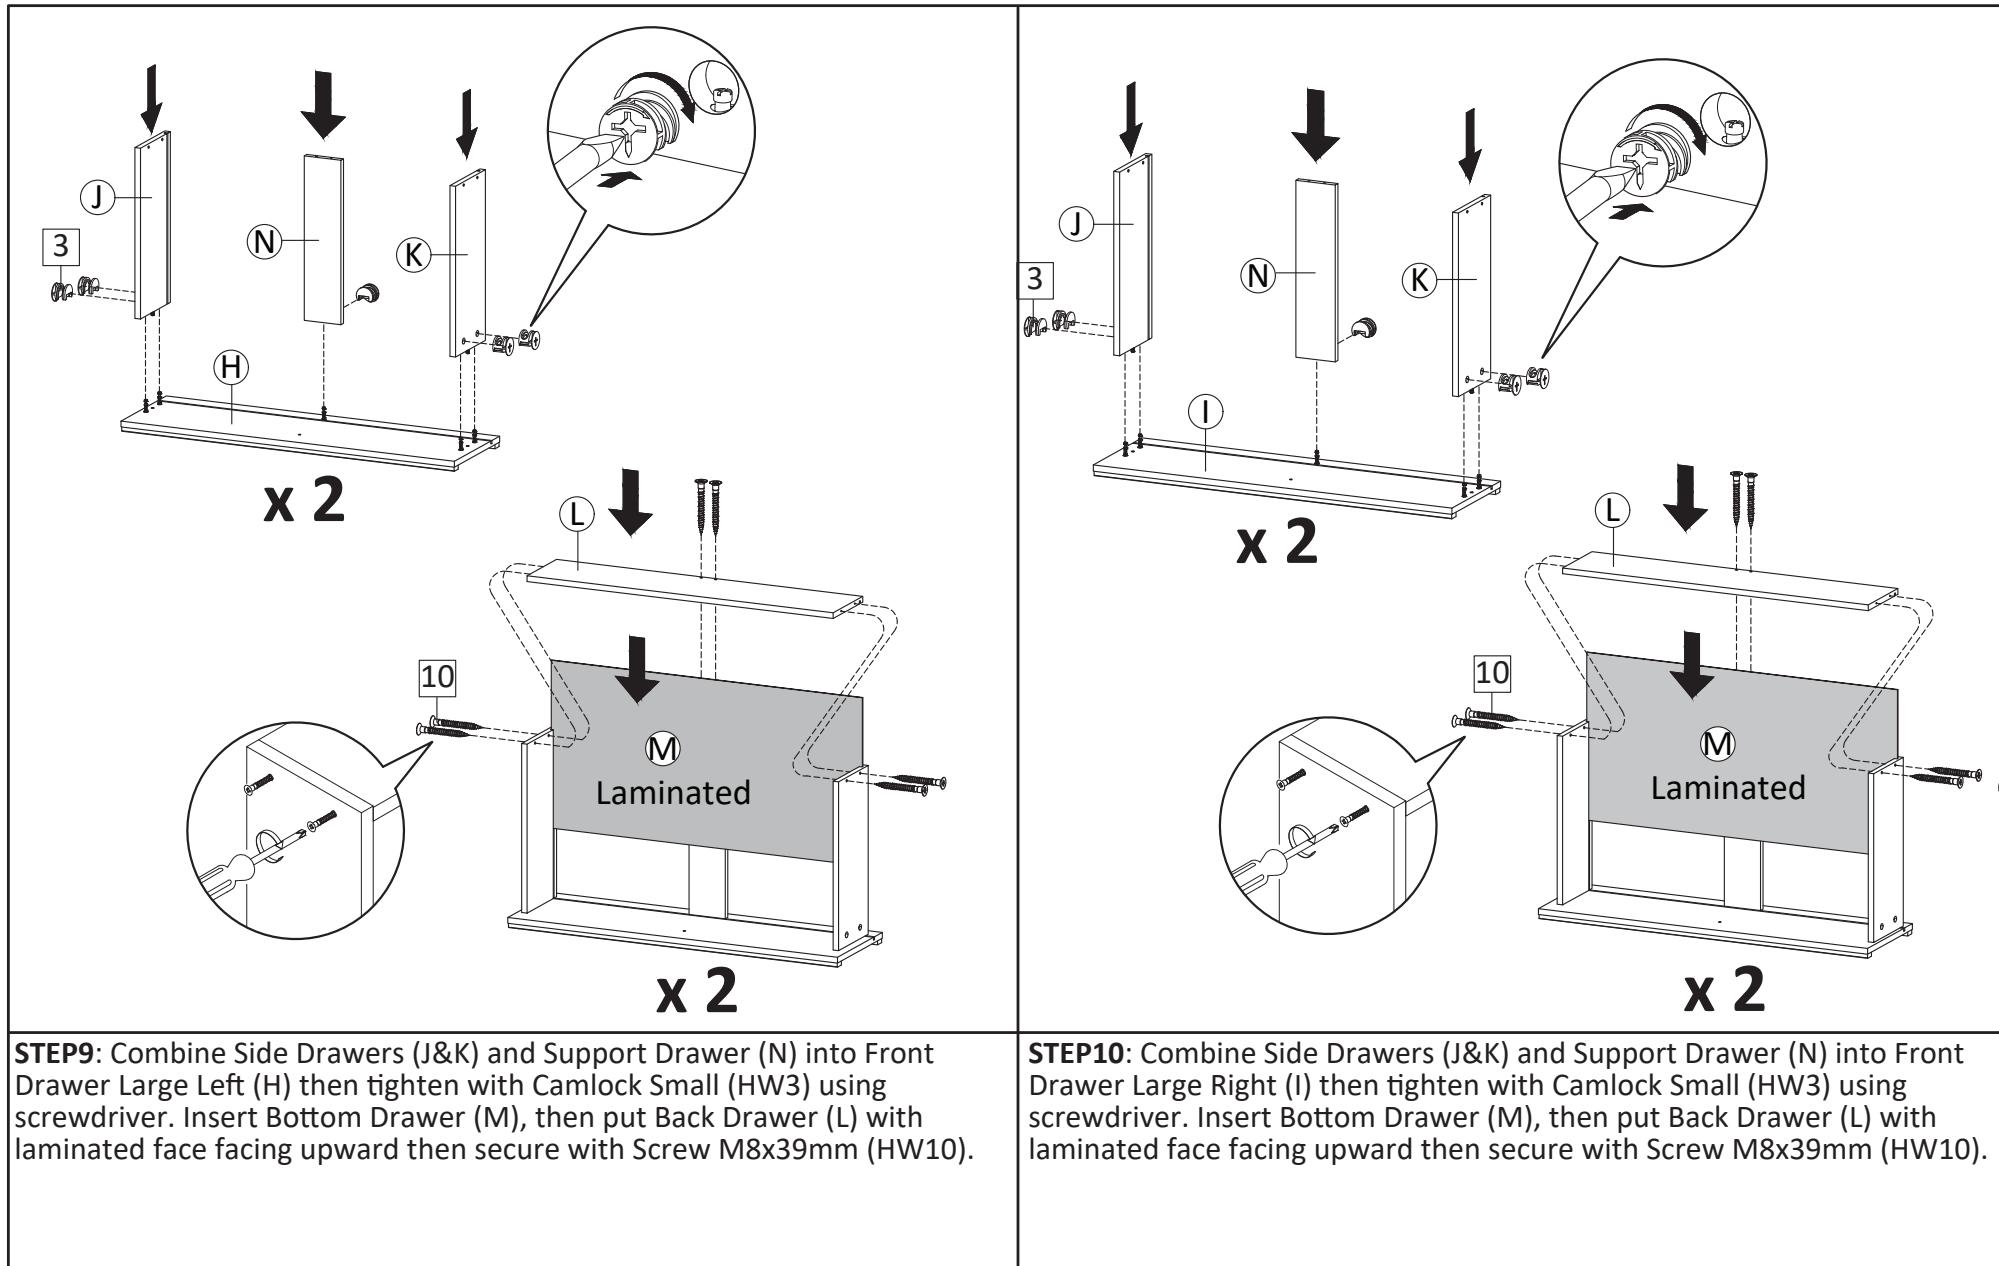


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

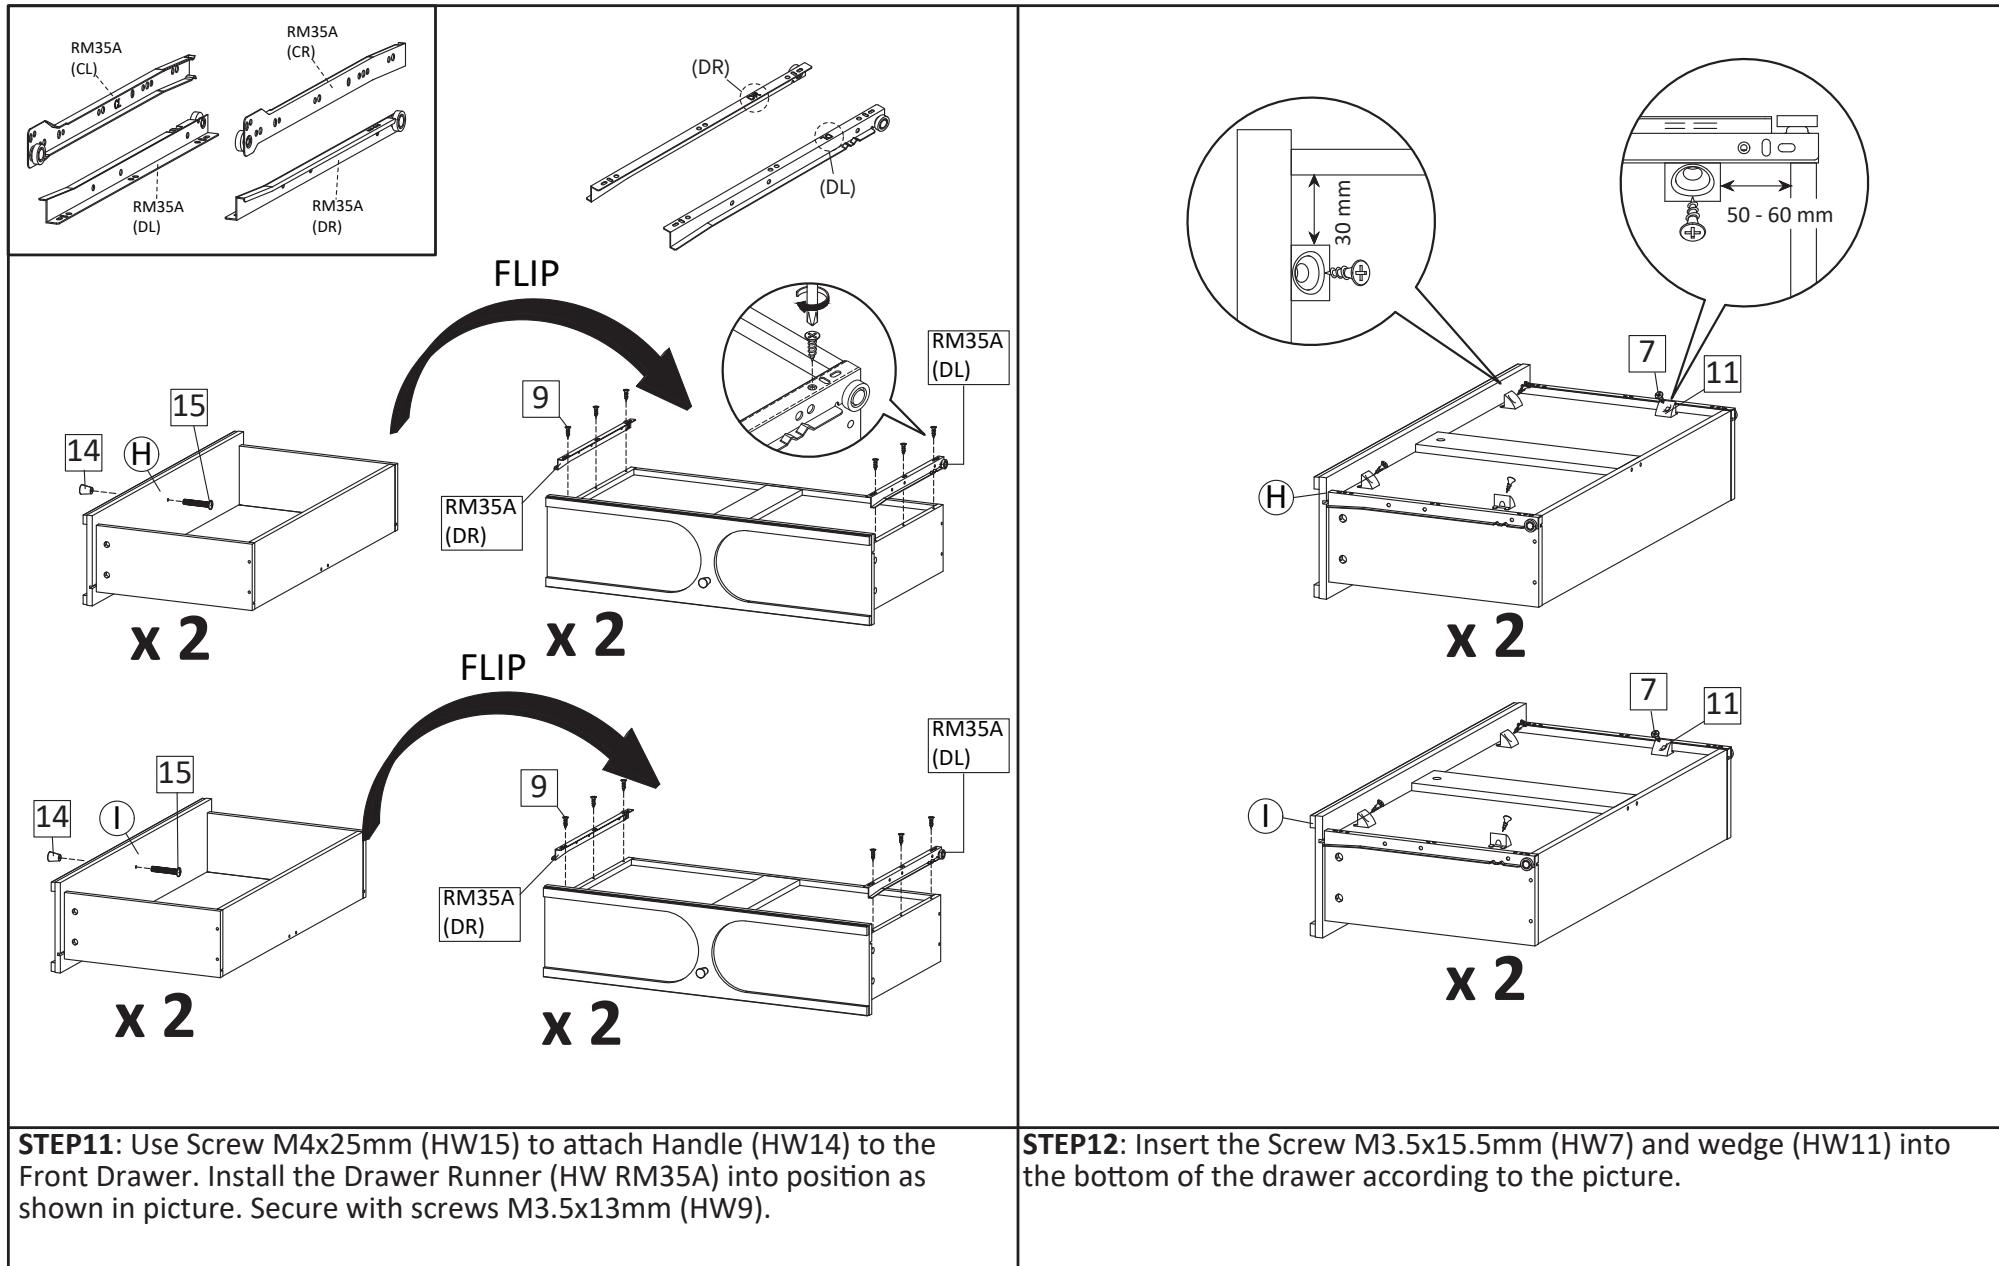

PREPARATION


- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

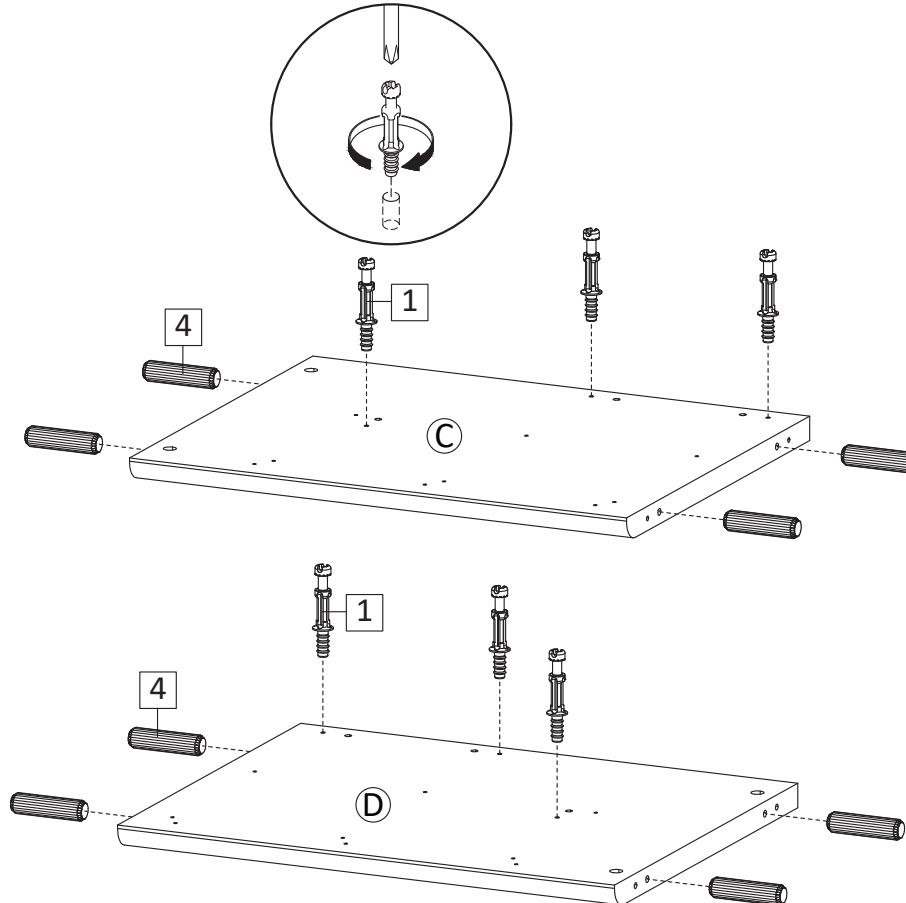

STEP13: Insert Dowel Ø8x30mm (HW4) into Side Board Left (C), Side BoardRight (D). Insert Cambolt Long (HW1) into Side Board Left (C), Side Board Right (D) into position as the above image.


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

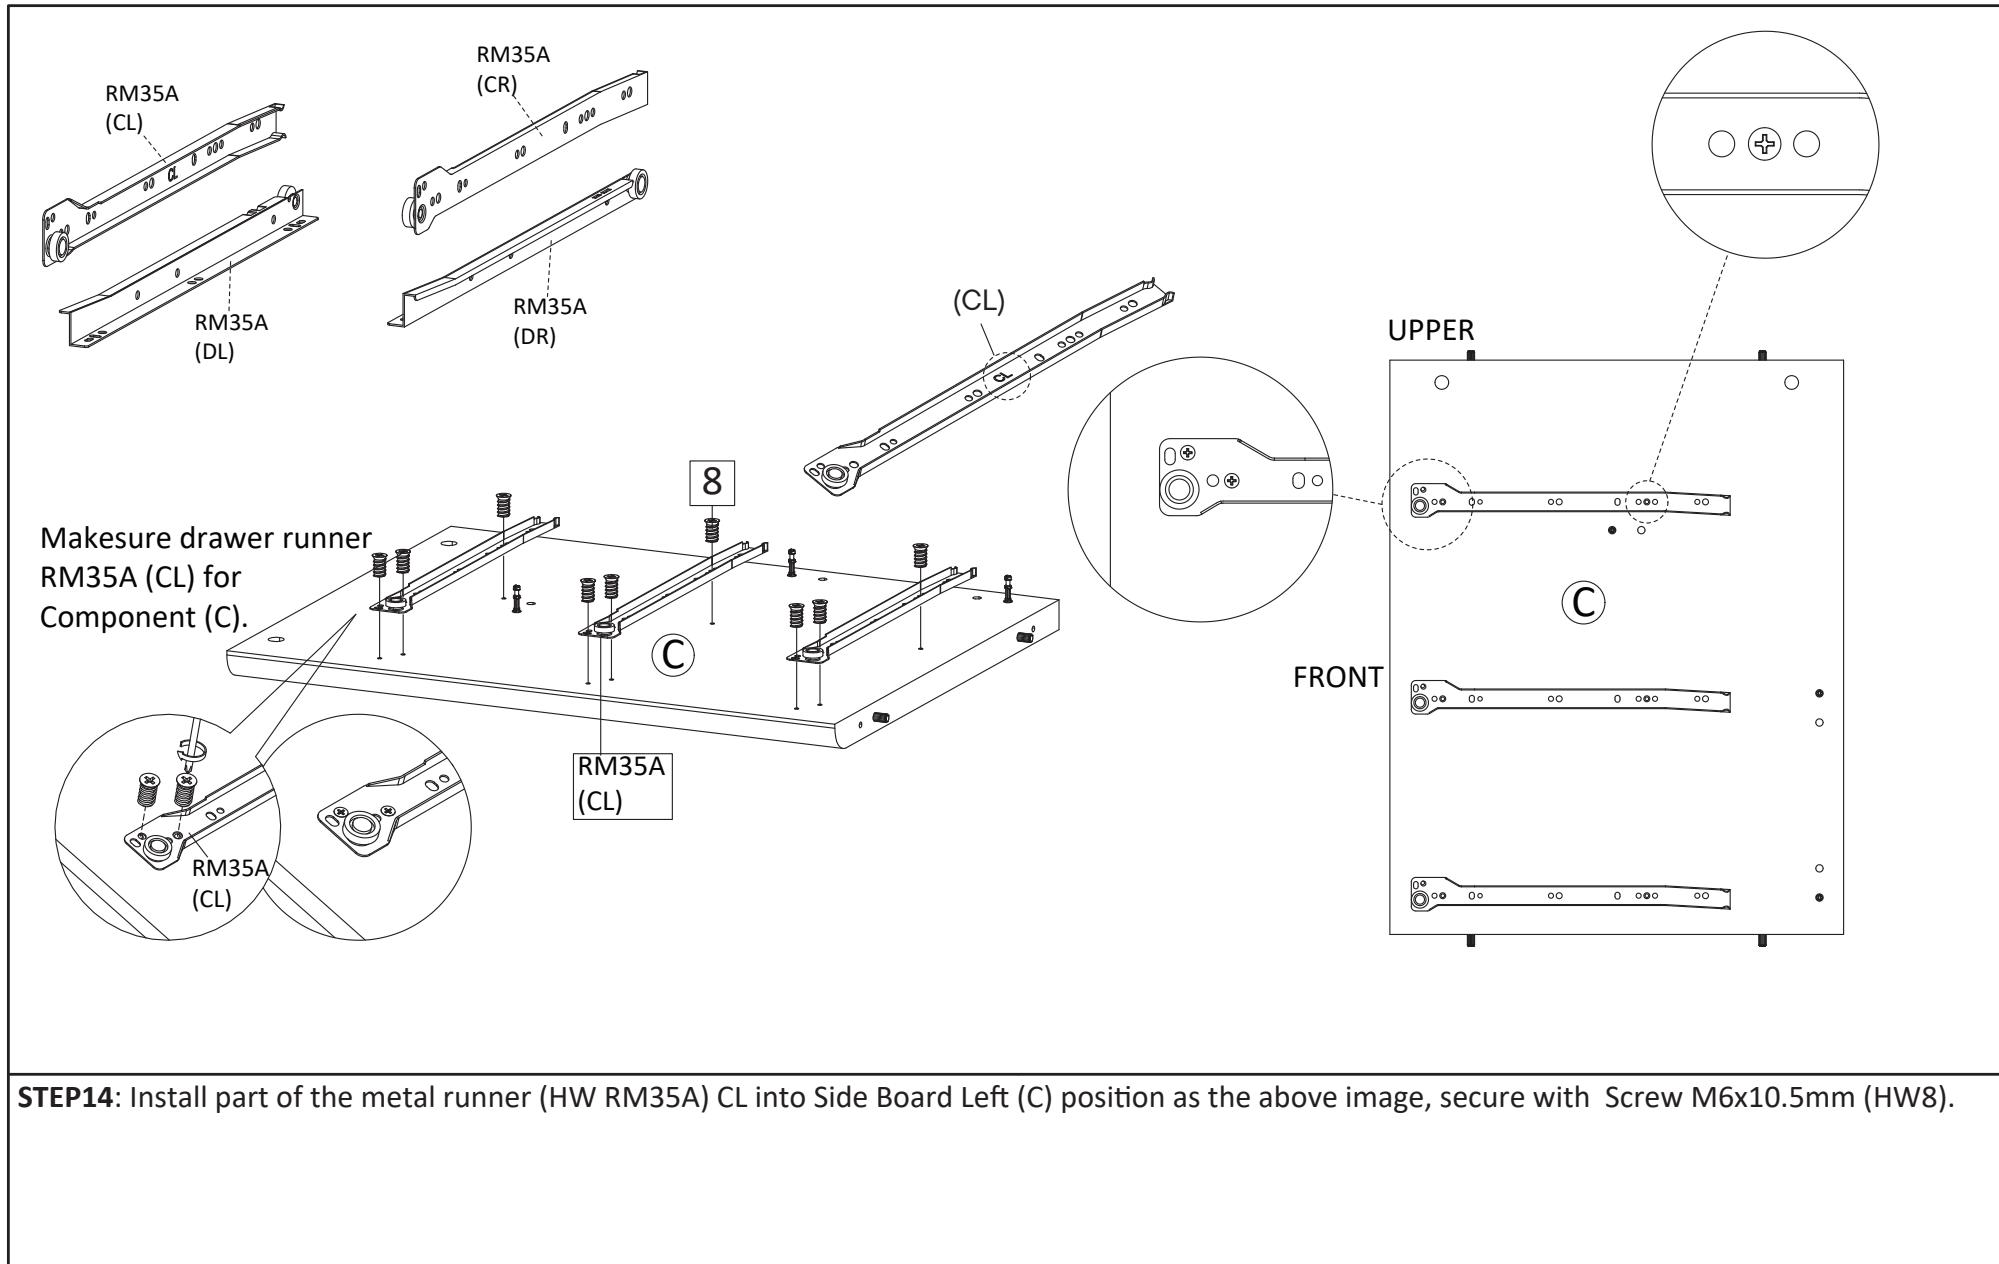



PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

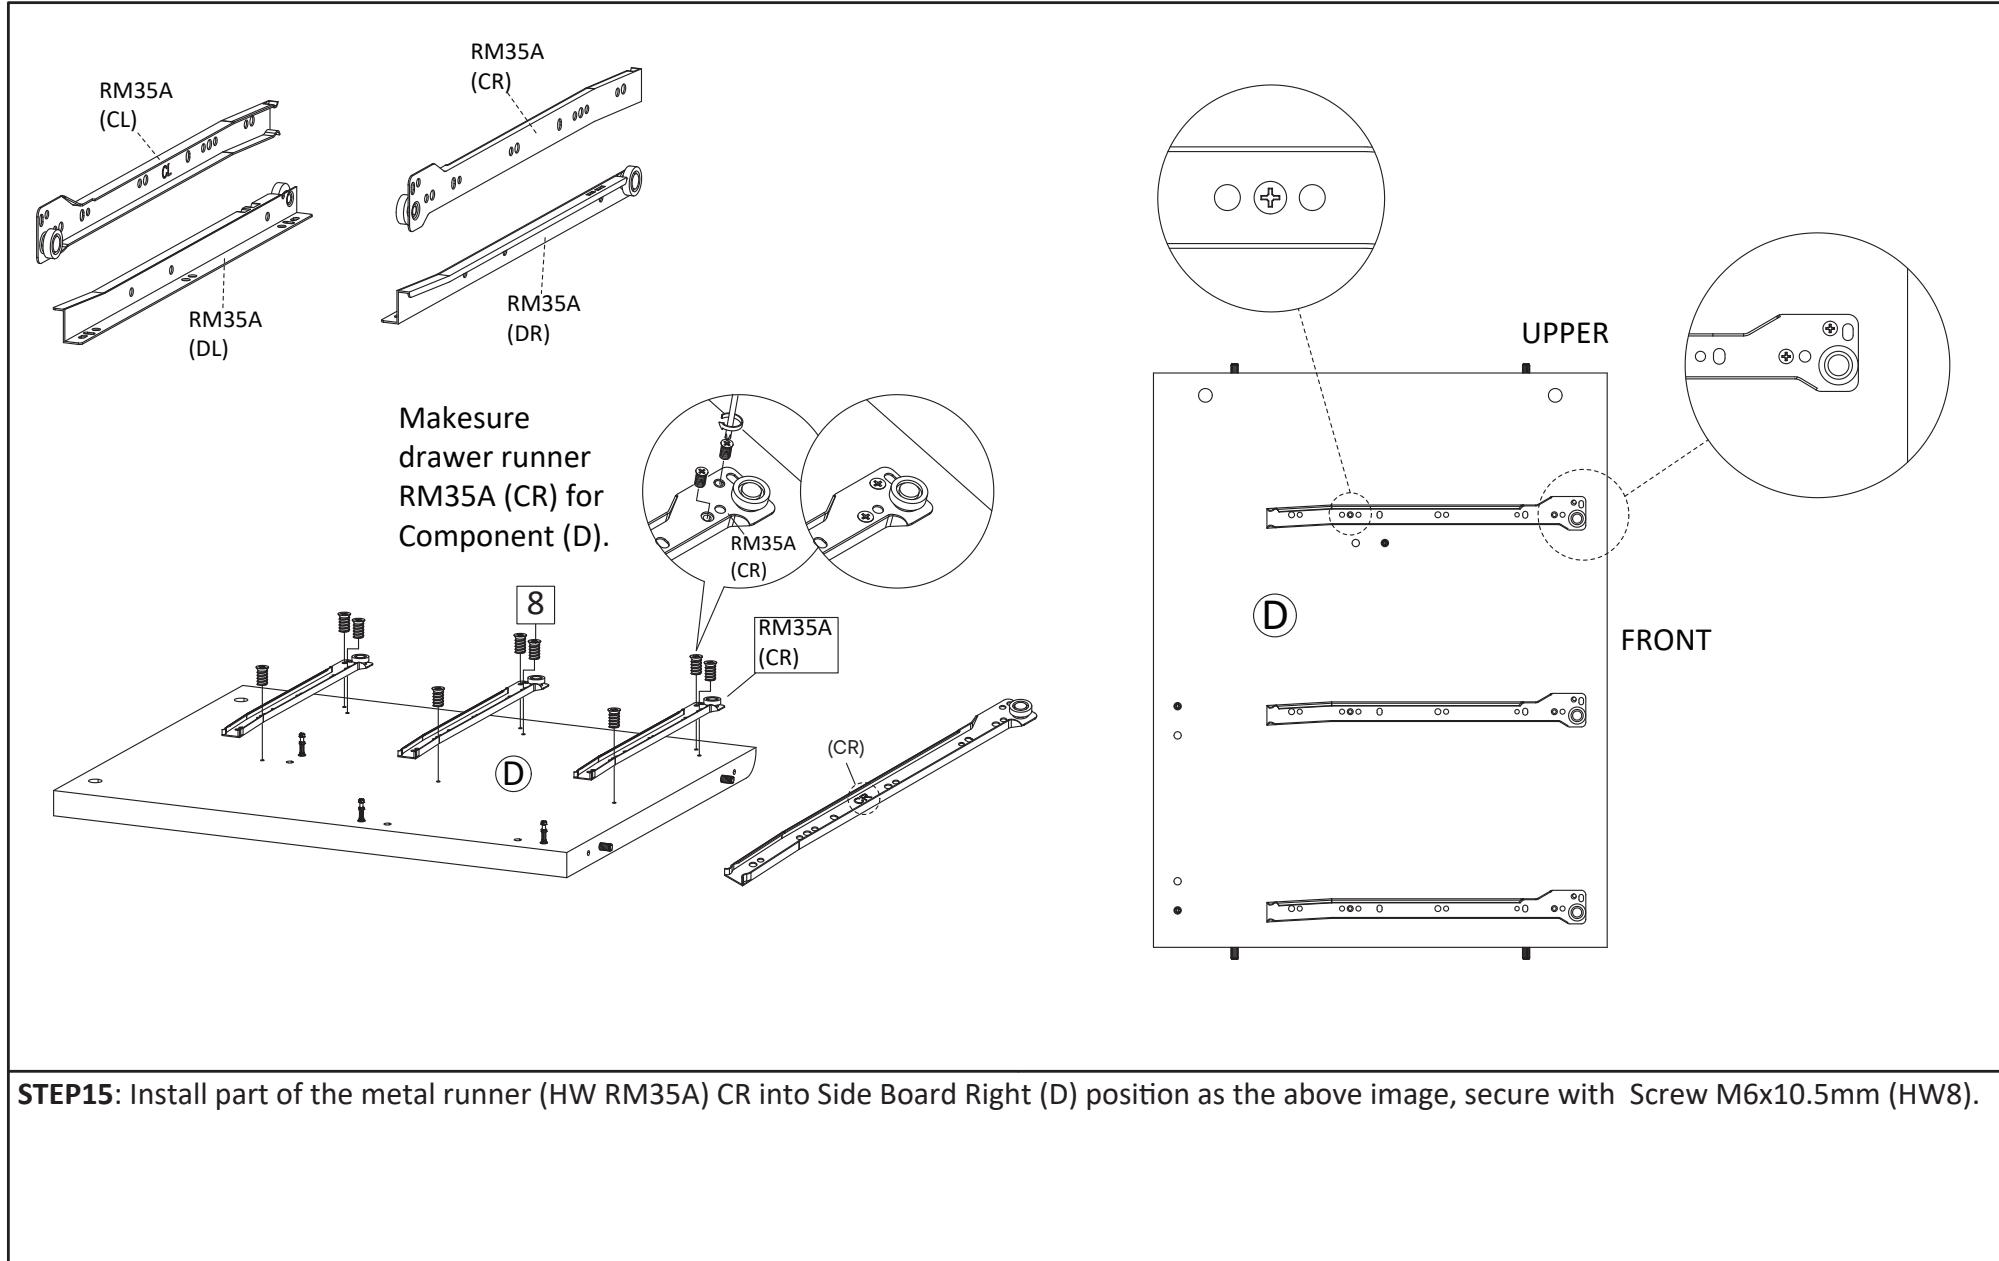


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

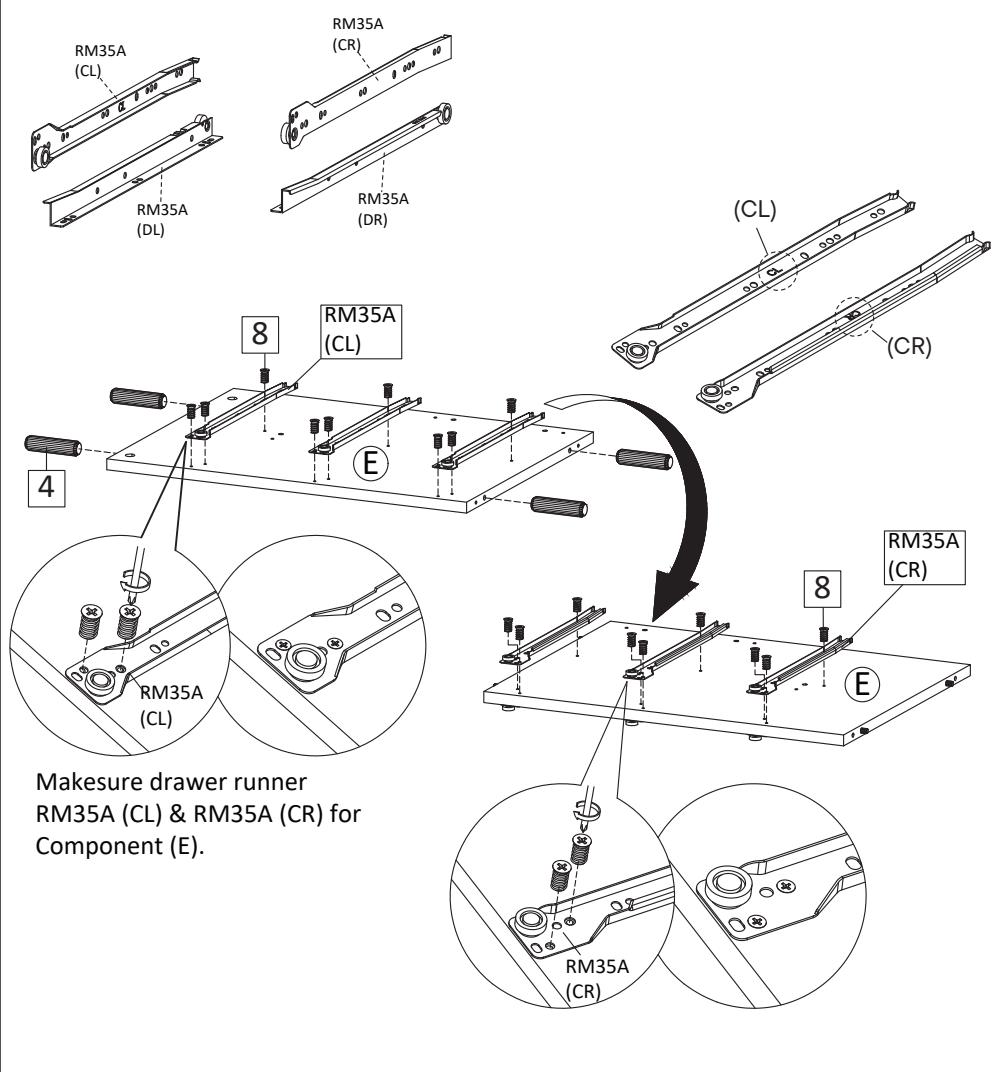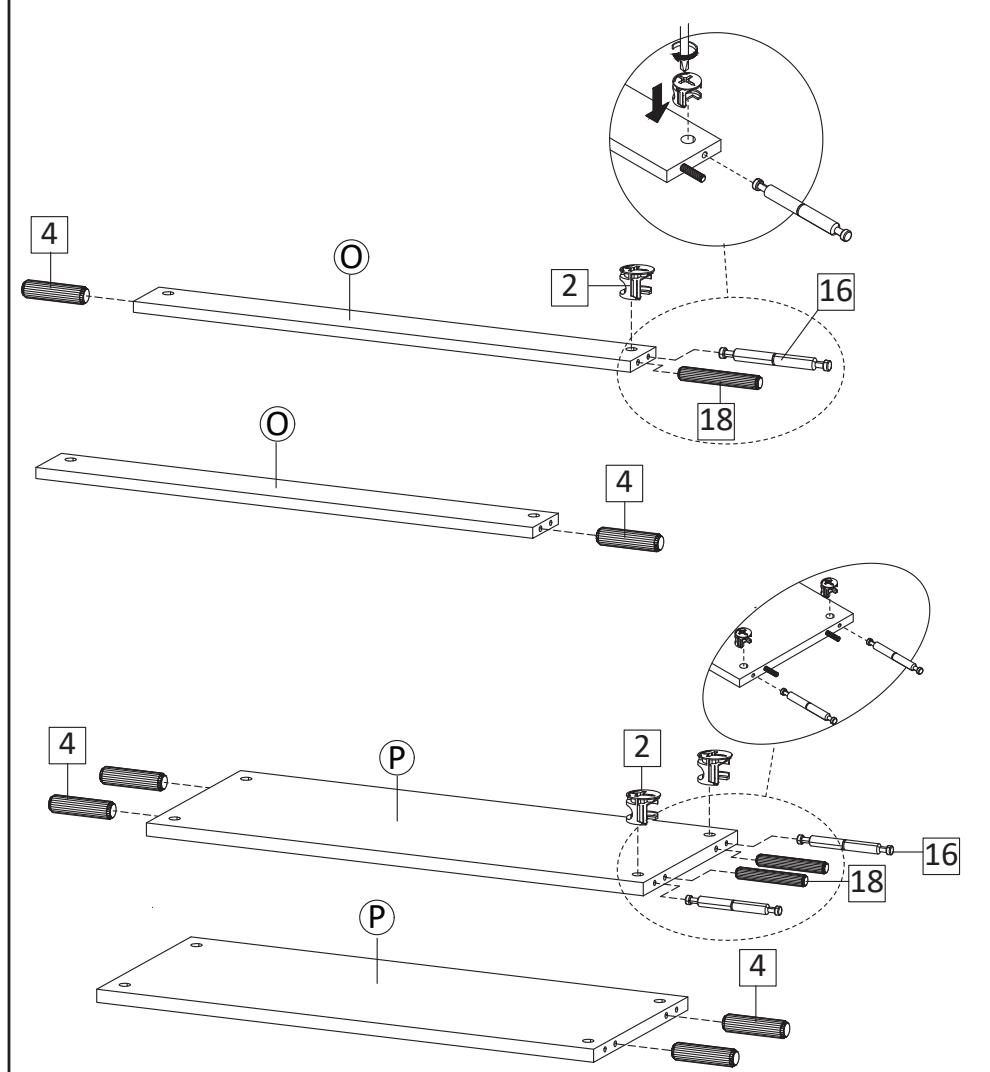
 <p>Makesure drawer runner RM35A (CL) & RM35A (CR) for Component (E).</p>	
<p>STEP16: Insert Dowel Ø8x30mm (HW4) into Center Board (E). Continue with securing part of the metal runner (HW RM35A), into position as the above image, using screw M6x10.5mm (HW8). Please notice position the metal runner part as per provided images. Flip the Center Board (E) to the other side then repeat the process.</p>	<p>STEP17: Insert Dowel Ø8x30mm (HW4) and Dowel Ø8x50mm (HW18) into Support Board 1 (O) and Support Board 2 (P) into position as the above image . Insert Double End Cambolt (HW16) Secure with Camlock Big (HW2) and tighten it using screwdriver as figure.</p>

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

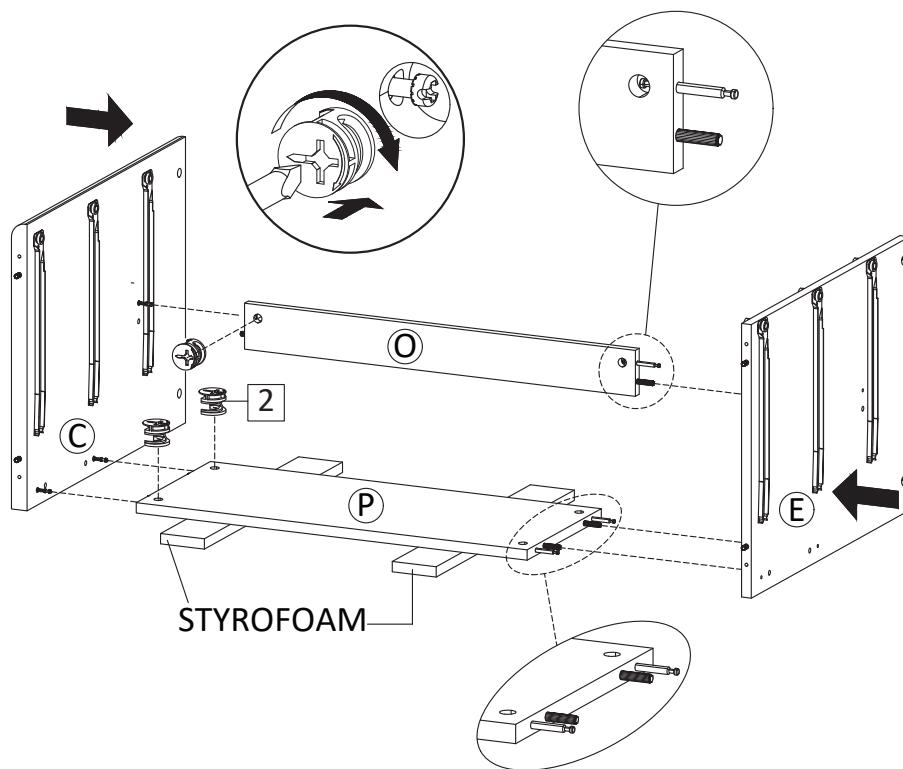

STEP18: Attach Side Board Left (C),Center Board (E) ,Support Board 1 (O) Support Board 2 (P). Secure with Camlock Big (HW2) and tighten it using screwdriver as figure.

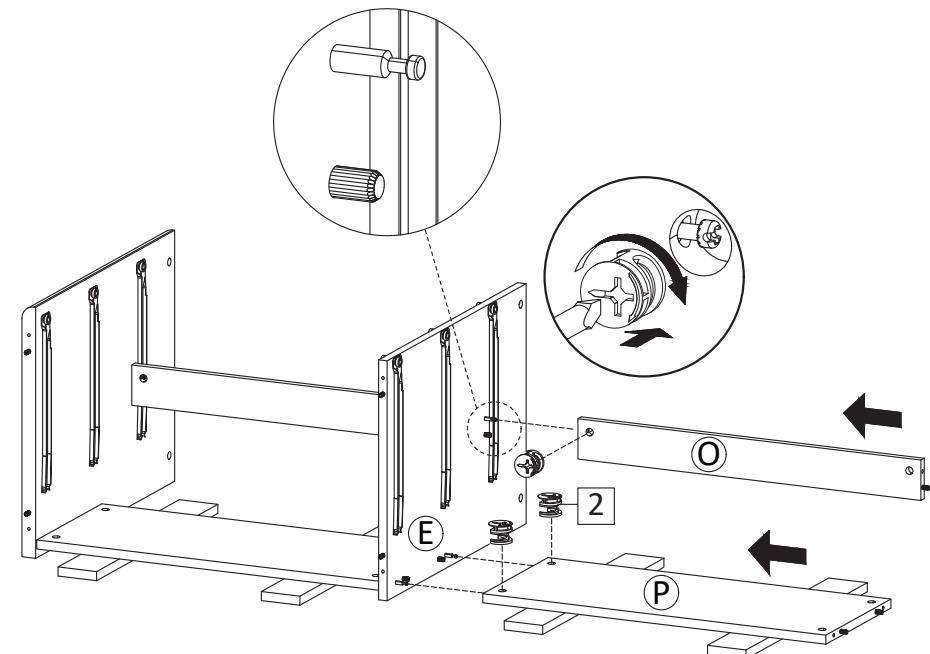

STEP19: Attach Support Board 1 (O) Support Board 2 (P) to the Center Board (E) from step 15. Secure with Camlock Big (HW2) and tighten it using screwdriver as figure.


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


<p>STEP20: Attach Side Board Right (D) and secure with Camlock Big (HW2) and tighten it using screwdriver as figure.</p>	<p>STEP21: Insert Cambolt Long (HW1) into Top Board (A). Install Mounting Plate (PM3) and secure with screw M4.5x12.5mm (HW6) on Bottom Board (B).</p>

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

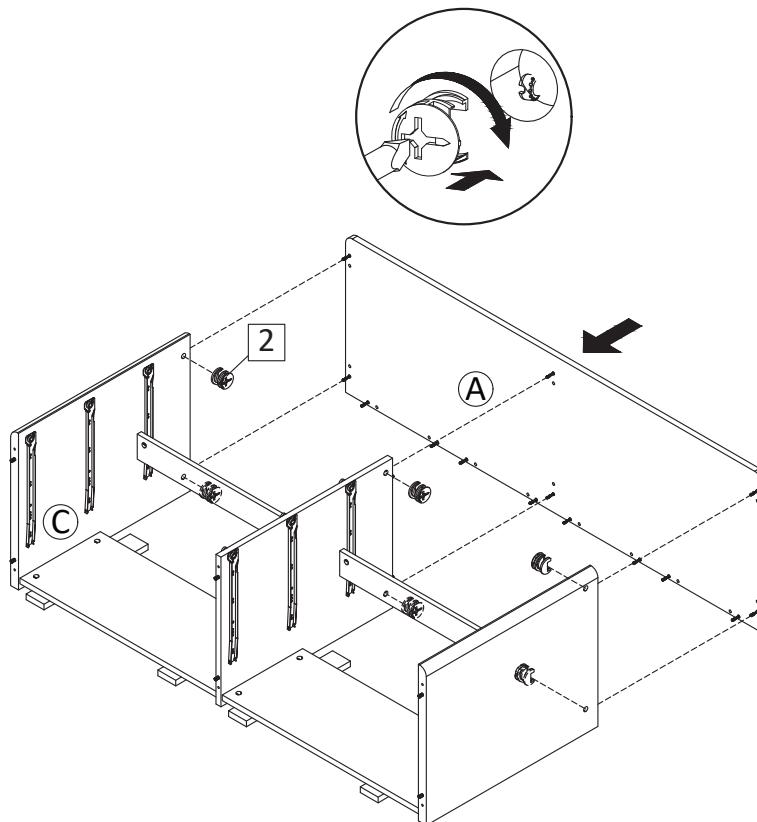


STEP22: Insert Top Board (A) and secure with Camlock Big (HW2) then tighten using screwdriver.

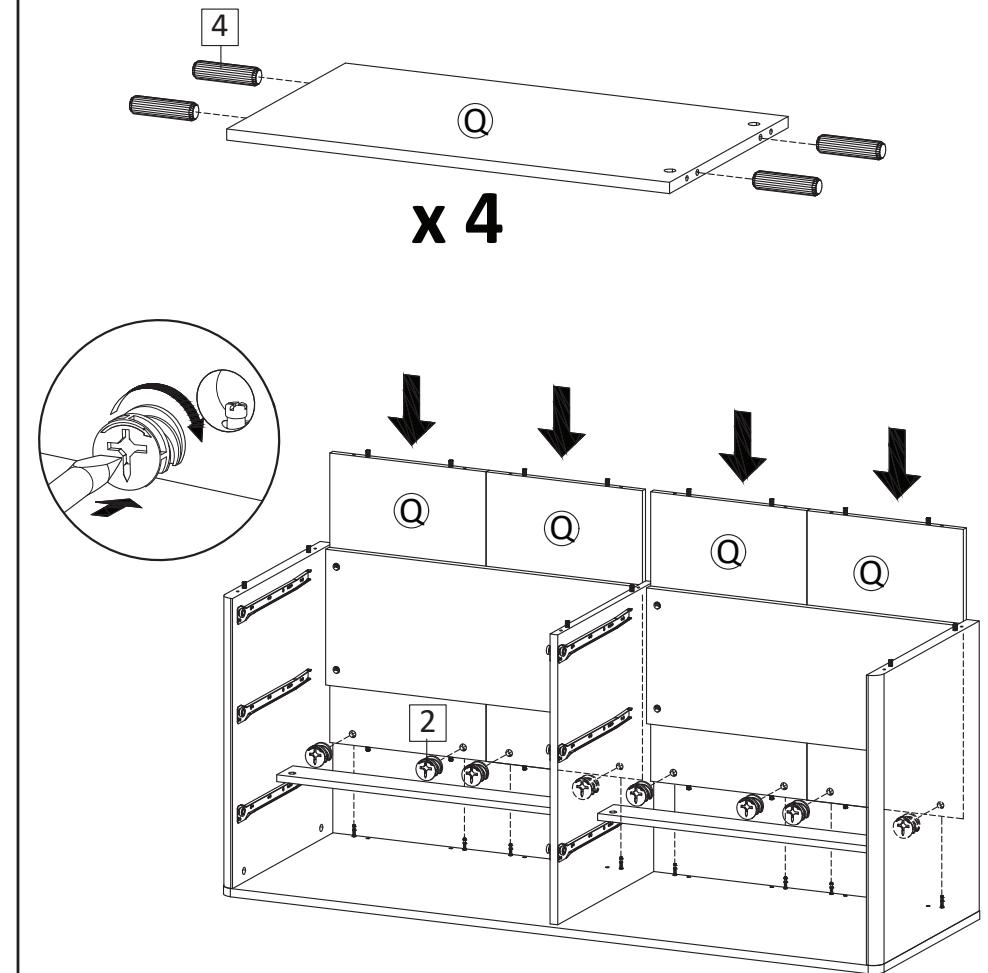


STEP23: Insert Dowel Ø8x30mm into Back Board (Q). Attach Back Boards (Q) into Top Board(A). Insert Camlock (HW2) then tighten using screwdriver as picture.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

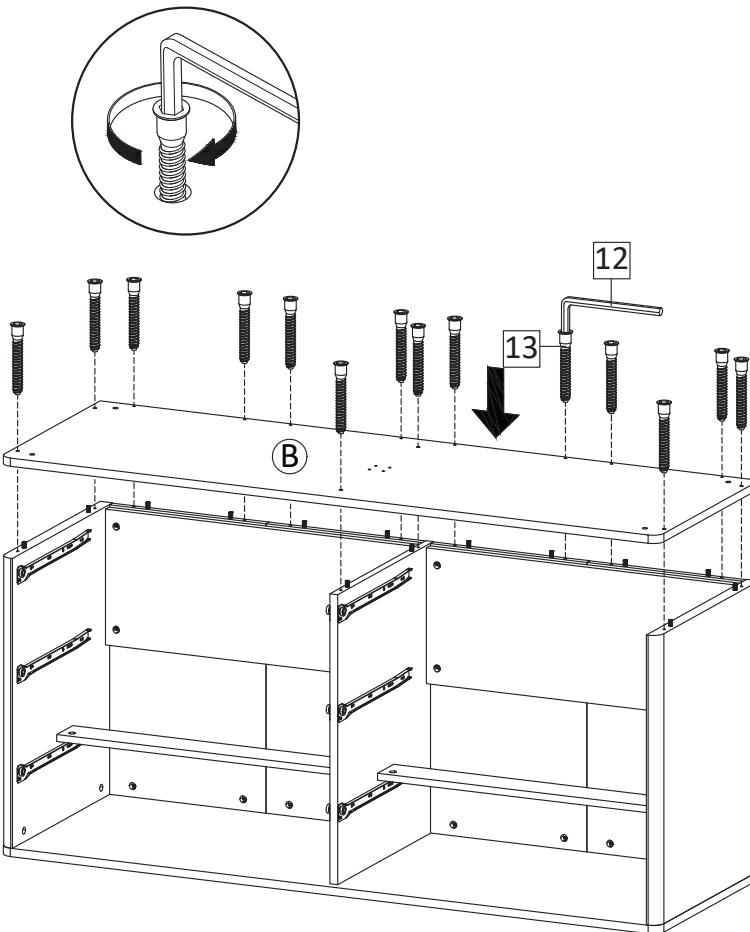

STEP24: Insert Bottom Board (B), secure with Screw M7x50mm (HW13), tighten screws using Allen Key (HW12).

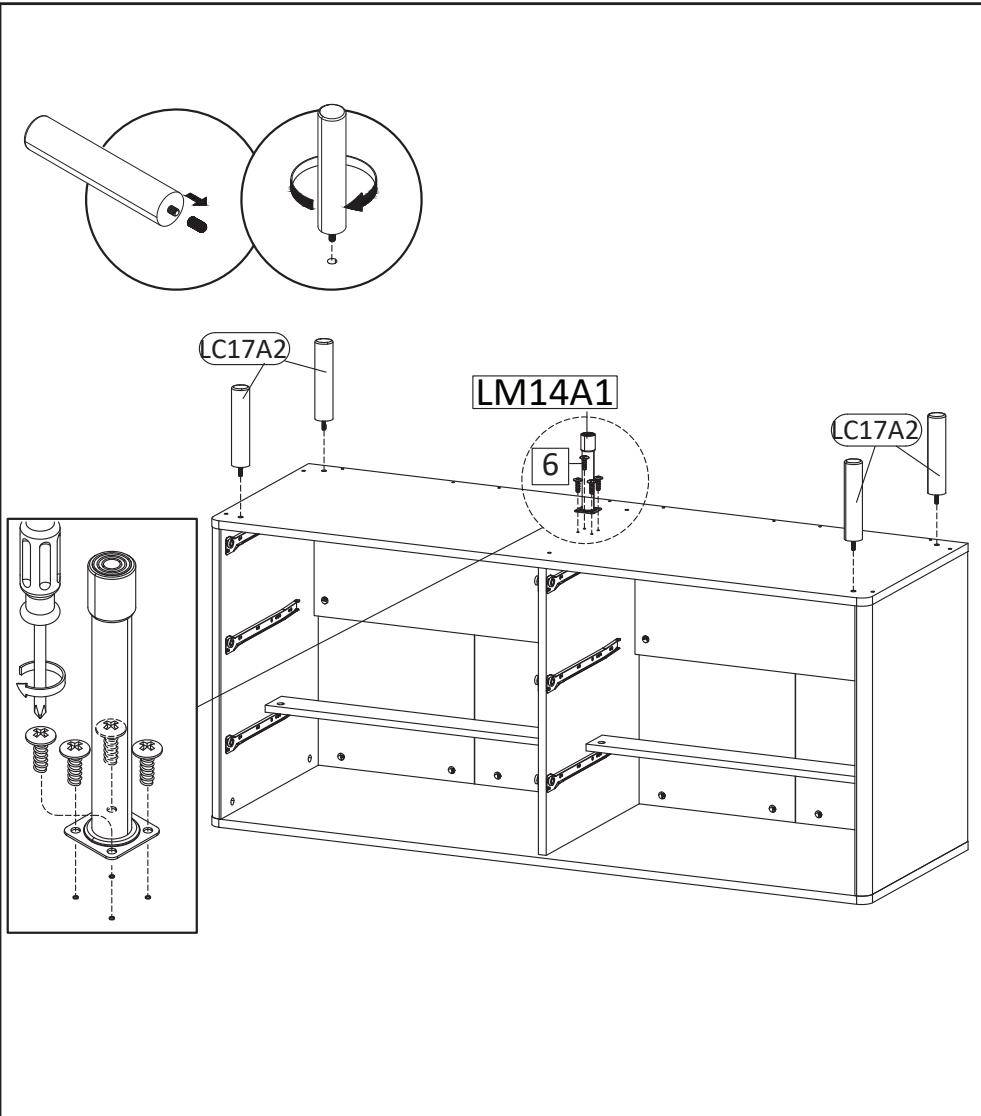

STEP25: Insert Leg (LC17A2) into position as shown in picture, tighten by rotating the leg clockwise. Install Metal Leg (LM14A1) secure with Screw M4.5x12.5mm (HW6) and tighten it using screwdriver as figure.


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

<p>STEP26: Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at side boards and center board, according to the image. Slide in the drawers one by one into the Sideboard.</p>	<p>STEP27: Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at side boards and center board, according to the image. Slide in the drawers one by one into the Sideboard.</p>

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 120 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

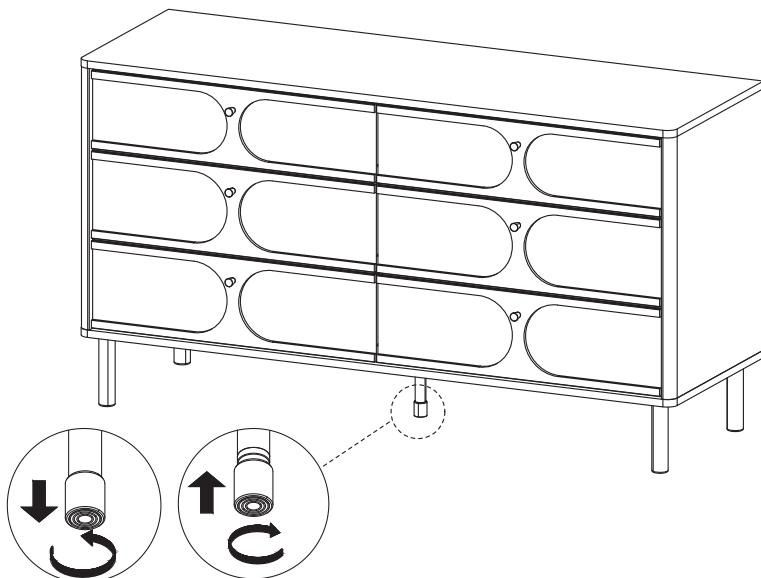

STEP28: Place your furniture on level floor. The legs come with adjustable leveller,adjust it as needed until your furniture sit steady on the floor. Assembly is complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.

The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

