


FRANKIE BURL

2 DRAWER NIGHTSTAND

DESIGN # SFV7724

Assembly Instructions

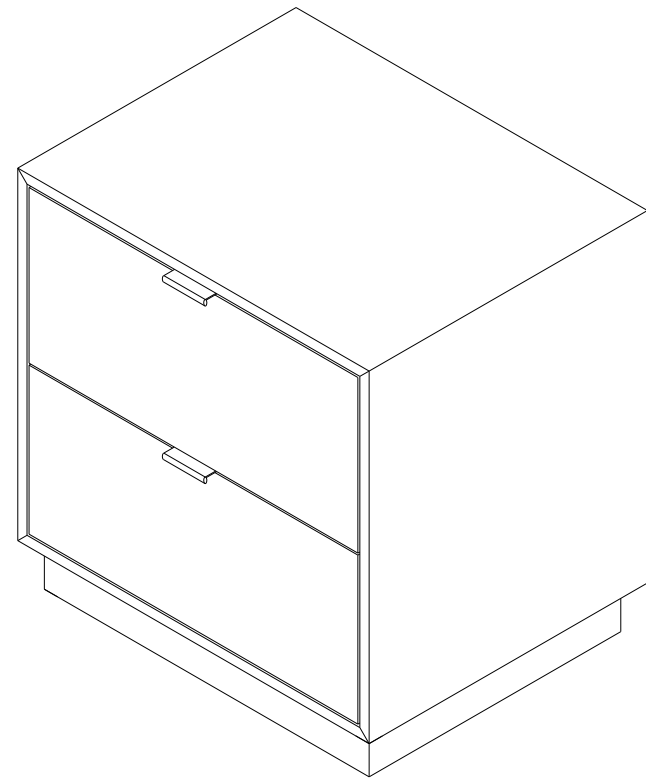

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com
866-422-9070


SAFAVIEH
C O U T U R E

Thanks for bringing
Safavieh Couture into
your home


Everything we make is incredibly
simple to set up, including your new
Nightstand. You won't need any
additional tools.

Hardware List


HW1 x 2
Small screw 6 x 3/4"



HW2 x 2
Large screw 6 x 1 1/2"



HW3 x 2
Bracket




HW4 x 1
Retention Belt



1


If the floor is uneven, adjust the levelers on the bottom of the legs as needed to make the top level.

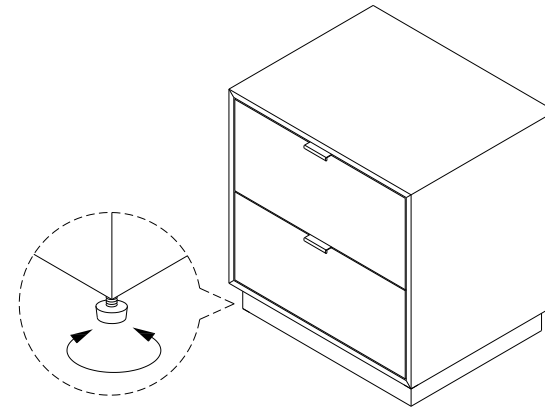

2

- Place the nightstand against the wall at the desired location. Locate and mark the wall stud behind the nightstand.
- Mark the stud location on the back of the nightstand. Attach one of the brackets (HW3) to back of the nightstand by screwing in the small screws (HW1).
- To keep the hardware out of view after installation, attach the remaining Bracket (HW3) 2 inches below the bracket that's attached to the back of the nightstand. Use the large screws (HW2) to attach the remaining bracket to the wall.
- Move the nightstand into place. Align the 2 brackets and then connect them with the Retention Belt (HW4).
- Confirm Belt is securely laced and locked.

⚠ WALL BRACKET MUST BE ATTACHED TO WALL STUD

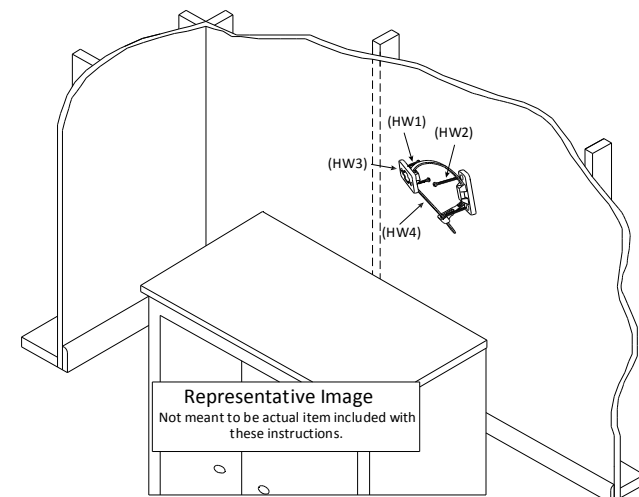

Place the nightstand in the place where you will use it. We'd love to see it — just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

@safavieh

