

## NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

## PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 10 minutes.
- \* Tools Required for Assembly (included): Allen Key


## CARE AND MAINTENANCE

**WOOD CARE:** Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.



**ITEM ID:** BCH3300

**ITEM DIMENSION:** W45.7"x D20.3"x H36.4"x SH18"

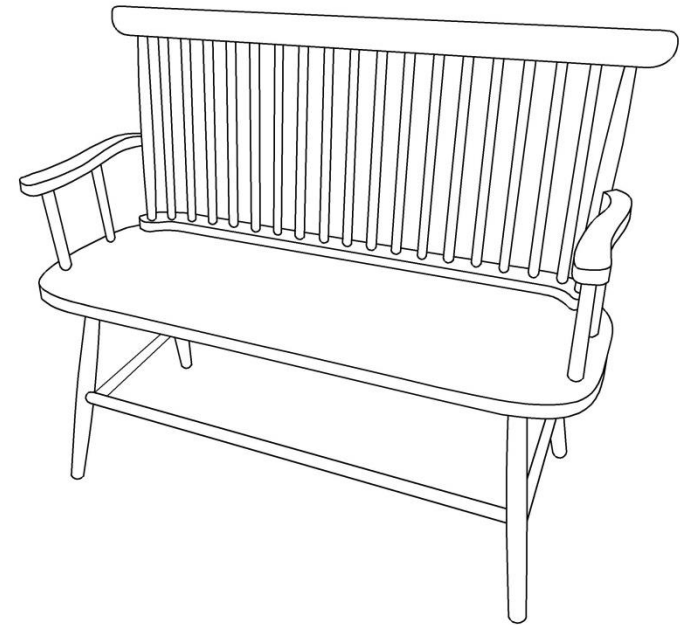

**WARNING**


















Weight Capacity : 225lbs

Warning : Do not stand on bench

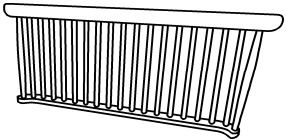
Warning : Do not over torque bolts

### Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY	PIECE	DESCRIPTION	PICTURE	QUANTITY
<b>A</b>	Backrest		1X	<b>HW2</b>	JCBC M6 x 40mm		16X
<b>B</b>	Seat		1X	<b>HW3</b>	Spring Washer		12X
<b>C</b>	Right Arm		1X	<b>HW4</b>	Flat Washer		12X
<b>D</b>	Left Arm		1X	<b>HW5</b>	Barrel Nut		4X
<b>E</b>	Right Leg Frame (FR)		1X	<b>HW6</b>	Felt Pad		4X
<b>F</b>	Left Leg Frame (FL)		1X	<b>HW7</b>	Wood Button		4X
<b>G</b>	Strecher		2X	<b>HW8</b>	Allen Key M4 x 110mm		1X
<b>HW1</b>	JCBC M6 x 30mm		4X				

## PREPARATION


- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 10 minutes.
- \* Tools Required for Assembly (included): Allen Key

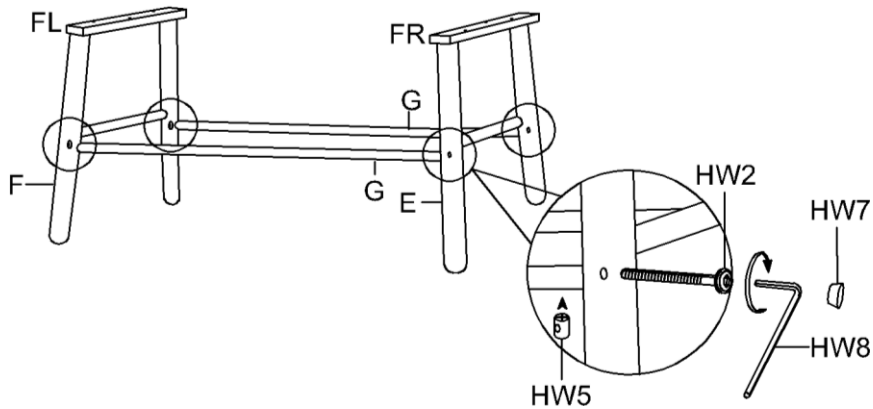


**Step 1:** INSERT JCBC (HW2) AND BARREL NUT (HW5) IN HOLE ON STRETCHER (D) TO ATTACH RIGHT LEG FRAME (D) AND LEFT LEG FRAME (E) THEN PUT WOOD BUTTON (HW7).

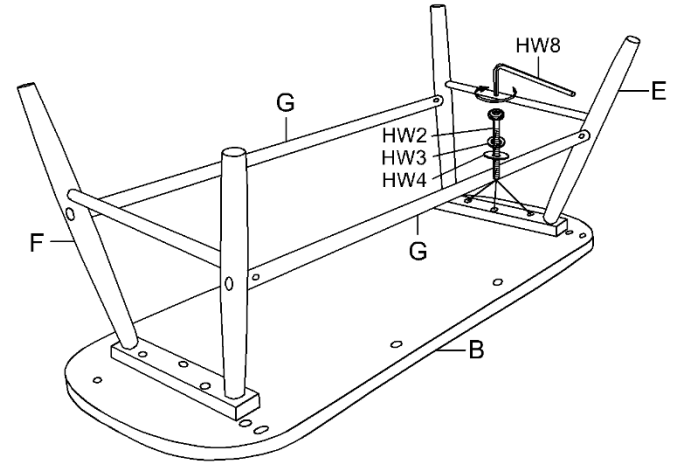


**Step 2:** INSERT THE JCBC (HW2) THEN PUT THE WASHER (HW2, HW3) TO ATTACH RIGHT LEG FRAME (D) AND LEFT LEG FRAME (E) TO THE SEAT (B).

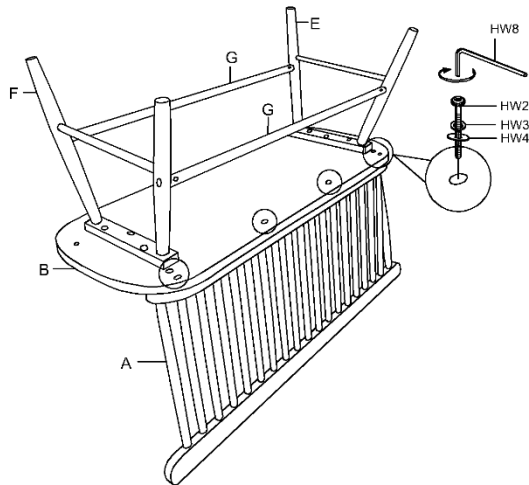


**Step 3:** USE JCBC (HW2) THEN PUT THE WASHER (HW2, HW3) TO ATTACH BACKREST (A).

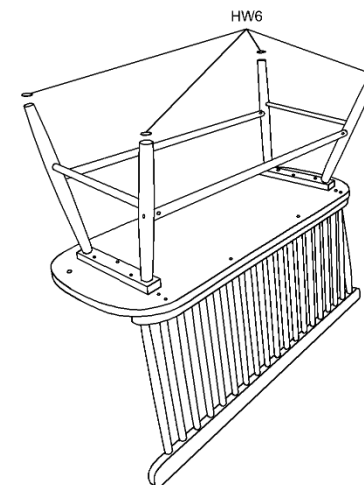

**Step 4:** PUT FELT PAD (HW6) TO THE BOTTOM LEG.

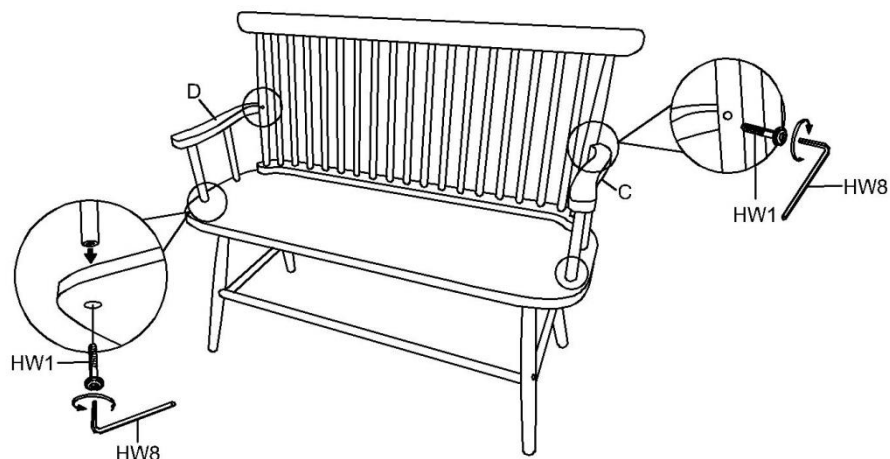

**Step 5:** INSERT JCBC (HW1) TO ATTACH RIGHT ARM (C) AND LEFT ARM (D). FULLY TIGHTEN THE BOLTS.

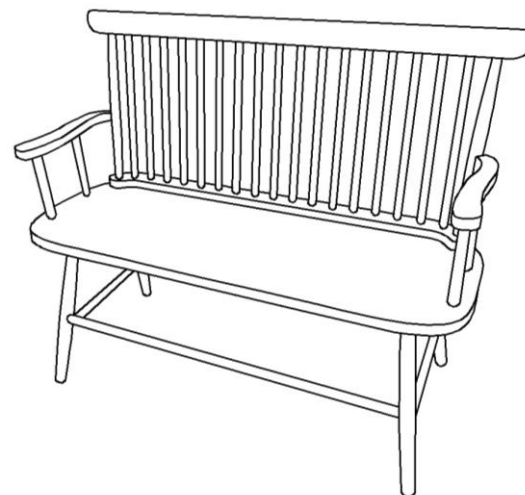

**Step 6:** PUT THE BENCH UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY (HW8) WHILE THE BENCH IS UPRIGHT AS PICTURE ABOVE.