

NOTICE

- *Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- *This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- *This item may require periodic tightening.
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com


PREPARATION

- *Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (Not included): Screwdriver

CARE AND MAINTENANCE


Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

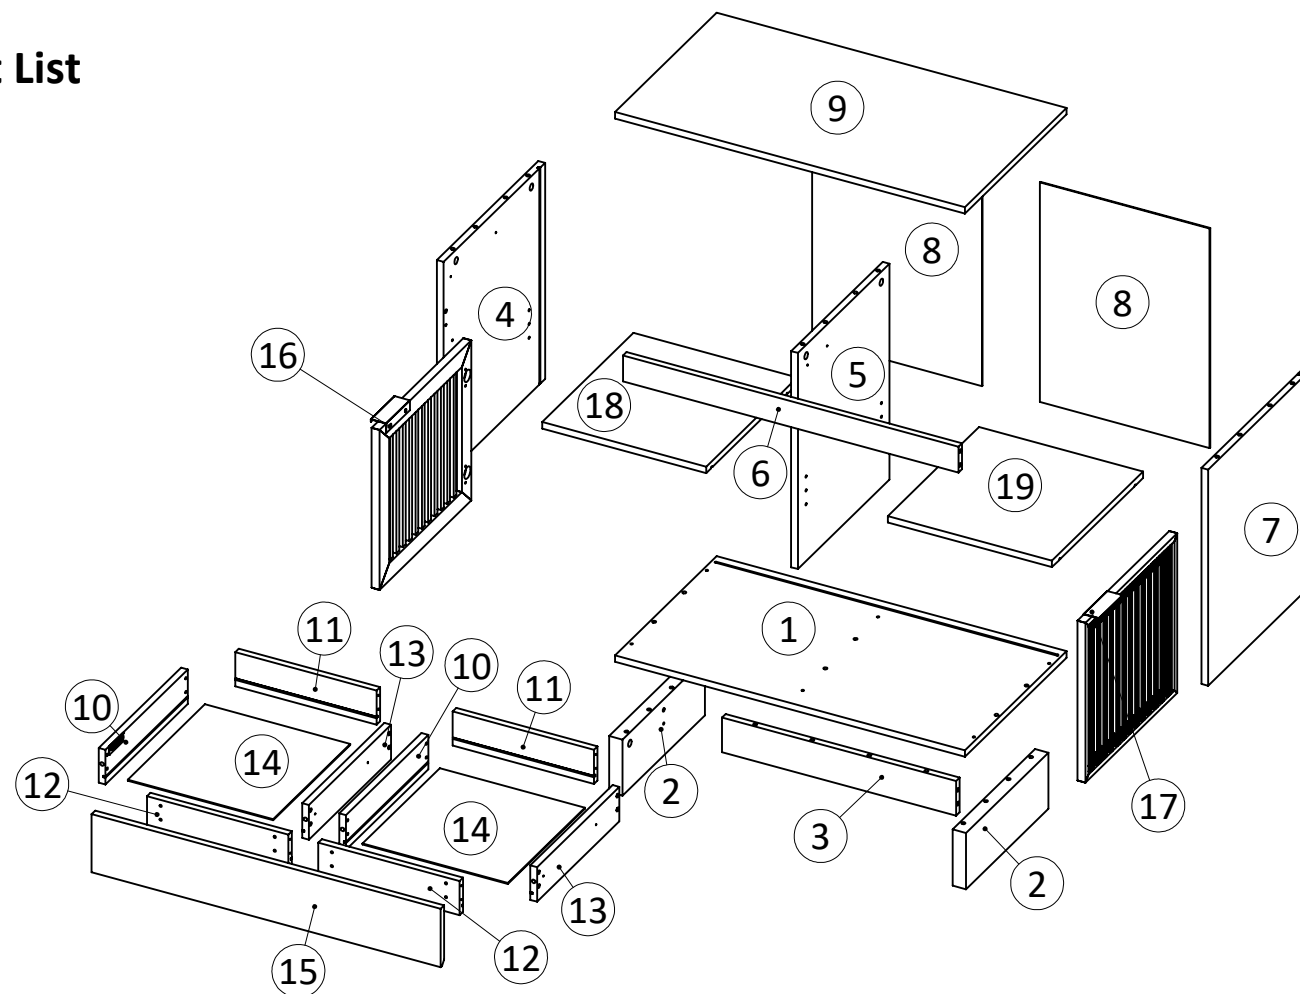

Model# NST3104

Product Dimensions: W 30.91" X D 17.72" X H 26.18"

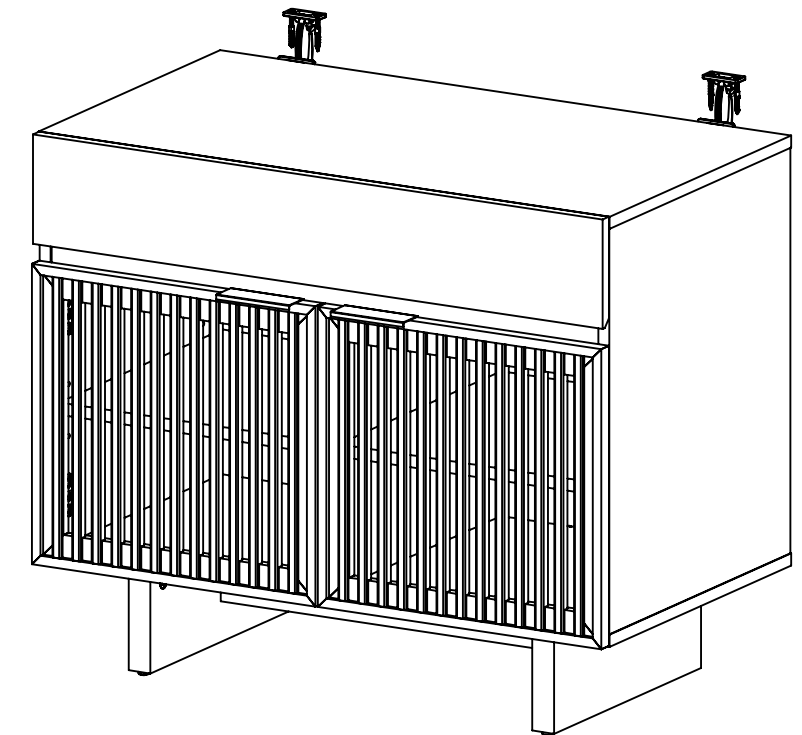

WARNING

WEIGHT CAPACITY

Top Load Limit: 37 Lbs





















Shelf Load Limit : 15 Lbs





Drawer Load Limit: 6 Lbs Of Each Drawer

Warning : Do not stand on night stand.

Warning : Do not over torque bolts

Hardware List
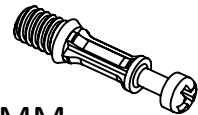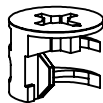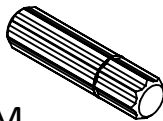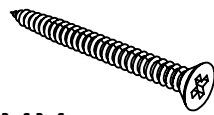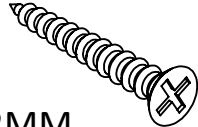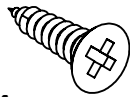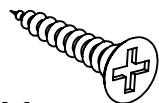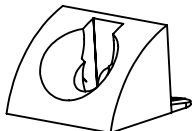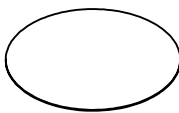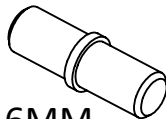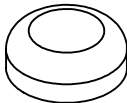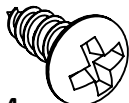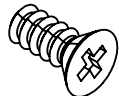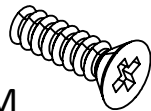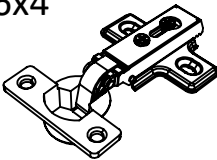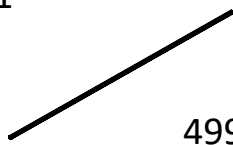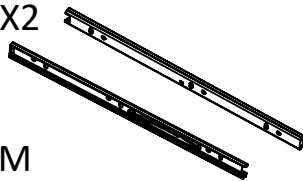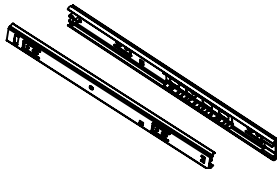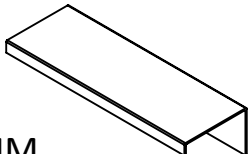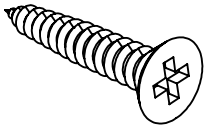
<div>HW1x16</div> <div></div> <div>Ø6x32MM</div>	<div>HW2x16</div> <div></div> <div>Ø15x12MM</div>	<div>HW3x26</div> <div></div> <div>Ø8x32MM</div>	<div>HW4x6</div> <div></div> <div>Ø6x50MM</div>	<div>HW5x16</div> <div></div> <div>Ø7x32MM</div>	<div>HW7x4</div> <div></div> <div>Ø6x12MM</div>
<div>HW8x14</div> <div></div> <div>Ø4x19MM</div>	<div>HW9x14</div> <div></div> <div></div>	<div>HW10x24</div> <div></div> <div></div>	<div>HW11x8</div> <div></div> <div>Ø5x16MM</div>	<div>HW12x2</div> <div></div> <div>Ø8 MM</div>	<div>HW13x16</div> <div></div> <div>PHØ6x12MM</div>
<div>HW14x8</div> <div></div> <div>Ø5x8.5MM</div>	<div>HW15x8</div> <div></div> <div>Ø5x12MM</div>	<div>HW16x4</div> <div></div> <div></div>	<div>HW18x1</div> <div></div> <div>List "H" 499MM</div>	<div>HW19X2</div> <div></div> <div>300MM</div>	<div>HW20X2</div> <div></div> <div>300MM</div>
<div>HW21X2</div> <div></div> <div>100MM</div>	<div>HW24X8</div> <div></div> <div>Ø6x25MM</div>				

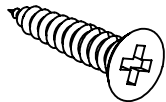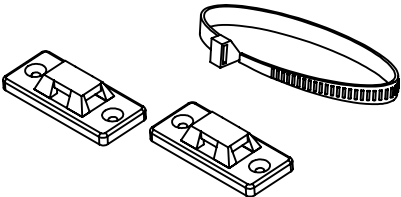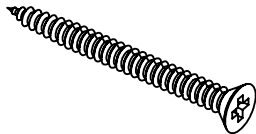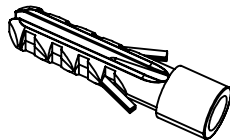Anti-tip restraint pack	
<div>HW6x4</div> <div></div> <div>Ø6x15MM</div>	<div>HW17x2</div> <div></div> <div></div>
<div>HW22X4</div> <div></div> <div>Ø10x50MM</div>	<div>HW23X4</div> <div></div> <div>Ø8MM</div>

Part List & HW For Multi-Box Items


Piece	Description	Qty	Carton Call
1	Bottom Panel	1	1 of 1
2	Leg	2	1 of 1
3	Leg Support	1	1 of 1
4	Left Side Panel	1	1 of 1
5	Center Panel	1	1 of 1
6	Top Support	1	1 of 1
7	Right Side Panel	1	1 of 1
8	Back Panel	2	1 of 1
9	Top Panel	1	1 of 1
10	Left Side Drawer	2	1 of 1
11	Drawer Back	2	1 of 1
12	Drawer Front Support	2	1 of 1
13	Right Side Drawer	2	1 of 1
14	Drawer Base	2	1 of 1
15	Front Drawer	1	1 of 1
16	Left Door	1	1 of 1
17	Right Door	1	1 of 1
18	Adjustable shelf-left	1	1 of 1
19	Adjustable shelf-right	1	1 of 1

Piece	Description	Qty	Carton Call
HW1	Cambolt	16	1 of 1
HW2	Camlock	16	1 of 1
HW3	Wooden Dowel Ø8x32 mm	26	1 of 1
HW4	Screw M 6 x 50 mm	6	1 of 1
HW5	Screw M 7 x 32 mm	24	1 of 1
HW6	Screw M 6 x 15 mm	4	1 of 1
HW7	Screw M 6 x 12 mm	4	1 of 1
HW8	Screw M 4 x 19 mm	14	1 of 1
HW9	Plastic Stopper	14	1 of 1
HW10	Cover Cap Sticker	24	1 of 1
HW11	Metal Pin	8	1 of 1
HW12	Rubber Stoper	2	1 of 1
HW13	Screw PH 6 X 12 mm	16	1 of 1
HW14	SCREW M5 x 8.5 MM	8	1 of 1
HW15	Screw M 5 x 12 mm	8	1 of 1
HW16	Straight Hinge	4	1 of 1
HW17	Anti - Tip	2	1 of 1
HW18	List "H"	1	1 of 1
HW19	Metal Runner 1	2	1 of 1
HW20	Metal Runner 2	2	1 of 1
HW21	HANDLE	2	1 of 1
HW22	Screw M10 x 50 MM	4	1 of 1
HW23	Fisher "S"8	4	1 of 1
HW24	Screw M6 X 25 MM	8	1 of 1


Special Tips for Fitting Minifix Cam (Cam-Lock), and Minifix Bolt (Cam-Bolts)

CAM-BOLT



Tighten until shoulder is flush with panel. Do not overtighten or undertighten (see example below)

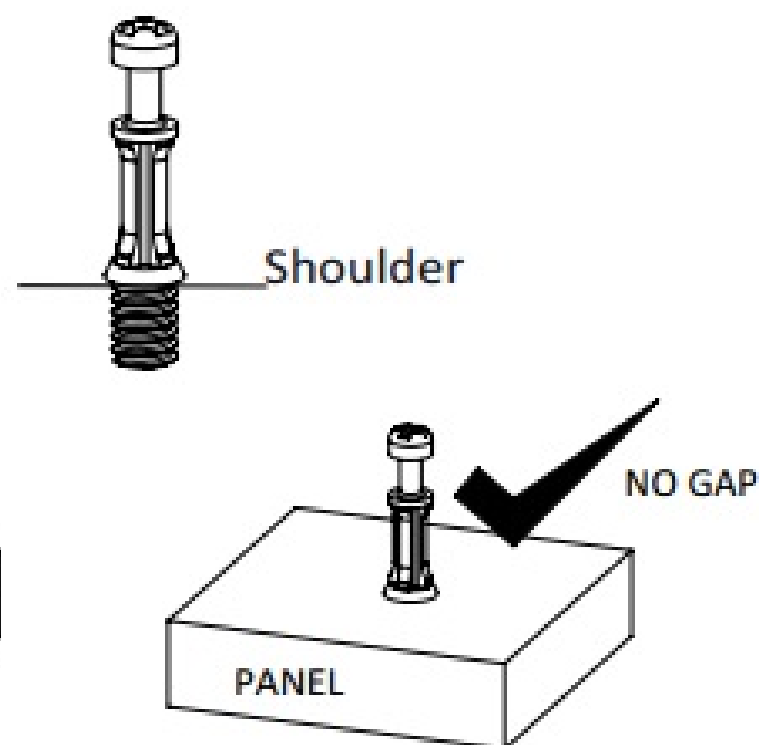

CAM-LOCK

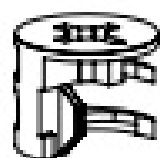


WHEN TIGHTENING CAM-LOCK
Turn the Cam-lock Clockwise Until
The Arrow Points in the Position as bellow

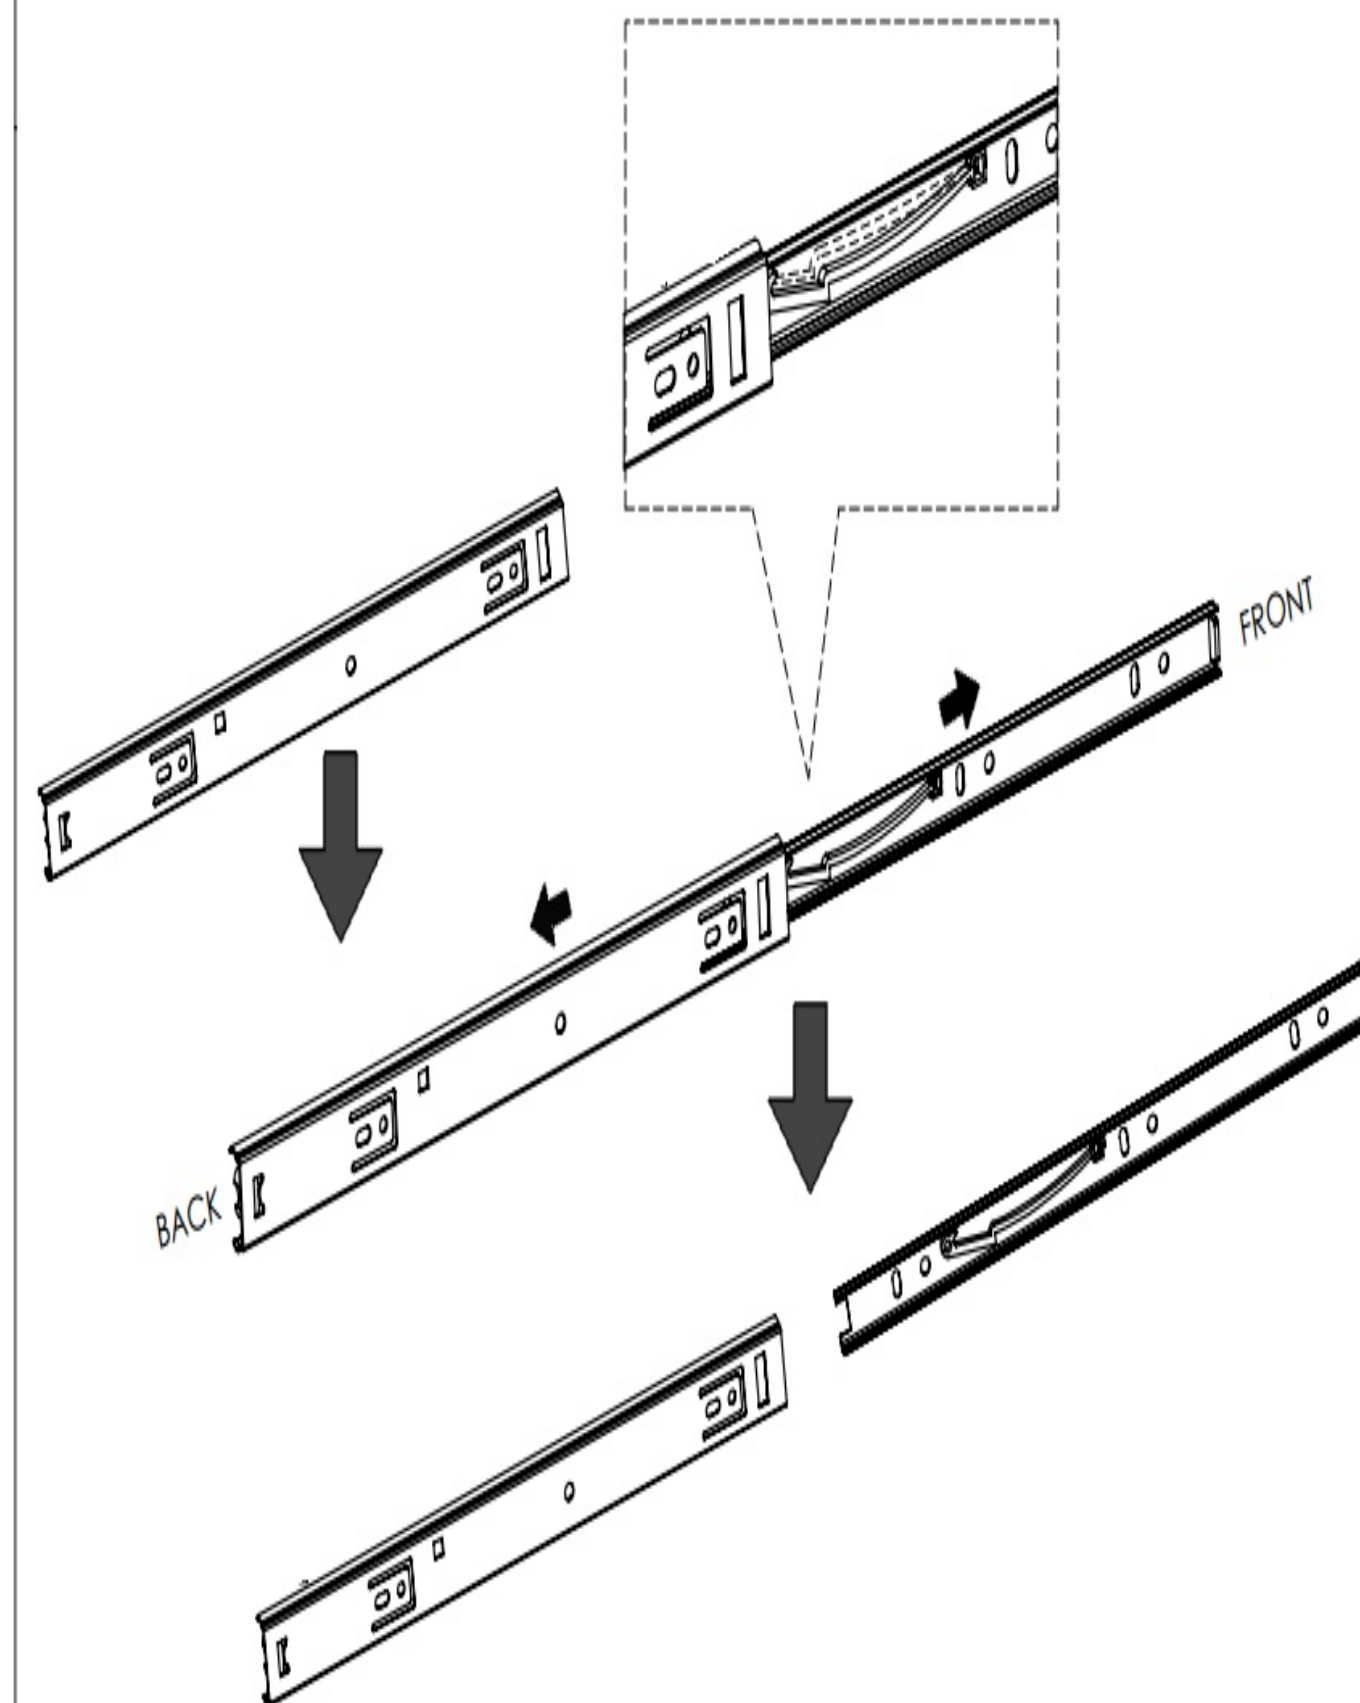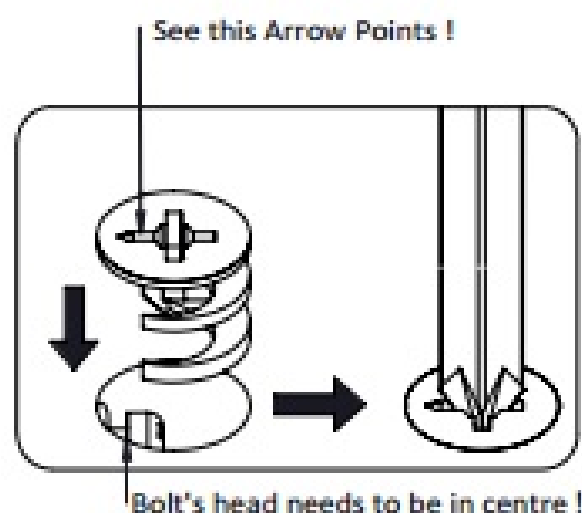


PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

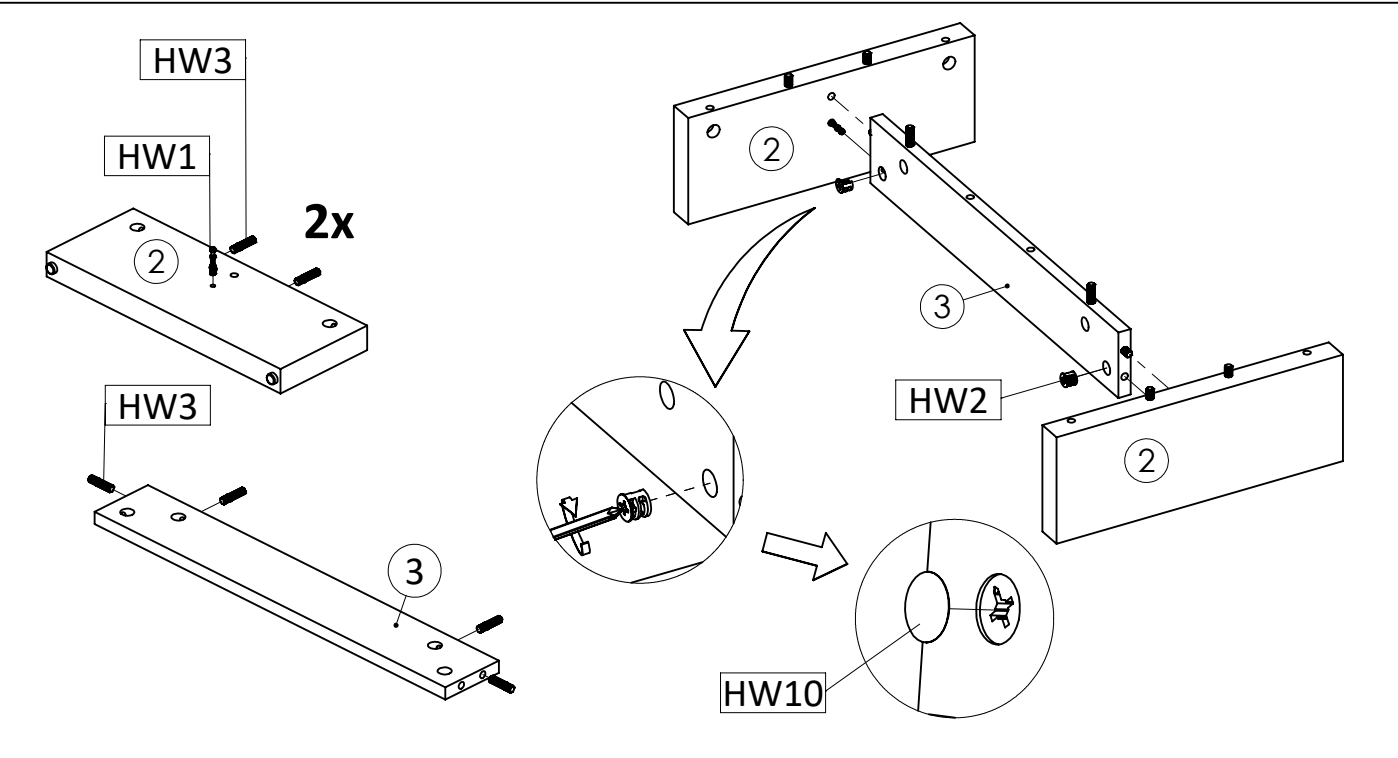


STEP1: Insert Cambolt (HW1) into leg (2) .Insert Wooden Dowel HW3) into leg (2) and leg support (3).Attach leg (2) into leg support (3),Secure with Camlock (HW2) and tighten it using screwdriver.Attach Cover Cap Sticker (HW10) to the panel that has lamination.

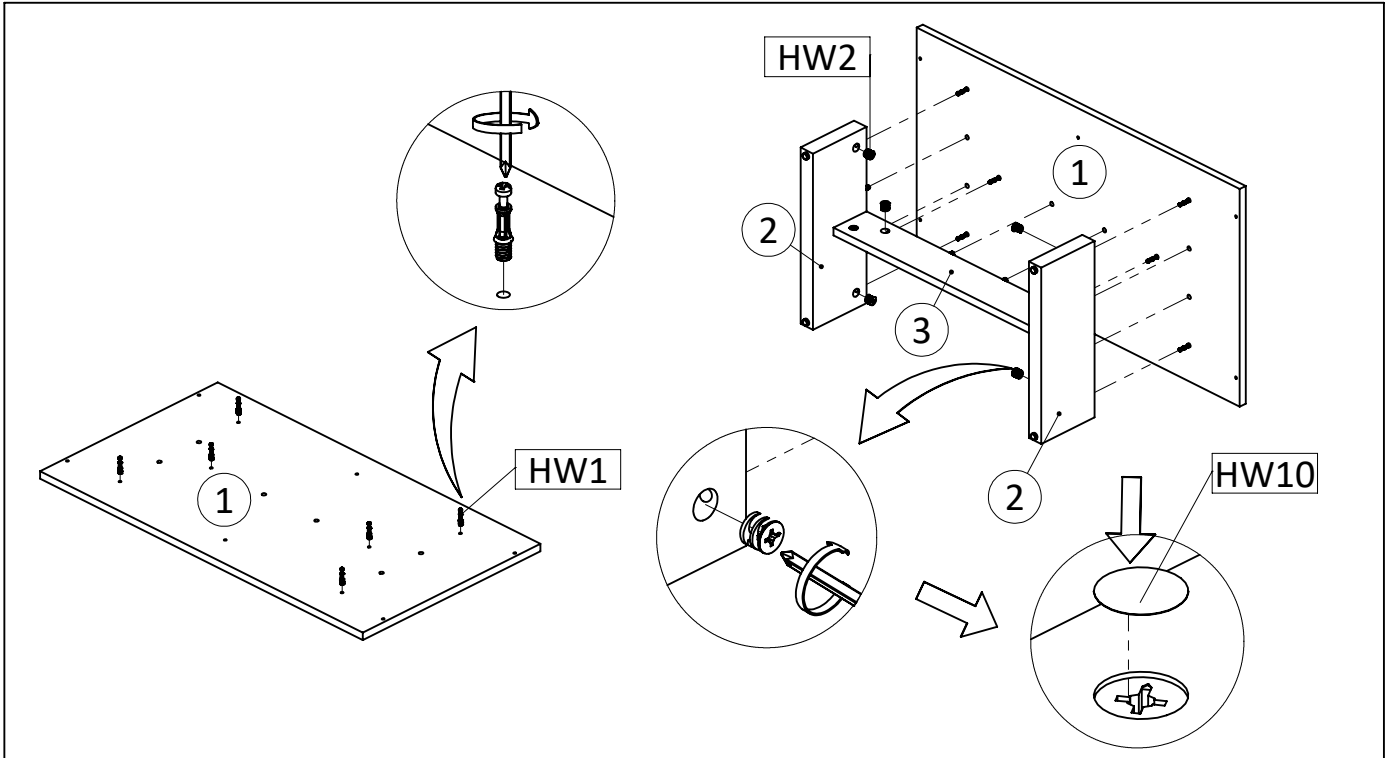





STEP2: Insert Cambolt (HW1) into bottom panel (1).insert leg (2) and leg support (3)into bottom panel (1) Secure with Camlock (HW2).Attach Cover Cap Sticker (HW10) to the panel that has lamination.




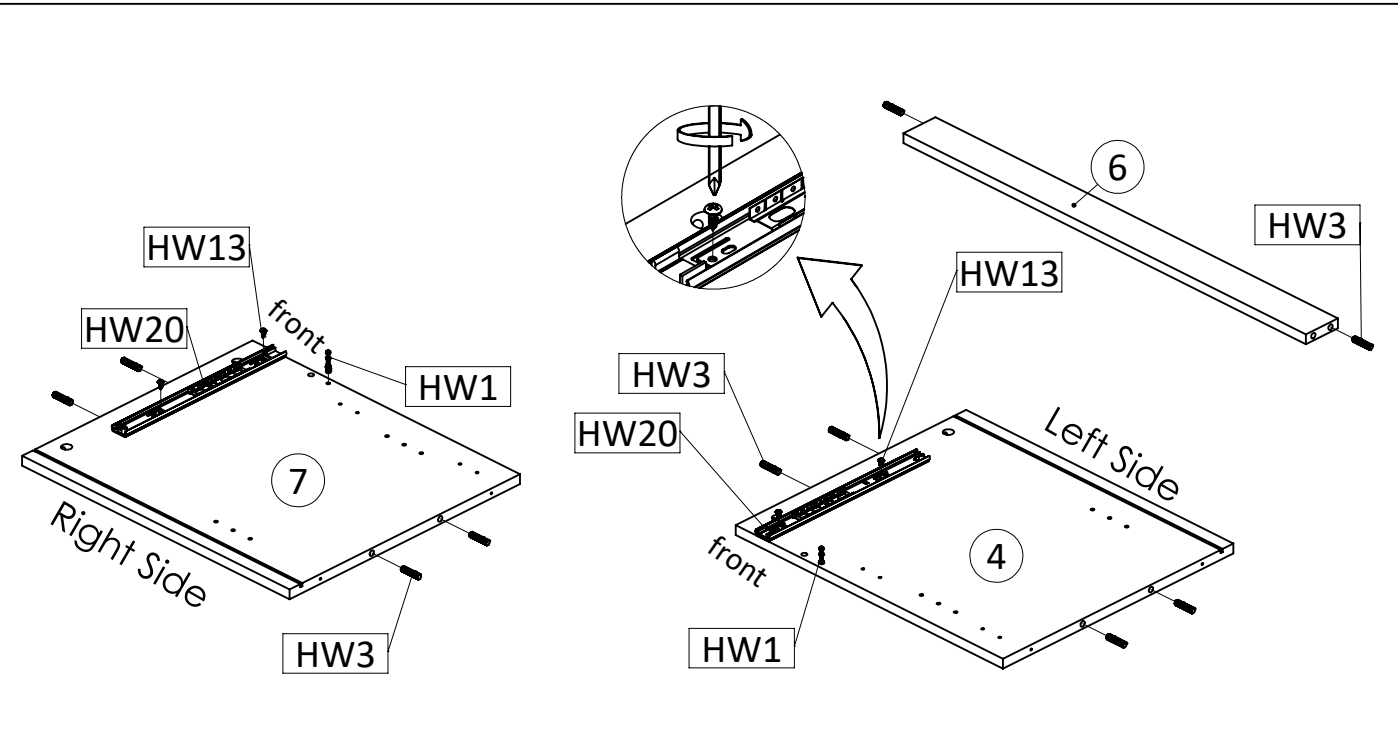



STEP3: Insert Cambolt (HW1) into left side panel (4) and right side panel (7).Insert Wooden Dowel (HW3) into left Side Panel (4) right side panel (7) and top support (6),Continue with securing part of the metal runner 2 (HW20) into position as the above image, using screw M6x12mm PH (HW13)

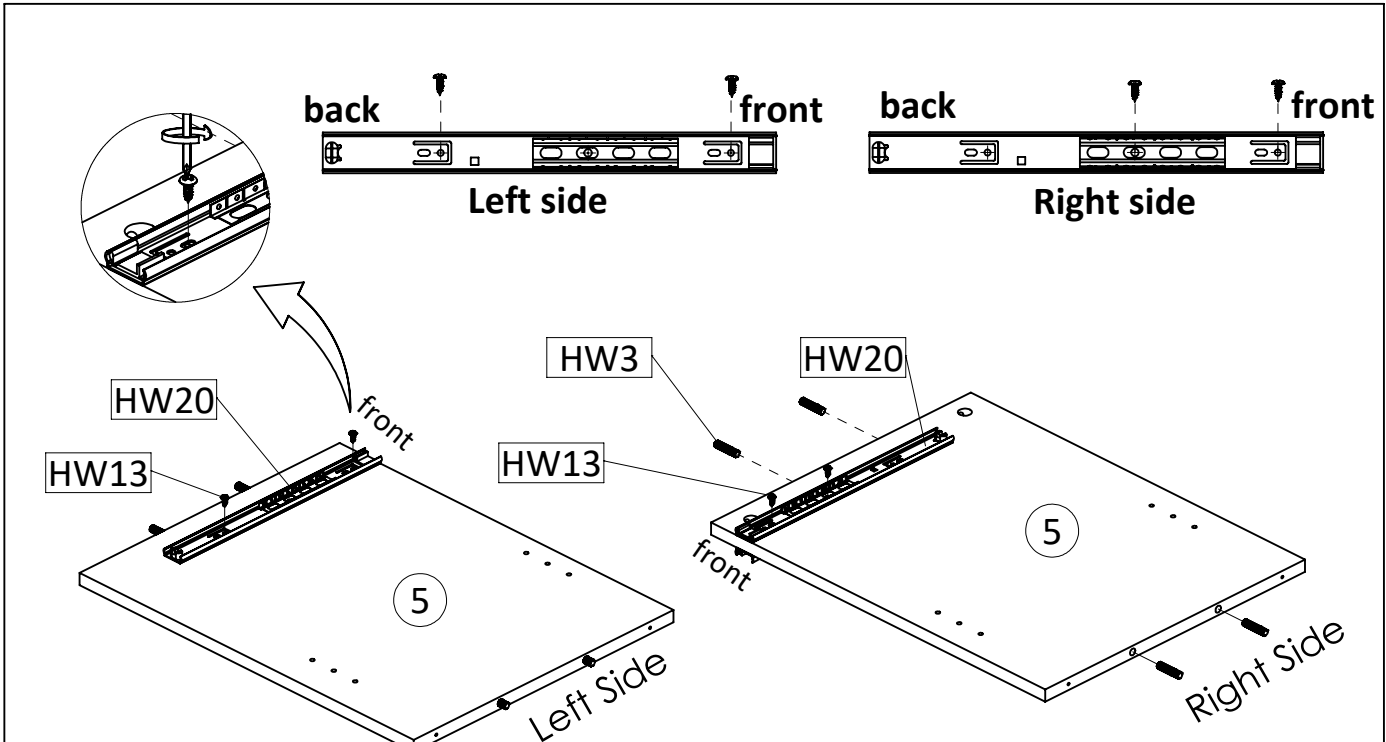


STEP4: Insert Wooden Dowel (HW3) into center panel (5),Continue with securing part of the metal runner 2 (HW20) into position as the above image, using screw M6x12mm PH (HW13).

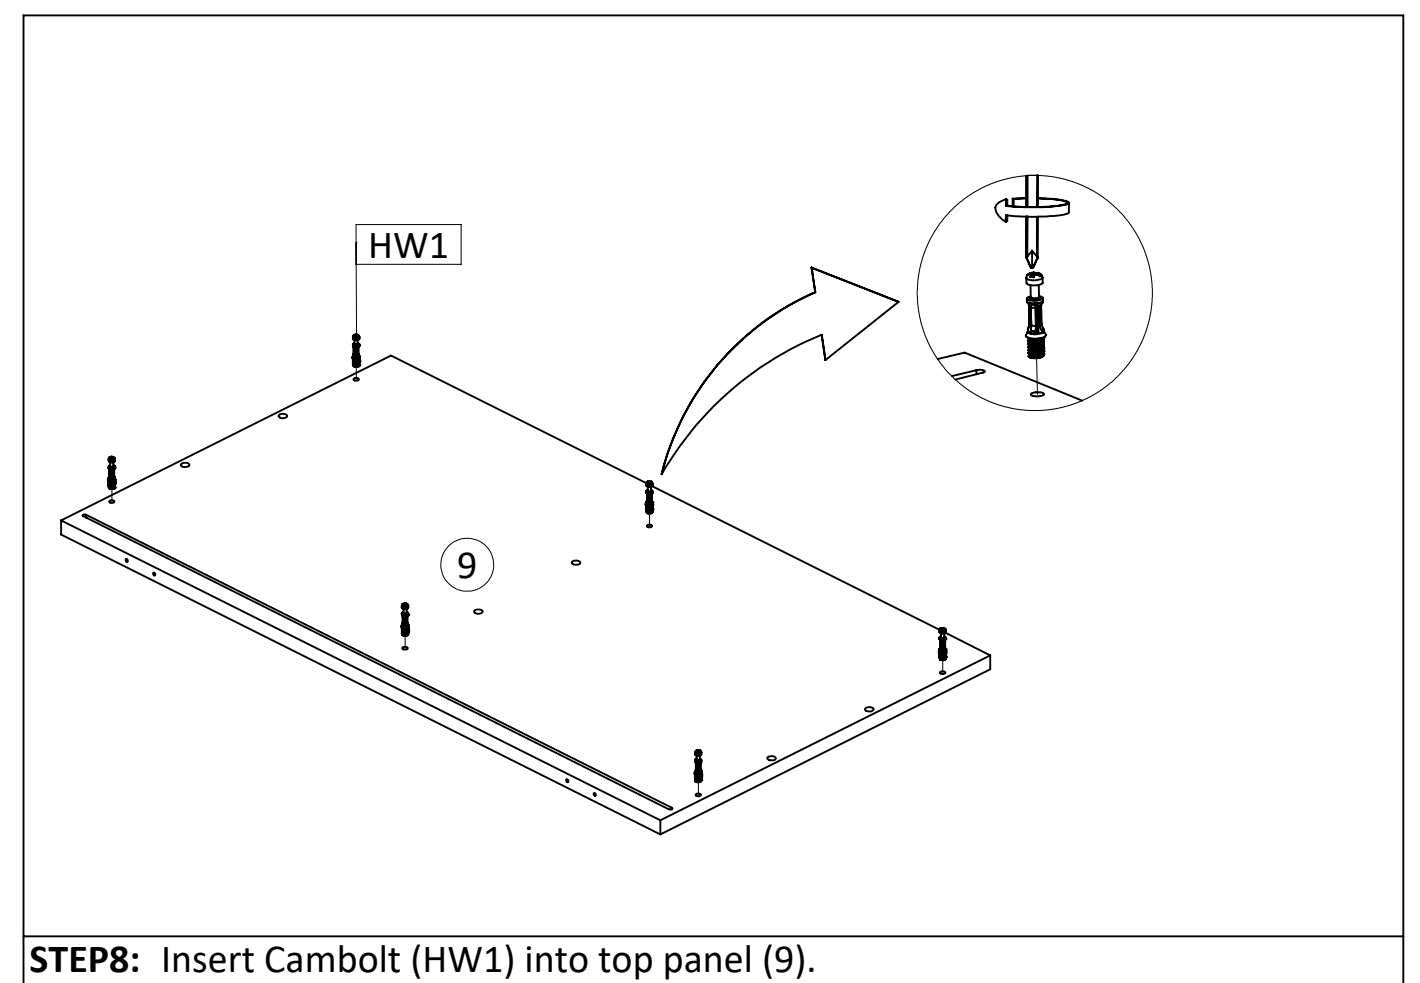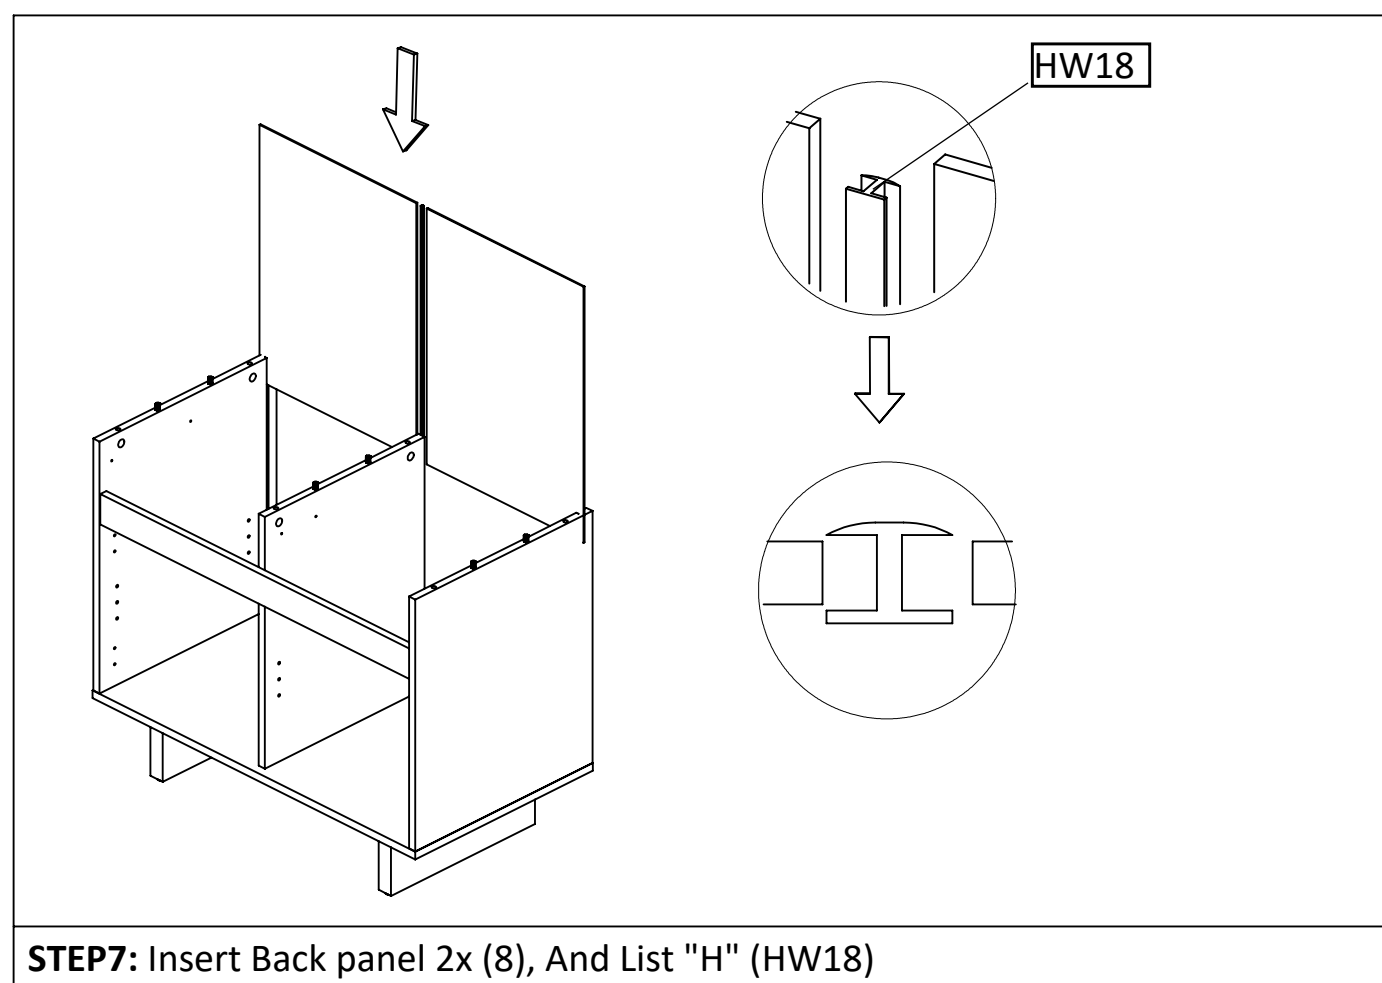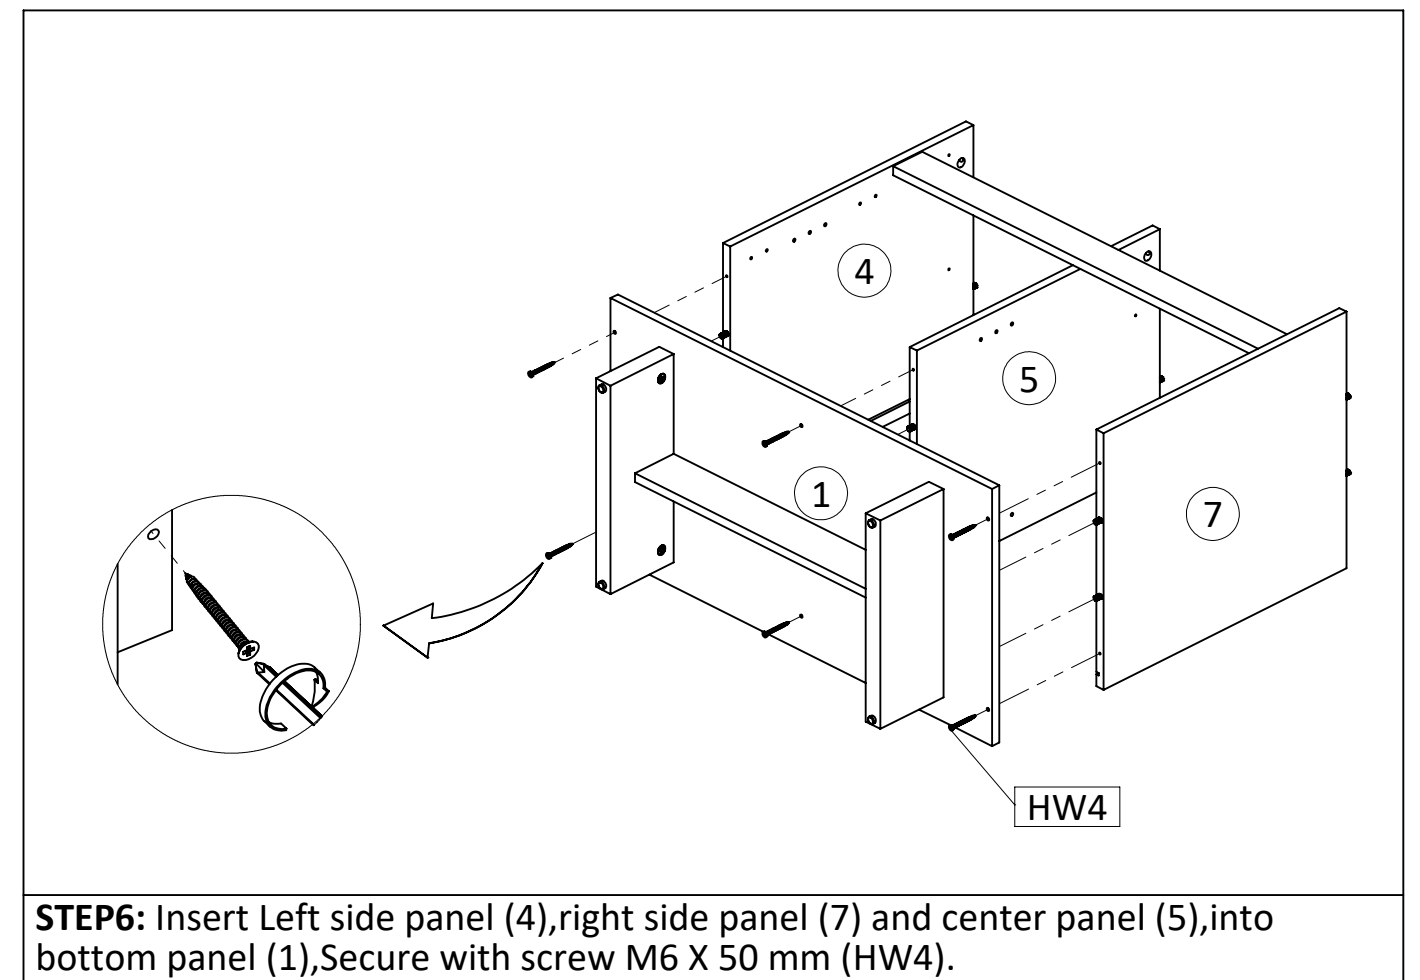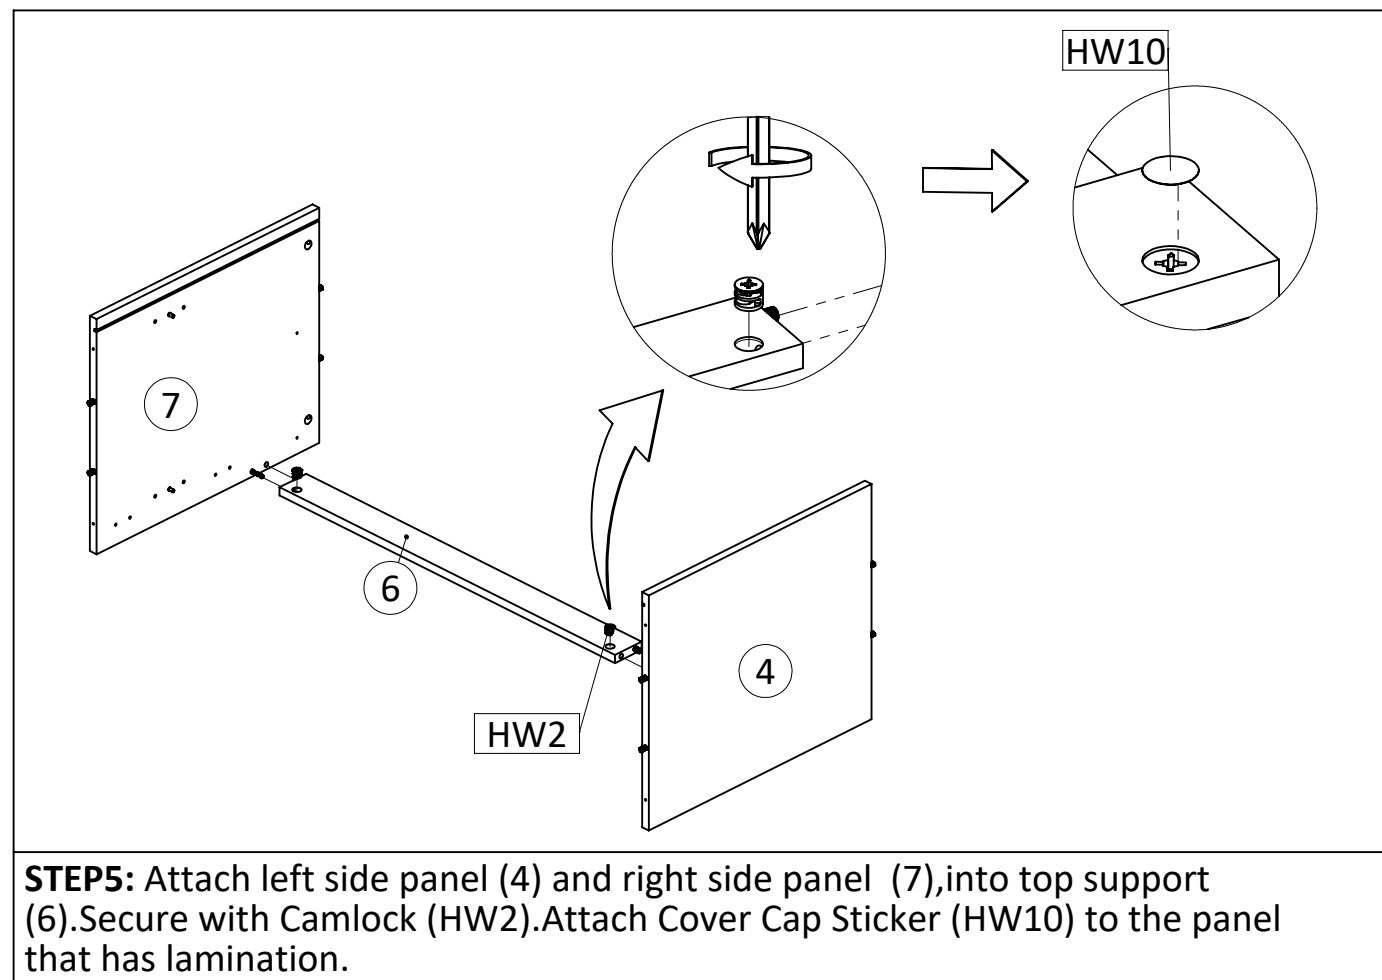

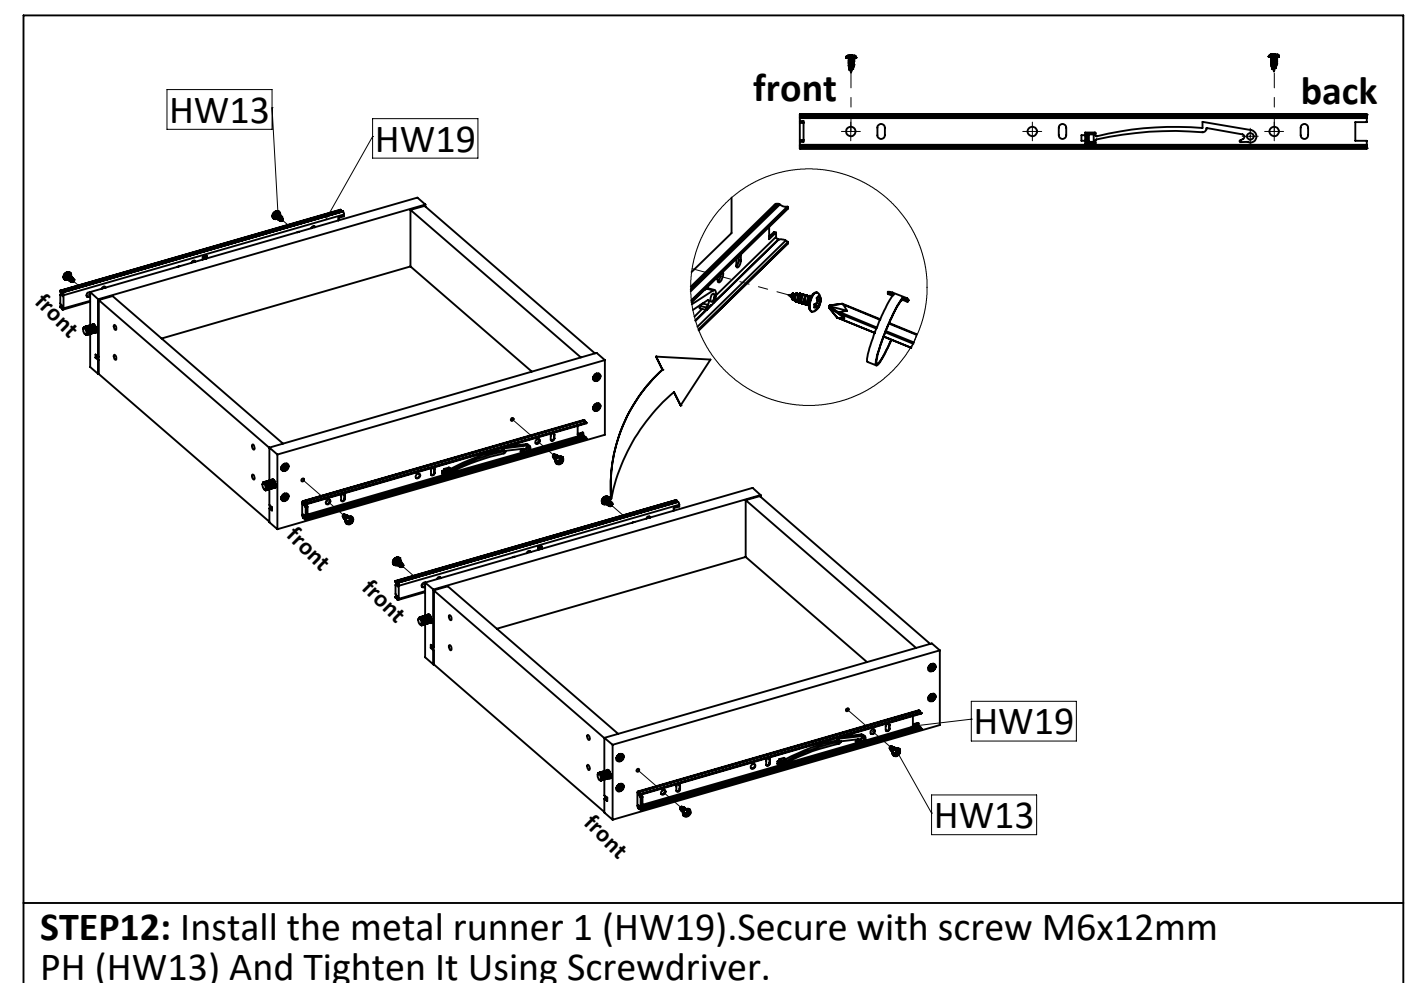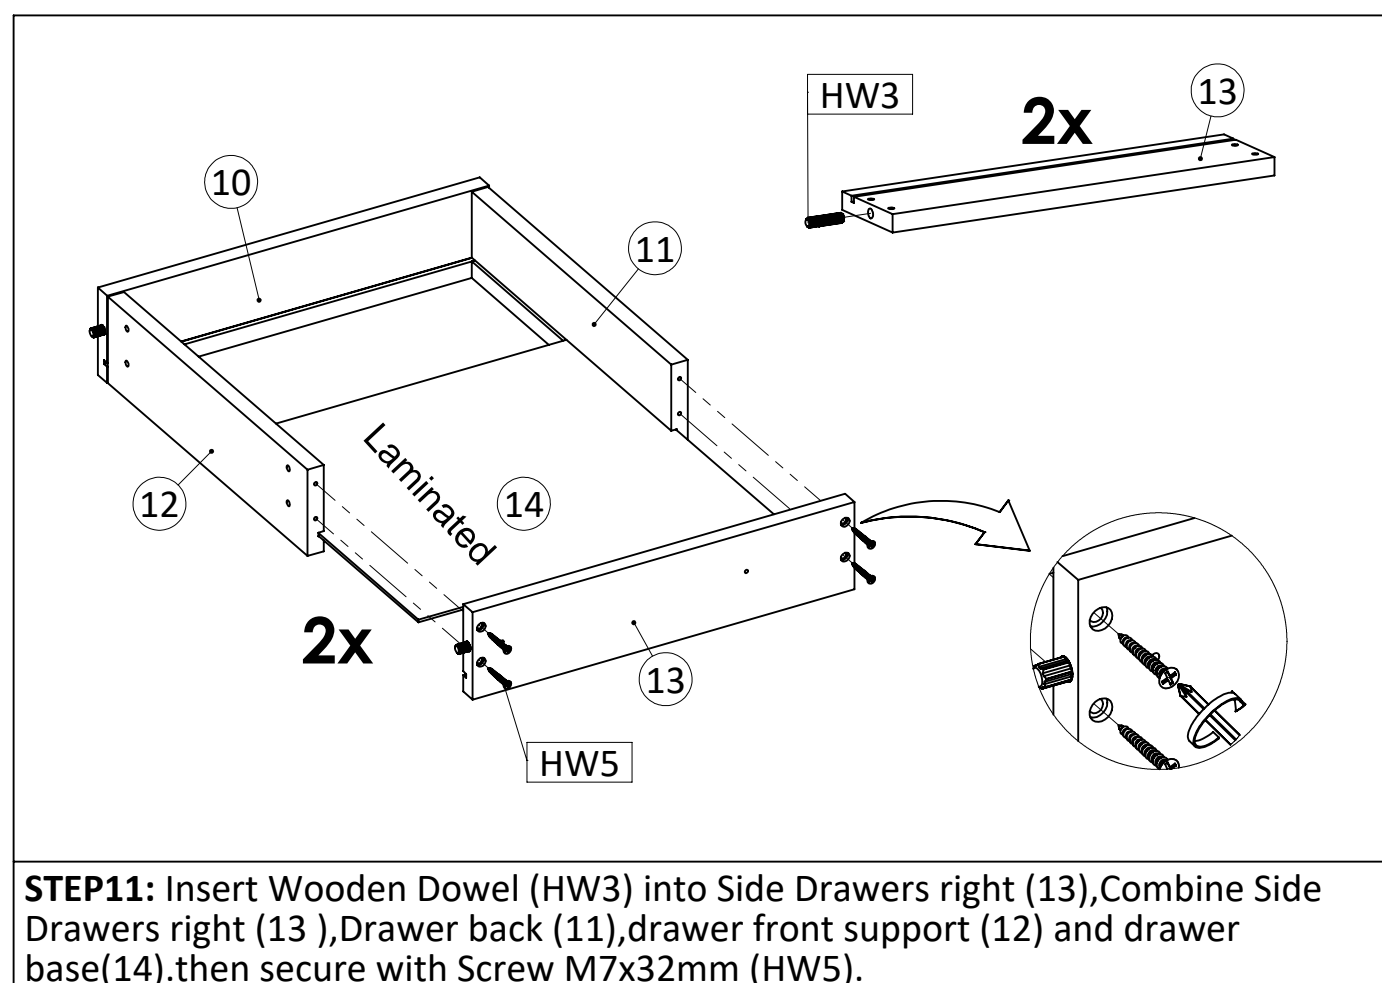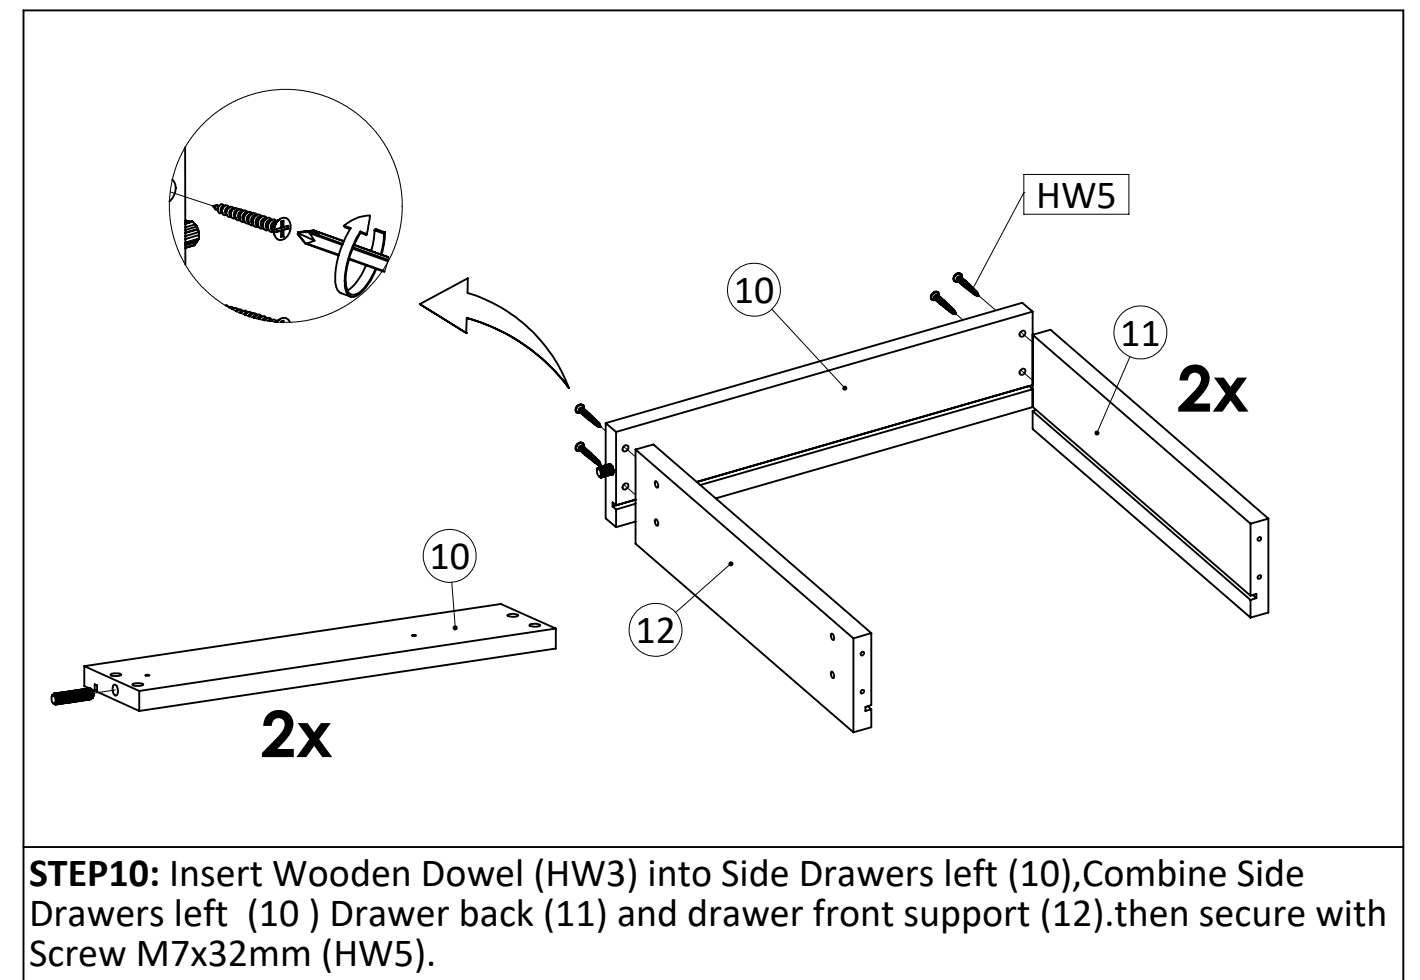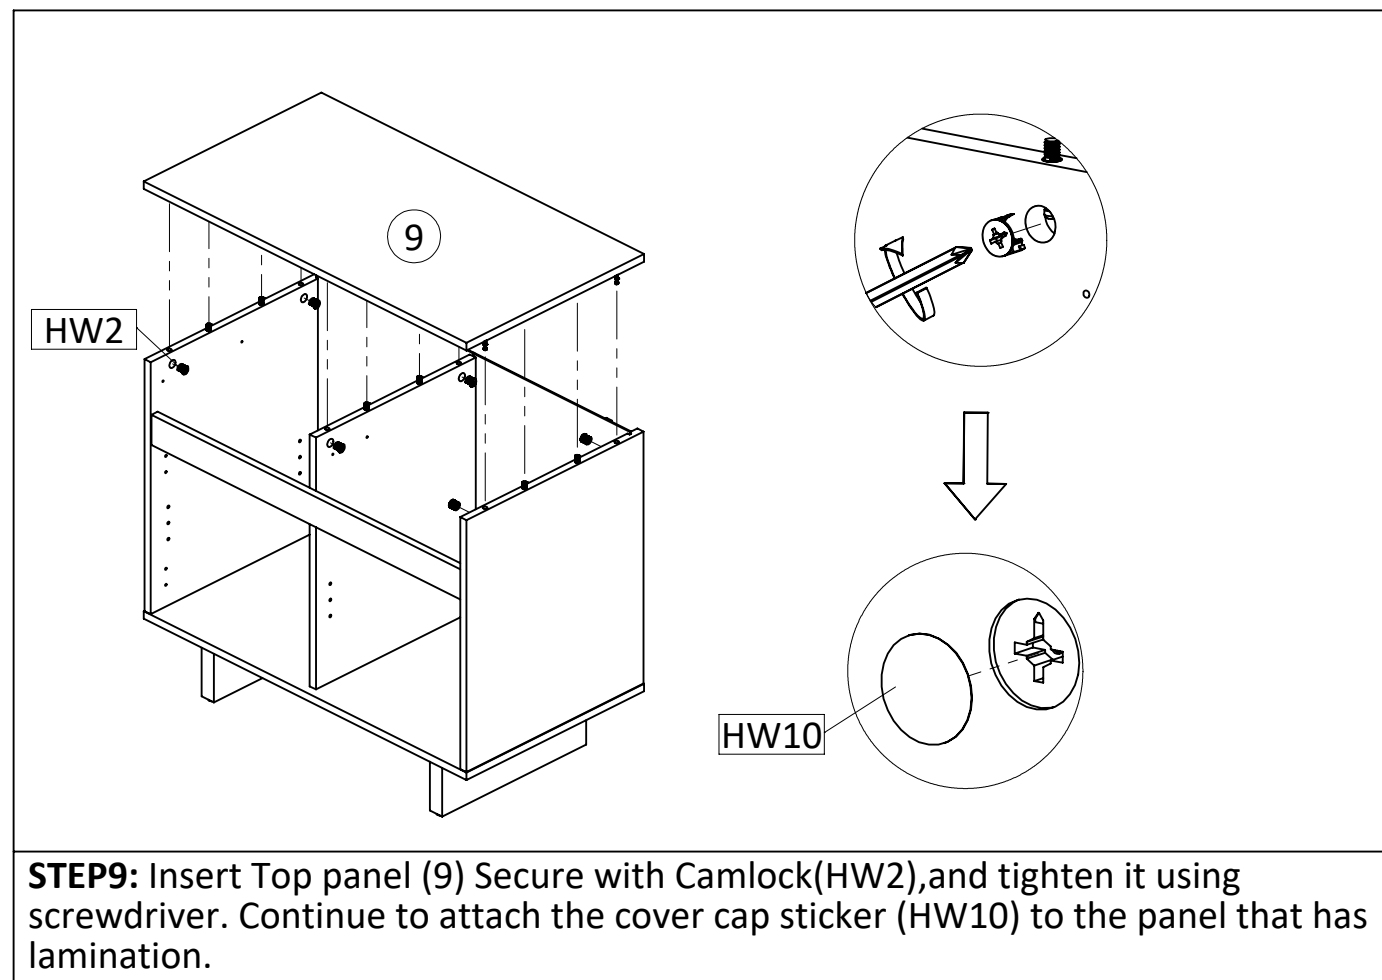


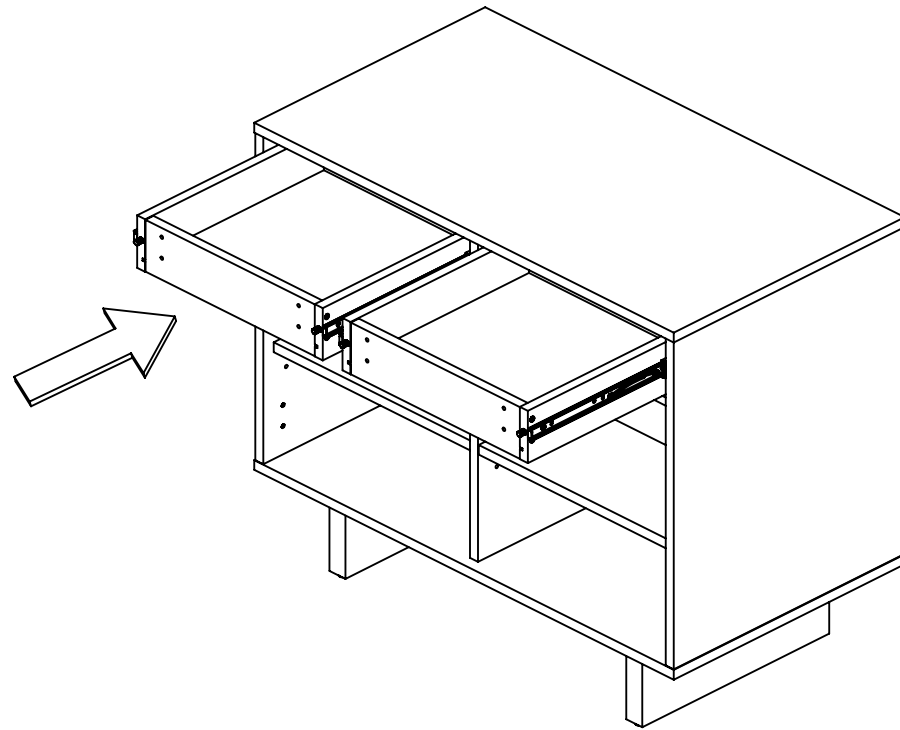


STEP13: Hold the sides of drawer, position the wheel of rail at drawer back and the wheel of rail at side boards, according to the image. Slide in the drawers into the cabinet.

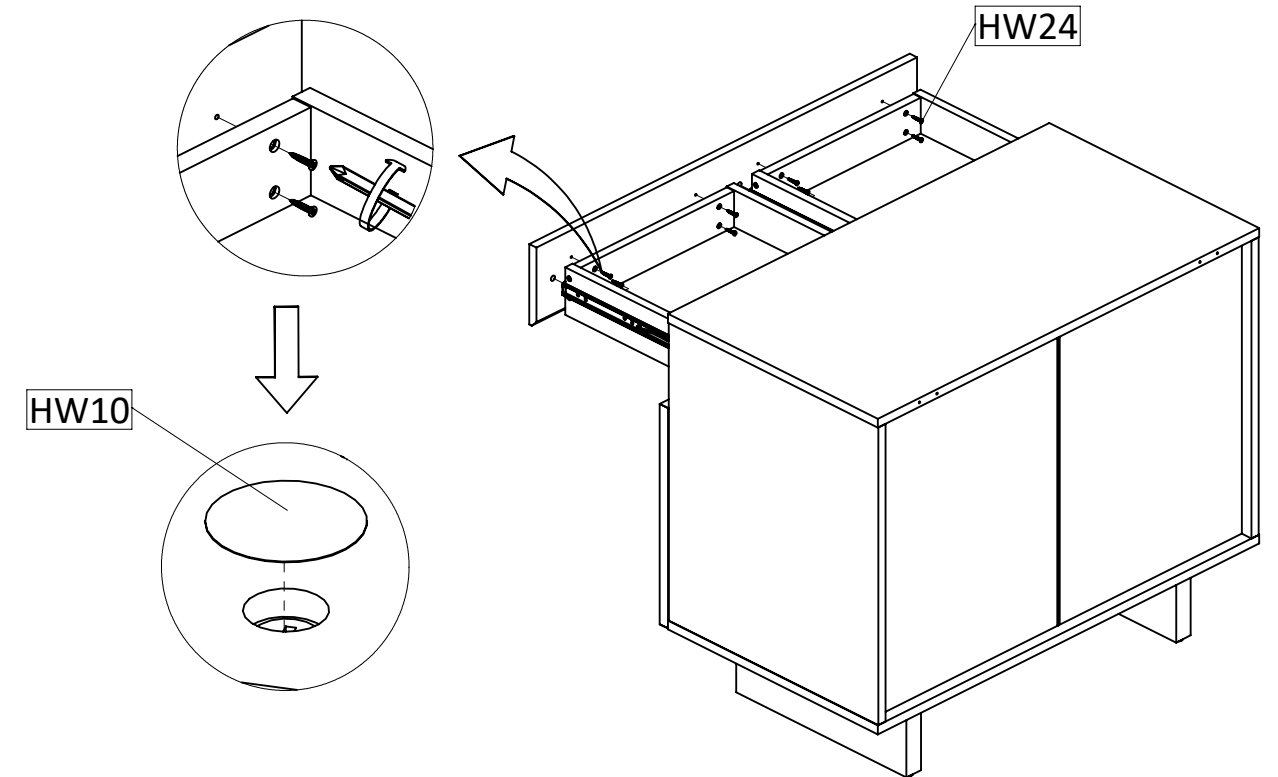





STEP14: Combine body drawer to front drawer (15) Secure with Sekrup M6x25MM (HW24) ,tighten it using screwdriver.Continue to attach the cover cap sticker (HW10) to the panel that has lamination.

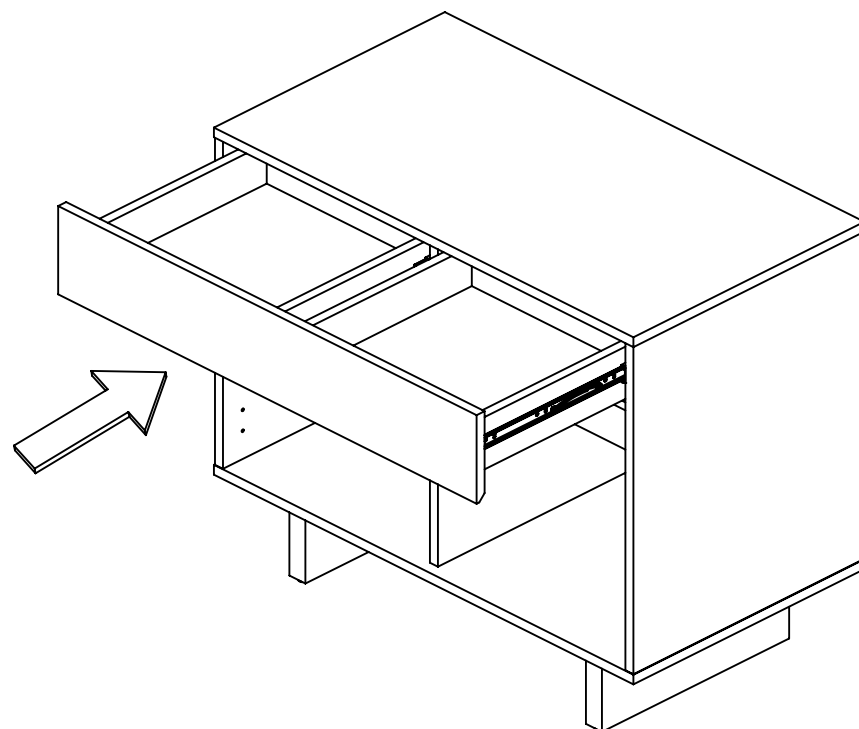

STEP15: Slide in the drawers into the cabinet.

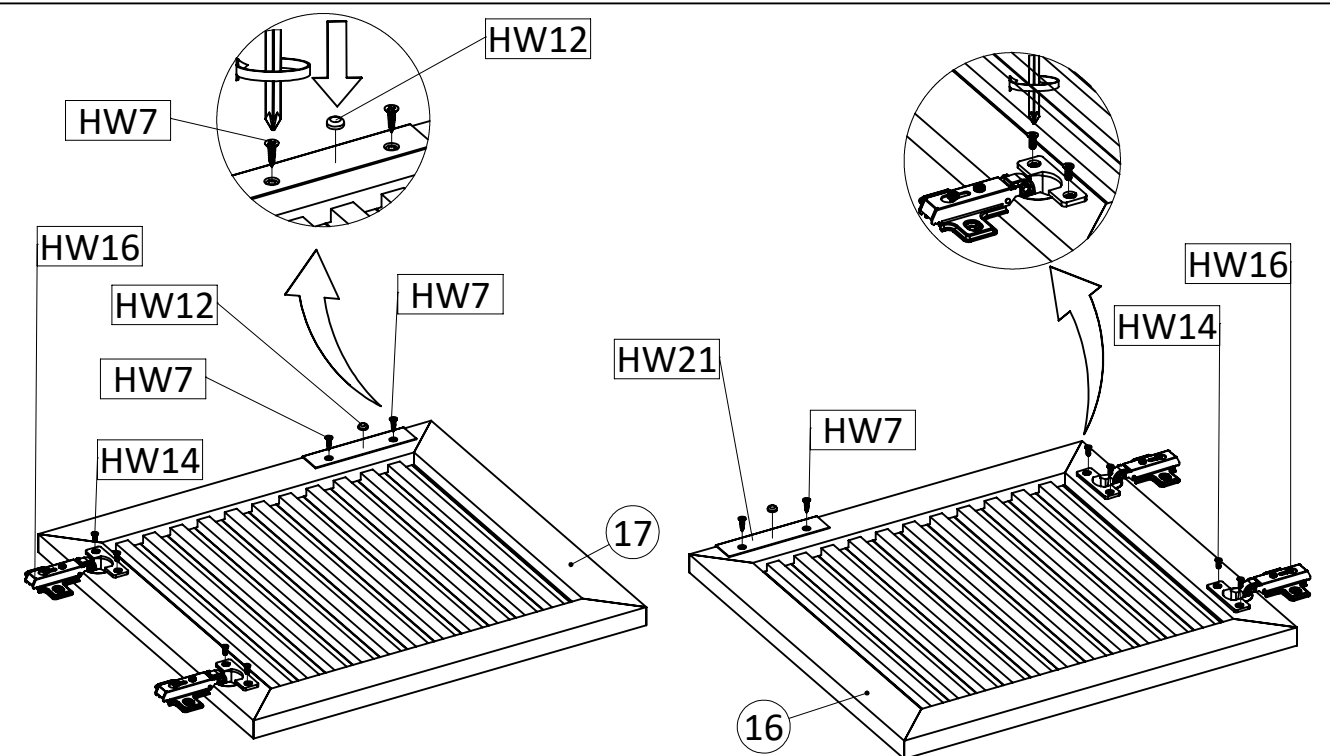

STEP16: Attach straight hinge (HW16) into left door (16) And right door (17),using M5x8.5mm screw (HW14) and tighten it using screwdriver. attach door handle (HW21) into left door (16) and right door(17), using screw 6x12 MM (HW7) and tighten it using screwdriver.Continue to install the rubber stopper (HW12) to the front side of the left door (16) and the right door (17).

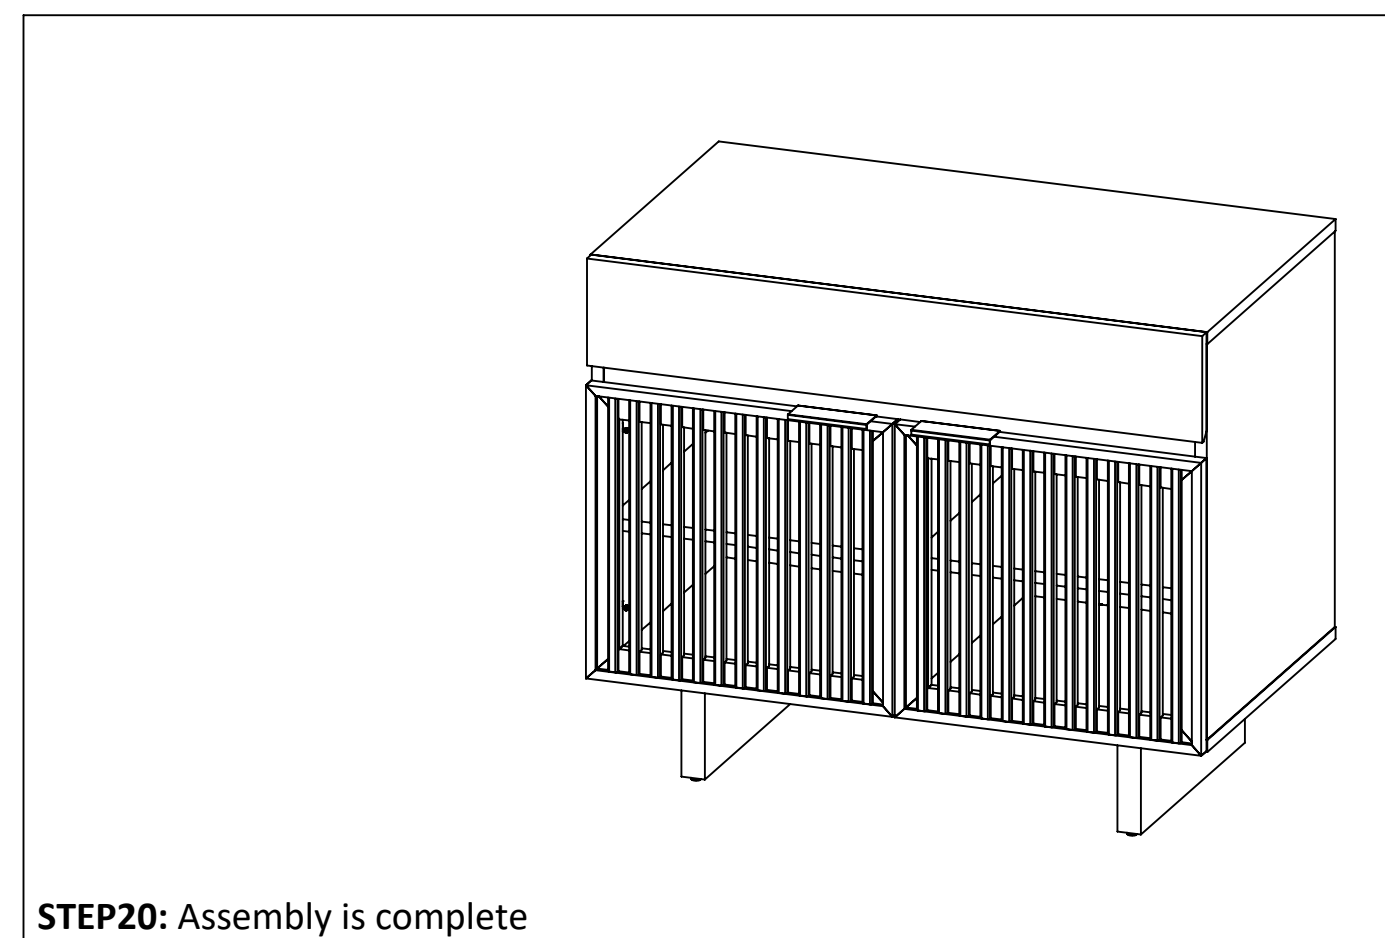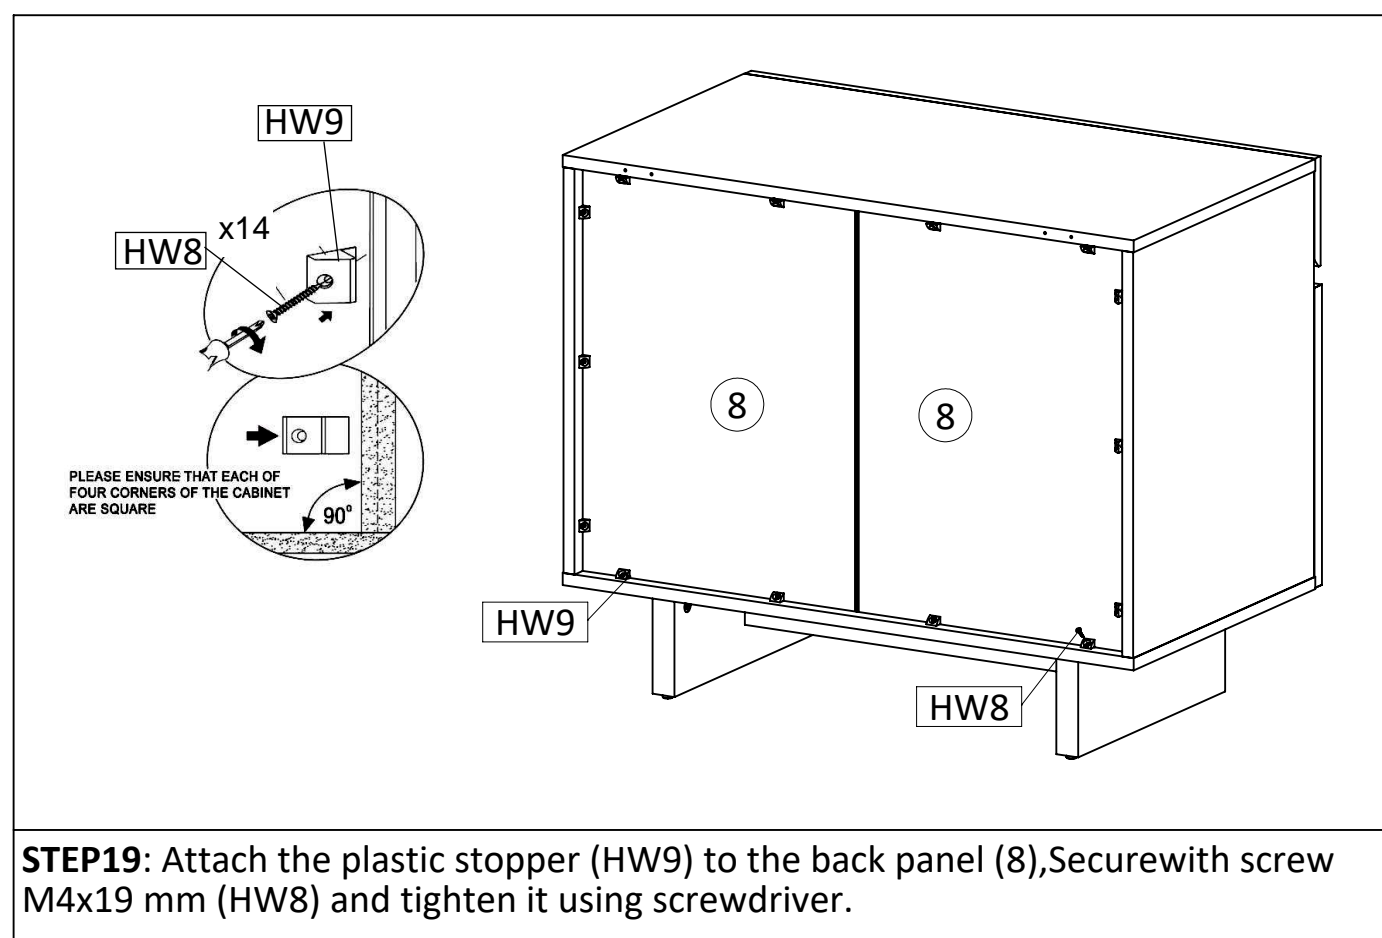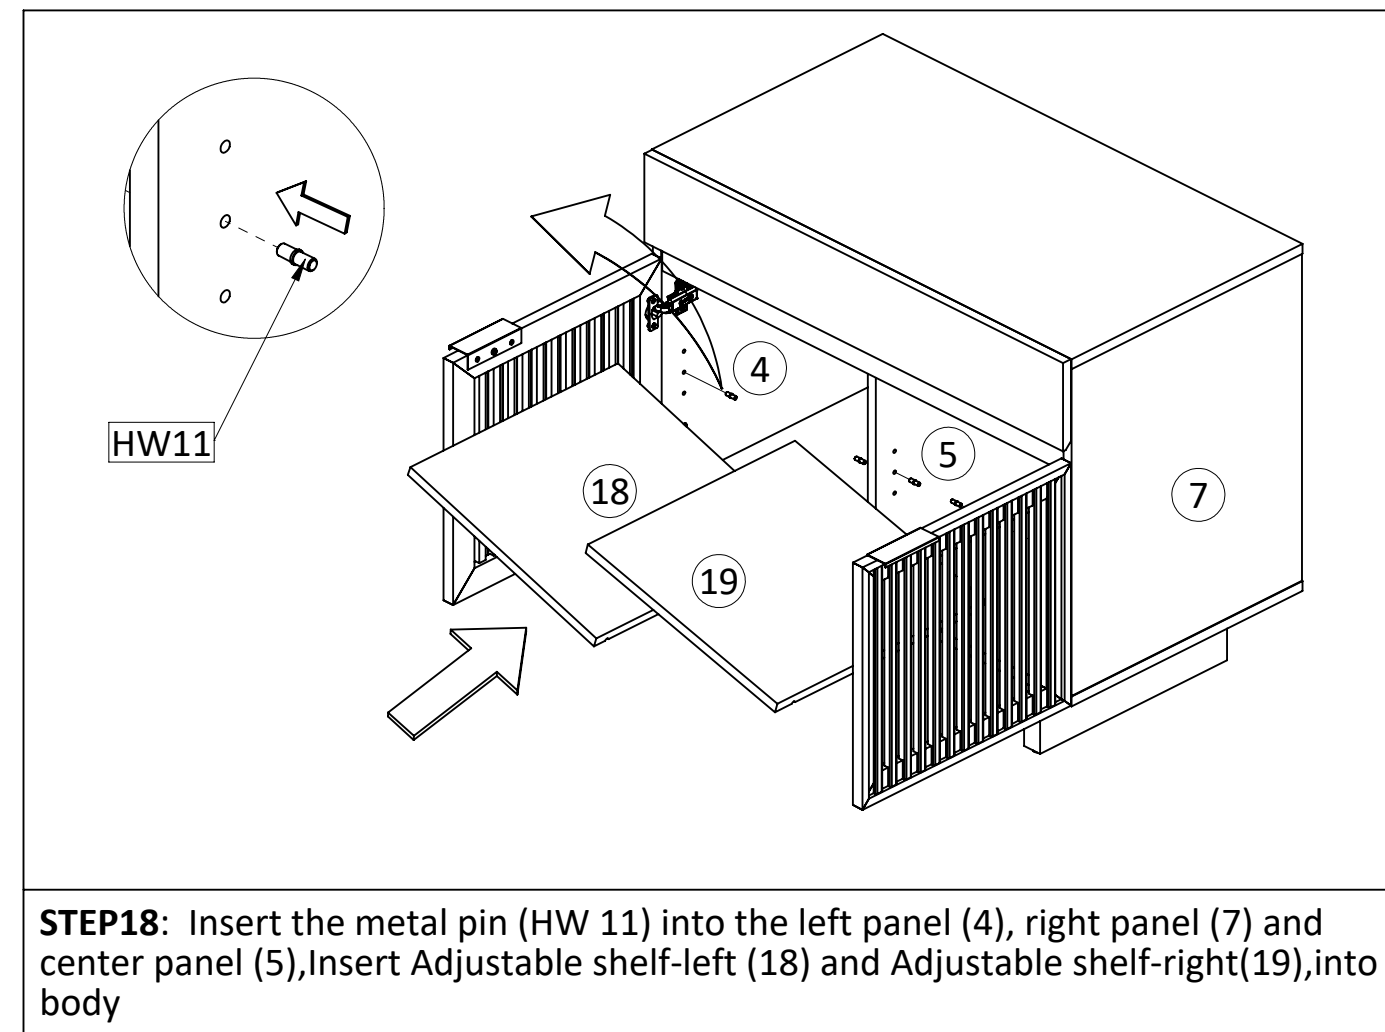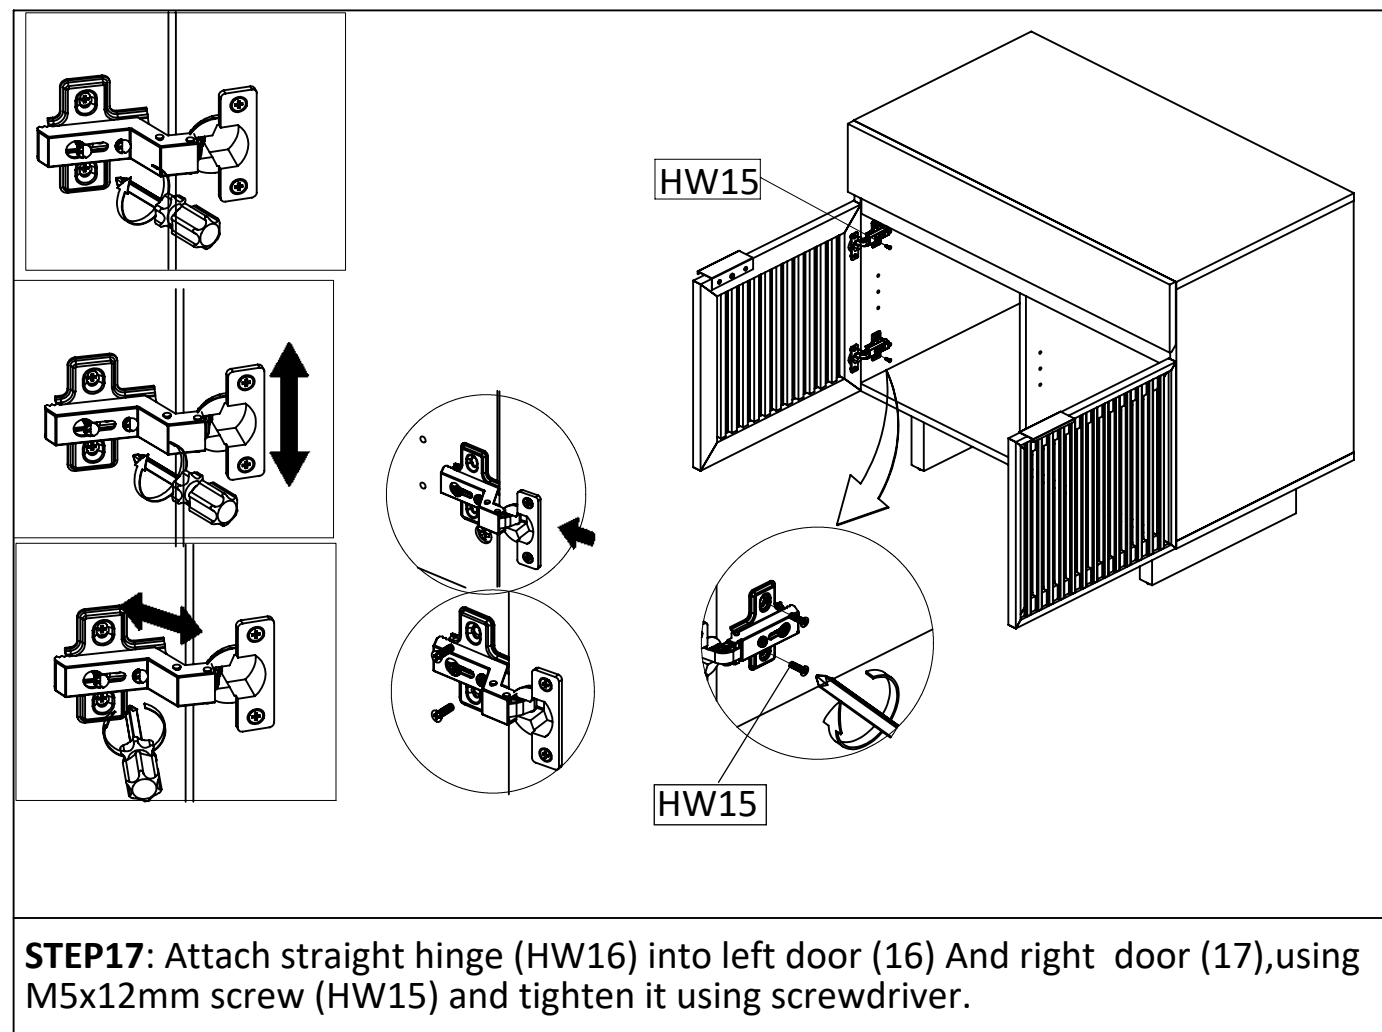




ANTI-TIP RESTRAINT INSTALLATION


! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

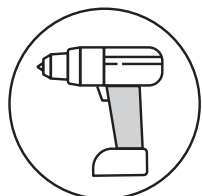


REQUIRED TOOL
8MM / 5/16" DRILL BIT

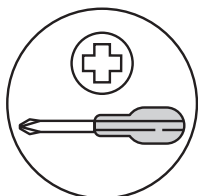

REQUIRED TOOL




Hardware (HW11/HW10) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

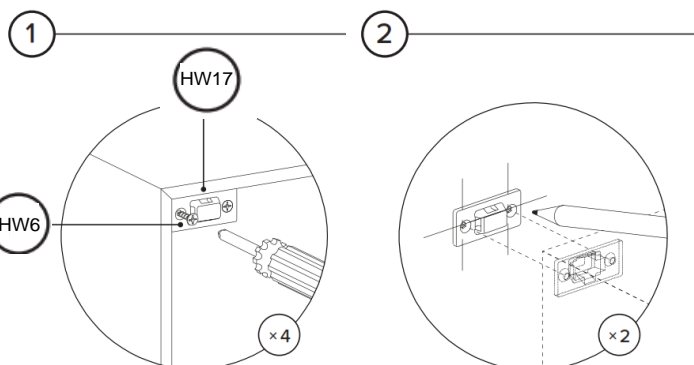


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

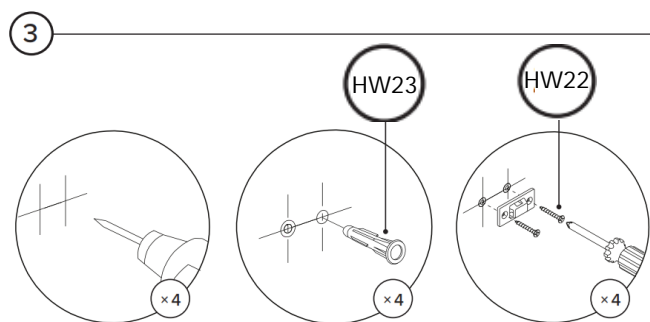

Drill holes in wall using 8mm / 5/16" drill bit.

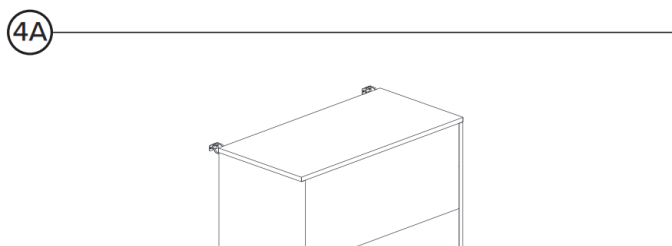






Align brackets on unit with brackets on wall.

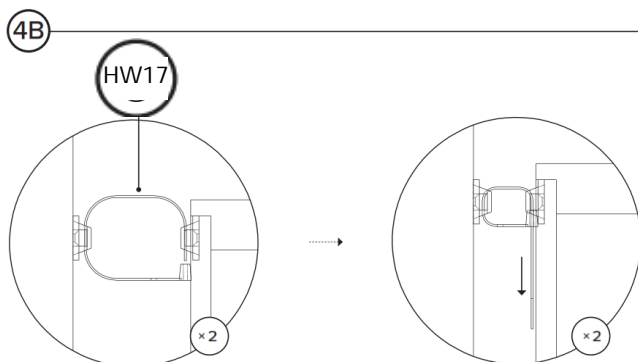

Pull strap down until it snap-locks.

ANTI-TIP RESTRAINT PACK

ID	DESCRIPTION	QTY
HW17	BRACKET 	4
HW6	M6 × 15MM SCREW 	4
HW23	M8 × 35MM PLUG 	4
HW22	M10 × 50MM SCREW 	4
HW17	STRAP 	2