

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (Not included): Screwdriver.

CARE AND MAINTENANCE


Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

Part List

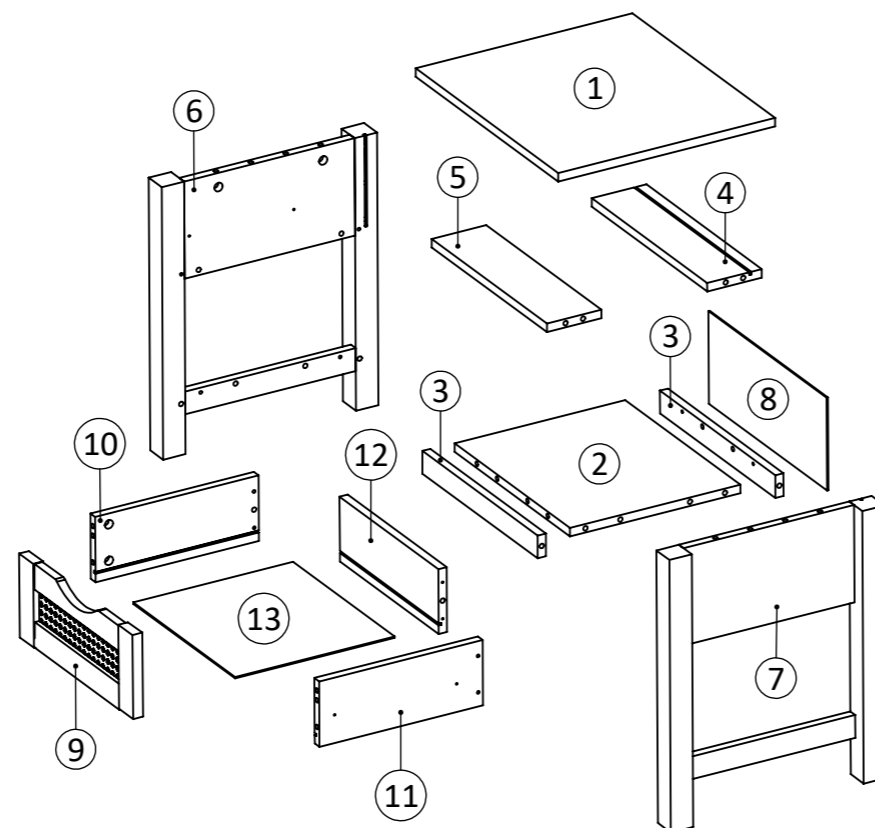

Model# NST3106

Product Dimensions: W 17.72" X D 15.75" X H 16.69"

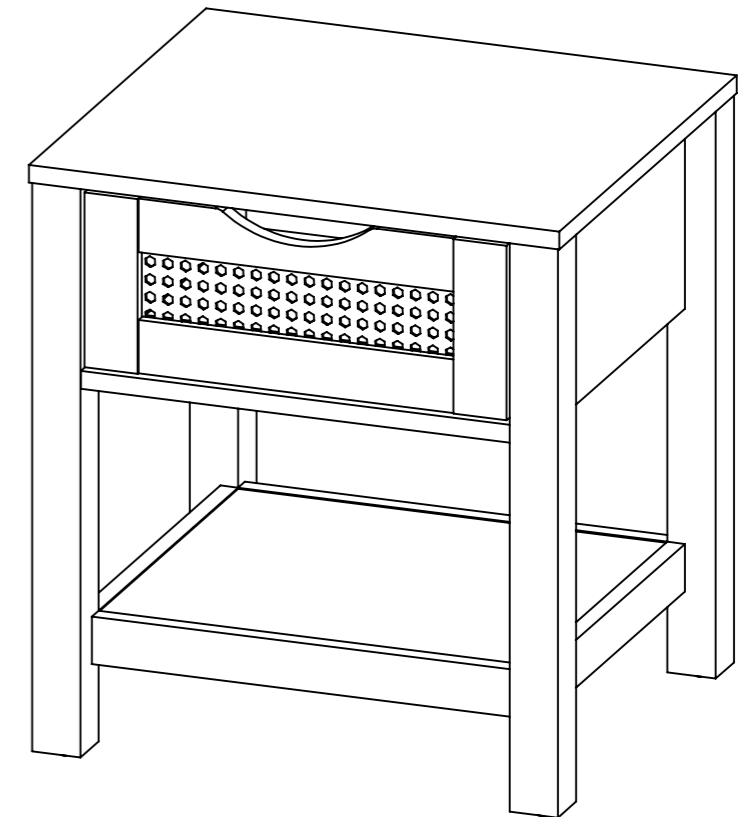

WARNING

WIGHT CAPACITY

Top load Limit: 19 lbs



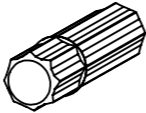






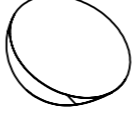
Drawer load Limit: 4 lbs

Shelf Load Limit : 14 Lbs

Warning : Do not stand on the product

Warning : Do not over torque bolts

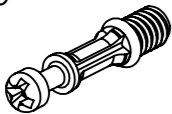Hardware List
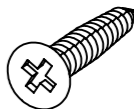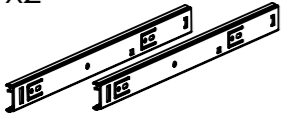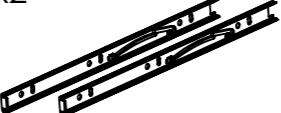
<div>HW1x20</div> <div></div> <div>Ø6x32 mm</div>	<div>HW2x20</div> <div></div> <div>Ø15x12 mm</div>	<div>HW3x24</div> <div></div> <div>Ø8x32 mm</div>	<div>HW4x8</div> <div></div> <div>Ø6x12 PH</div>	<div>HW5x4</div> <div></div> <div>Ø7x32 mm</div>	<div>HW6x4</div> <div></div> <div>Ø4x19 mm</div>
<div>HW7x2</div> <div></div> <div>300 MM</div>	<div>HW8x2</div> <div></div> <div>300 MM</div>	<div>HW9x4</div> <div></div> <div>Plastic Stopper</div>	<div>HW10x12</div> <div></div> <div>Cover Cap sticker</div>		


Part List & HW

Piece	Description	Qty	Carton Call
1	Top Panel	1	1 of 1
2	Bottom Panel	1	1 of 1
3	Bottom Support	2	1 of 1
4	Shelf Front	1	1 of 1
5	Shelf Back	1	1 of 1
6	Left Side Panel	1	1 of 1
7	Right Ride Panel	1	1 of 1
8	Back Panel	1	1 of 1
9	Front Drawer	1	1 of 1
10	Left Side Drawer	1	1 of 1
11	Right Side Drawer	1	1 of 1
12	Back Drawer	1	1 of 1
13	Base Drawer	1	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt	20	1 of 1
HW2	Camlock	20	1 of 1
HW3	Wooden Dowel	24	1 of 1
HW4	Screw M6 x 12 PH	8	1 of 1
HW5	Screw M7 x 32 mm	4	1 of 1
HW6	Screw M4 x 19 mm	4	1 of 1
HW7	Metal Runner 1	2	1 of 1
HW8	Metal Runner 2	2	1 of 1
HW9	Plastic Stopper	4	1 of 1
HW10	Cover Cap Sticker	12	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.
If any part is missing or damaged, do not attempt to assemble the product.
Estimated Assembly Time: 60 minutes.

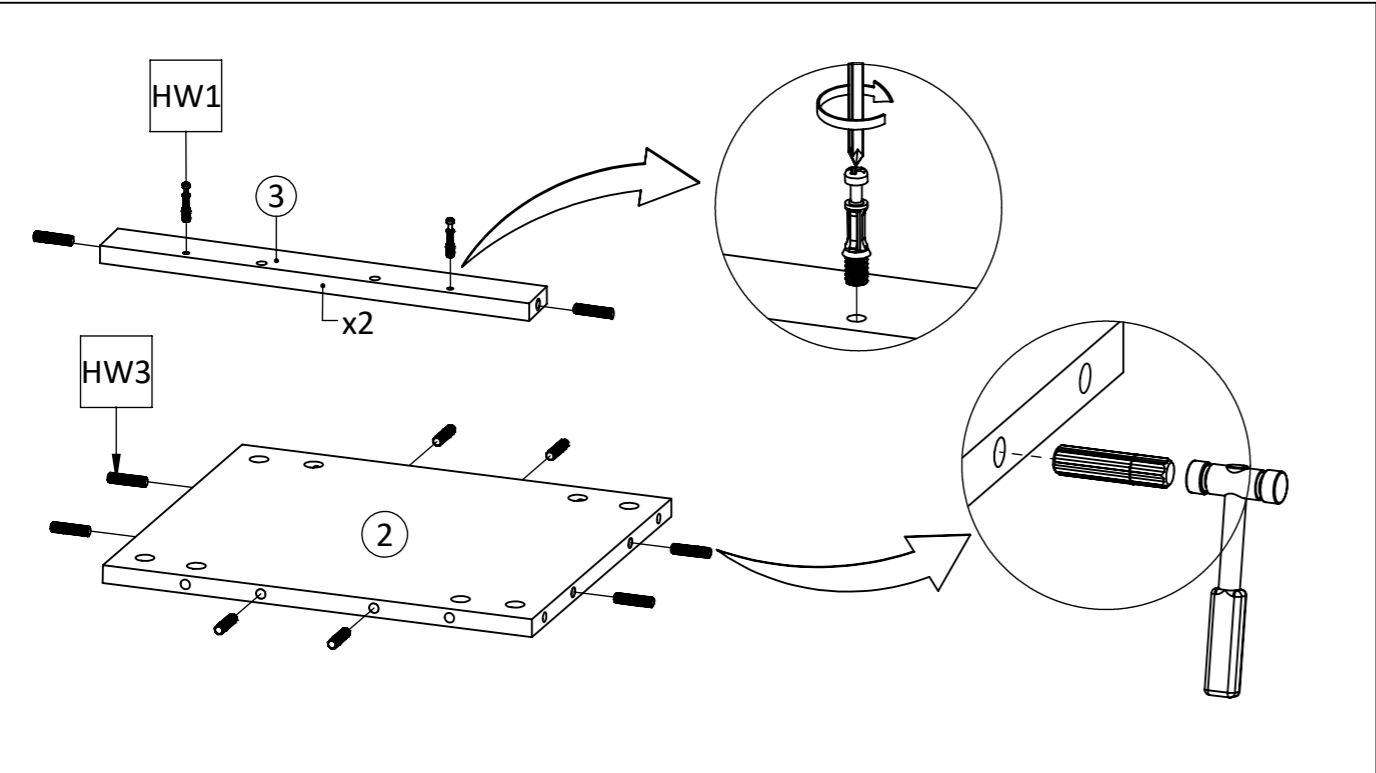


STEP1: Insert Cambolt (HW1) and Wooden Dowel (WH3) Into Bottom Panel (1) and Bottom Support (3).

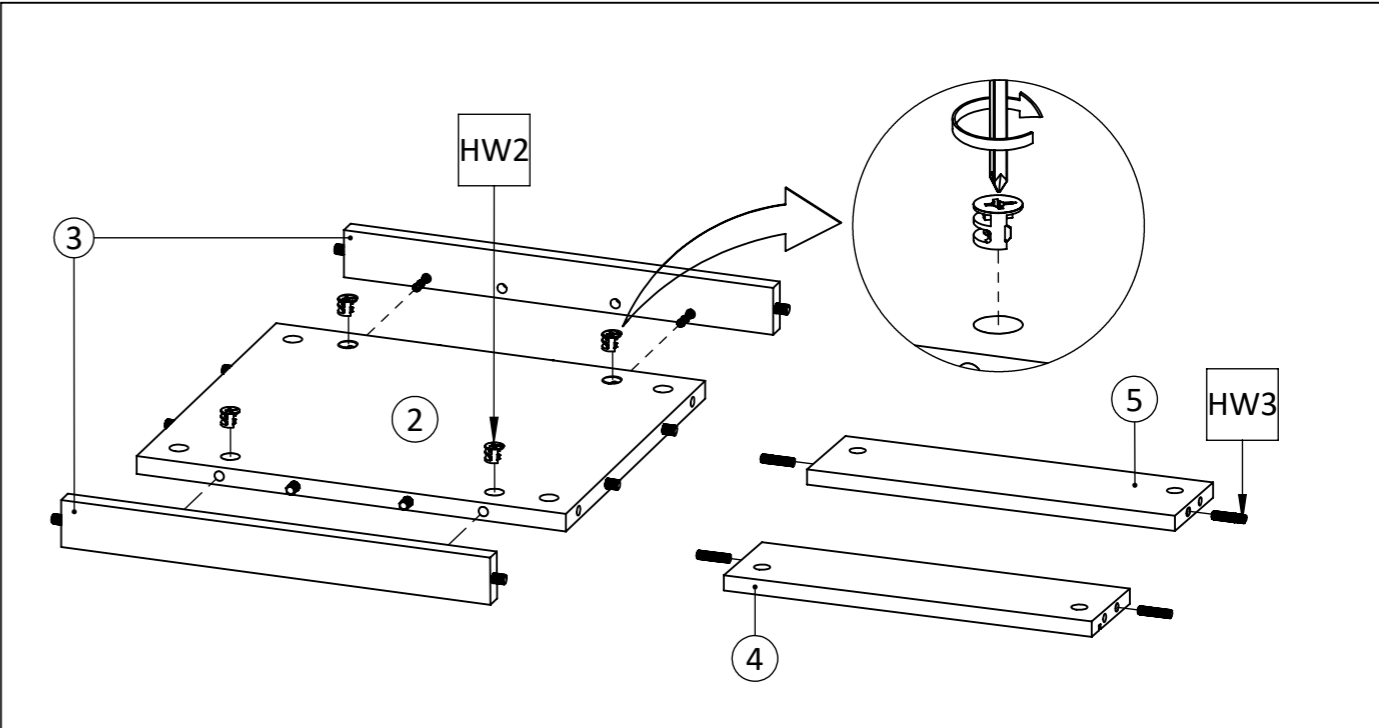


STEP2: Attach Bottom Support (3) into Bottom Panel (2) Secure with Camlock (HW2) tighten it using screwdriver. Continue insert Wooden Dowel (HW3) into Shelf Front and Shelf Back (4 & 5).

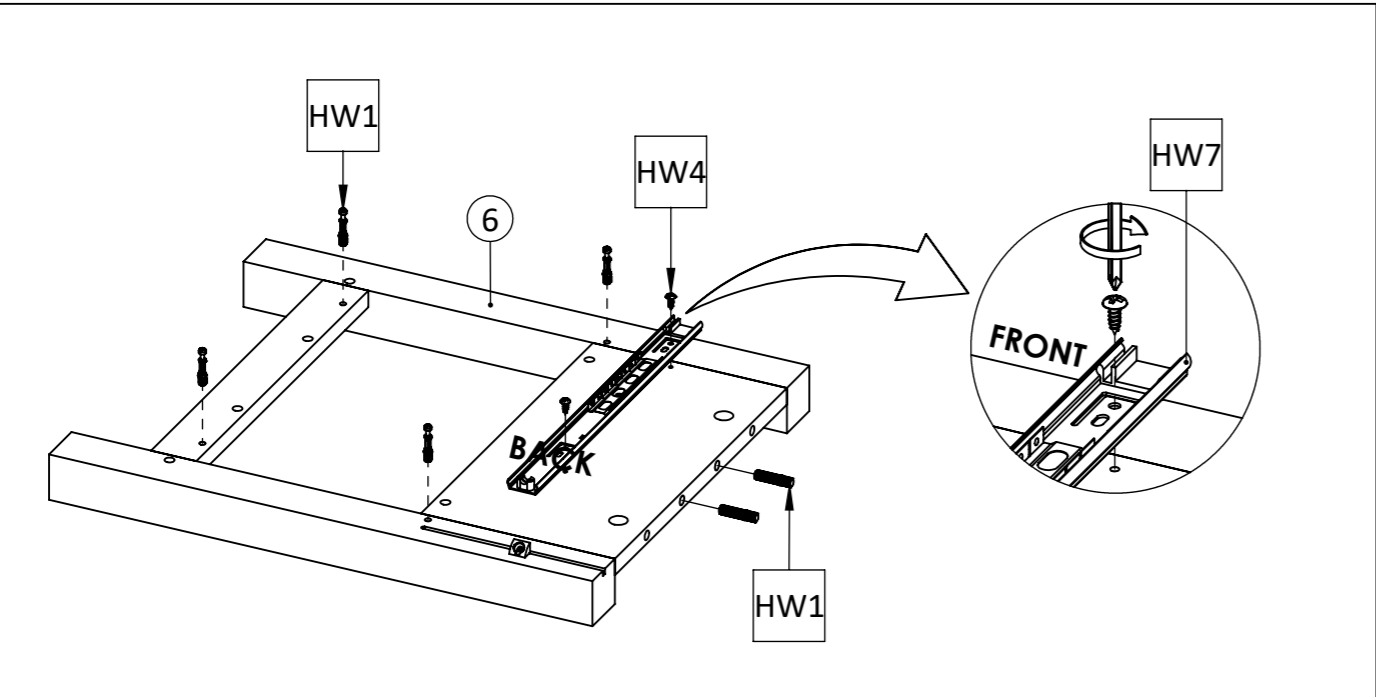


STEP3: Insert Cambolt (HW1) and Wooden Dowel (HW3) Into Left Side Panel (6), Continue with securing part of the metal runner 1 (HW16) into position as the above image, using Screw M 6 x 12 mm PH (HW8) And tighten it using screwdriver.

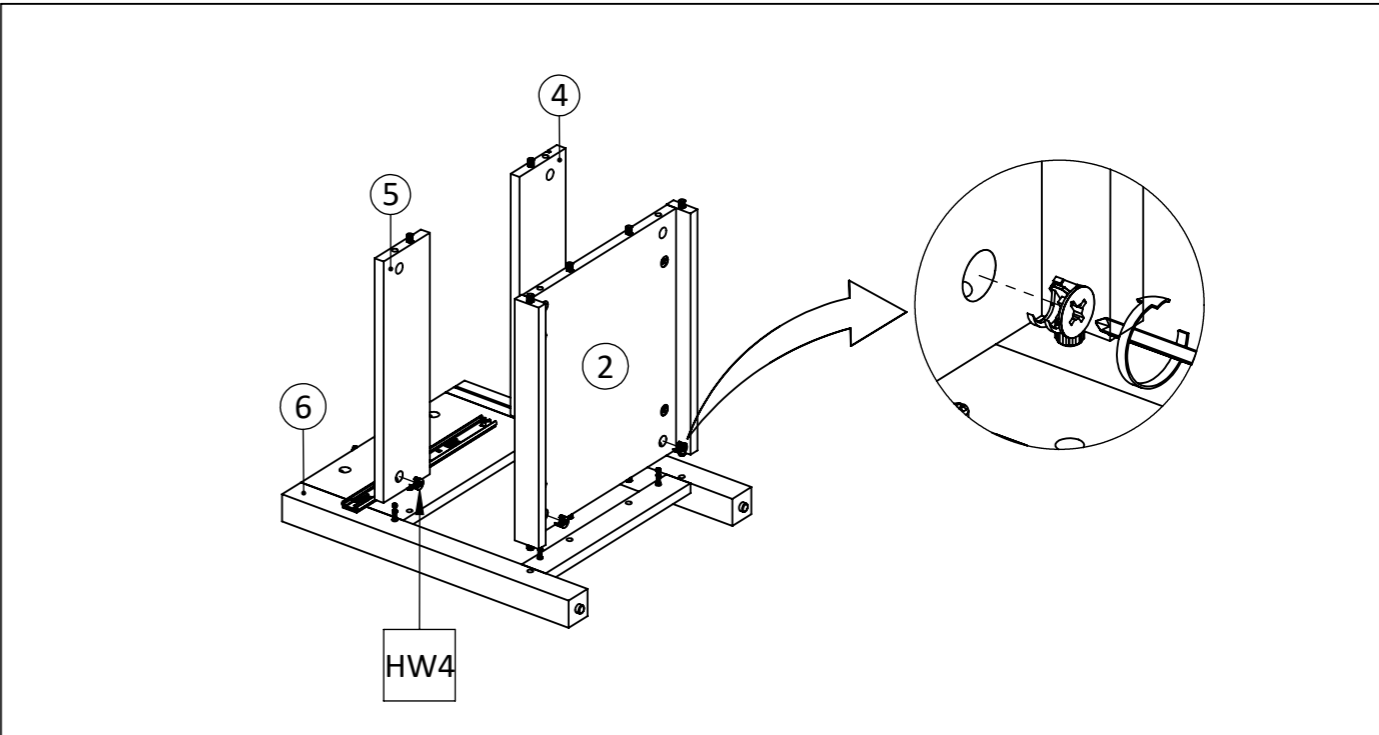


STEP4: Attach Bottom Panel (2), Bottom Support (3) Shelf Front (4) and Shelf Back (5) Into Left Side Panel (6), Secure with Camlock (HW2) tighten it using screwdriver.

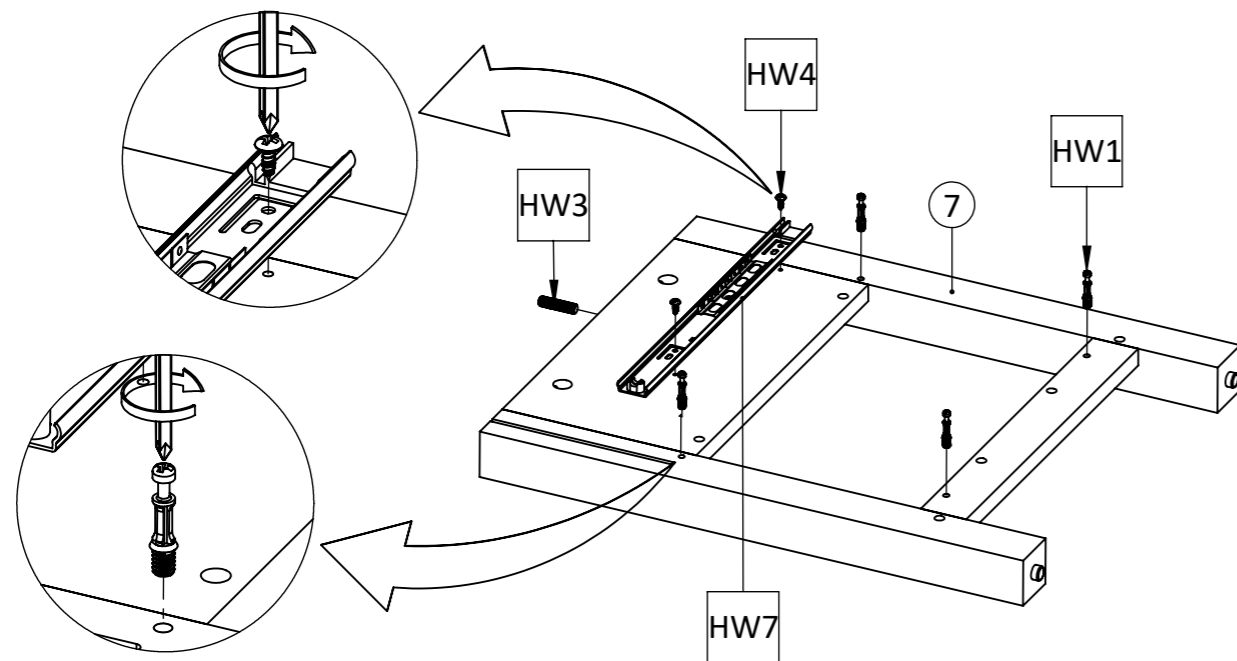


STEP5: Insert Cambolt (HW1) and Wooden Dowel (HW3) Into Right Side Panel (7), Continue with securing part of the metal runner 1 (HW16) into position as the above image, using Screw M 6 x 12 mm PH (HW8) And tighten it using screwdriver.

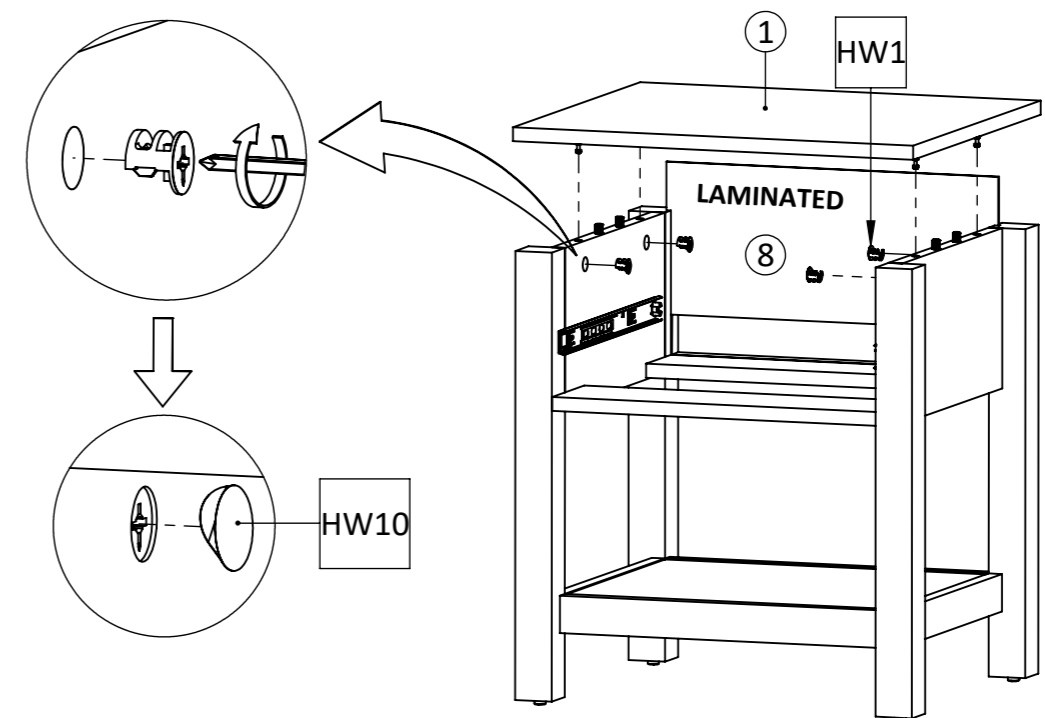


STEP6: Insert Back Panel (8), insert Top Panel (1) Secure with Camlock (HW2) Tighten it using Screwdriver. Continue to attach the cover cap sticker (HW10) to the panel that has lamination.

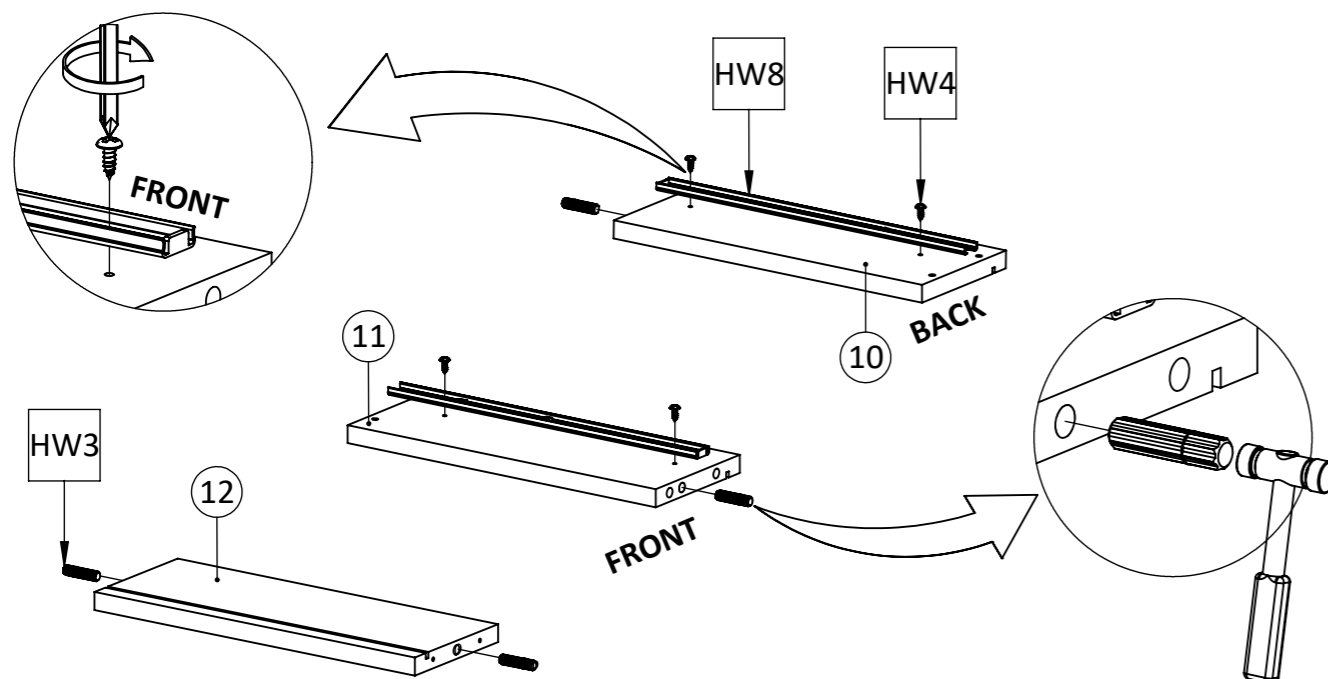


STEP7: Insert Wooden Dowel (HW3) into Side Drawer (10 & 11), Continue install the Metal Runner 2 (HW10) into position as shown in picture. Secure with screw M6x12mm PH (HW6) And Tighten It Using Screwdriver.

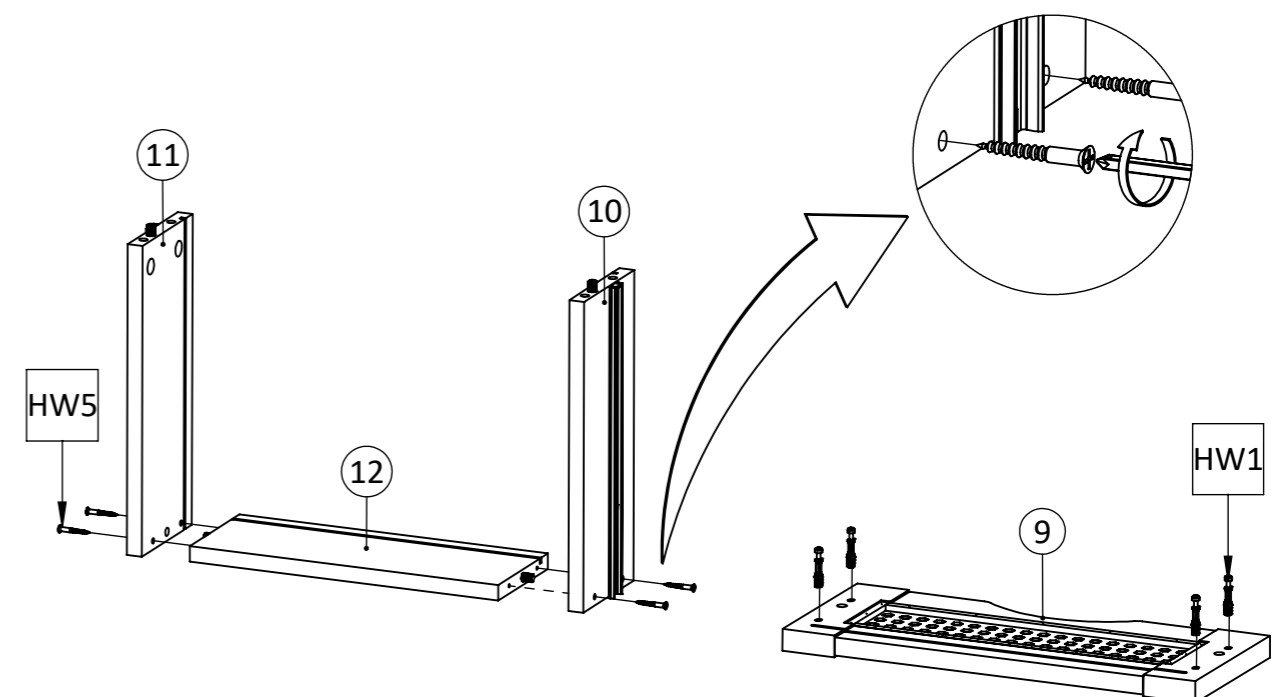


STEP8: Attach Side Drawer (10 & 11) into Back Drawer (12), Then secure with Screw M7 x 32 (HW5) and Tighten it using Screwdriver. Continue insert Cambolt (HW1) into Front Drawer (9).

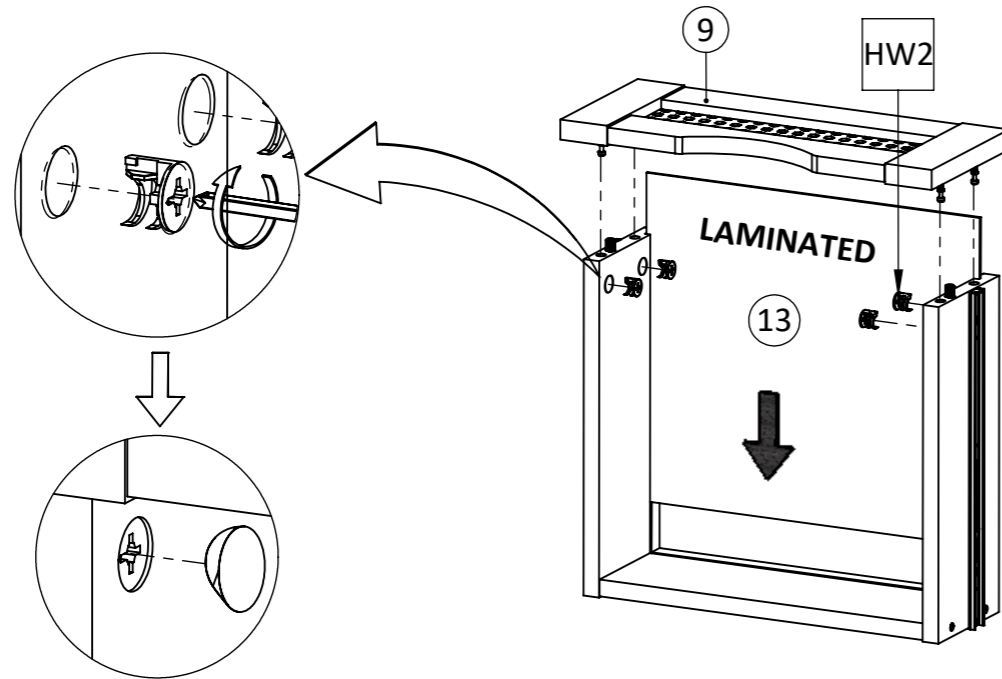


STEP9: Insert Base Drawer (13), insert Front Drawer (9) Secure with Camlock (HW2) Tighten it using Screwdriver. Continue to attach the cover cap sticker (HW10) to the panel that has lamination.

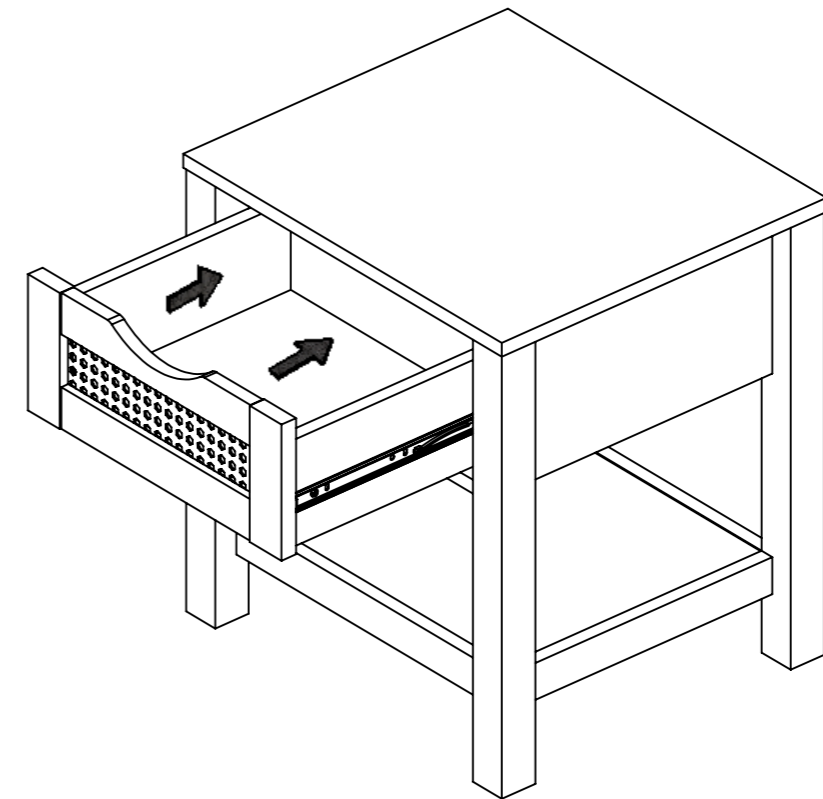

STEP10:

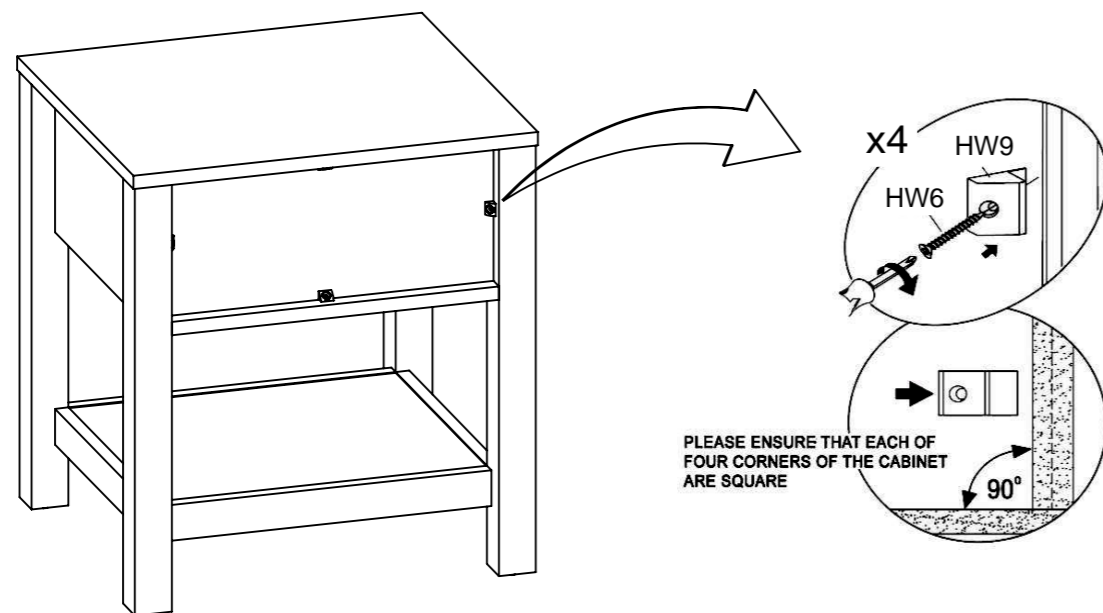

STEP12: Attach the plastic stopper (HW9) to the back panel Secure with screw M4x19 mm (HW6) and tighten it using screwdriver.

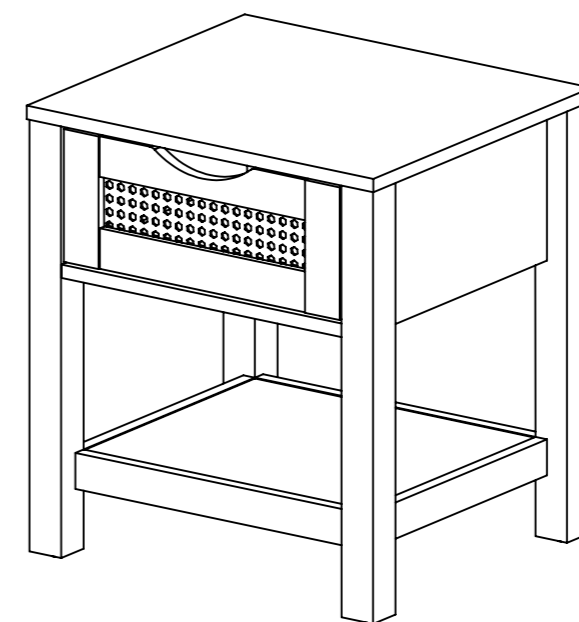

STEP13: Assembly is completed.