- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please
- * email customersupport@safavieh.com

PREPARATION

- Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- If any part is missing or damaged, do not attempt to assemble the product.
- Estimated Assembly Time: 10 minutes.
- Tools Required for Assembly (included):Allen Key

CARE AND MAINTENANCE

material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and spills. How often you apply the wax depends on how much wear the furniture receives. and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive we recommed applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent


Part List and Hardware List

1×		Bottom Rail	G
1×		Seat	F
1x		Side Leg - Right	т
1X		Side Leg - Left	D
1X	00 -	Back Apron - Short	С
1X		Front Apron - Long	В
1X		Chair Back	Þ
QUANTITY	PICTURE	DESCRIPTION	PIECE



Model# DCH3801

Product Dimension: 20"W x 22"D x 31"H

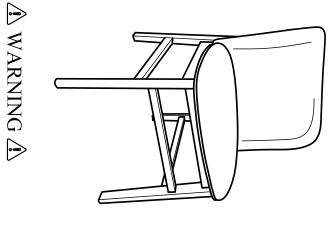


Weight capacity: 275 LBS

WARNING: DO NOT STAND ON THE CHAIR WARNING: DO NOT OVER TORQUE BOLTS

2X	() Immuno	Pan Head Screw 4 x 38MM	HW7
×		Allen Key 4 x 100MM	HW6
4X	P	Chipboard Screw 4 x 32MM	HW5
4X		Wood Dowel 8 x 30MM	HW4
8X	•	Split Lock Washer 5 / 16"	HW3
10X		Bolt 6 x 0.5 x 50MM	HW2
2X		Bolt 6 x 0.5 x 35MM	HW1

PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (included) : Allen Key
- * If you are having difficulty, our friendly Customer care team is always here to help. Please email customersupport@safavieh.com

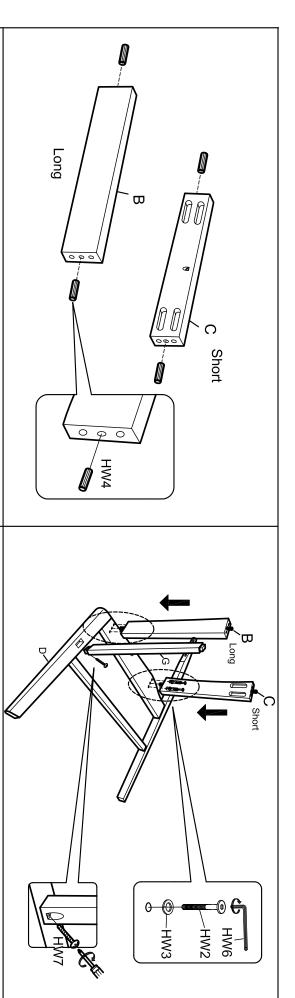

STEP 1: INSERT THE FRONT APRON - LONG AND BACK APRON - SHORT INTO THE DESIGNATED HOLE ON (B & C).

TO SIDE LEG - LEFT.SCREW THE BOLTS BUT DON'T TIGHTEN COMPLETELY.SCREW THE BOTTOM RAIL WITH PHILIPS SCREWDRIVER.(NOT PROVIDED)

STEP 2: ATTACH THE FRONT APRON - LONG AND BACK APRON SHORT

