

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com







PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (Included): Allen Key

CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Chair Back		1X
B	Front Apron		1X
C	Back Apron		1X
D	Side Leg - Left		1X
E	Side Leg - Right		1X
F	Seat		1X



Model# DCH3803

Product Dimension: 21"W x 22"D x 30"H

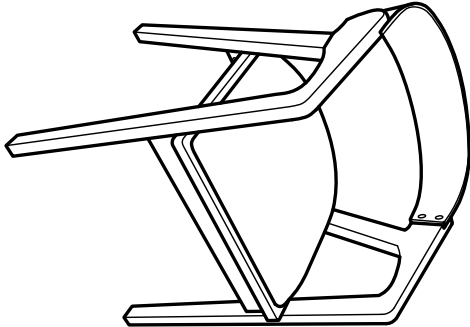







WARNING

Weight capacity : 275 LBS


WARNING : DO NOT STAND ON THE CHAIR

WARNING : DO NOT OVER TORQUE BOLTS

HW1	Bolt 6 x 0.5 x 20MM		4X
HW2	Bolt 6 x 0.5 x 50MM		12X
HW3	Split Lock Washer 5 / 16"		8X
HW4	Flat Washer M6 x 13mm		4X
HW5	Wood Dowel 8 x 30MM		4X
HW6	Allen Key 4 x 100MM		1X


PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 10 minutes.
- * Tools Required for Assembly (Included) : Allen Key
- * If you are having difficulty, our friendly Customer care team is always here to help. Please email customersupport@safavieh.com

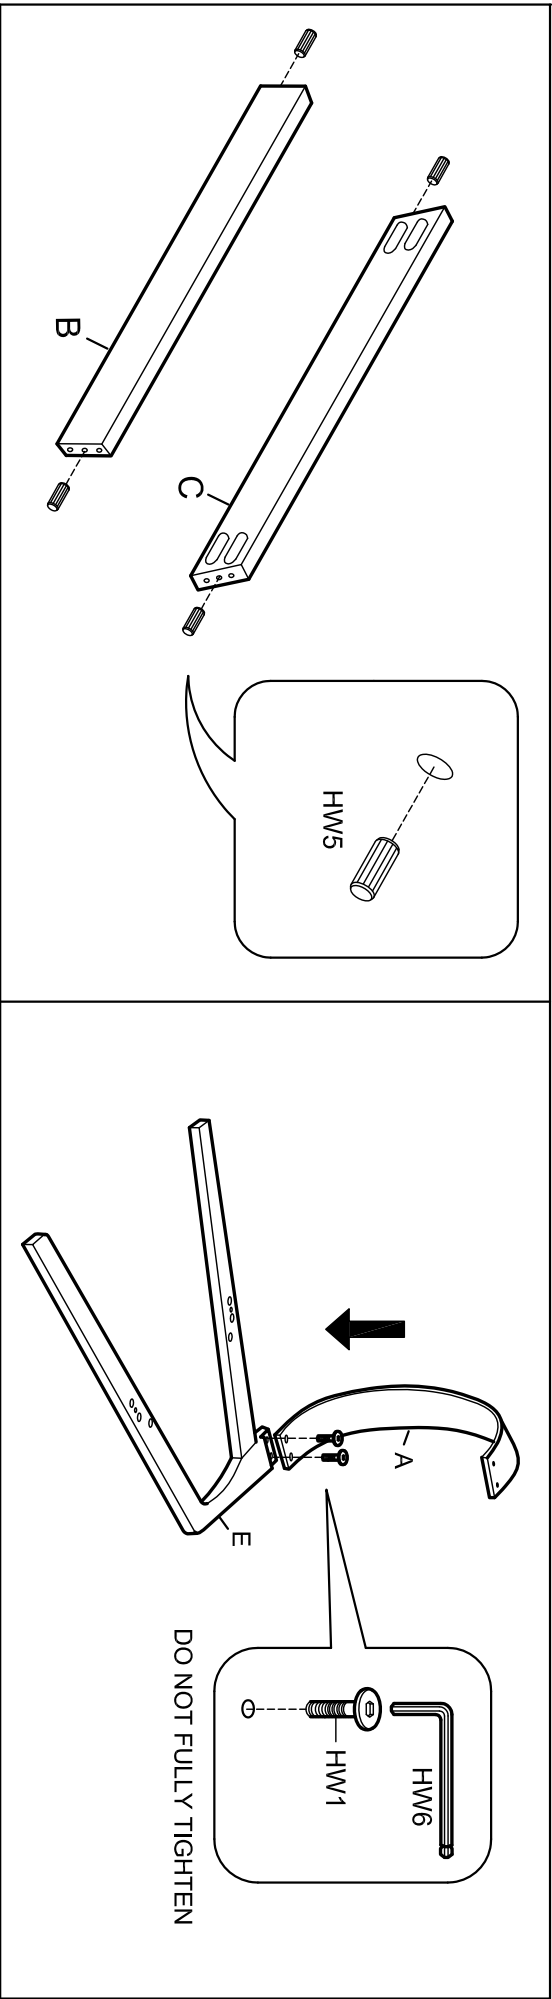


STEP 1: INSERT THE FRONT APRON AND BACK APRON INTO THE DESIGNATED HOLE ON (B & C).

STEP 2: LAY SIDE LEG RIGHT AS SHOWN AND ALIGN THE BOLT HOLES ON THE EACH PART. SCREW THE BOLTS AS SHOWN BY USING ALLEN KEY. DO NOT FULLY TIGHTEN COMPLETELY AT THIS TIME.

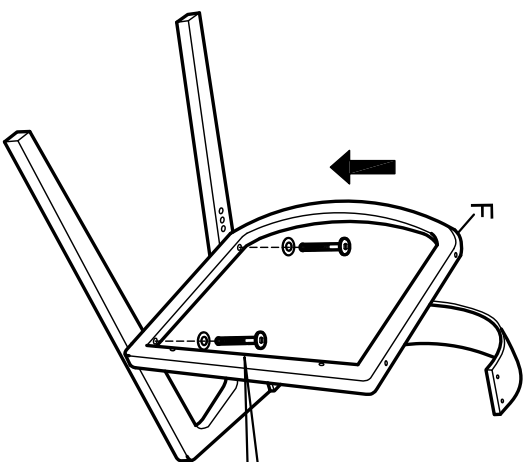


DO NOT FULLY TIGHTEN

STEP 3: ATTACH THE SEAT TO SIDE LEG RIGHT AS SHOWN AND ALIGN THE BOLTS HOLES ON THE EACH PART. SCREW WITH BOLTS AS SHOWN AND TIGHTEN BY USING ALLEN KEY. DO NOT FULLY TIGHTEN COMPLETELY AT THIS TIME.


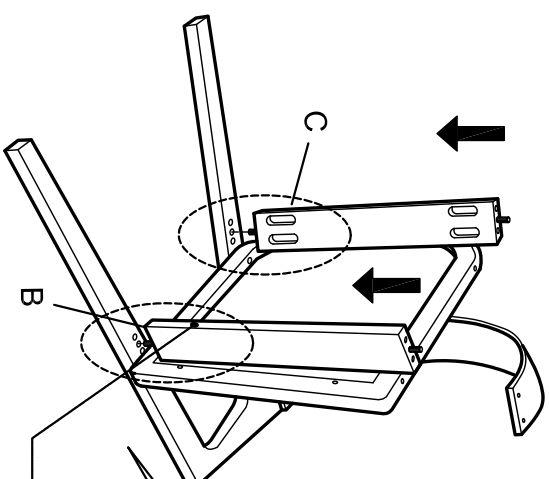


DO NOT FULLY TIGHTEN


STEP 4: ATTACH THE FRONT APRON WITH PREHOLE AT THE BOTTOM APRON AND BACK APRON AS SHOWN AND ALIGN THE BOLT HOLES ON EACH PART. USE BOLT AS SHOWN AND TIGHT WITH ALLEN KEY. DO NOT FULLY TIGHTEN COMPLETELY AT THIS TIME.

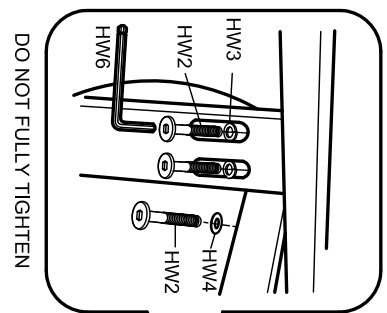

DO NOT FULLY TIGHTEN

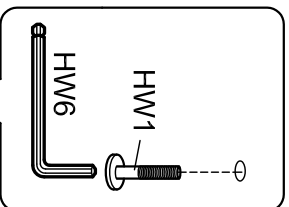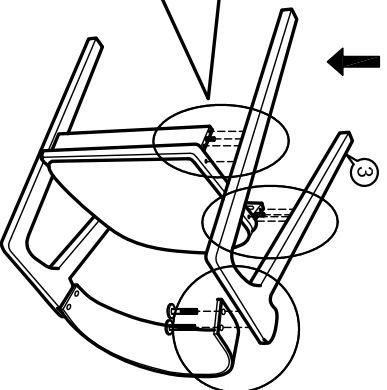

STEP 5: ATTACH THE SIDE LEG LEFT VIA WOOD DOWELS ON (B & C) WITH SCREW THE BOLTS IN THE ORDER SHOWN IN THE PICTURE. SCREW THE BOLTS WITH ATTACH SEAT TO SIDE LEG LEFT. ALIGN THE BOLT HOLES ON CHAIR BACK TO THE BOLT HOLES ON THE SIDE LEG LEFT BY USING ALLEN KEY. DO NOT TIGHTEN COMPLETELY AT THIS TIME.

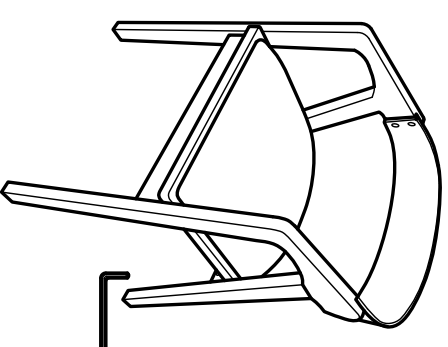

STEP 6: PUT THE CHAIR UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL. THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY WHILE THE CHAIR IS UPRIGHT AS PICTURED ABOVE.