

NOTICE

*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

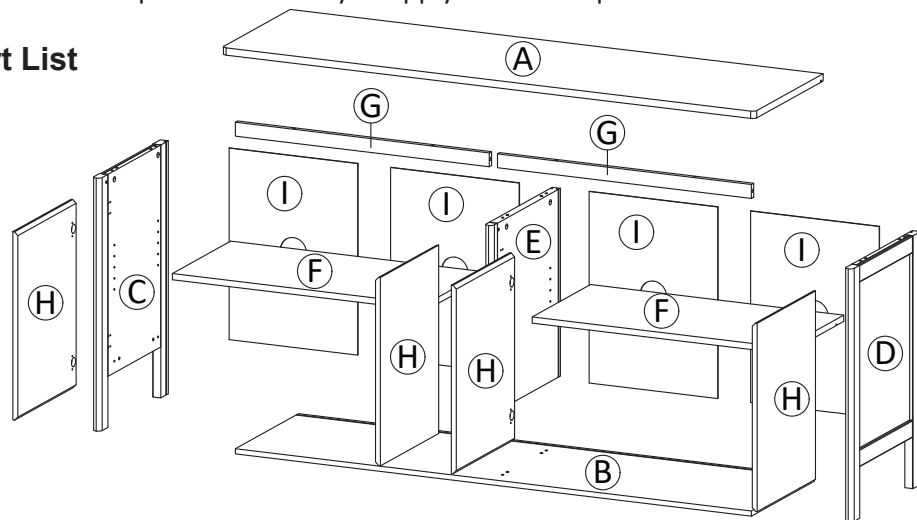

 **SAFAVIEH**
FURNITURE

Model# MED9643

Product Dimensions: 64.45"Wx17.72"Dx29.53"H

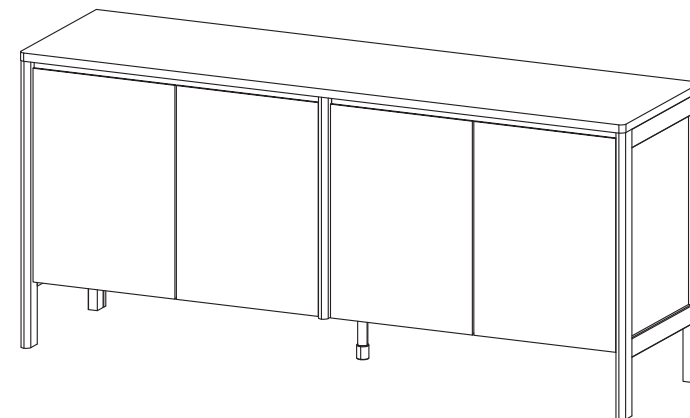













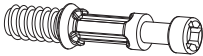


WARNING

This product is intended for use with a
FLAT SCREEN TV ONLY
Maximum Screen Size: 65 inches
Weight Limit: 106 lbs
Shelf Load Limit: 44 lbs
Drawer Load Limit: - lbs
Use with heavier televisions may result
in instability causing tip over resulting in
death or Serious injury.

WARNING

Death or serious injury may occur
when children climb on audio
and/or video equipment furniture.
A remote control or toys placed on
the furnishing may encourage a
child to climb on the furnishing and
as a result the furnishing may tip
over on the child.

Hardware List

| | | | | | |
|--|---|--|---|--|---|
| HW1x10  $\varnothing 6 \times 35 \text{ mm}$ | HW2x10  $\varnothing 15 \text{ mm}$ | HW3x20  $\varnothing 8 \times 30 \text{ mm}$ | HW4x2  $M 7 \times 50 \text{ mm}$ | HW5x2  | HW6x2  |
| HW7x52  $M 4.5 \times 12.5 \text{ mm}$ | HW8x8  | HW9x20  | HW10x20  $M 3.5 \times 15.5 \text{ mm}$ | HW11x4  | HW12x2  $\varnothing 15 \text{ mm}$ |
| HW13x4  $\varnothing 15 \text{ mm}$ | HW HS26Cx8  | HW LM14A1x1  | | | |



Part List & HW For Multi-Box Items

| Piece | Description | Qty |
|-------|------------------|-----|
| A | Top Board | 1 |
| B | Bottom Board | 1 |
| C | Side Board Left | 1 |
| D | Side Board Right | 1 |
| E | Center Board | 1 |
| F | Adjustable Shelf | 2 |
| G | Front Skirt | 2 |
| H | Door | 4 |
| I | Back Board | 4 |

| Piece | Description | Qty |
|-----------|-----------------------|-----|
| HW1 | Cambolt | 10 |
| HW2 | CamLock | 10 |
| HW3 | Dowel | 20 |
| HW4 | Screw M 7 x 50 mm | 2 |
| HW5 | Allen Key | 2 |
| HW6 | List Joint | 2 |
| HW7 | Screw M 4.5 x 12.5 mm | 52 |
| HW8 | Shelf Pin | 8 |
| HW9 | Wedge | 20 |
| HW10 | Screw M 3.5 x 15.5 mm | 20 |
| HW11 | Floor Protector | 4 |
| HW12 | Screw Cap | 2 |
| HW13 | Screw Cap | 4 |
| HW HS26C | Hinge | 8 |
| HW LM14A1 | Metal Leg | 1 |



PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com
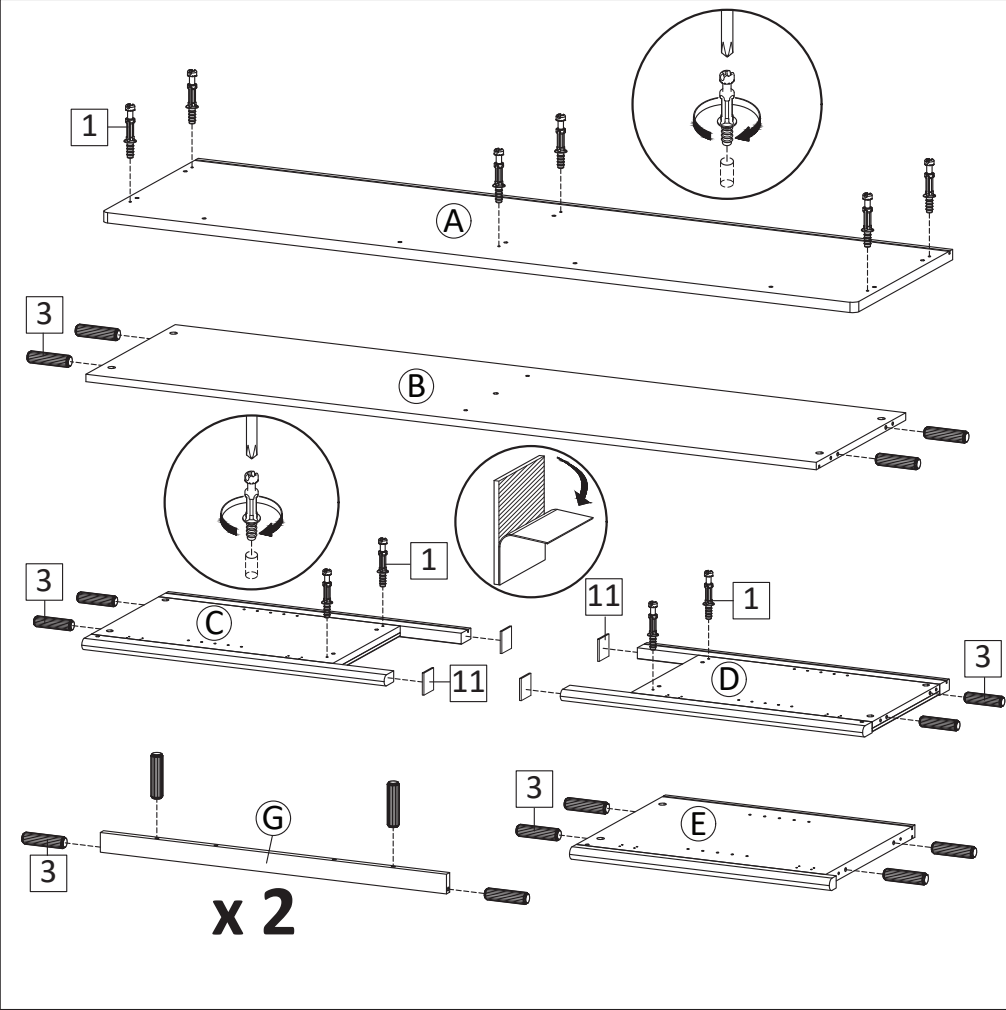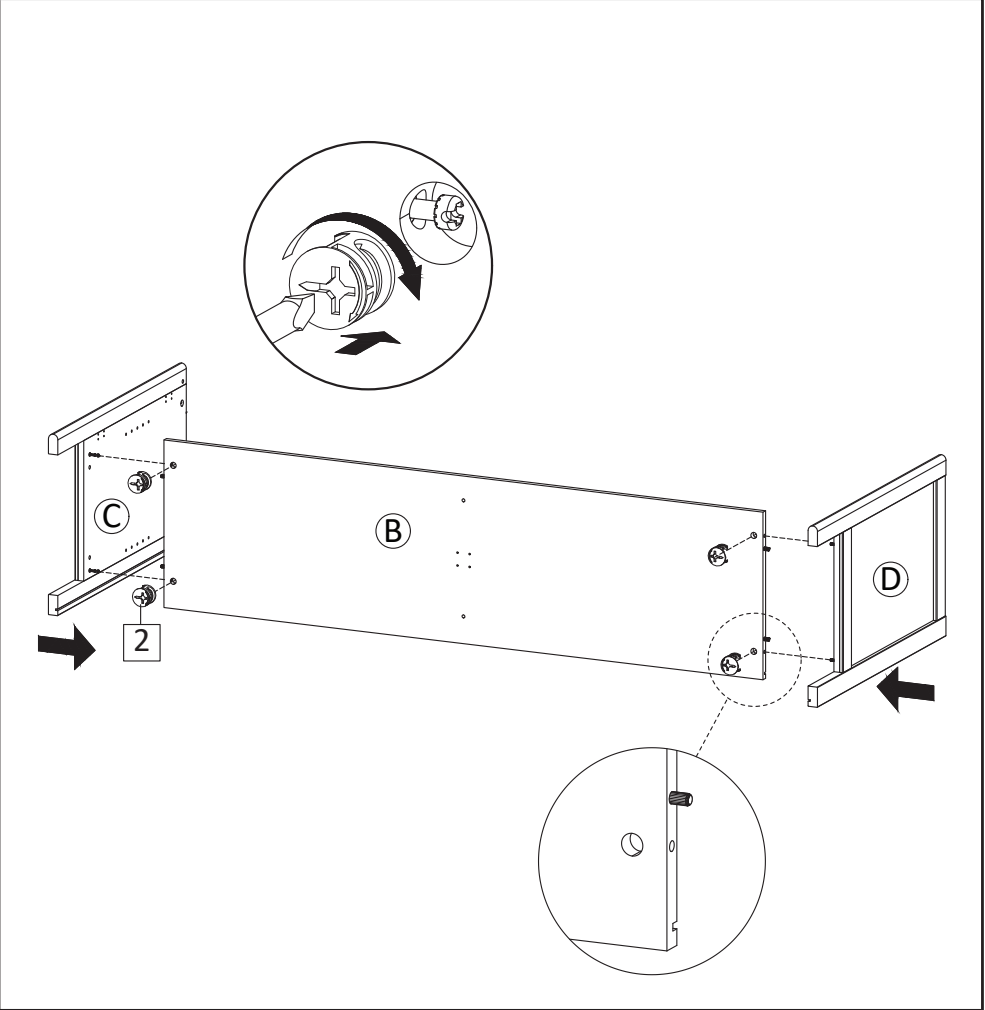
| | |
|---|---|
|  |  |
| <p>STEP1: Insert Cambolt (HW1) into the Top Board (A), Side Board Left (C) and Side Board Right (D) into position as the above image. Insert Dowel (HW3) into Bottom Board (B), Side Board Left (C), Side Board Right (D), Center Board (E), Front Skirt (G) according the picture. Attach Floor Protector (HW11) into Side Board Left (C) and Side Board Right (D) as figure.</p> | <p>STEP2: Combine Side Board Left (C), Side Board Right (D), and Bottom Board (B) components. Insert Camlock (HW2) then tighten using screwdriver.</p> |

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com
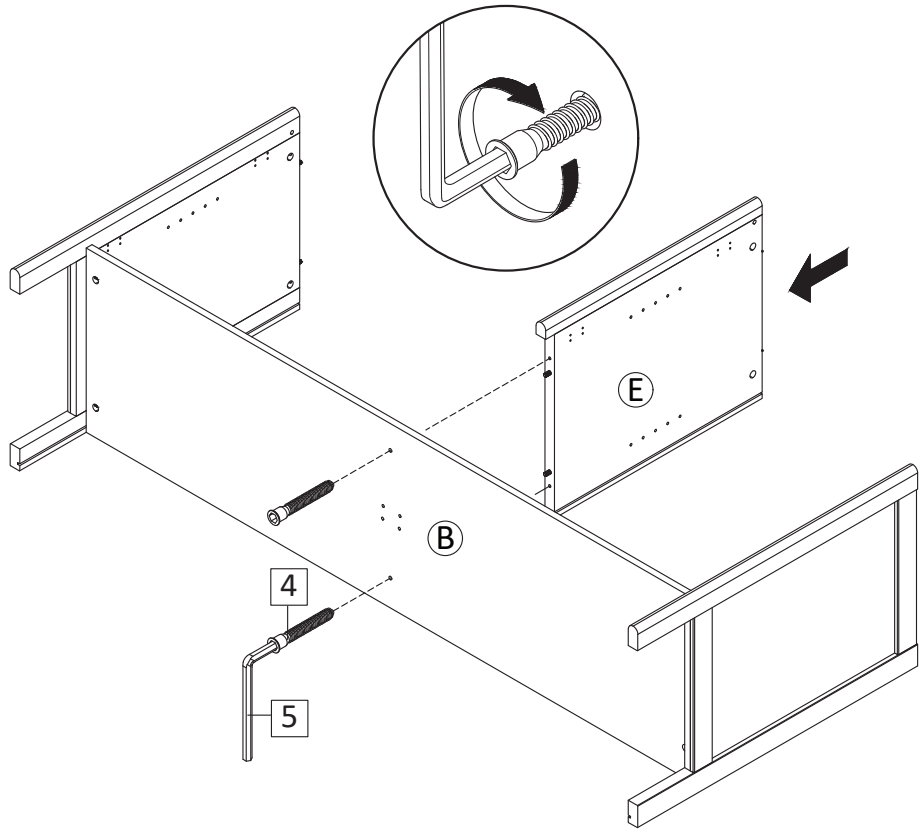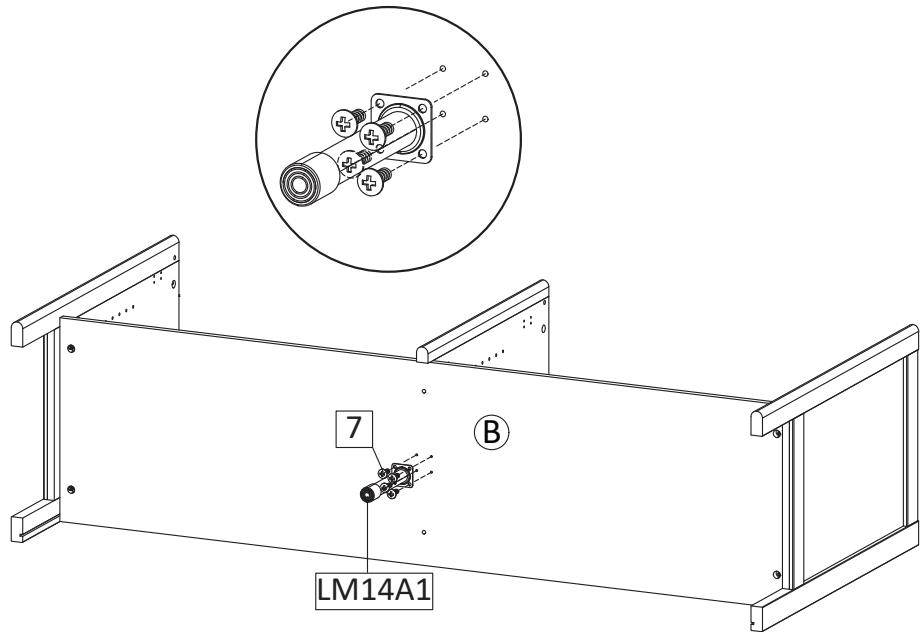
| | |
|---|---|
|  <p>The diagram shows a perspective view of the assembly process. A rectangular frame is partially assembled. A central board, labeled (E), is being inserted into the bottom board, labeled (B). A circular inset shows a close-up of a screw being tightened into the joint. Below the main view, a screw (labeled 4) and an Allen key (labeled 5) are shown. A large black arrow points from the inset towards the main assembly.</p> |  <p>The diagram shows a perspective view of the assembly process. A rectangular frame is partially assembled. A metal leg, labeled LM14A1, is being attached to the bottom board, labeled (B). A circular inset shows a close-up of the metal leg being secured with a screw. A label 7 points to the screw being inserted.</p> |
| <p>STEP3: Insert Center Board (E) into Bottom Board (B) and secure with Screw M7x50mm (HW4), tighten screws using Allen Key (HW5).</p> | <p>STEP4: Attach Metal Leg (LM14A1) into Bottom Board (B) and secure with Screw M4.5x12.5mm (HW7).</p> |

PREPARATION



*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

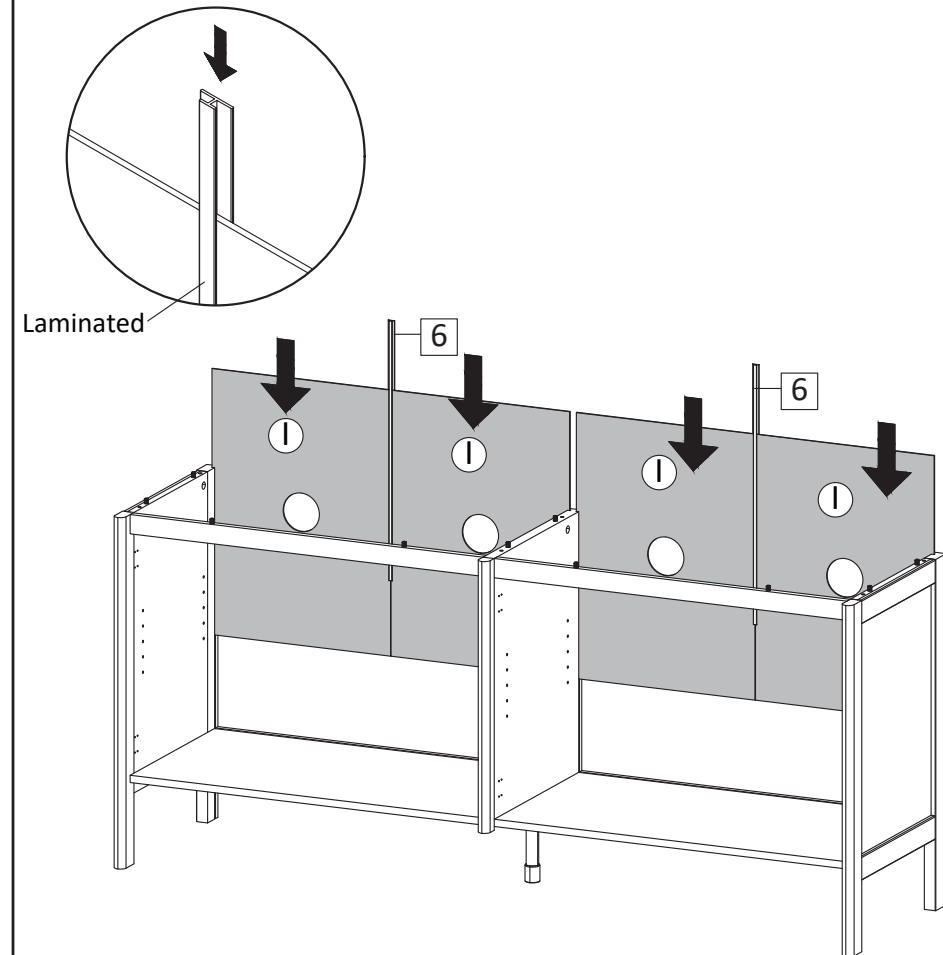
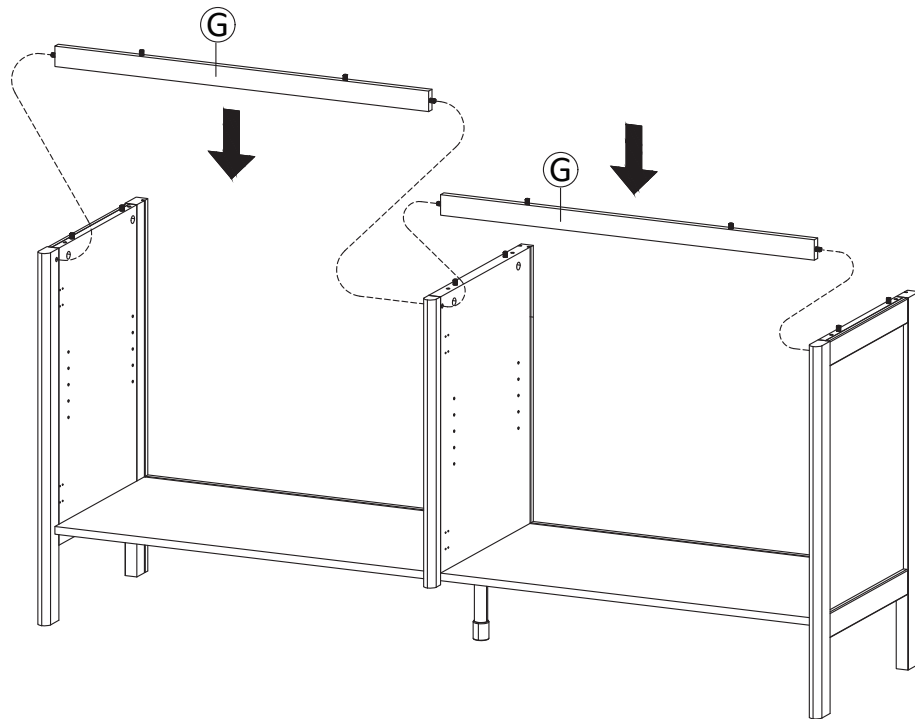


STEP5: Insert Front Skirt (G) into position as the above image.

STEP6: Insert Back Boards (I) into Bottom Board. Insert List Joint (HW6) in between the Back Boards.

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com
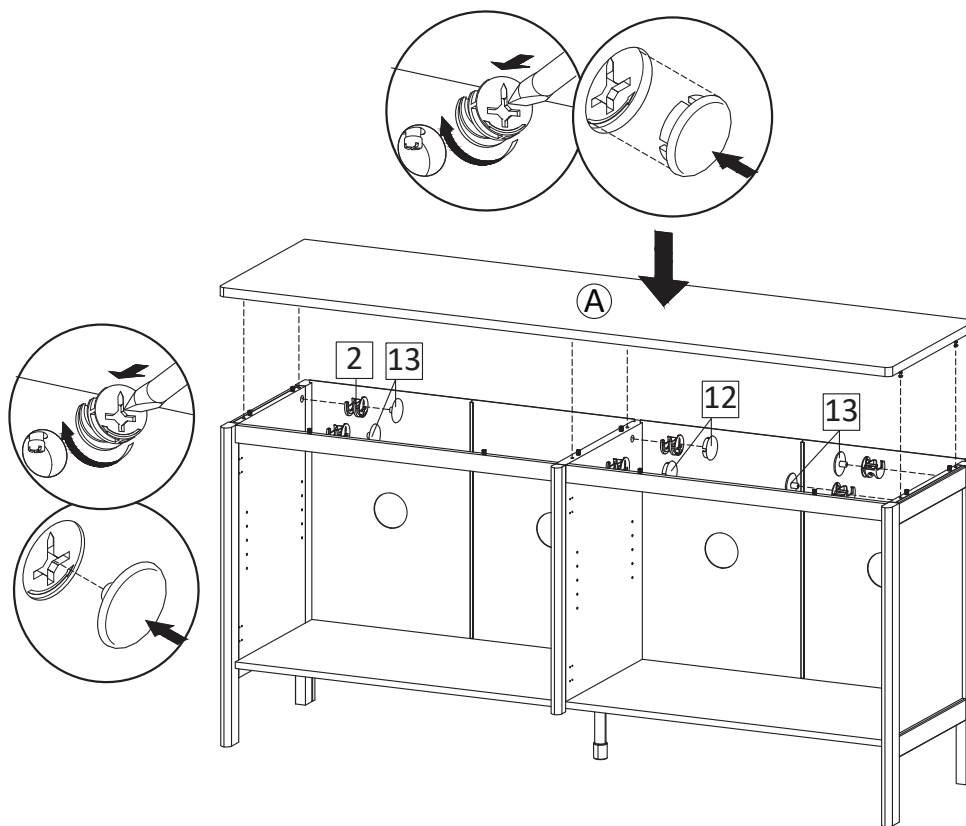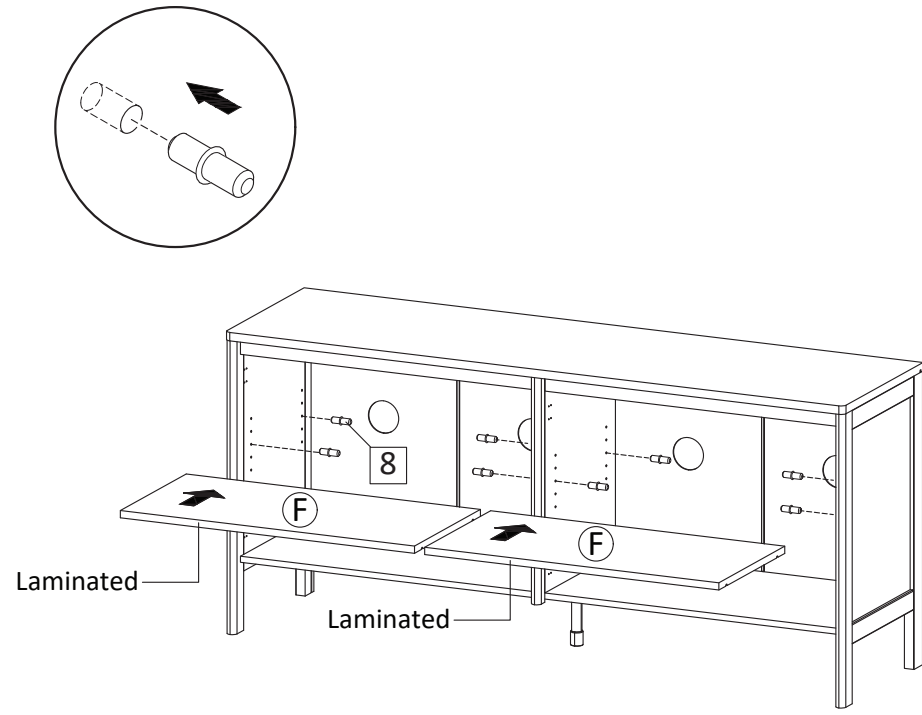
| | |
|--|--|
|  <p>The diagram shows a side view of the cabinet frame with the top board (A) being inserted. Callouts include: 2 (Camlock), 13 (Screw Cap), 12 (Screw Cap), and 13 (Screw Cap). Arrows indicate the direction of assembly for the camlocks and screw caps.</p> |  <p>The diagram shows the cabinet with two adjustable shelves (F) being placed. Callouts include: 8 (Shelf Pin) and F (Adjustable Shelf). Arrows indicate the direction of assembly for the shelf pins and shelves. The shelves are labeled 'Laminated'.</p> |
| <p>STEP7: Insert Top Board (A) and secure with Camlock (HW2) then tighten using screwdriver. Put Screw Cap (HW12) over the screw on Center Board (E), and put Screw Cap (HW13) over the screw Side Boards (C&D).</p> | <p>STEP8: Insert Shelf Pin (HW8) into the holes on Side Boards and Center Board, on the desired level. Then place the Adjustable Shelf (F) by inserting the grooved line on the shelf into the shelf pin.</p> |

PREPARATION



*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.

*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (included): Allen Key

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

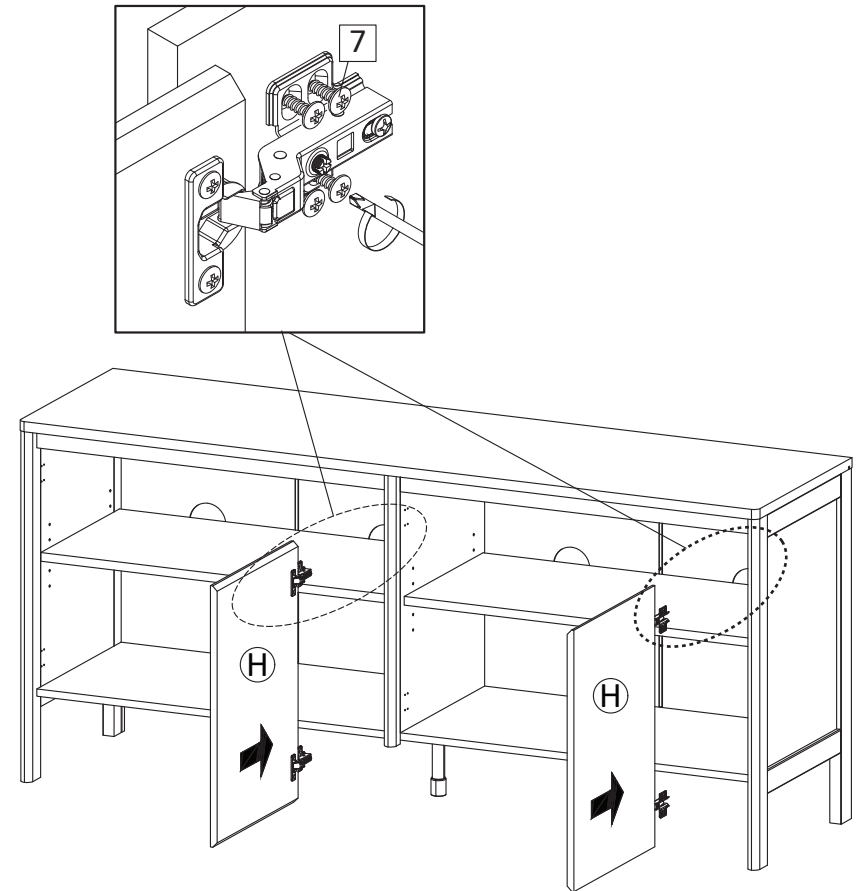
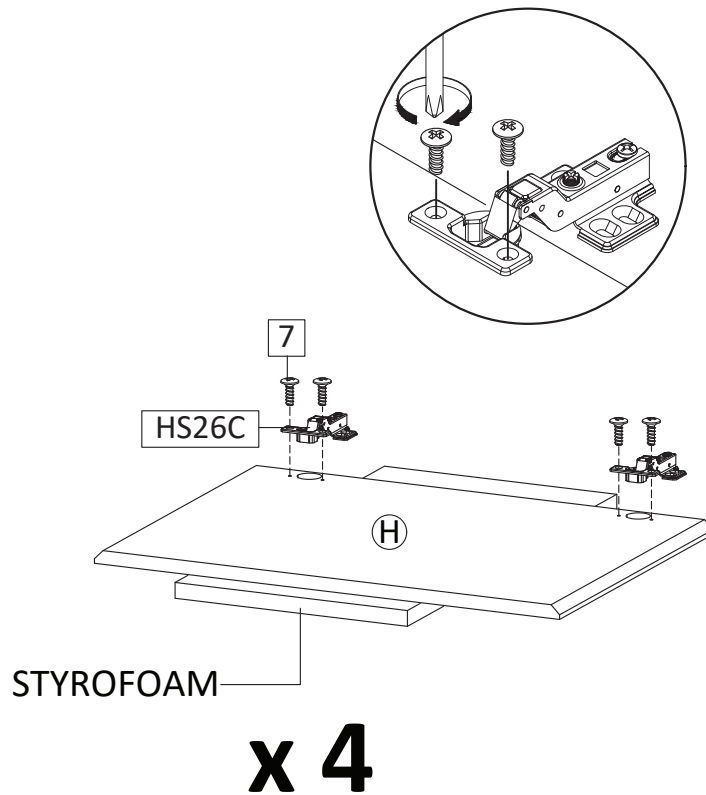


STEP9: Insert Hinge (HW HS26C) into the pre-drilled holes on the Door panels (H). Secure with screw M4.5x 12.5mm (HW7).

STEP10: Install Door (H) into Center Board (E) and Side Board Right (D). Please see the above images carefully. Secure with Screw M4.5x12.5mm (HW7). Please refer to the last page for more guide on how to adjust hinges.


PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com
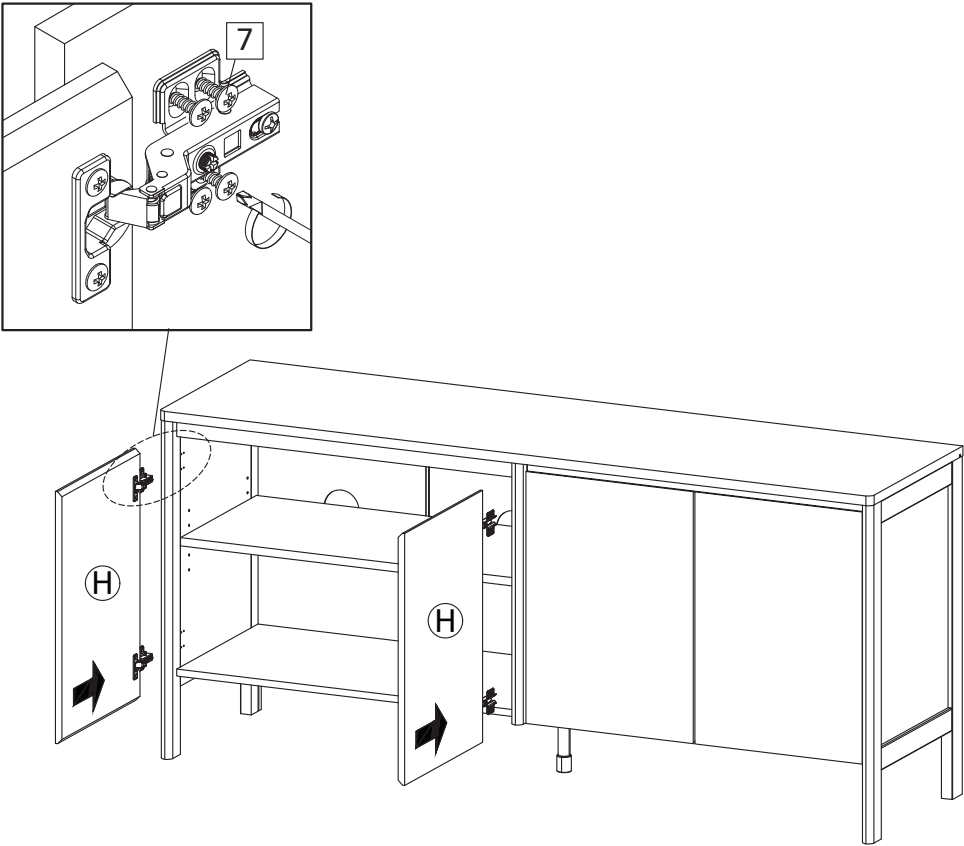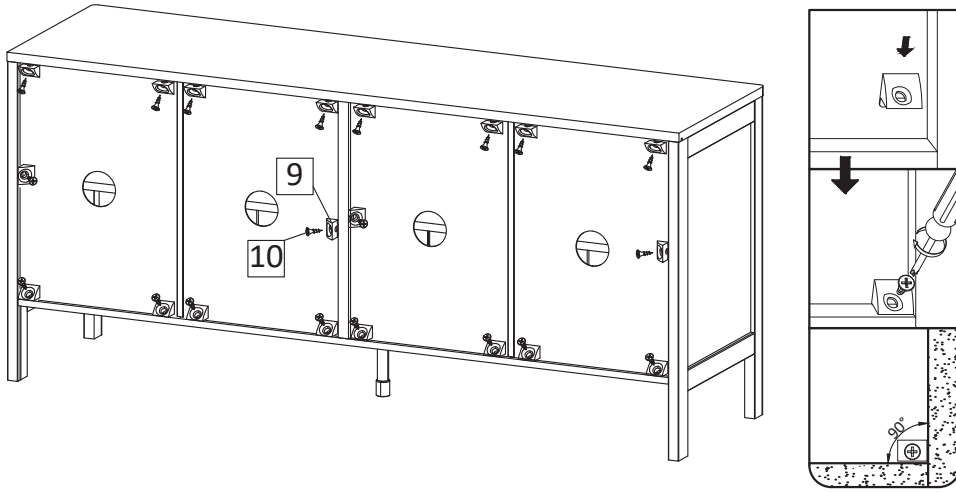
| | |
|---|--|
|  |  |
| <p>STEP11: Install Door (H) into Side Board Left (C) and Center Board (E). Please see the above images carefully. Secure with Screw M4.5x12.5mm (HW7). Please refer to the last page for more guide on how to adjust hinges.</p> | <p>STEP12: Use Wedge (HW9), Screw M3.5x15.5mm (HW10) to tighten the back of Sideboard by using screwdriver. Please align the top board and bottom board in 90° position against the side board, before securing the wedges (HW9).</p> |

PREPARATION

- *Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- *If any part is missing or damaged, do not attempt to assemble the product.
- *Estimated Assembly Time: 60 minutes.
- *Tools Required for Assembly (included): Allen Key
- *If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

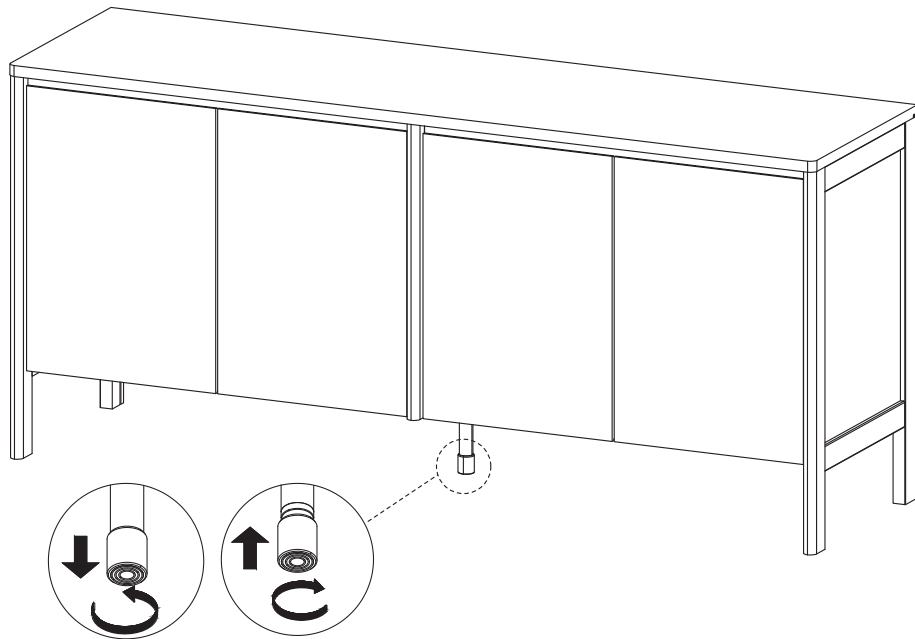






STEP13: Place your furniture on level floor. The legs come with adjustable leveller, adjust it as needed until your furniture sit steady on the floor. Assembly is complete.

TIPPING RESTRAINTS KIT INSTALLATION GUIDANCE

Different wall materials require unique wall fasteners.




The wall plugs (AA2) and screws (AA3) are designed for fixing to concrete walls only.

Please consult your local hardware store to ensure you are using the correct hardware for your wall type.

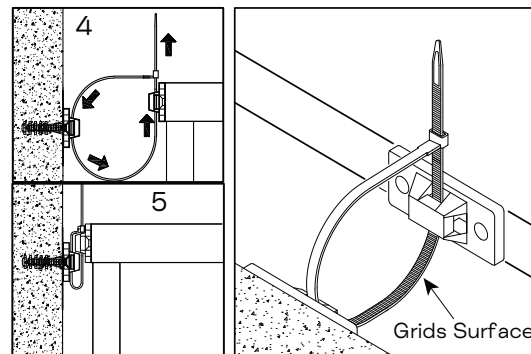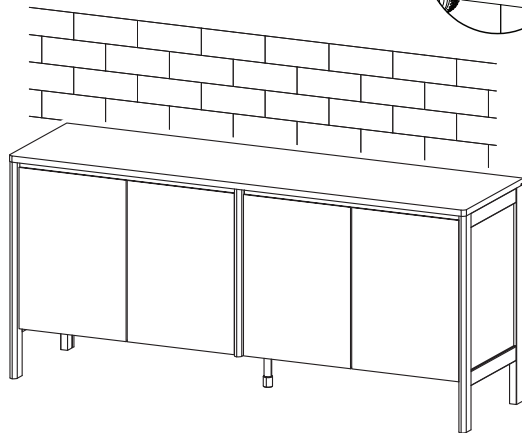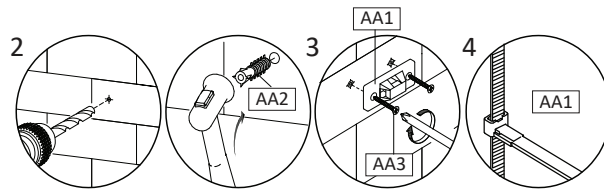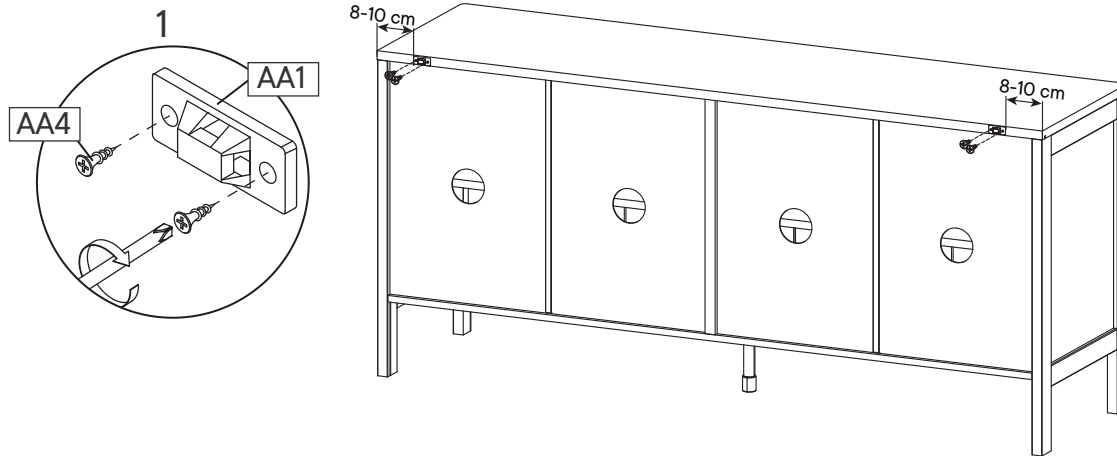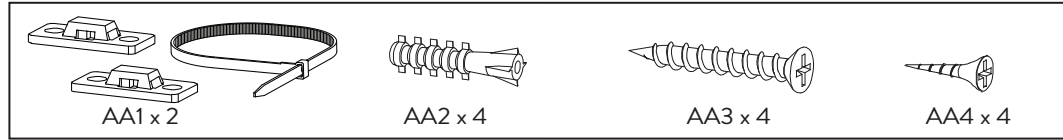



Grids Surface

HOW TO ADJUST HINGES

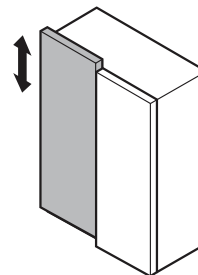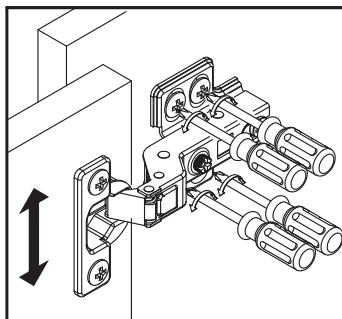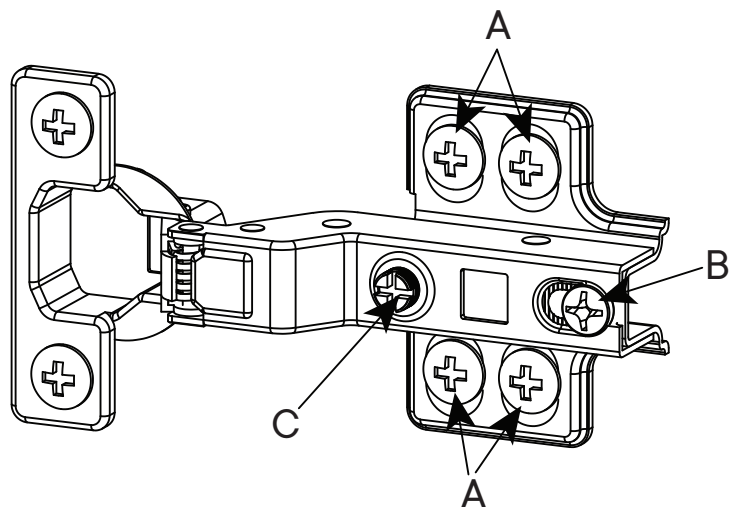



To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by few mm. Then tighten back up.

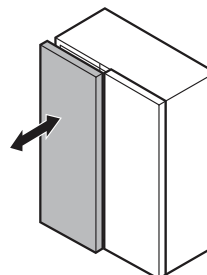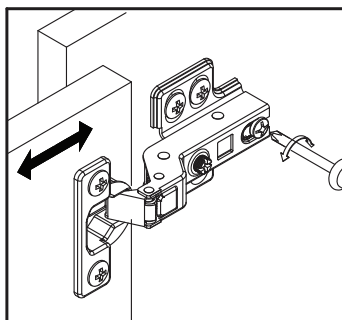

To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".

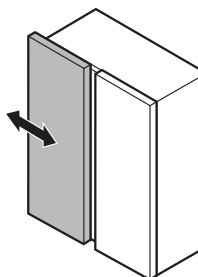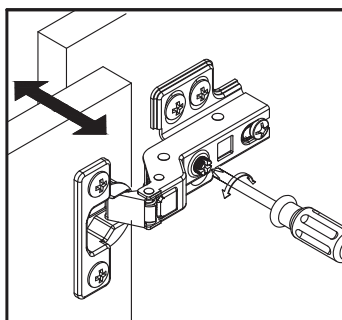

To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.