

NOTICE

- \* Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \* This item may require periodic tightening.
- \* If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)





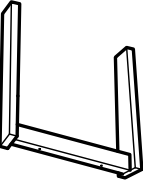
PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 10 minutes.
- \* Tools Required for Assembly (Included): Allen Key

CARE AND MAINTENANCE

Adhesive felt pads should always be applied to areas of furniture which make direct contact with flooring, said application will prevent damage to the furniture and or surfaces on which the furniture lies. Objects placed on articles of furniture should rest on non abrasive material as to prevent damage to the wood finish. Objects whose composition consists of plastic and rubber are known to discolor and damage the wood surfaces on which they rest. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

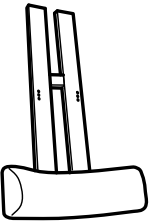
Part List and Hardware List

PIECE	DESCRIPTION	PICTURE	QUANTITY
A	Chair Back		2X
B	Seat		2X
C	Apron - Left		2X
D	Apron - Right		2X
E	Front Leg		2X



Model# DCH3804

Product Dimension: 19"W x 20"D x 31"H

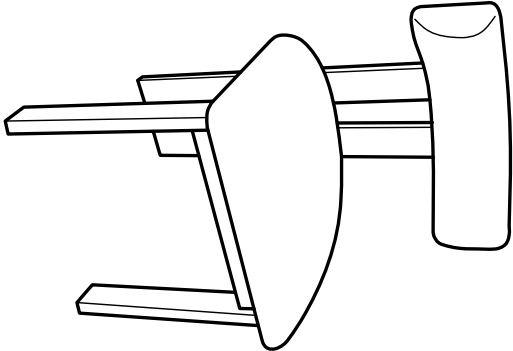









WARNING

Weight capacity : 275 LBS


WARNING : DO NOT STAND ON THE CHAIR

WARNING : DO NOT OVER TORQUE BOLTS

HW1	Bolt 6 x 0.5 x 50MM		16X
HW2	Split Lock Washer 5 / 16"		16X
HW3	Chipboard Screw 4 x 32MM		12X
HW4	Wood Dowel 8 x 30MM		12X
HW5	Wood Plug 14.5 x 9MM		8X
HW6	Chipboard Screw 4 x 16MM		8X
HW7	L-Bracket		4X
HW8	Allen Key 4 x 100MM		1X


PREPARATION

- \* Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \* If any part is missing or damaged, do not attempt to assemble the product.
- \* Estimated Assembly Time: 10 minutes.
- \* Tools Required for Assembly (included) : Allen Key
- \* If you are having difficulty, our friendly Customer care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

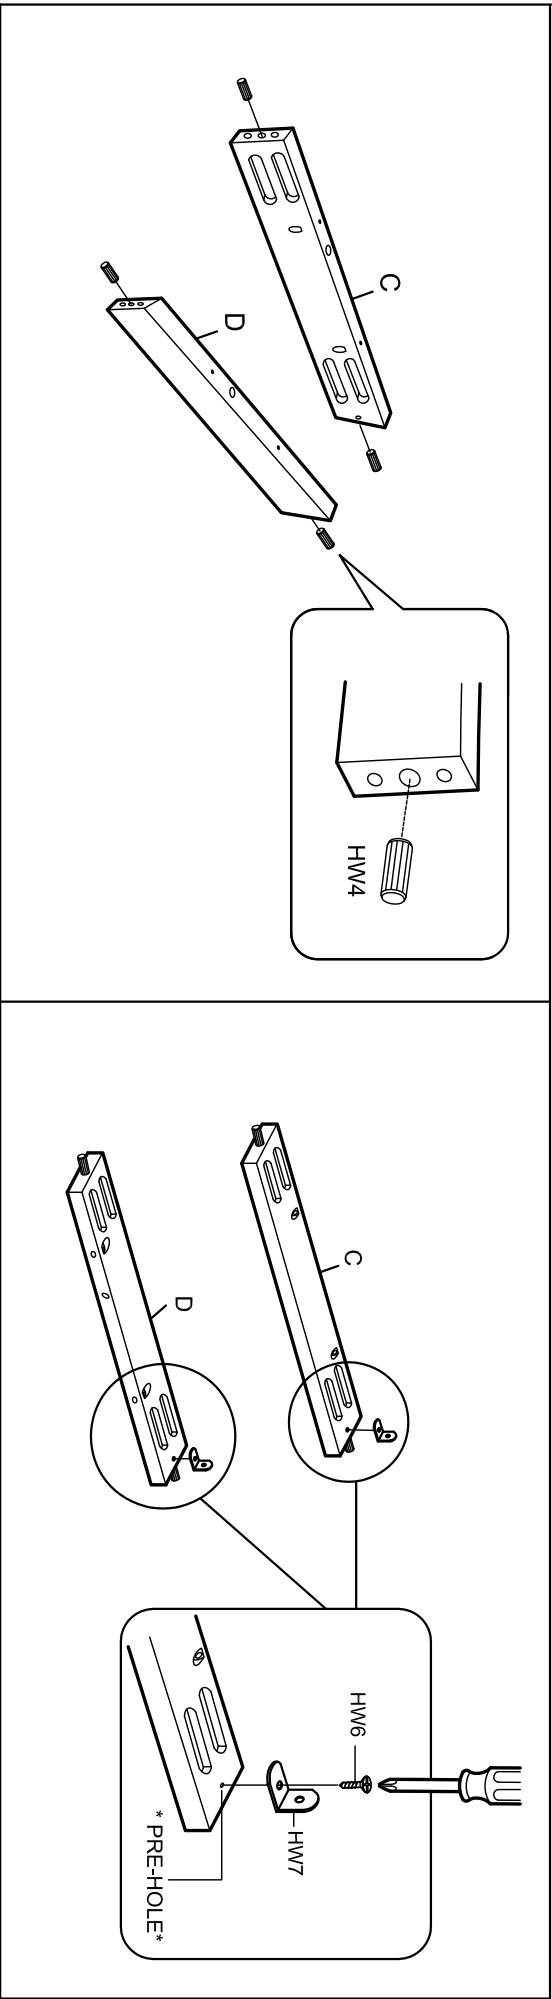


STEP 1: INSERT THE APRON LEFT AND APRON RIGHT INTO THE DESIGNATED HOLE ON (C & D).


STEP 2: ATTACH THE L-BRACKET AT APRON RIGHT AND APRON LEFT WITH SCREW AS SHOWN BY USING PHILIPS SCREWDRIVER.

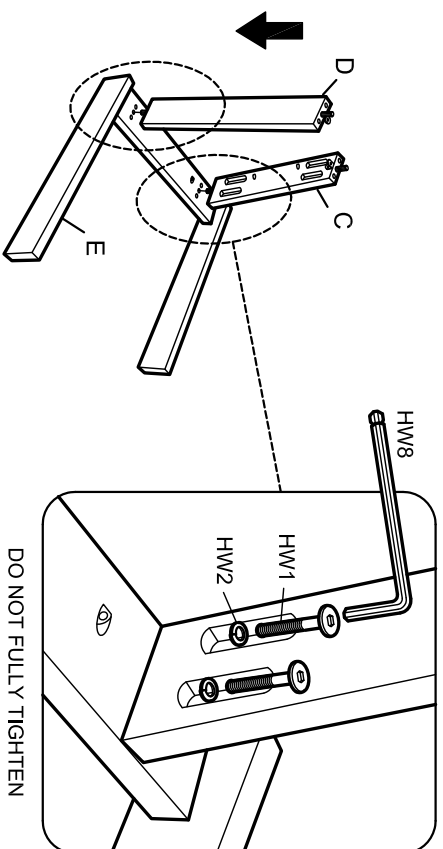


STEP 3: ATTACH THE APRON LEFT AND APRON RIGHT TO FRONT LEG BY ALIGN THE BOLTS HOLES.SCREW THE BOLTS AS SHOWN BY USING ALLEN KEY.DO NOT TIGHTEN COMPLETELY AT THIS TIME.

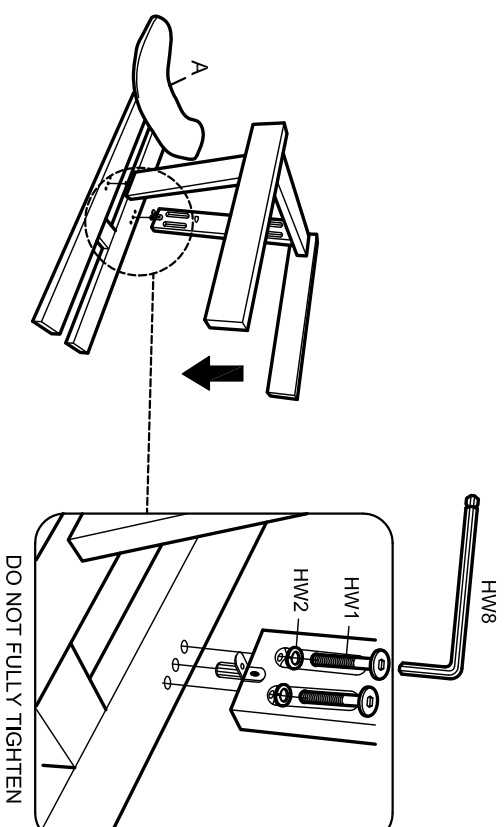


STEP 4: ATTACH THE ASSEMBLY PART WITH ALIGN THE BOLTS HOLES ON CHAIR BACK AS SHOWN.SCREW THE BOLTS BY USING ALLEN KEY AND DO NOT TIGHTEN COMPLETELY AT THIS TIME.

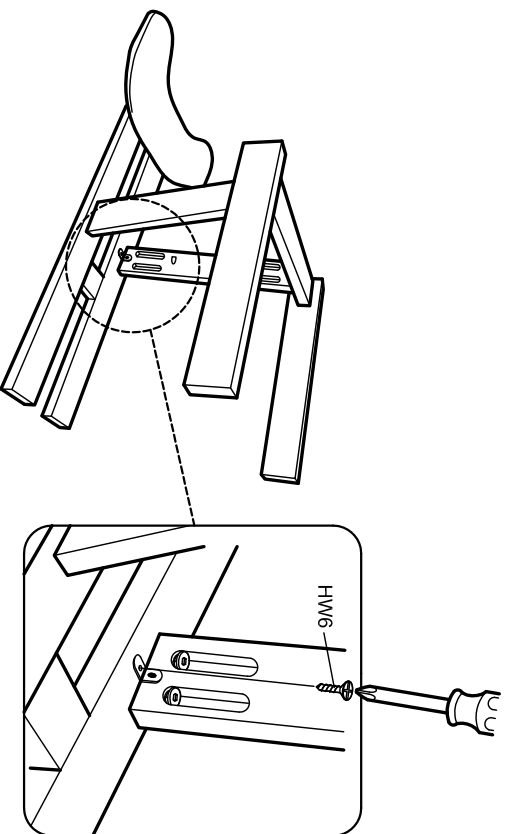


STEP 5: SCREW THE L-BRACKET AS SHOWN BY USING PHILIPS SCREWDRIVER.

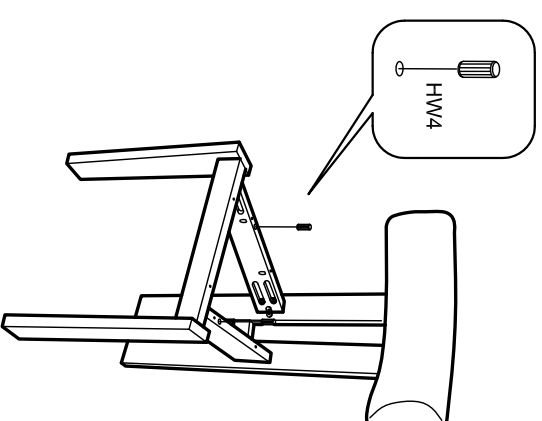


STEP 6: INSERT THE DOWEL INTO THE DESIGNATED HOLE ON APRON LEFT AND APRON RIGHT.

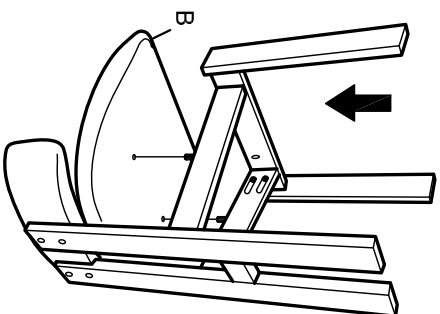

STEP 7: ATTACH THE ASSEMBLY PART TO SEAT AS SHOWN.

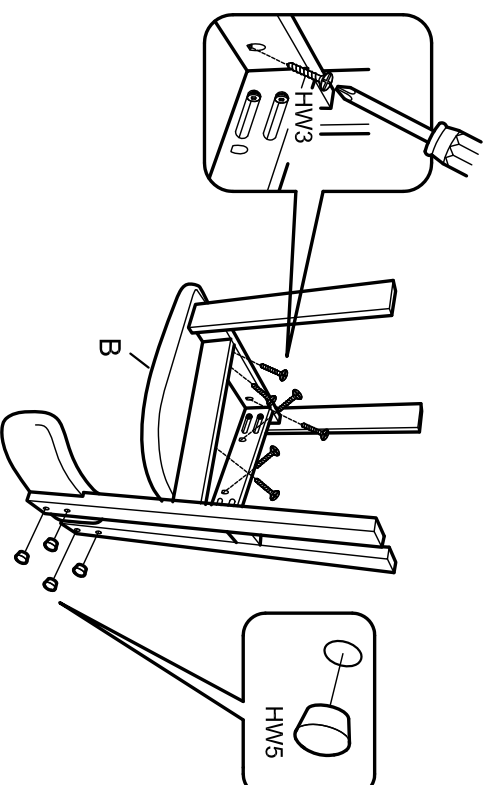

STEP 8: SCREW THE SEAT AS SHOWN BY USING PHILIPS SCREWDRIIVER.INSERT THE WOOD PLUG INTO THE DESIGNATED HOLE AT CHAIR BACK.

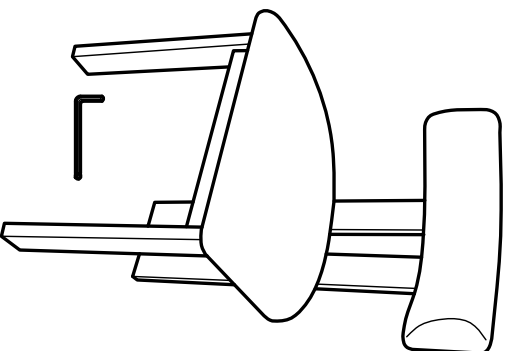

STEP 9: PUT THE CHAIR UPRIGHT AND MAKE SURE ALL LEGS ARE LEVEL, THEN FIRMLY TIGHTEN BOLTS WITH ALLEN KEY WHILE THE CHAIR IS UPRIGHT AS PICTURED ABOVE.