


TRISTYNA WOOD 6 SHELF BOOKCASE

DESIGN# SFV4245

Assembly Instructions

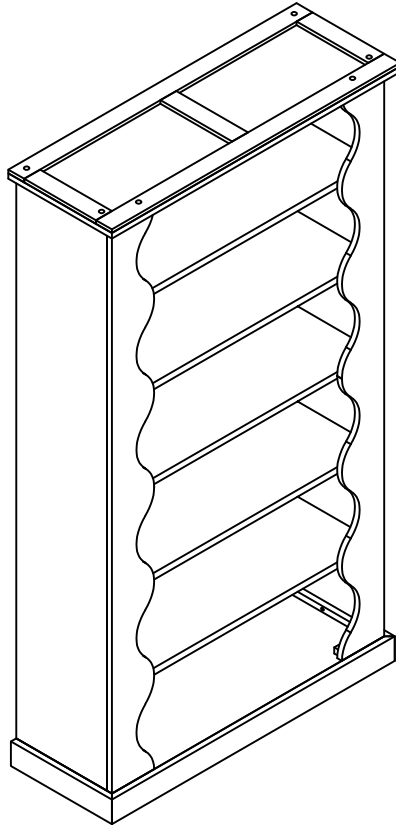


SAFAVIEH
C O U T U R E

Thanks for bringing Safavieh Couture into your home

Everything we make is incredibly simple to set up, including your new bookcase. You won't need any additional tools.


Parts List

- A x 1
Top panel
- B x 1
Bottom panel
- C x 1
Left side panel
- D x 1
Right side panel
- E x 5
Shelves
- F x 1
Back panel

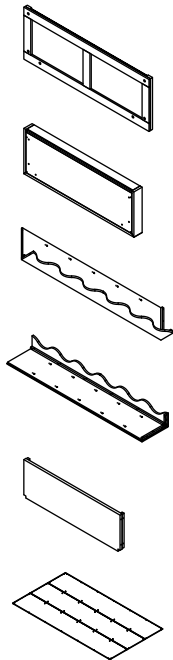


Hardware List

- HW1 x 32
Bolt M6x30mm
- HW2 x 32
Flat Washer M6x14mm
- HW3 x 32
Spring washer M6x10mm
- HW4 x 1
Allen key
- HW5 x 28
Wooden dowel 8x30mm
- HW6 x 46
Screws 4x20mm
- HW7 x 4
Plastic Brackets
- HW8 x 2
Restraint straps
- HW9 x 4
Screws 4x20mm
- HW10 x 4
Plastic anchors
- HW11 x 4
Screws 4x40mm




1

Insert one end of the Dowels (HW5) into the ends of the Shelves (E) and the other end into the left side panel (C). Place the Spring Washers (HW3) and Flat Washers (HW2) on the Bolts (HW1). Attach the Shelves (E) to the left side panel (C) by using the Allen Key (HW4) to screw in the Bolts (HW1) with the washers in the spots shown below.

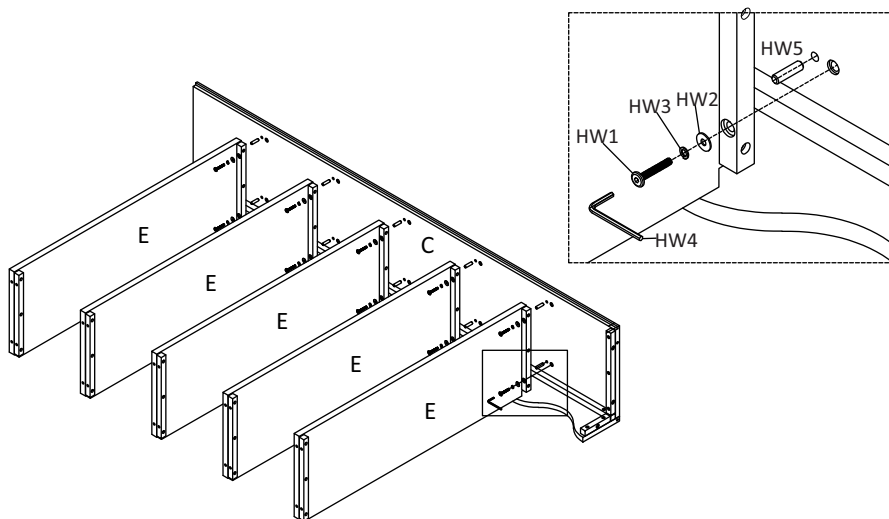


2


Repeat step 1 to attach the other side of the Shelves (E) to the right side panel (D).

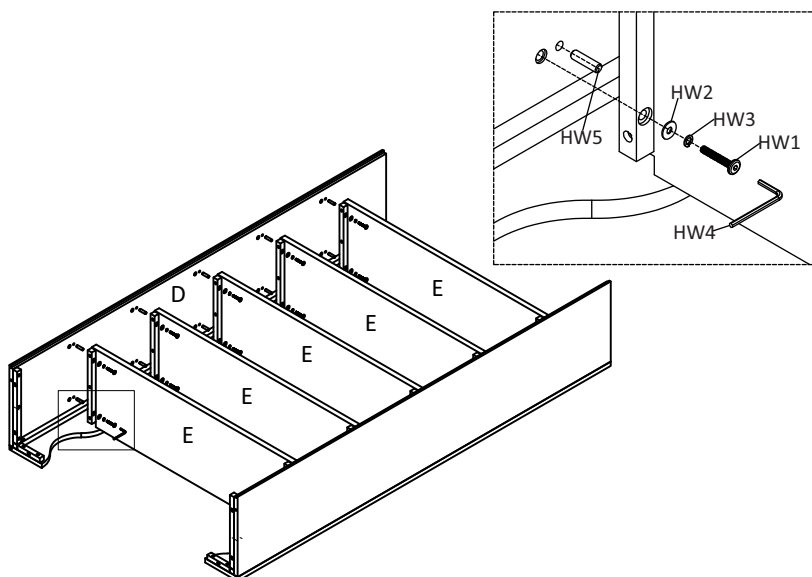



Insert one end of the Dowels (HW5) into the bottom of the assembled Shelves (E) and the other end into the bottom panel (B). Place the Spring Washers (HW3) and Flat Washers (HW2) on the Bolts (HW1). Attach the assembled shelves to the bottom panel (B) by using the Allen Key (HW4) to screw in the Bolts (HW1) with the washers in the spots shown below.

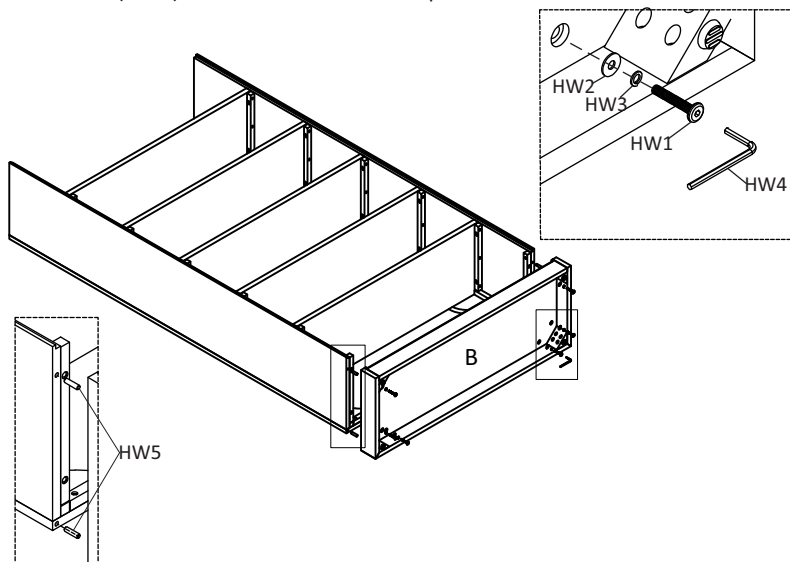





Insert one end of the Dowels (HW5) into the top of the assembled shelves and the other end into the top panel (A). Place the Spring Washers (HW3) and Flat Washers (HW2) on the Bolts (HW1). Attach the assembled shelves to the top panel (A) by using the Allen Key (HW4) to screw in the Bolts (HW1) with the washers in the spots shown below.

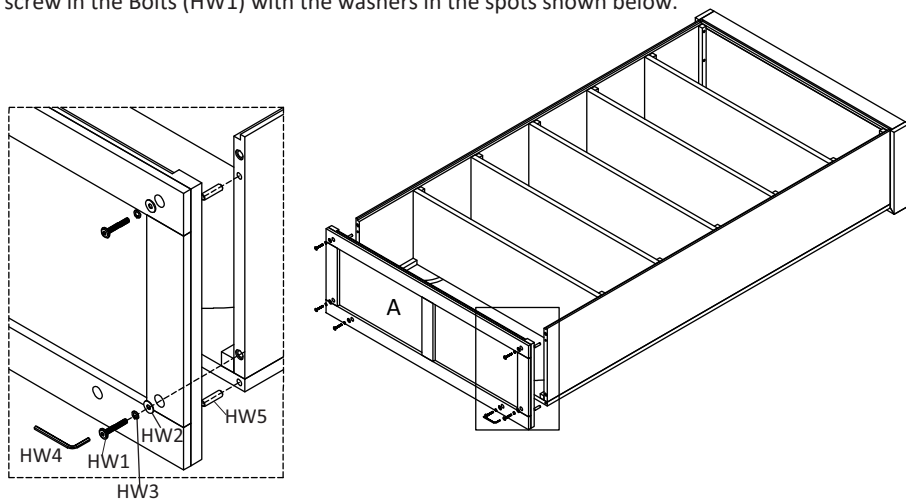

Attach the Back Panel (F) to the assembled shelves by using a Philips Head Screwdriver to screw in the Screws (HW6) in the spots shown below.

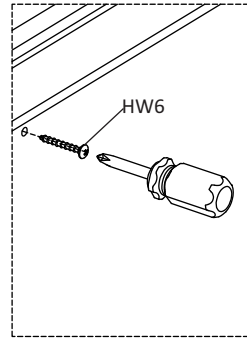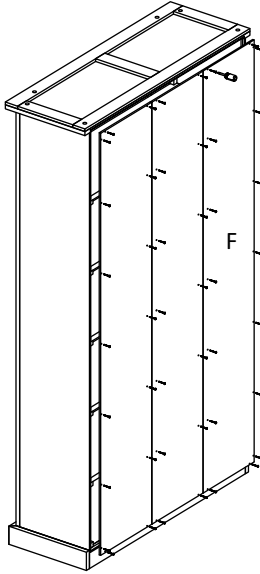


To help prevent the possibility of tipping over, install the tip over restraint kit provided.

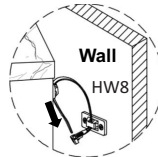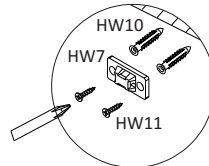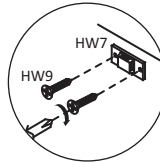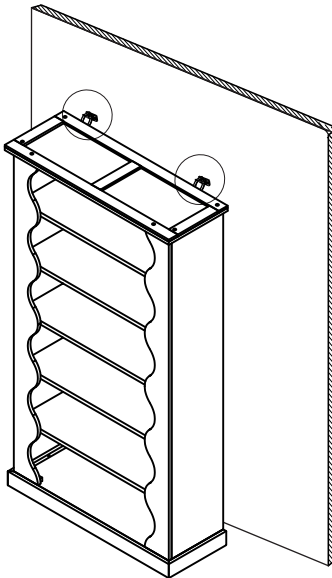

Place the bookcase in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

@safavieh

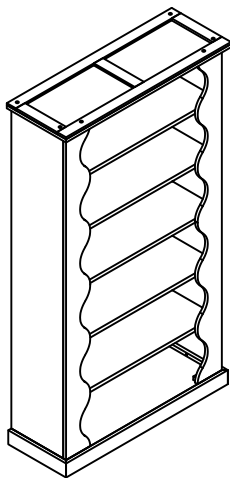

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com

866-422-9070