

NOTICE

*Please make sure that you have all part indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.

*This item should be assembled on a soft surface to prevent scratching the finish during assembly.

*This item may require periodic tightening.

*If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

PREPARATION

*Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

*If any part is missing or damaged, do not attempt to assemble the product.


*Estimated Assembly Time: 60 minutes.

*Tools Required for Assembly (Not included): Screwdriver

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.


Part List

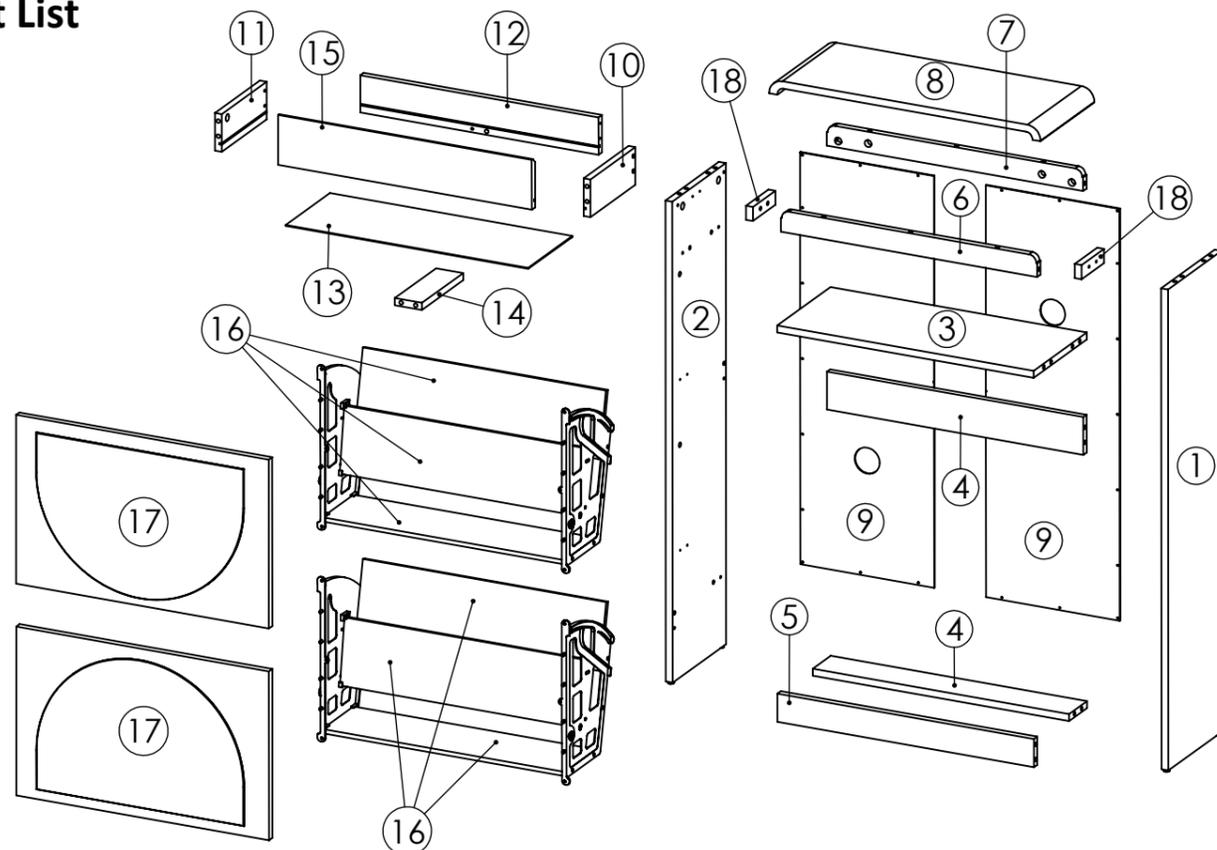

 **SAFAVIEH**
FURNITURE

Model# STG3100

Product Dimensions: W 23,62" x D 9,45" x H 41,54"

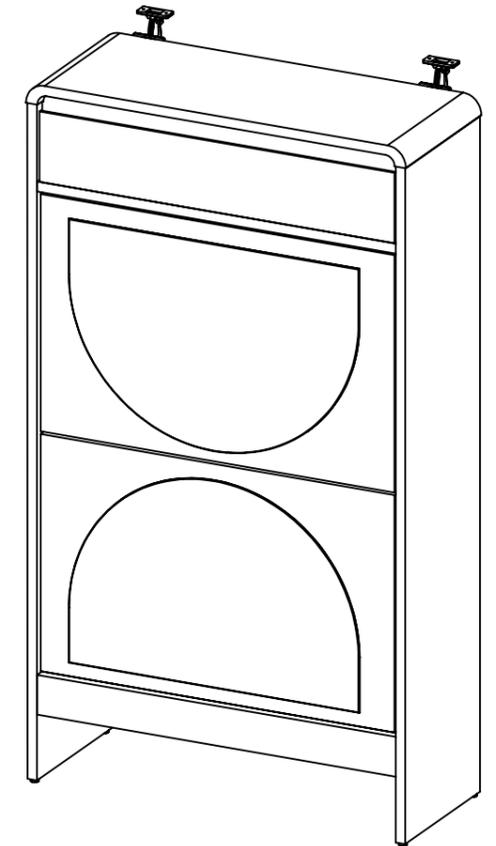

WARNING

WEIGHT CAPACITY




Top Load Limit : 14 lbs

Shelf Load Limit : 12 lbs

Drawer Load Limit : 3 lbs

 WARNING	
	Children have died from furniture tipover. To reduce the risk of furniture tipover: -ALWAYS install Anti-tip device provided. -NEVER put a TV on this product.
	-NEVER allow children to stand, climb or hang on drawers, doors, or shelves. -NEVER open more than one drawer at a time. -Place heaviest items in the lowest drawers.
<i>This is a permanent label. Do not remove!</i>	

Hardware List
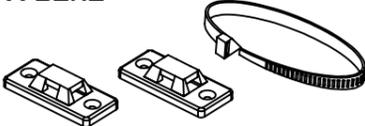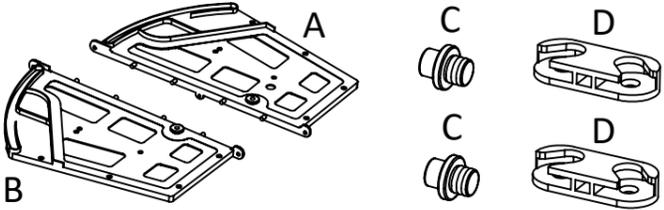
<p>HW1x25</p>  <p>Ø6x32 mm</p>	<p>HW2x25</p>  <p>Ø15x12 mm</p>	<p>HW3x20</p>  <p>Ø8x32 mm</p>	<p>HW4x5</p>  <p>Ø7x32 mm</p>	<p>HW5x4</p>  <p>Ø6x15 mm</p>	<p>HW6x45</p>  <p>Ø6x12 mm</p>
<p>HW7x4</p>  <p>Ø10x50 mm</p>	<p>HW8x15</p>  <p>Ø20 mm</p> <p>Oak</p>	<p>HW9x1</p> 	<p>HW10x4</p>  <p>Ø6x19 mm</p>	<p>HW11x4</p>  <p>Ø8x35 mm</p>	<p>HW12x2</p> 
<p>HW13x2</p>  <p>A</p> <p>B</p> <p>C</p> <p>D</p>		<p>HW14x2</p> 	<p>HW15x22</p>  <p>ØM3x12 mm</p>		

Part List & HW

Piece	Description	Qty	Carton Call
1	Right side panel	1	1 of 1
2	Left side panel	1	1 of 1
3	Fixed shelf	1	1 of 1
4	Back Frame	2	1 of 1
5	Front bottom frame	1	1 of 1
6	Front top frame	1	1 of 1
7	Back top frame	1	1 of 1
8	Top panel	1	1 of 1
9	Back panel	2	1 of 1
10	Right side drawer	1	1 of 1
11	Left side drawer	1	1 of 1
12	Drawer back	1	1 of 1
13	Drawer base	1	1 of 1
14	Drawer base support	1	1 of 1
15	Front drawer	1	1 of 1
16	Shoe rack base	6	1 of 1
17	Front Shoe rack	2	1 of 1
18	Drawer resistance	2	1 of 1


Piece	Description	Qty	Carton Call
HW1	Cambolt	25	1 of 1
HW2	Camlock	25	1 of 1
HW3	Wooden dowel	20	1 of 1
HW4	Screw M7 x 32 mm	5	1 of 1
HW5	Screw M6 x 15 mm	4	1 of 1
HW6	Screw M6 x 12 mm	45	1 of 1
HW7	Screw M10 x 50 mm	4	1 of 1
HW8	Cover Cap Sticker	15	1 of 1
HW9	Stopper	1	1 of 1
HW10	Screw M6 x 19 mm	4	1 of 1
HW11	Plug M8 x 35 mm	4	1 of 1
HW12	Anti-tip	2	1 of 1
HW13	Shoe rack fan	2	1 of 1
HW14	Air Vent Cover	2	1 of 1
HW15	Screw M3 x 12 mm	22	1 of 1

PREPARATION


Before beginning assembly of product, make sure all part are present. Compare part with part contents list and hardware contents list.

If any part is missing or damaged, do not attempt to assemble the product.


Estimated Assembly Time: 60 minutes.

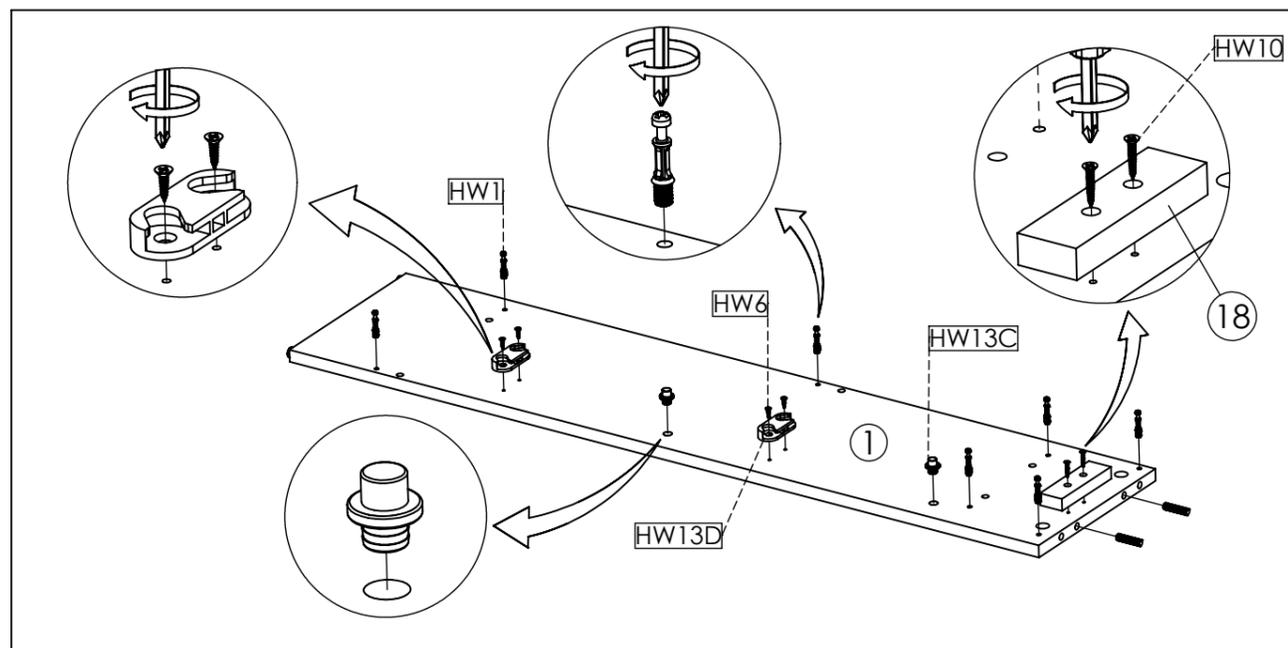


STEP1: Insert Cambolt (HW1), Shoe rack fan (HW13C), into Right Side Panel (1)
Continue with securing part of, the Shoe rack fan (HW13D), into position as the above image, using screw M6x12mm (HW6).
Continue with securing part of, the Drawer resistance (18), into position as the above image, using screw M6x19mm (HW10)

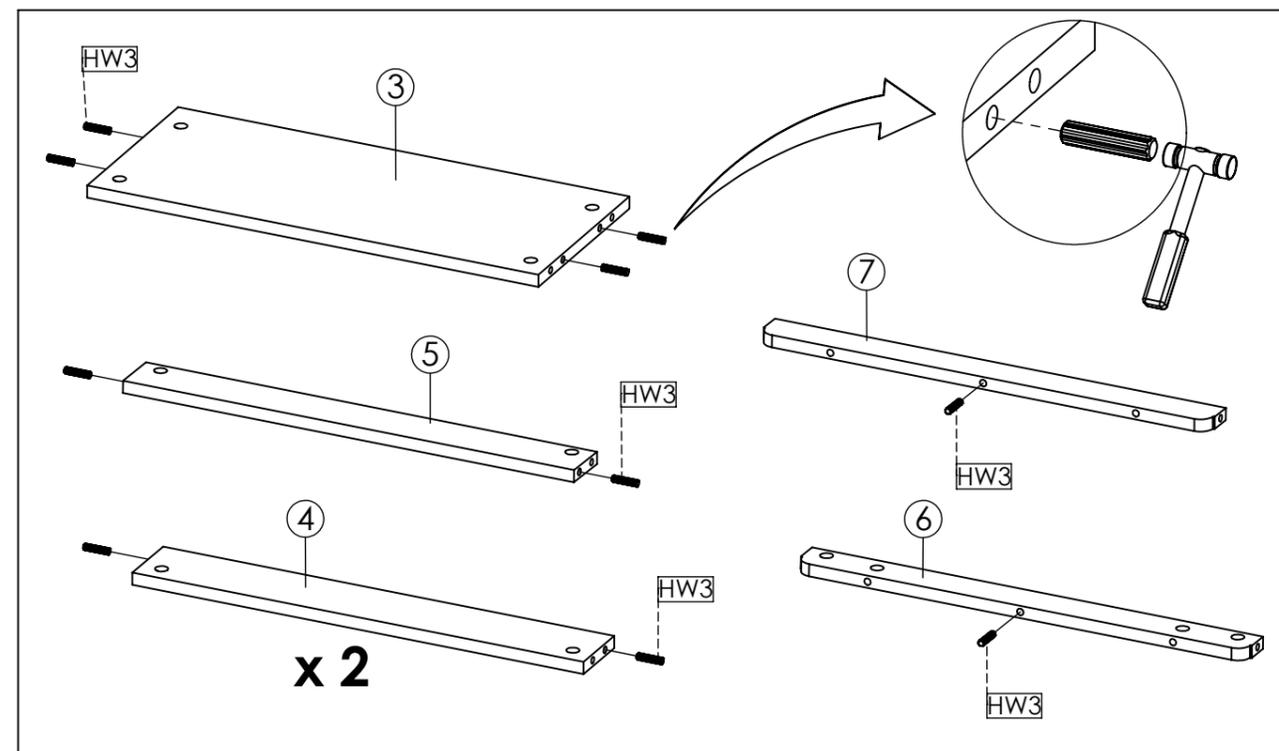


STEP2: Insert Wooden Dowel (HW3) into Fixed shelf (3), Back frame (4), Front Bottom Frame (5), Front Top Frame (6), And Back Top Frame (7)

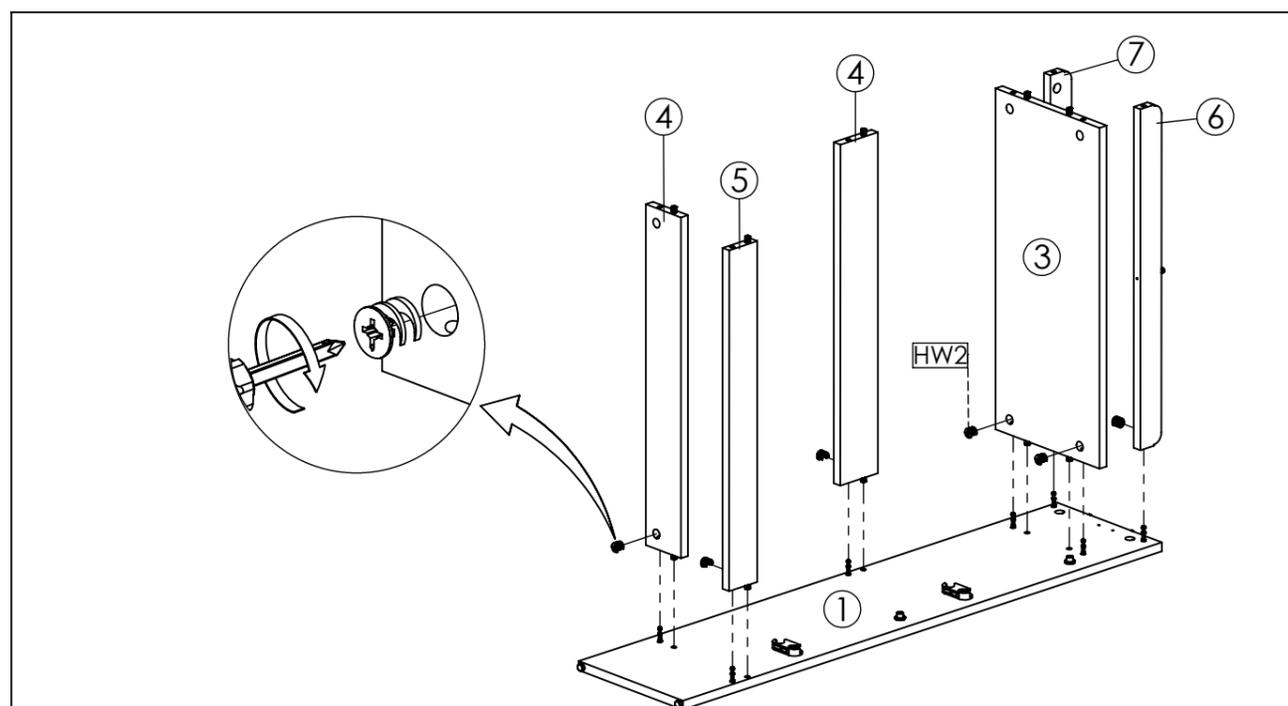


STEP3: Attach Fixed shelf (3), Back frame (4), Front Bottom Frame (5), Front Top Frame (6), And Back Top Frame (7) into Right side panel (1).
Secure with Camlock (HW2) and tighten it using screwdriver.

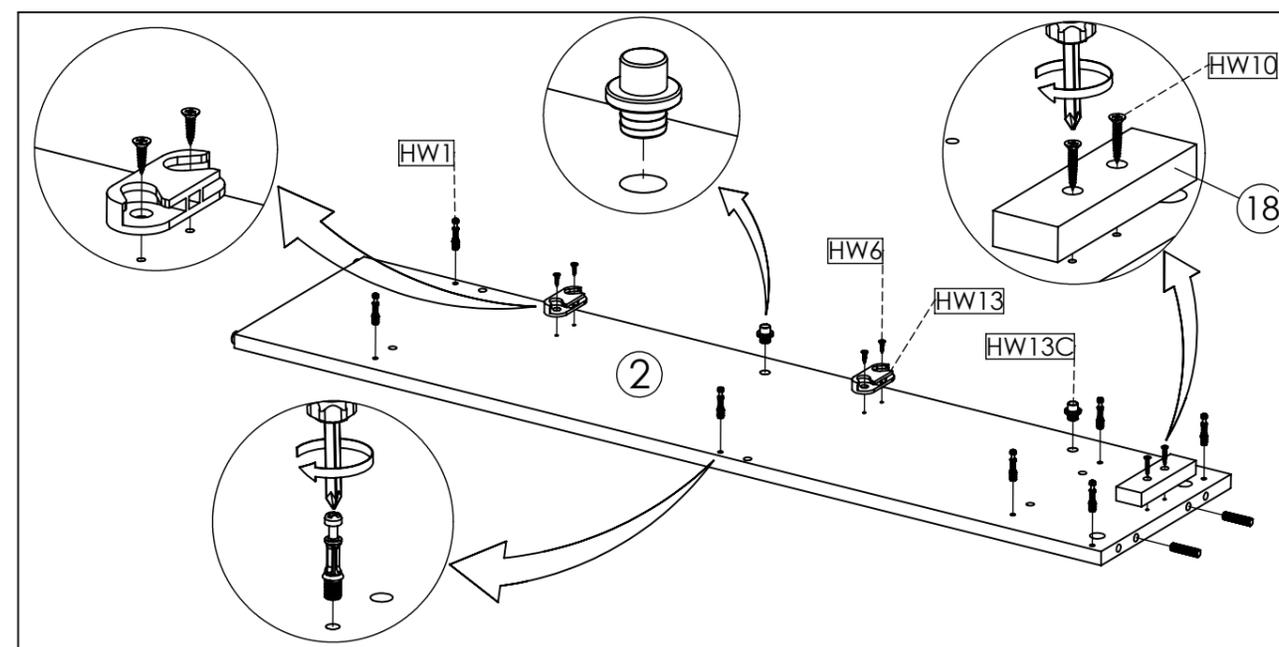


STEP4: Insert Cambolt (HW1), Shoe rack fan (HW13C), into Left Side Panel (2)
Continue with securing part of, the Shoe rack fan (HW13D), into position as the above image, using screw M6x12mm (HW6).
Continue with securing part of, the Drawer resistance (18), into position as the above image, using screw M6x19mm (HW10)

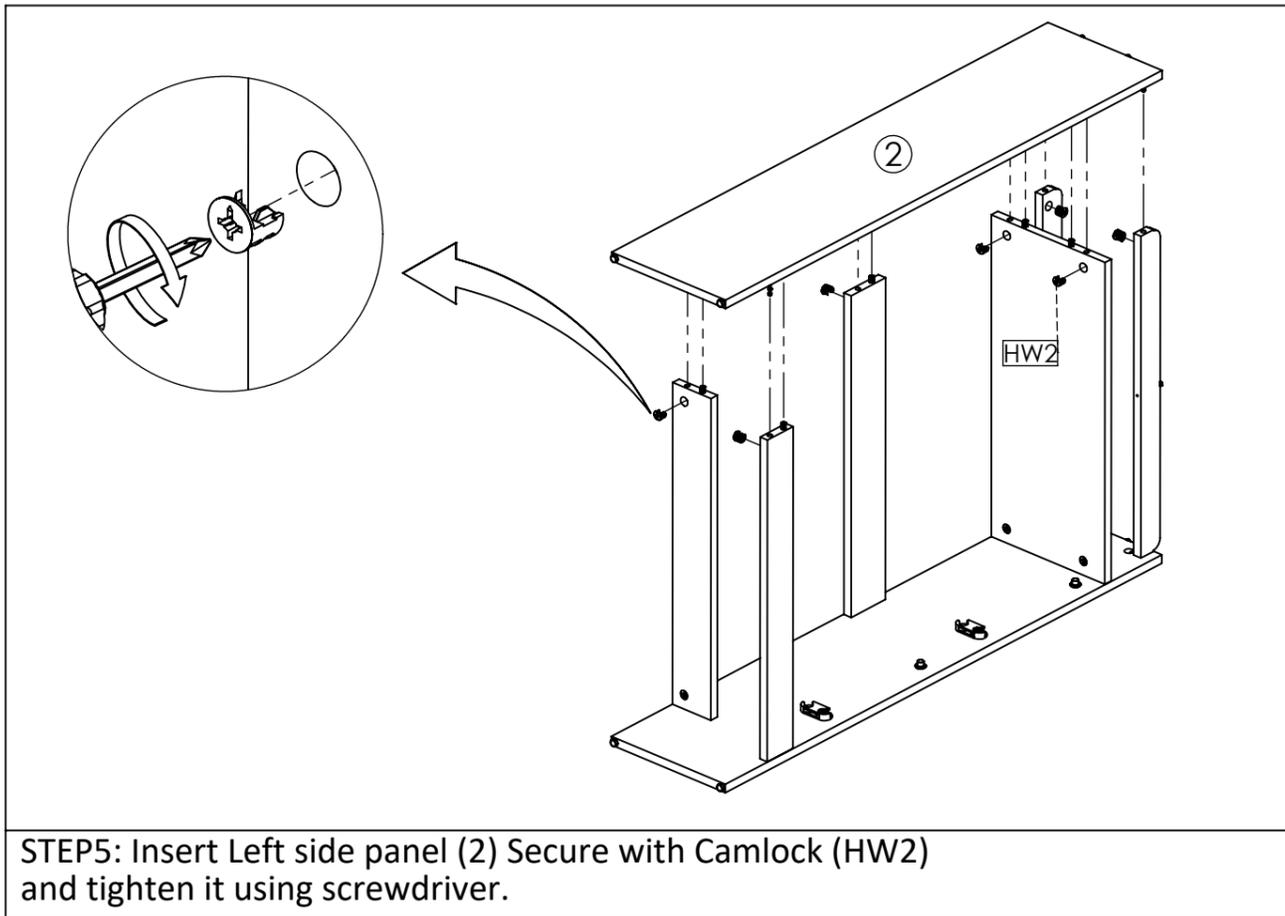


STEP5: Insert Left side panel (2) Secure with Camlock (HW2) and tighten it using screwdriver.

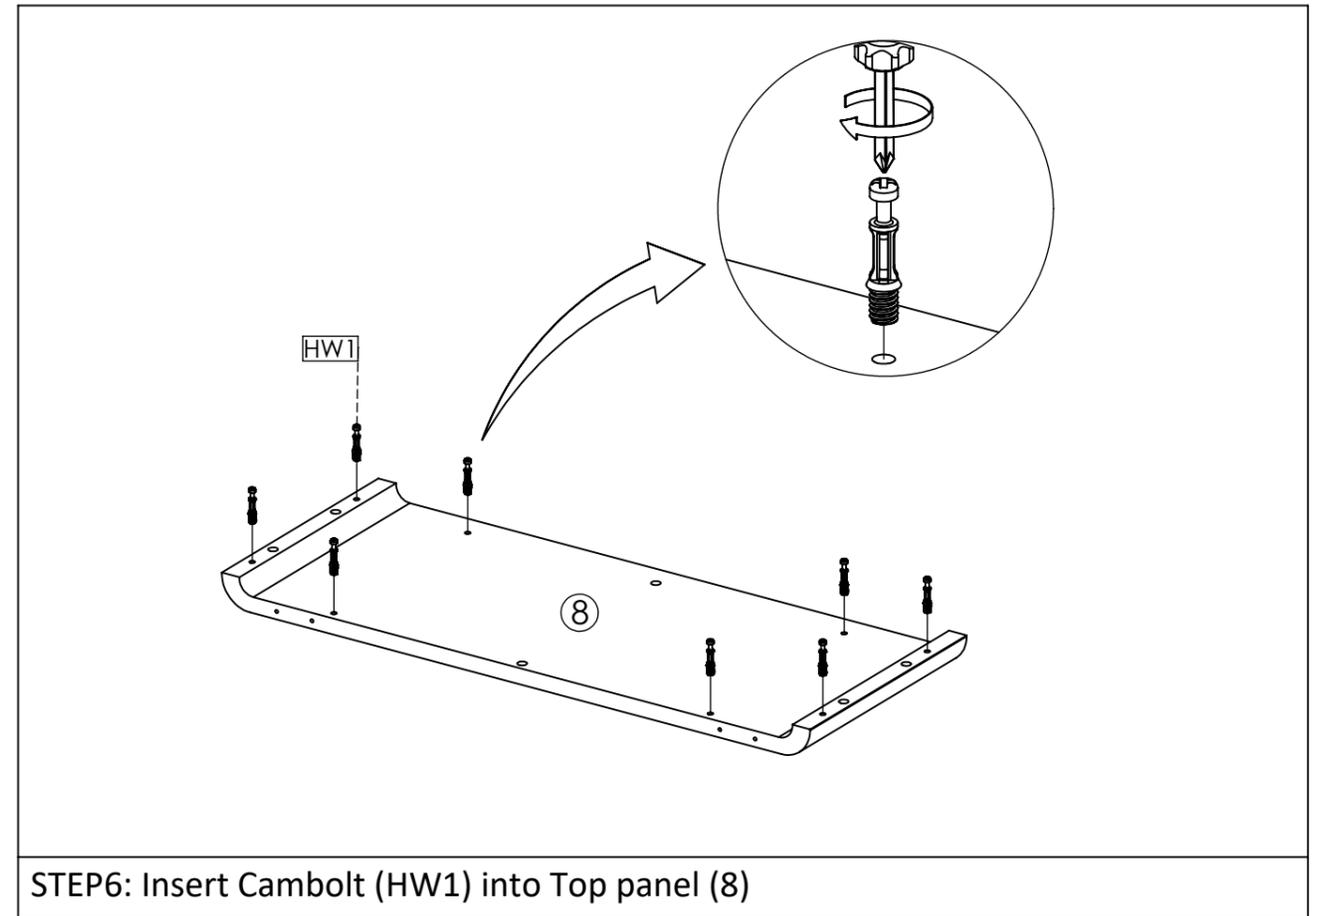


STEP6: Insert Cambolt (HW1) into Top panel (8)

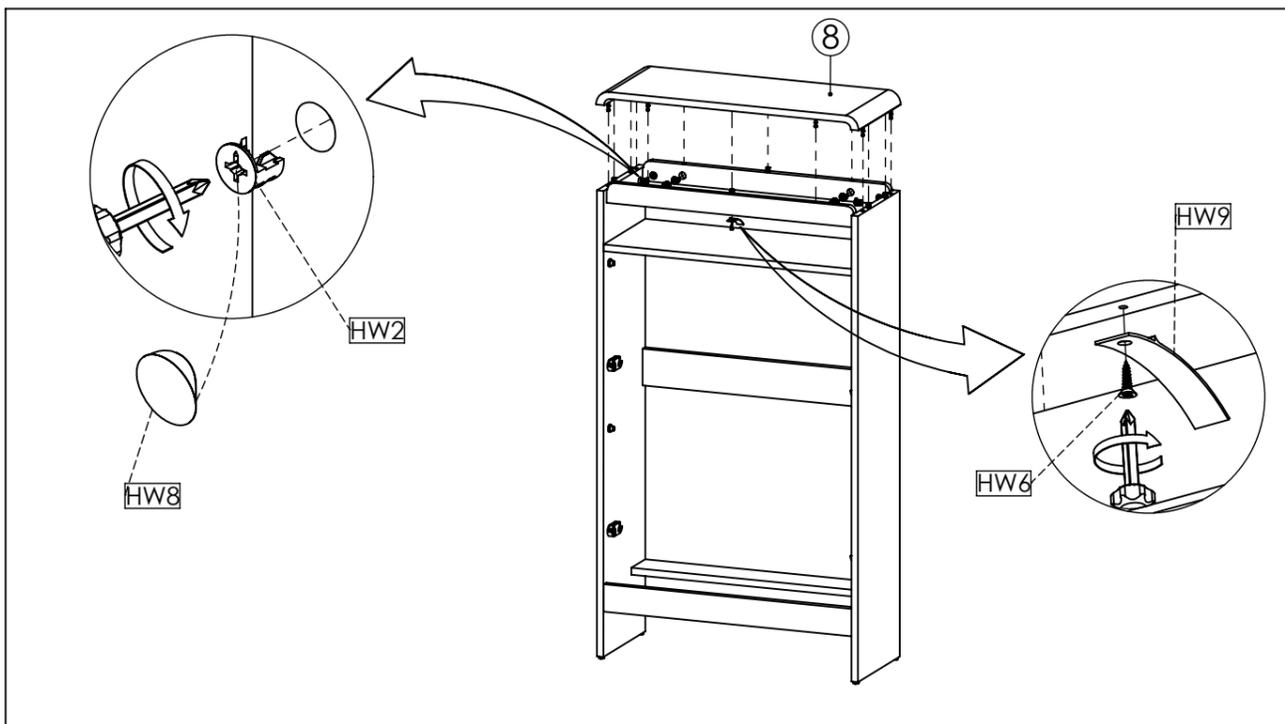


STEP7: Insert top panel (8), Secure with Camlock (HW2) and tighten it using screwdriver.
Continue with securing part of, the Stopper (HW9), into position as the above image, using screw M6x12mm (HW6)
Continue to attach the cover cap sticker(HW8) to the panel that has lamination

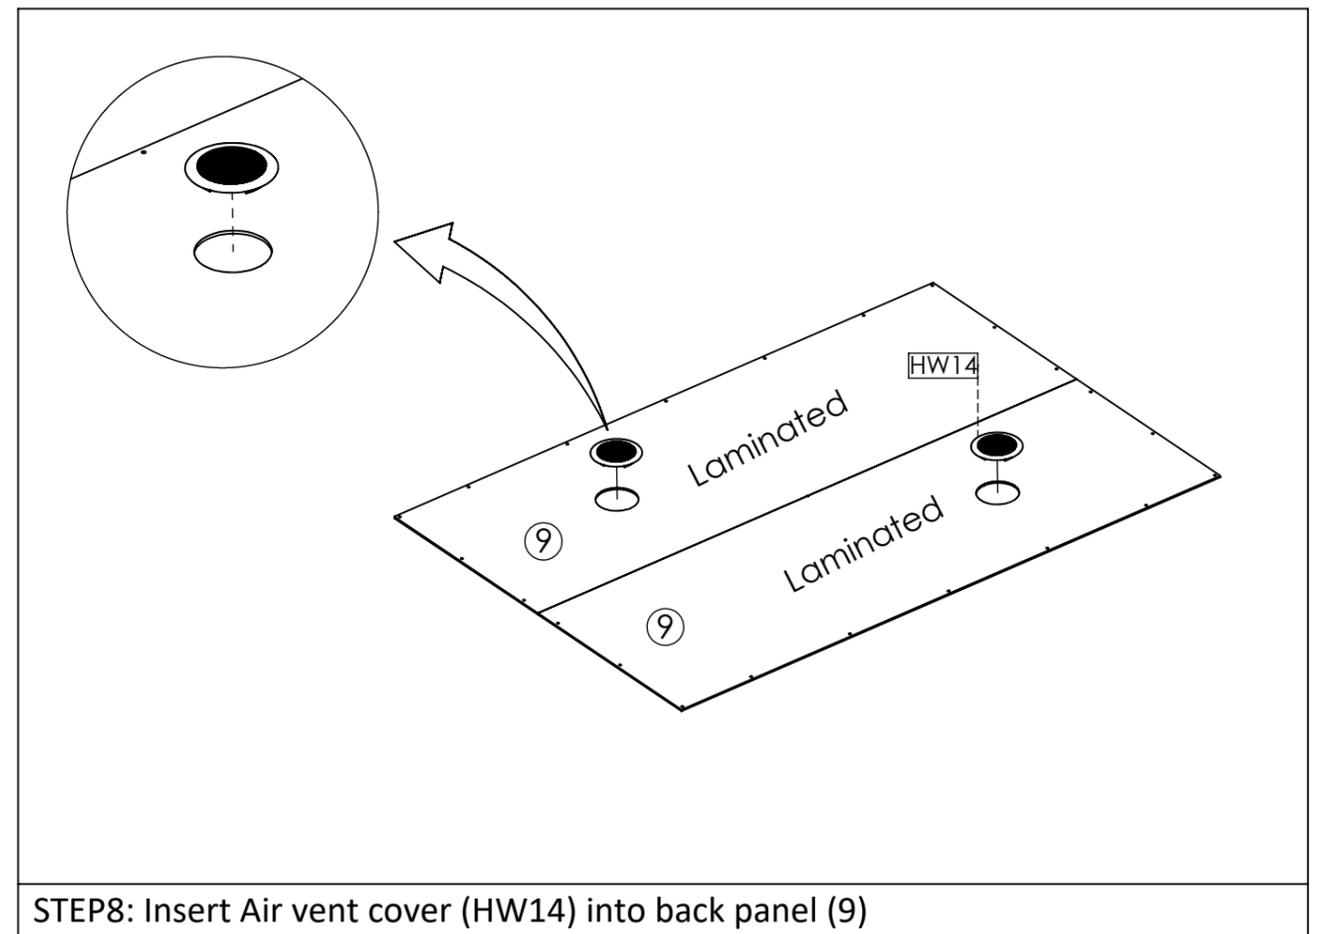


STEP8: Insert Air vent cover (HW14) into back panel (9)

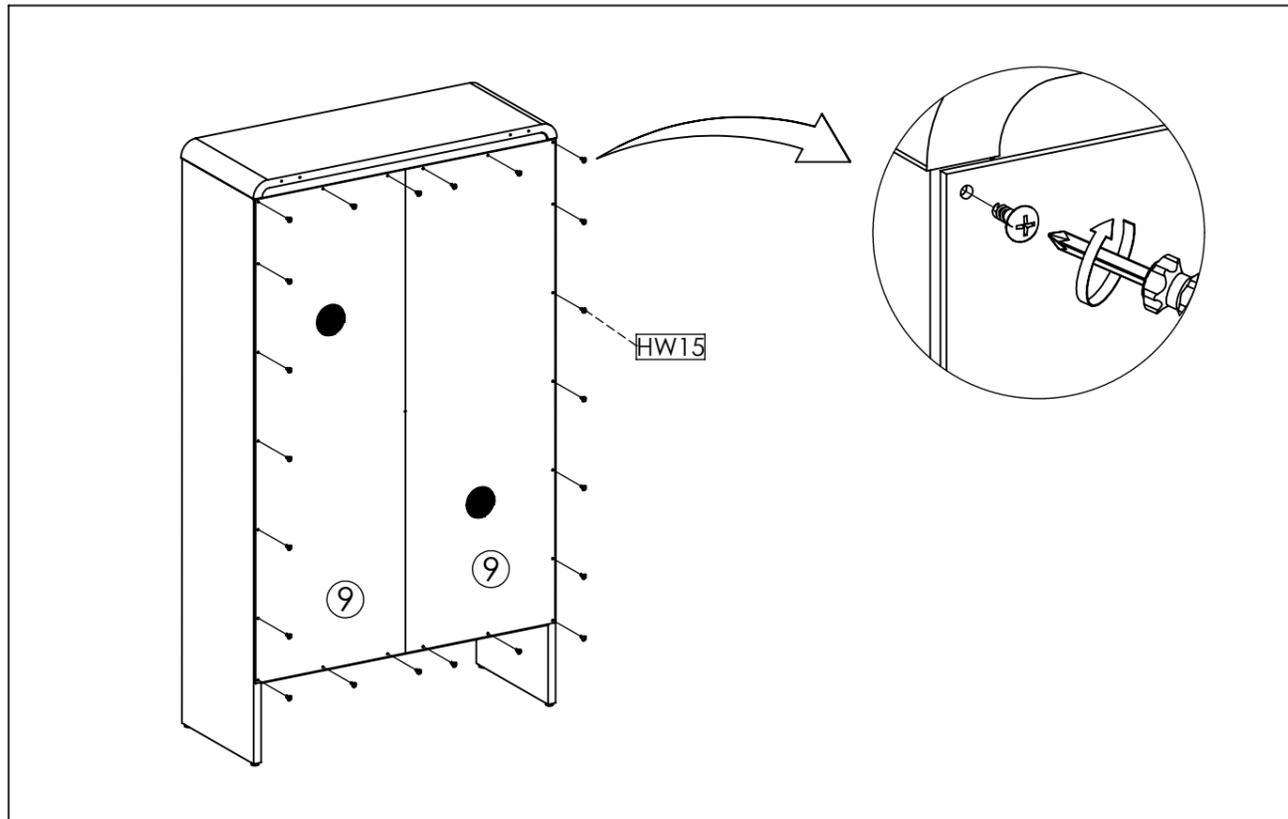


STEP9: Attach Back Panel (9), Secure with Screw M3 x 12 mm (HW15) and tighten it using screwdriver.

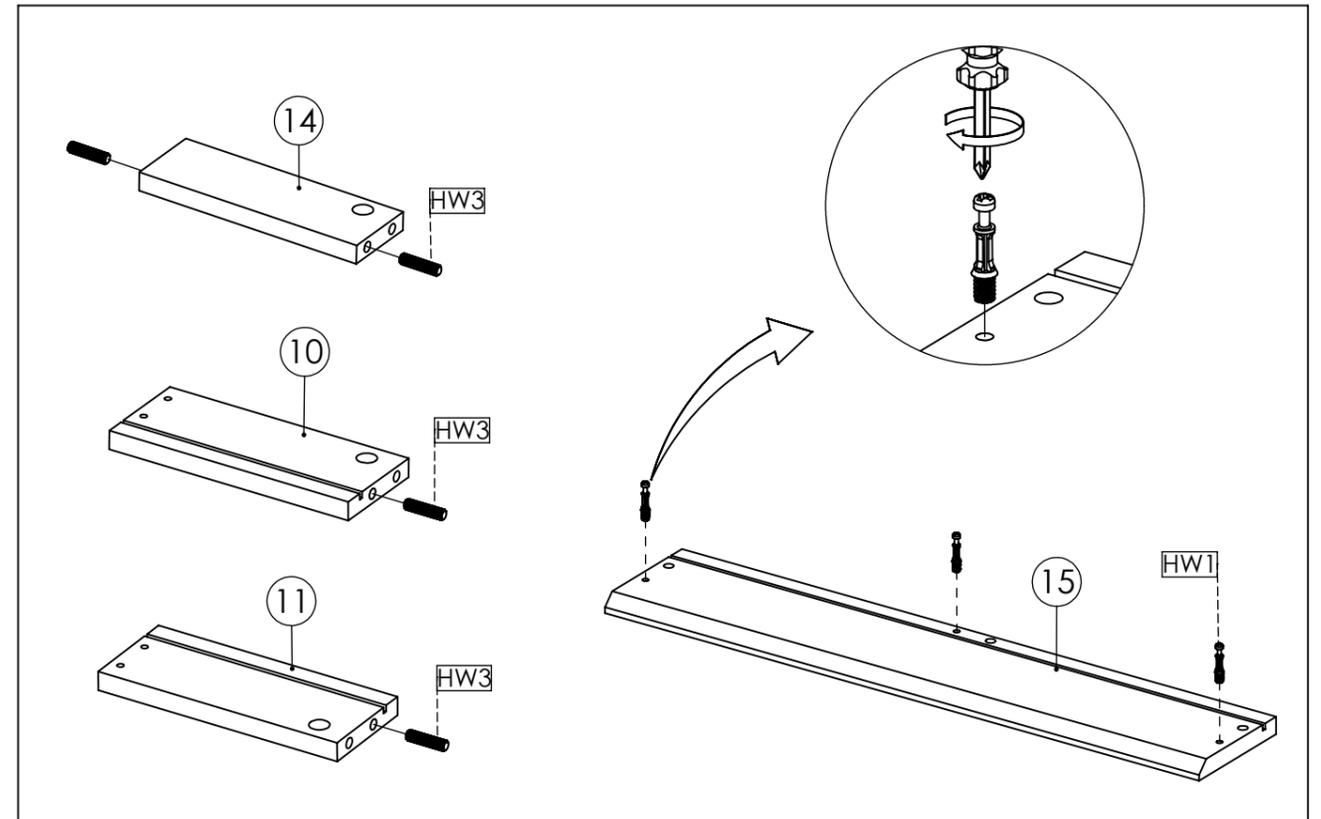


STEP10: Insert Cambolt (HW1) into Front drawer (15). Insert Wooden Dowel (HW3) into Side Drawers (10&11) And Drawer Base Support (14).

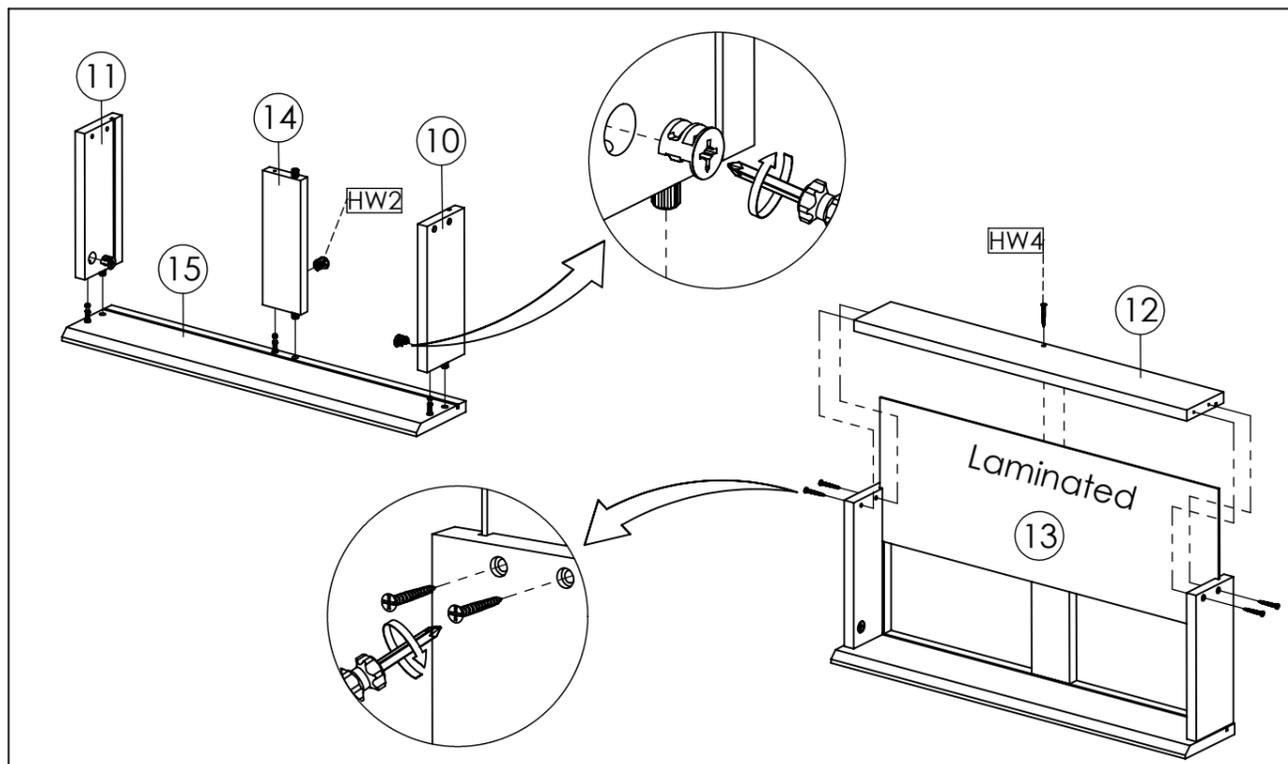


STEP11: Combine Side Drawers (10 & 11) and Support Drawer (14) into Front Drawer (15) then tighten camlock (HW2) using screwdriver. Insert Drawer base (13), then put Drawer Back (12) with laminated face facing upward then secure with Screw M7x32mm (HW4).

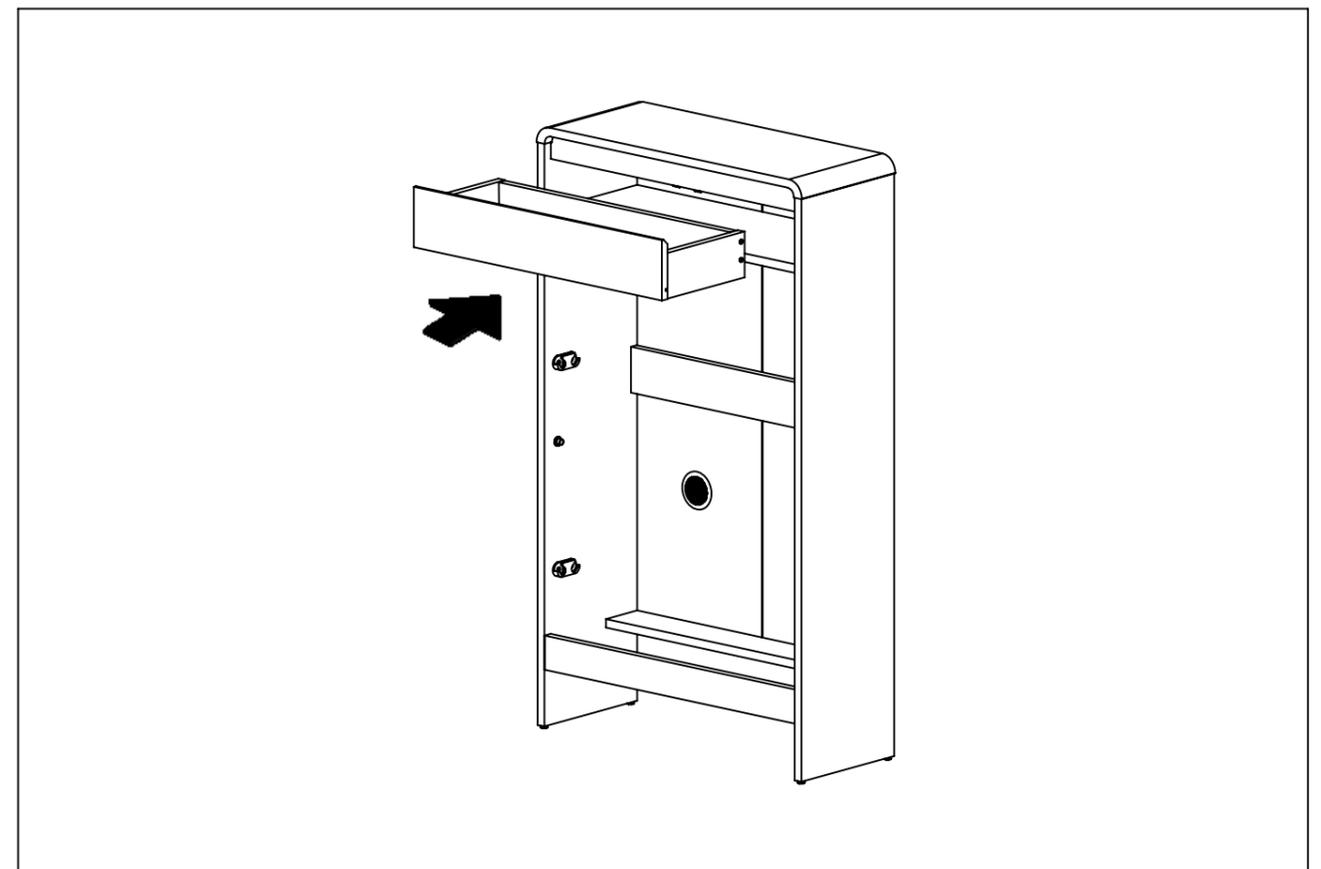


STEP12: Insert the attached drawer into the panel

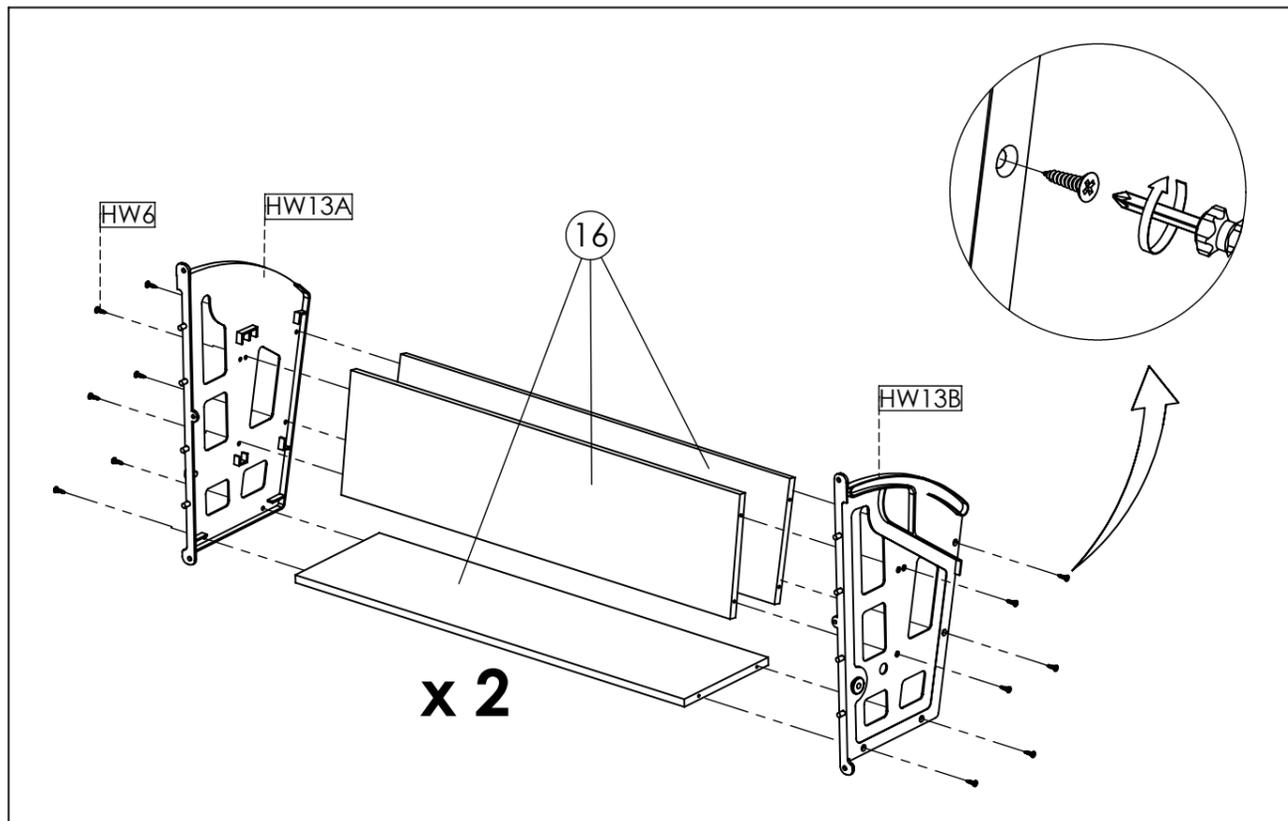


STEP13: Combine Shoe Rack Base (16) into shoe rack fan (HW13) then tighten Screw M6 x 12 mm (HW6) using screwdriver.

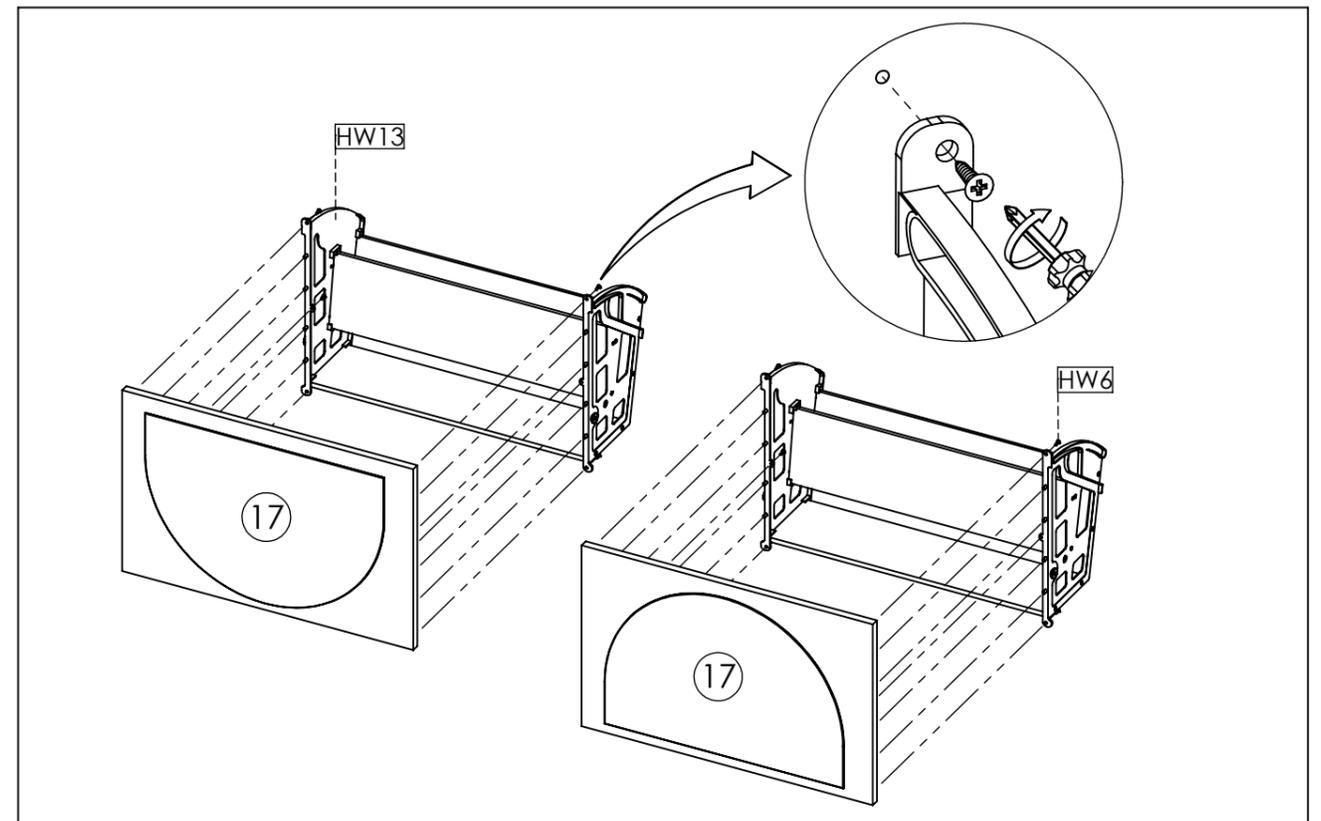

STEP14: Insert Front Drawers (18) into shoe rack fan (13) then tighten Screw M6 x 12 mm (HW6) using screwdriver.

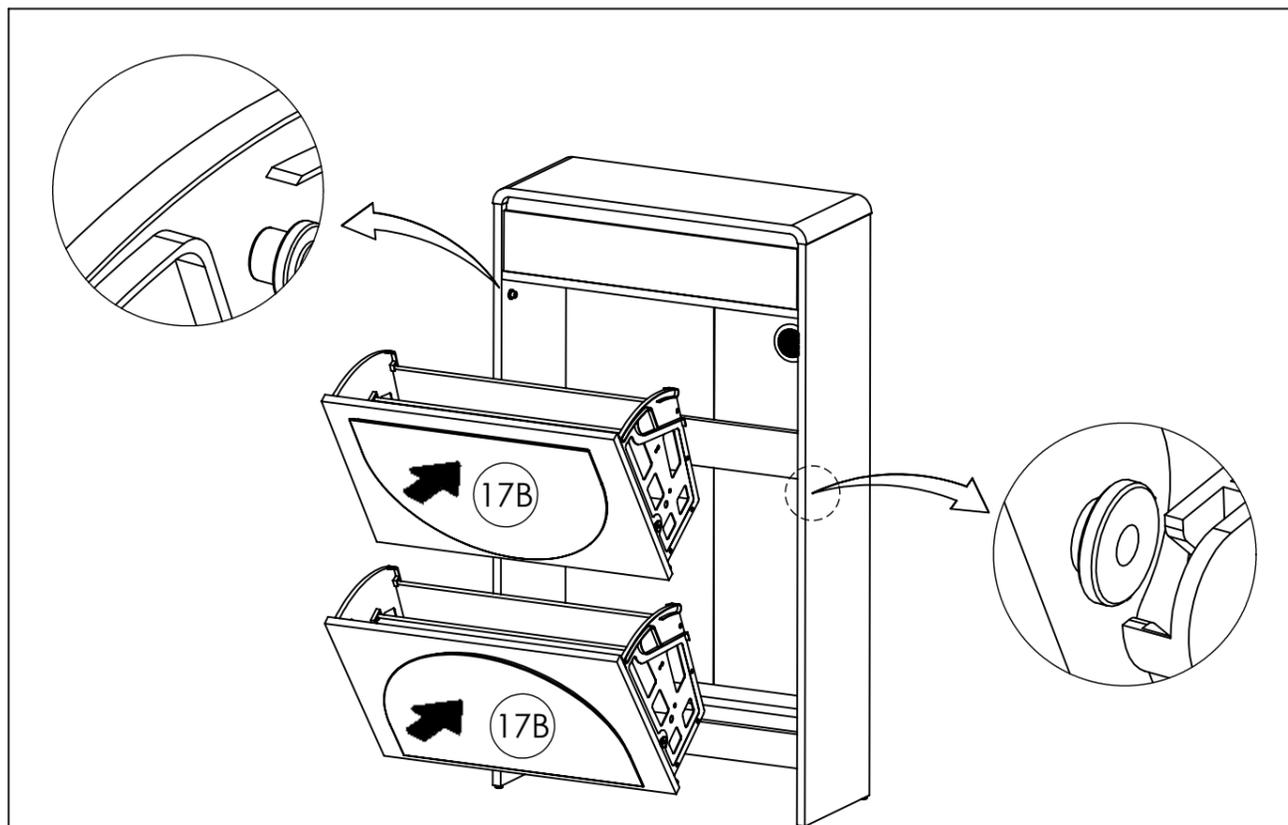

STEP15: Install the shoe rack into position as shown in picture.

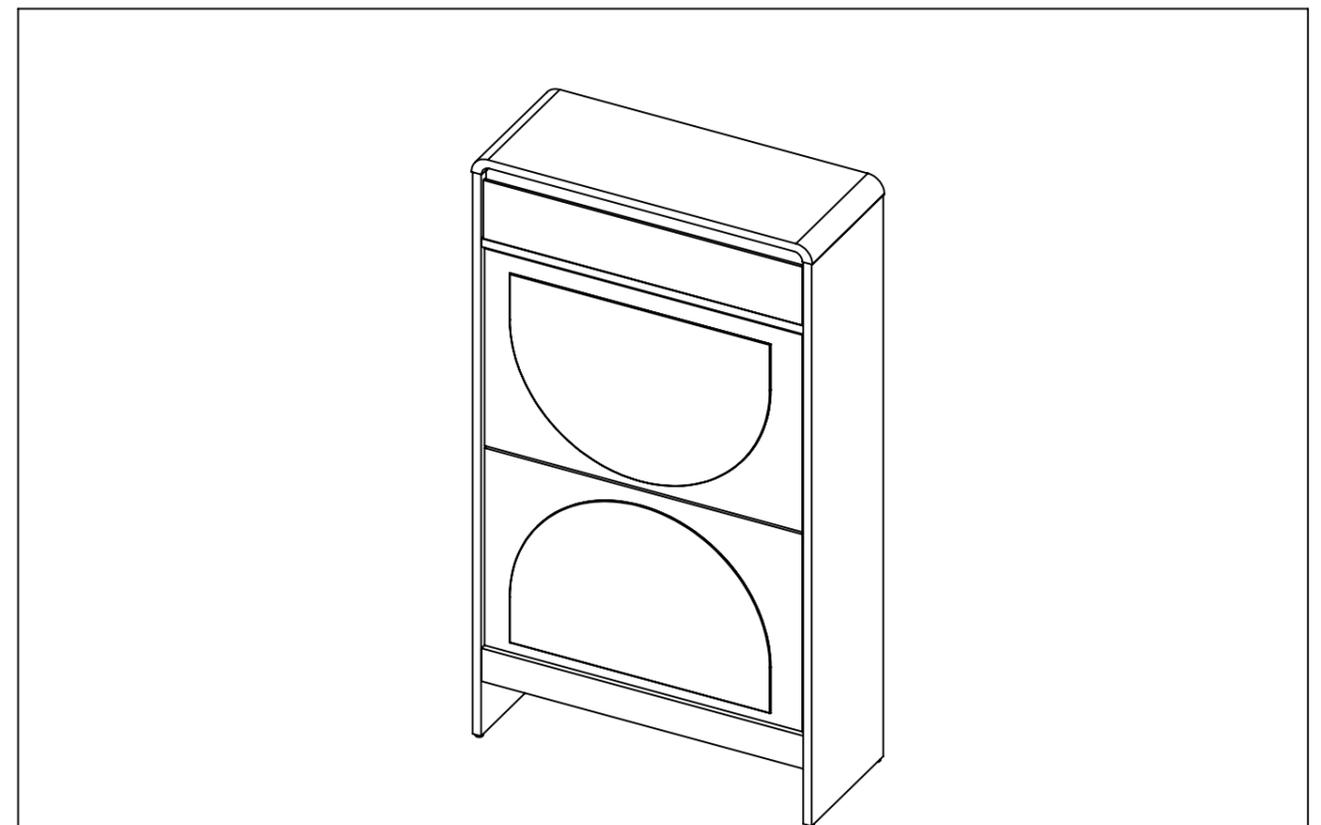

STEP16: Assembly Is Complete





ANTI-TIP RESTRAINT INSTALLATION

! WARNING!

Children have died from furniture tipover.
To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lower drawers.

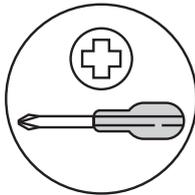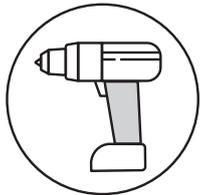

REQUIRED TOOL
8MM / 5/16" DRILL BIT


REQUIRED TOOL

! Hardware (HW11 / HW7) to attach brackets to wall is designed for drywall. To attach this unit to another type of wall, consult with your local hardware store.

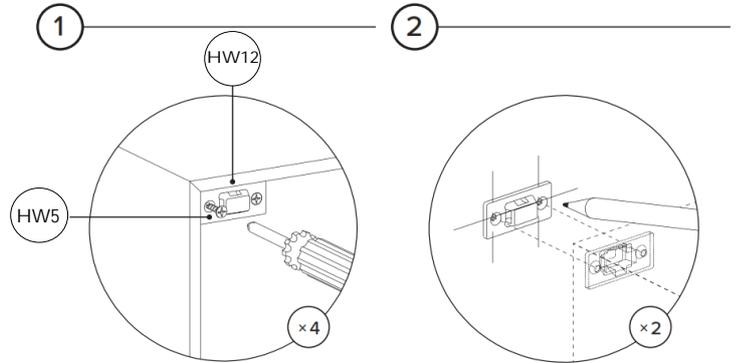


Attach pair of brackets to "Top Panel" of the unit. Note there are no existing pilot holes on the product.


Mark on wall where second pair of brackets should be placed.

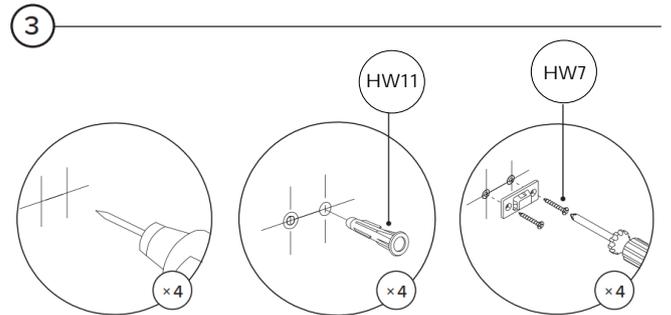

Drill holes in wall using 8mm / 5/16" drill bit.

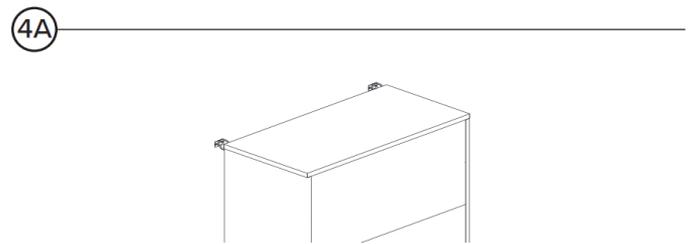

Align brackets on unit with brackets on wall.

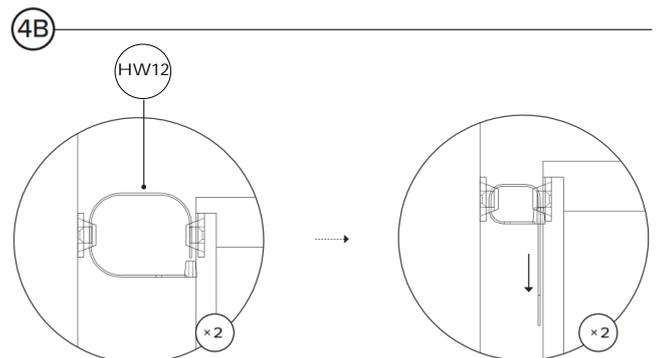

Pull strap down until it snap-locks.

ANTI-TIP RESTRAINT PACK			
ID	DESCRIPTION		QTY
HW12	BRACKET		4
HW5	M6 × 15MM SCREW		4
HW11	M8 × 35MM PLUG		4
HW7	M10 × 50MM SCREW		4
HW12	STRAP		2