

NOTICE

- * Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- * This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- * This item may require periodic tightening.
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com




PREPARATION

- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * This item may require periodic tightening.
- * Tools Required for Assembly (included): Allen Key
- * Tools Required for Assembly (not included): Phillips Head Screwdriver

CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depend on how much wear the furniture receives.

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY	CARTON CALL
A	Headboard / Footboard		2x	1 of 3
B	Wood Corner		4x	1 of 3
C	Corner Leg		4x	1 of 3

SAFAVIEH

C O U T U R E

BSC2003 - Q





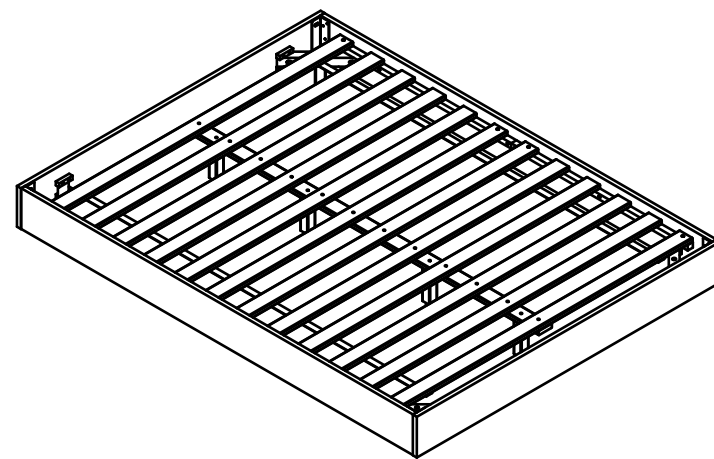








DIMENSIONS: 62.7"L x 82.6"D x 9.9"H



Weight Capacity - 800 LBS

Warning : Do not over torque bolts

Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY	CARTON CALL
HW1	Allen Bolt: M6 x 1 x 60 mm		4x	1 of 3
HW2	Allen Bolt: M6 x 1 x 35 mm		8x	1 of 3
HW3	Allen Key		1x	1 of 3
D	Side Rail		2x	2 of 3
E	Center Slat		1x	2 of 3
F	Support Leg		4x	2 of 3
HW4	Phillips Head Bolt: M8 x 1 x 20 mm		8x	2 of 3
HW5	Split Lock Washer: M8		8x	2 of 3
HW6	Flat Washer: M8		8x	2 of 3
HW7	Allen Bolt: M6 x 1 x 40 mm		10x	2 of 3
HW8	Screw: 8 x 31 mm		8x	2 of 3
HW9	Allen Key		1x	2 of 3
G	Slat Roll		1x	3 of 3

SAFAVIEH

C O U T U R E


BSC2003 - Q

DIMENSIONS: 62.7"L x 82.6"D x 9.9"H

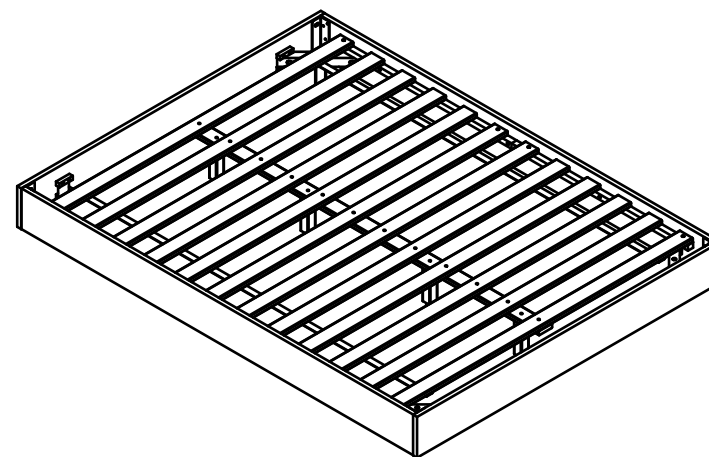


PREPARATION


- * Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- * If any part is missing or damaged, do not attempt to assemble the product.
- * Estimated Assembly Time: 30 minutes.
- * Tools Required for Assembly (included): Allen Key
- * Tools Required for Assembly (not included): Phillips Head Screwdriver
- * If you are having difficulty, our friendly Customer Care team is always here to help. Please email customersupport@safavieh.com

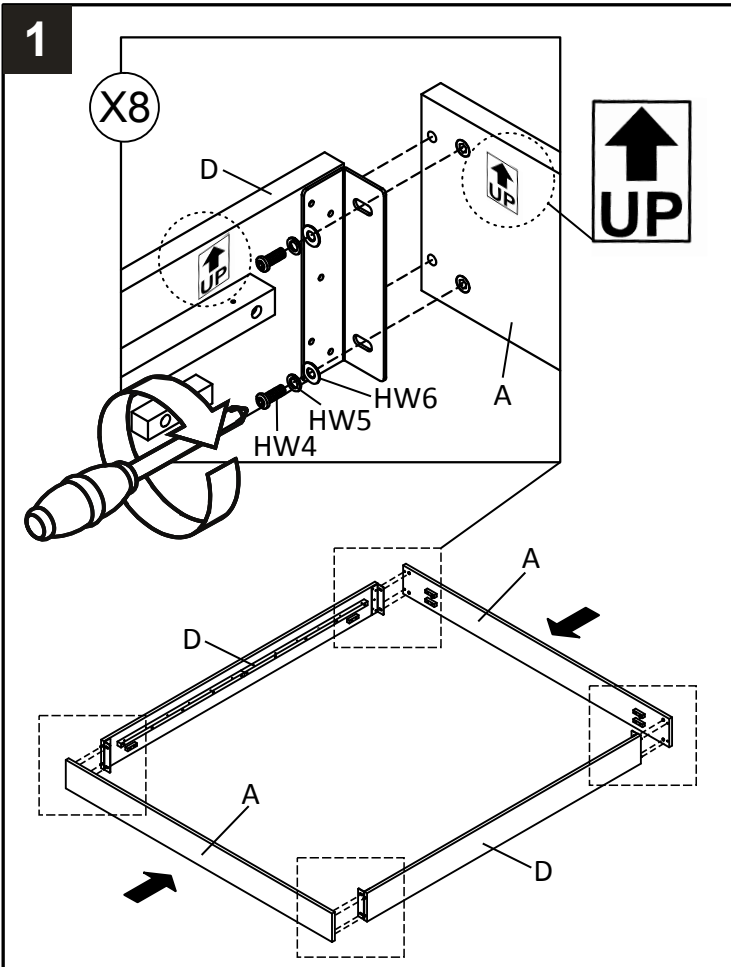

STEP 1: Place the split lock washer (HW5) and the flat washer (HW6) on the Philips head bolt (HW4) as shown. Attach the siderails (D) to the headboard & footboard (A) by using a Phillips head screwdriver (not included) to screw in the Philips head bolts (HW1) with the washers as shown. Do not completely tighten the bolts until the assembly is complete.

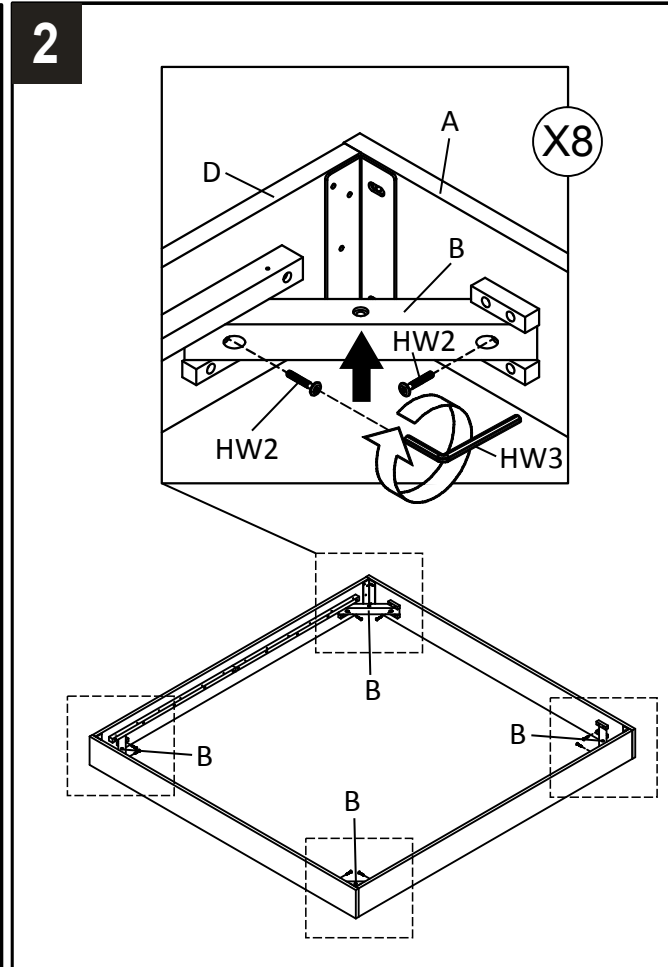


STEP 2: Attach the wood corners (B) to the headboard / footboard (A) and the siderails (D) by using the Allen key (HW3) to screw in the Allen bolts (HW2) as shown.

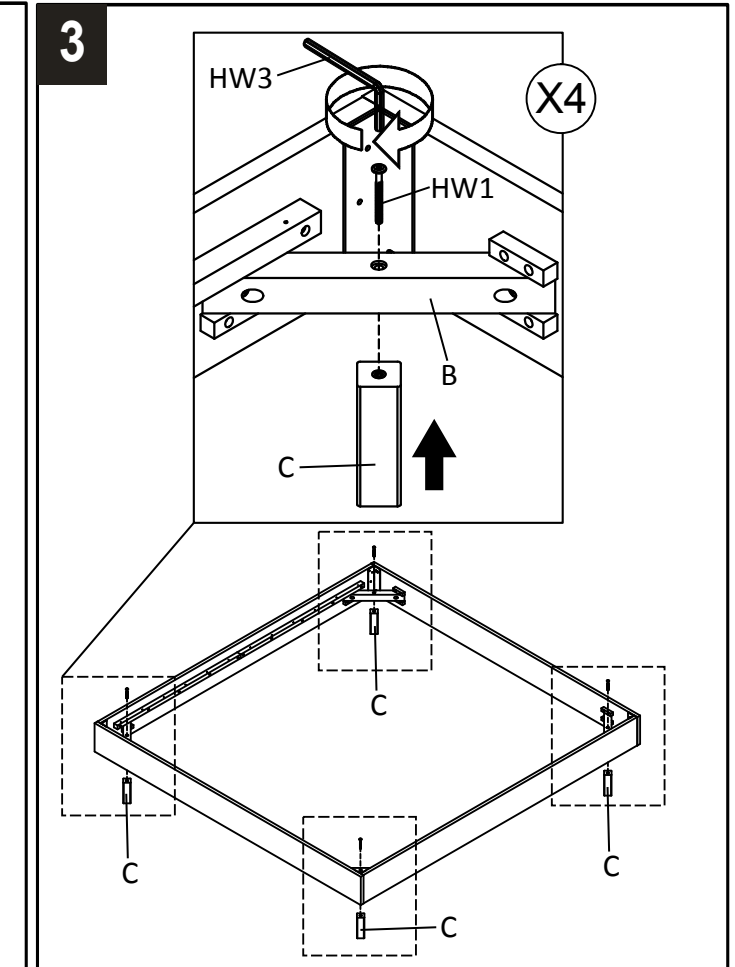


STEP 3: Attach the corner legs (C) to the wood corners (B) by using the Allen key (HW3) to screw in the Allen bolts (HW1) as shown.

4

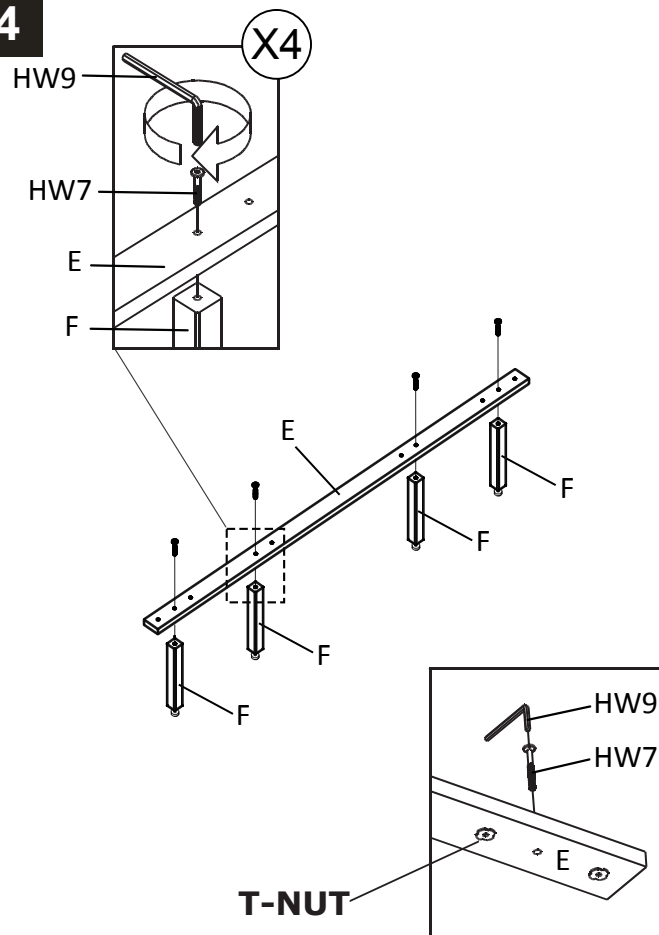


STEP 4: Place the center slat (E) with the T-nuts facing the floor. Put the Allen bolts (HW7) into the 2nd, 4th, 7th, and 9th predrilled holes in the center slat. Use the Allen Key (HW9) to screw in the Allen bolts (HW7) into the support legs (F) as shown.

5

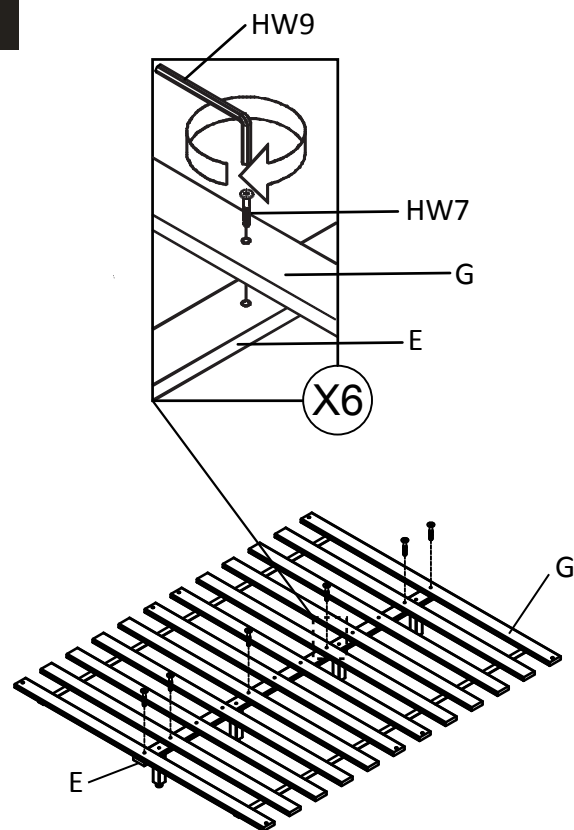

STEP 5: Attach the slat roll (G) to the center slat (E) by aligning the holes on the slat roll to the 1st, 3rd, 5th, 6th, 8th, and 10th pre drilled holes in the center slat. Use the Allen Key (HW9) to screw in the Allen bolts (HW7) in these holes.

6

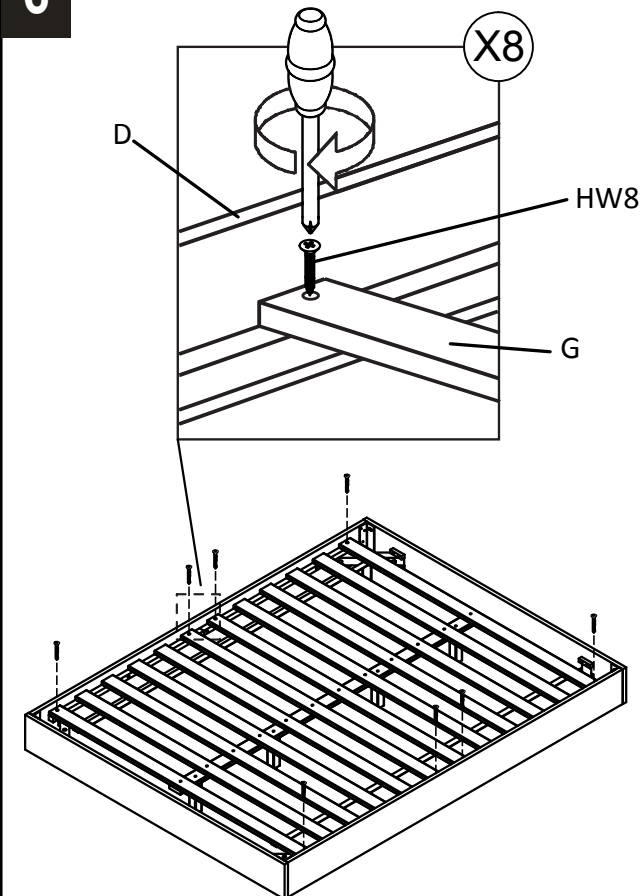

STEP 6: Place the assembled slat roll onto the assembled bed frame. Use the Philips head screwdriver to screw in the Screws (HW8) into the 8 holes on the siderails as shown.