


SOPHIANNA PLATFORM QUEEN BED

SFV1801-Q

Assembly Instructions

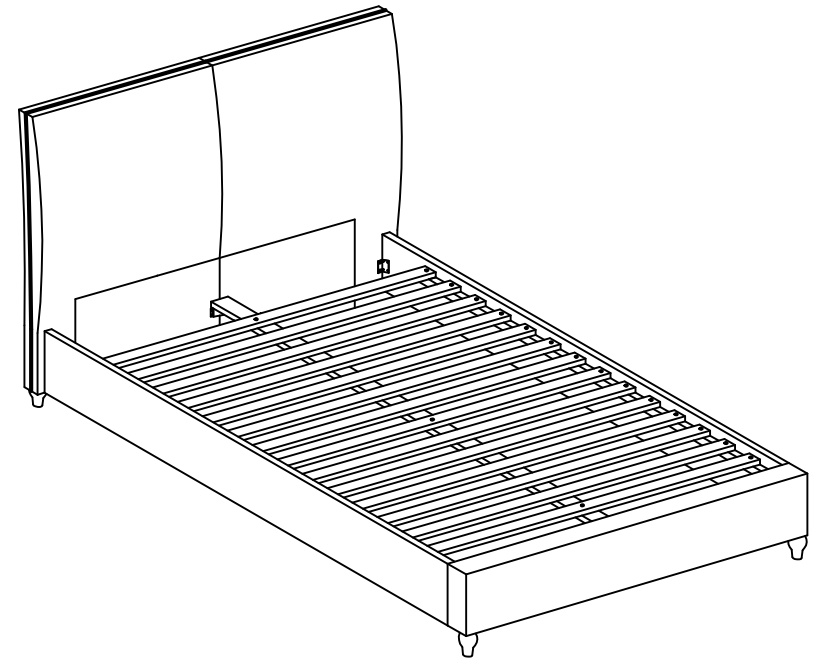

Need help?

Feel free to contact us via email or call
if you have any specific questions!

contact us:

cs@safavieh.com

866-422-9070

SAFAVIEH
COUTURE

Thanks for bringing Safavieh Couture into your home

Every thing we make is incredibly
simple to set up, including your new
bed.

Parts List

A x 1
HEADBOARD



B x 1
FOOTBOARD



C x 2
SIDE RAILS



D x 4
LEGS




E x 1
CENTER SUPPORT RAIL



F x 2
CENTER LEGS



G x 1
14 SLATS



Hardware List


HW1 x 2
LEVELER



HW2 x 8
JCB BOLT M6 X 30mm



HW3 x 2
JCB BOLT M6 X 40mm



HW4 x 1
ALLEN KEY 65mm



HW5 x 2
SCREW M4 X 25mm



HW6 x 31
SCREW M4 X 32mm




HW7 x 8
M6 FLAT WASHER




1

Screw in the legs (D) to the headboard (A) and the footboard (B).

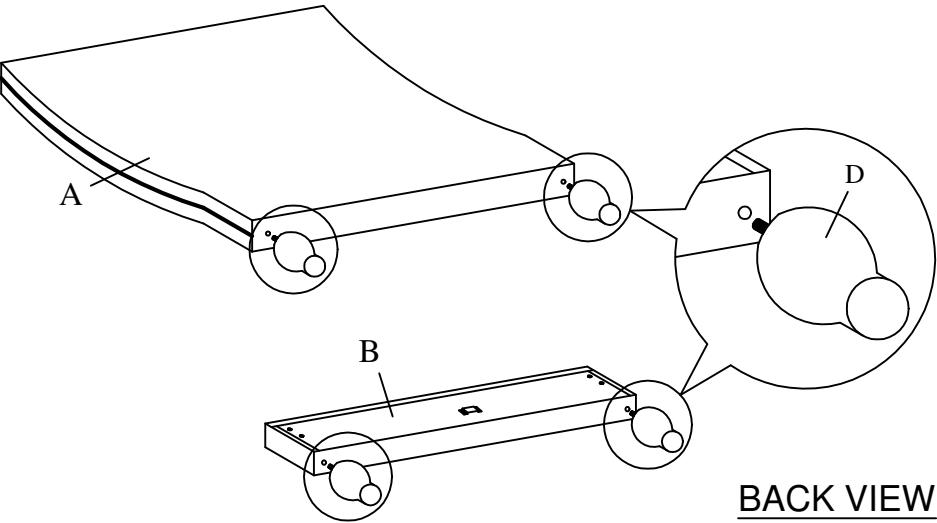


2


Place the Flat Washers (HW7) on the JCB bolts (HW2). Attach the siderails (C) to the headboard (A) and the footboard (B) by using the Allen key (HW4) to screw in the JCB bolts (HW2) with the washers as shown.

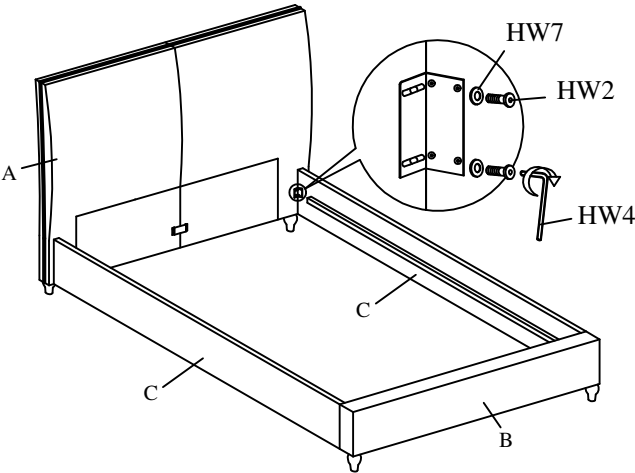

Attach the center support legs (F) to the center support rails (E) by using the Allen key (HW4) to screw in the bolts (HW3) as shown. Screw in the levelers (HW1) into the bottom of the center support legs (F).

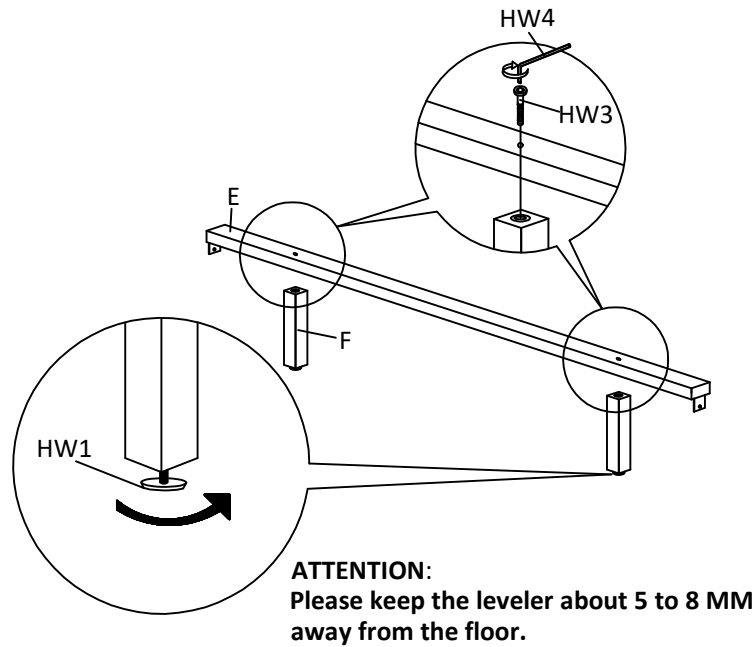


Attach the assembled center support rails to the headboard (A) and footboard (B) by using a Philips Head screwdriver (not included) to screw in the screws (HW5) as shown.

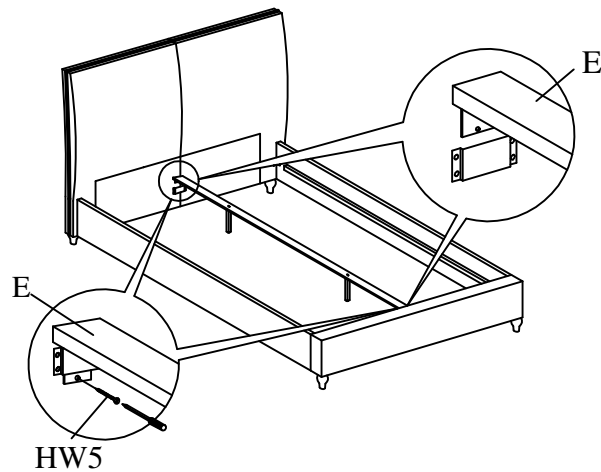

ATTENTION : Please ensure that (HW5) screw are being attached as the AI shows to avoid the base collapsing.

Attach the slats (G) to the center support rails and the siderails by using a Philips Head screwdriver (not included) to screw in the 31 screws (HW6) in the spots shown below. Adjust the levelers as needed to make the bed level.

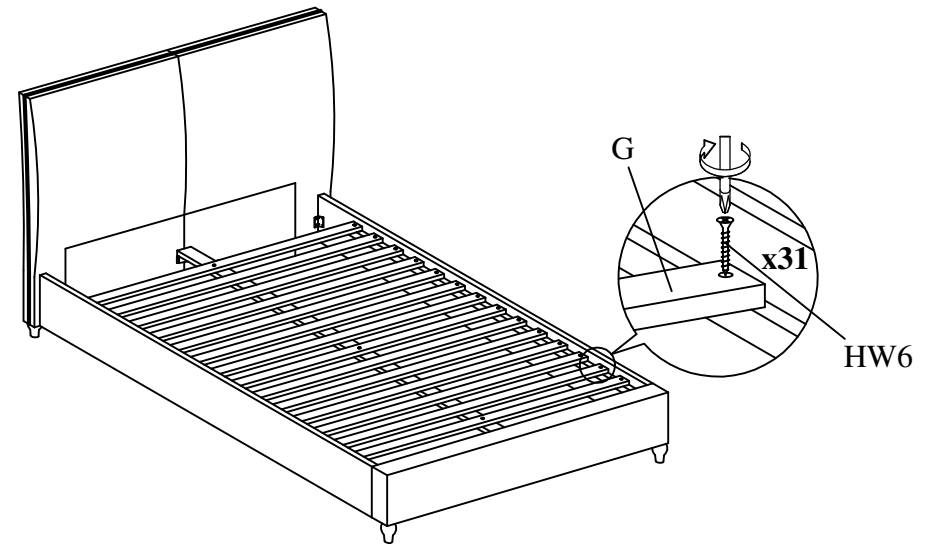

Place the bed in the place where you will use it. We'd love to see it – just tag us (we're @safavieh) and use the hashtag #safavieh on Instagram!

