Assembly Instructions

Caution : You must read this before you proceed


Counter Stool




Parts List


Label	Picture	Description	QTY
A		Seat	1
В		Backrest	1
С		Left Metal Leg Frame	1
D		Right Metal Leg Frame	1
E	000	Back Upper Rail (270*40*38mm)	1
F		Front Upper Rail (416*40*38mm)	1
G	0	Back Bottom Rail (328*Ф19mm)	1
Н		Footrest (498*Φ19mm)	1

<u>Hardware</u>				
Label	Picture	Description	QTY	
1)	₽	Bolt (M4*4mm)	5	
2		Bolt (M6*54mm)	9	
3		Bolt (M6*16mm)	9	
4	Ø	Spring Washer(M6)	13	
\$	0	Washer (M6*Φ13mm)	13	
6		Allen Wrench(M4)	1	
7		Allen Wrench(M2)	1	

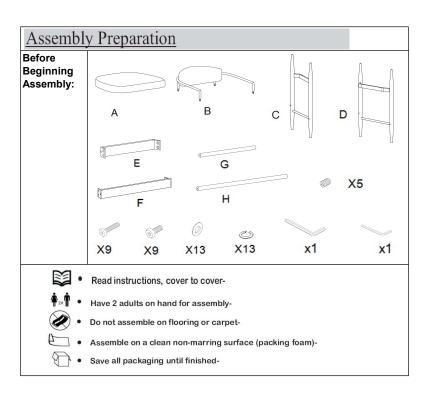


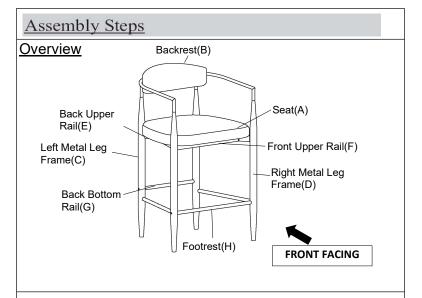

This Counter Stool has multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Counter Stool, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

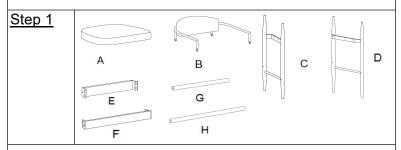


Place the Seat(A), Backrest(B), Left Metal Leg Frame(C), Right Metal Leg Frame(D), Back Upper Rail(E), Front Upper Rail(F), Back Bottom Rail(G) and Footrest(H) on a clean, non-marring surface.

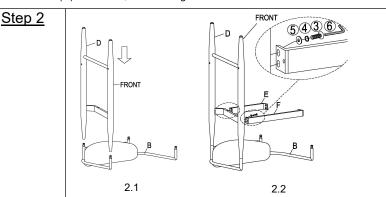

2.1 Place the Backrest(B) facedown on a clean, non-marring surface. Insert the Right Metal Leg Frame(D) onto the Backrest(B). 2.2 Attach the Back Upper Rail(E) and Front Upper Rail(F) to the Right Metal Leg Frame(D) using Bolts(③), Spring Washers(④) and Washers (⑤), with the Allen Wrench(⑥) as shown above.

Note: Do not fully tighten the Bolts in this step.


Step 3

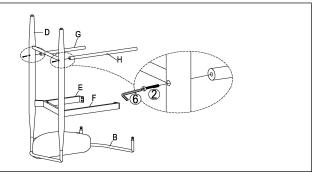

Attach the Back Bottom Rail(G) and Footrest(H) to the Right Metal Leg Frame(D) using the Bolts(②), with the Allen Wrench(⑥) as shown above.


Note: Do not fully tighten the Bolts in this step.

Step 4

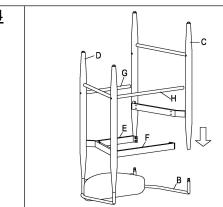

Insert the Left Metal Leg Frame(C) onto the Backrest (B) as shown above. Note: Do not fully tighten the Bolts in this step.


Step 5

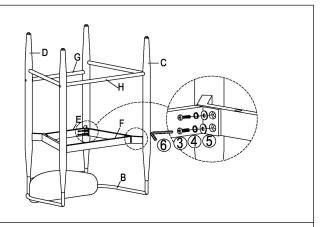

Using Bolts(③),Spring Washers(④), and Washers (⑤), with the Allen Wrench(⑥) affix together the Left Metal Leg Frame(C), the Back Upper Rail(E) and the Front Upper Rail(F) as shown above.


Note: Do not fully tighten the Bolts in this step.

Step 6

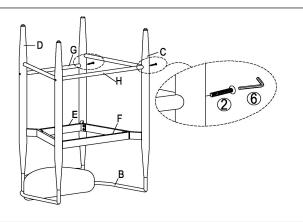


Using Bolts(2) with the Allen Wrench(6) affix together the Left Metal Leg Frame(C), the Back Bottom Rail(G) and the Footrest(H) as shown above. Note: Do not fully tighten the Bolts in this step.

Step 7

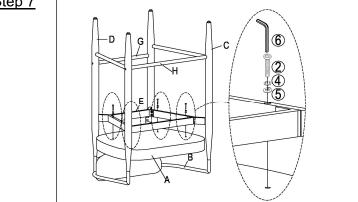


Position the Seat(A) (bottom-up) as shown above, then using Bolts(@), Spring Washers(4), and Washers (5), with the Allen Wrench(6) affix the Seat(A) to the Left Metal Leg Frame(C) and Right Metal Leg Frame(D).

Note: Do not fully tighten the Bolts in this step.

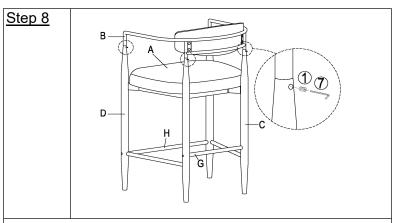


Using Bolts(①) with the Allen Wrench(⑦) affix together the Backrest (B), the Left Metal Leg Frame(C) and the Right Metal Leg Frame(D) as shown above.

Note: Once the assembly is completed, proceed to fully tighten all bolts sequentially.

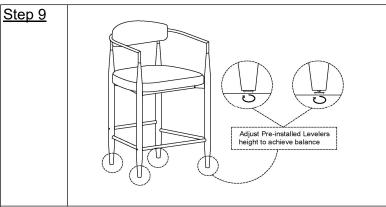

Adjust the Pre-installed Levelers at the bottom of the Left Metal Leg Frame(C) and Right Metal Leg Frame(D) until the Counter Stool is level with the ground.

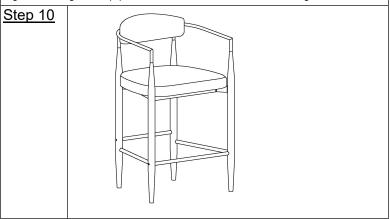

Your Counter Stool is ready for use.

This Counter Stool can only be used on a flat, level surface.

