



# ASSEMBLY INSTRUCTIONS

## TWIN FLOOR BED WITH BOOK SHELF (NO DOOR)







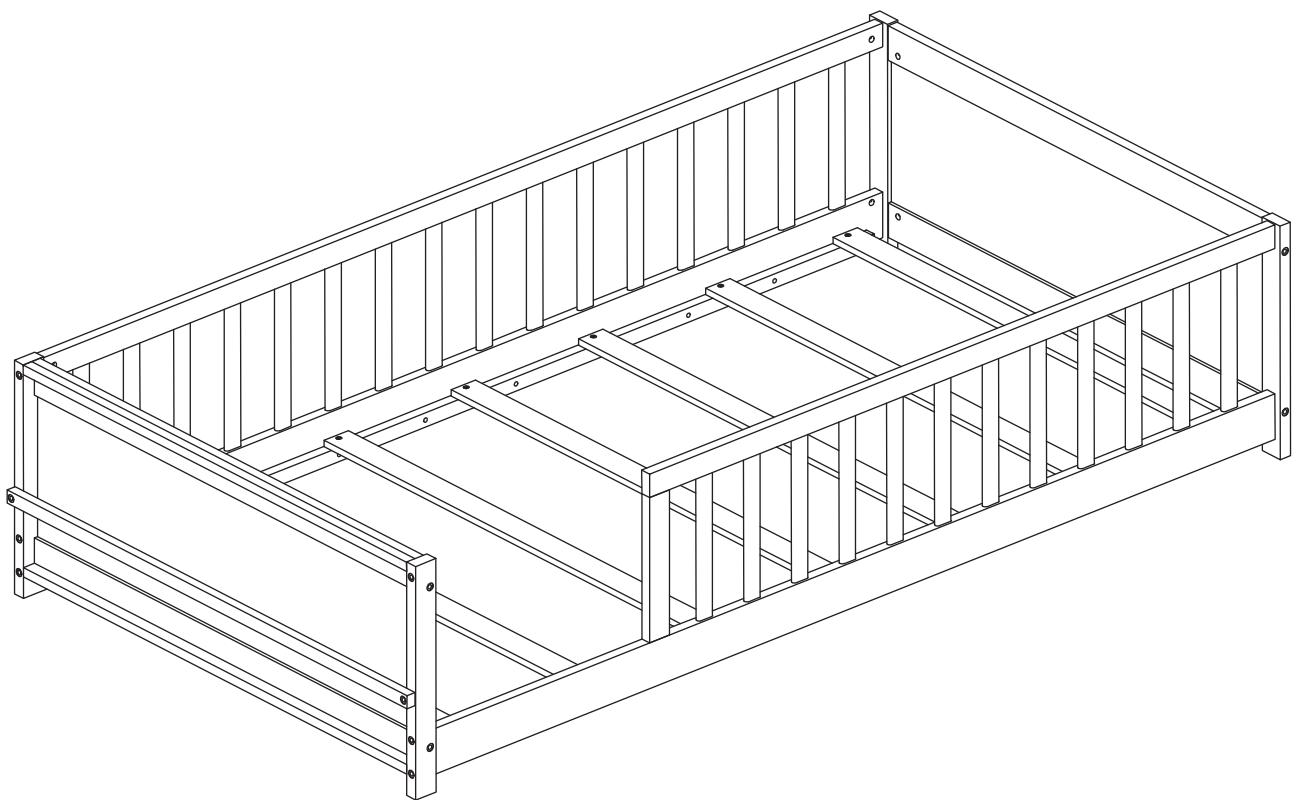


**MK33818**



## Detail View

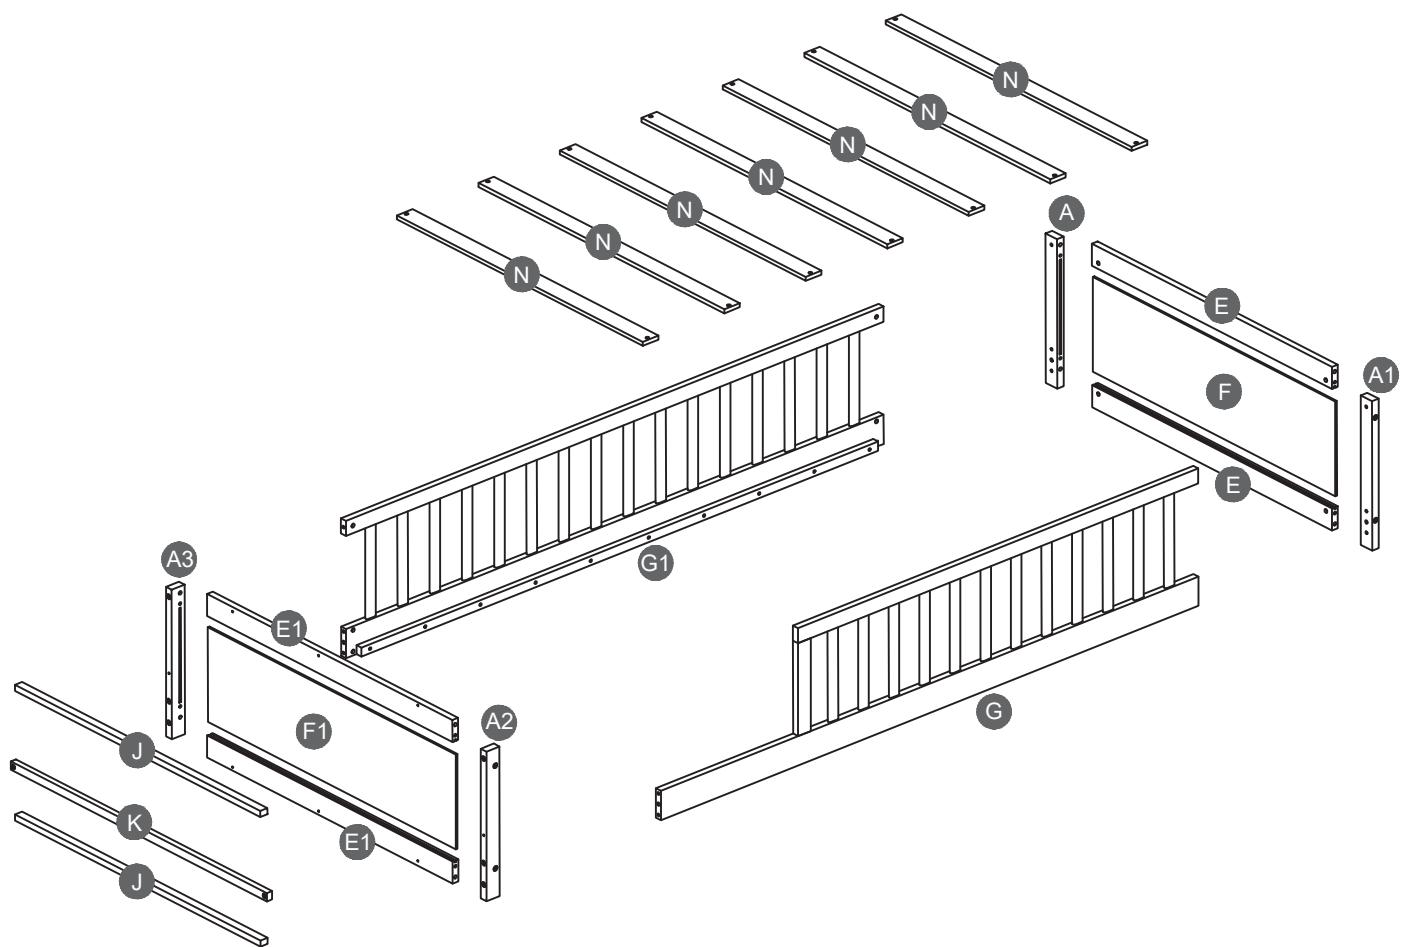


# Part List
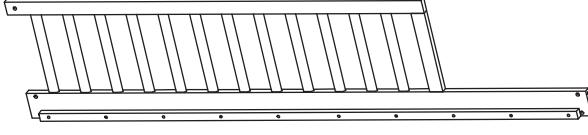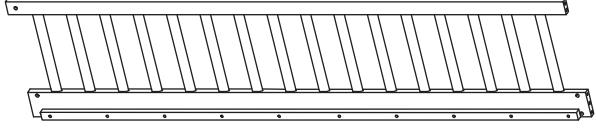
|    |   |    |  |
|----|---|----|--|
| A2 |    | A3 |    |
|    | Leg - 1pc   |    | Leg - 1pc  |
| A1 |    | A  |    |
|    | Leg - 1pc   |    | Leg - 1pc  |
| E1 |    | E  |    |
|    | Fb. Panel (Top & Bottom) - 2pcs   |    | Hb. Panel (Top & Bottom) - 2pcs  |
| F1 |  | F  |  |
|    | Fb. Mid. Panel (Long) - 1pc   |    | Fb. Mid. Panel (Short) - 1pc   |
| J  |  | K  |  |
|    | Fb. Support Bar (Top & Bottom) - 2pcs   |    | Fb. Support Bar (Mid.) - 1pc   |
| G  |  | G1 |  |
|    | Side Rail Front - 1pc   |    | Side Rail Back - 1pc   |
| N  |  |    |  |
|    | Bed Slats - 7pcs  |    |  |

# Hardware List


|   |  |  |
|---|--|--|
| <b>1</b><br><br>M6 x 80mm<br>JCBC (9pcs)       | <b>2</b><br><br>M6 x 15mm<br>Barrel Nut (19pcs) | <b>3</b><br><br>M10 x 40mm<br>Wood Dowel (12pcs)    |
| <b>4</b><br><br>Sticker Cap (2pcs)             | <b>5</b><br><br>M6 x 65mm<br>JCBC (10pcs)       | <b>6</b><br><br>20 x 20 x 233mm<br>Wood Block (1pc) |
| <b>7</b><br><br>M4 x 25mm<br>CSK Screw (14pcs) | <b>8</b><br><br>M6 x 30mm<br>JCBC-W (6pcs)      | <b>9</b><br><br>M6 x 30mm<br>JCBC (2pcs)            |
| <b>10</b><br><br>M4 Allen Key (1pc)            |  |  |

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

## STEP 1:

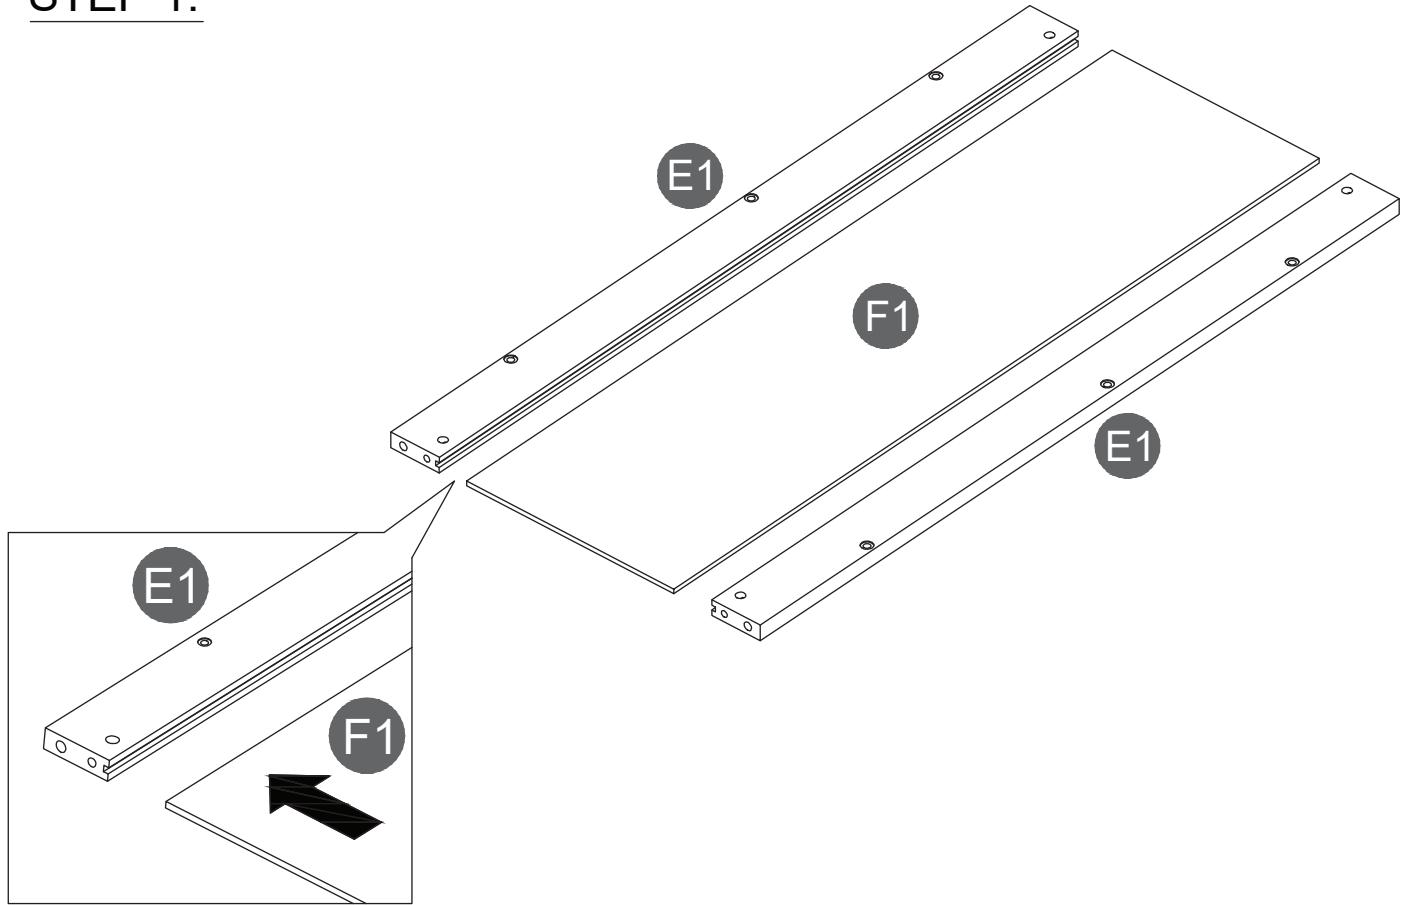


## STEP 2:

| 2    | 3    | 5    | 8    |
|------|------|------|------|
| 4PCS | 4PCS | 4PCS | 6PCS |

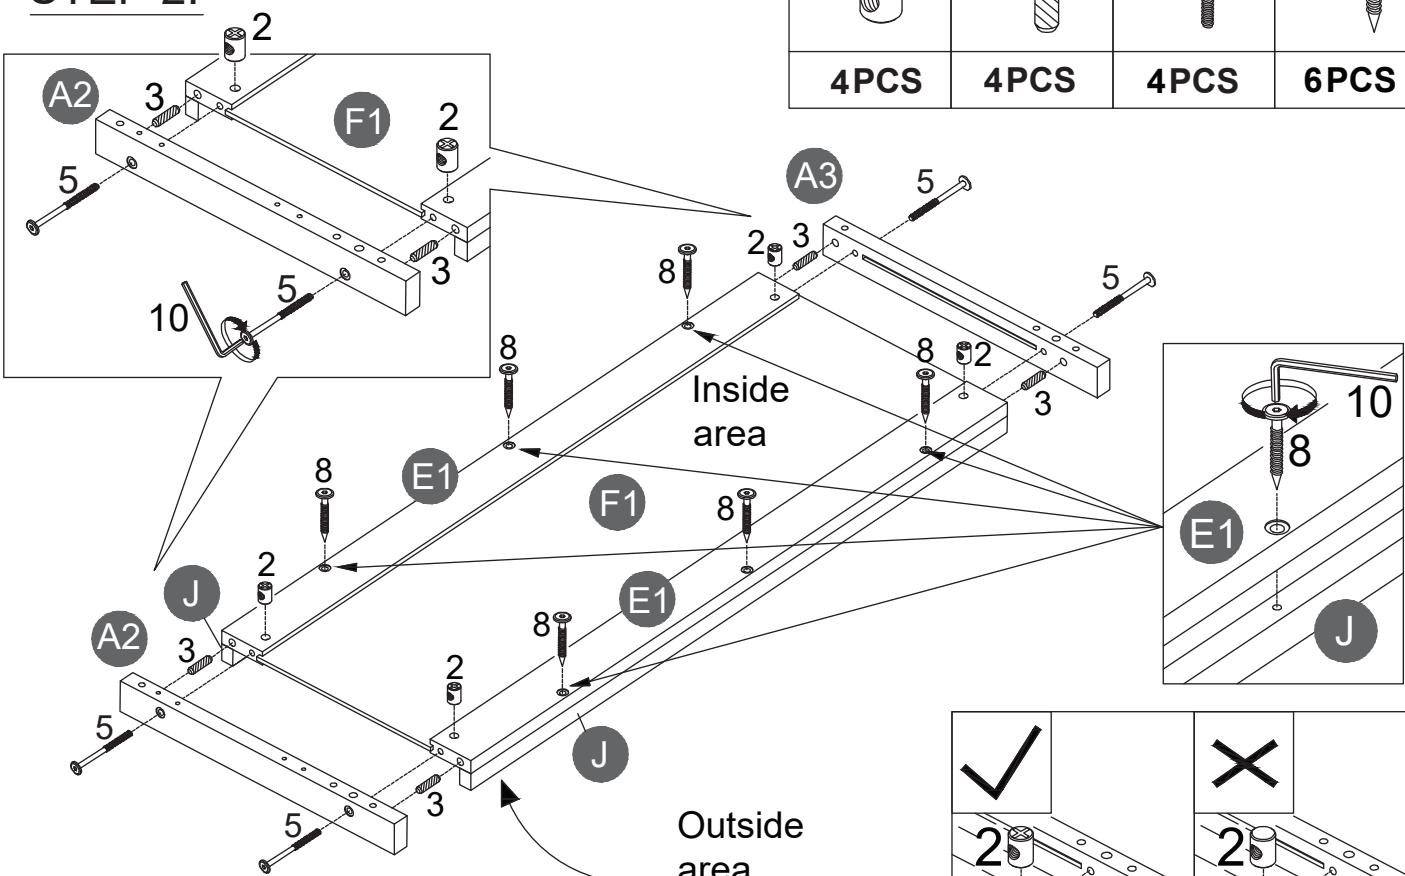


Note: Part 2 will face up with the "+" mark on it, otherwise it cannot be tightened


### STEP 3:

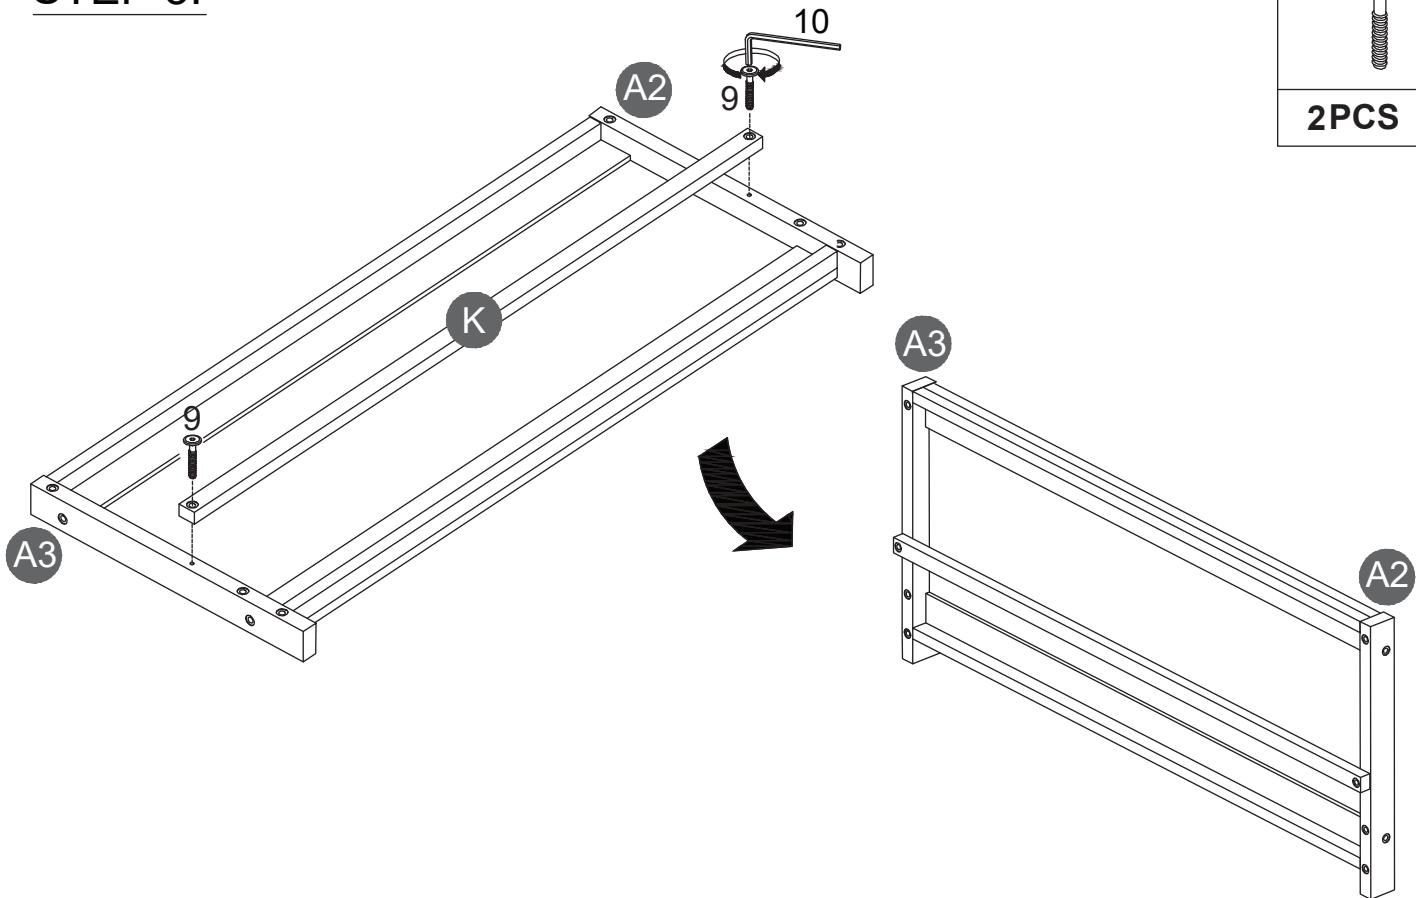

### STEP 4:

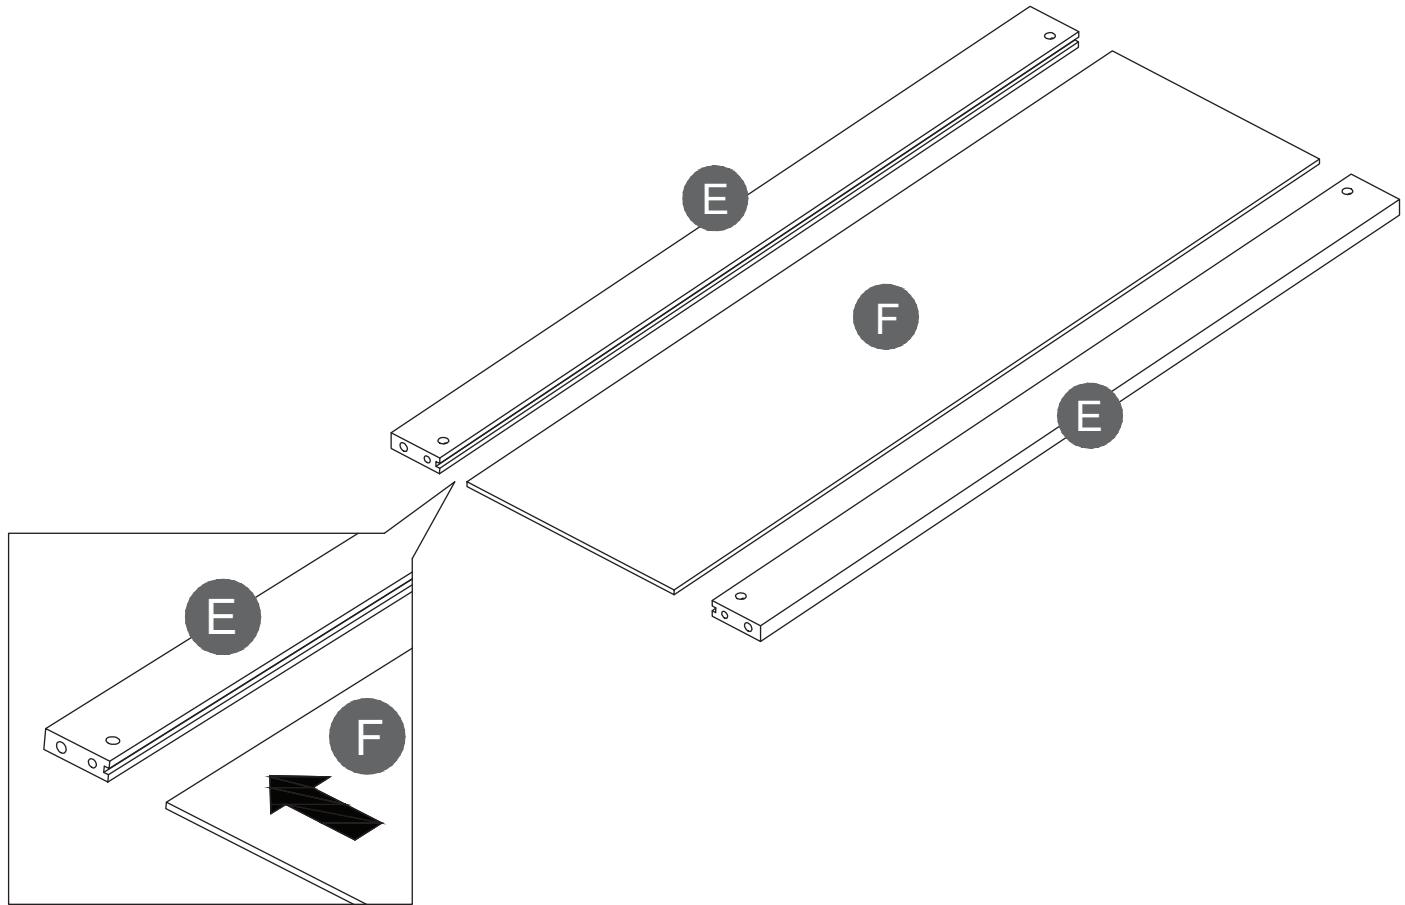


## STEP 5:


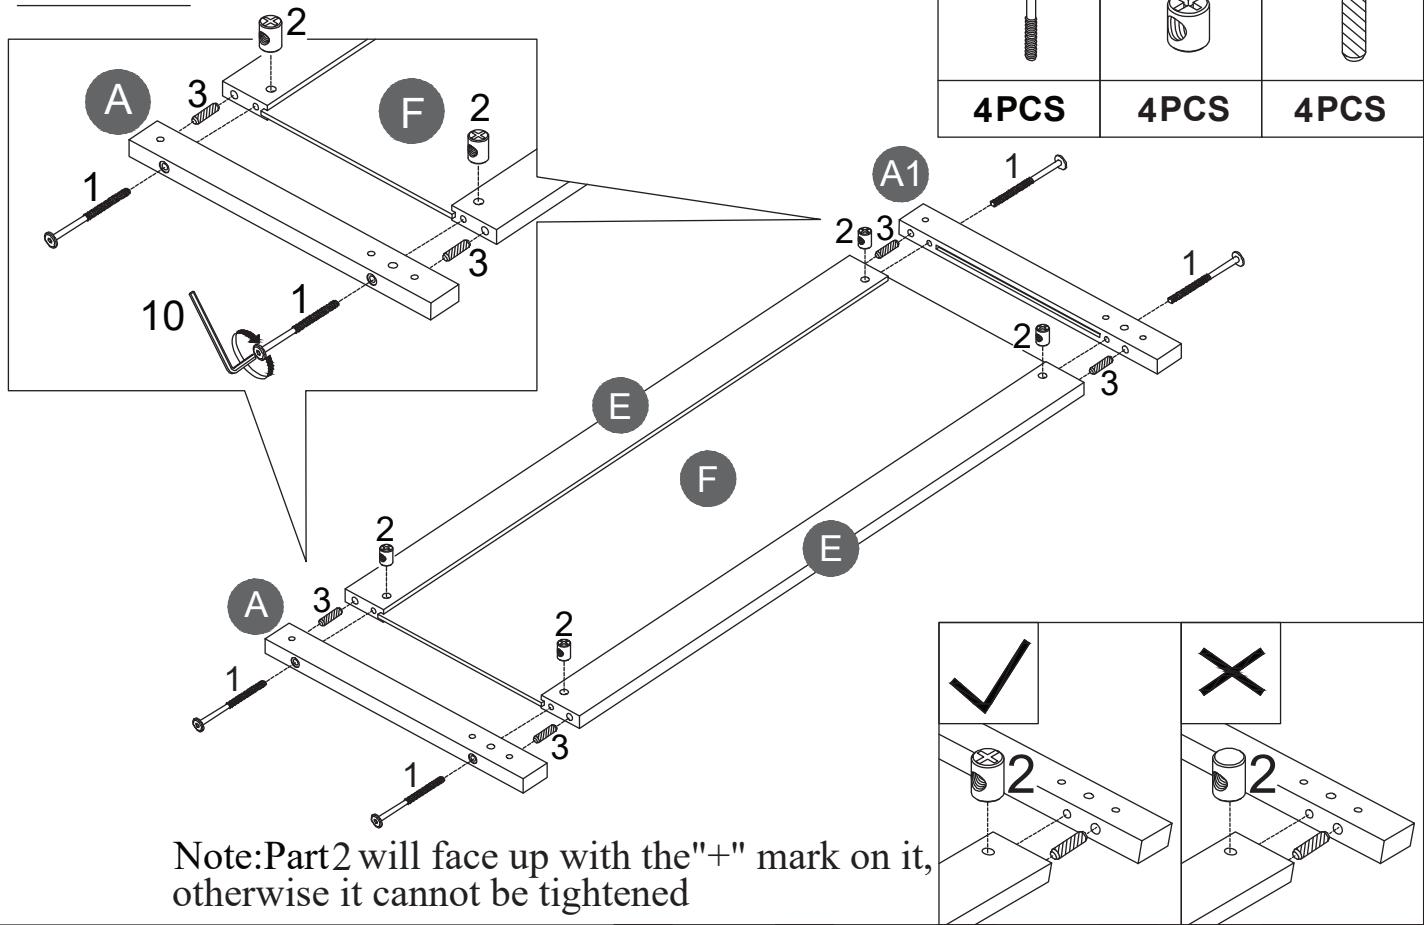


## STEP 6:

|      |       |      |      |      |
|------|-------|------|------|------|
| 1    | 2     | 3    | 4    | 5    |
| 5PCS | 11PCS | 4PCS | 2PCS | 6PCS |

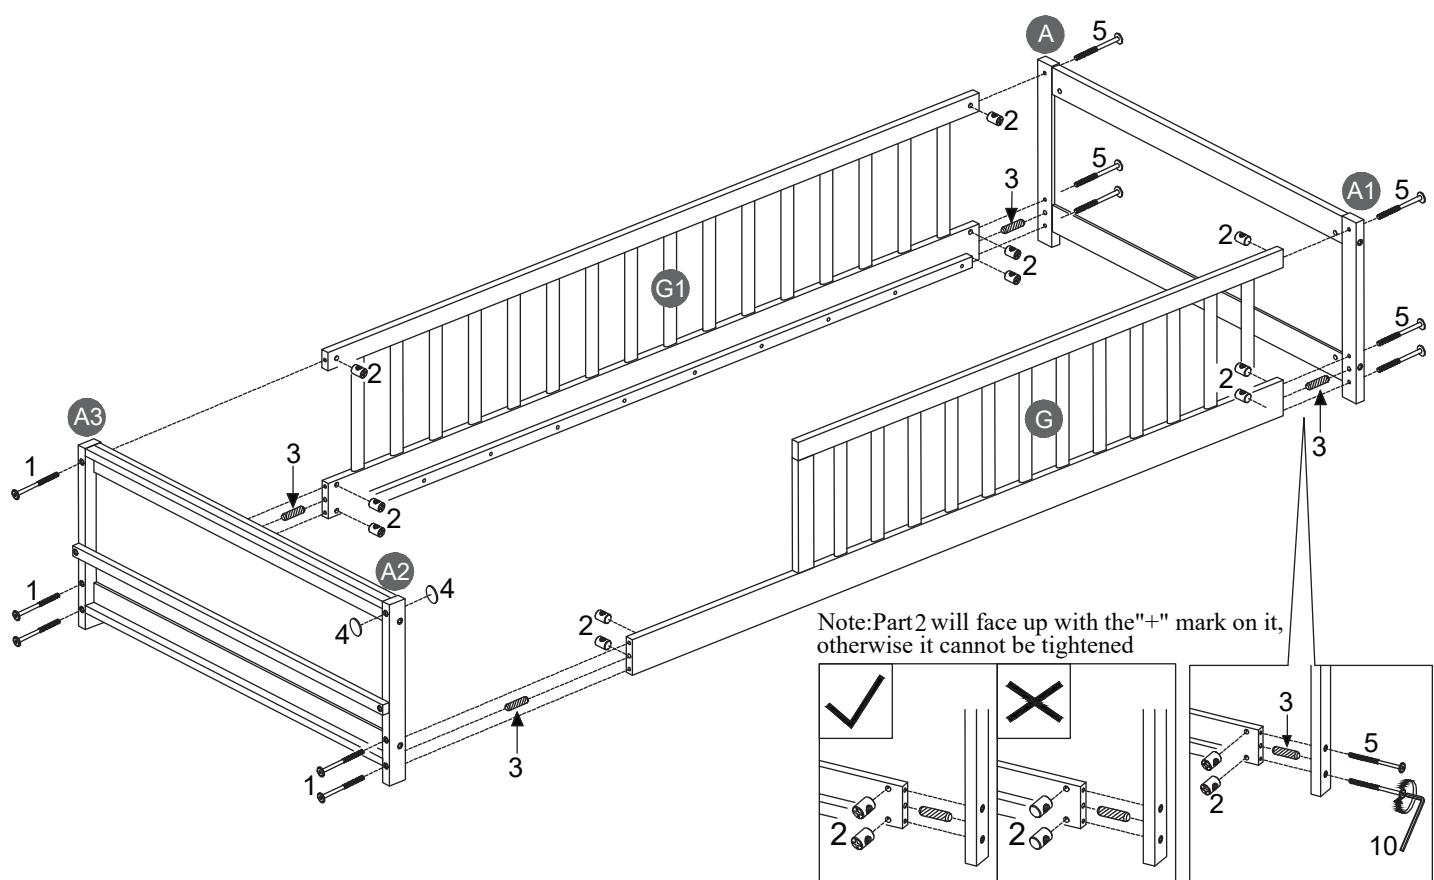


## STEP 7:

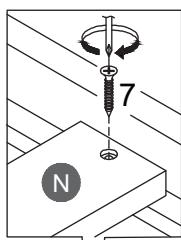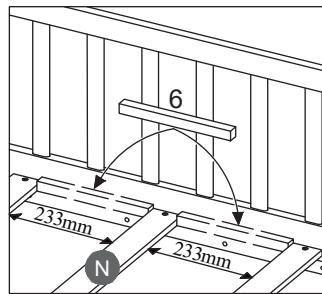

|      |       |
|------|-------|
| 6    | 7     |
| 1PCS | 14PCS |

Note: Use Wood Block as a guidance distance between Bed Slats.

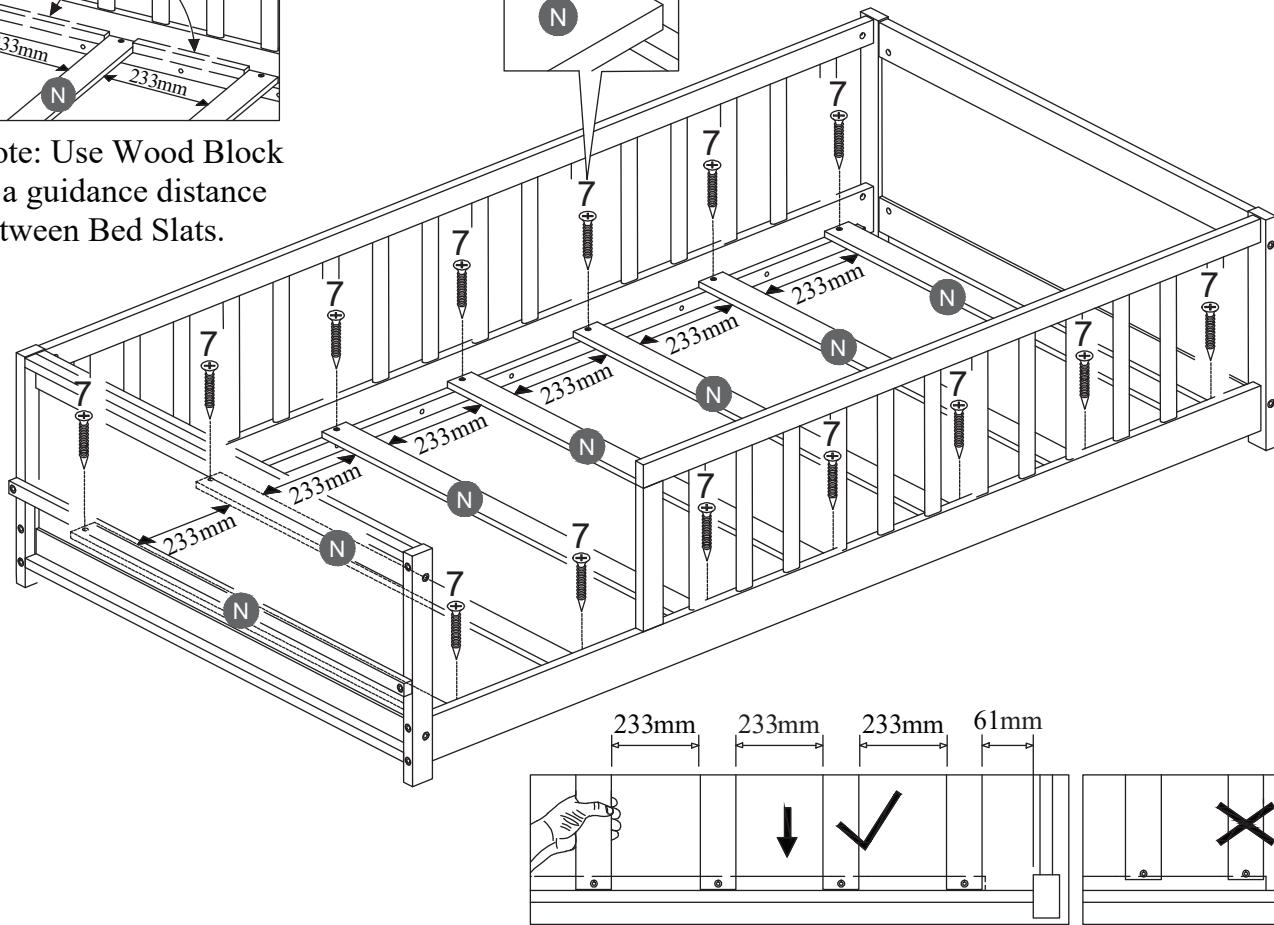

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break. Do not lock the bed slats on the edge of the wood, please hold firmly before screwing, hold it in place with one hand, then lock the screw.

