



DJYC2509






ASSEMBLY INTRODUCTION

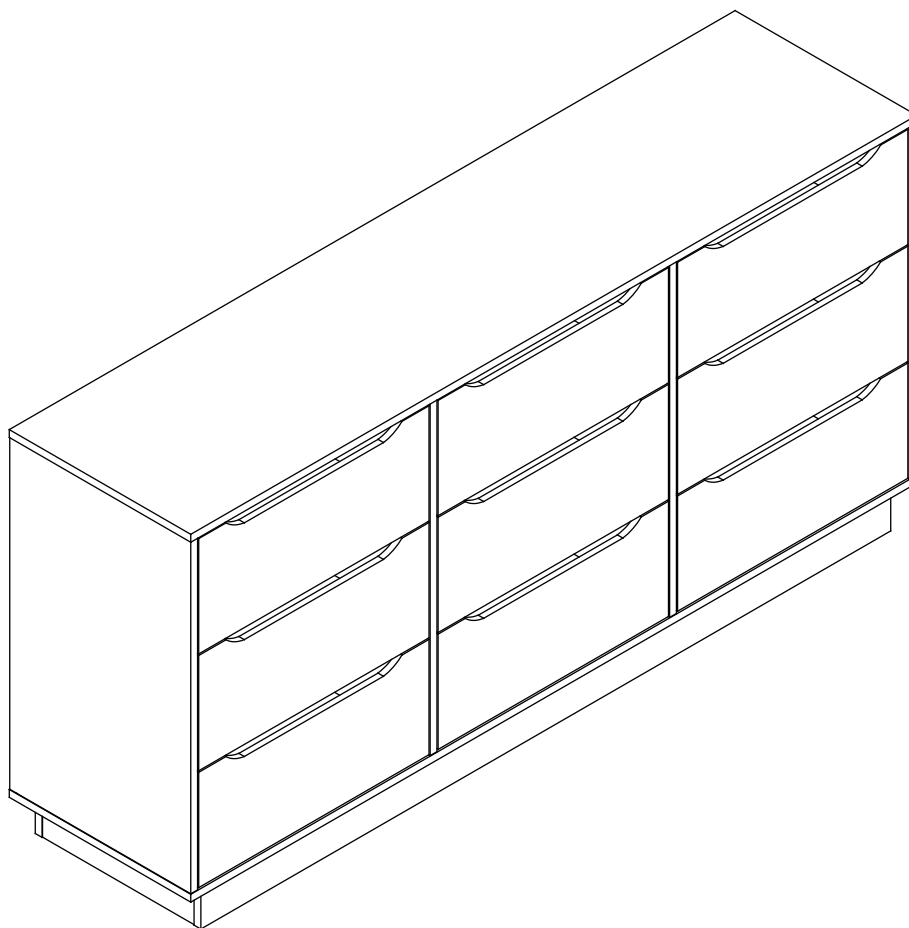






Exploded View

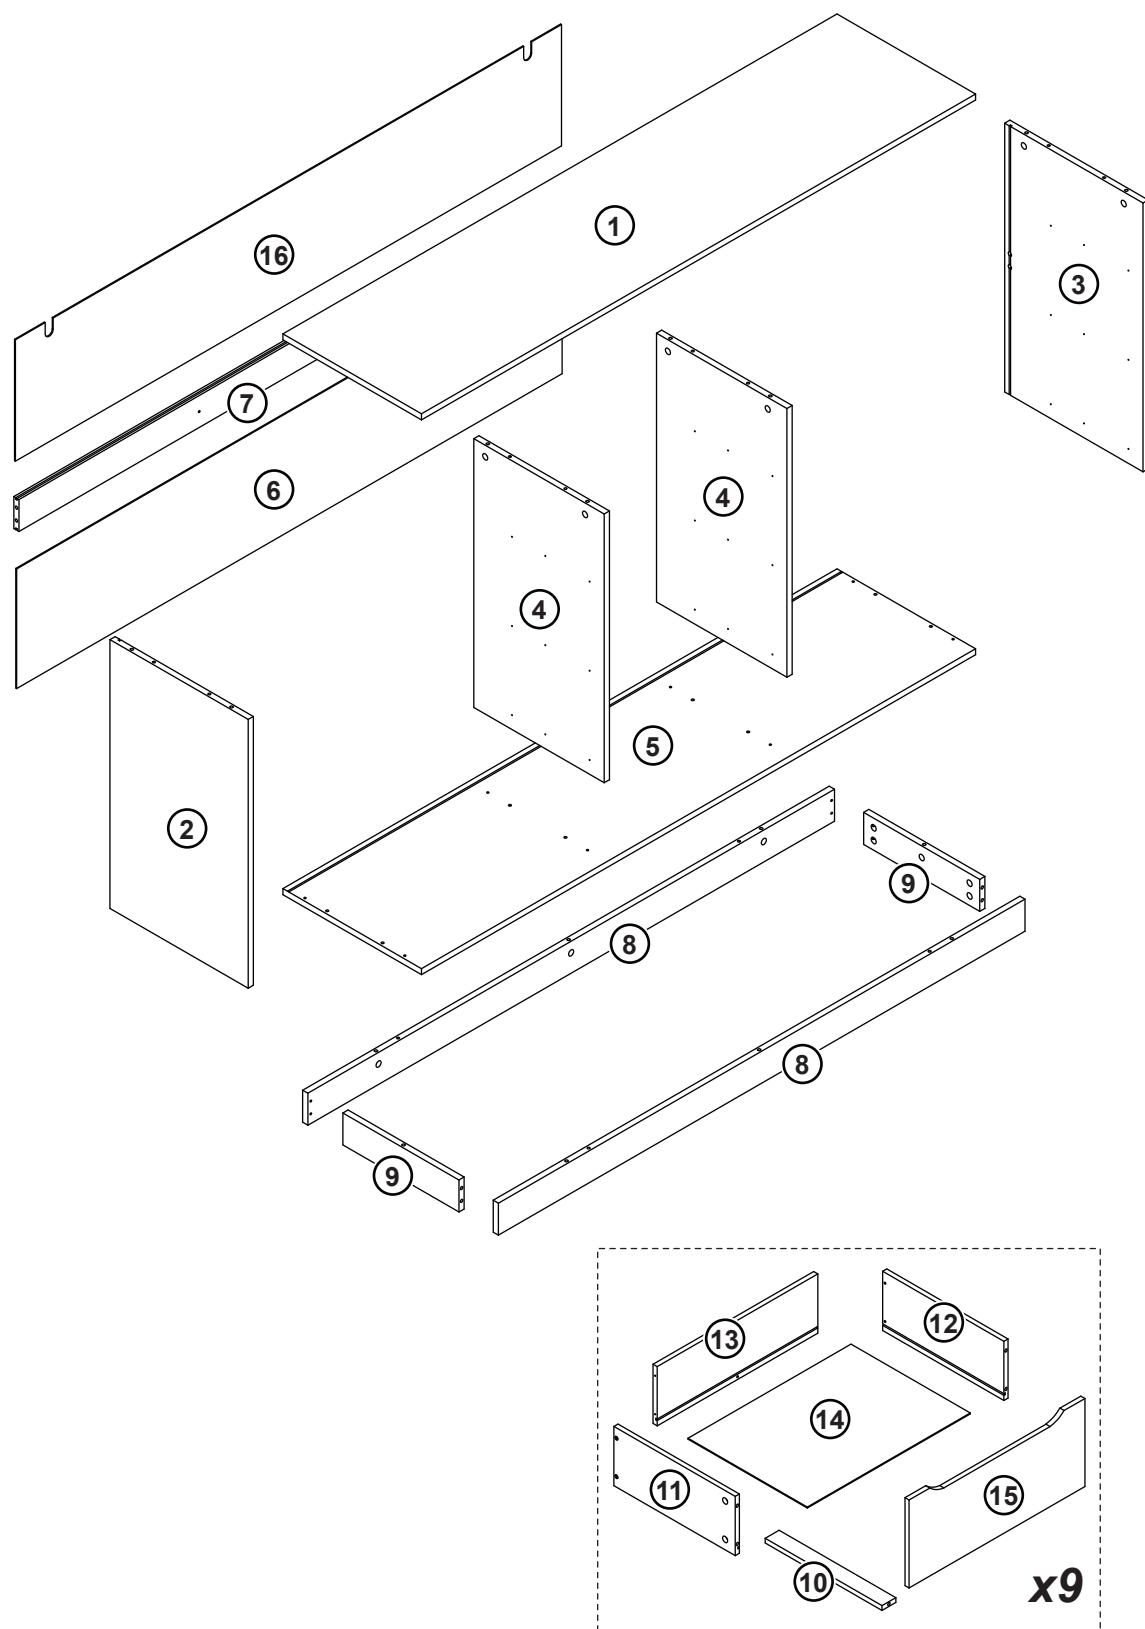



Fitting




Step 1

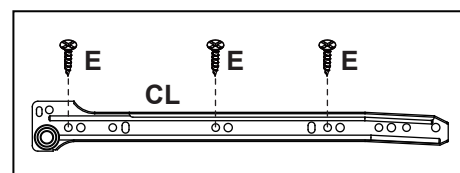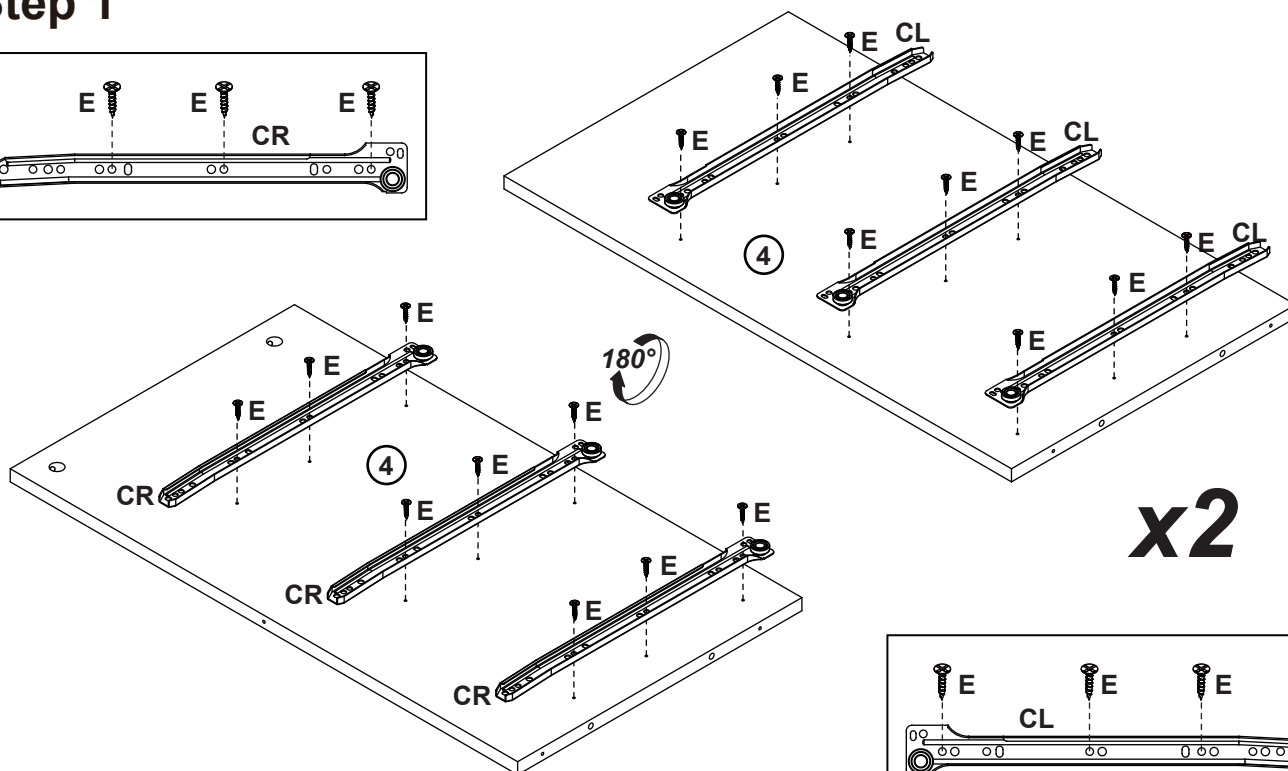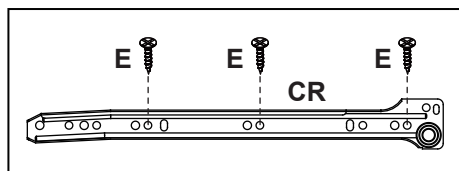



Step 2

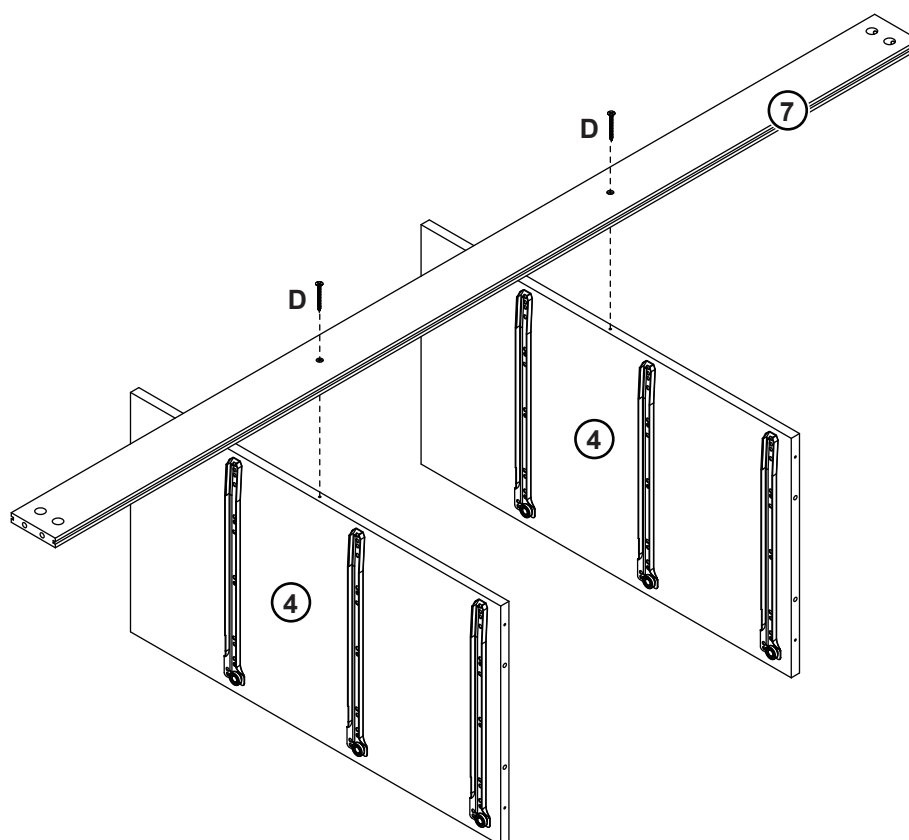



Step 3

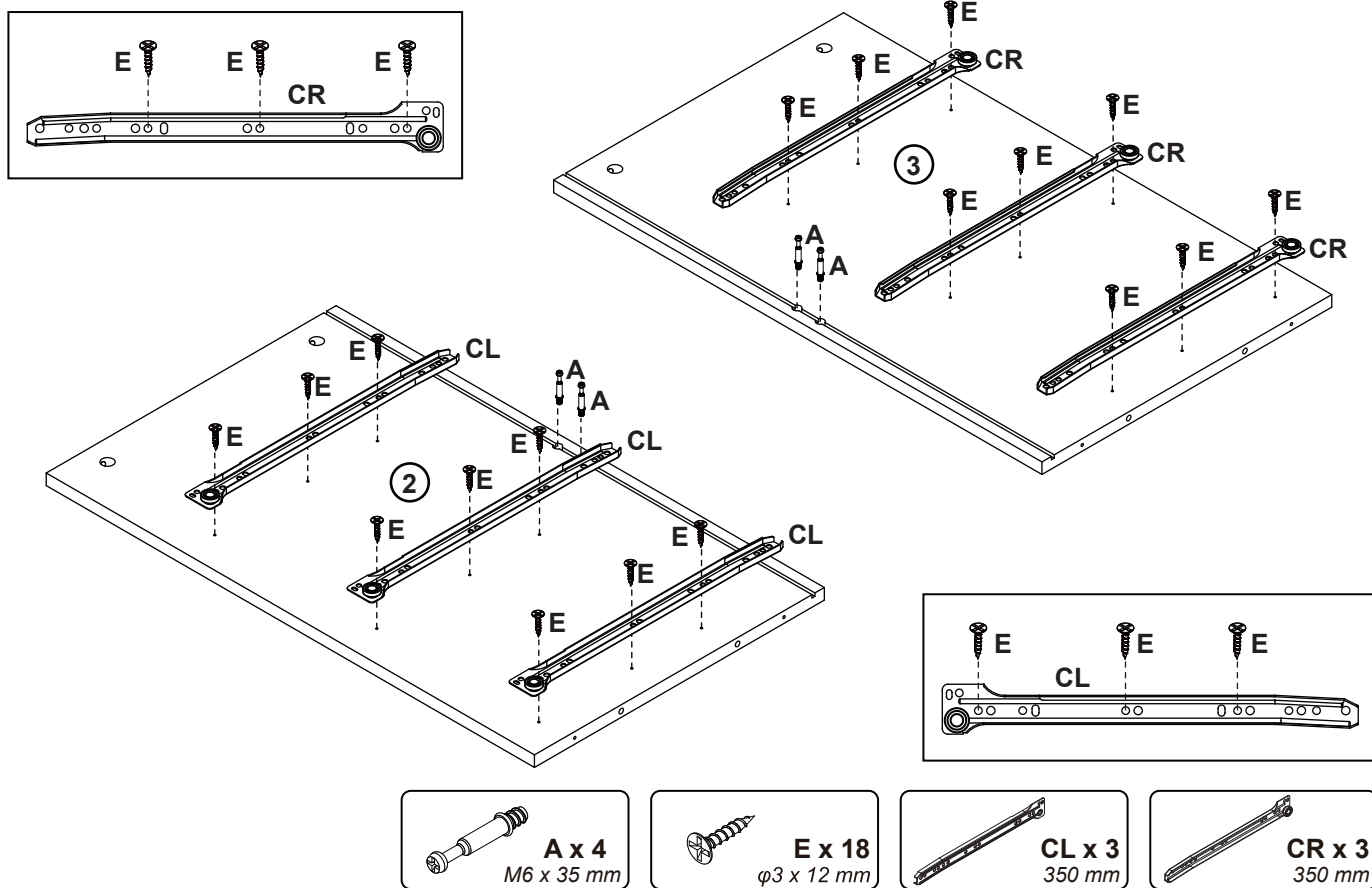


Step 4

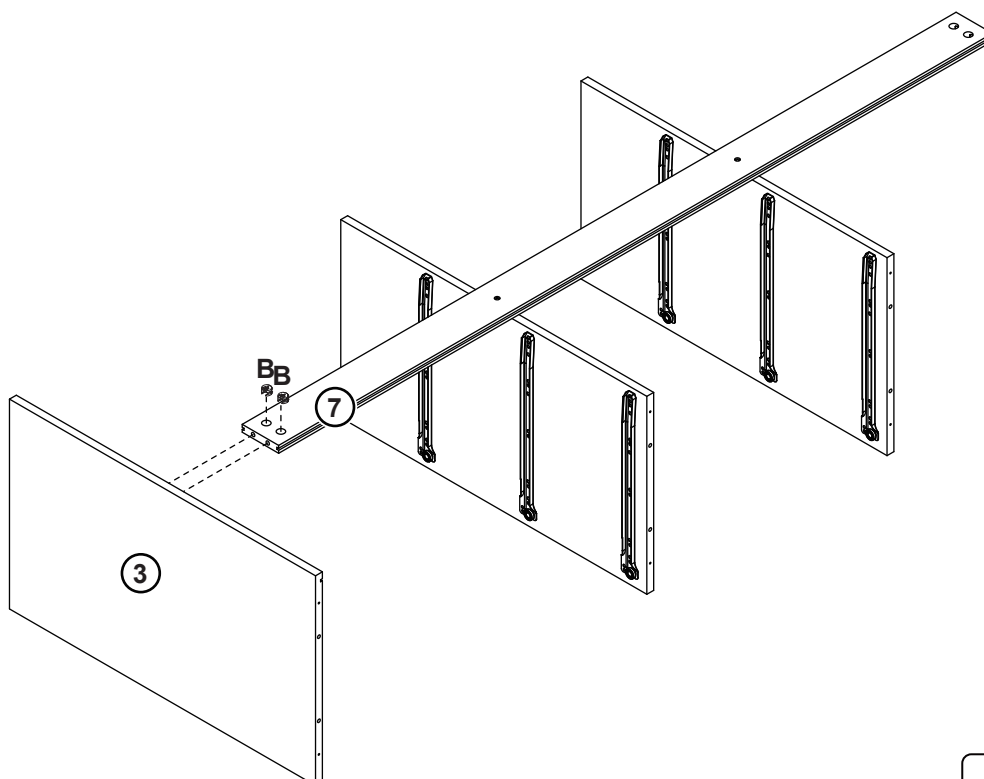


Step 5

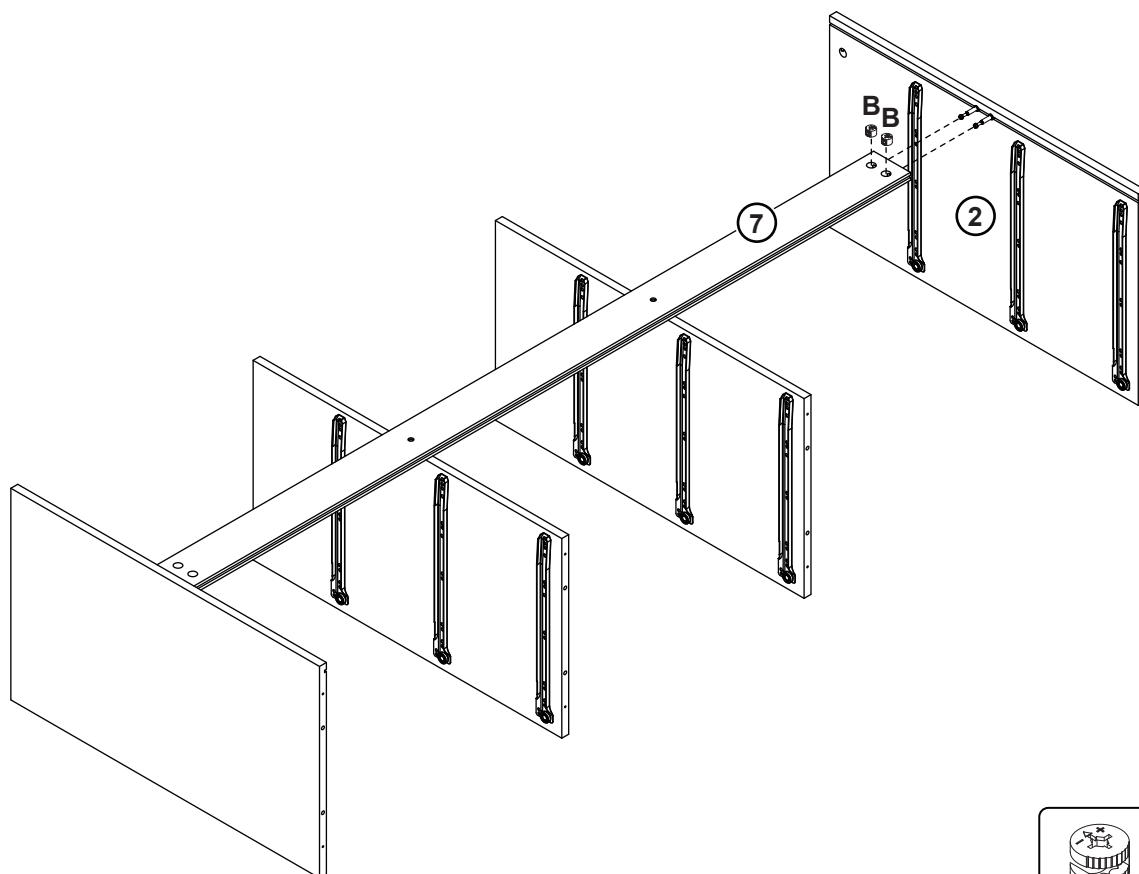



Step 6

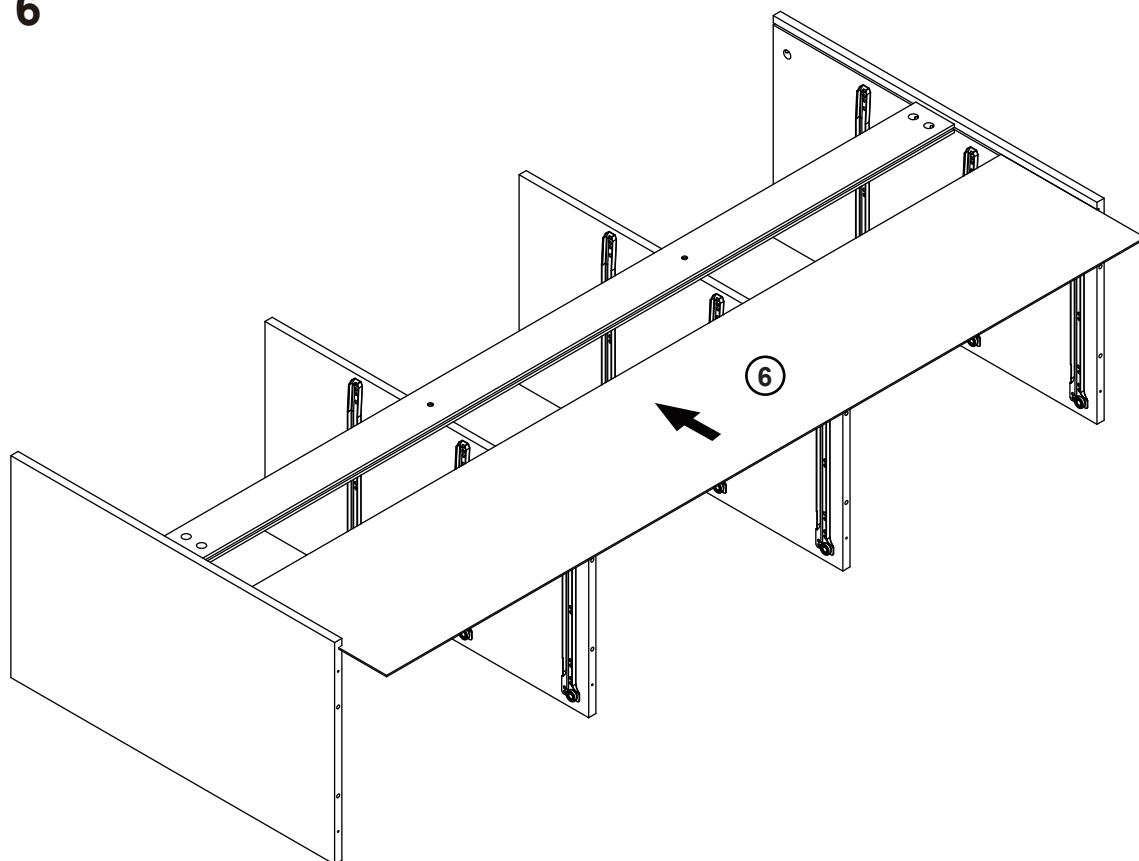



Step 7

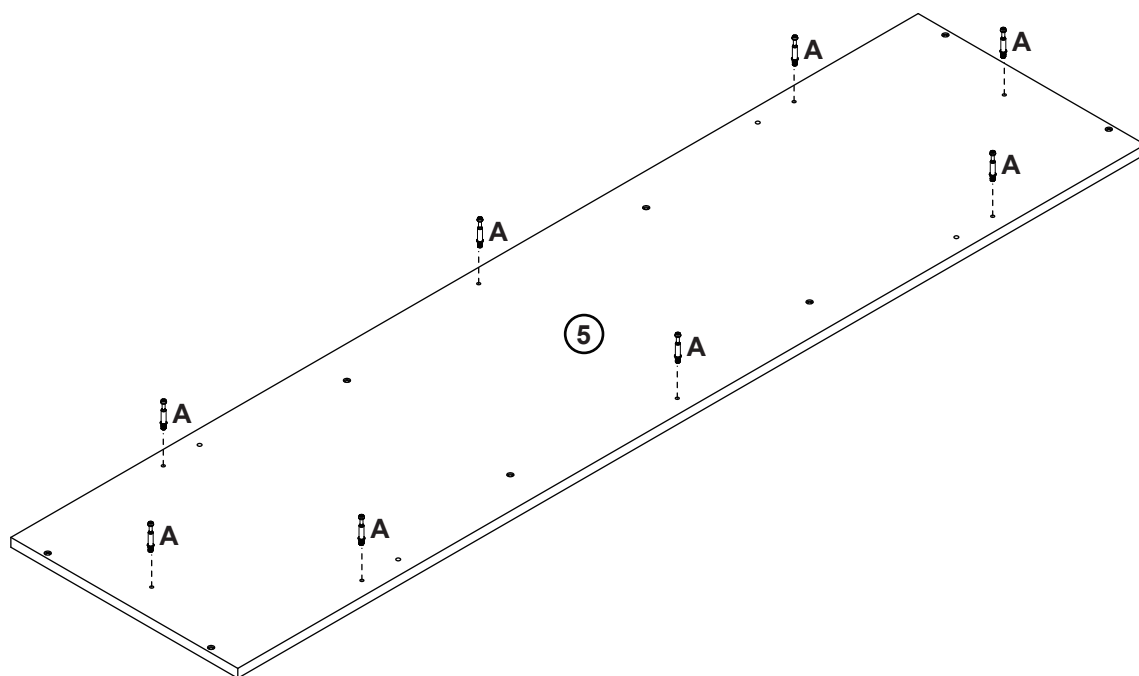


Step 8

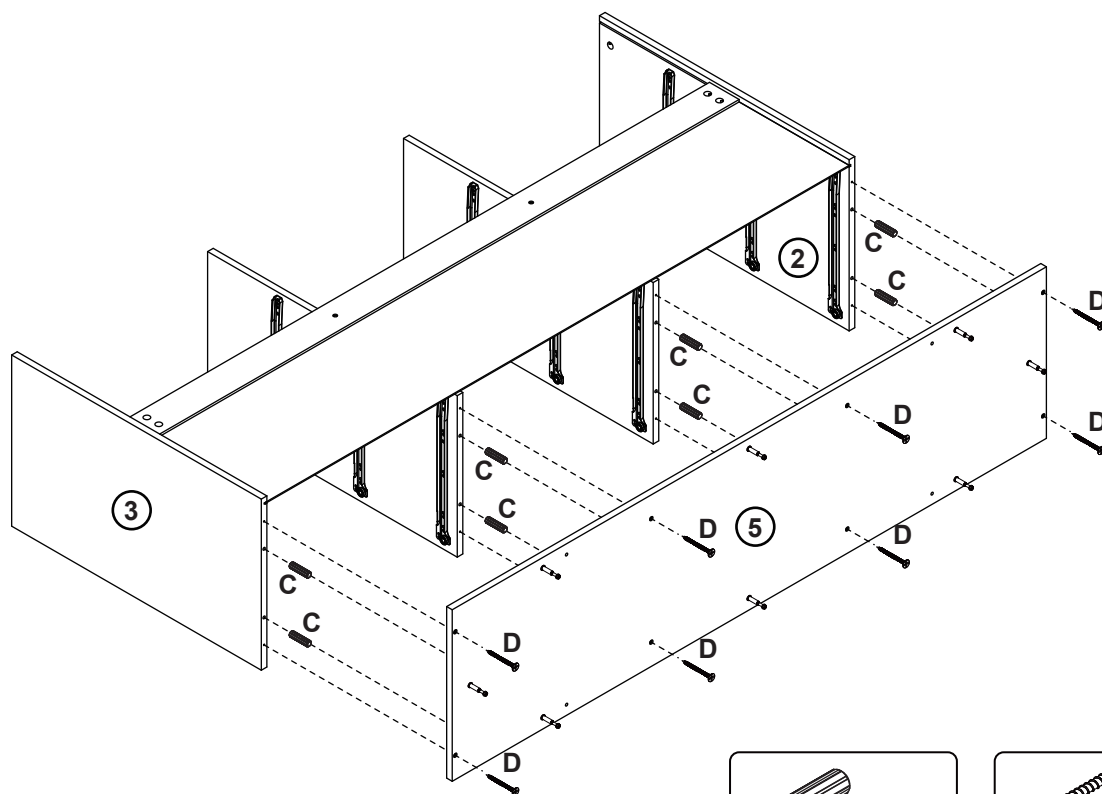


Step 9

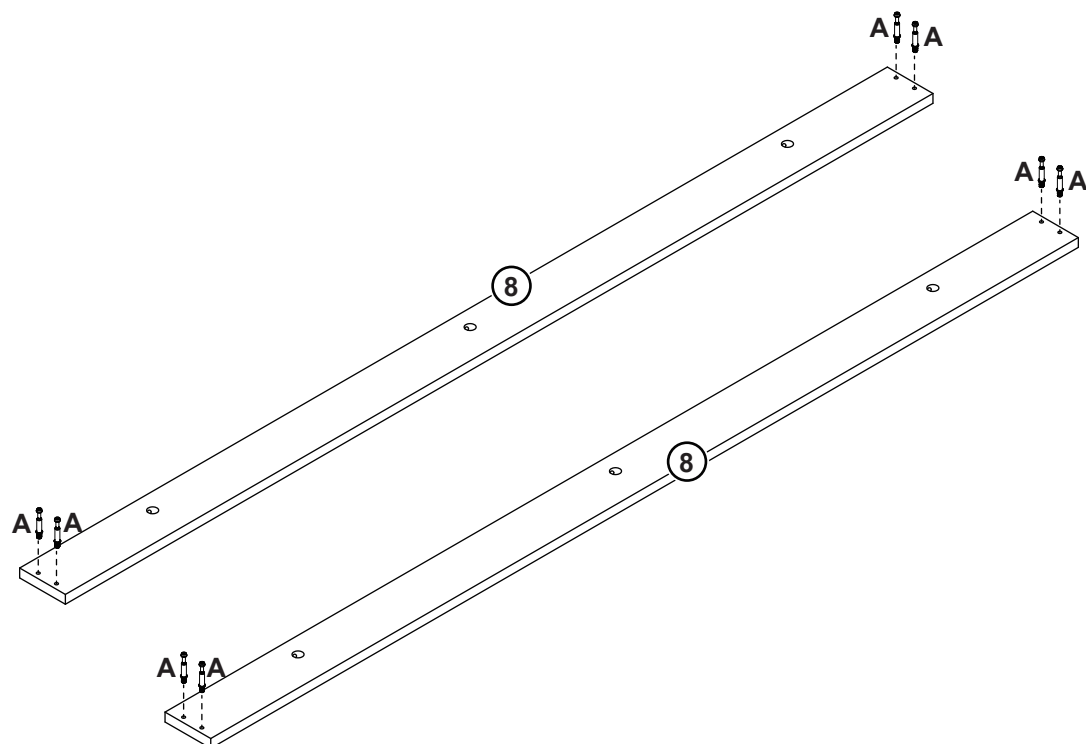


Step 10

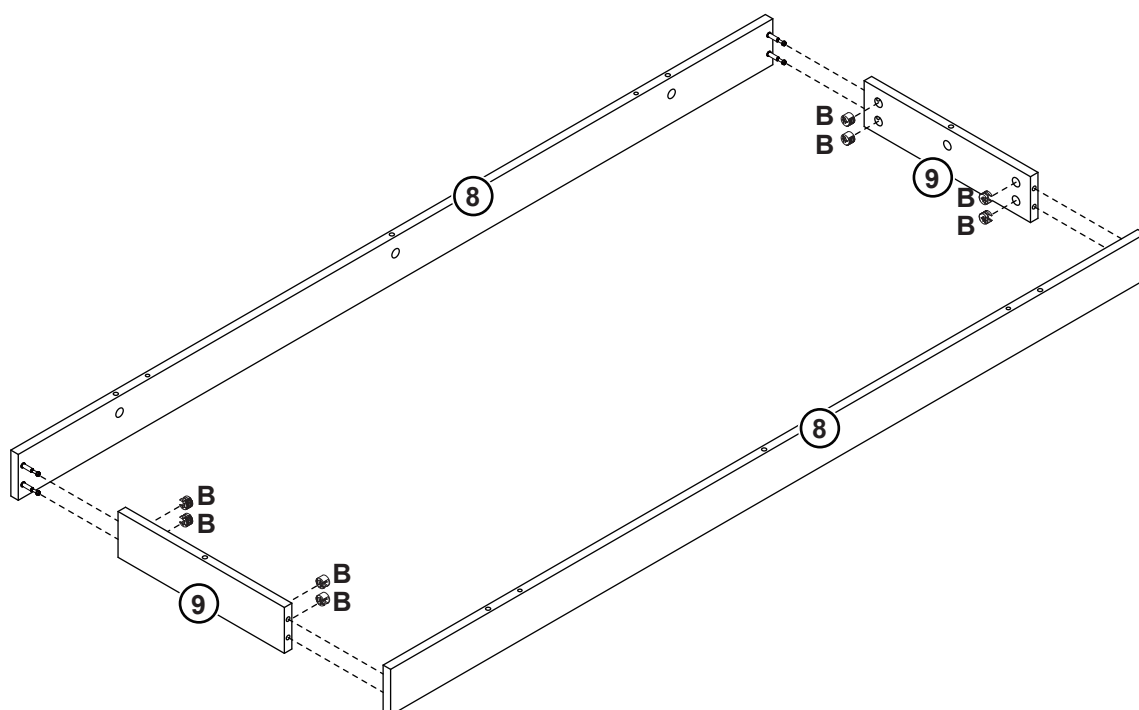




Step 11

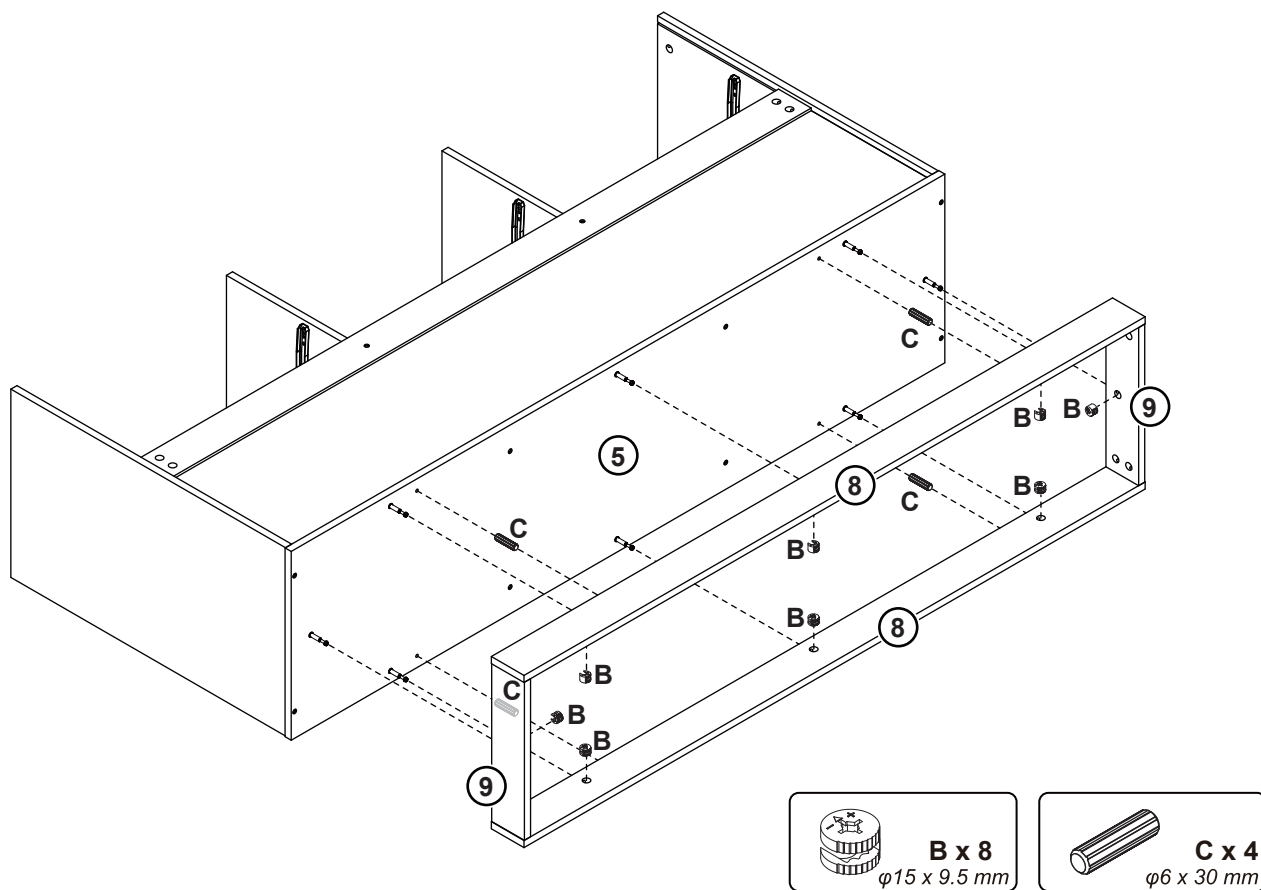



Step 12

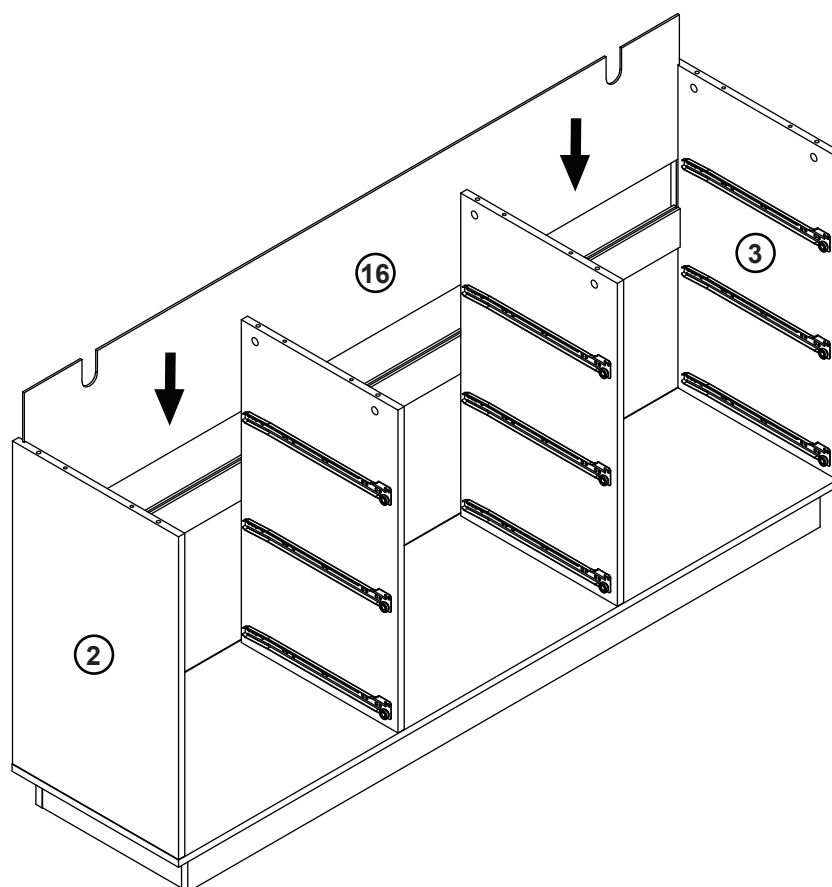



Step 13

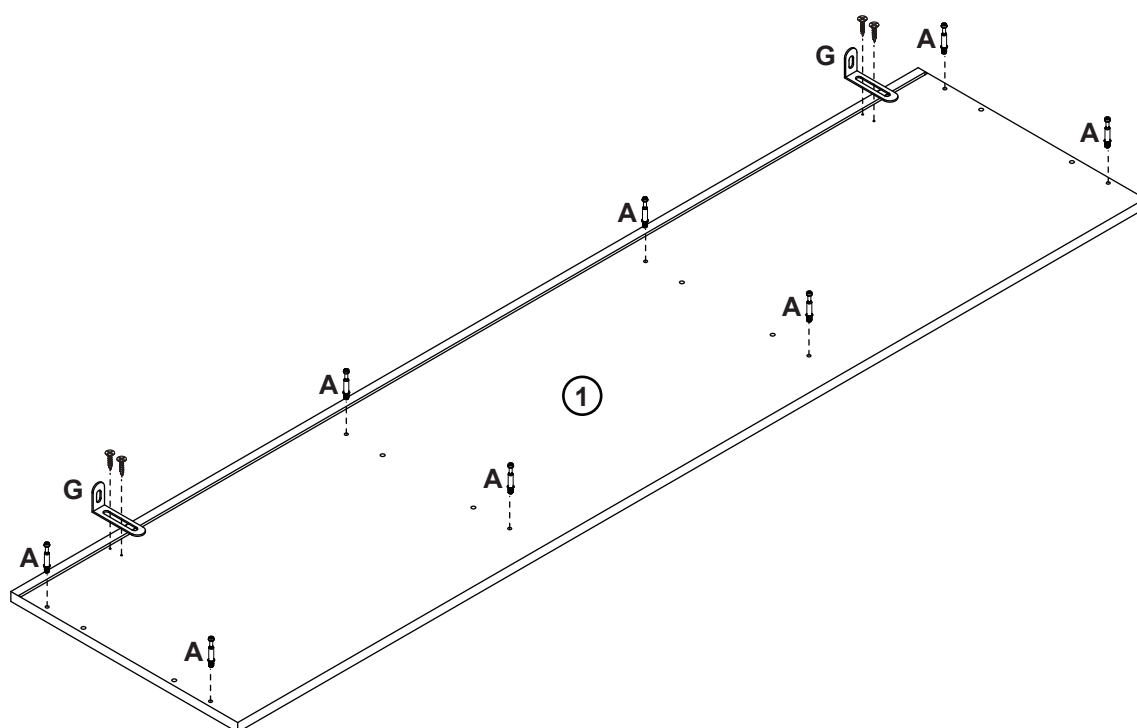




Step 14

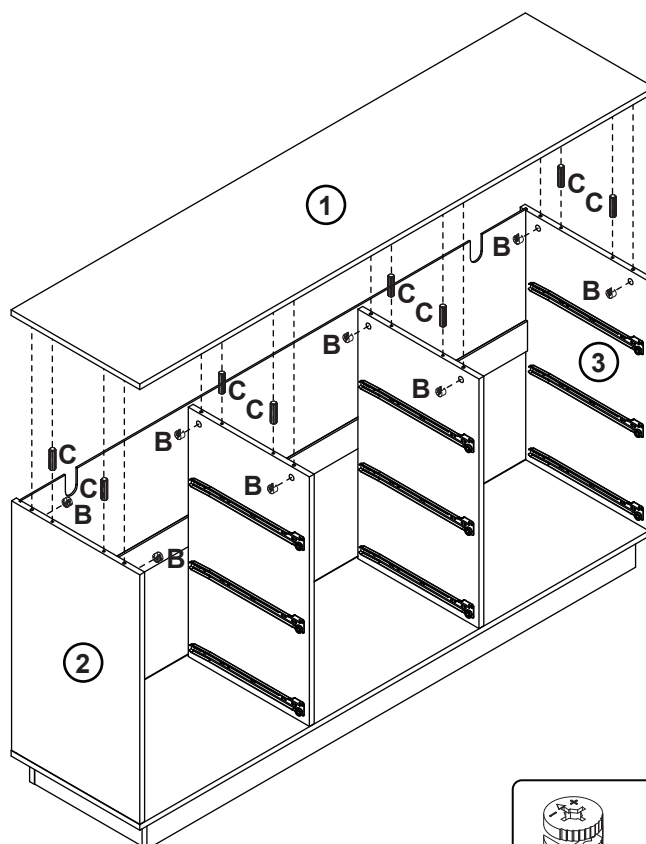


Step 15

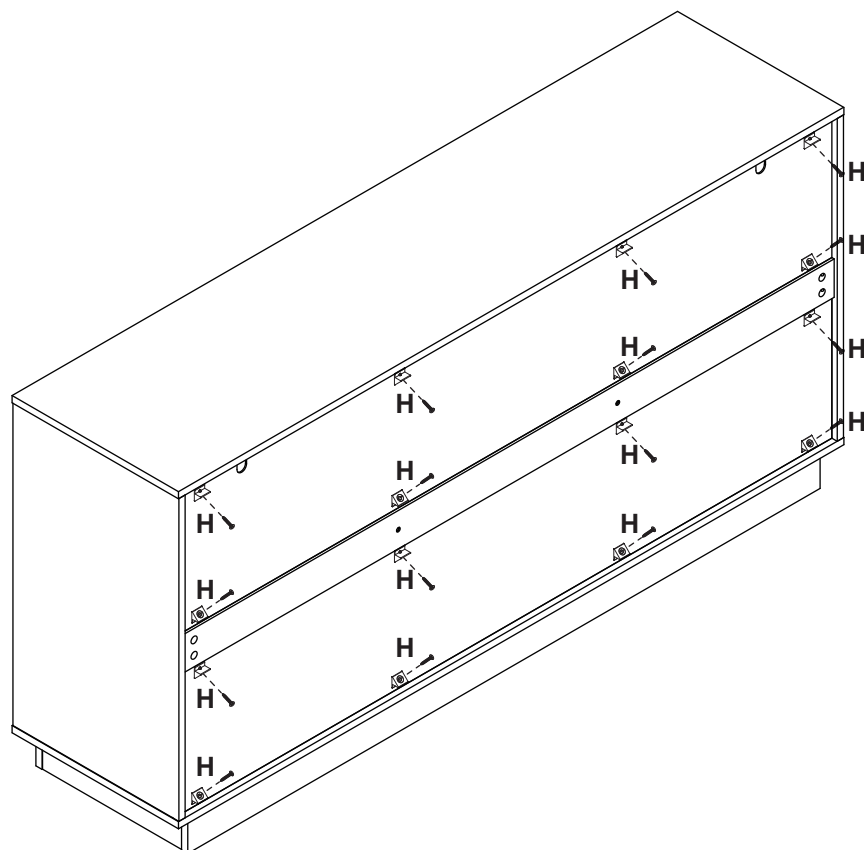

Step 16

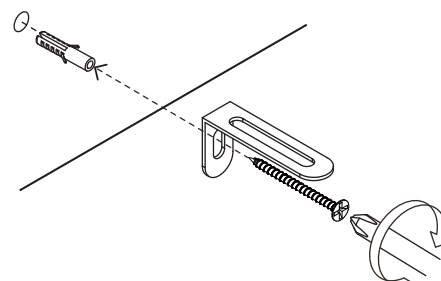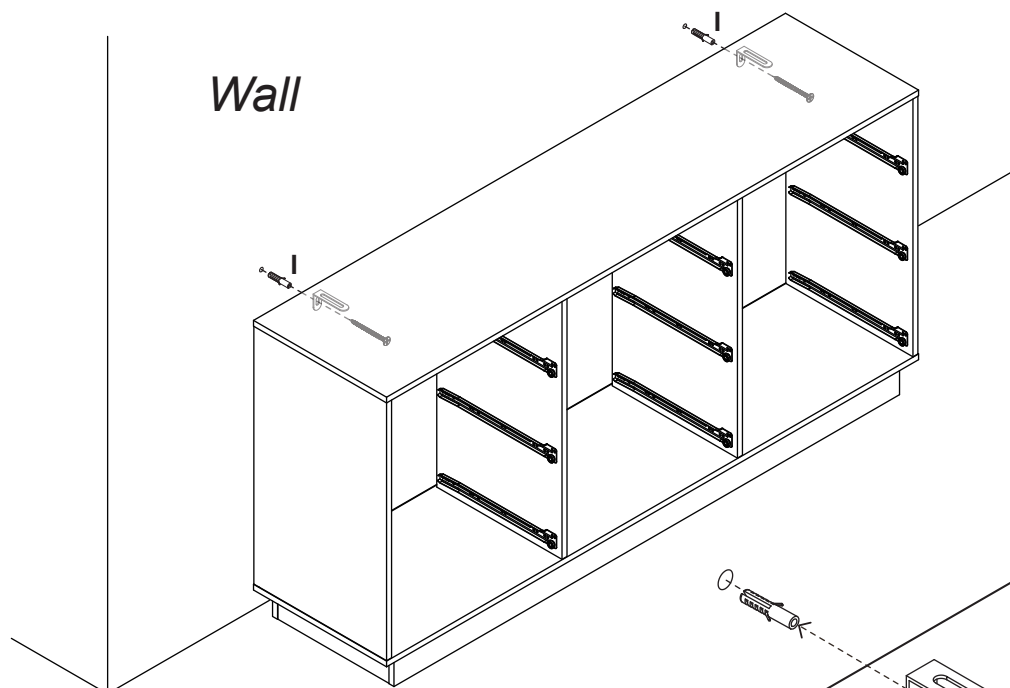


Step 17

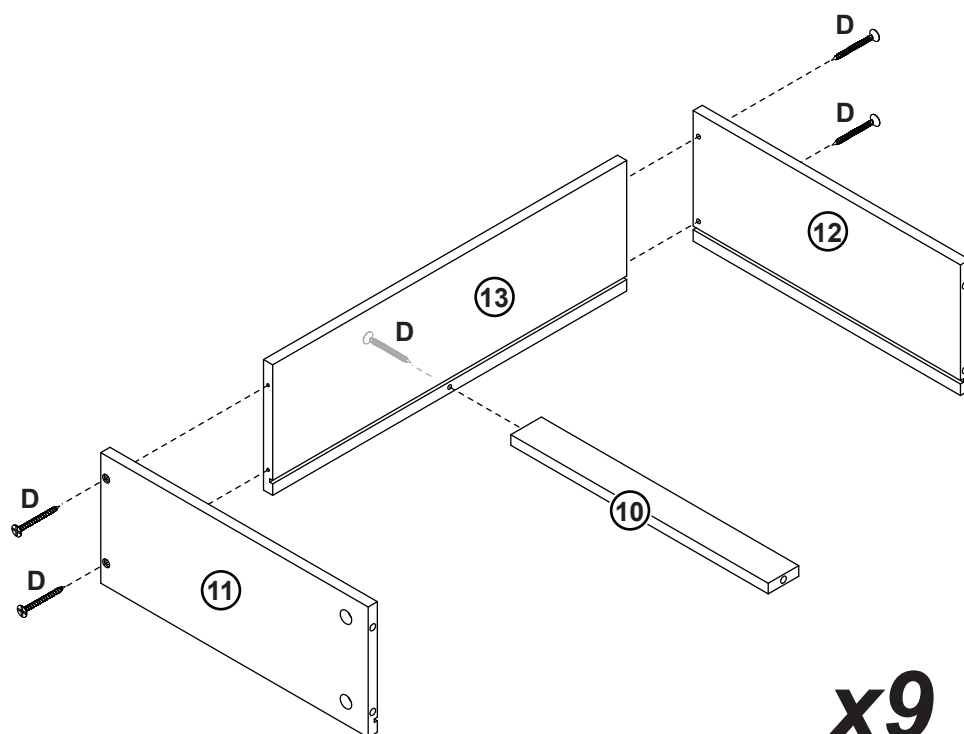

x9




Step 18

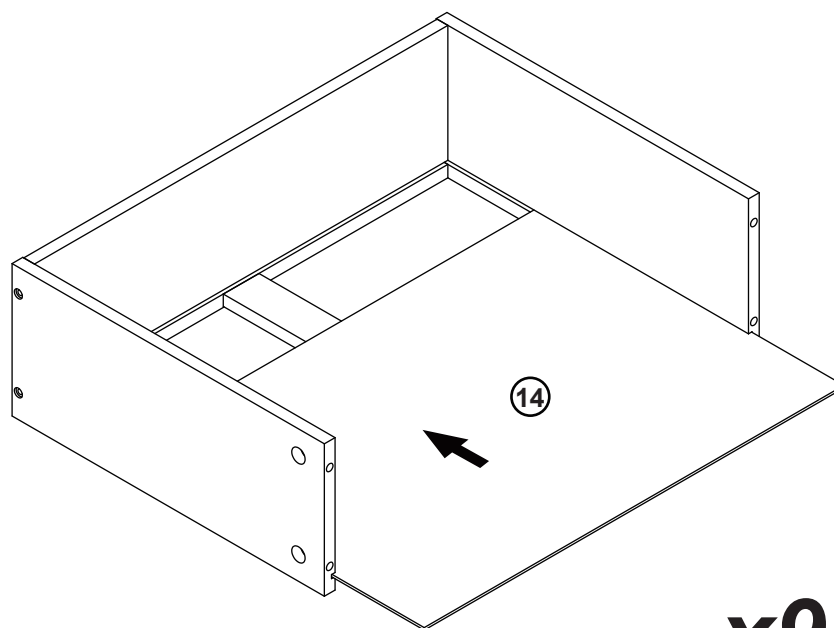


x9


Step 19

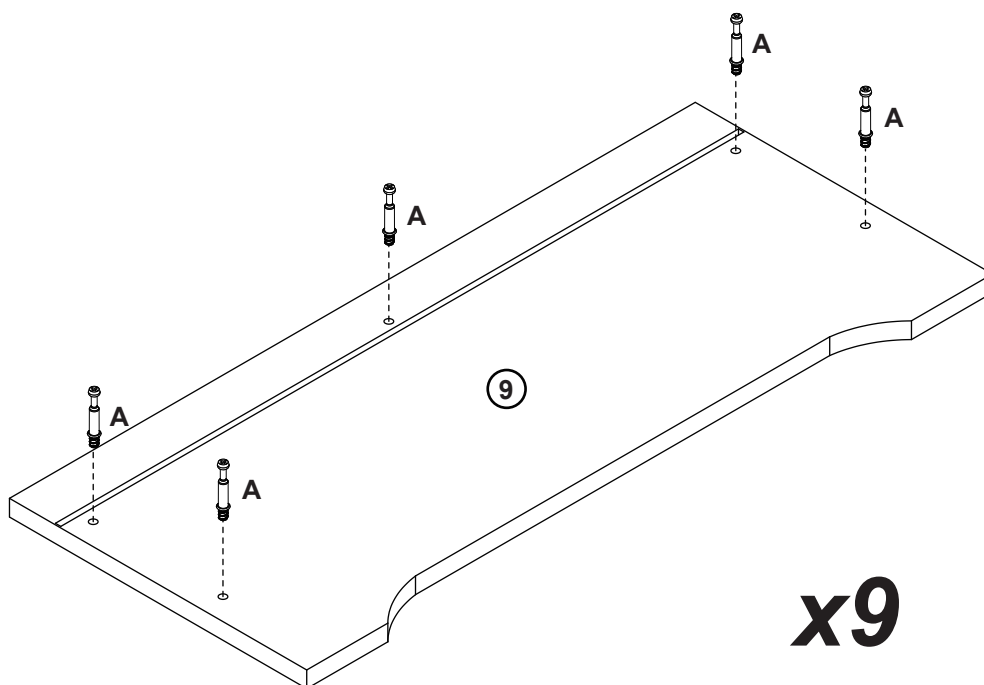

x9





Step 20

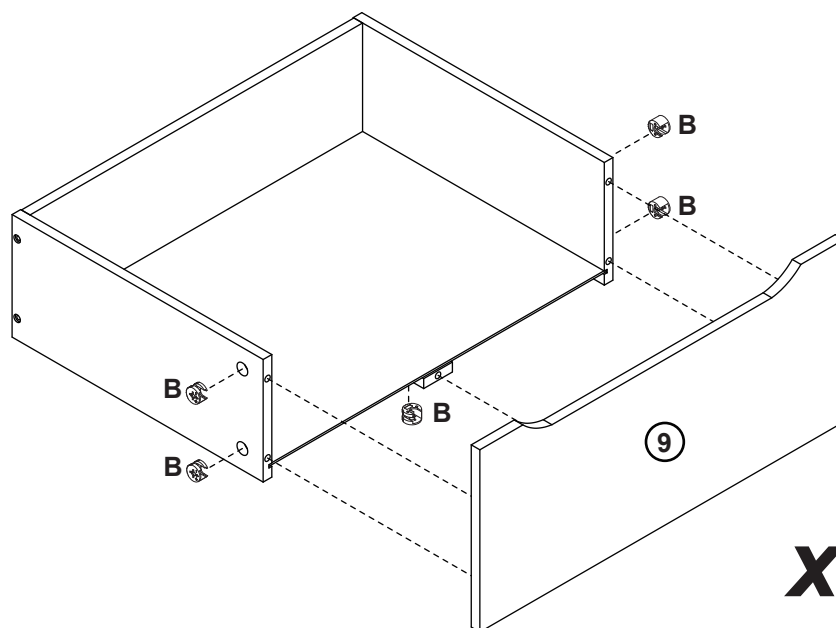

x9




Step 21

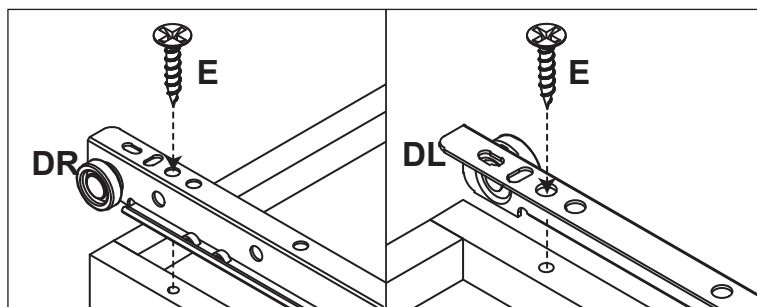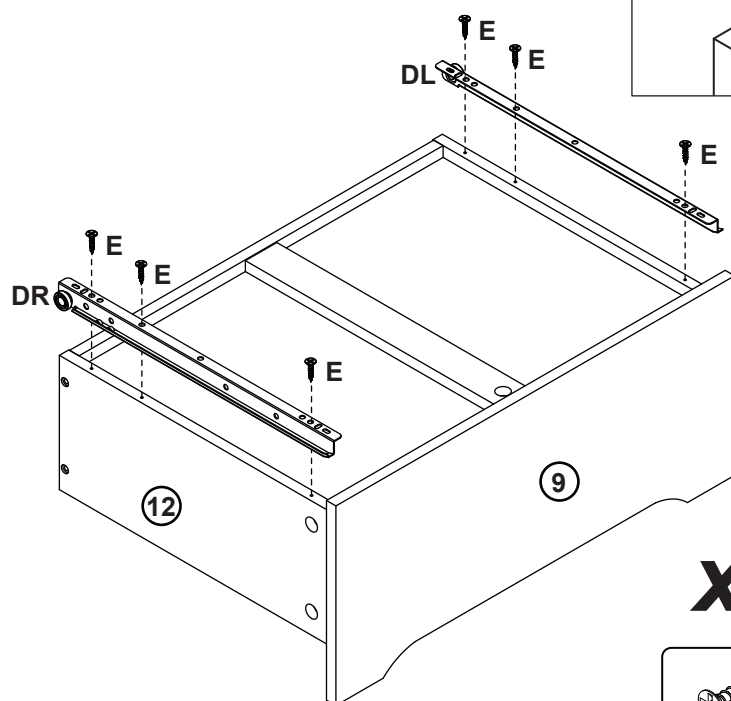


x9



E x 54
 $\phi 3 \times 12 \text{ mm}$




DL x 9
350 mm



DR x 9
350 mm

Step 22

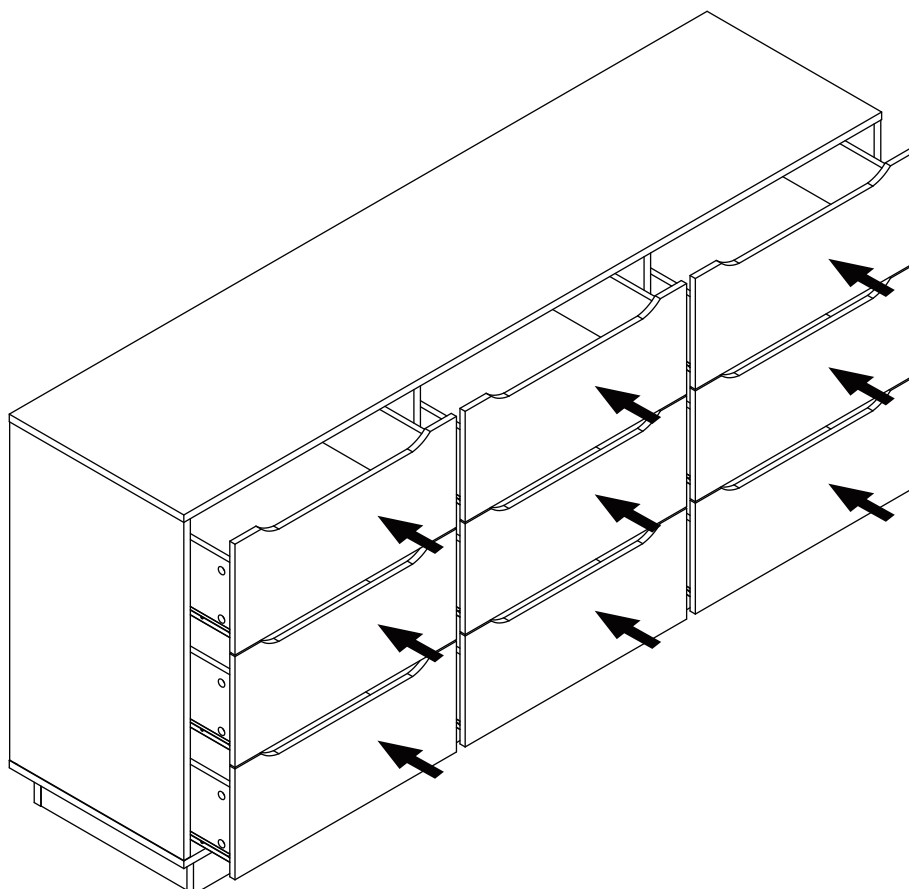

Step 23

