

Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance


- Not for commercial use. For residential use only.
- Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- Do not put hot items directly on furniture surface.
- Do not clean furniture with harsh cleansers or polish.
- Do not place furniture under direct sunlight.
- Do not place furniture near heating or cooling vents.
- Do not write on furniture without a padded barrier to protect the surface.
- Do not place furniture outside . For indoor use only.
- Stains may be removed with mild soap solution and damp cloth.
- Children should not climb or jump on the furniture.
- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in the box for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.




Bed

N757P343420+N757P343421
N757P343407+N757P343408




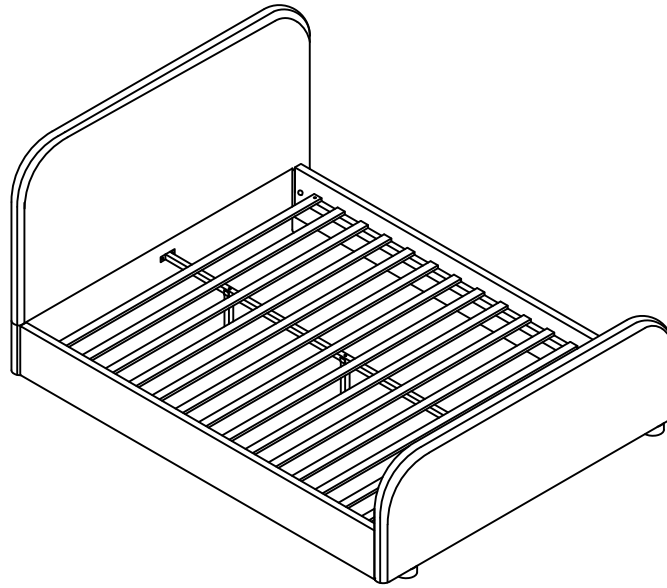



Part List

N757P343420+N757P343407

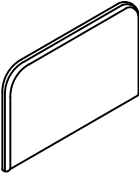
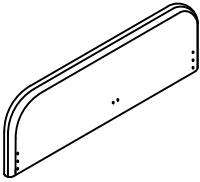
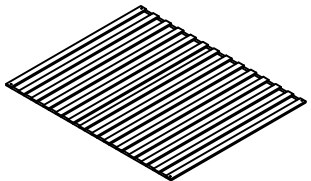



Label	Picture	Description	QTY
①		Head board	1
②		Foot board	1
⑤		Slats	1

Part List**N757P343421+N757P343408**

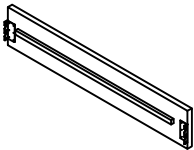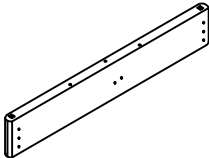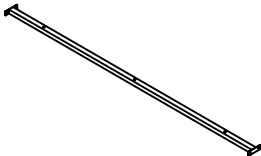Label	Picture	Description	QTY
③		Side rails support bar	2
④		Base Headboard	1
⑥		Middle support leg	2
⑦		Middle crossbar	1
⑧		Headboard side lever	2


Hardware

N757P343421+N757P343408

Label	Picture	Description	QTY
(A)		Bolts (M8x25mm)	16+1
(B)		Bolts (M8x35mm)	13+1
(C)		Screws M4 x 25	6+1
(E)		Allen Wrench M5	1
(D)		Leg	4
(F)		Screwdriver (not Provided)	1

Assembly Preparation


Before Beginning
Assembly:

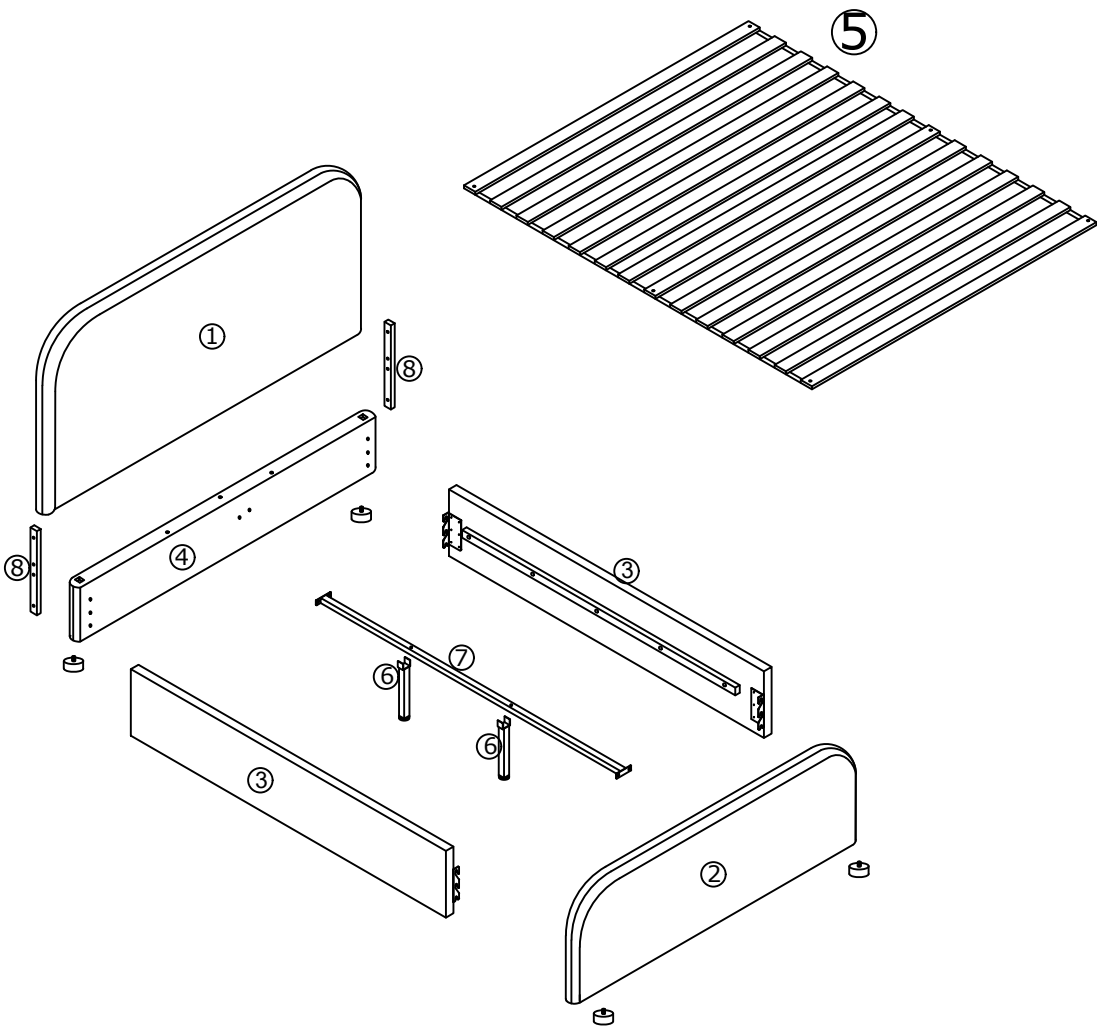

Label	Picture	Description	QTY
A		Bolts (M8x25mm)	16+1
B		Bolts (M8x35mm)	13+1
C		Screws M4 x 25	6+1
E		Allen Wrench M5	1
D		Leg	4

Assembly Steps


OVERVIEW

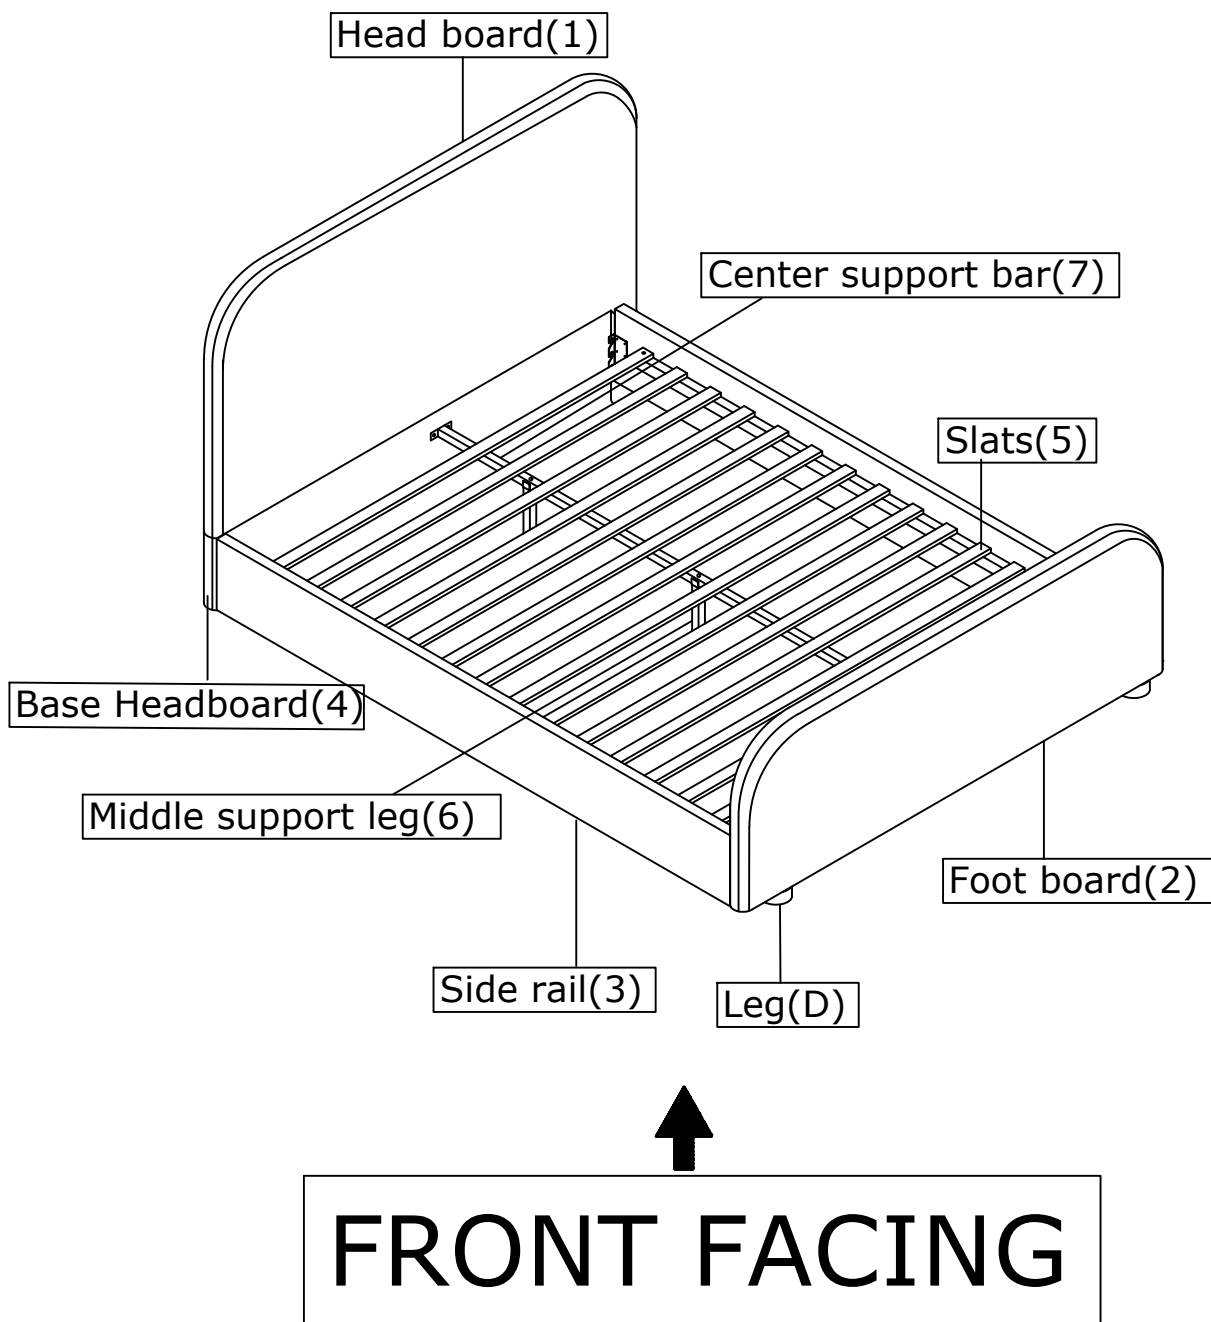

This Bed have multiple parts and may require up to 45 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1

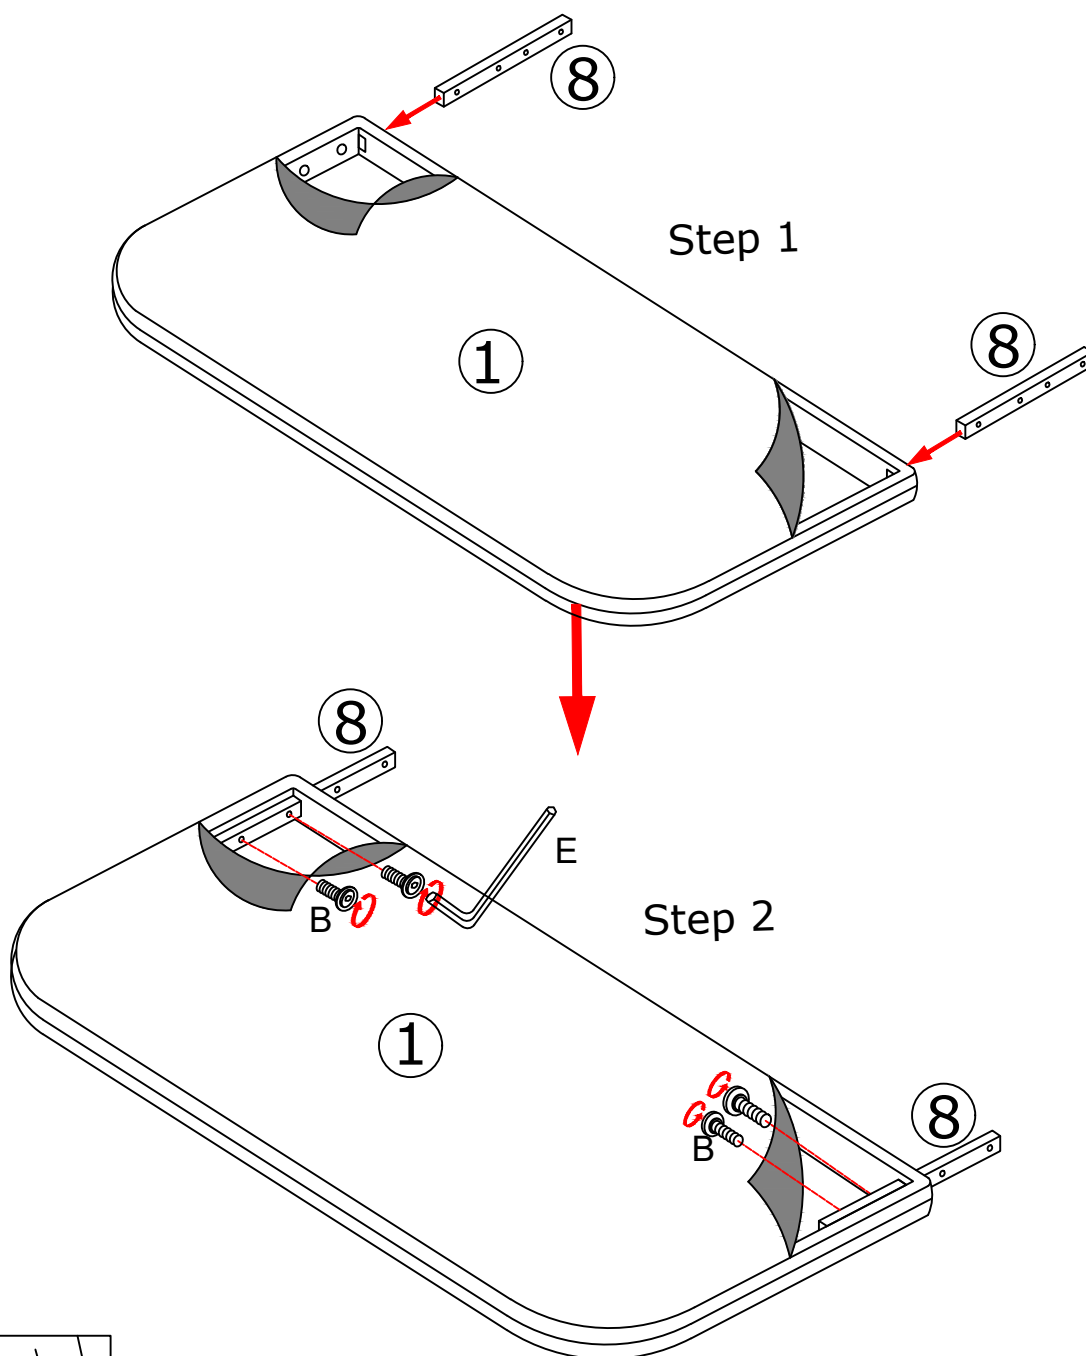

Attach side lever⑧to the headboard①by using bolts (B) with allen wrench (E), make sure the bolts are tighten.

Step 2

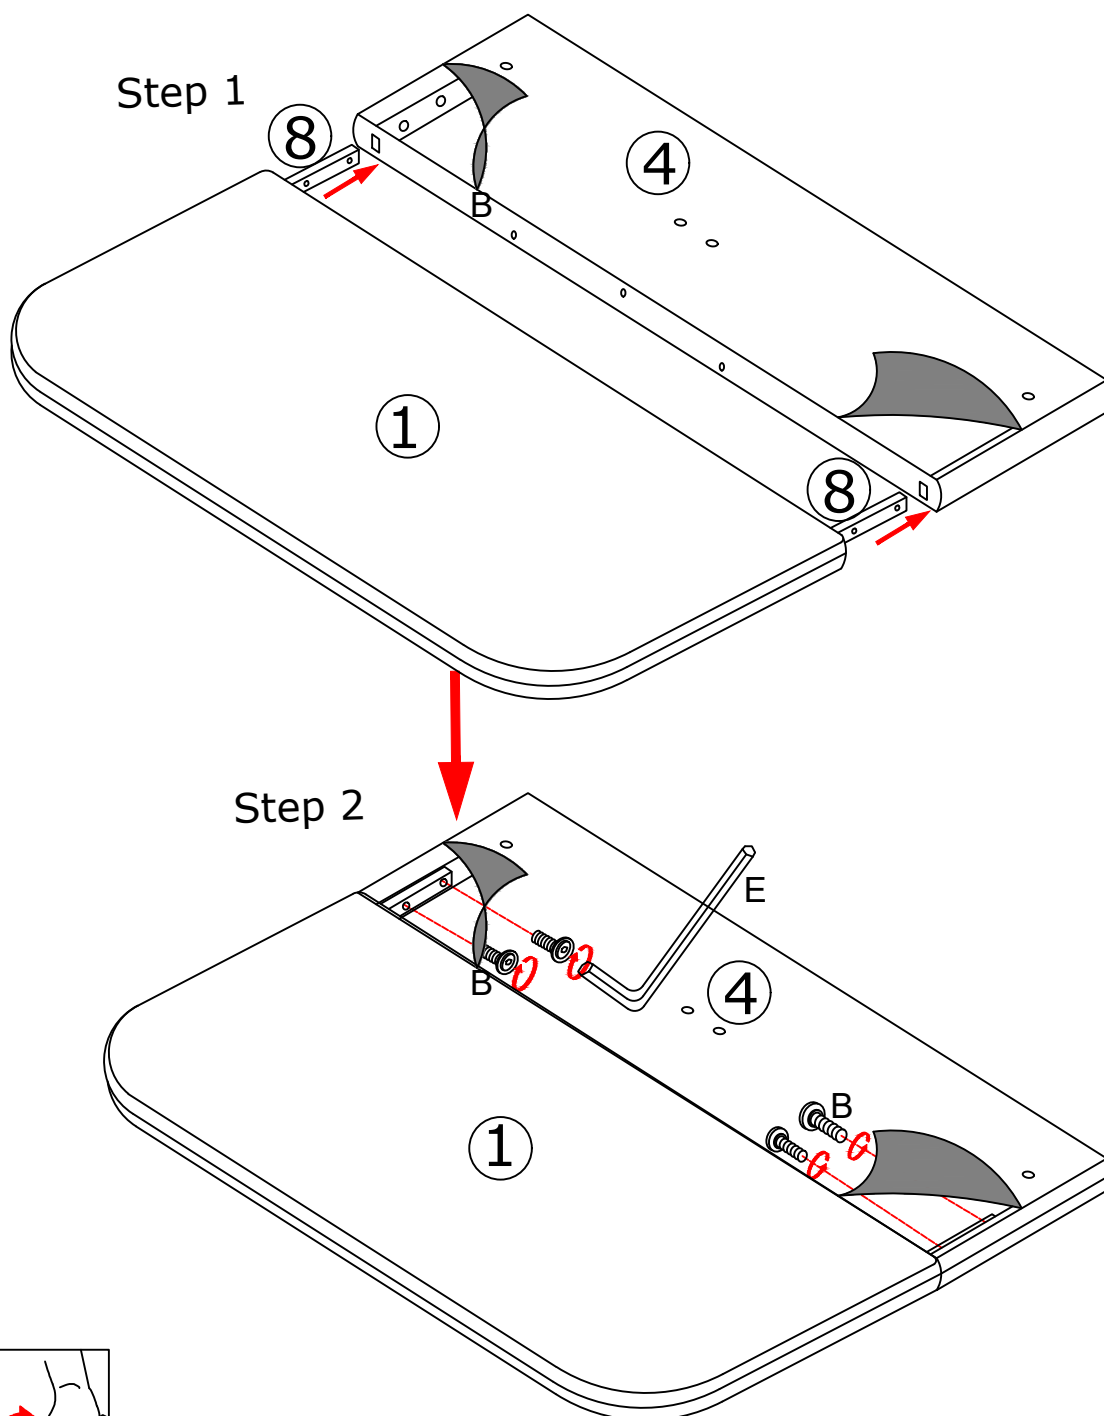


Attach side lever ⑧ to Base Headboard ④ by using bolts B with allen wrench E.

Step 3

M8*35
B*3PCS


E*1PC

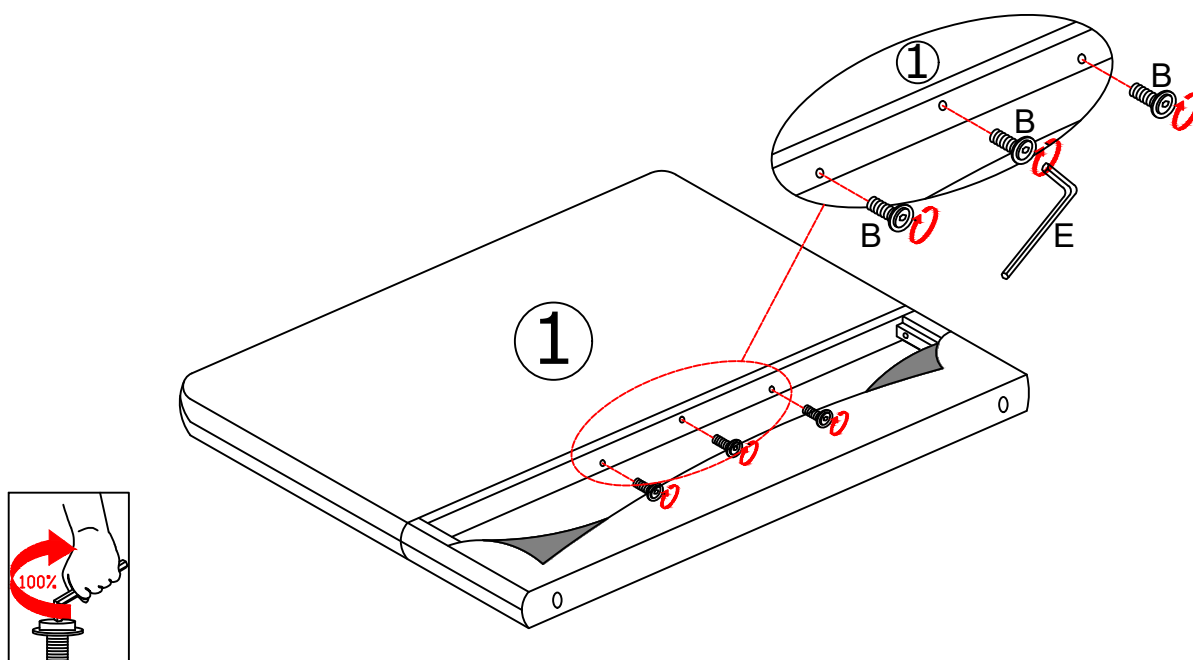

Open the unwoven fabric, attach two Headboards by using 3 bolts B with allen wrench E.

Step 4

D*2PCS

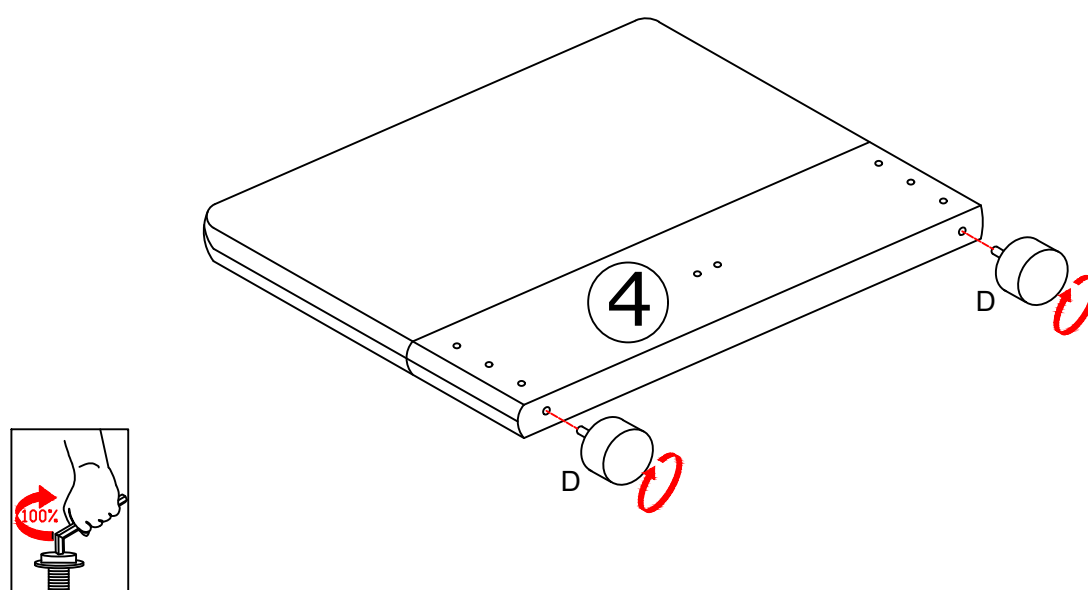


Attach Legs D to Base Headboard 4.

Step 5

M8*25
A*6PCS


E*1PC

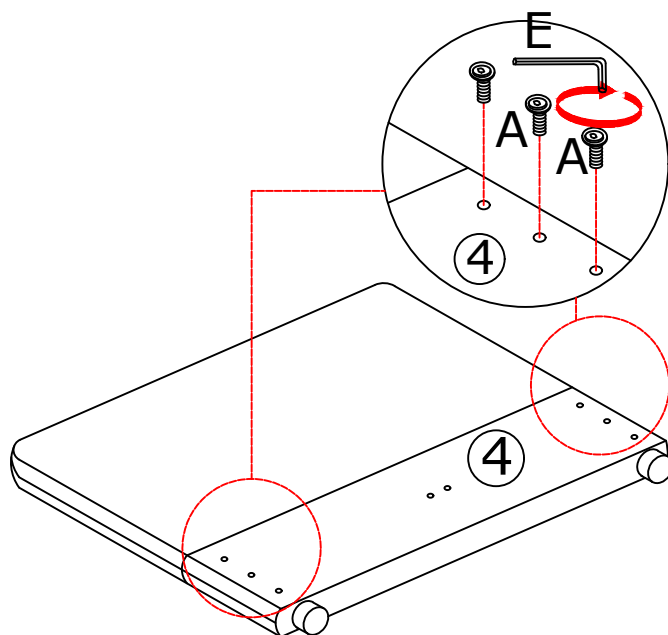

Attach Legs D to Base Headboard 4 by using bolts A with allen wrench E. Do not fully tighten the bolts.


Step 6

D*2PCS

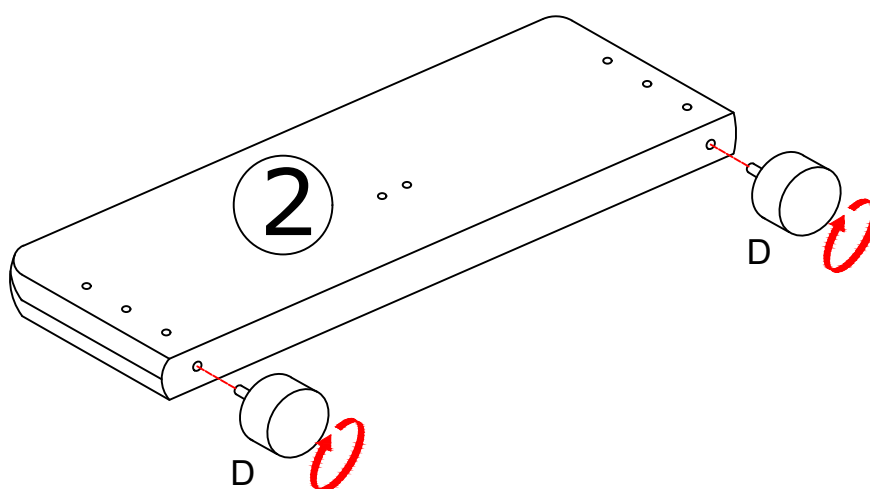




Attach Legs D to Footboard 2.

Step 7

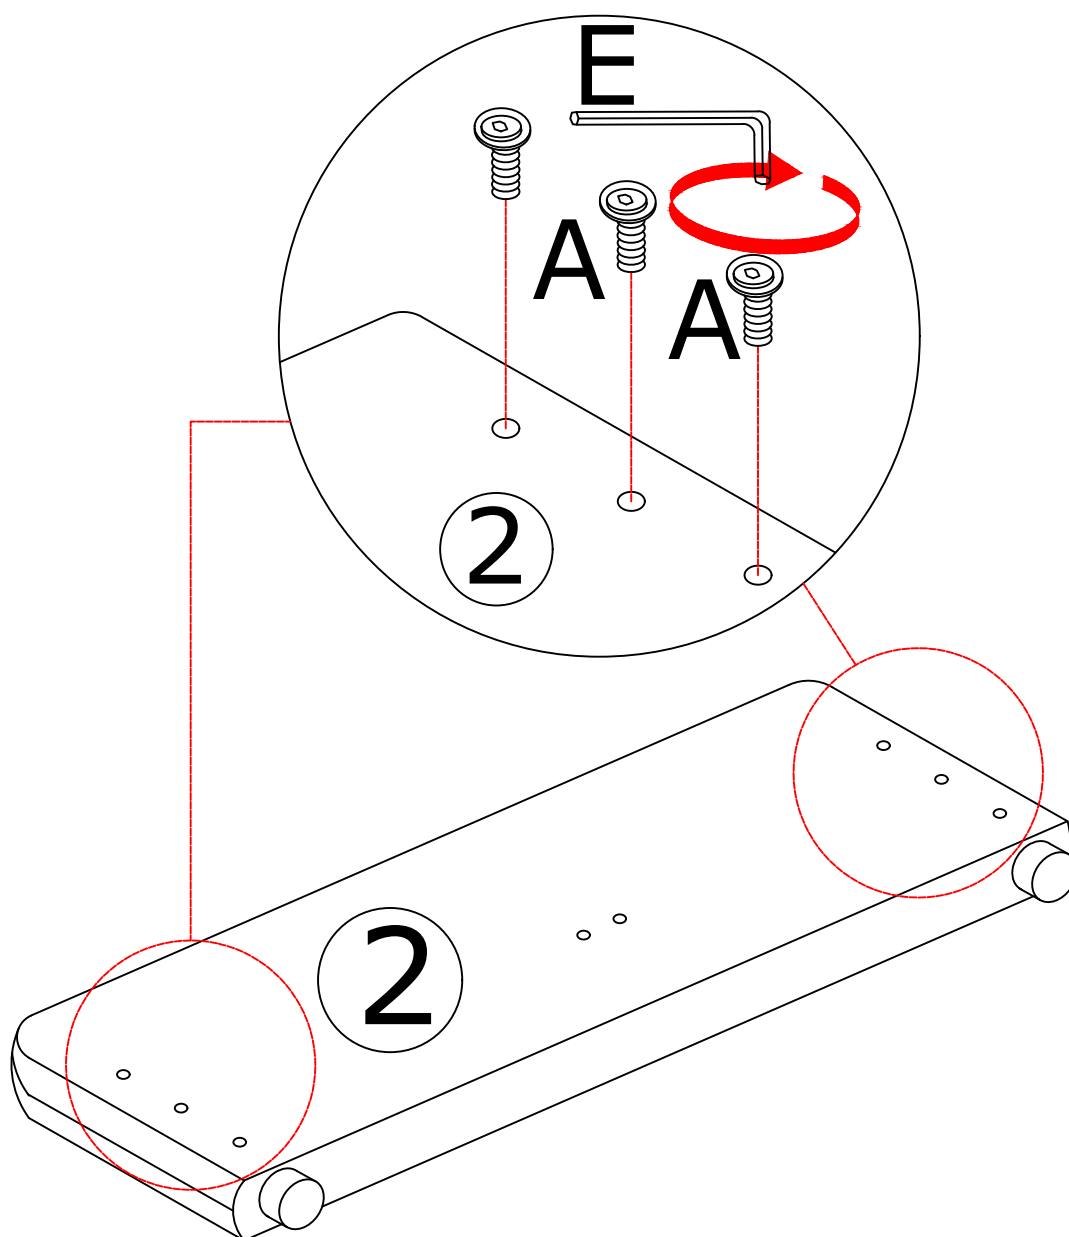



Attach Legs D to Footboard 2 by using bolts A with allen wrench E. Do not fully tighten the bolts.

Step 8

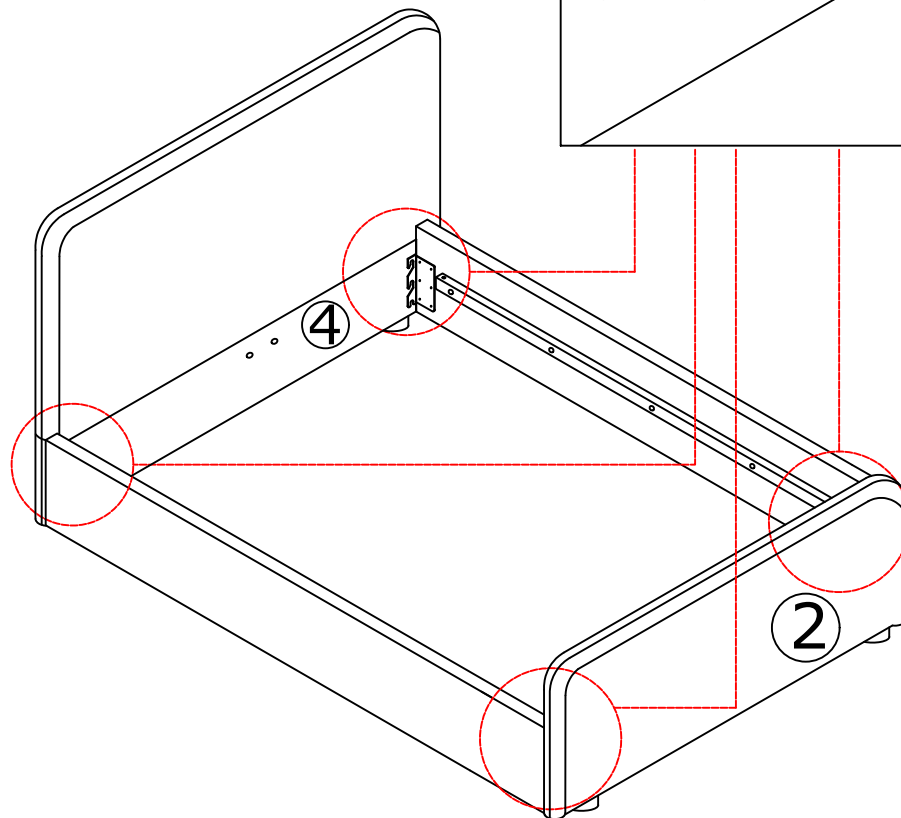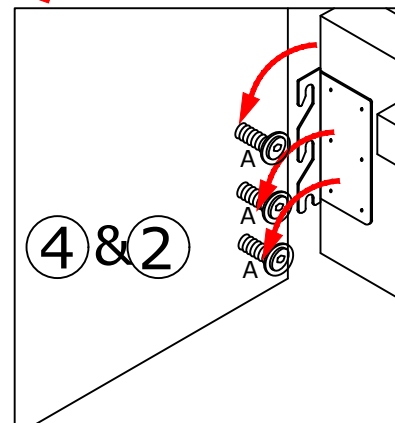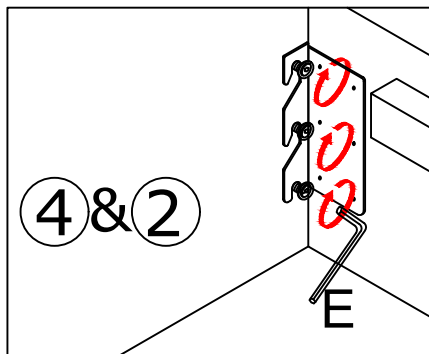


Attach the hinge on the side rails support bar 3 to Base Headboard 4 and Footboard, by using bolts with allen wrench E. Make sure bolts A are fully tighten and secure.

Step 9

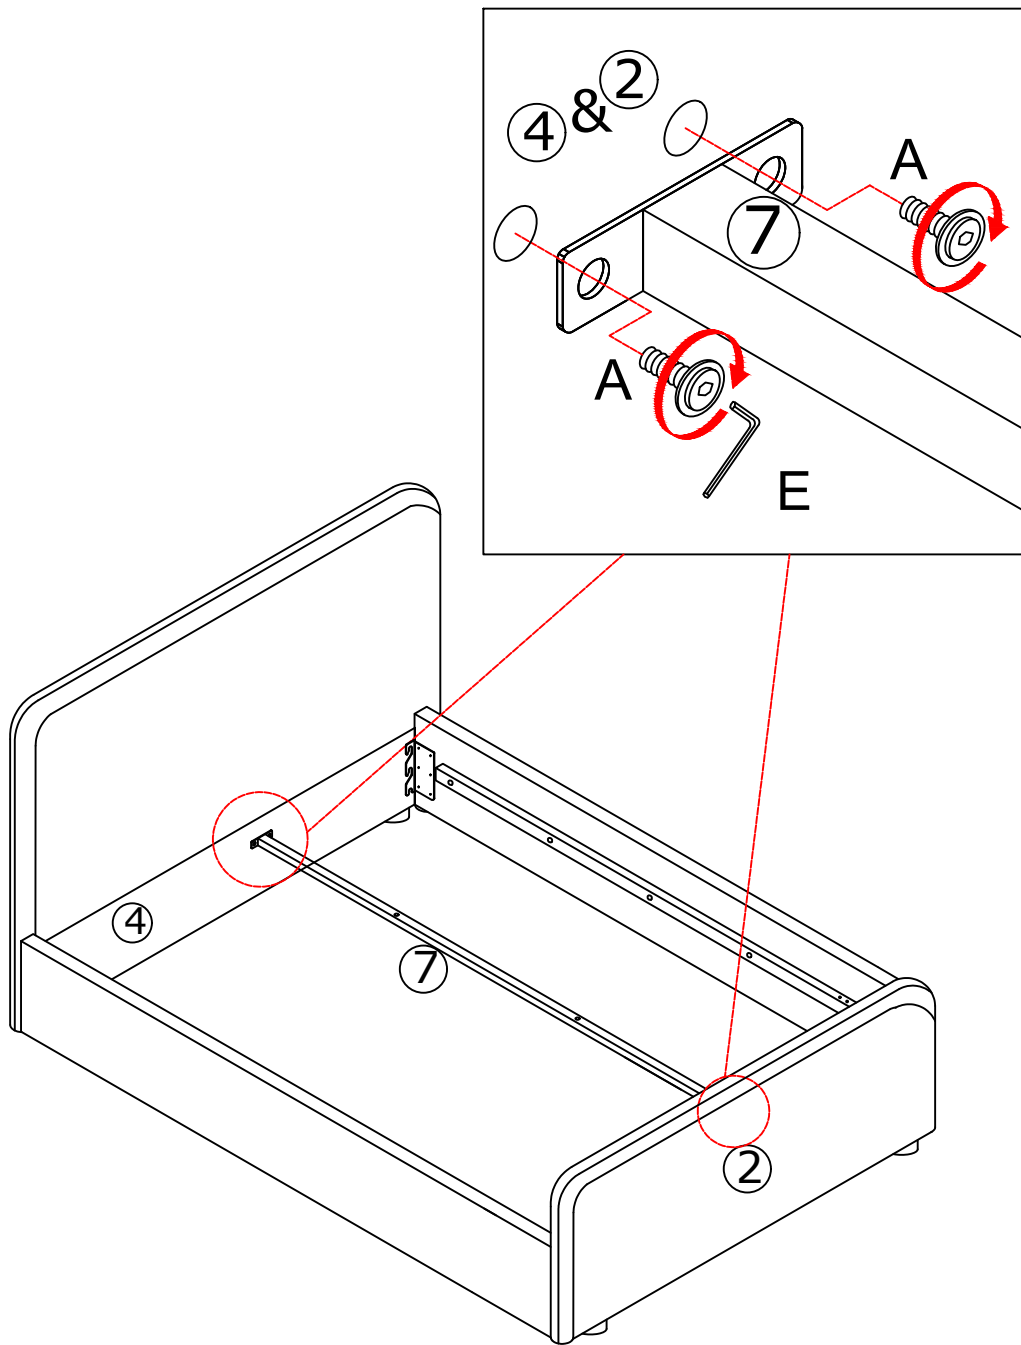


Attach middle crossbar 7 to Base Headboard 4 and Foot board 2 by using bolts A with allen wrench E. Make sure bolts are tighten.

Step 10

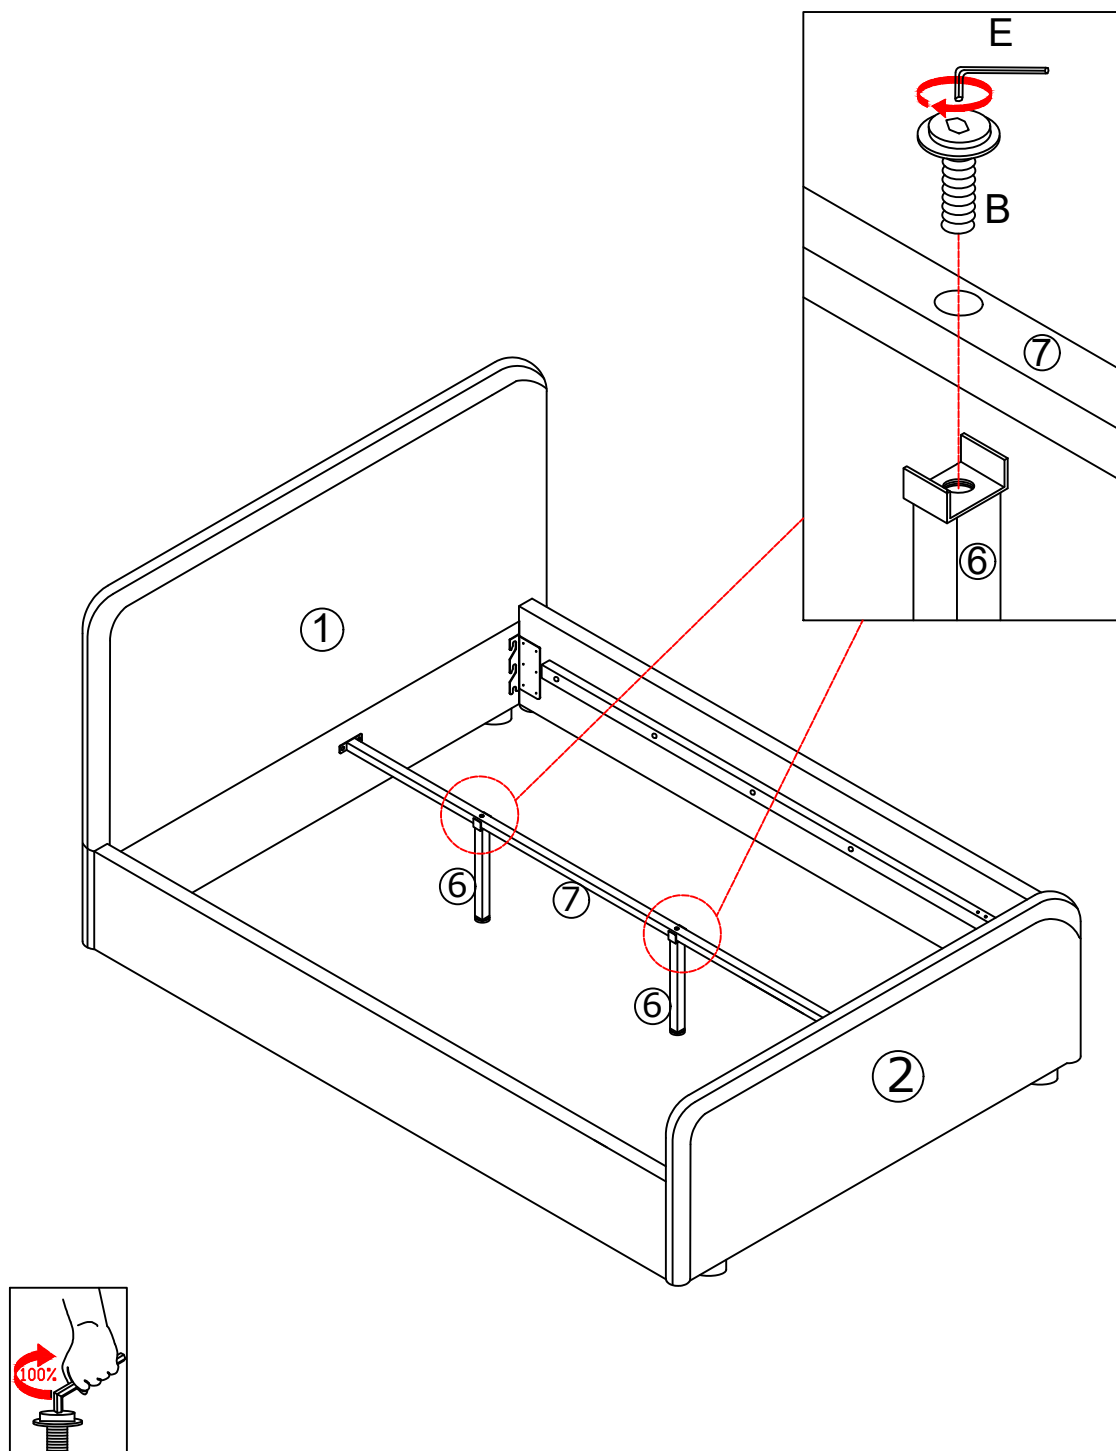


Attach the middle support leg 6 to crossbar 7 by using bolts B with allen wrench E.

Step 11

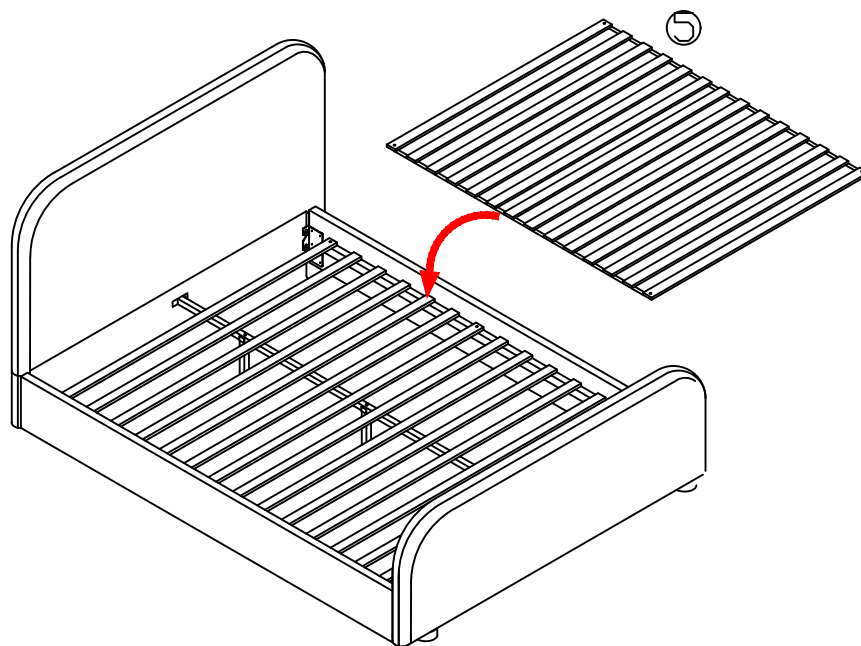

Lay slats (5) on the bedframe


Step 12

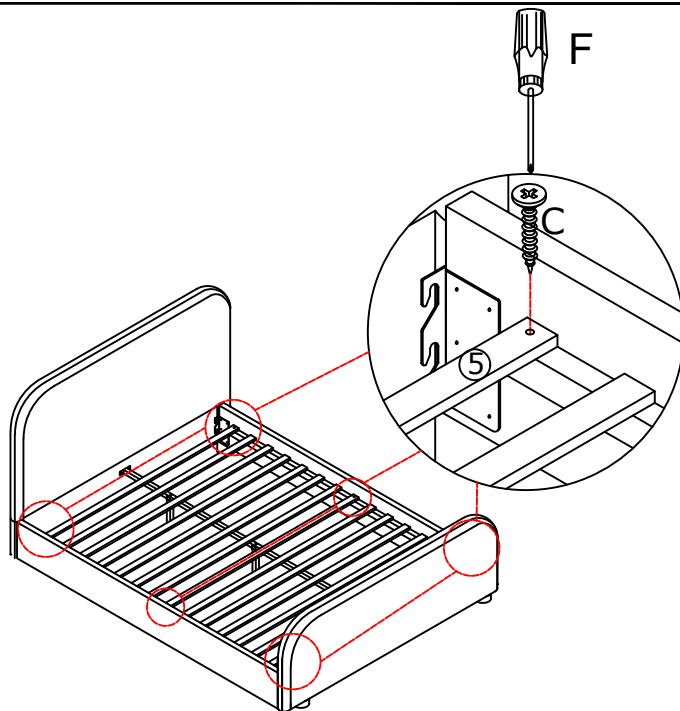

M4 x 25
C*6PCS

Secure all Flat noodles (5) to the rails on the side panel (3) using screws (C) and a screwdriver F.

Step 13

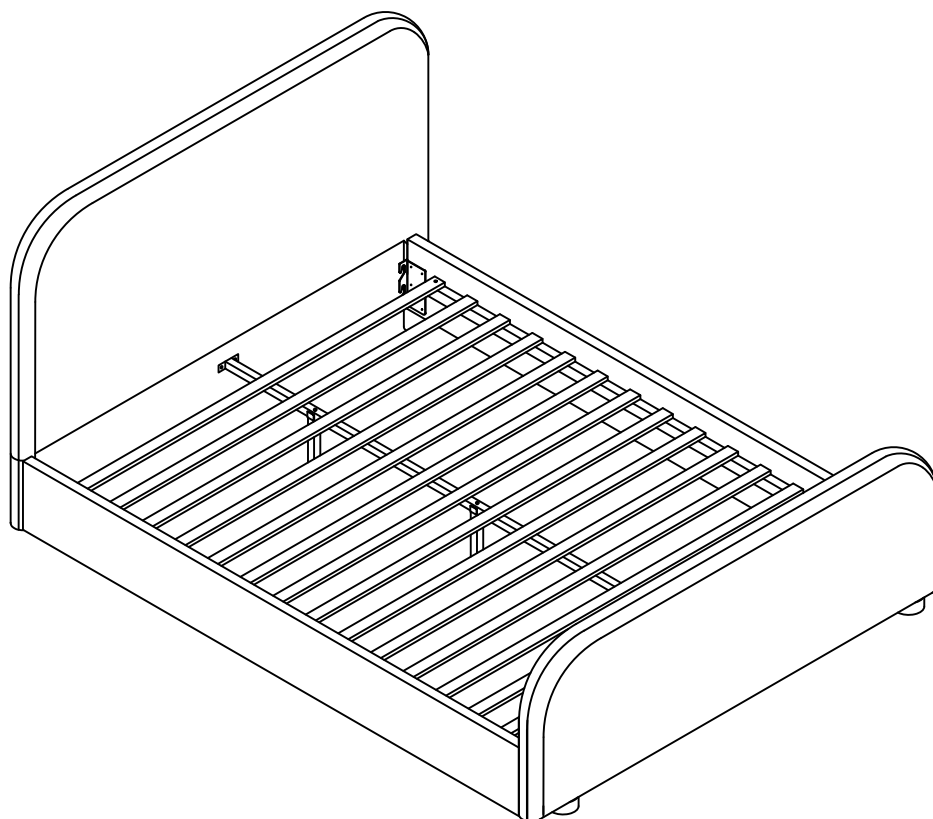

Your Bed is ready for use.
This Bed can only be used on a flat, level surface.

Place the Bed on a LEVEL SURFACE.
Inspect it and make sure all parts are adequately connected.
Don't push too hard, shake on the bed.
This would help to align all the parts at all the joint areas.
CAUTION 1: When tightening these screws, tighten sequentially.
DO NOT tighten any screw fully and then towards the next one.
This would cause the frame to warp.
If there is still wobbles, loosen the screws and execute this same process. DO NOT
tighten any screw fully and then towards the next one.
WARNING!! IF BED IS NOT STABLE, IT COULD LEAD TO DAMAGING THE PRODUCT.
Ensure all screws are fully locked into position.