

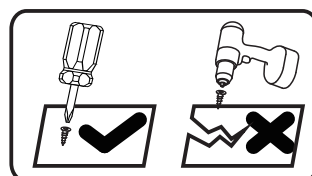
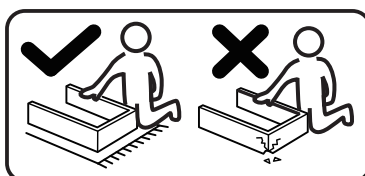
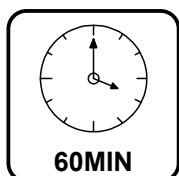


SRN SF7004


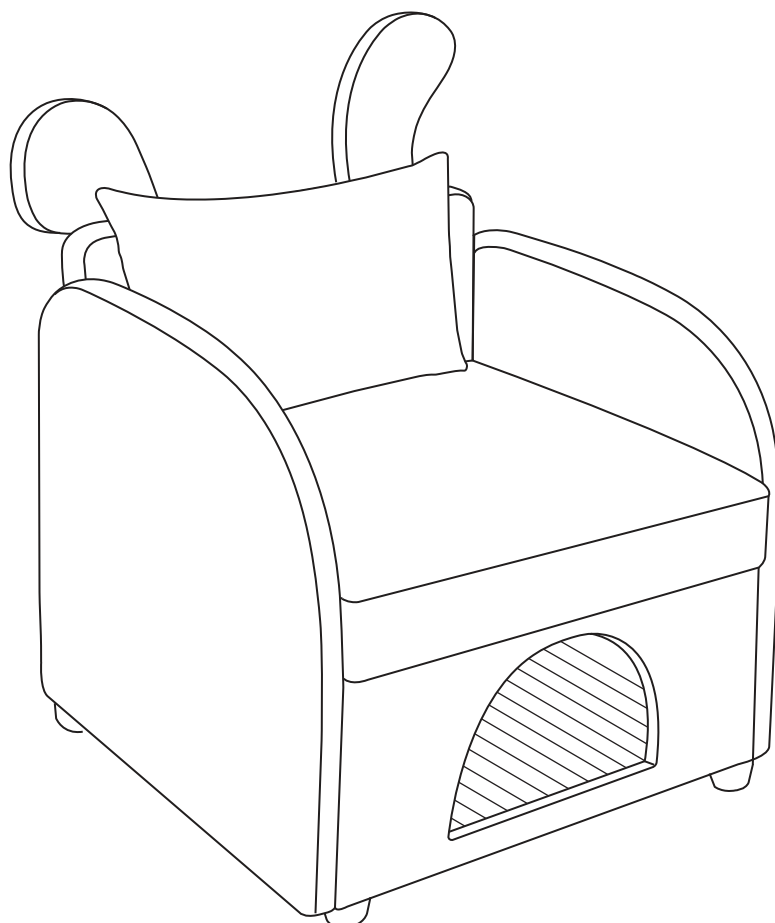


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

- Please confirm that all components are present before beginning assembly.
- For the protection of your furniture, place all parts on a clean and smooth surface to prevent any damage.
- Please assemble the furniture by 2 persons or more.
- Do not confuse similar screws.
- Do not tighten bolts fully until all parts are connected!
- Please periodically check all fitting and re-tighten as necessary.

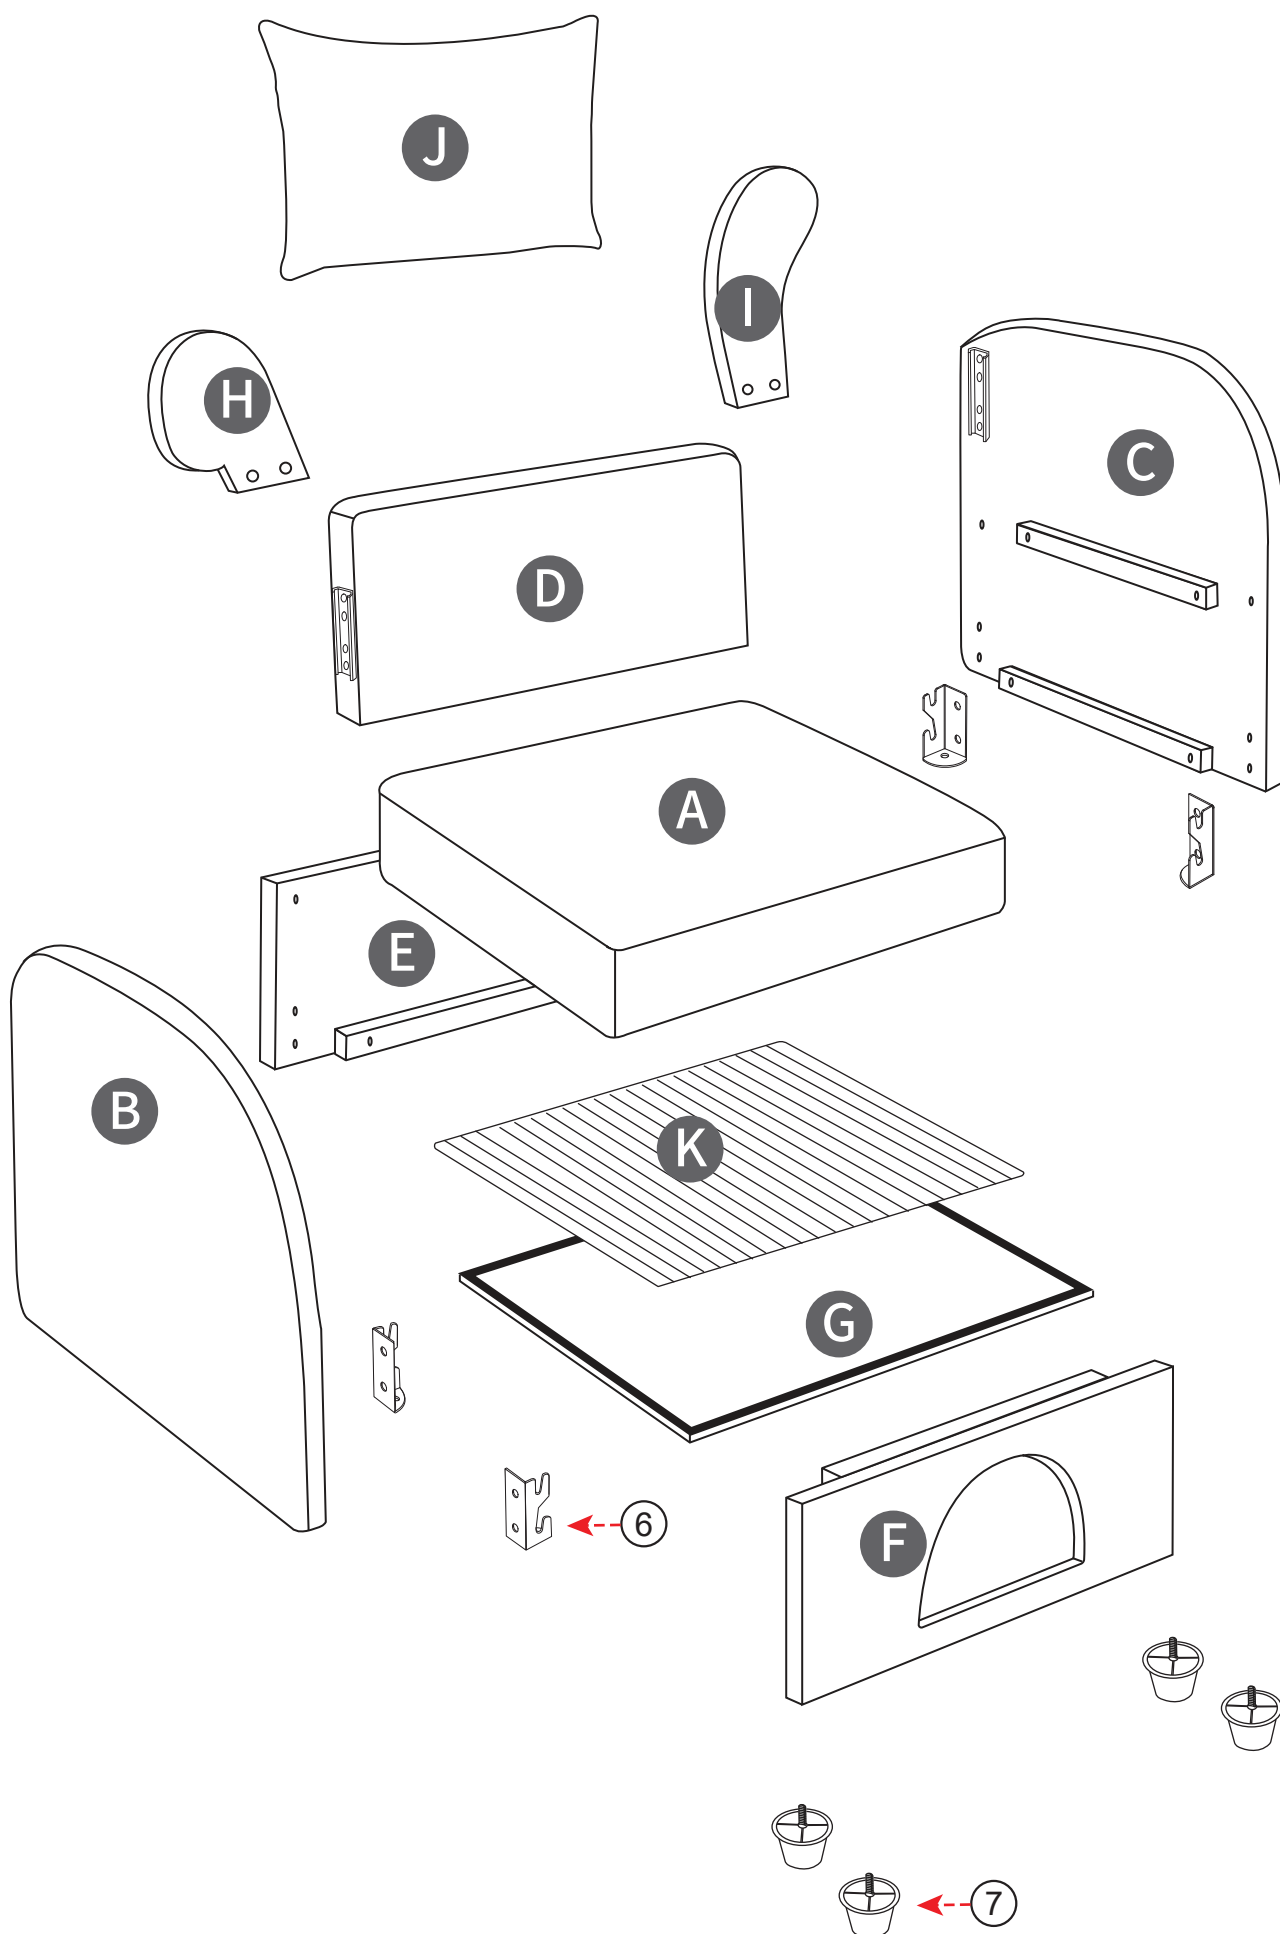

PACKING DETAILS: TOTAL 1 BOXES

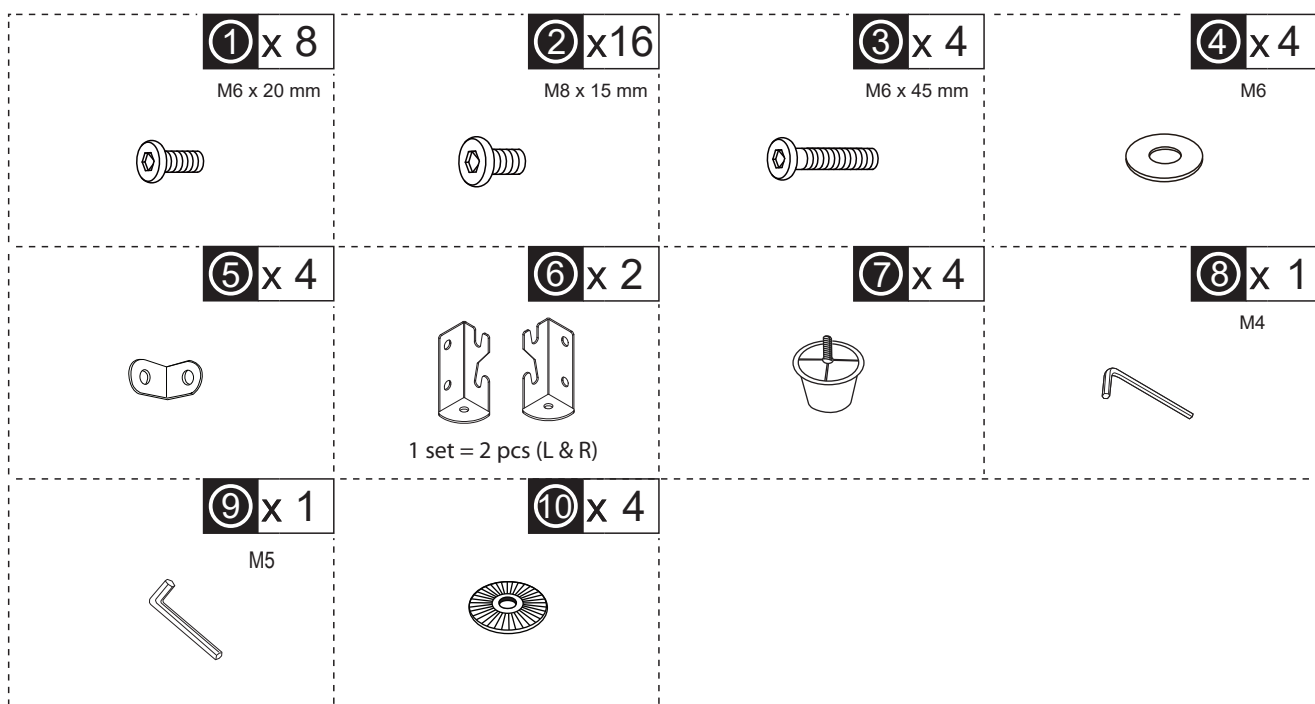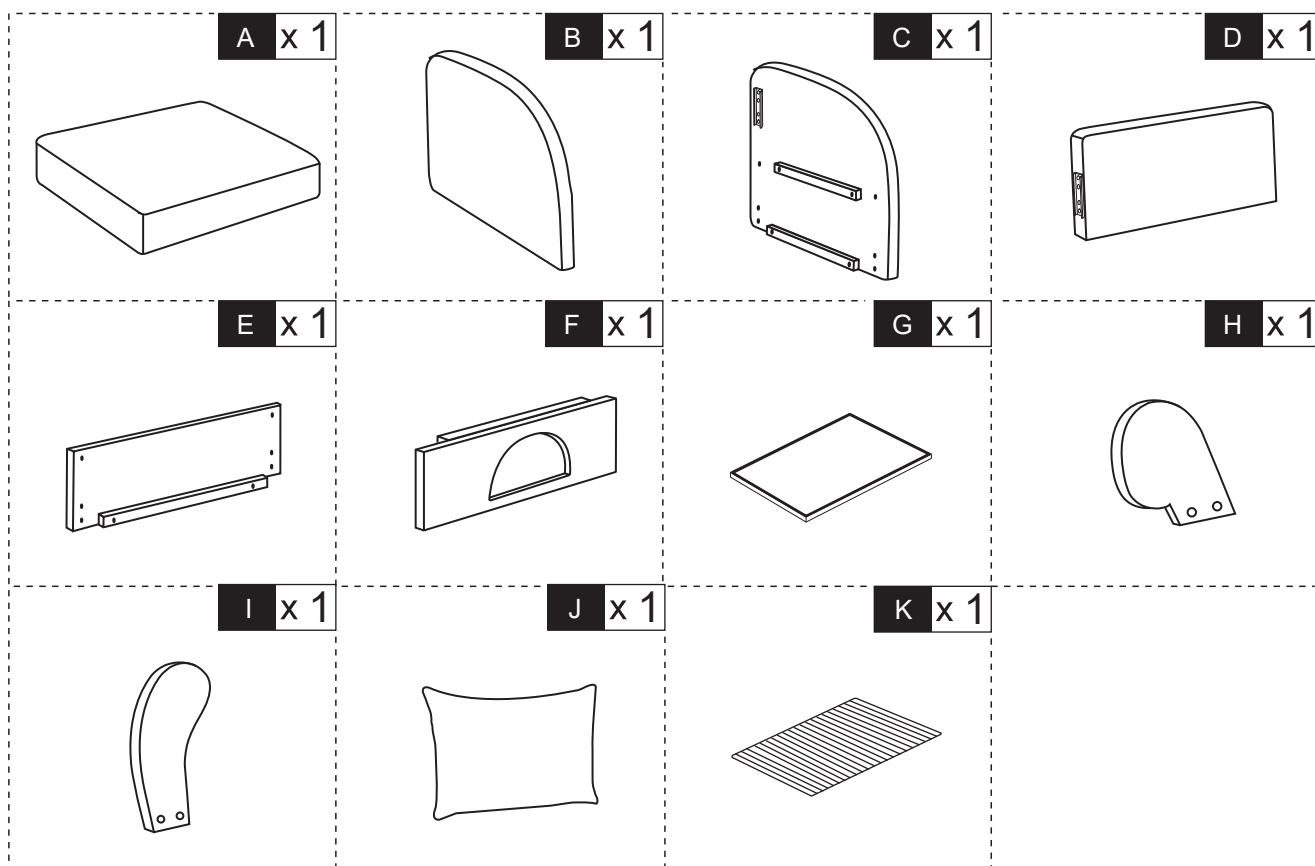




⑦ x 4



⑩ x 4





⑥ x 2




M8 x 15 mm


② x 8

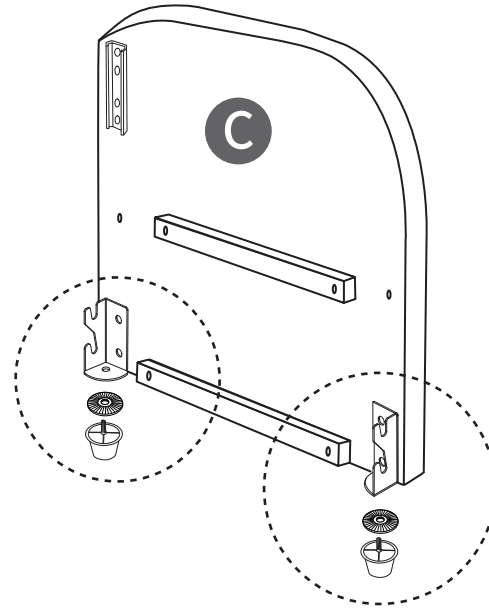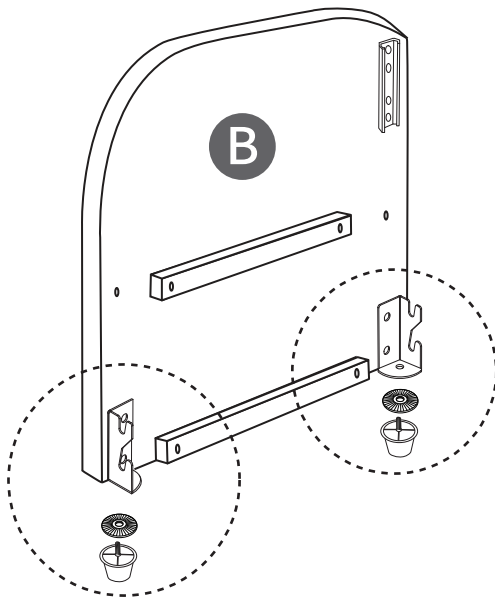

STEP 1.1

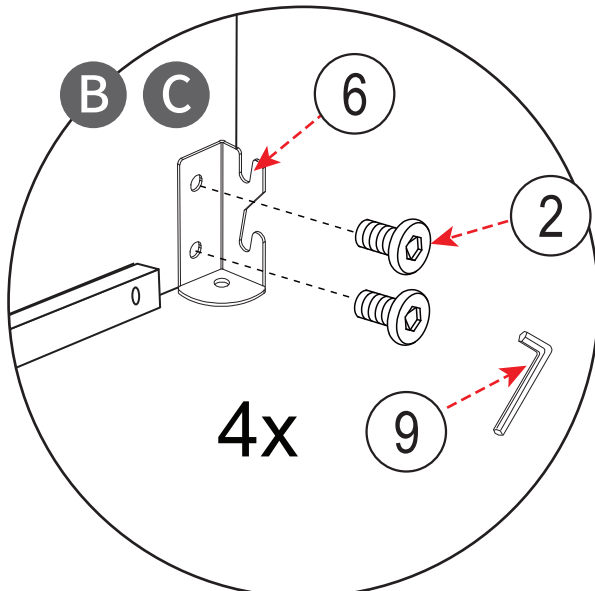

STEP 1.2

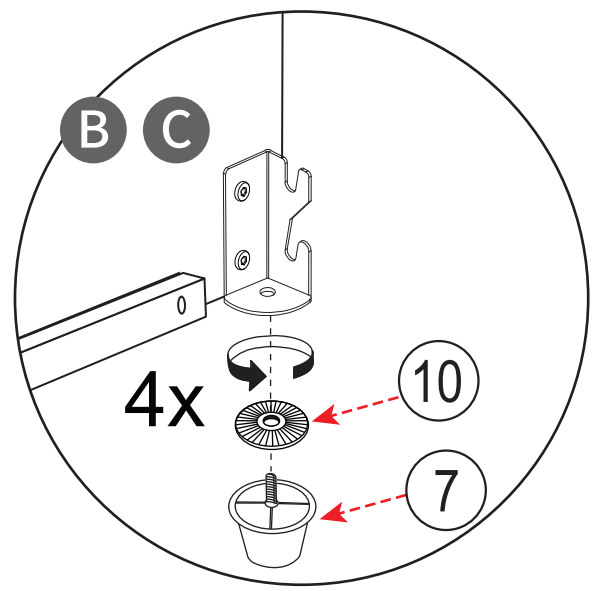






M8 x 15 mm

② x 8




4x


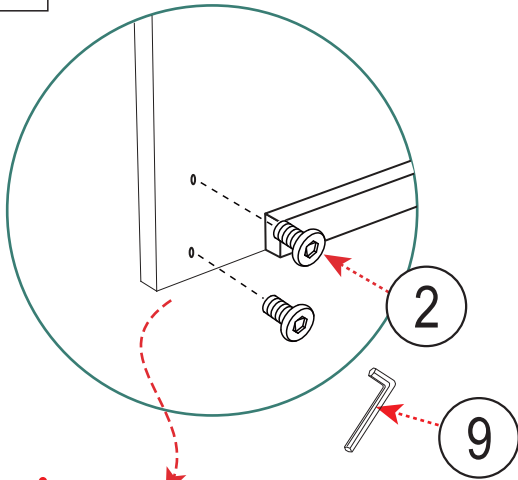


Do not fully tighten screws
before completing step 3.

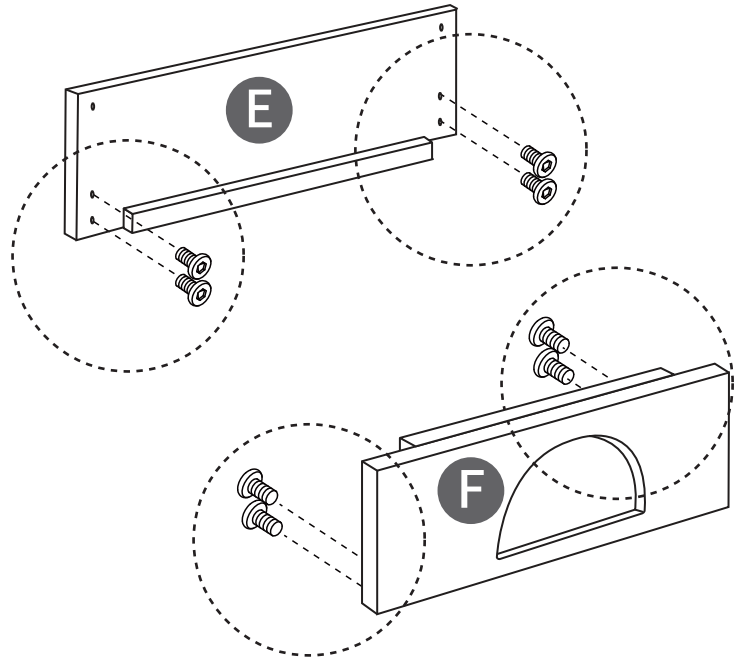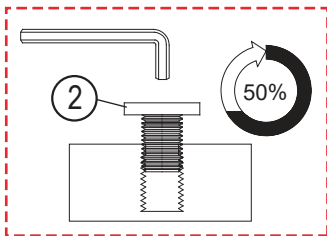

4x

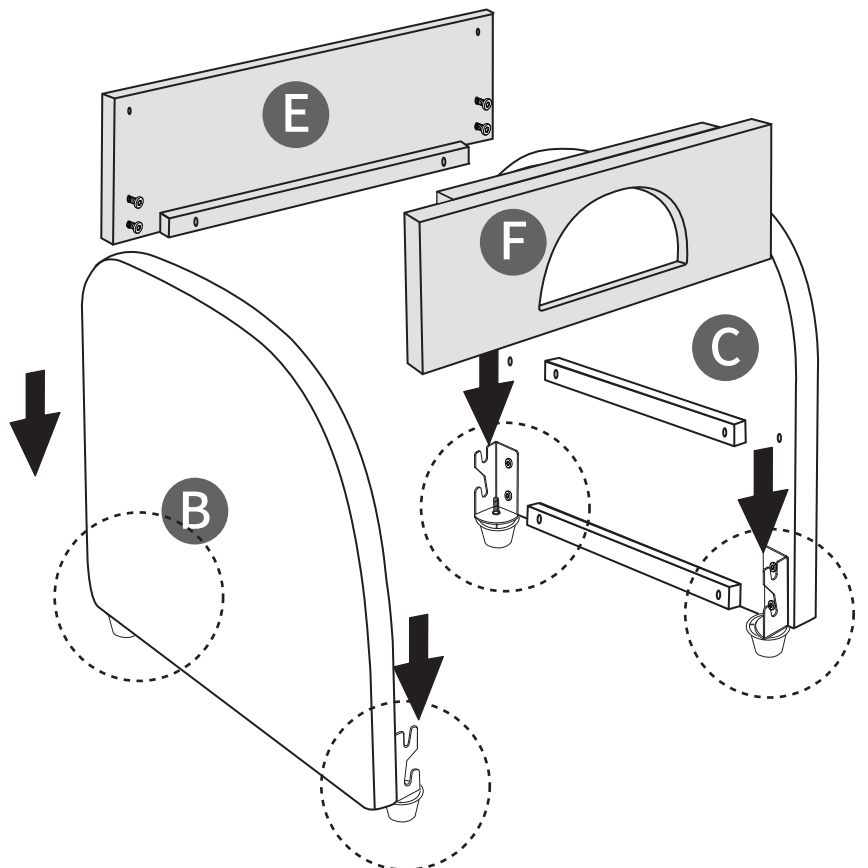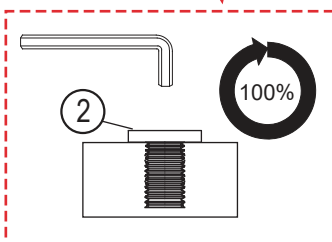
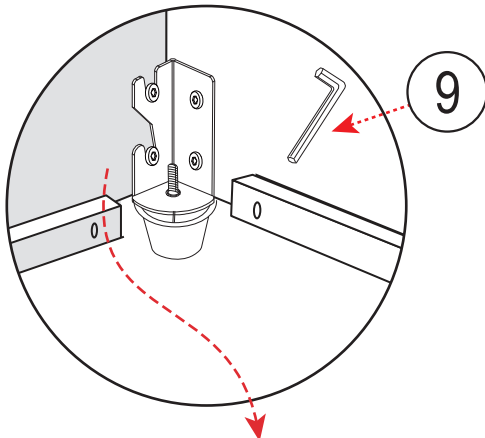


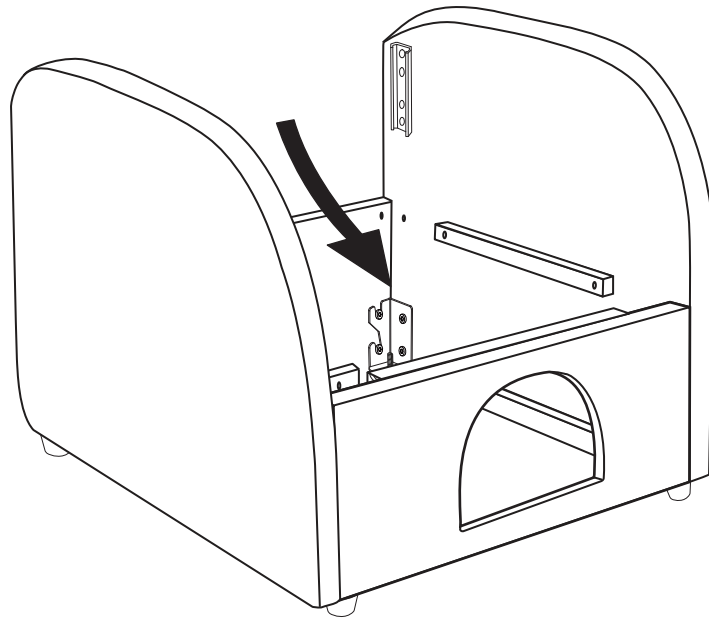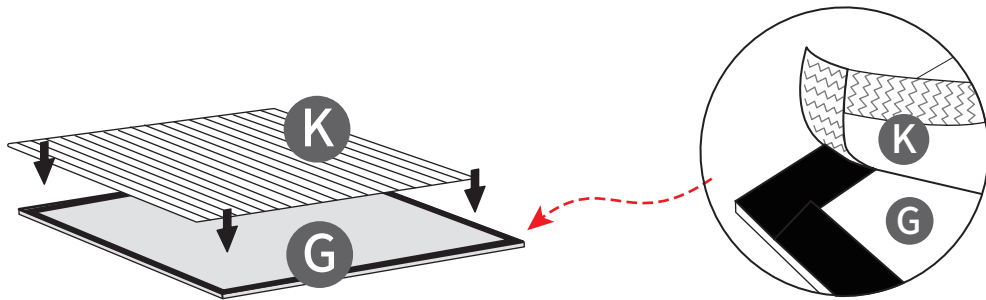


M6 x 20 mm

① x 8


⑤ x 4

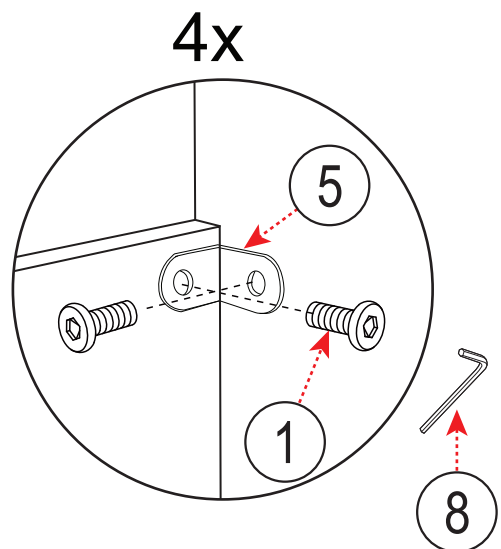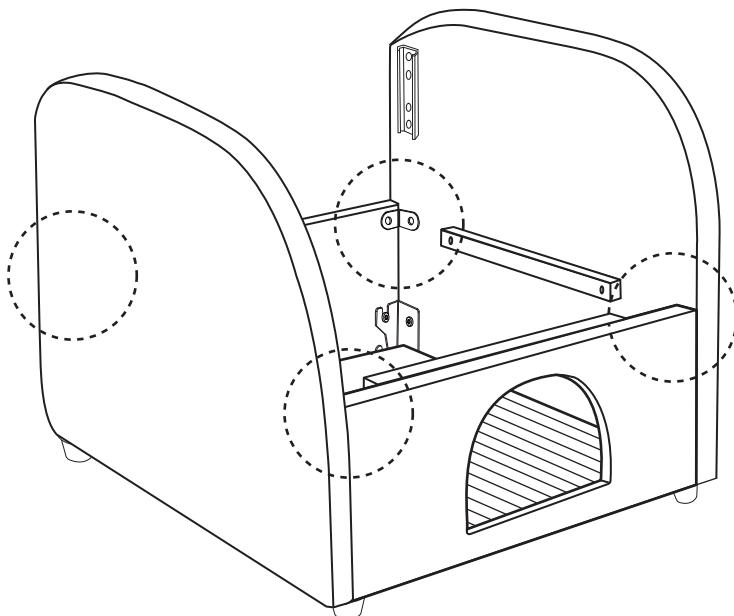

STEP 6.1

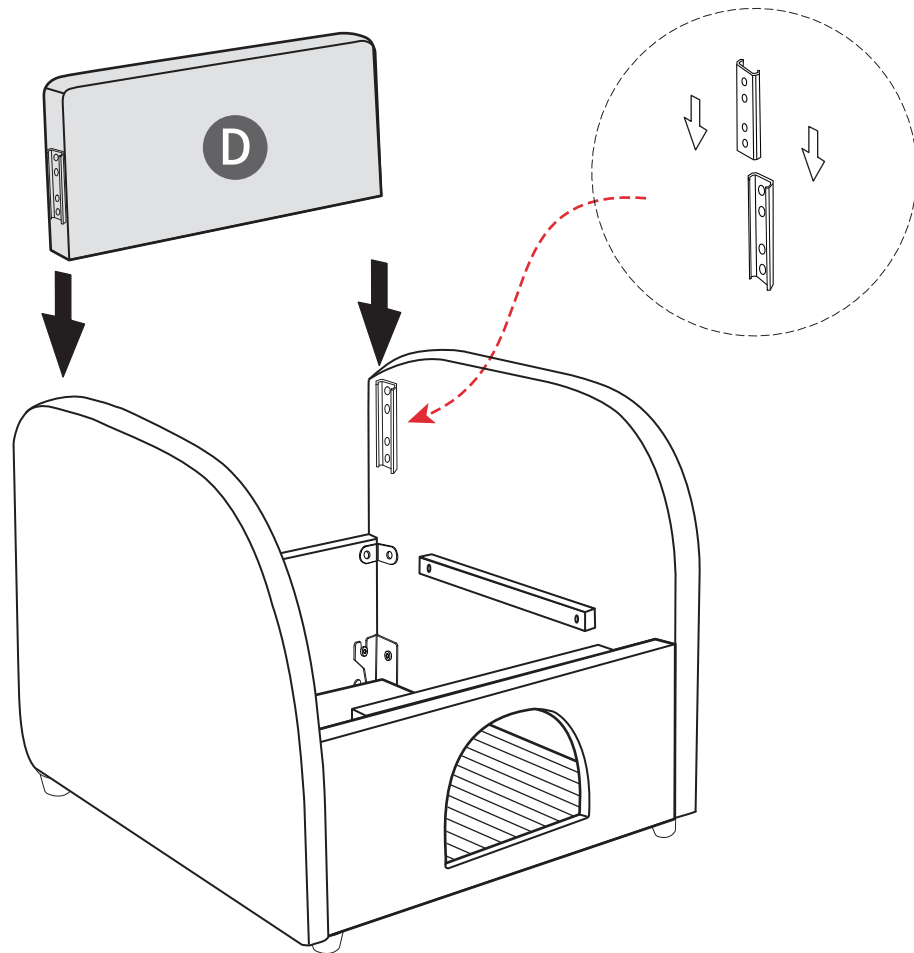

STEP 6.2

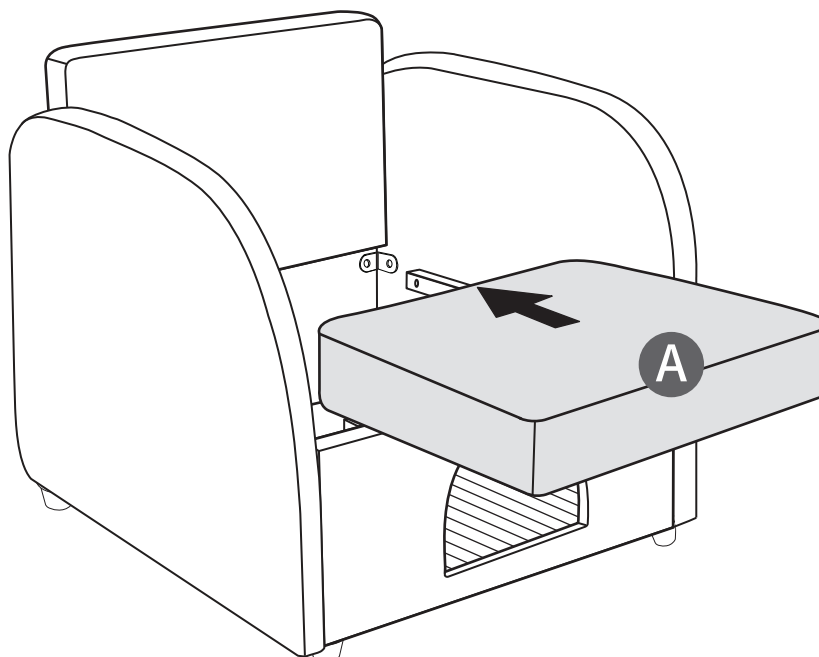



M6 x 45 mm






M6




③ x 4

④ x 4

2x

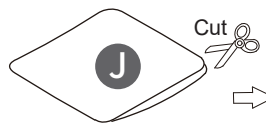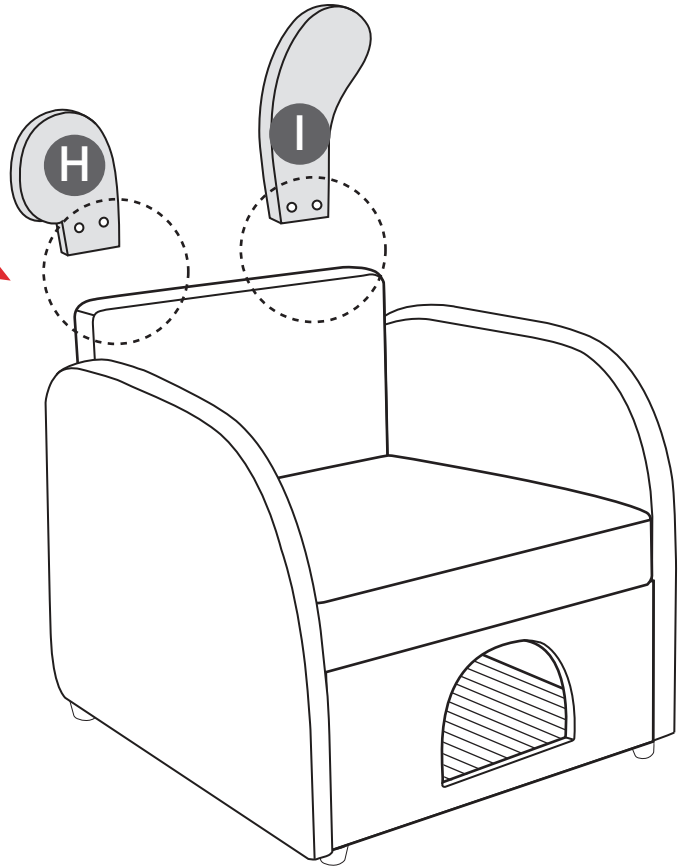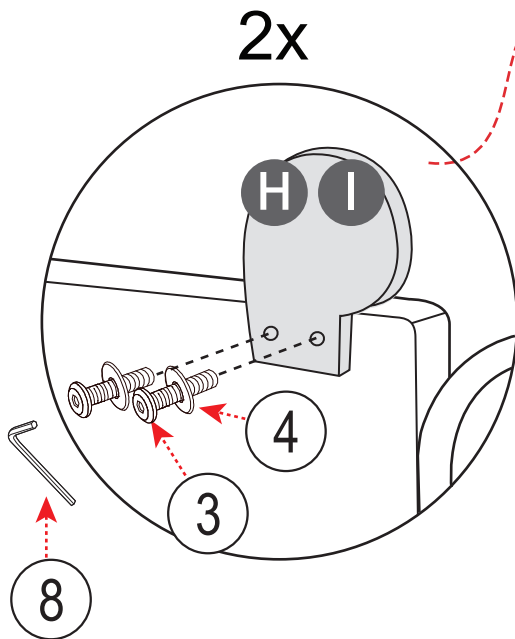



Cut

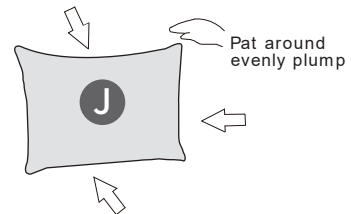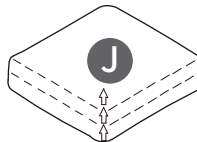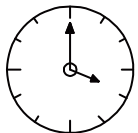Pat around
evenly plump

72h

The wrinkles on the cushion can be ironed with a steam iron, or after 72 hours, the wrinkles will disappear slowly.

Make the backrest pillows fuller by tapping and squeezing them.

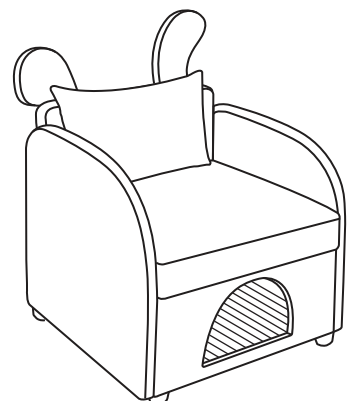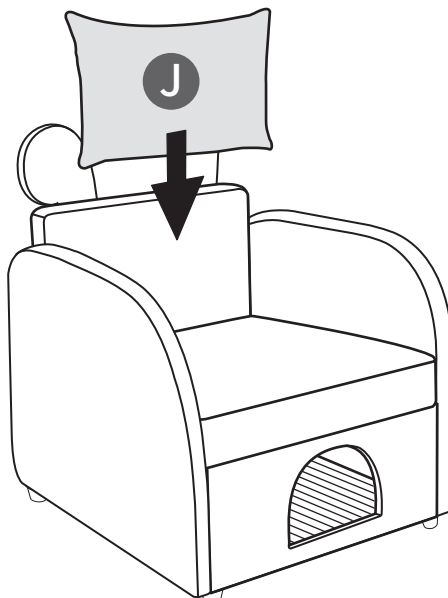

**COMPLETED
ASSEMBLY**