



N725P350825
 ASSEMBLY INSTRUCTIONS
 36 INCHES BATH VANITY (COMBO)

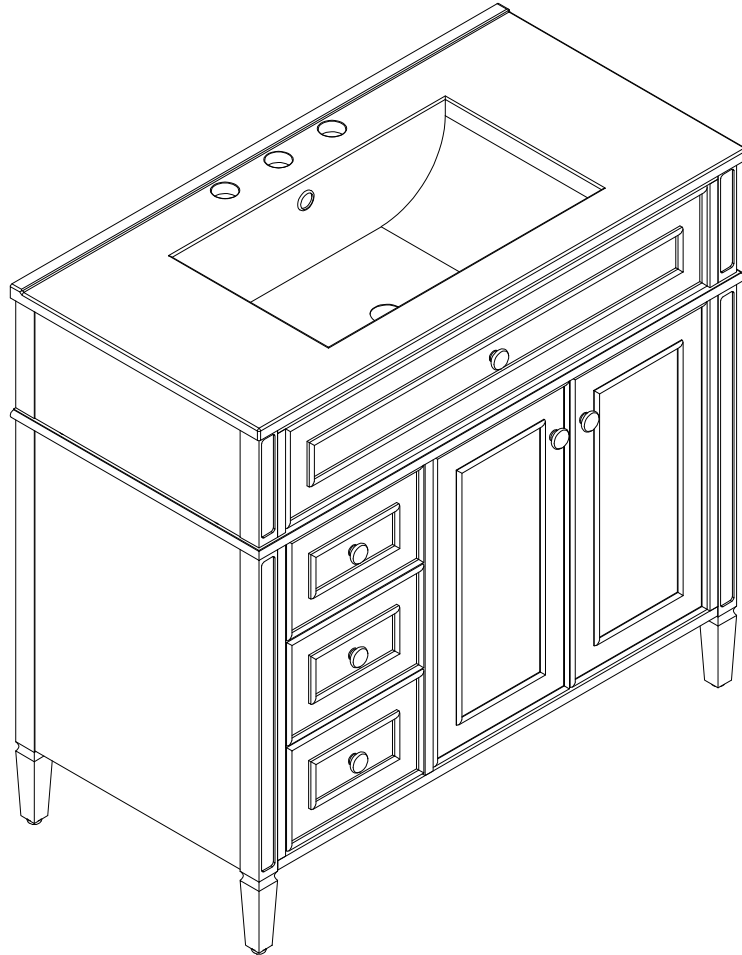

Thank you for purchasing this quality product. Be sure to check all packaging material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware. Compare with the parts list to be sure all parts are present.
"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


▲
 * Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!
 * Please assemble on a clean soft surface to avoid damage.

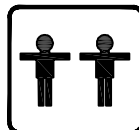

+



Tools Required



(Not included)

IMPORTANT:**PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY**

Before Installation


Important - Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.


- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.















Cam Lock Assembly Instructions

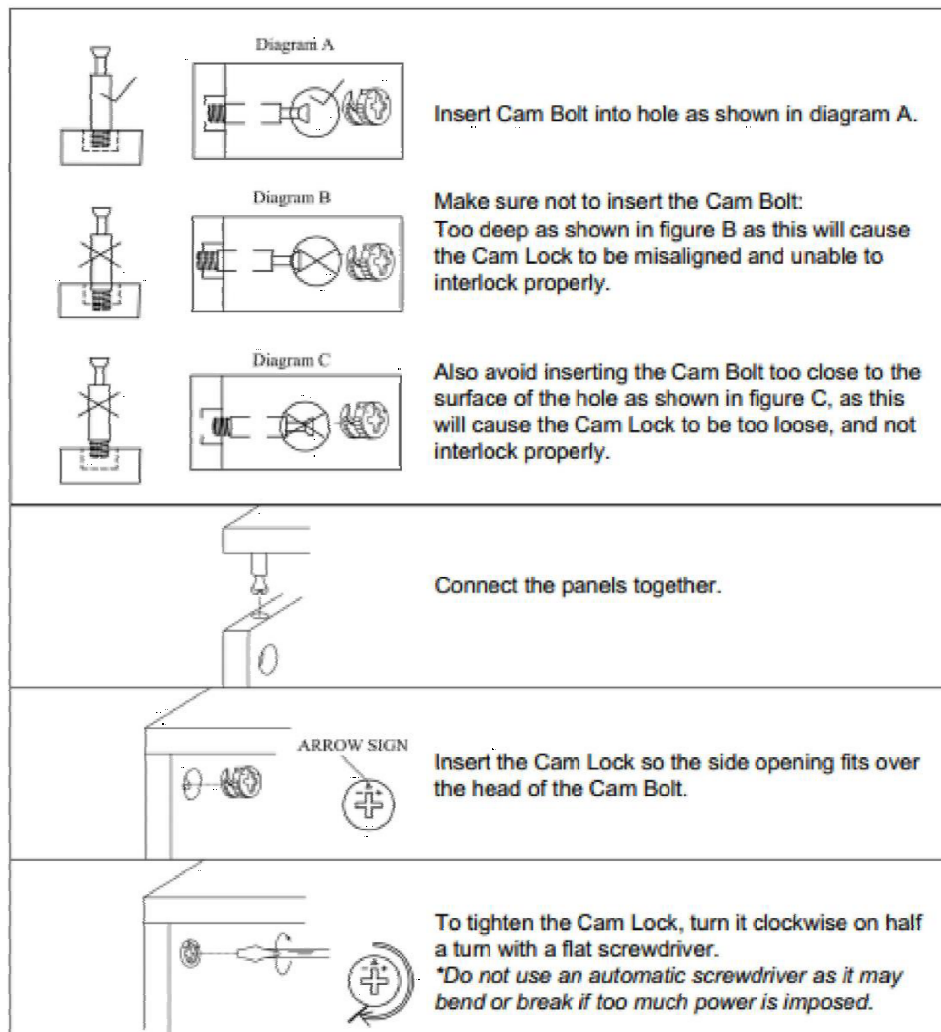





PRODUCT DETAILS

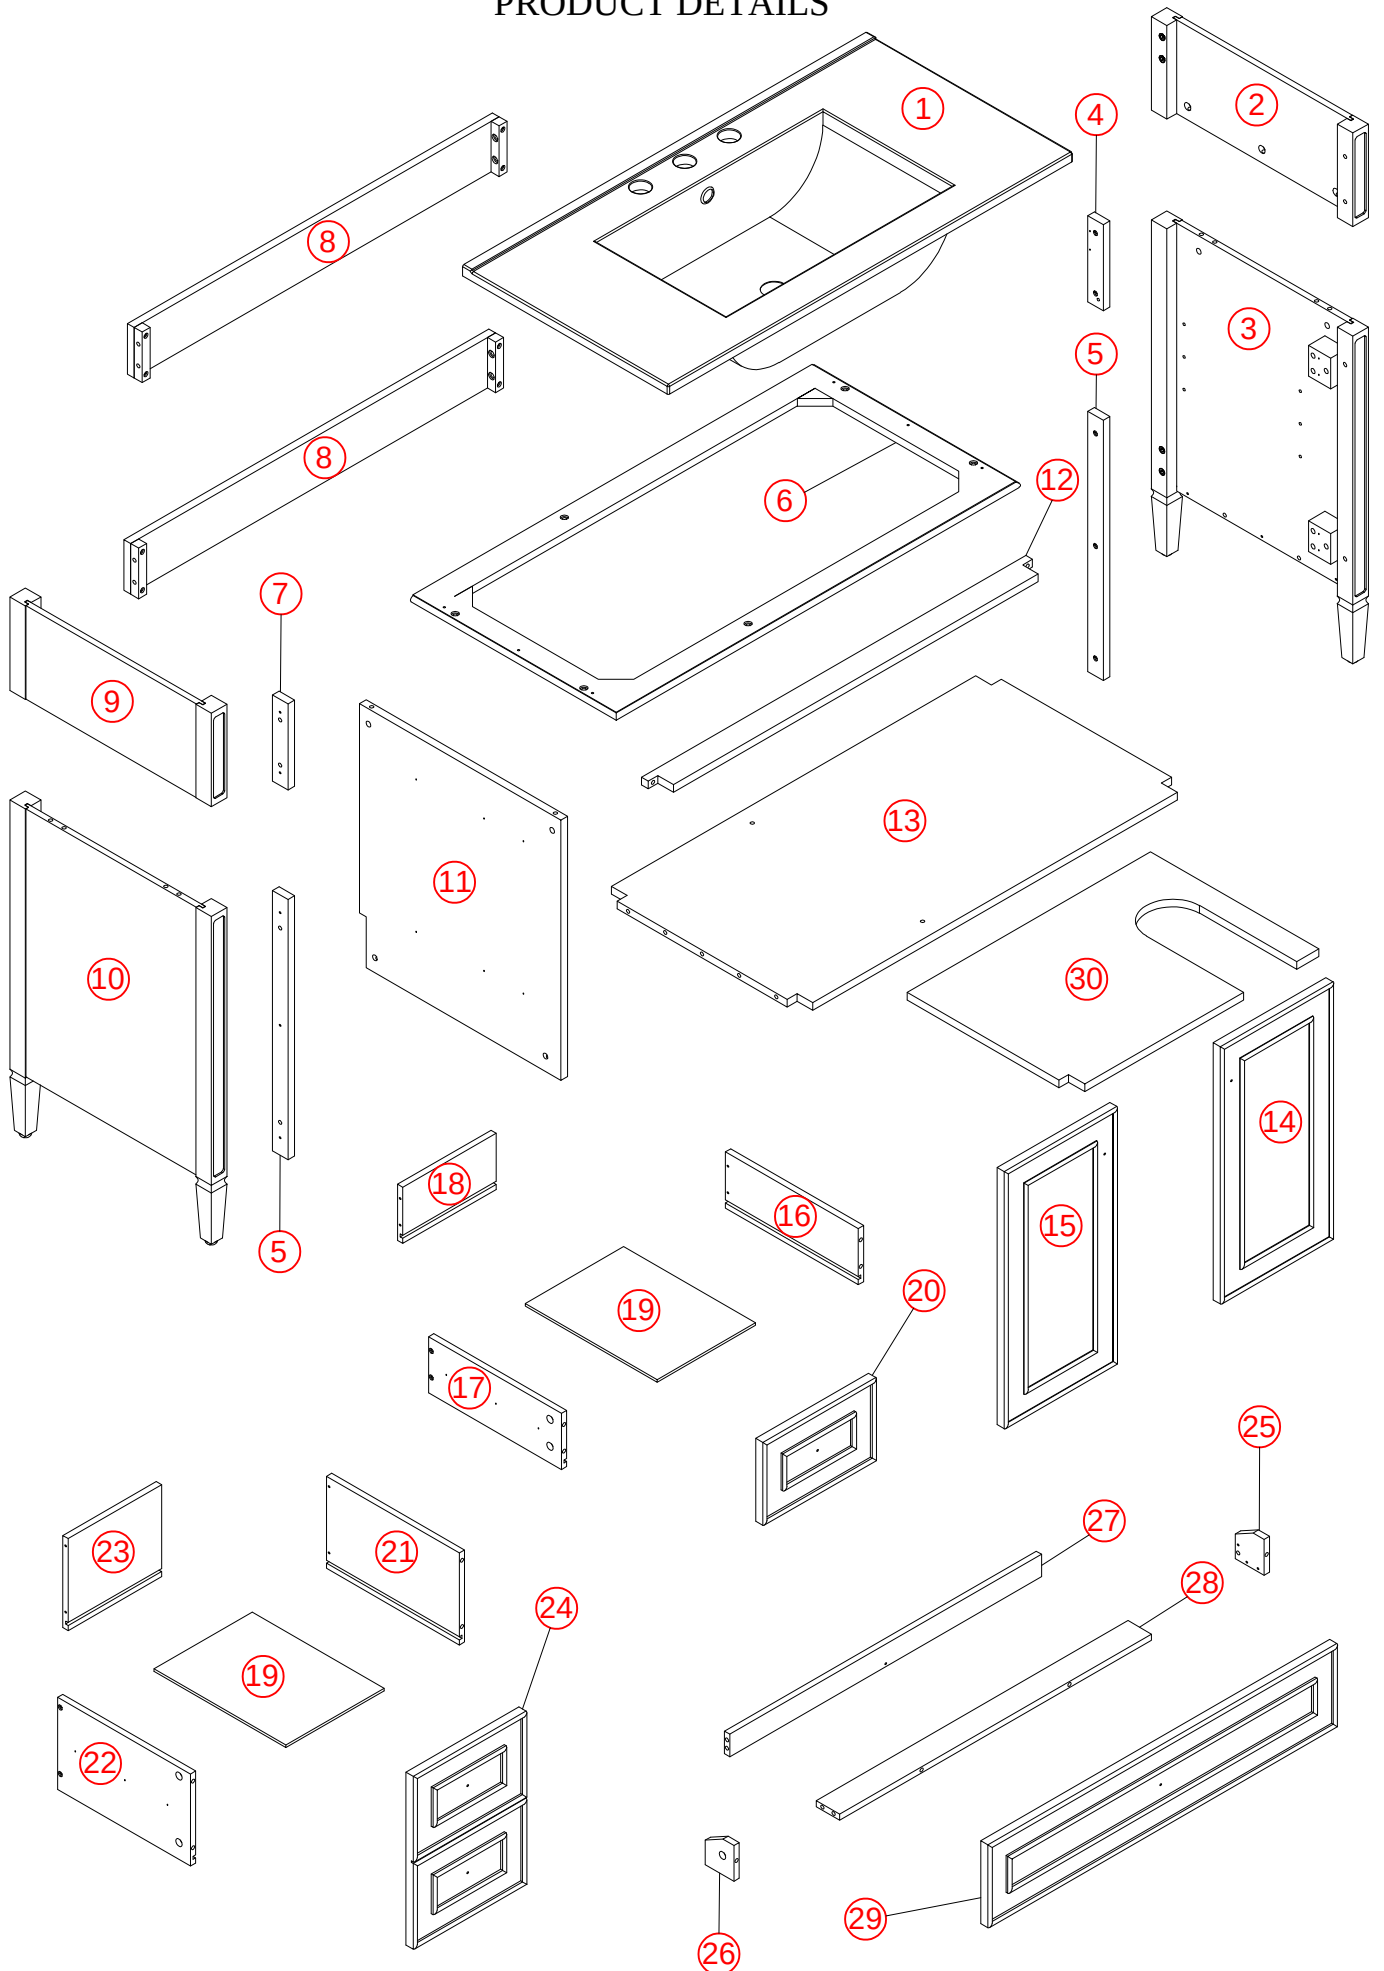

PARTS LIST

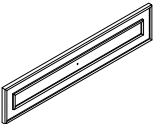①	SINK (LAVABO)		1PC	①⑥	RIGHT DRAWER FRONT 1		1PC
②	UPPER RIGHT HIP		1PC	①⑦	LEFT DRAWER FRONT 1		1PC
③	LOWER RIGHT HIP		1PC	①⑧	DRAWER BACK BOARD 1		1PC
④	SIDE BAR UPPER RIGHT		1PC	①⑨	DRAWER BOTTOM		2PCS
⑤	LOWER RIGHT LEFT SIDE BAR		2PCS	②①	DRAWER FACE 1		1PC
⑥	MIDDLE FRAME		1PC	②②	RIGHT DRAWER FRONT 2		1PC
⑦	SIDE BAR UPPER LEFT		1PC	②③	LEFT DRAWER FRONT 2		1PC
⑧	REAR CROSSBAR		2PCS	②④	DRAWER BACK BOARD 2		1PC
⑨	UPPER LEFT HIP		1PC	②⑤	DRAWER FACE 2		1PC
⑩	LOWER LEFT HIP		1PC	②⑥	RIGHT SIDE FLIP DRAWER		1PC
⑪	PARTITION BOARD		1PC	②⑦	LEFT SIDE FLIP DRAWER		1PC
⑫	FRONT UPPER BAR		1PC	②⑧	BACK OF FLIP-UP DRAWER		1PC
⑬	BOTTOM BOARD		1PC	②⑨	FLIP-UP DRAWER BOTTOM		1PC
⑭	RIGHT DOOR PANEL		1PC	③①	FLIP-OFF DRAWER FRONT		1PC
⑮	LEFT DOOR PANEL		1PC	③②	LOWER LEFT DRAWER		1PC


HARDWARE LIST

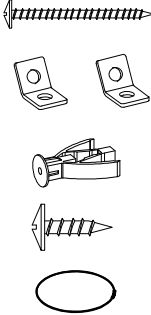Ⓐ	A1 : D300MM 	4SET	Ⓛ	Ø30MM 	6PCS
	A2 : D300MM 				
Ⓑ	3.5*10MM 	30PCS	Ⓜ	M4*20MM 	6PCS
Ⓒ	Ø5*35MM 	31PCS	Ⓝ	L45MM 	3PCS
Ⓓ	Ø 8 * 30MM 	18PCS	Ⓞ	L15MM 	6PCS
Ⓔ	4*25MM 	10PCS	Ⓟ	3.5*12MM 	10PCS
Ⓕ	M6*30MM 	10PCS	Ⓠ	HANDLE 	1PC
Ⓖ	L4*58MM 	1PC	Ⓡ	M4*50MM 	8PCS
Ⓗ	M6*45MM 	8PCS	Ⓢ	HINGES 	4PCS
Ⓘ	Ø 15 	31 PCS	Ⓣ	Ø 10*10MM 	8PCS
Ⓙ	L45MM 	3PCS	Ⓡ		2SET
Ⓚ	3.5*15MM 	30PCS			

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)



STEP 1

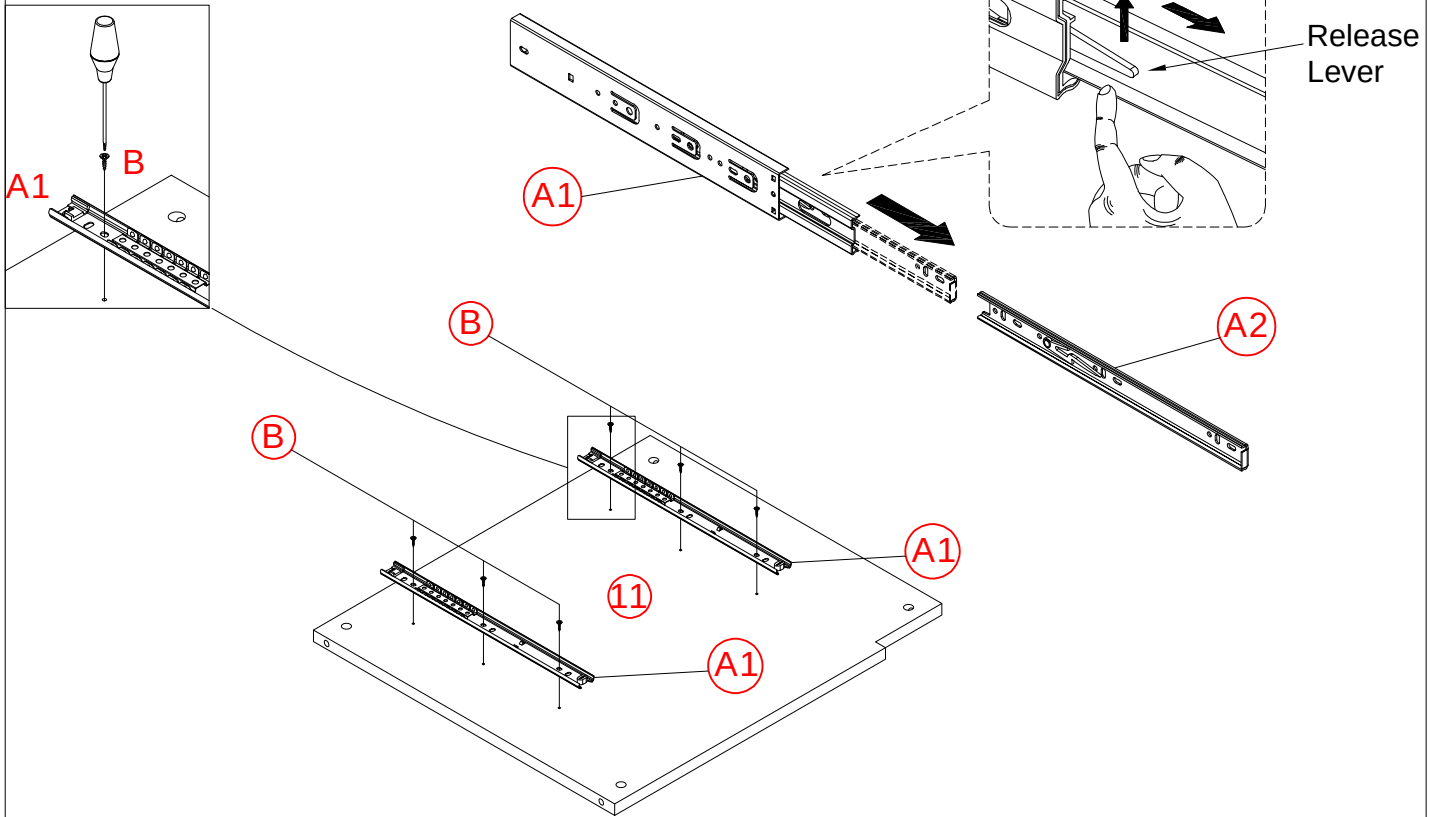

(A)

L45*300MM



2PCS



(B)

3.5*10MM



6PCS

STEP 2

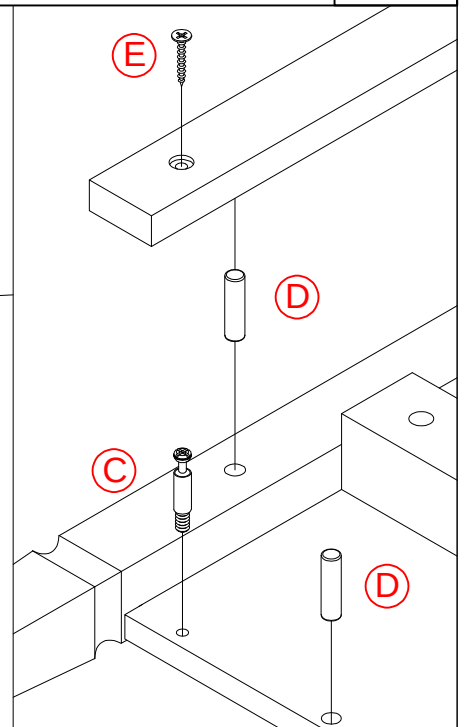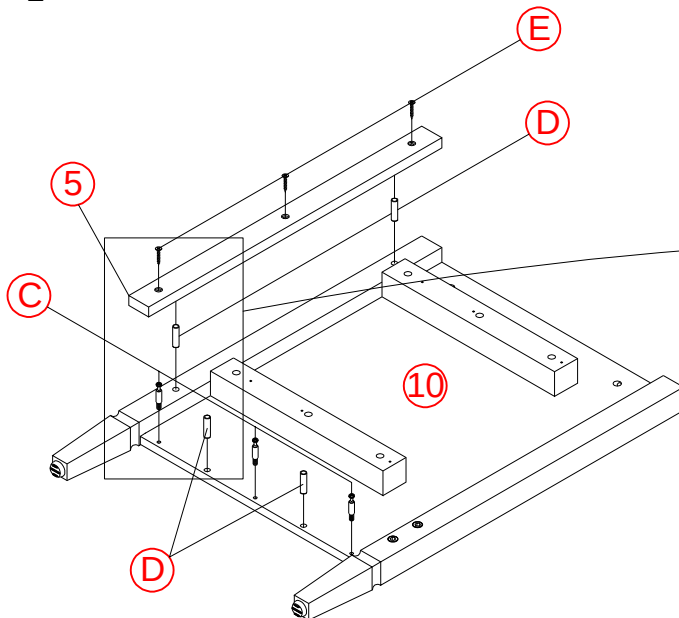

(C)


Ø5*35MM



3PCS

(E)

4*25MM



3PCS


(D)

Ø 8 * 30MM




4PCS

STEP 3

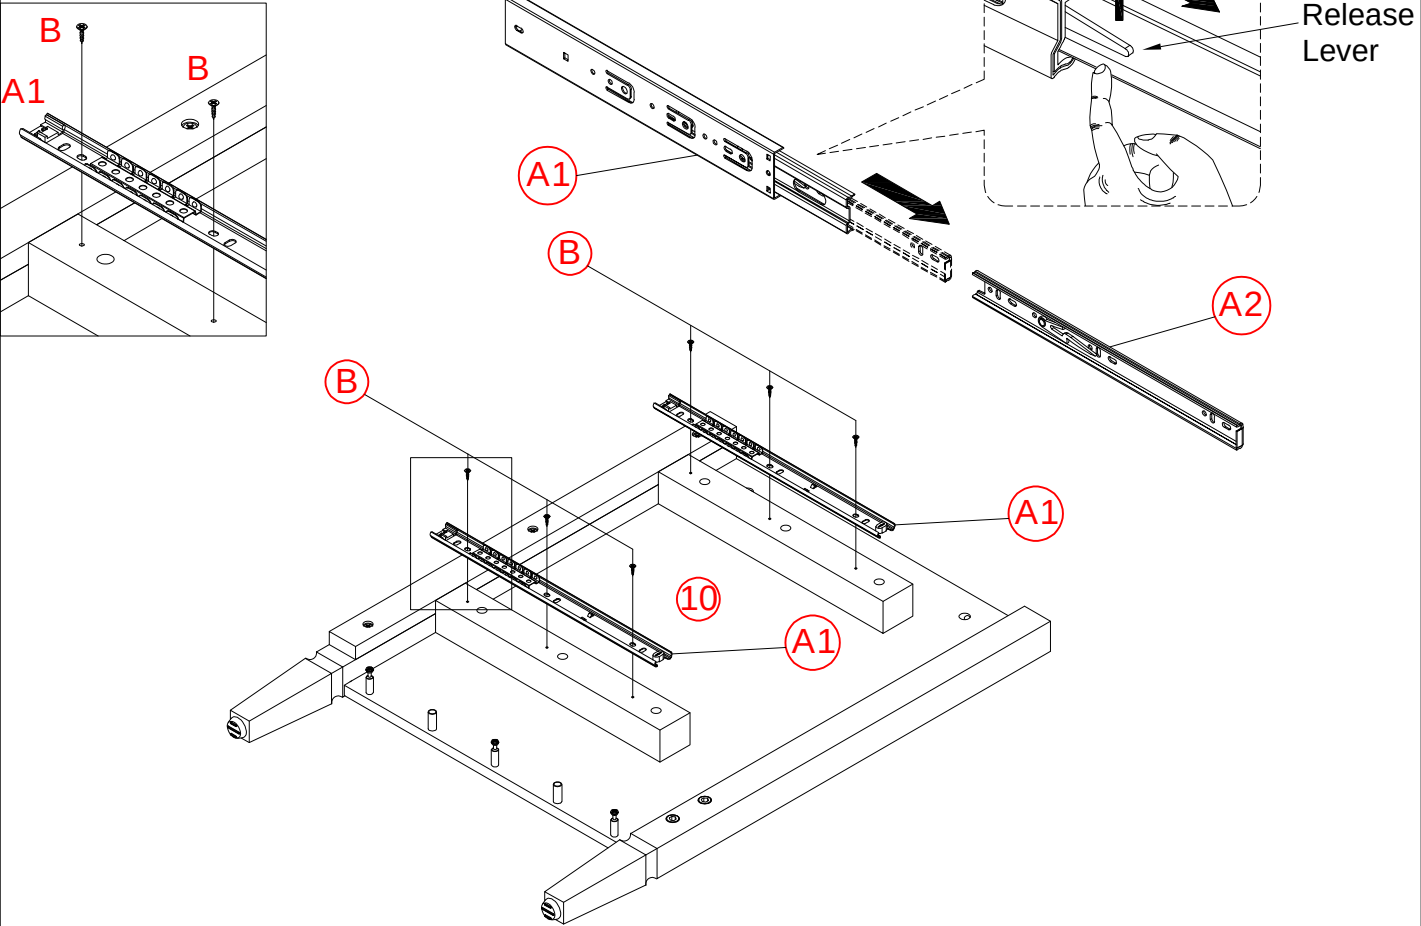



(A)	L45*300MM		2PCS	(B)	3.5*10MM		6PCS
-----	-----------	---	------	-----	----------	---	------

STEP 4

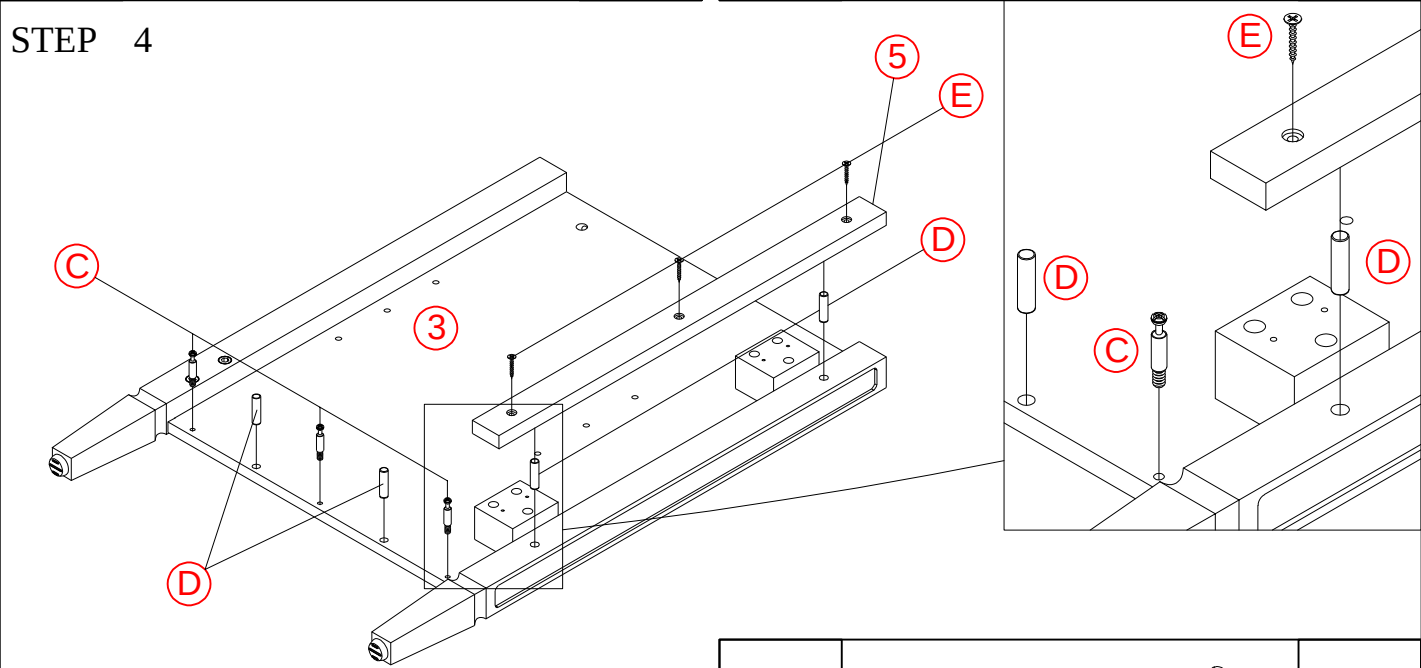



(C)	Ø5*35MM		3PCS	(E)	4*25MM		3PCS
				(D)	Ø 8 * 30MM		4PCS

STEP 5

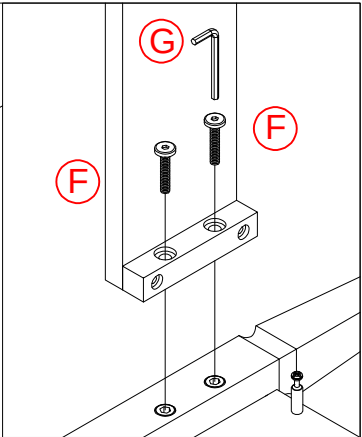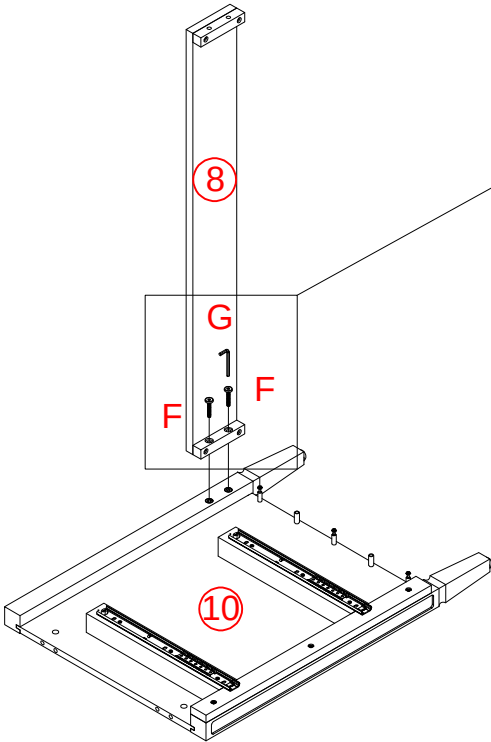


(F)	M6*30MM		2PCS	(G)	L4*58MM		1PC
-----	---------	---	------	-----	---------	---	-----

STEP 6

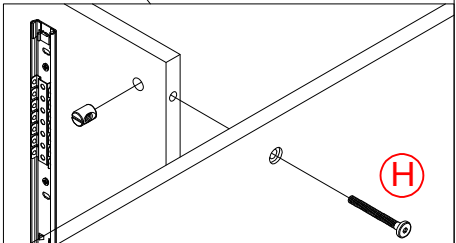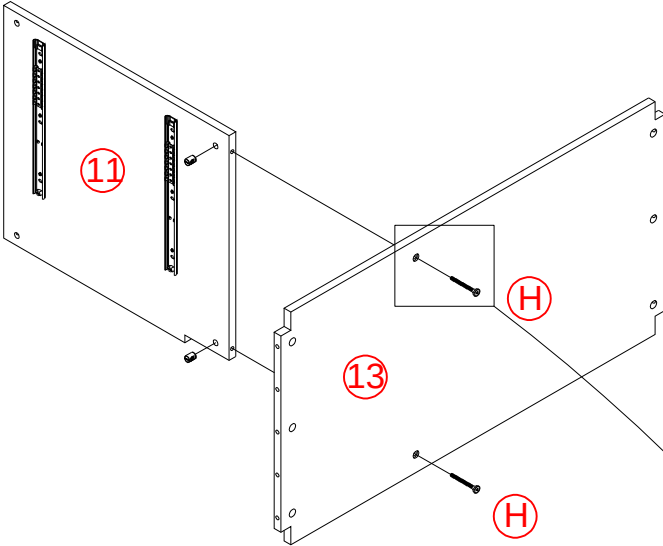


(H)	M6*45MM		2PCS
-----	---------	---	------

STEP 7

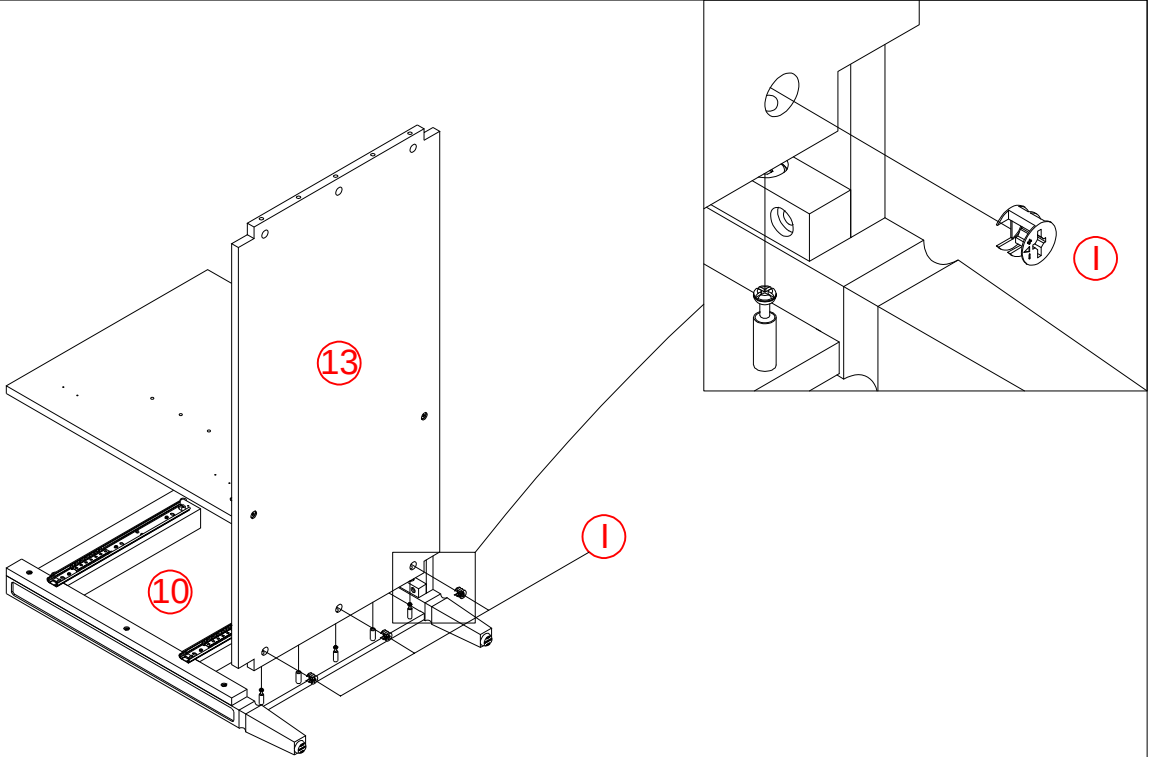


①	Ø 15		3PCS
---	------	--	------

STEP 8

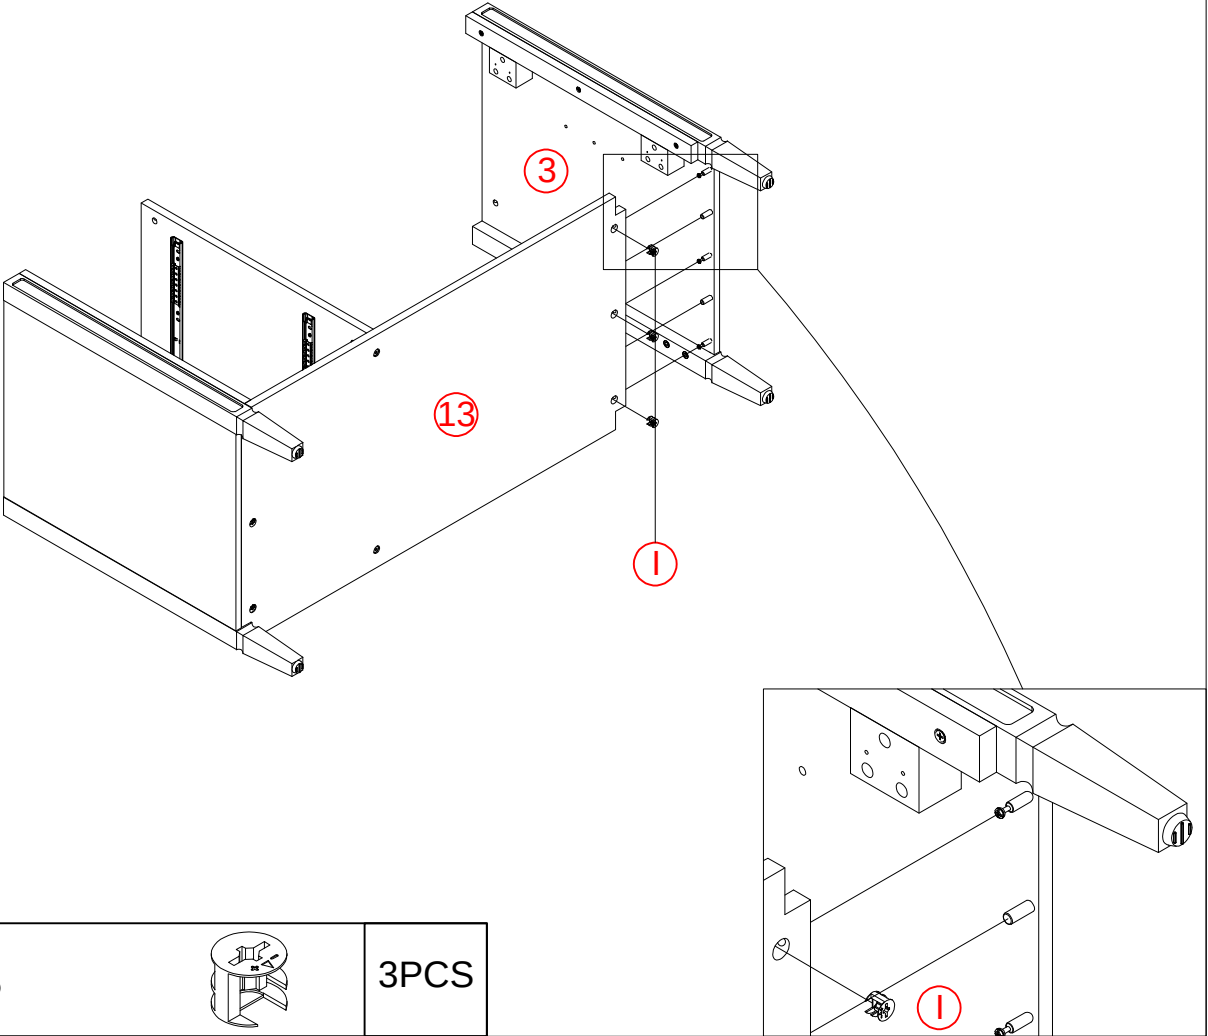


①	Ø 15		3PCS
---	------	---	------


STEP 9

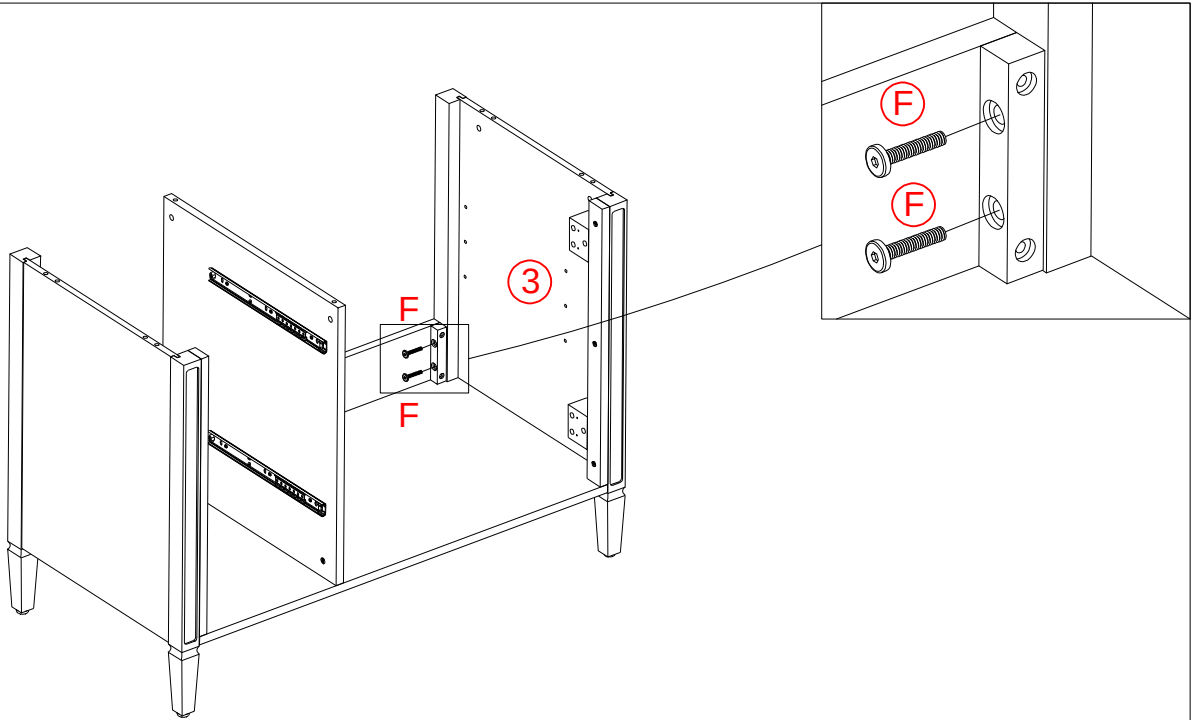


(F)	M6*30MM		2PCS
-----	---------	---	------

STEP 10

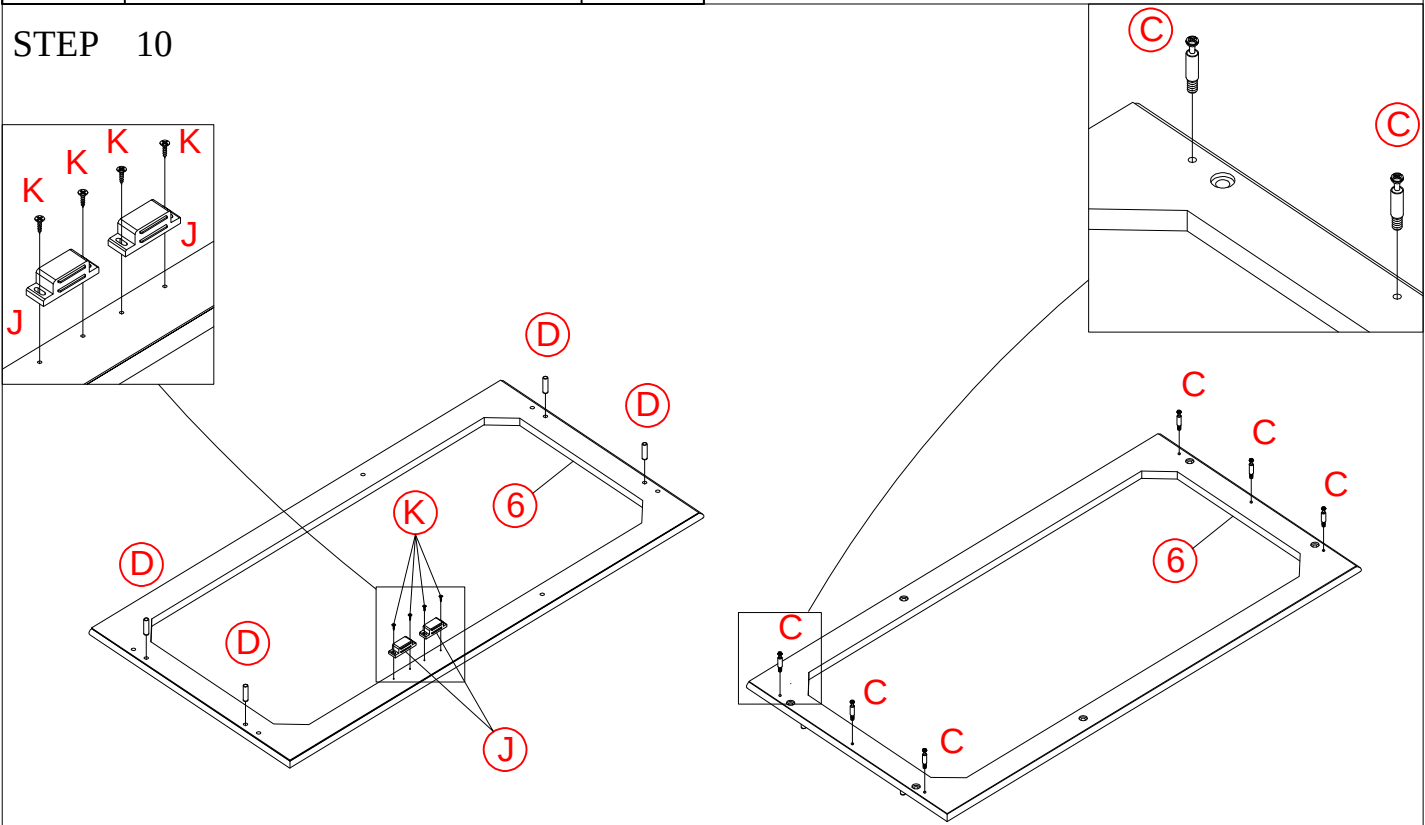


(J)	L45MM		2PCS	(K)	3.5*15MM		4PCS
(C)	Ø5*35MM		6PCS	(D)	Ø 8 * 30MM		4PCS

STEP 11

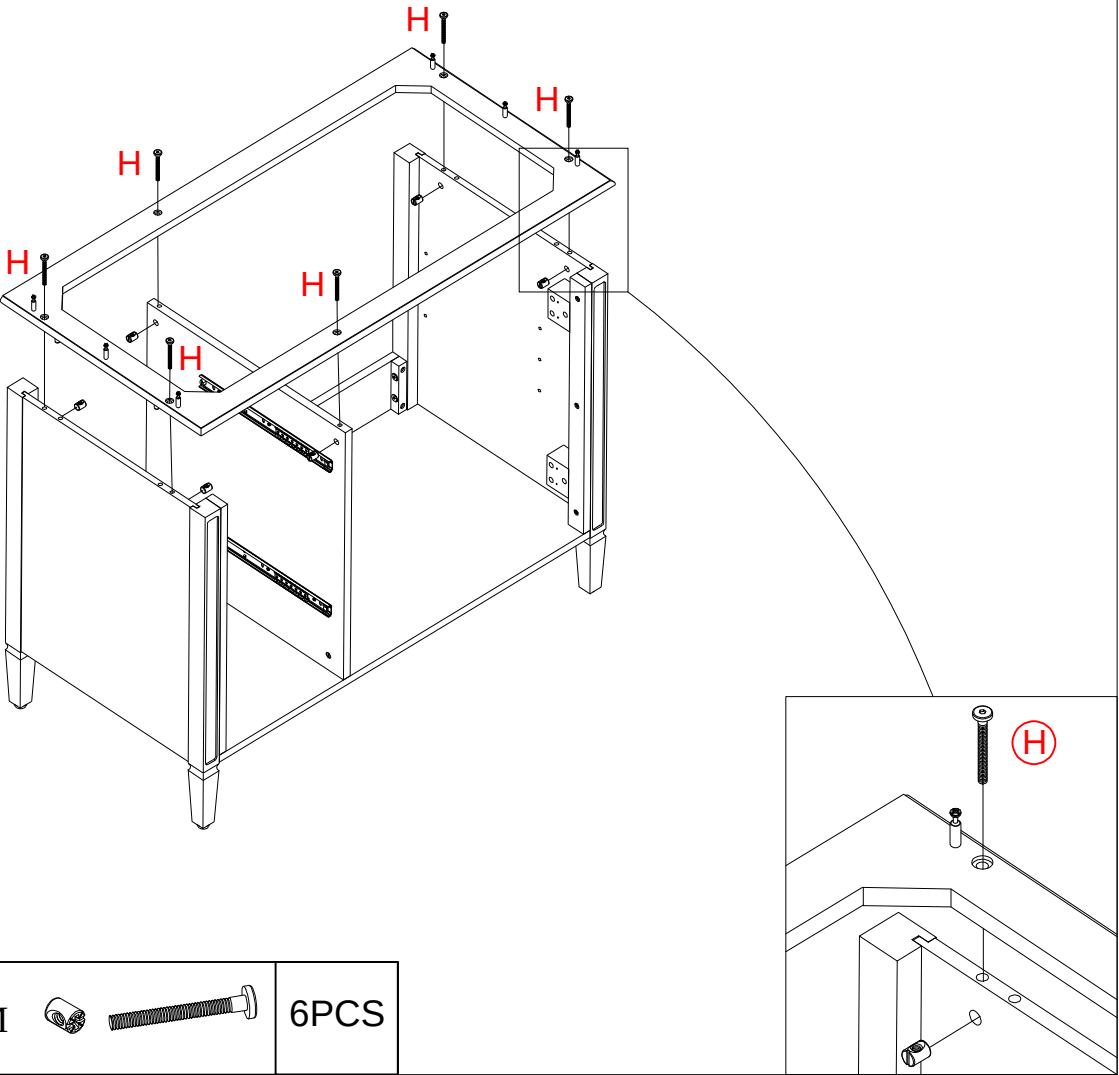


(H)	M6*45MM		6PCS
------------	---------	--	------


STEP 12

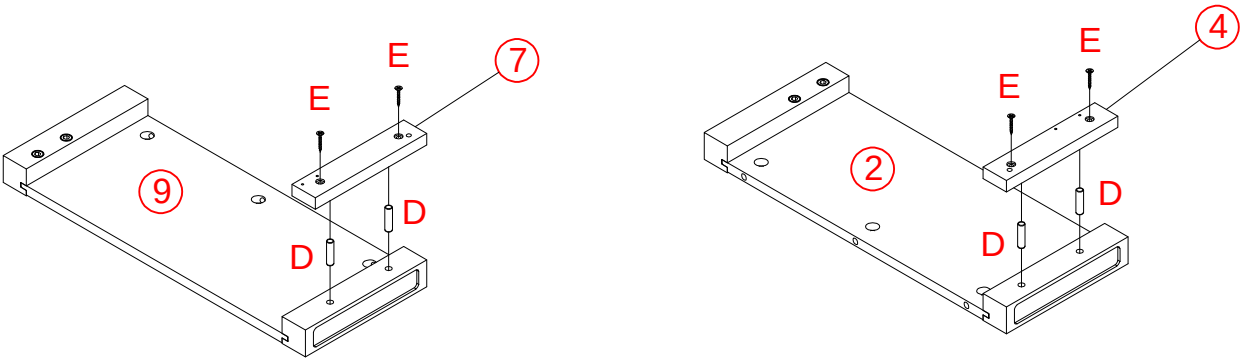

(E)	4*25MM		4PCS	(D)	Ø 8 * 30MM		4PCS
------------	--------	--	------	------------	------------	--	------


STEP 13

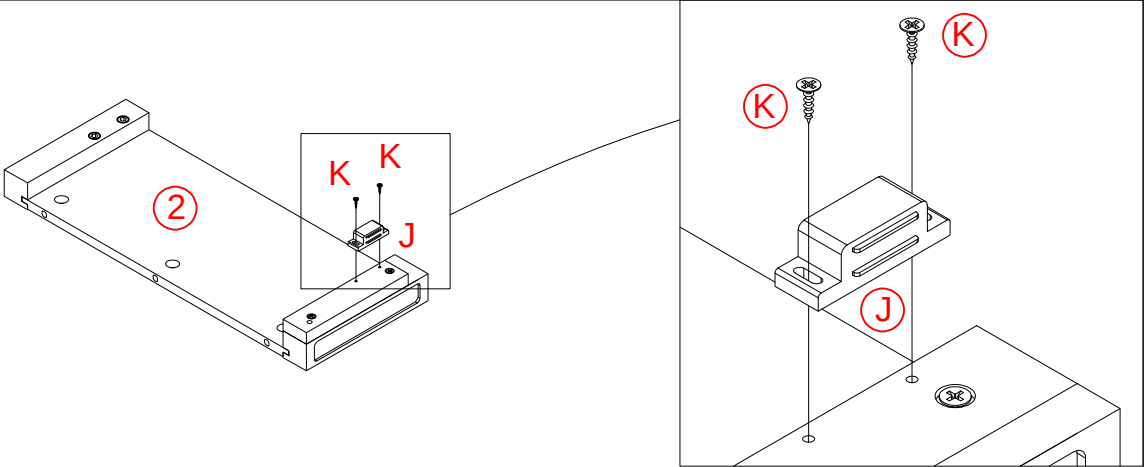

(J)	L45MM		1PC
-----	-------	---	-----



(K)	3.5*15MM		2PCS
-----	----------	---	------

STEP 14

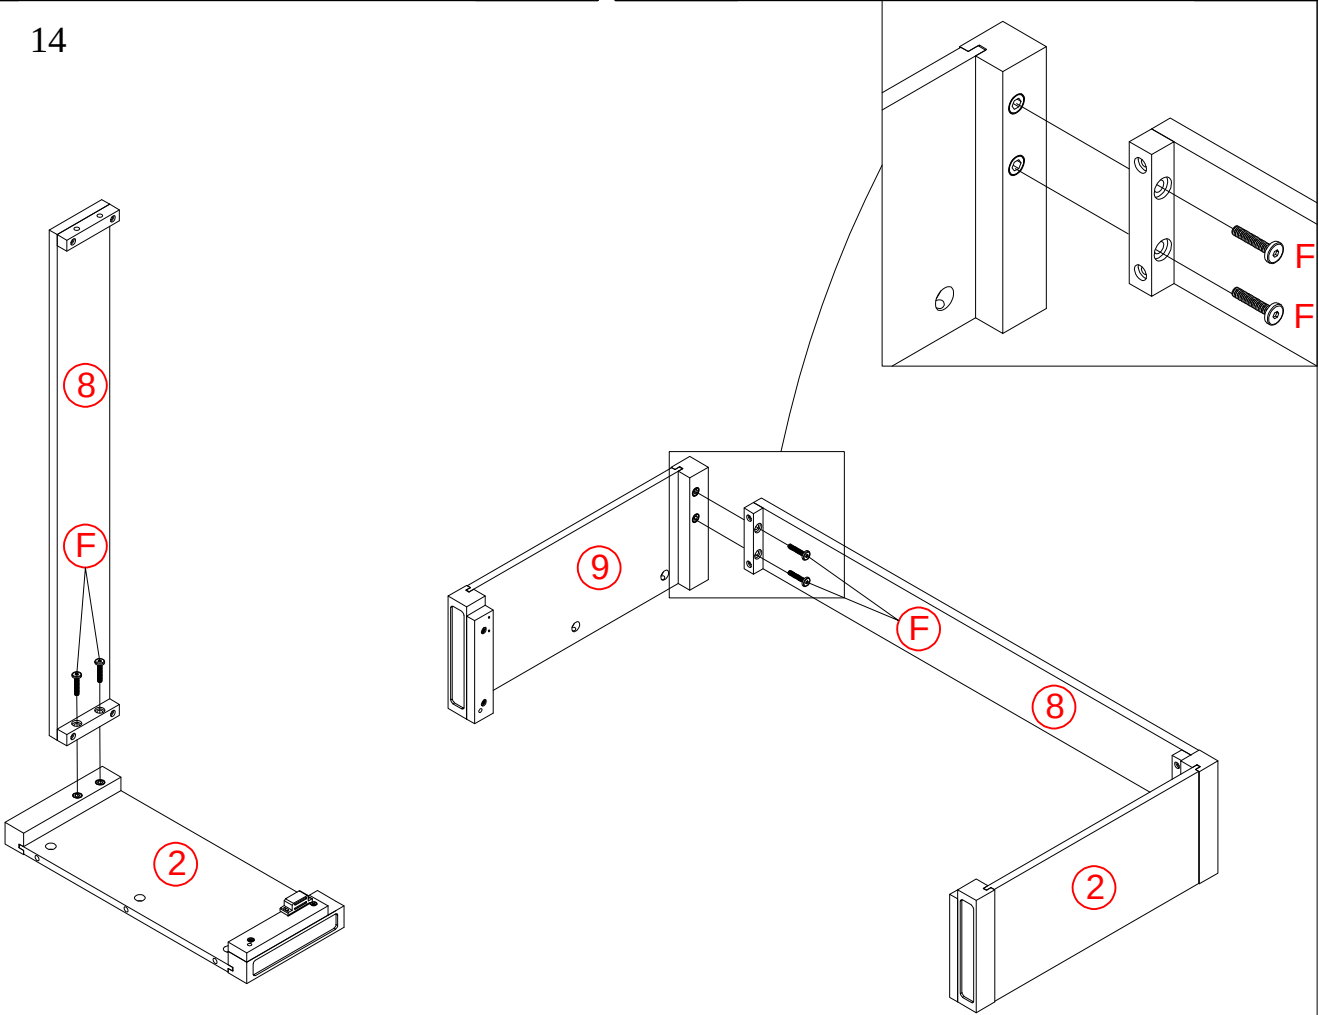



(F)	M6*30MM		4PCS
-----	---------	---	------

STEP 15

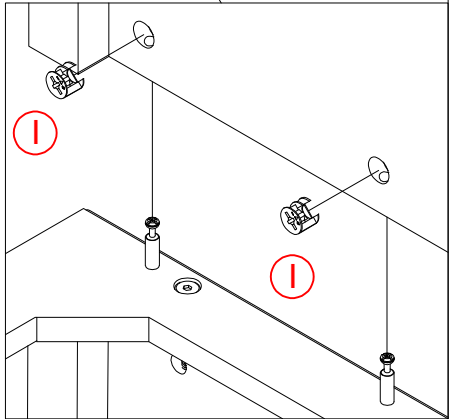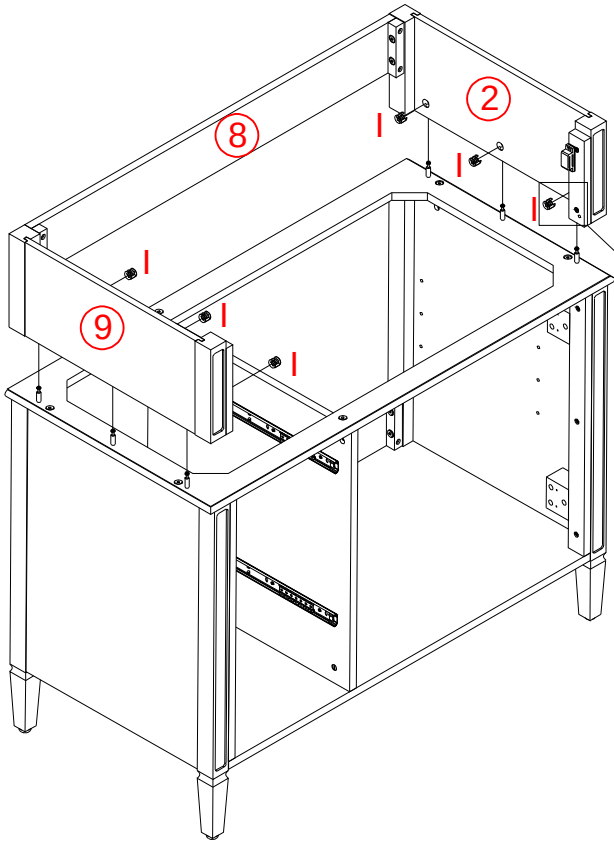


I	Ø 15		6PCS
----------	------	--	------

STEP 16

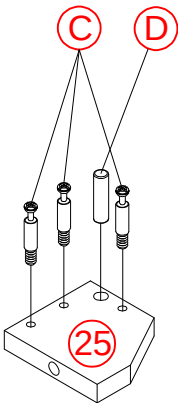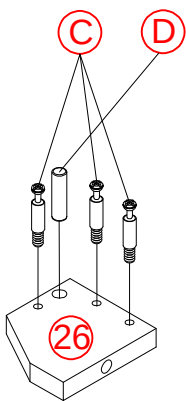


C	Ø5*35MM		6PCS	D	Ø 8 * 30MM		2PCS
----------	---------	--	------	----------	------------	--	------

STEP 17

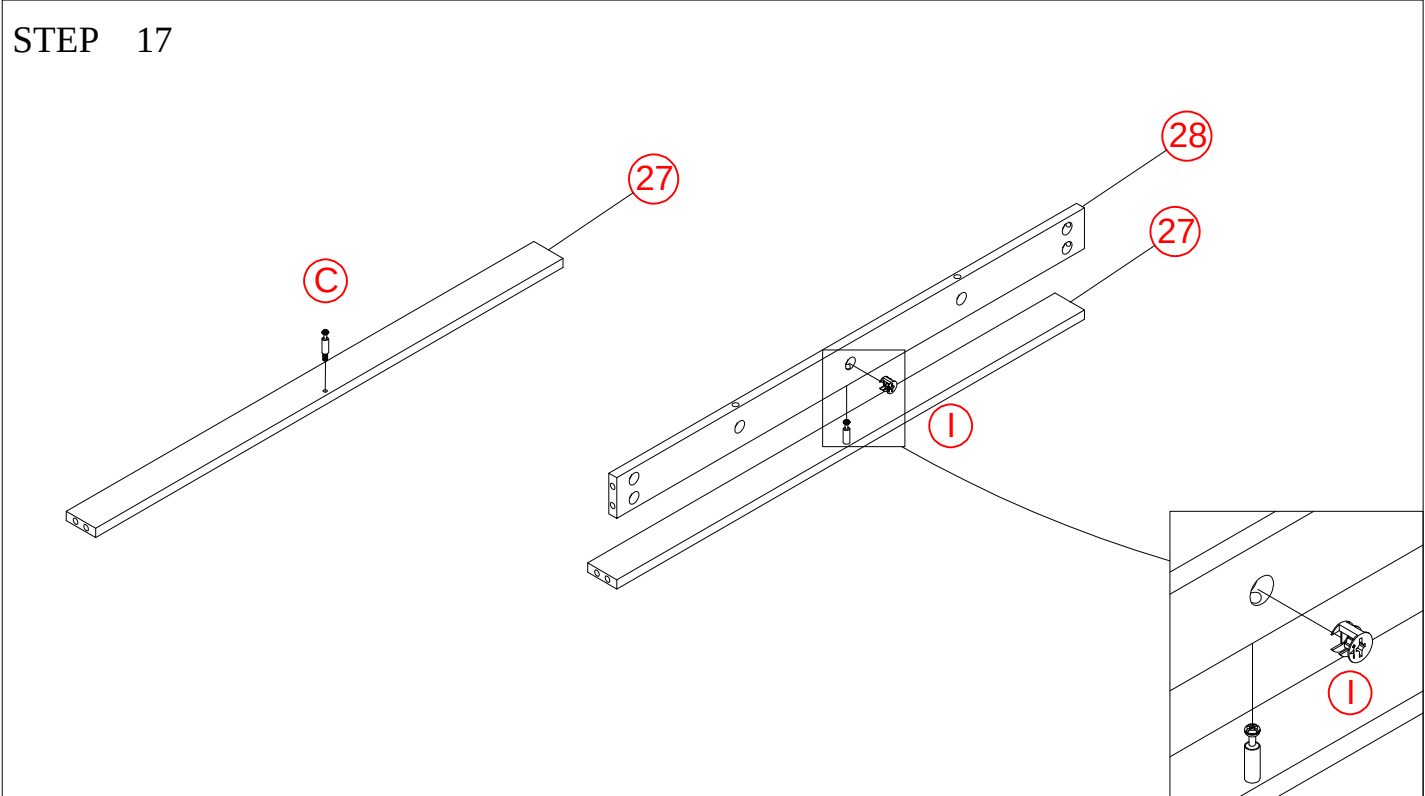


C	Ø5*35MM	 1PC	I	Ø 15	 1PC
---	---------	--	---	------	--

STEP 18

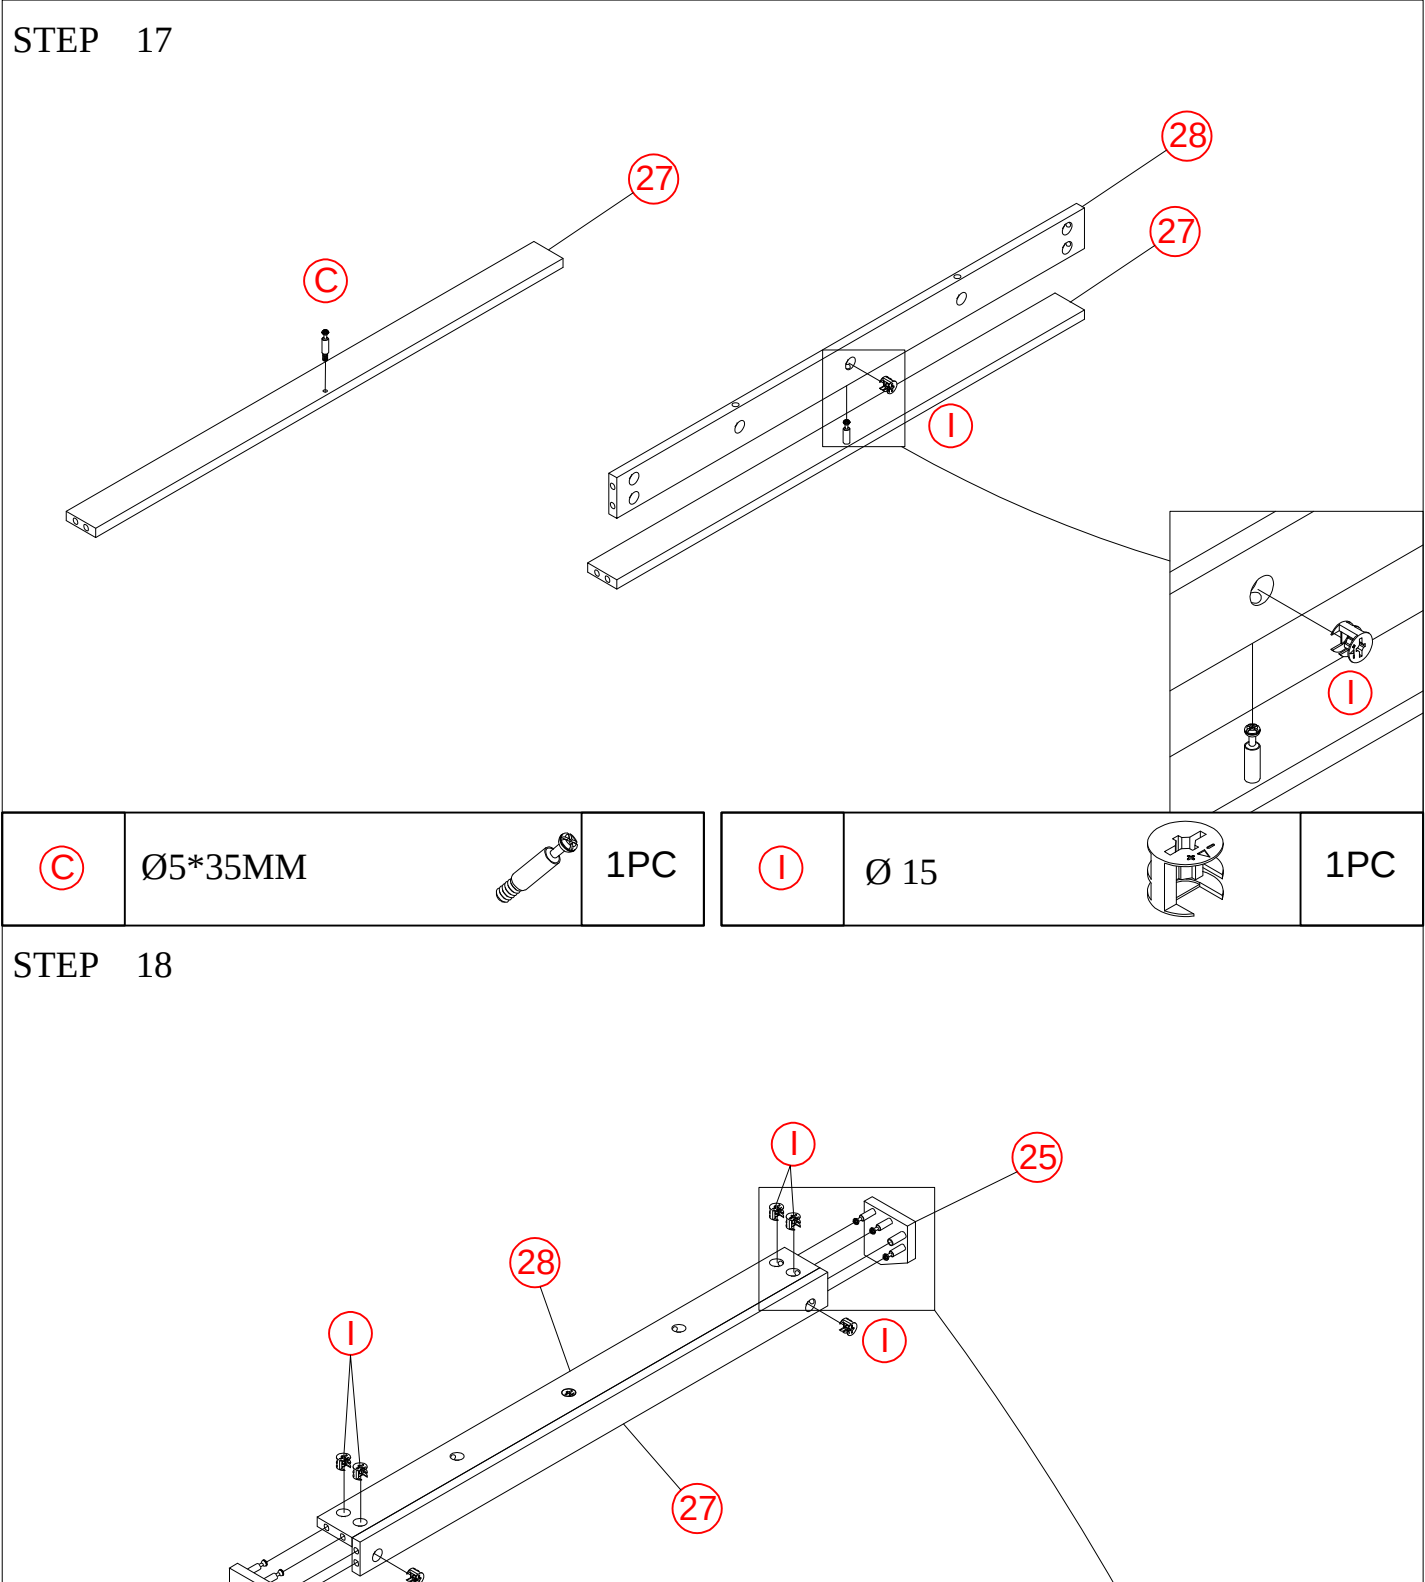

I	Ø 15	 6PCS
---	------	--


STEP 19

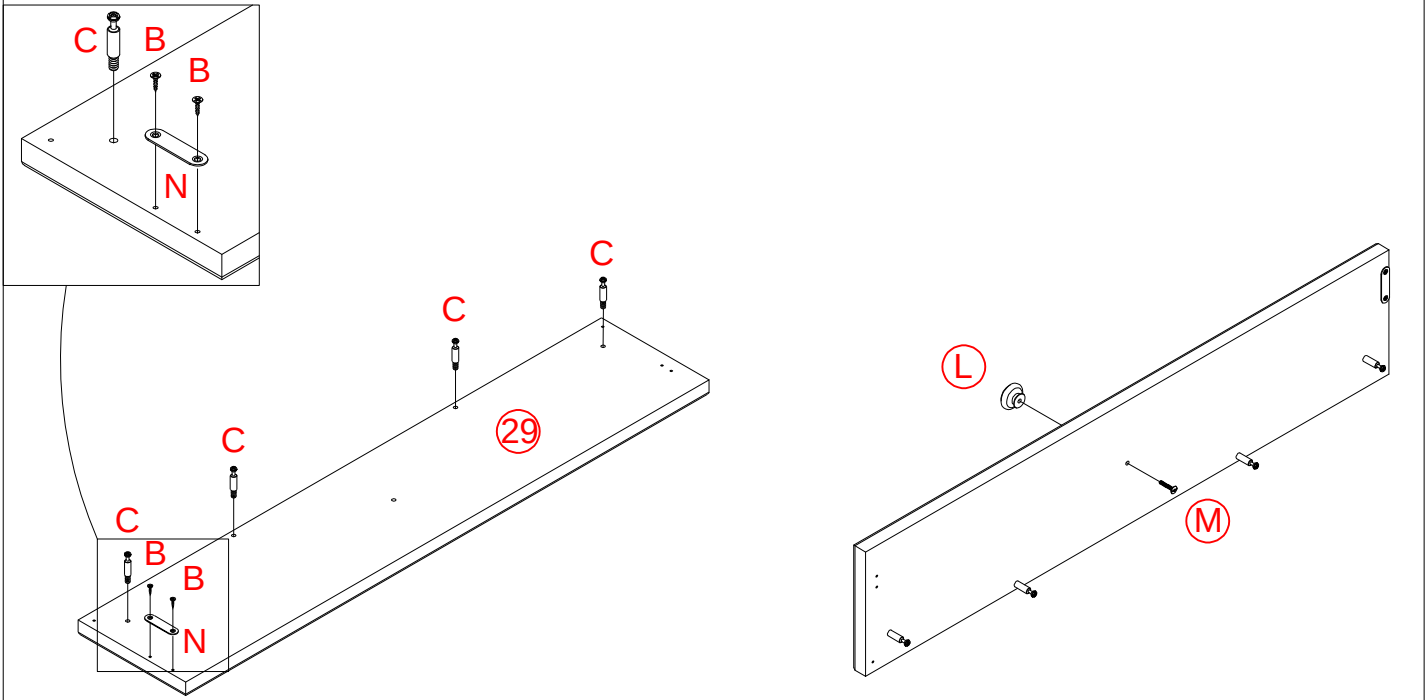

(C)	Ø5*35MM		4PCS
(L)	Ø30MM		1PC



(N)	L45MM		1PC
(B)	3.5*10MM		2PCS
(M)	M4*20MM		1PC

STEP 20

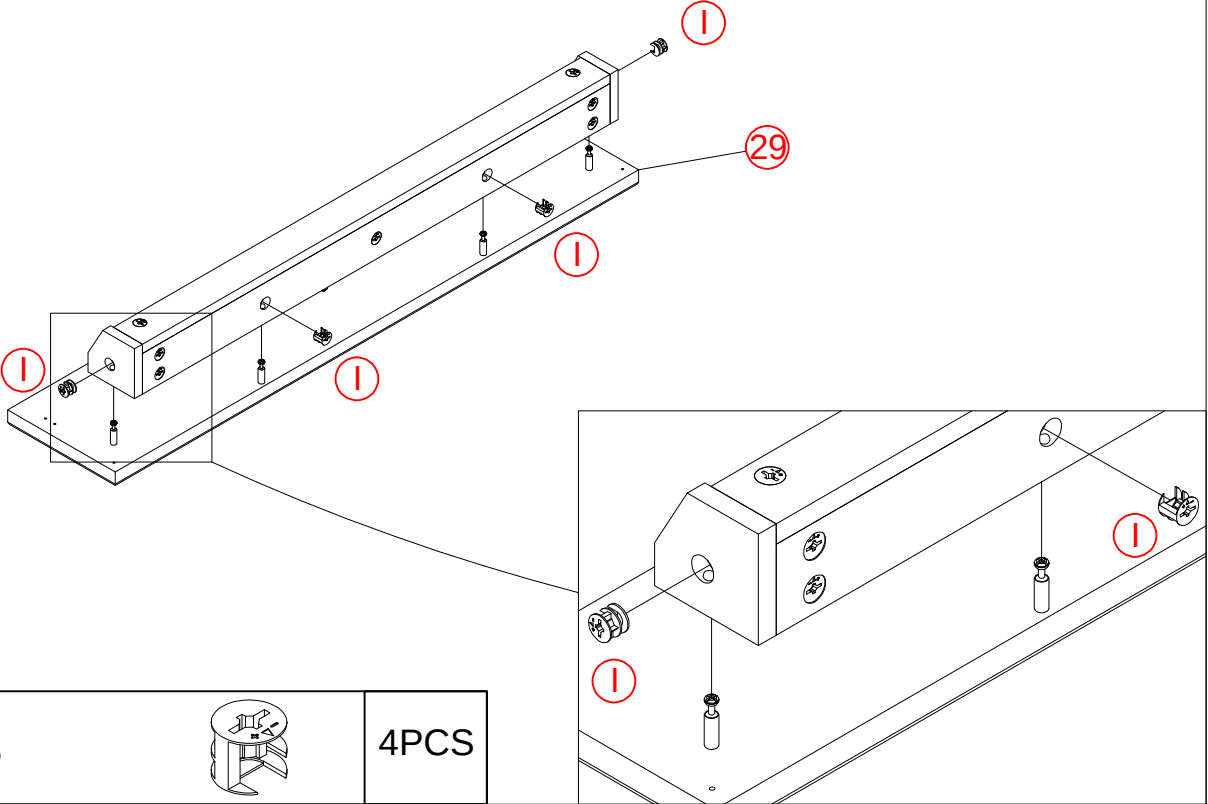





(I)	Ø 15		4PCS
-----	------	---	------

STEP 21

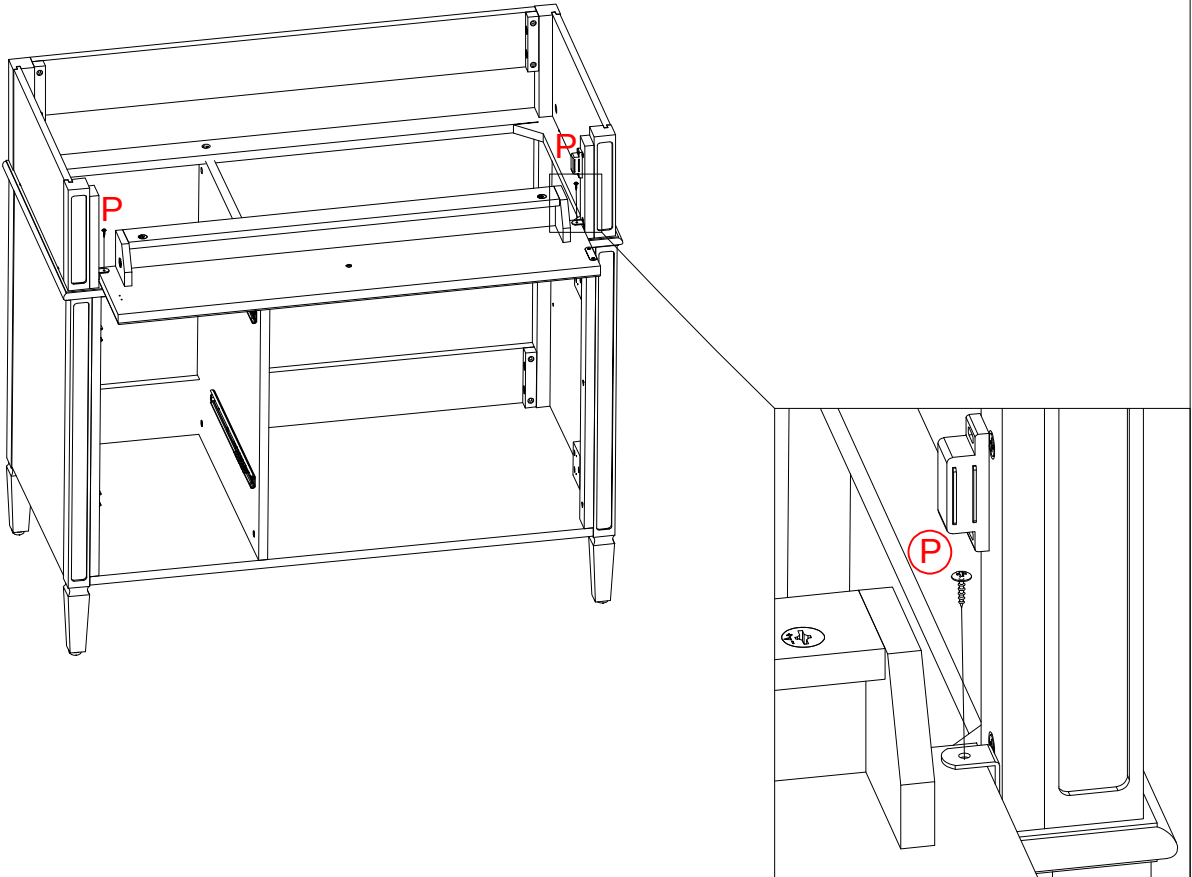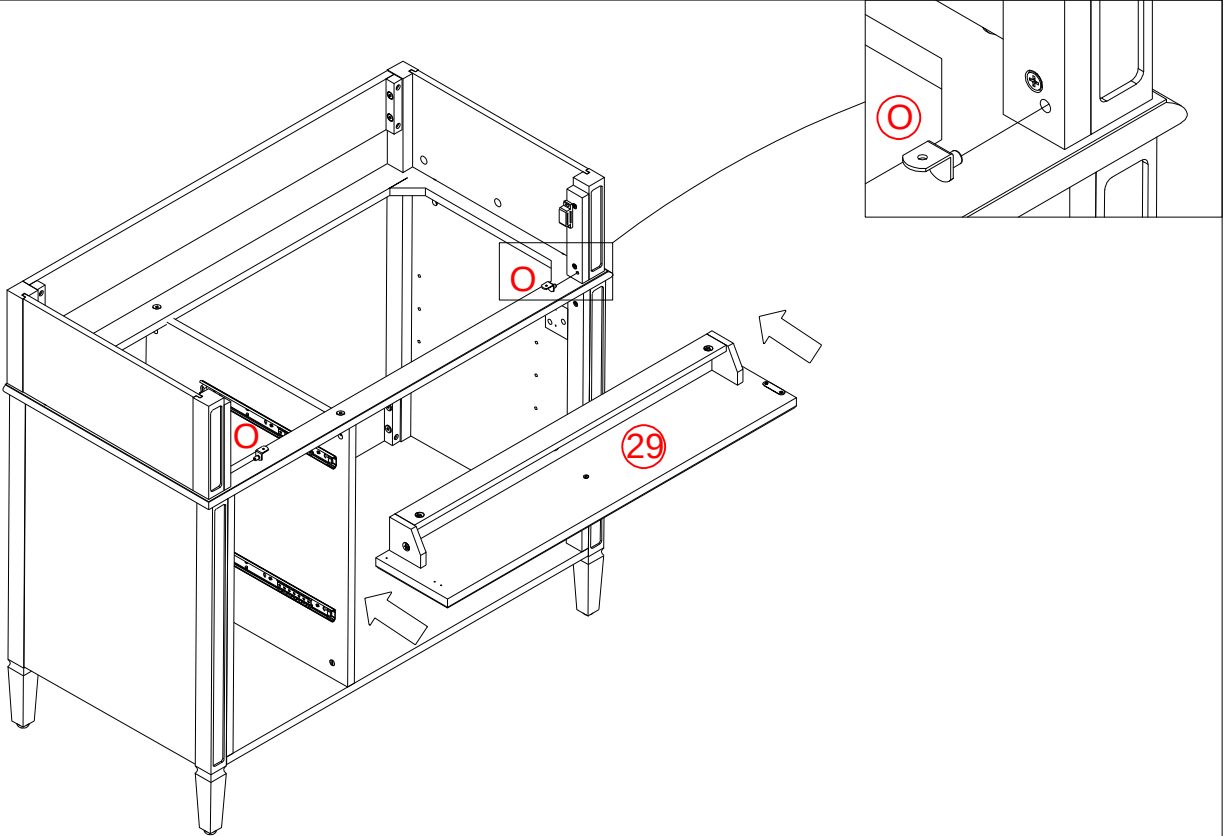



(P)	3.5*12MM		2PCS	(O)	L15MM		2PCS
-----	----------	---	------	-----	-------	---	------

STEP 22

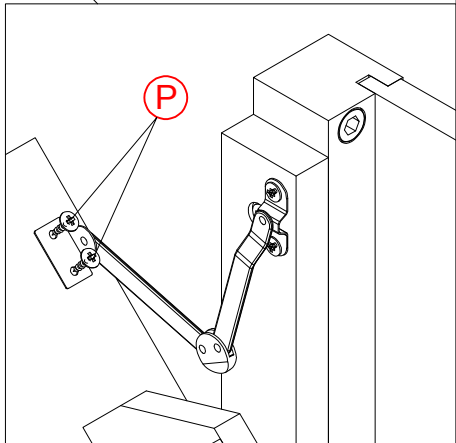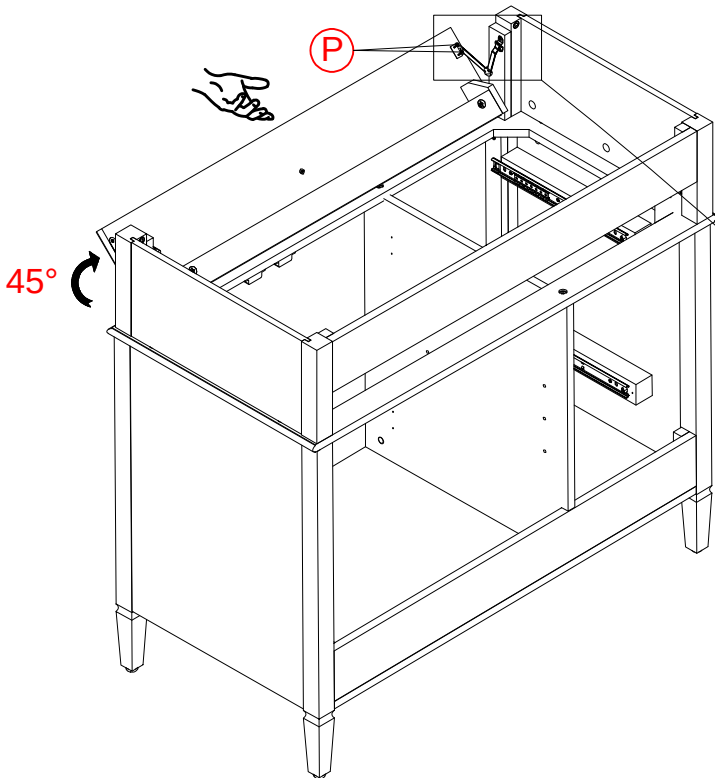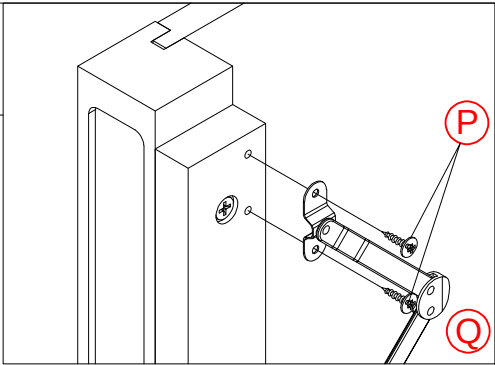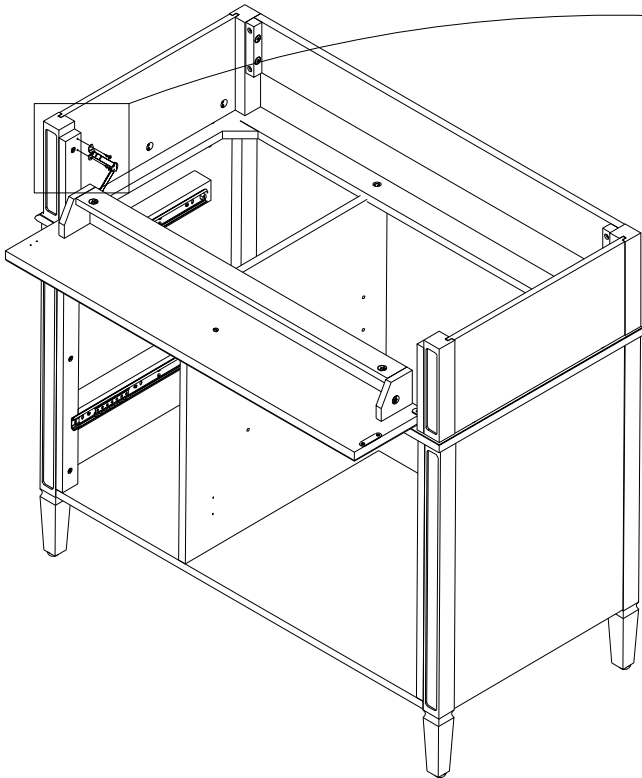



	3.5*12MM		4PCS		HANDLE		1PC
---	----------	---	------	---	--------	---	-----


STEP 23

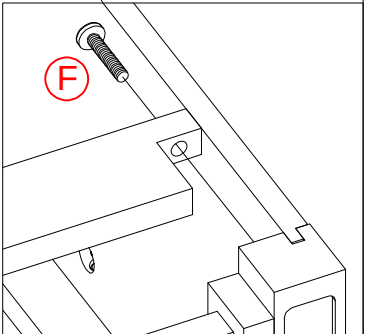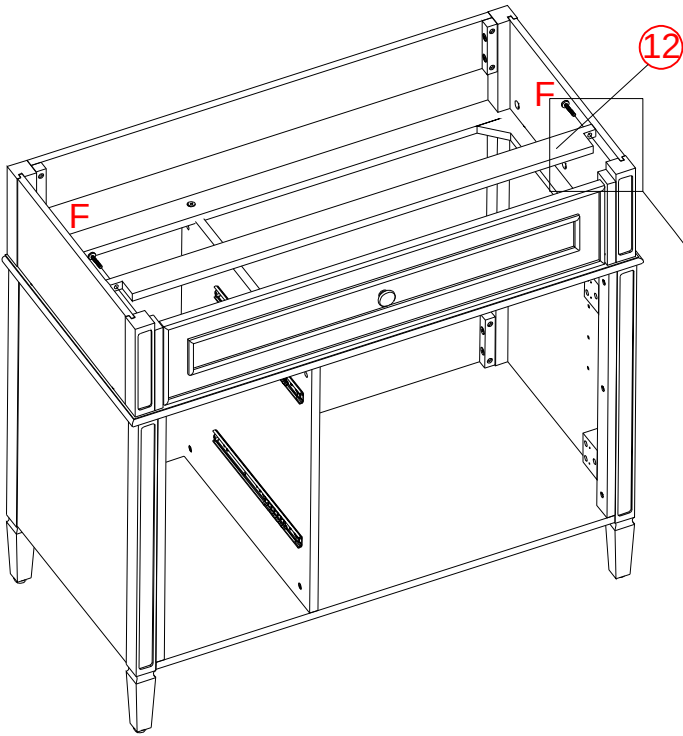



F	M6*30MM		2PCS
----------	---------	--	------

STEP 24

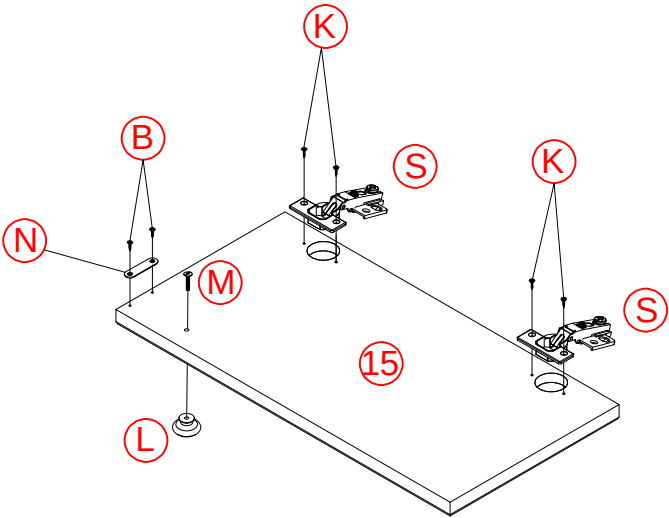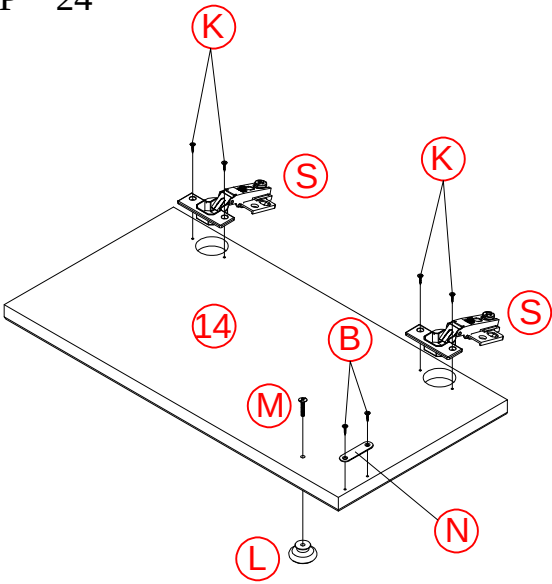

S	HINGES		4PCS	K	3.5*15MM		8PCS
L	Ø30MM		2PCS	M	M4*20MM		2PCS
N	L45MM		2PCS	B	3.5*10MM		4PCS






STEP 25

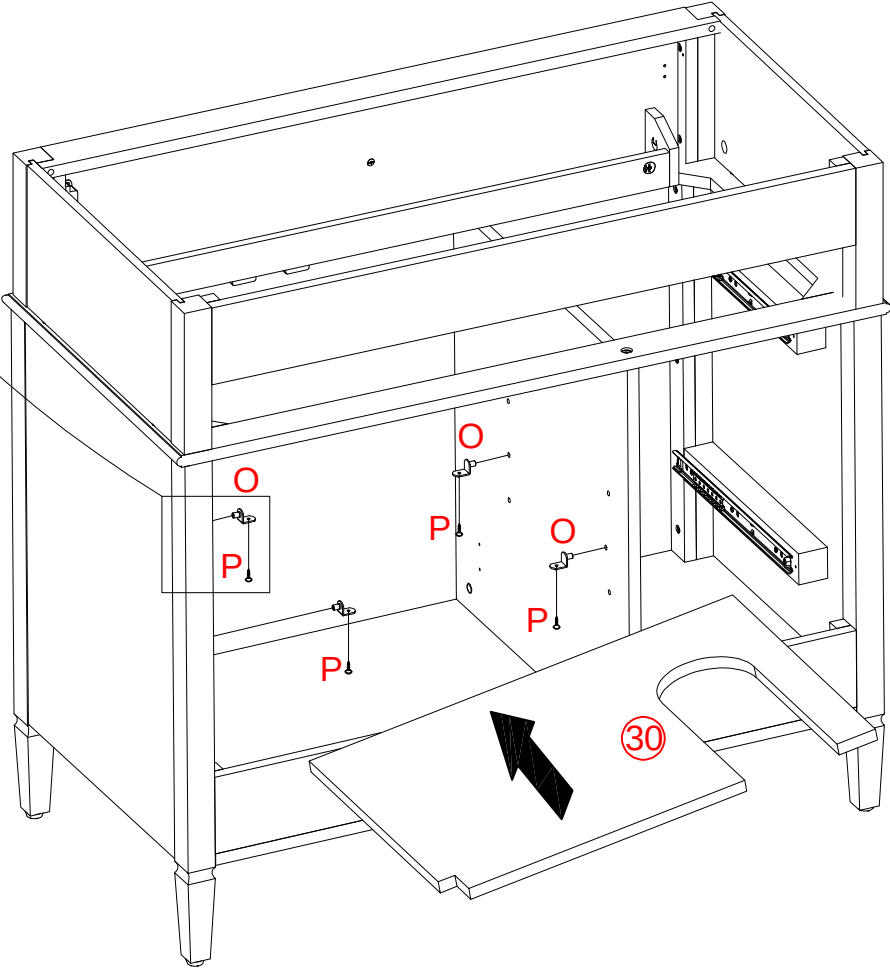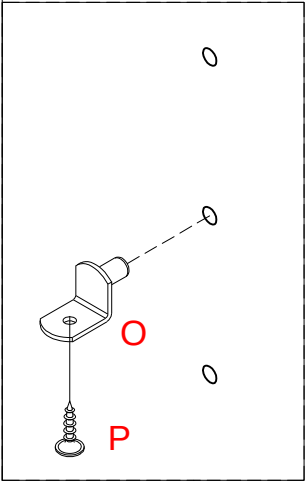

(P)	3.5*12MM		4PCS	(O)	L15MM		4PCS
-----	----------	---	------	-----	-------	---	------

STEP 26

Three-way adjustable hinge for perfectly aligned doors
 1.TO ADJUST DOOR FORWARD OR BACKWARD.
 2.TO ADJUST DOOR TO RIGHT OR TO LEFT.
 3.TO ADJUST DOOR UP OR DOWN.

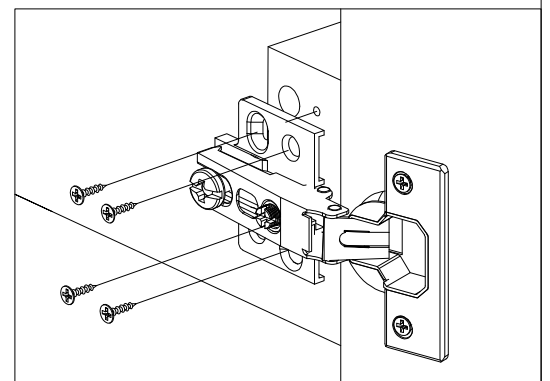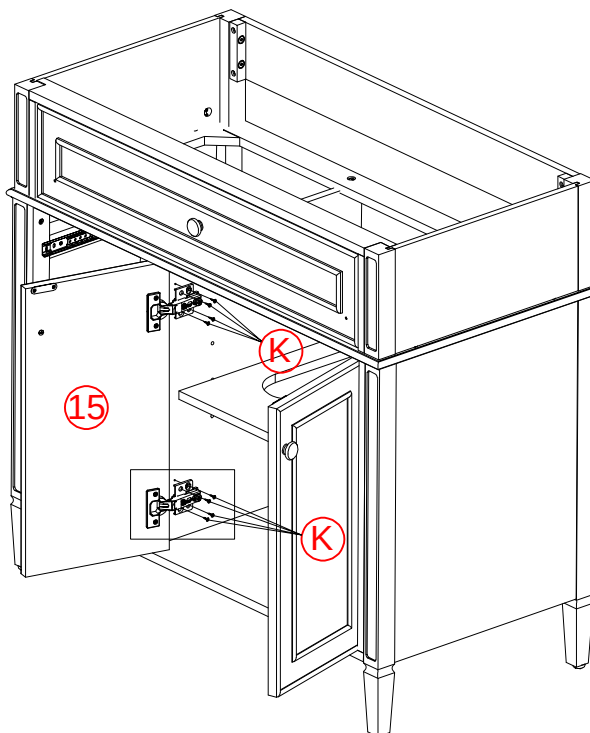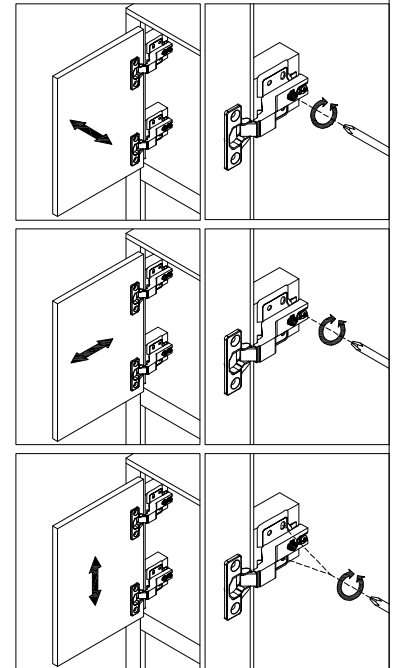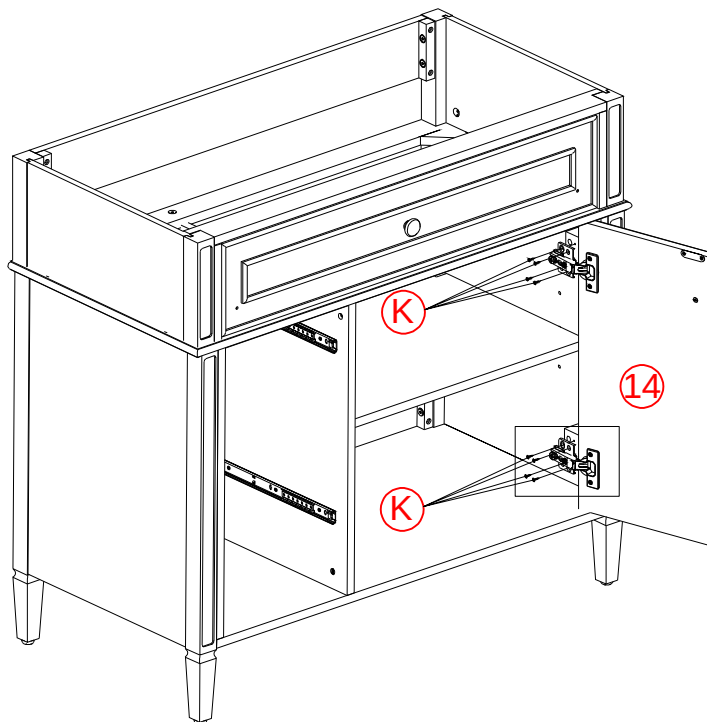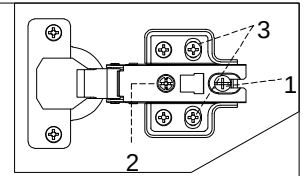



K

3.5*15MM



16PCS



STEP 27

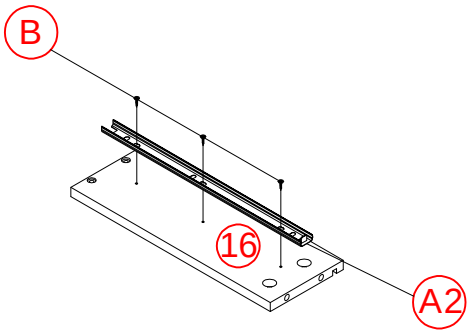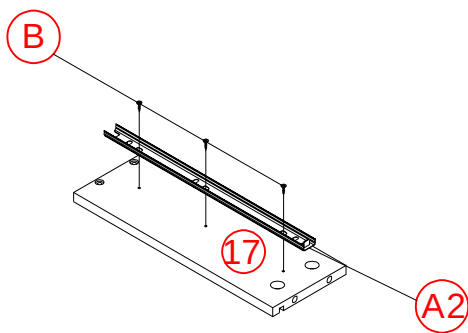


(A)	L45*300MM		2PCS
-----	-----------	---	------

(B)	3.5*10MM		6PCS
-----	----------	---	------


STEP 28

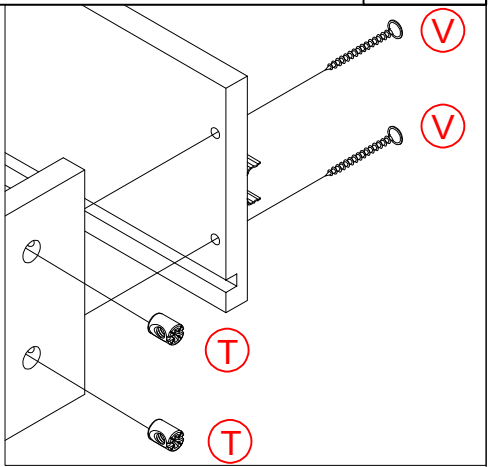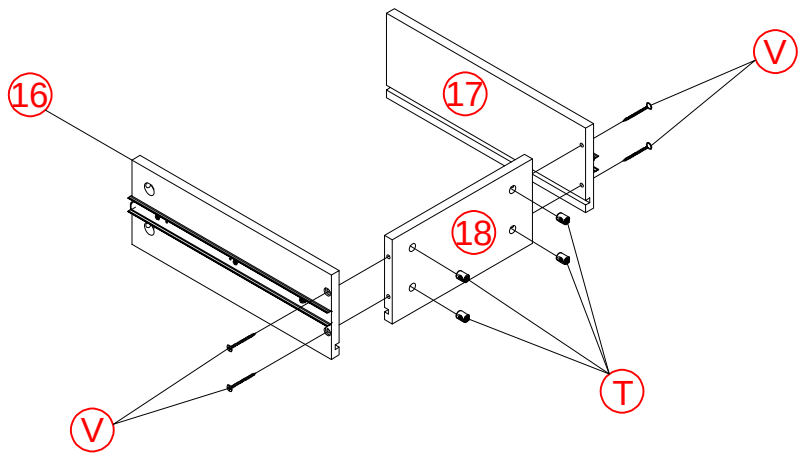




(V)	M4*50MM		4PCS
-----	---------	---	------

(T)	Ø 10*10MM		4PCS
-----	-----------	---	------

STEP 29

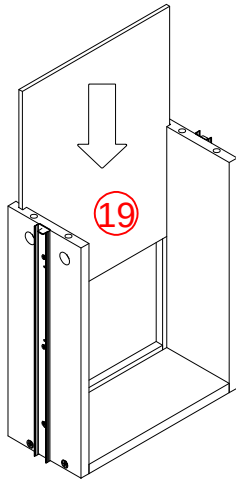



STEP 30

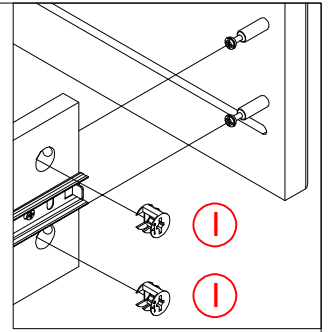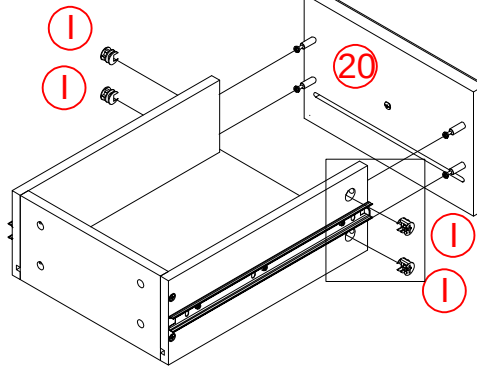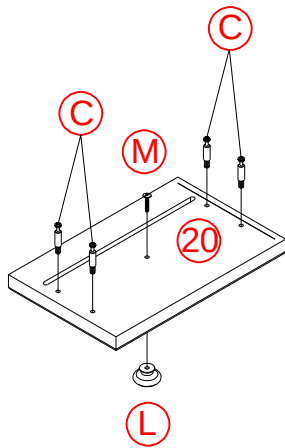

(C)	Ø5*35MM		4PCS
(L)	Ø30MM		1PC

(I)	Ø 15		4PCS
(M)	M4*20MM		1PC



STEP 31

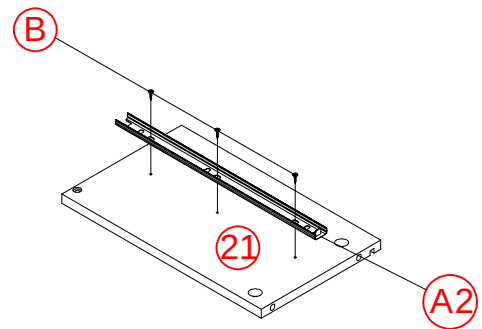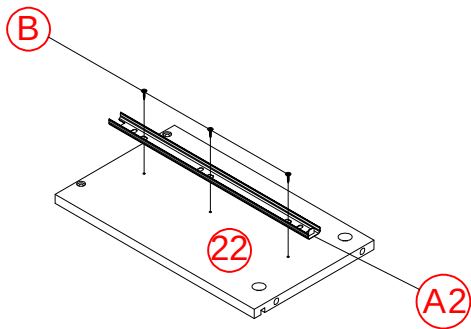

(A)	L45*300MM		2PCS
-----	-----------	--	------

(B)	3.5*10MM		6PCS
-----	----------	--	------


STEP 32

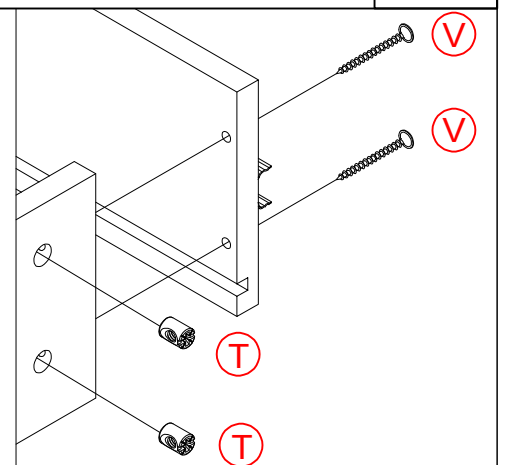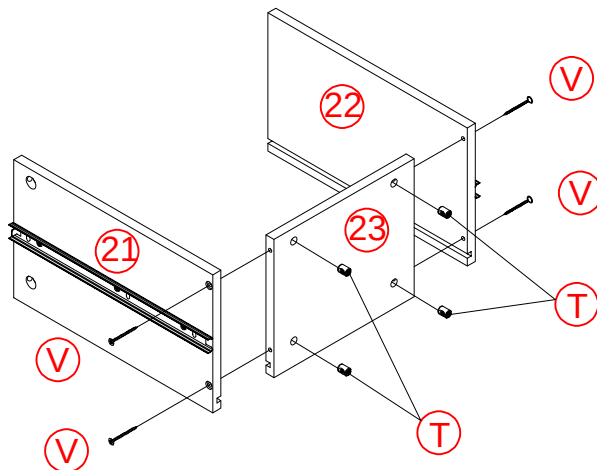

(V)	M4*50MM		4PCS
-----	---------	--	------




(T)	Ø 10*10MM		4PCS
-----	-----------	--	------

STEP 33

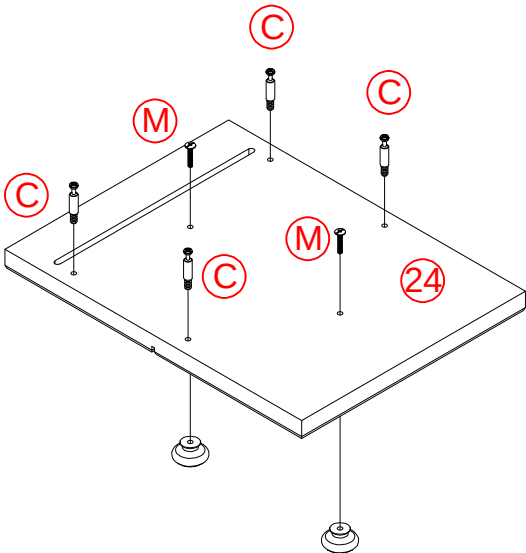



Ⓢ	Ø5*35MM		4PCS
Ⓛ	Ø30MM		2PCS
Ⓜ	M4*20MM		2PCS

STEP 34

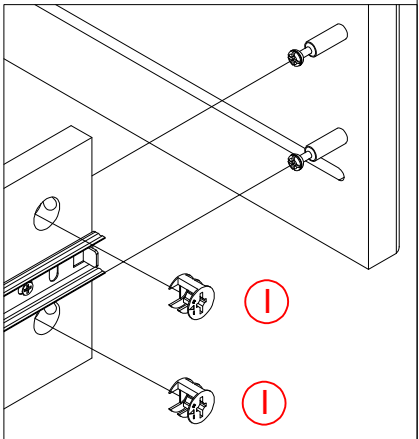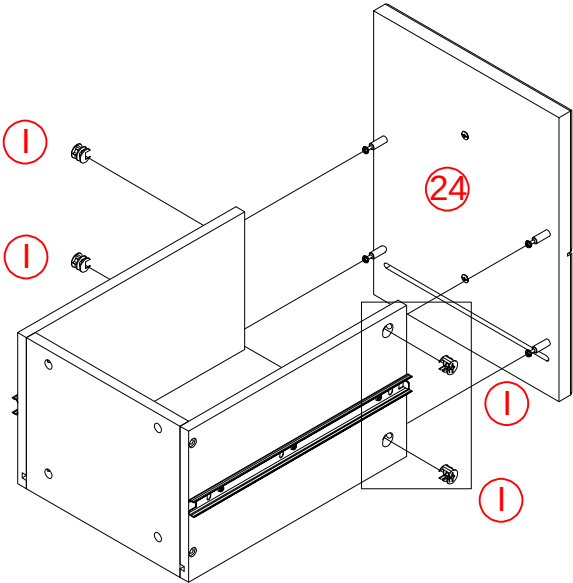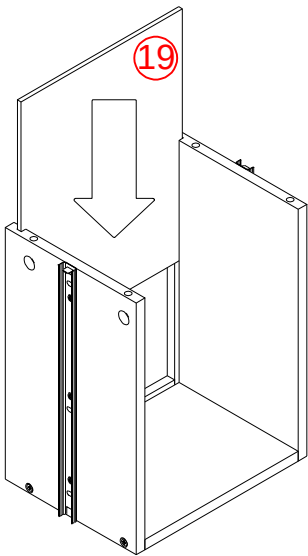


Ⓢ	Ø 15		4PCS
--------------	------	---	------

STEP 35

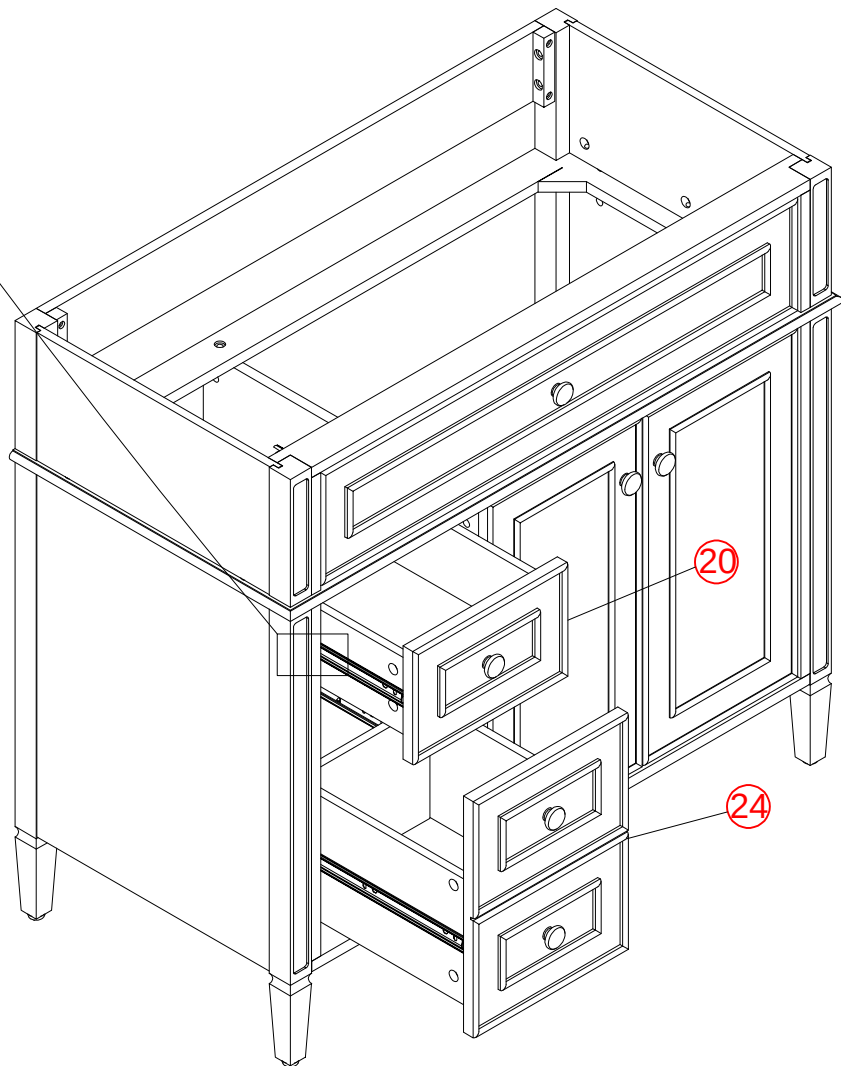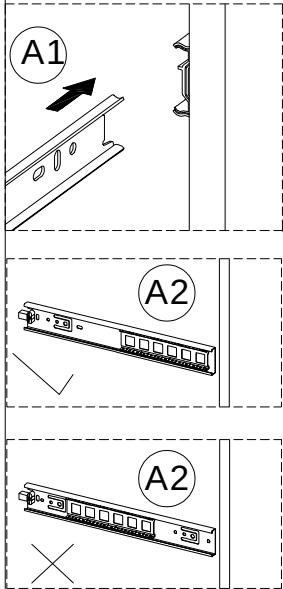


STEP 36


To install the Top (1) to the vanity (2).
Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

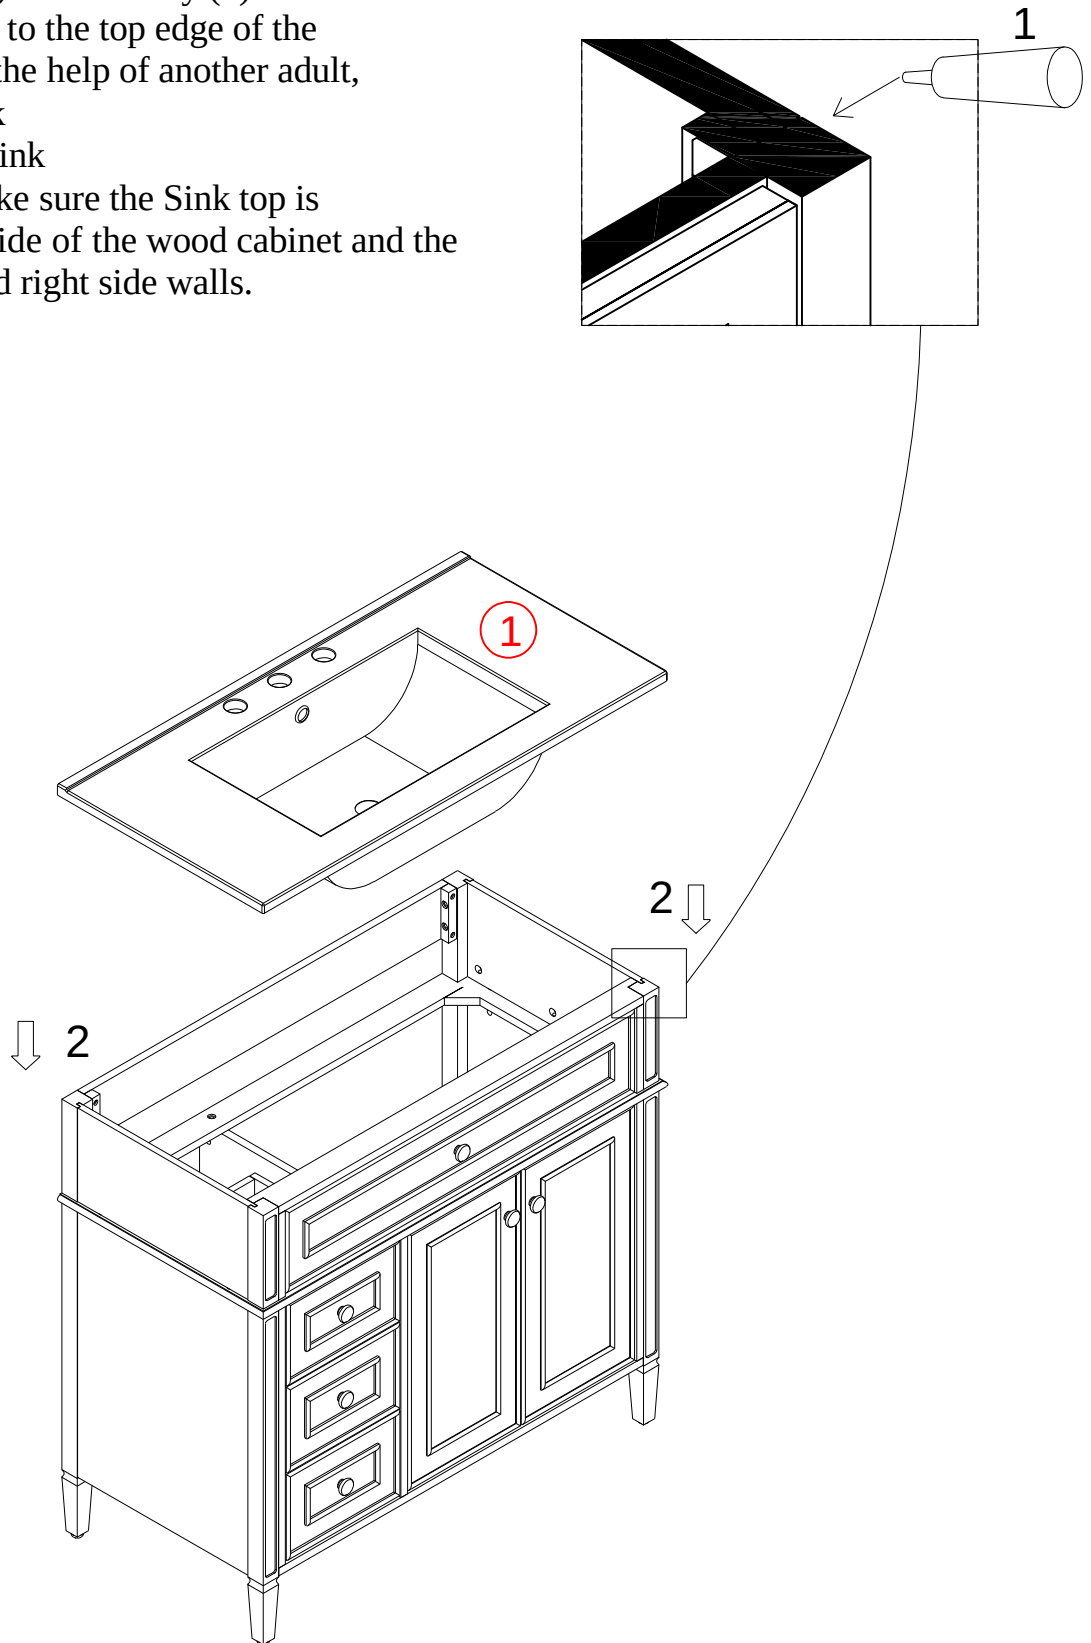

STEP 37

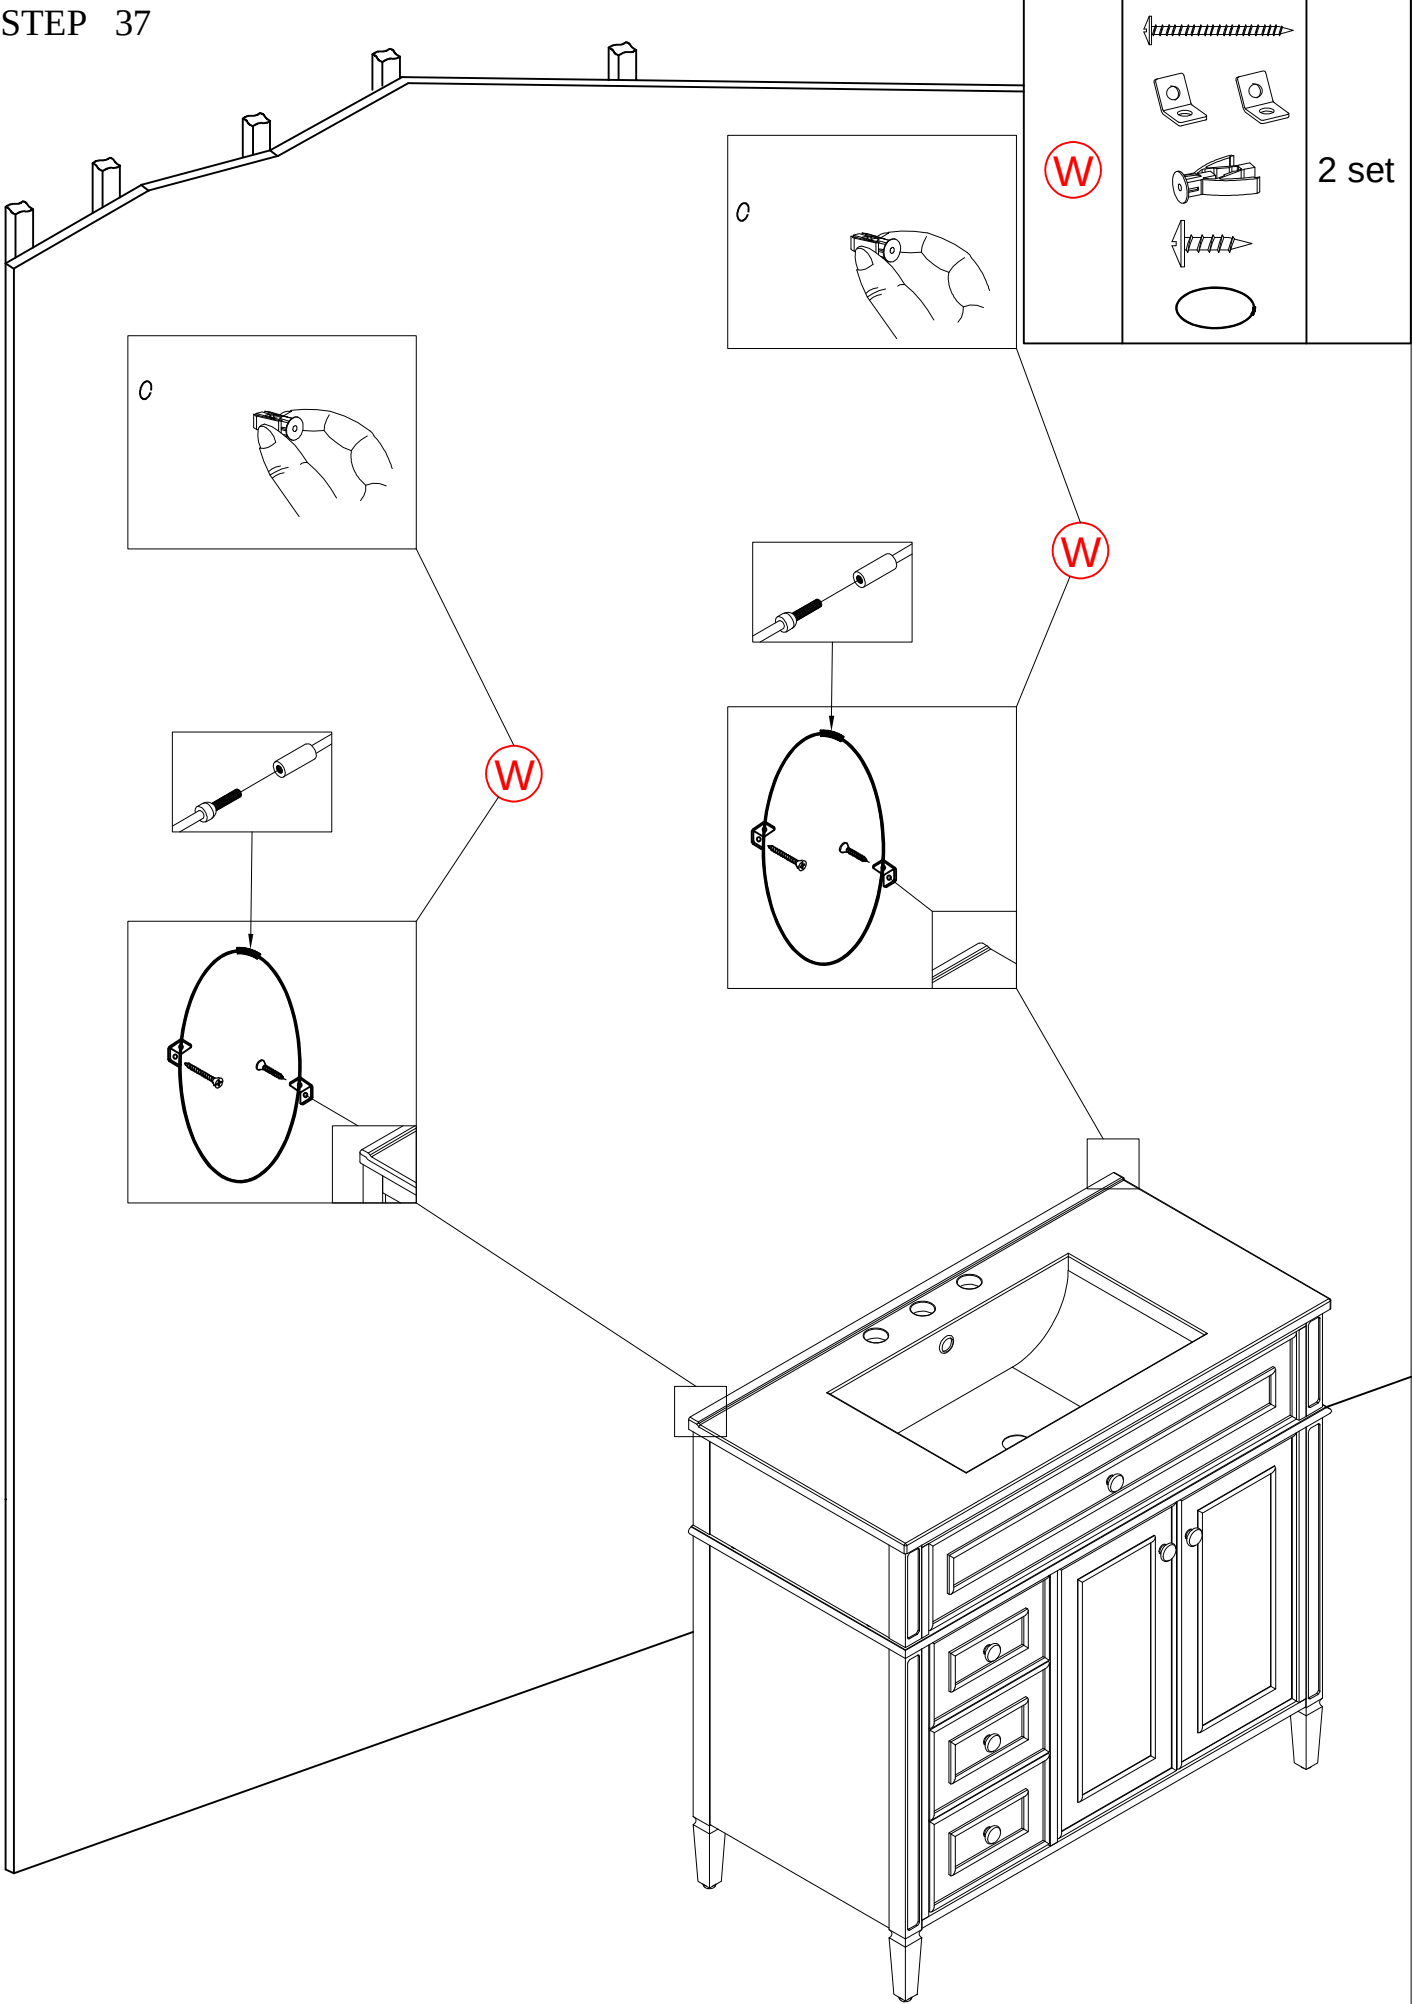


HINGE ADJUSTMENTS

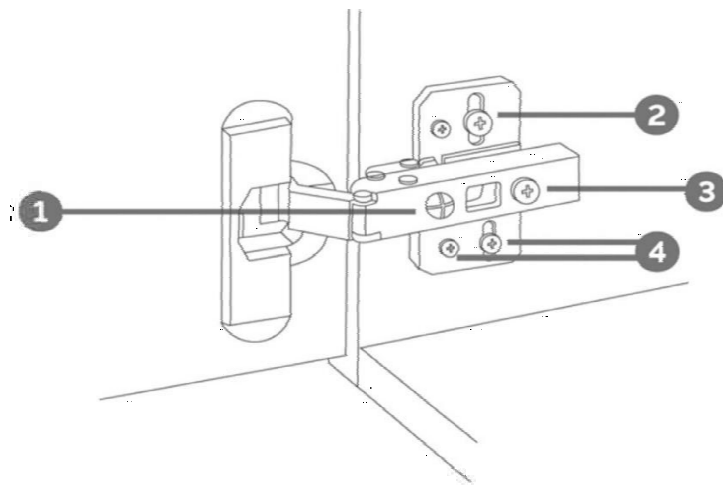


1 Sideways / Tilt adjustment

Turn the screw
clockwise to move the door further away from
 the side of the cabinet
anticlockwise to move the door closer to the
 side of the cabinet

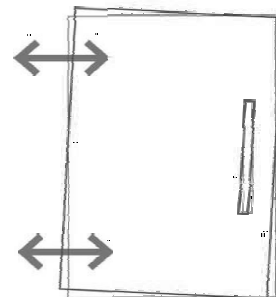

2 4 Height adjustment

While supporting the weight of the door, turn the
 screws
clockwise to move the door up
anticlockwise to move the door down

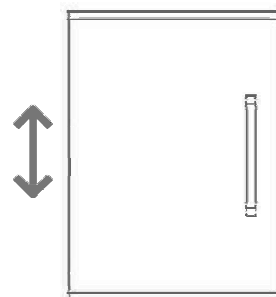

3 Forward and back adjustment

If the gap between the back of the door and the
 cabinet is too small, and the door may not close
 fully. Turn the screw
clockwise to decrease the gap between the
 door and the cabinet
anticlockwise to increase the gap between the
 door and the cabinet

