


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET

SKU - N710P334910

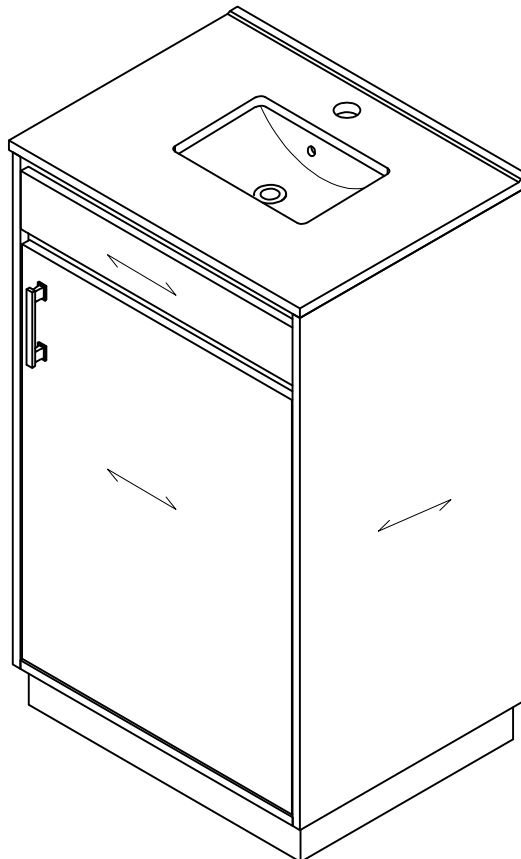


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment.

Separate, identify and count all parts and hardware.

Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED

***Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**




+




2:00 h

Tools Required



(Not included)




(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

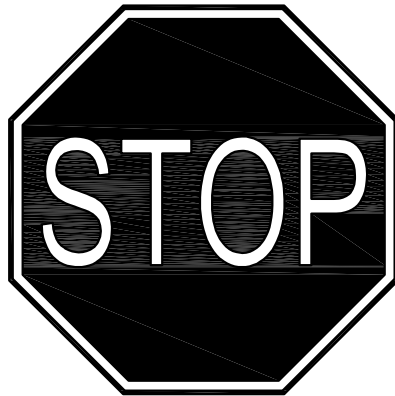

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

**If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.**









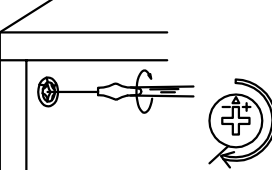
Before Installation

Important- Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions

		Diagram A Insert Cam Ball into hole as shown in diagram A.	
		Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interlock properly.	
		Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.	
			Connect the panels together.
			ARROW SIGN Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
			To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Detail View

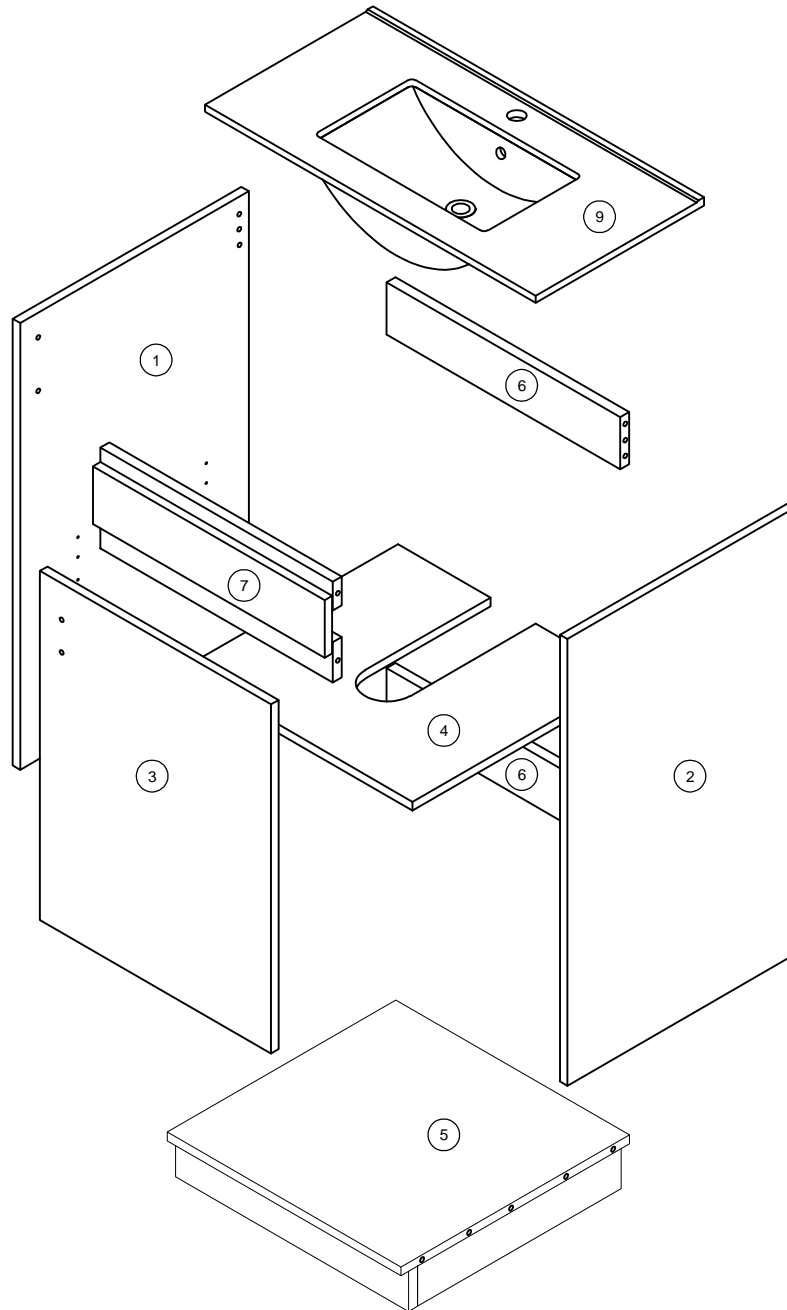

Identifying the Hardware-Identify the hardware using the illustrations below.


Part Lists N710P334910

1




Side Panel (L) - 1pc

2

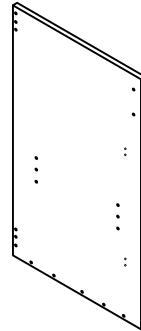


Side Panel (R) - 1pc

3

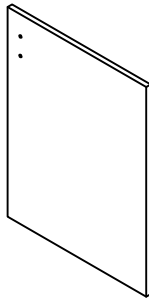


Door Panel - 1pc

4

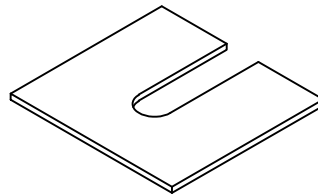


Shelf Panel - 1pc

5

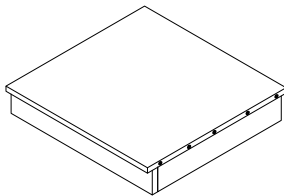


Base Frame - 1pc

6

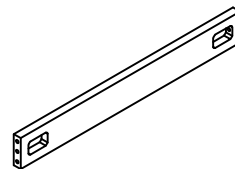


Back bar - 2pcs

7

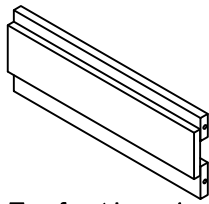











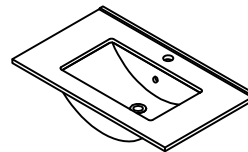

Top front bar - 1pc

8





Sink - 1pc



Hardware Lists N710P334910

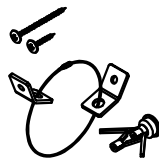A  <p>Ø8*30mm</p> <p>Wood dowel (12pcs)</p>	B  <p>Ø6*32mm</p> <p>Three in one bolts (6pcs)</p>	C  <p>Ø14.5*9.5mm</p> <p>Three in one locks (6pcs)</p>
D  <p>Damping hinge (2 sets)</p>	E  <p>Ø13xM6*30mm</p> <p>Hex-Head bolts (8pcs)</p>	F  <p>Ø8xØ3.5*10mm</p> <p>Flat head screw (4pcs)</p>
G  <p>K4mm</p> <p>Allen key (1pc)</p>	H  <p>Handle (1pc)</p>	I  <p>Ø8xM4*20mm</p> <p>Handle screws (2pcs)</p>
J  <p>Flat washers (8pcs)</p>	K  <p>Anti fall Hardware (2 sets)</p>	M  <p>Shelf pin(4pcs)</p>


STEP:1

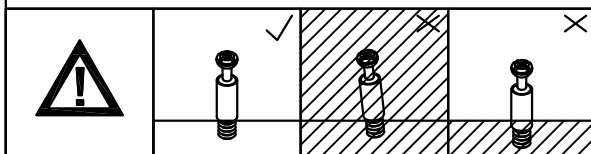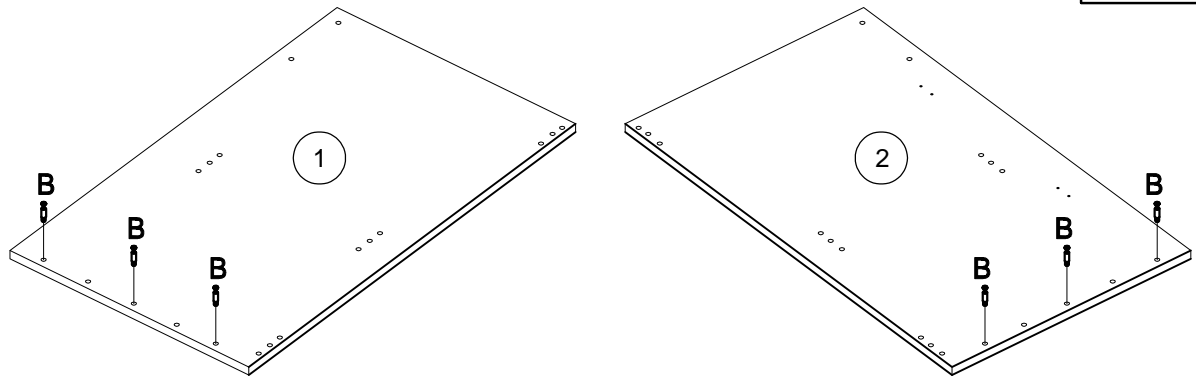





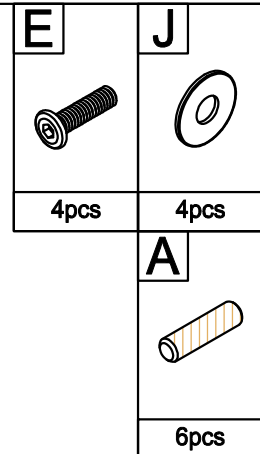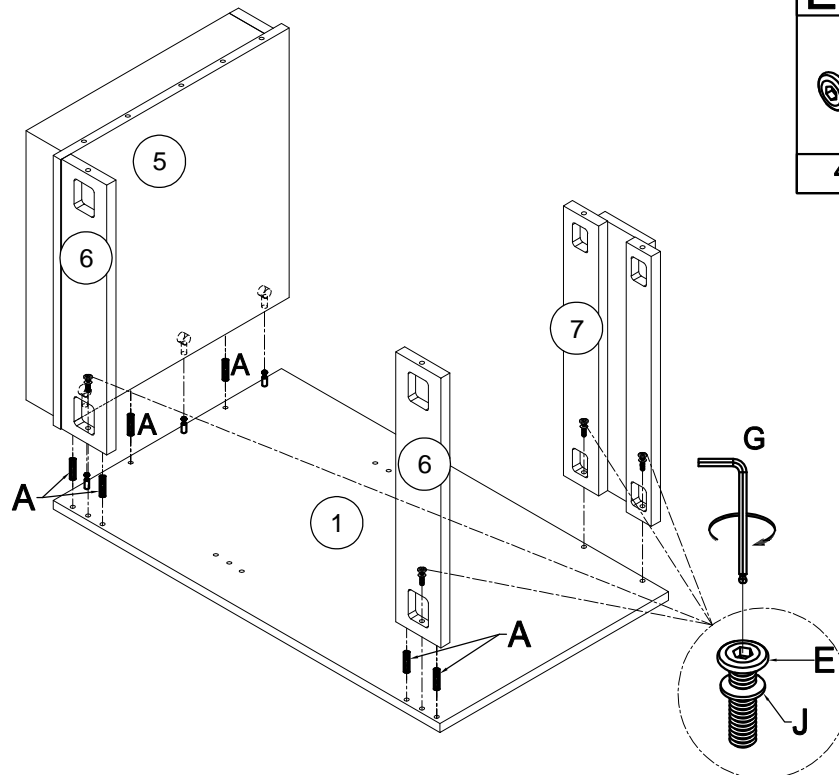
STEP:2

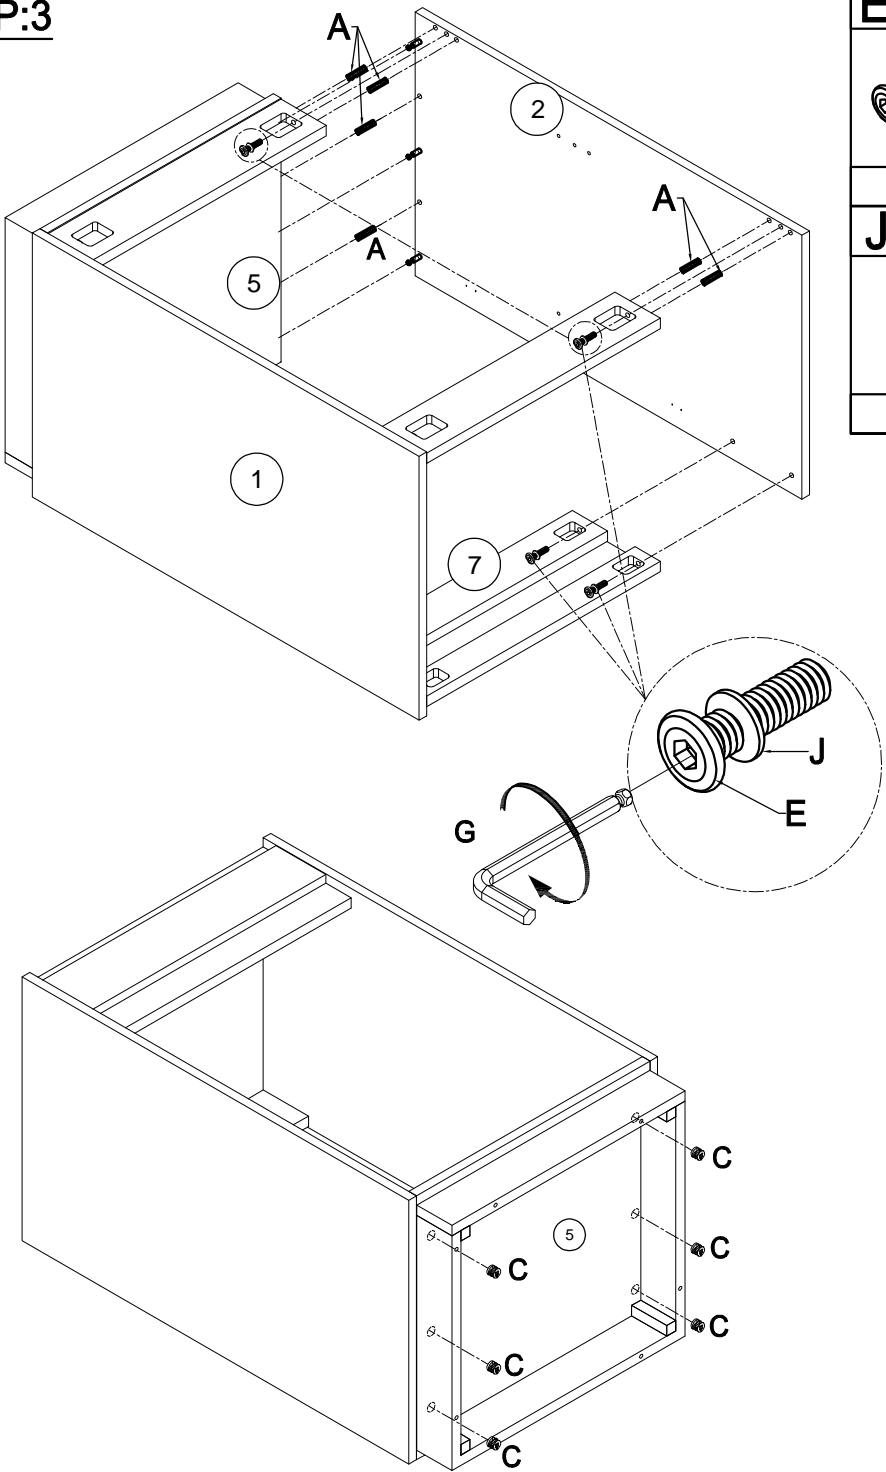


STEP:3



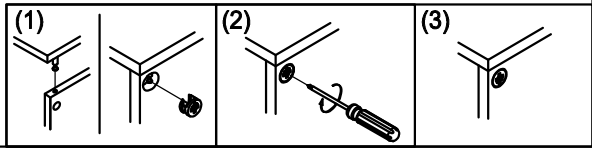



E	C
	
4pcs	6pcs
J	A
	
4pcs	6pcs



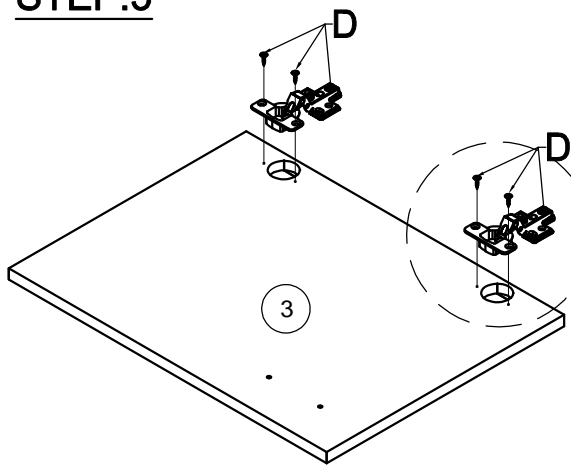


STEP:5

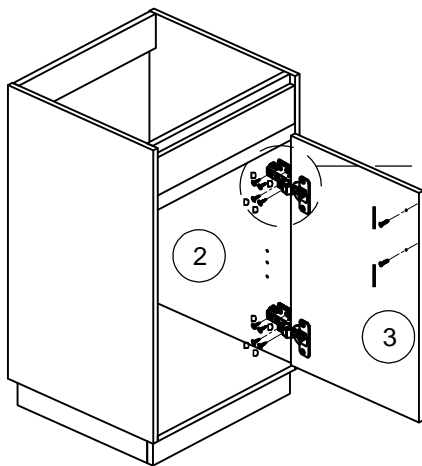
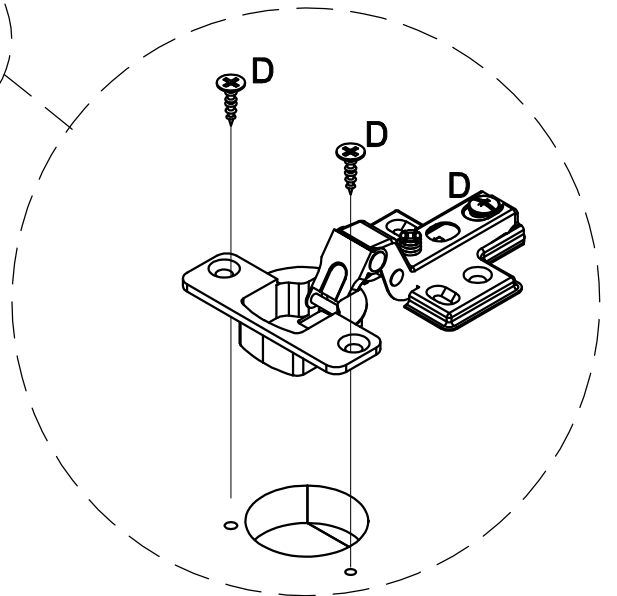


D	D
	
4pcs	2pcs







I	H
	
2pcs	1pc

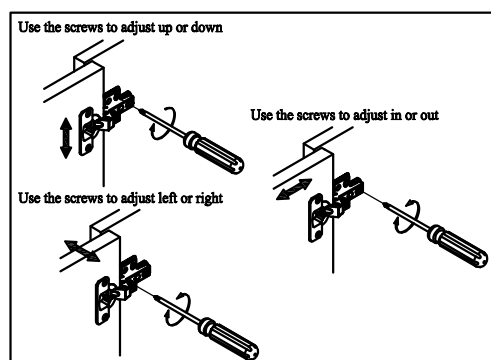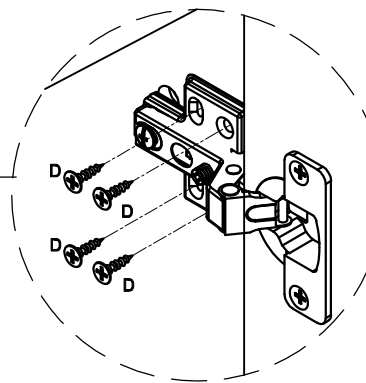D

8pcs




STEP: 7

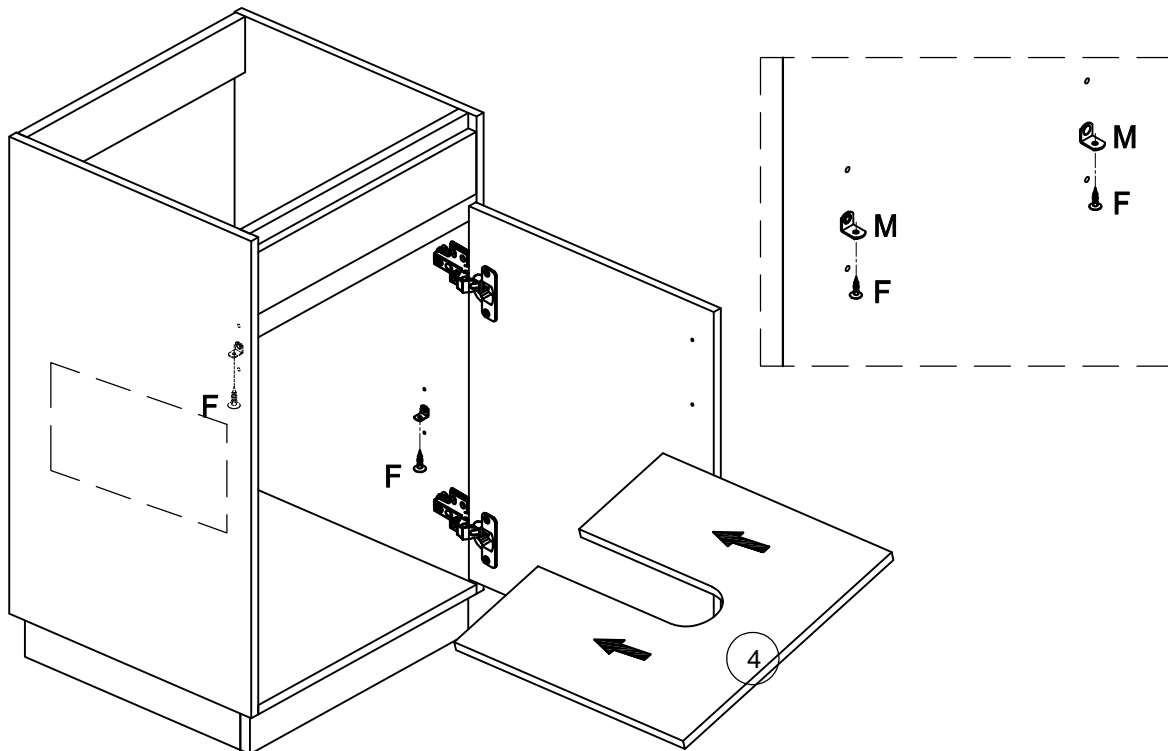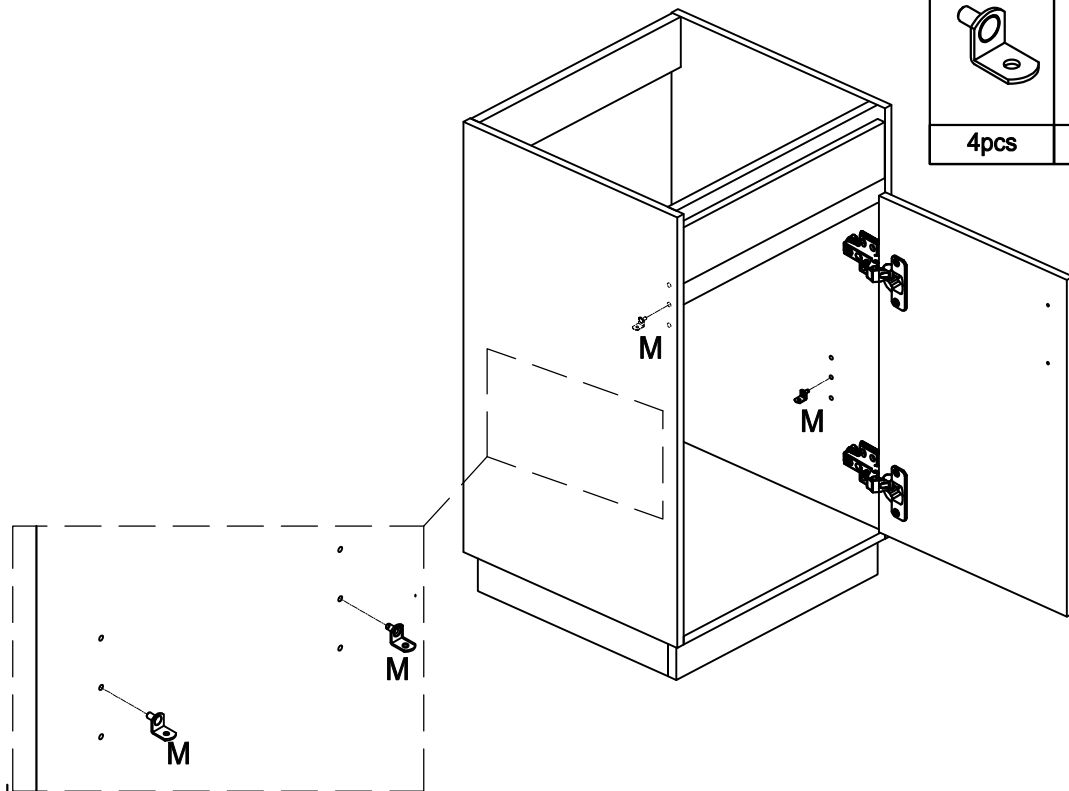M	F
	
4pcs	4pcs



STEP:8

**Install the sink on the cabinet with glue.
Let stand for 24 hours**

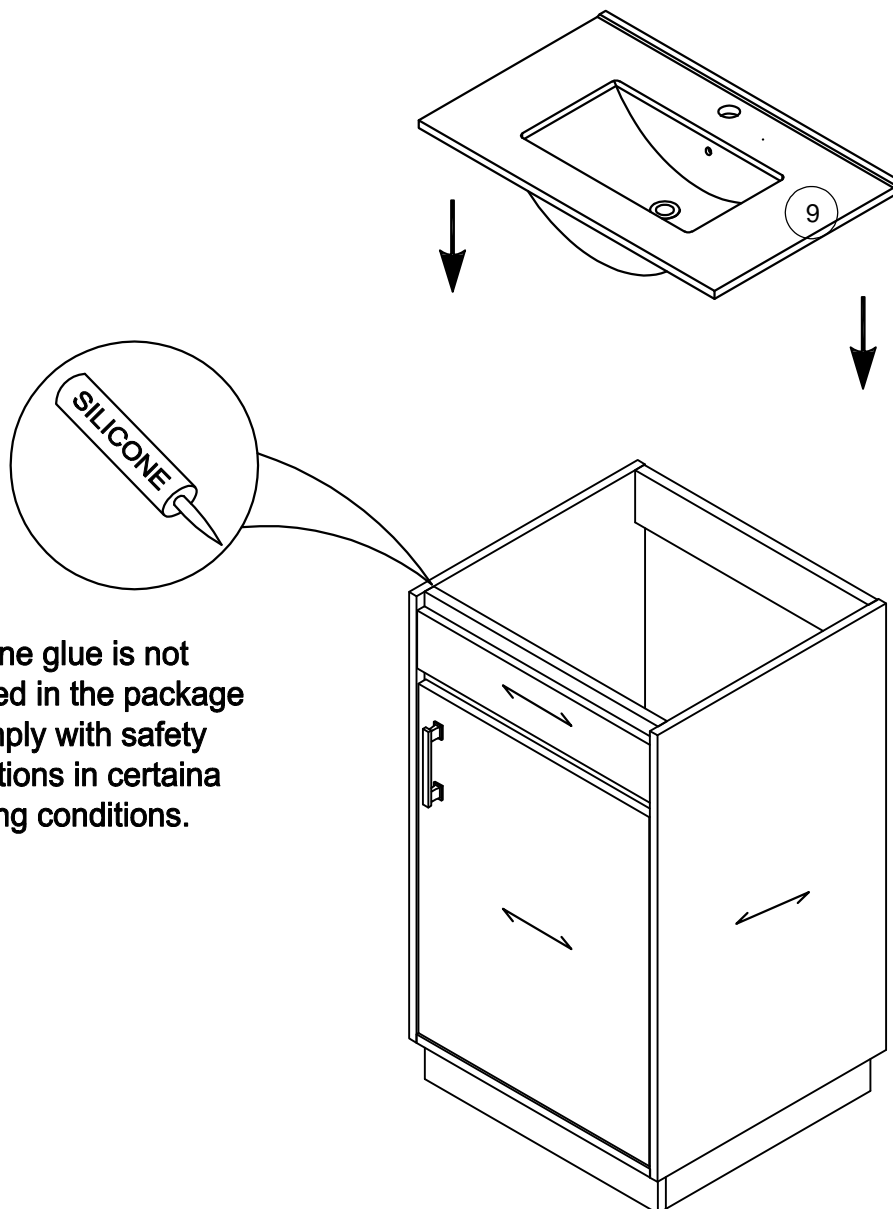

***Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.**

STEP:9




K





2 sets


Wall

K

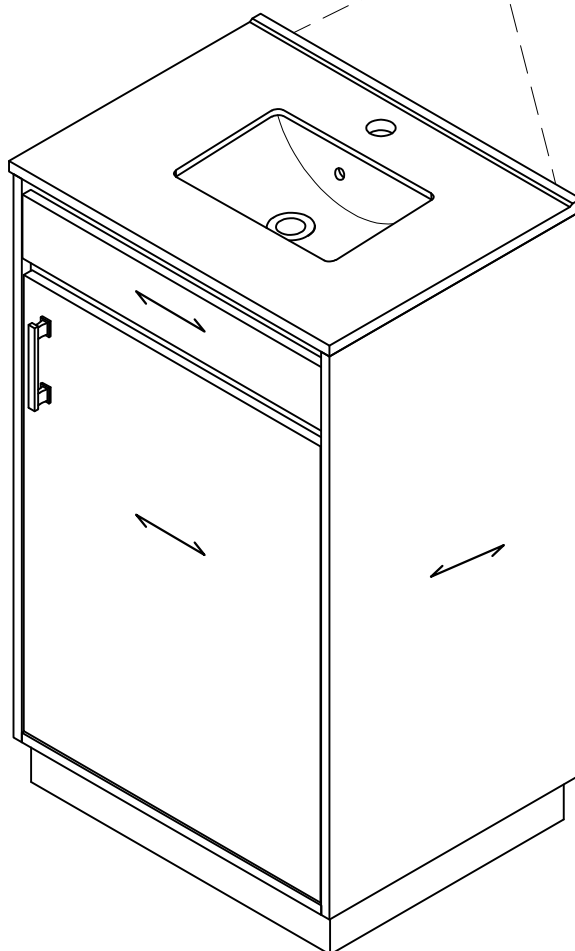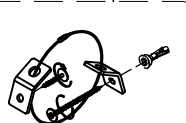

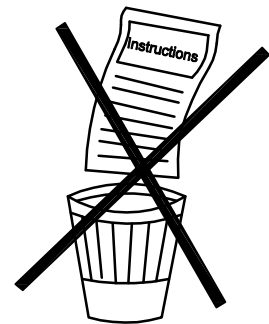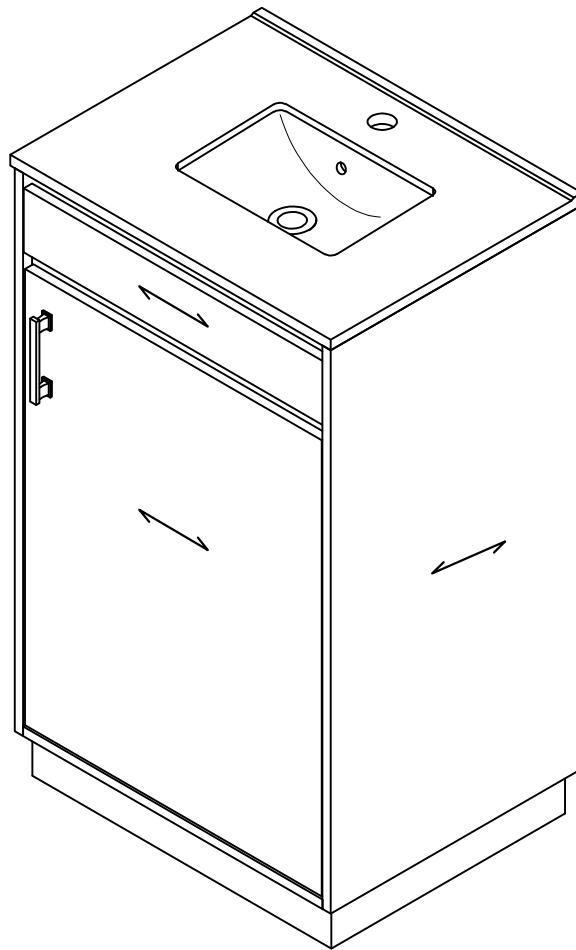

HINGE ADJUSTMENTS

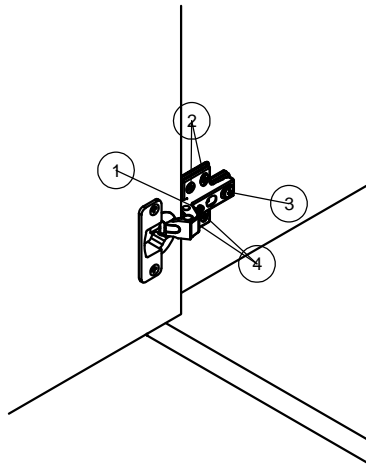


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

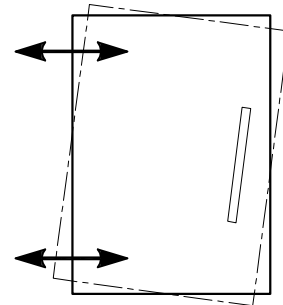


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

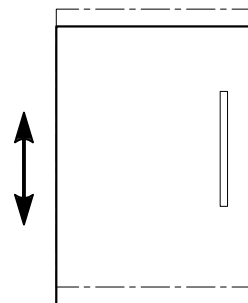

③ Forward and back adjustment

