


Assembly Instructions

ITEM# N719P292700

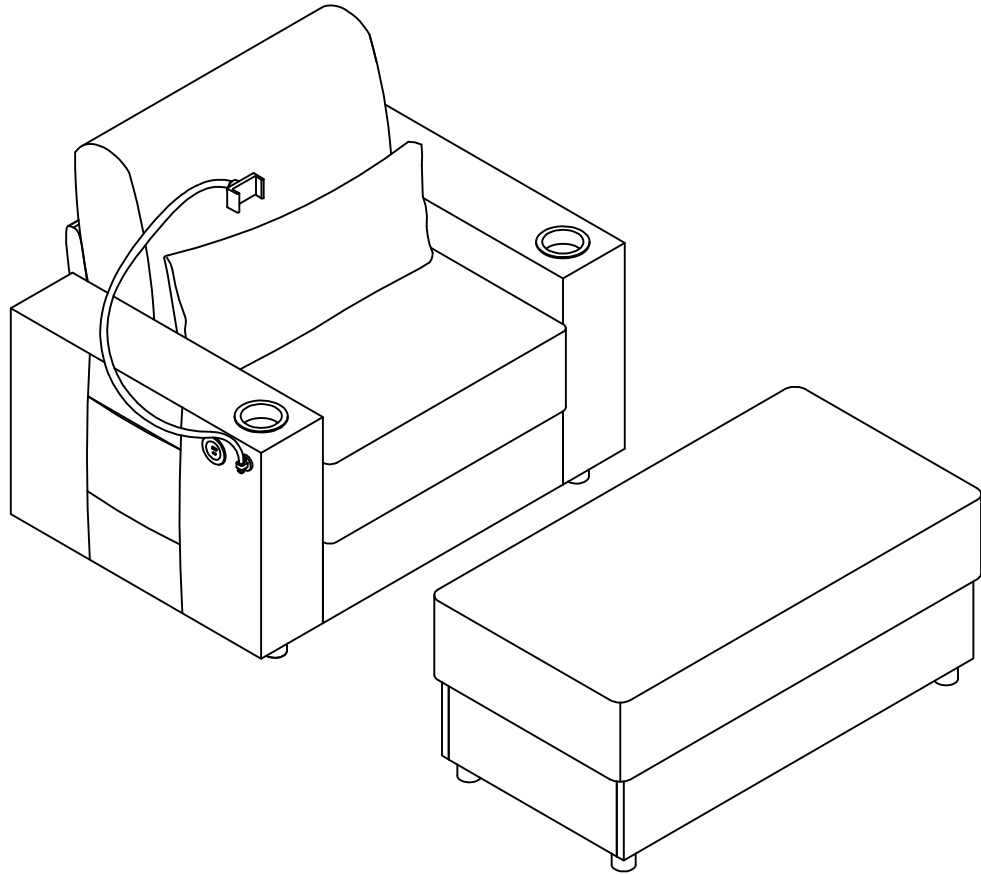

IMPORTANT NOTE

**Place all parts on a lean and smooth surface such as a rug or carpet to avoid the parts from being scratched.

**Before you begin, please review the assembly instruction step by step.























**Return & Warranty Policy:

-We strive to offer the highest quality products. We also provide positive solutions with replacements or refund if needed.


-If the item is damaged or defective, please take photos to show the problem and email to the seller.

-Please do not return back the product before contact the seller.

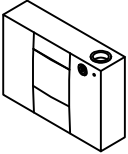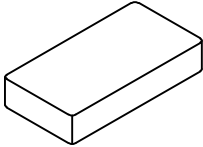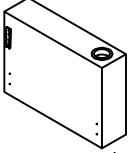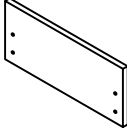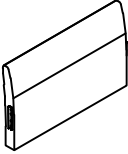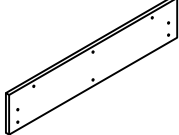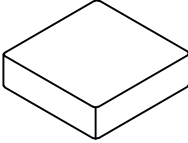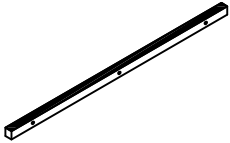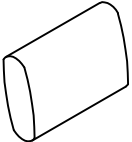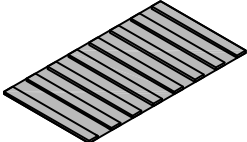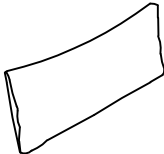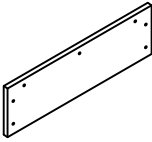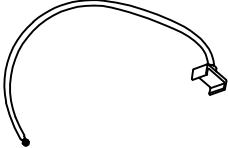

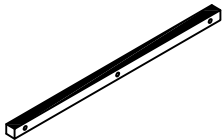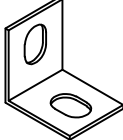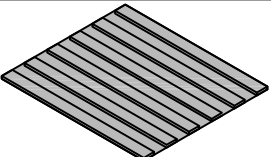


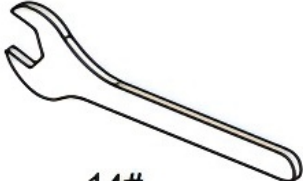
PART LISTS BOX 1: N719P292700

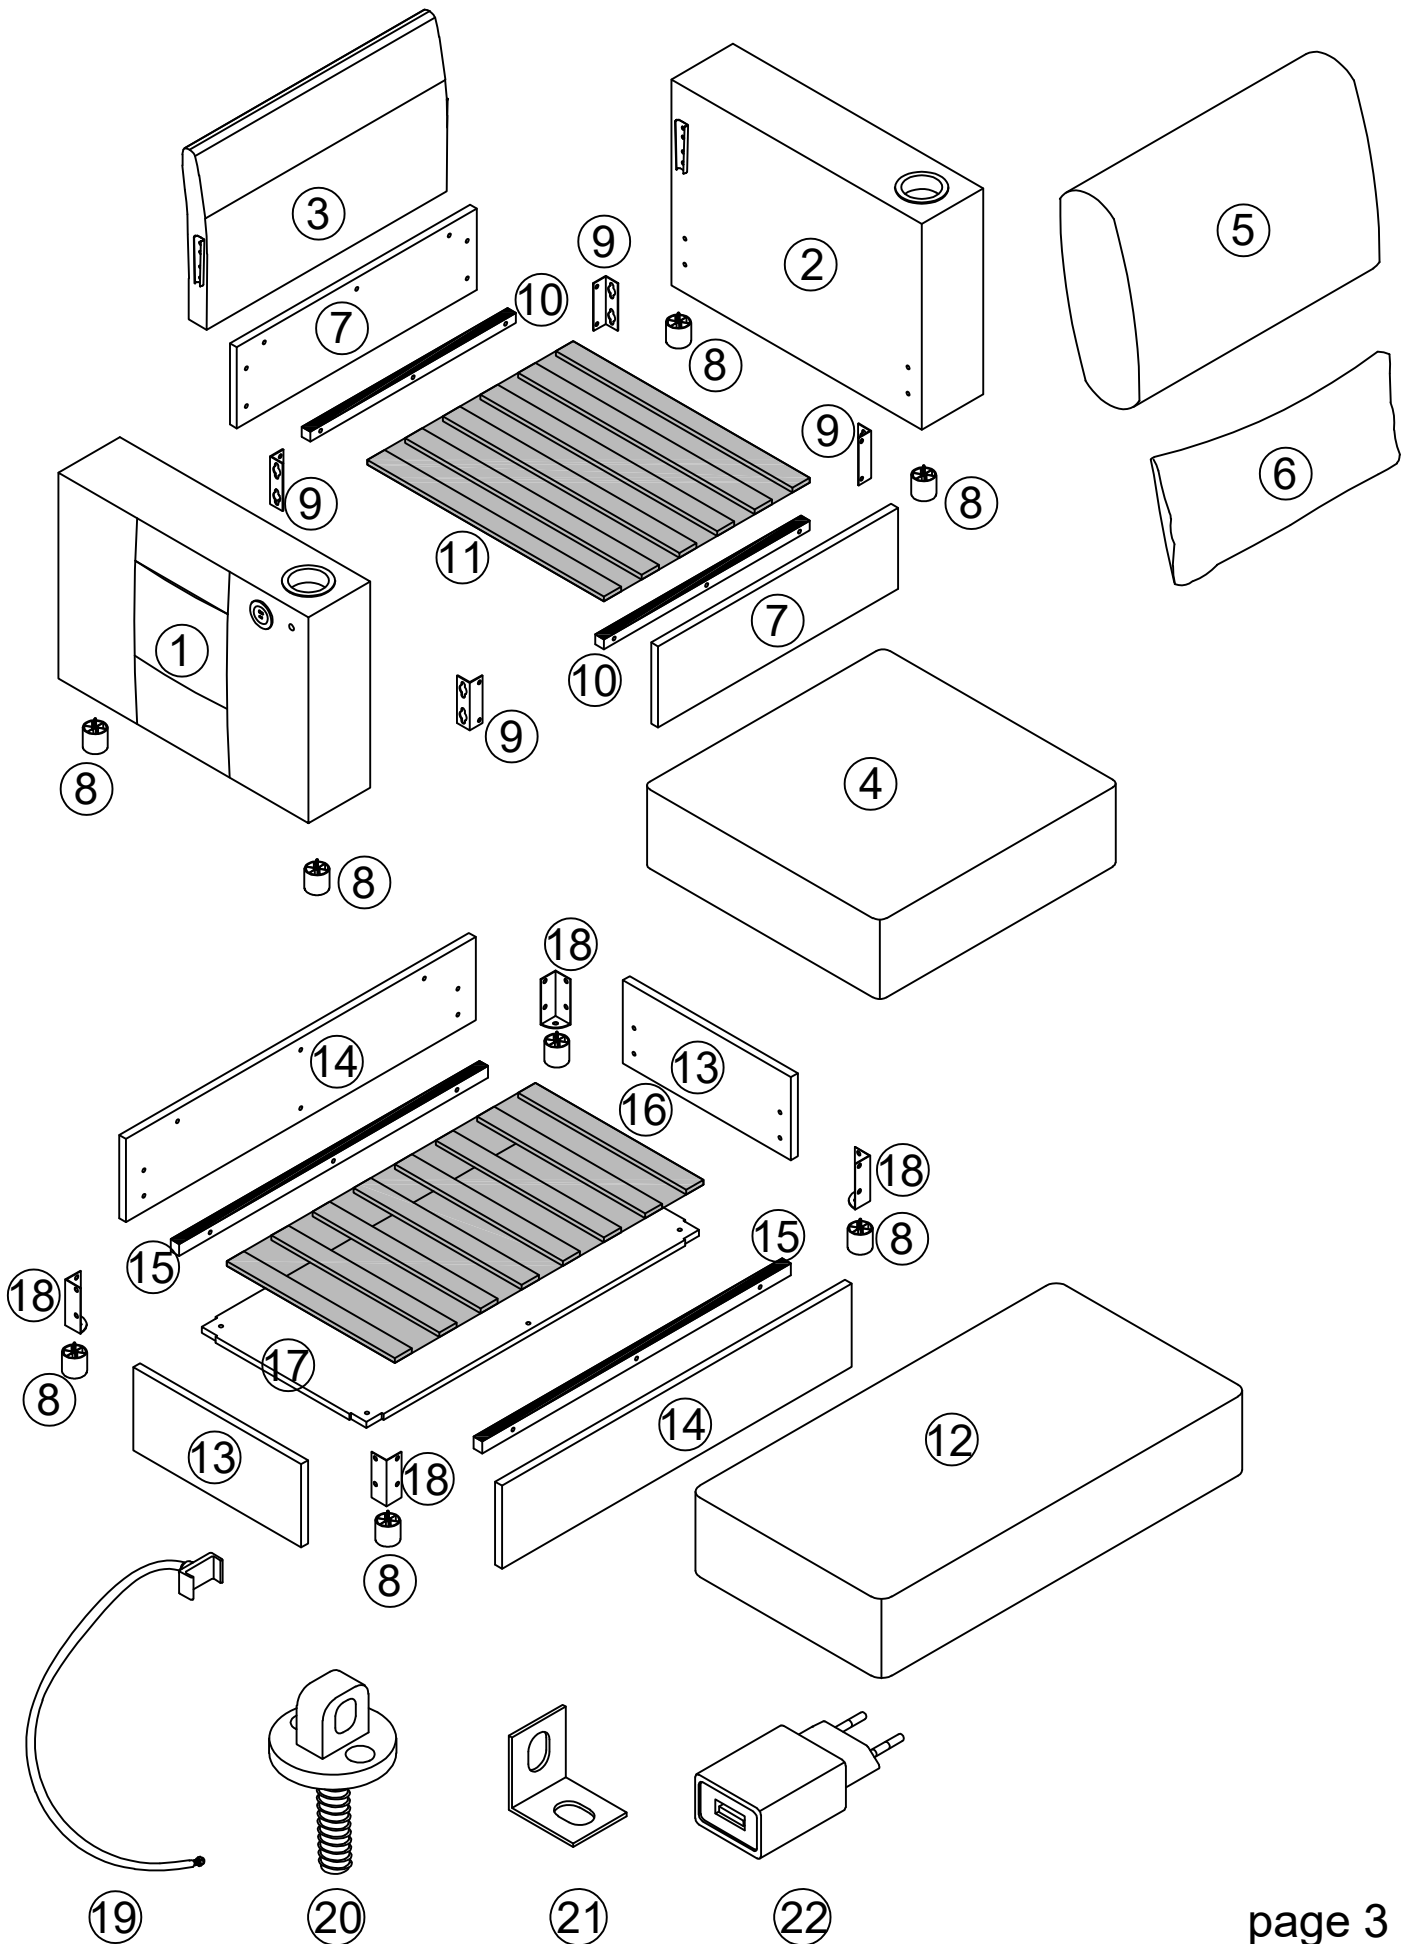Part NO.	Part Image	Part Name	QTY	Part NO.	Part Image	Part Name	QTY
①		Left Armrest	1	⑫		Ottoman Seat Cushion	1
②		Right Armrest	1	⑬		Short Side Panel	2
③		Backrest	1	⑭		Long Side Panel	2
④		Chair Seat Cushion	1	⑮		Pine Strip	2
⑤		Back Cushion	1	⑯		Ottoman Batten	1
⑥		Pillow	1	⑰		Bottom Plate	1
⑦		Bezel	2	⑱		Foot hardware	4
⑧		Plastic Foot	8	⑲		Mobile Phone Stand	1
⑨		L-shaped iron hanging piece	4	⑳		Bolt	1
⑩		Pine Strip	2	㉑		L-shaped iron sheet	2
⑪		Chair Batten	1	㉒		Adapter	1


Sofa Overall Assembly Drawing




Hardware List

<p>Ax12+1 PCS</p>  <p>5/16X40mm</p>	<p>Bx8 PCS</p>  <p>5/16X25mm</p>	<p>Cx28+2 PCS</p>  <p>5/16X15mm</p>
<p>Dx2 PCS</p>  <p>M4X15mm</p>	<p>Ex1 PC</p>  <p>5/16</p>	<p>Fx1 PC</p>  <p>14#</p>


STEP 1

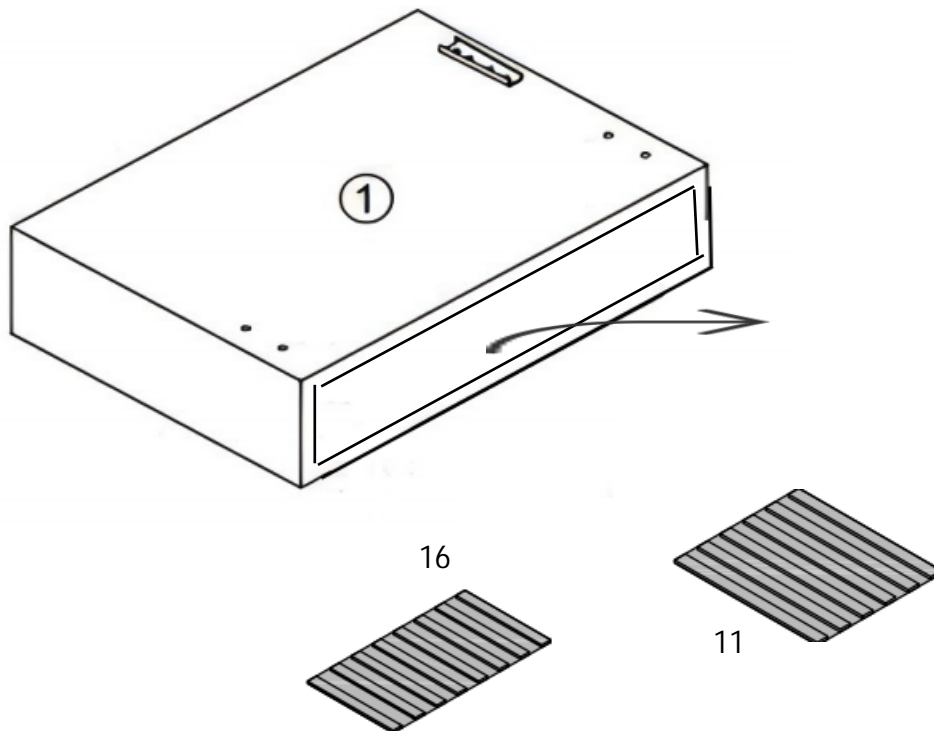

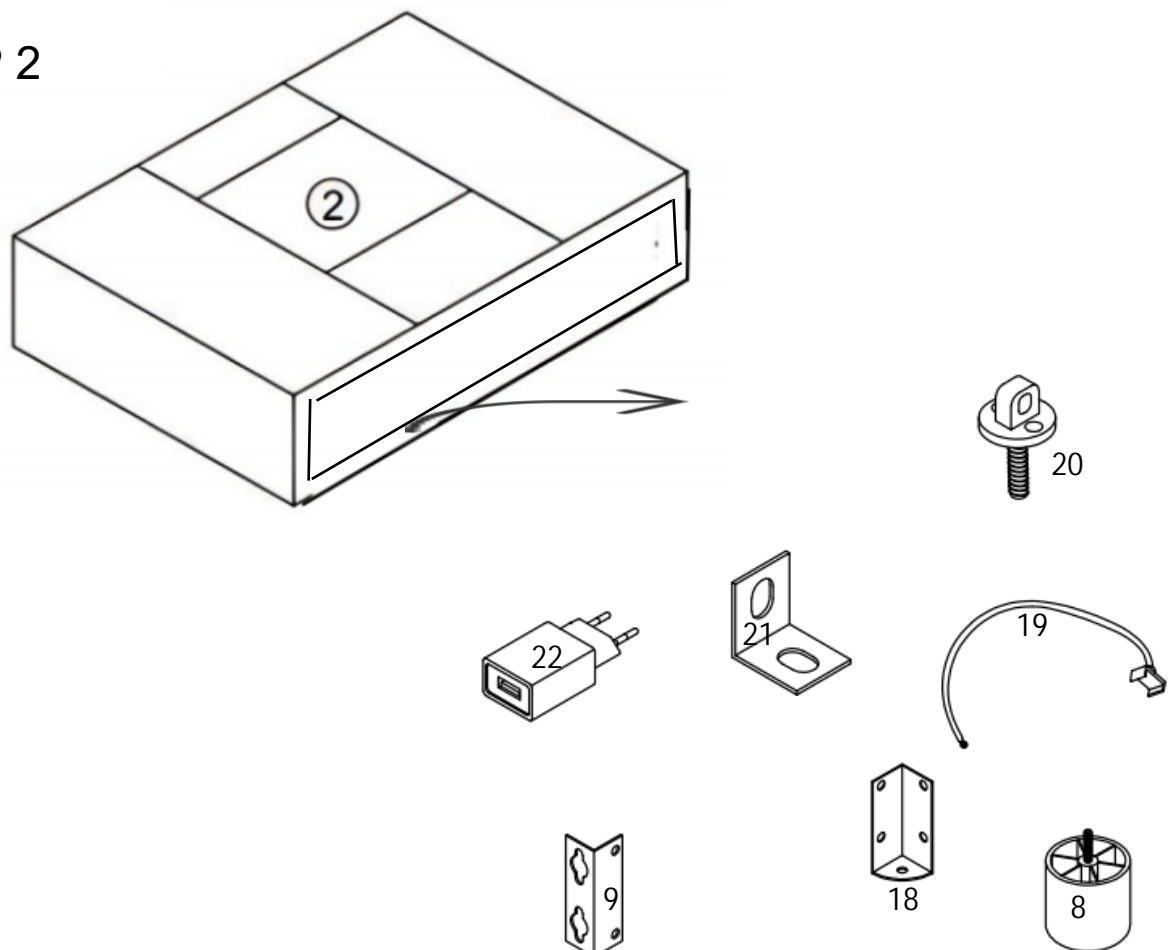


STEP 2

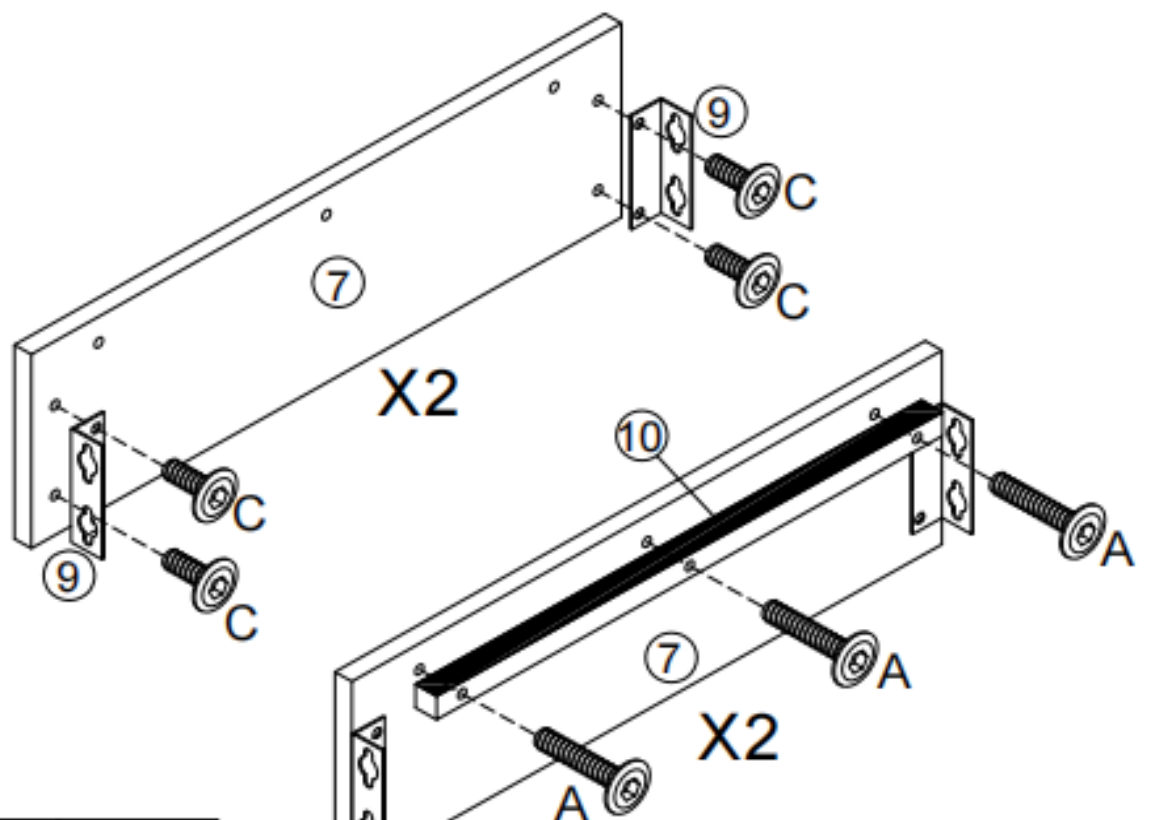


STEP 3




A x 6	C x 8	E x 1
		
5/16X40mm	5/16X15mm	5/16



STEP 4

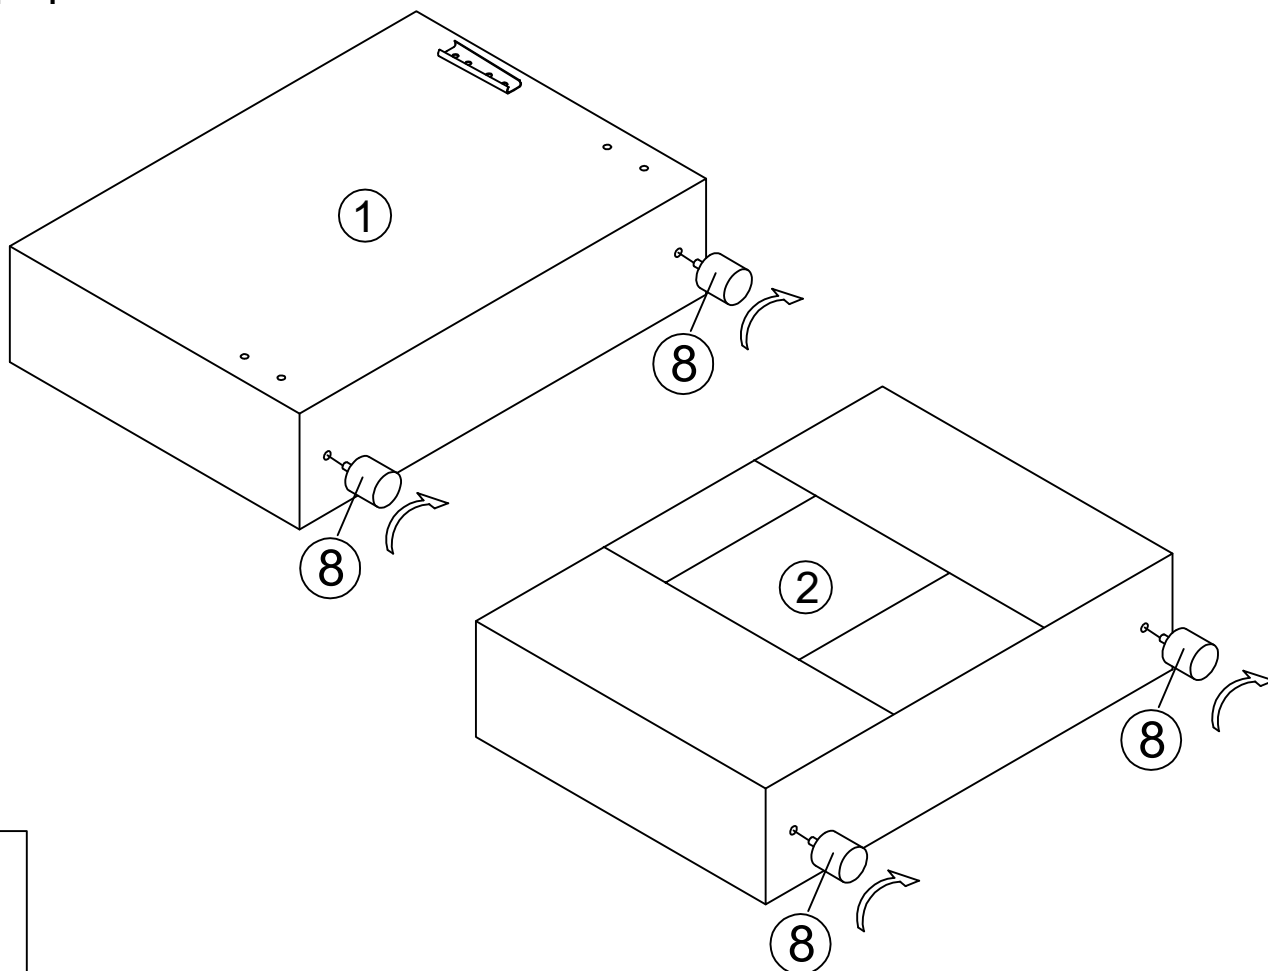



STEP 5

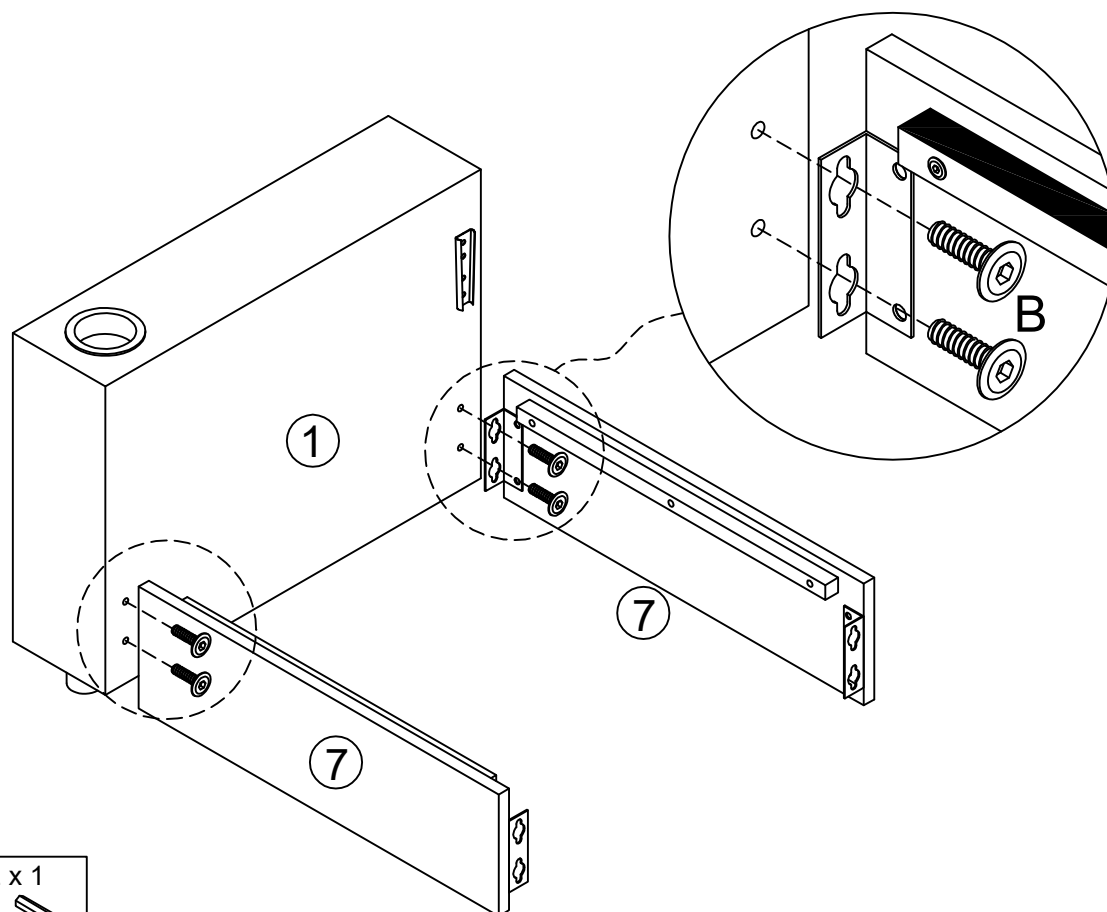


STEP 6

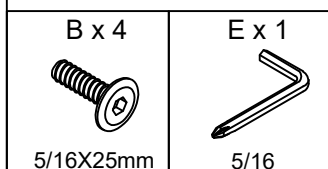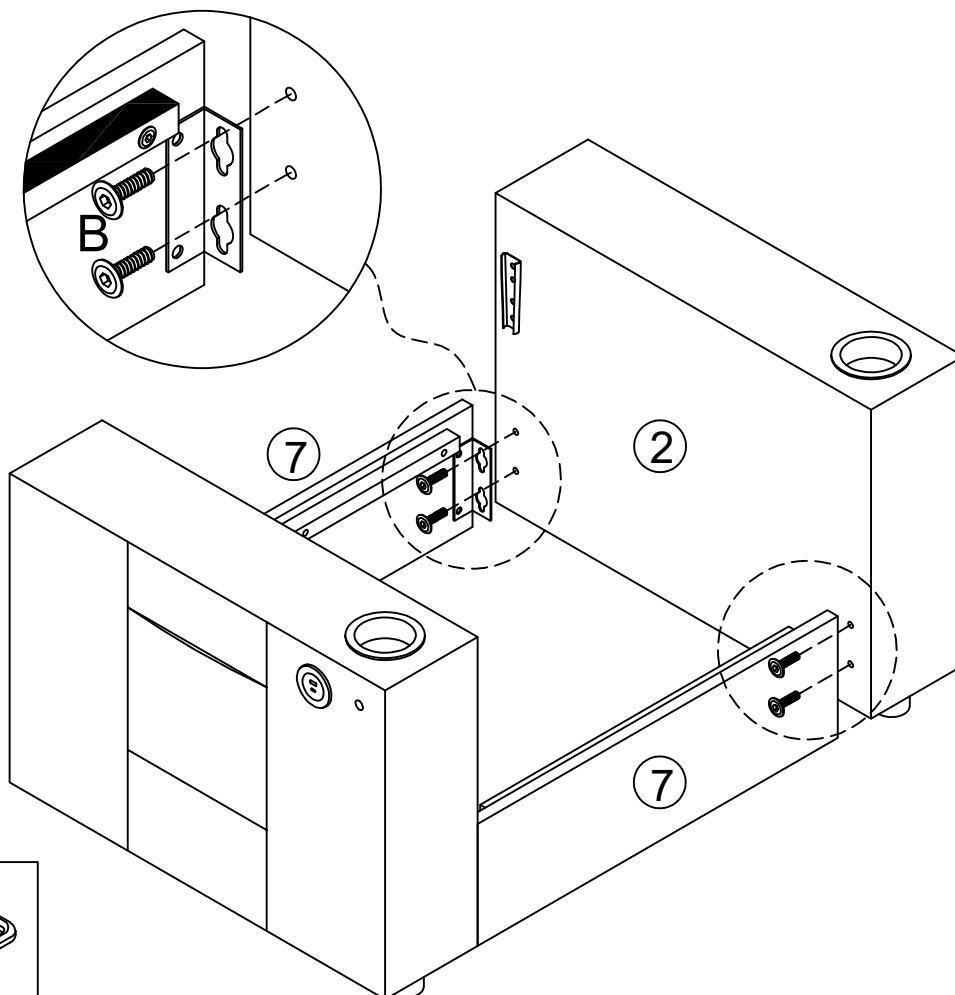



STEP 7

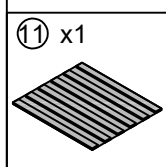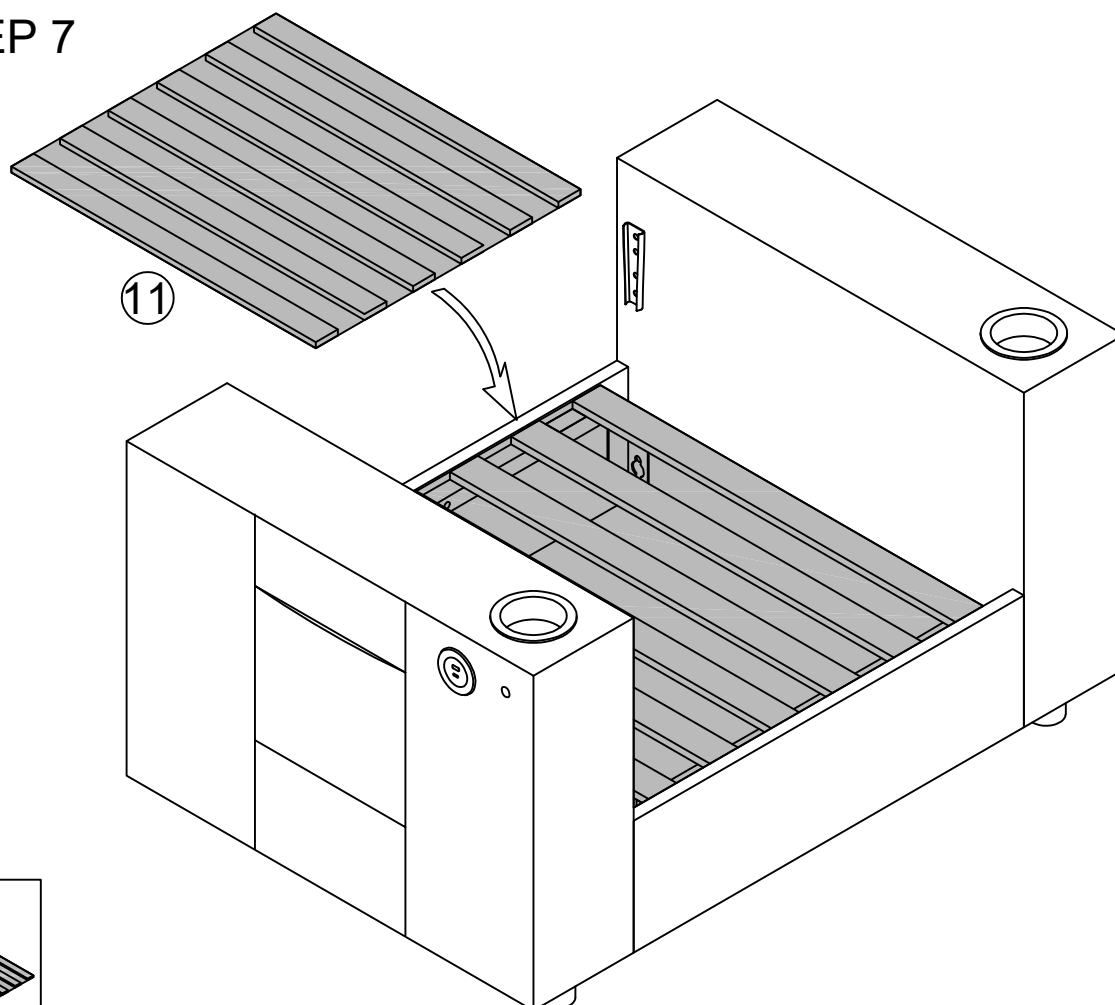


STEP 8

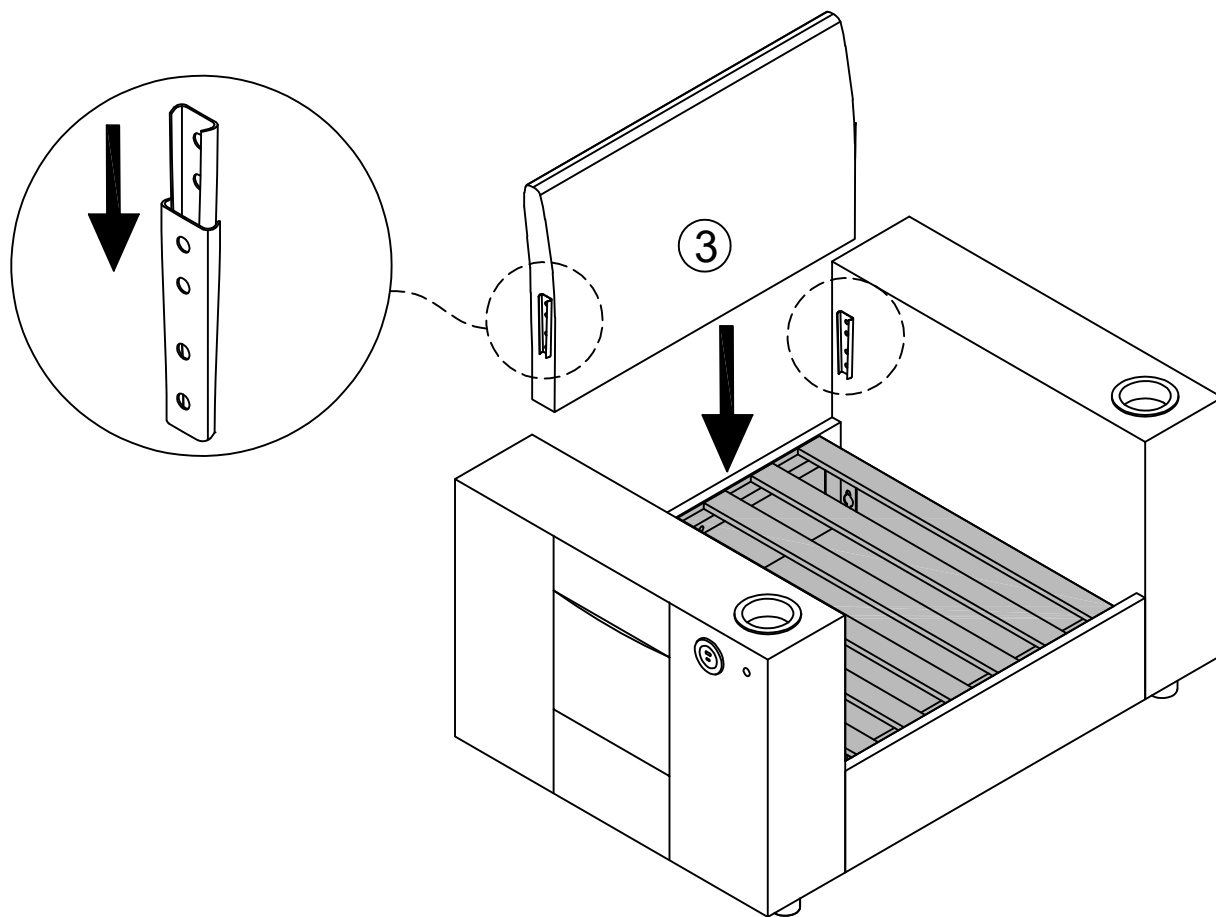


STEP 9

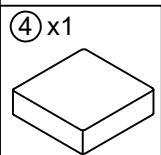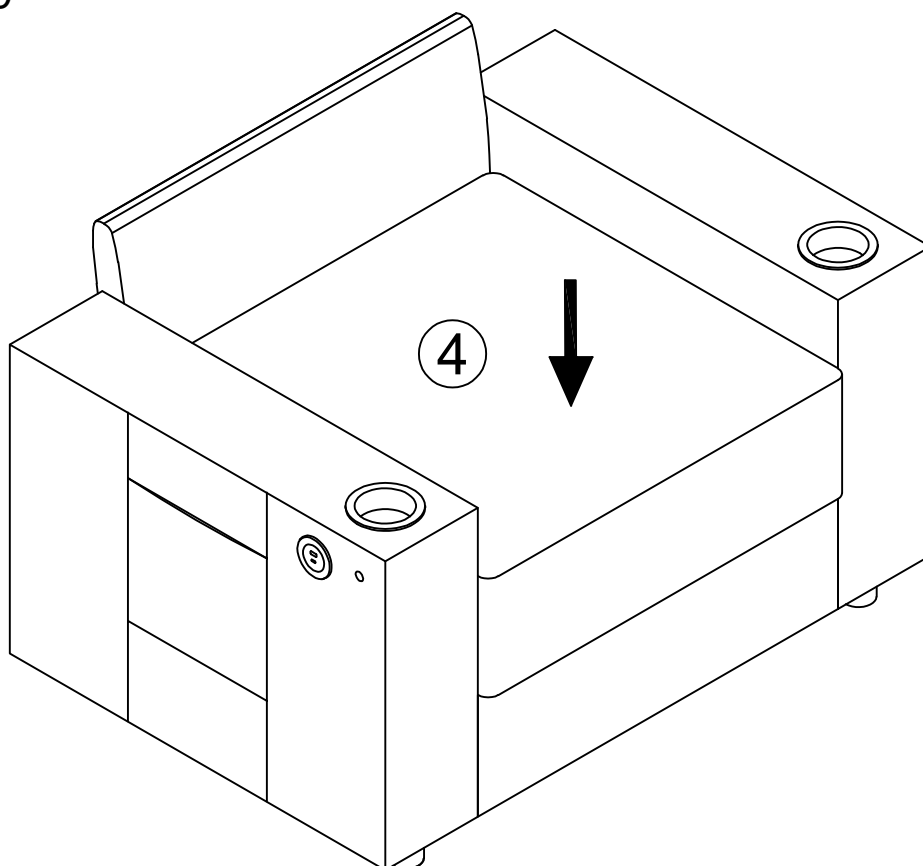


STEP 1 0

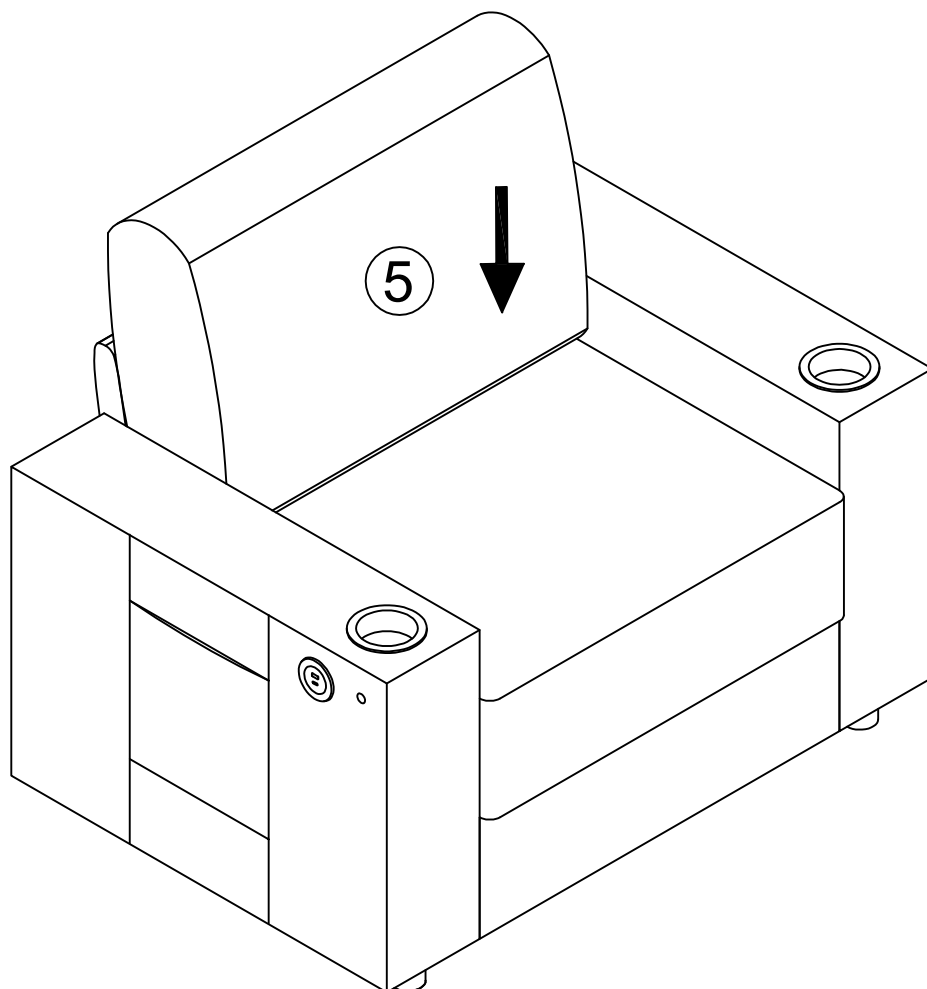


⑤ x1





STEP 1 1

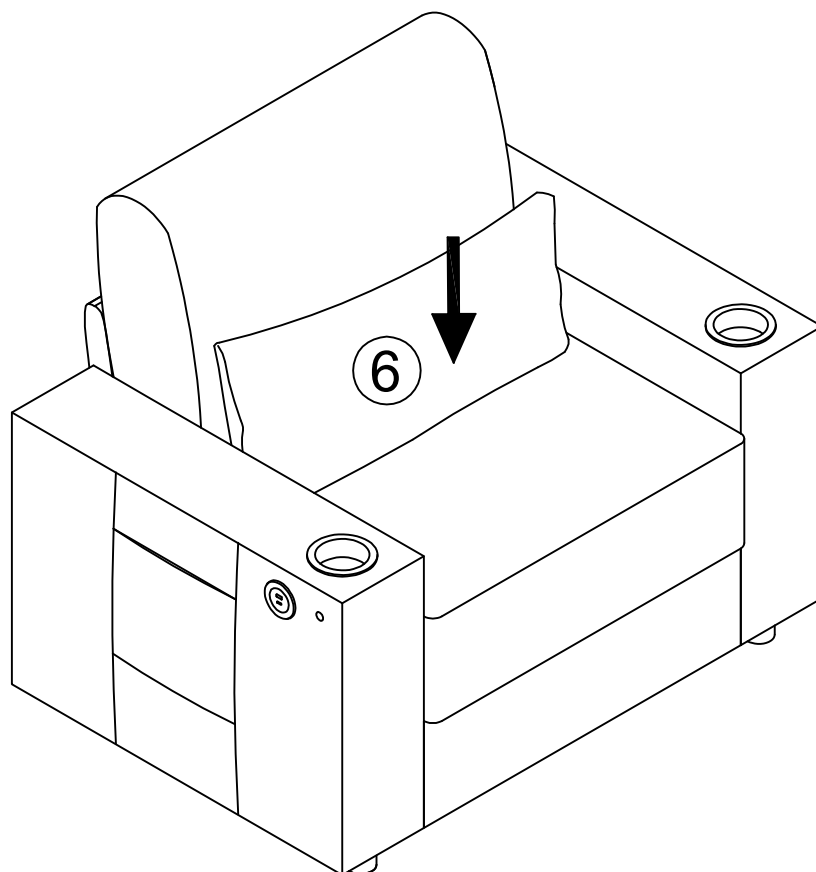



⑥ x1




STEP 12

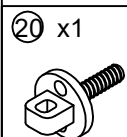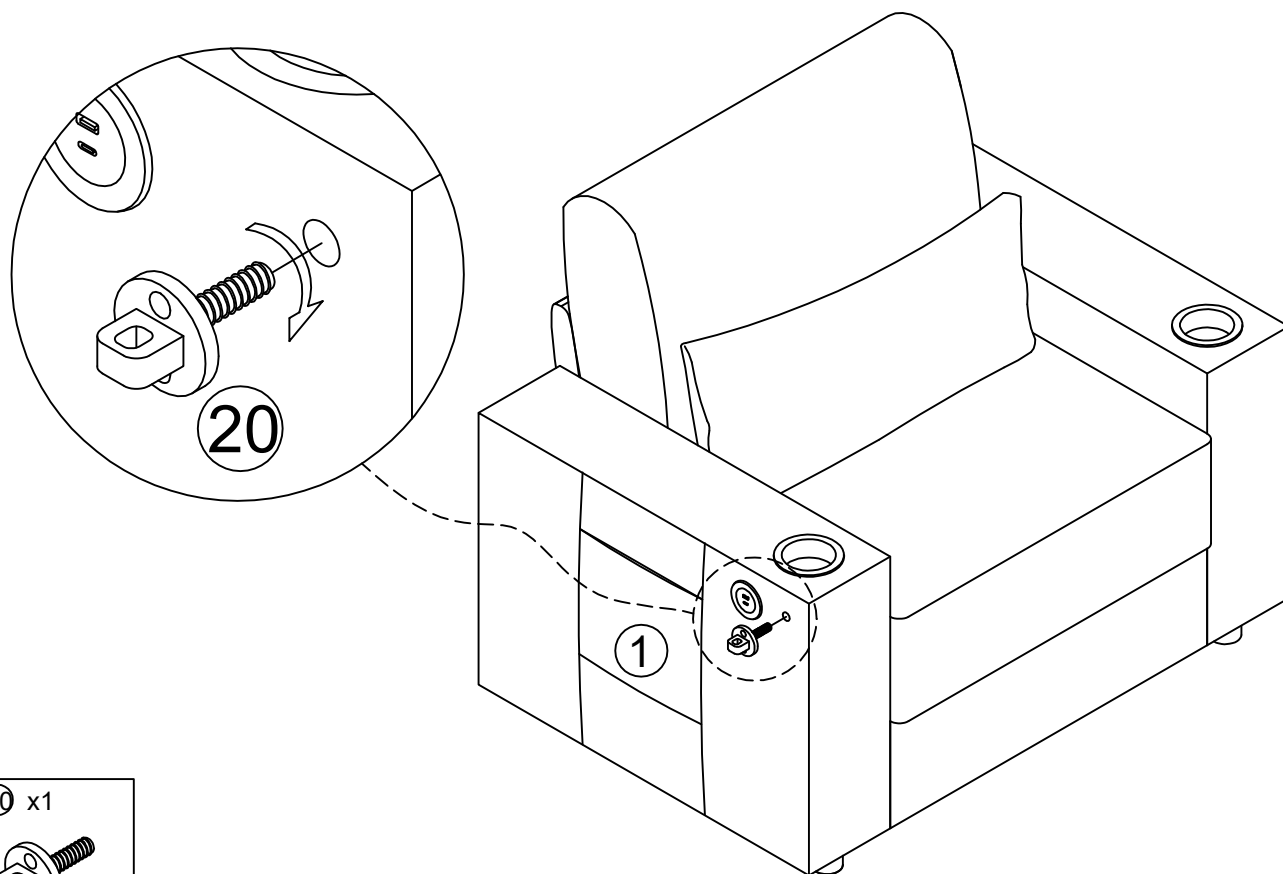


STEP 13

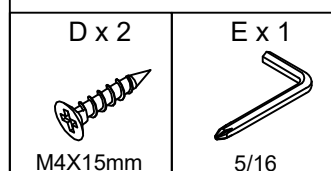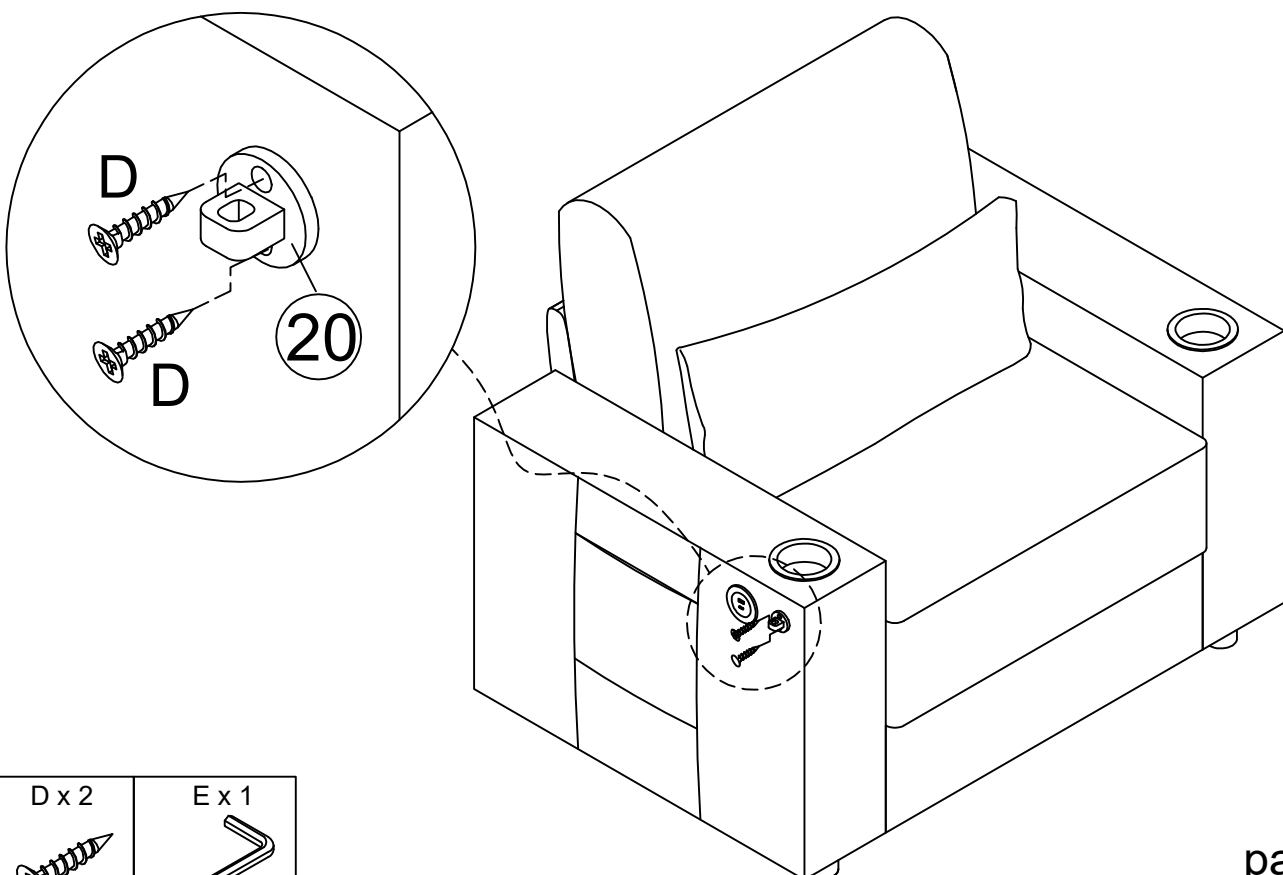



STEP 14

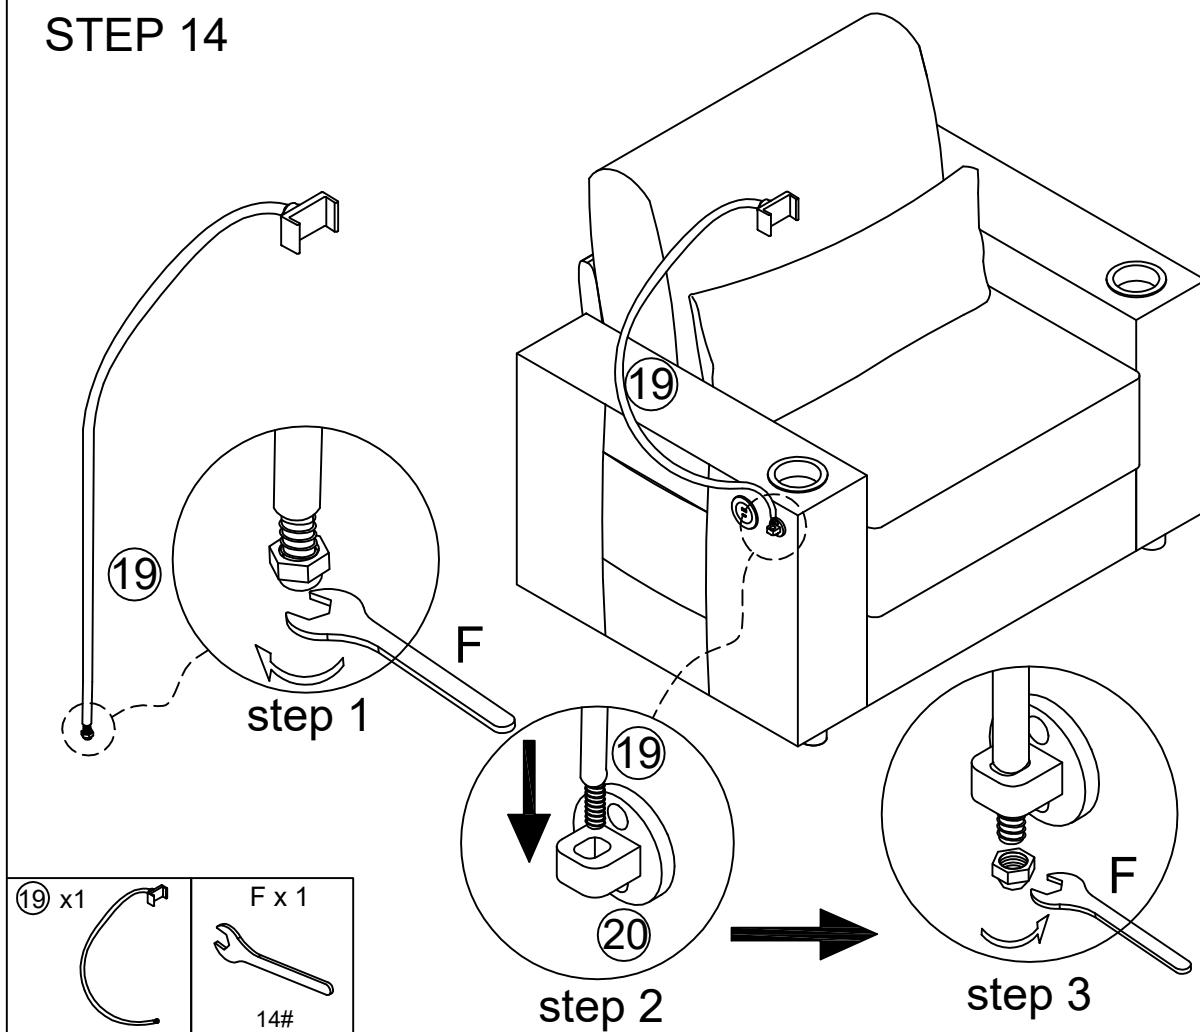



STEP 15

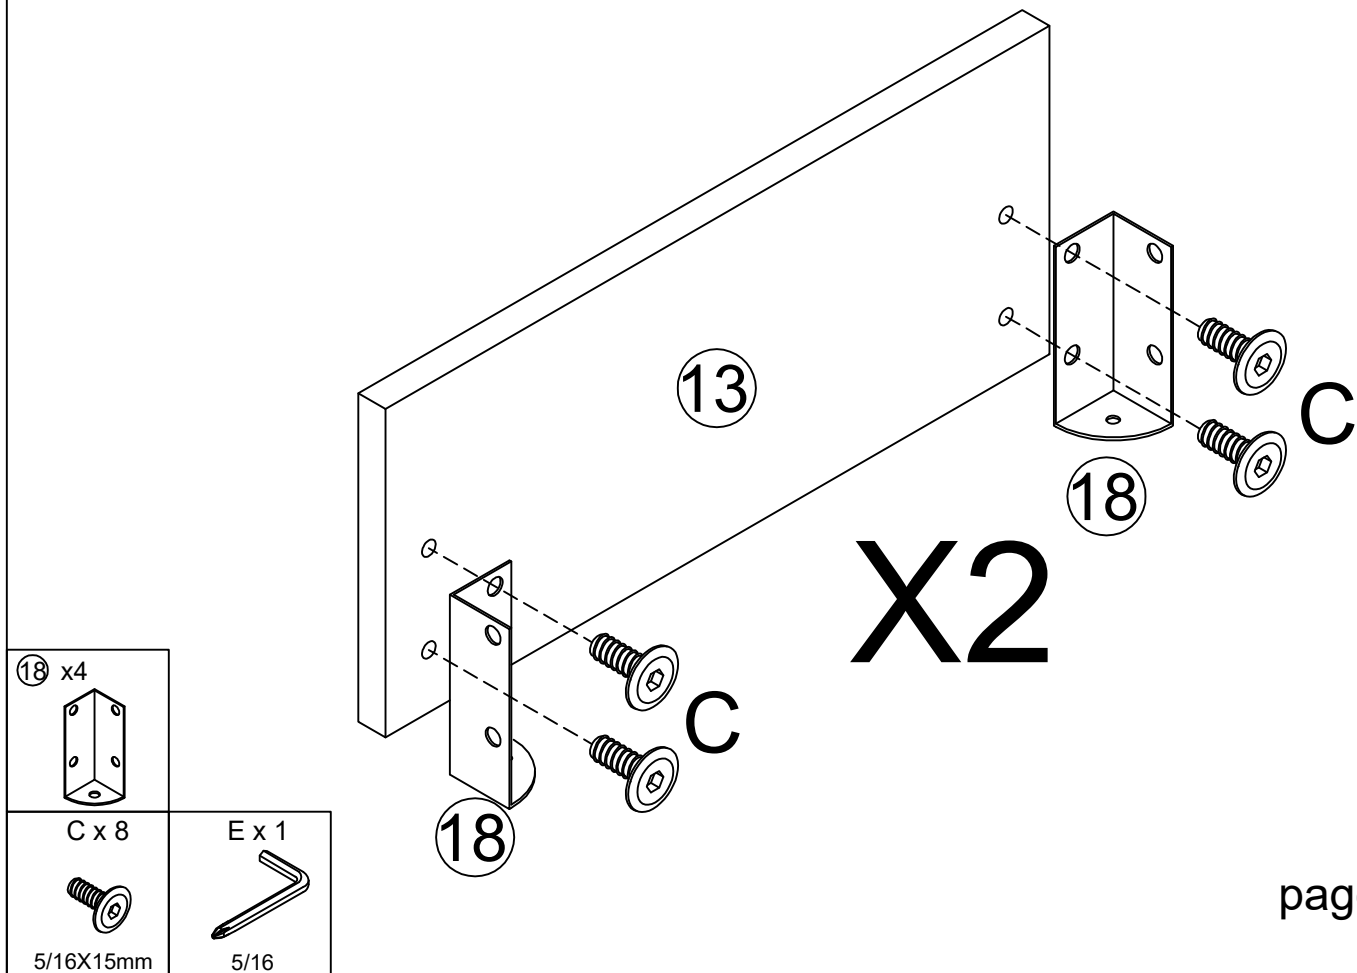




STEP 16

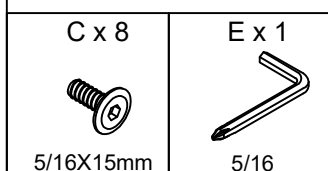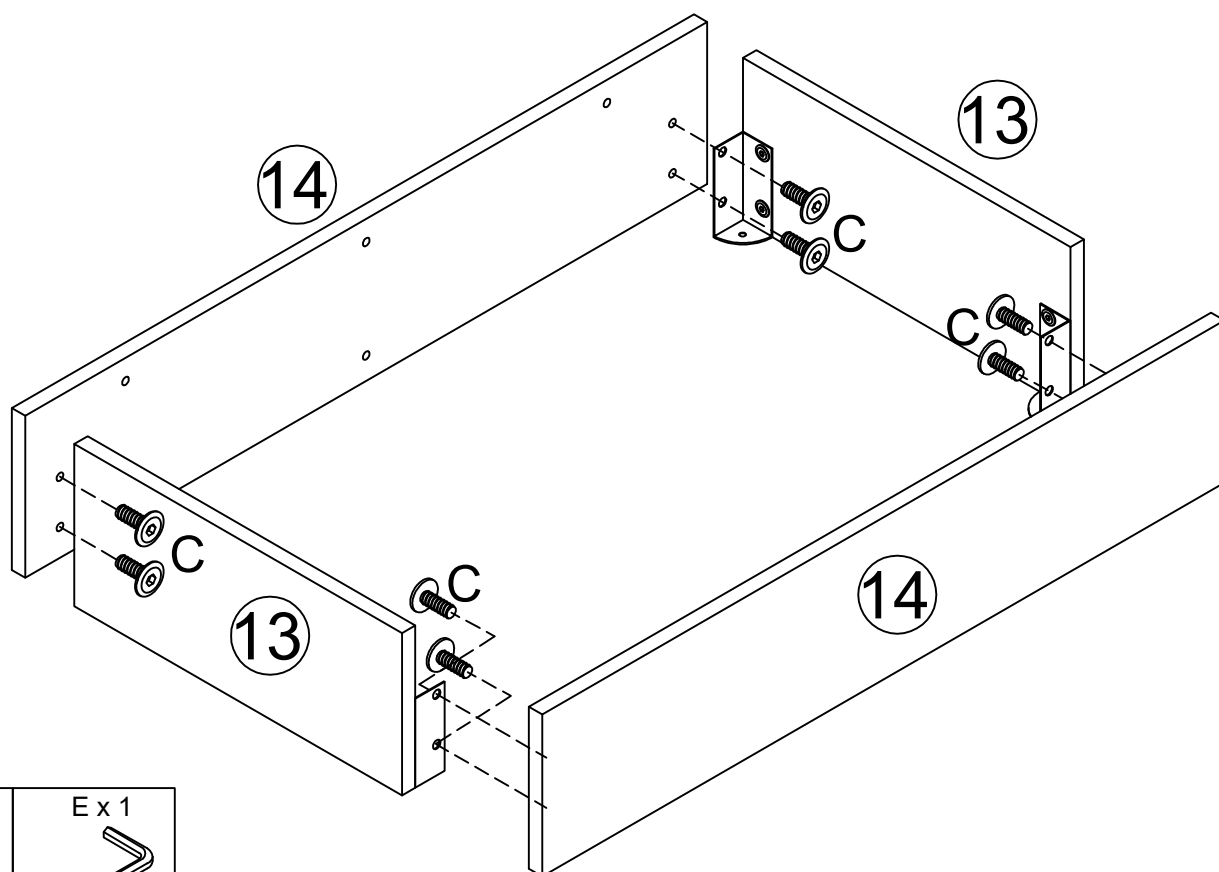



STEP 17

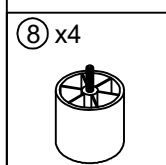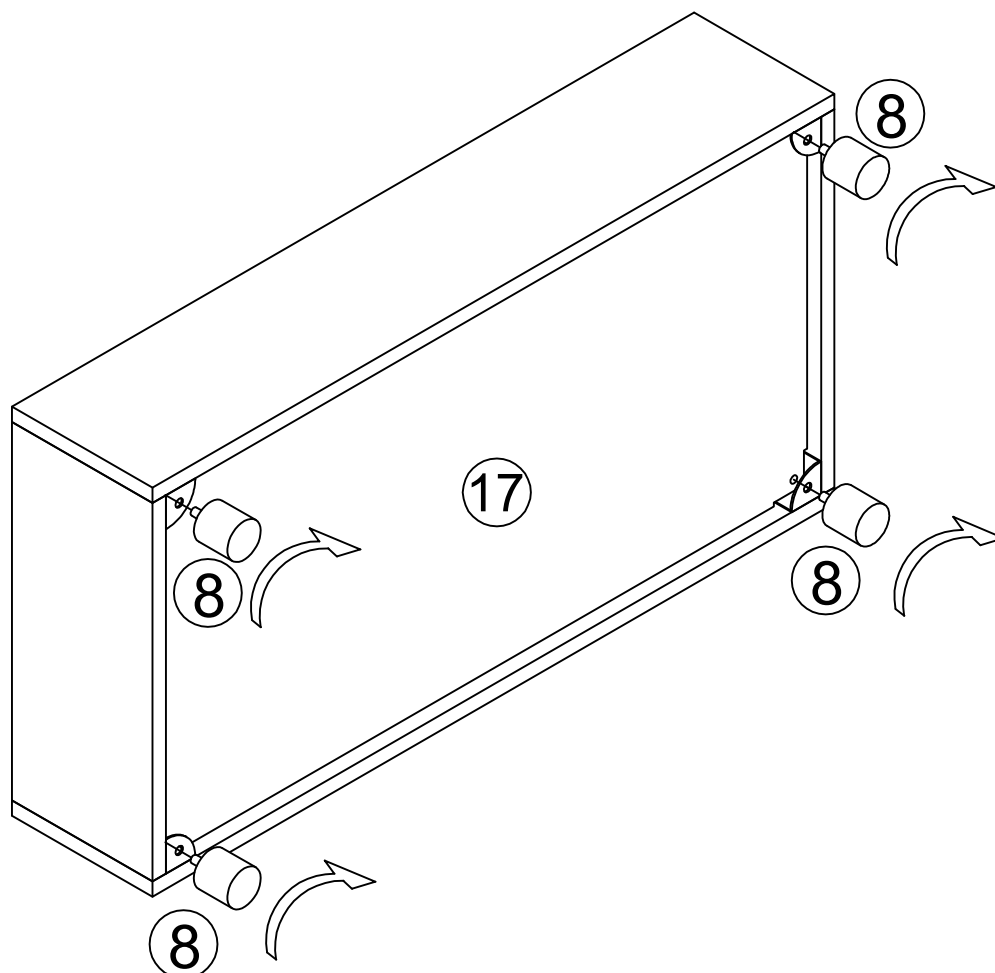




STEP 18

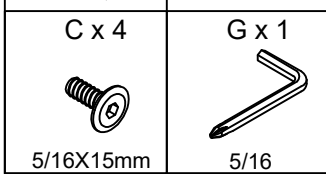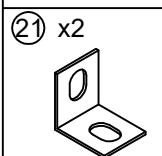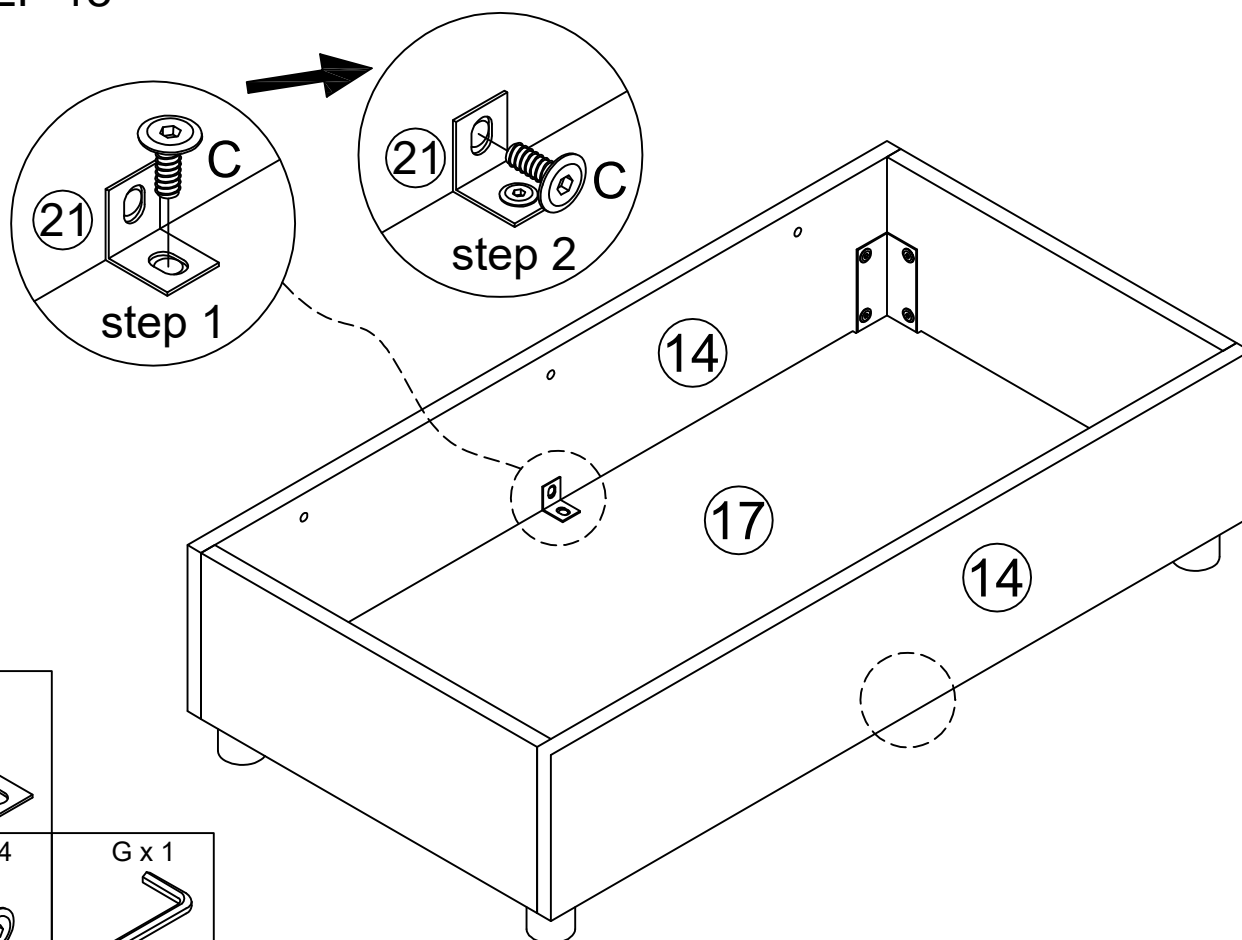




STEP 19

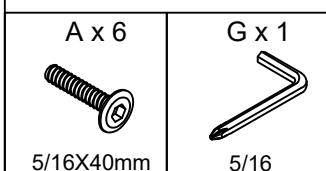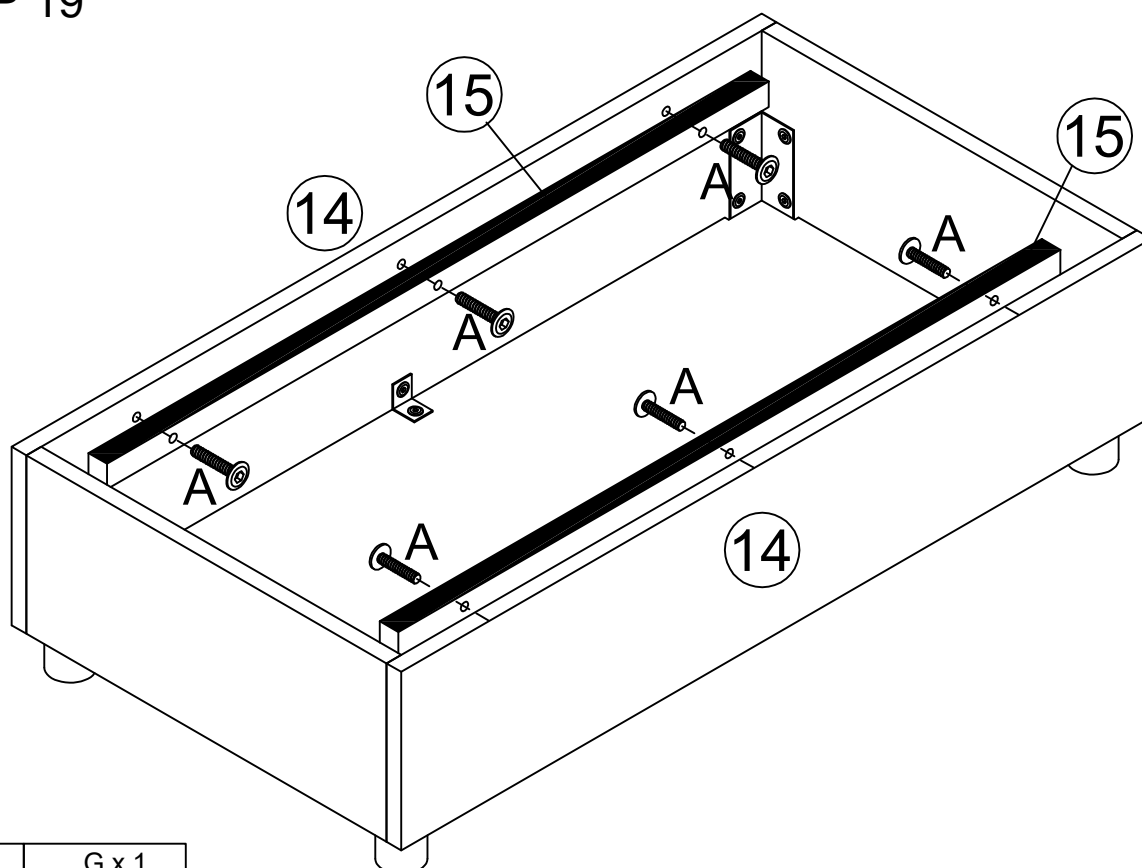


STEP 2 0

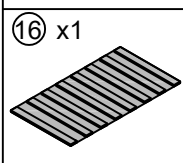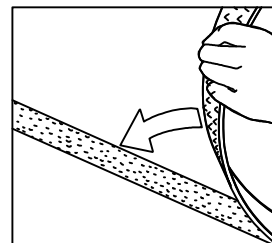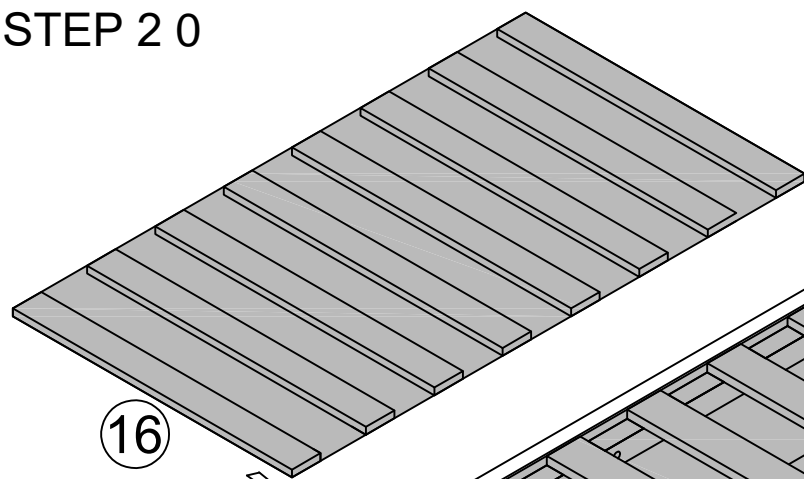


STEP 2 1

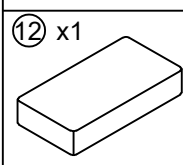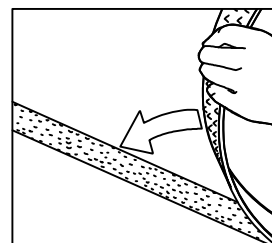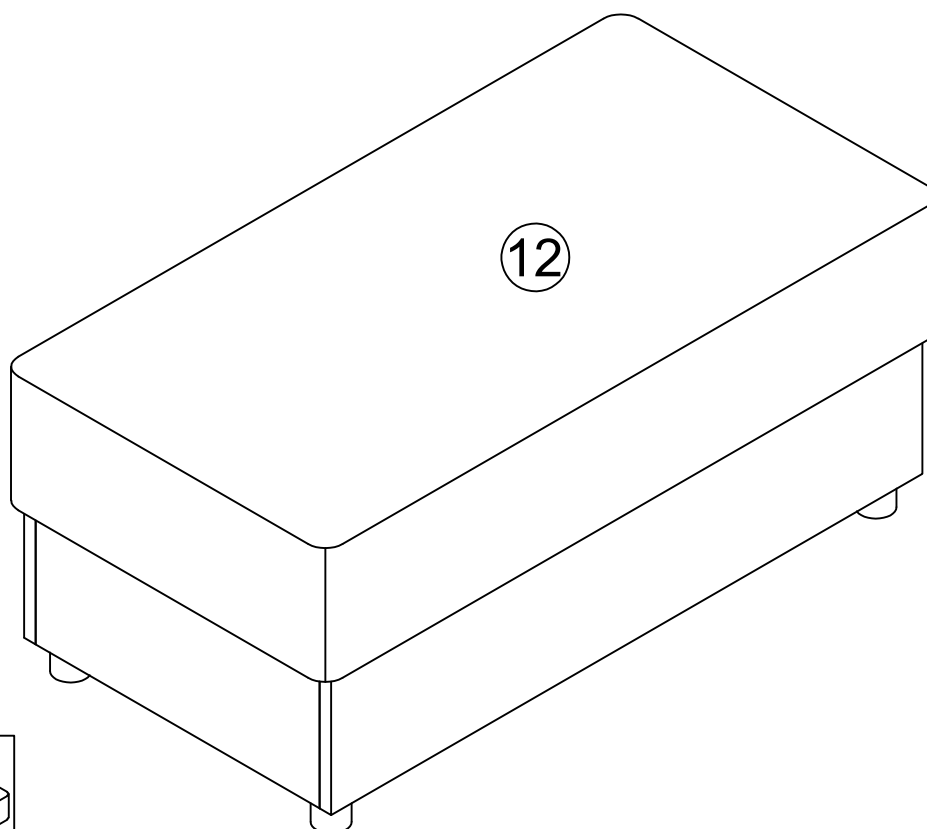

STEP 22

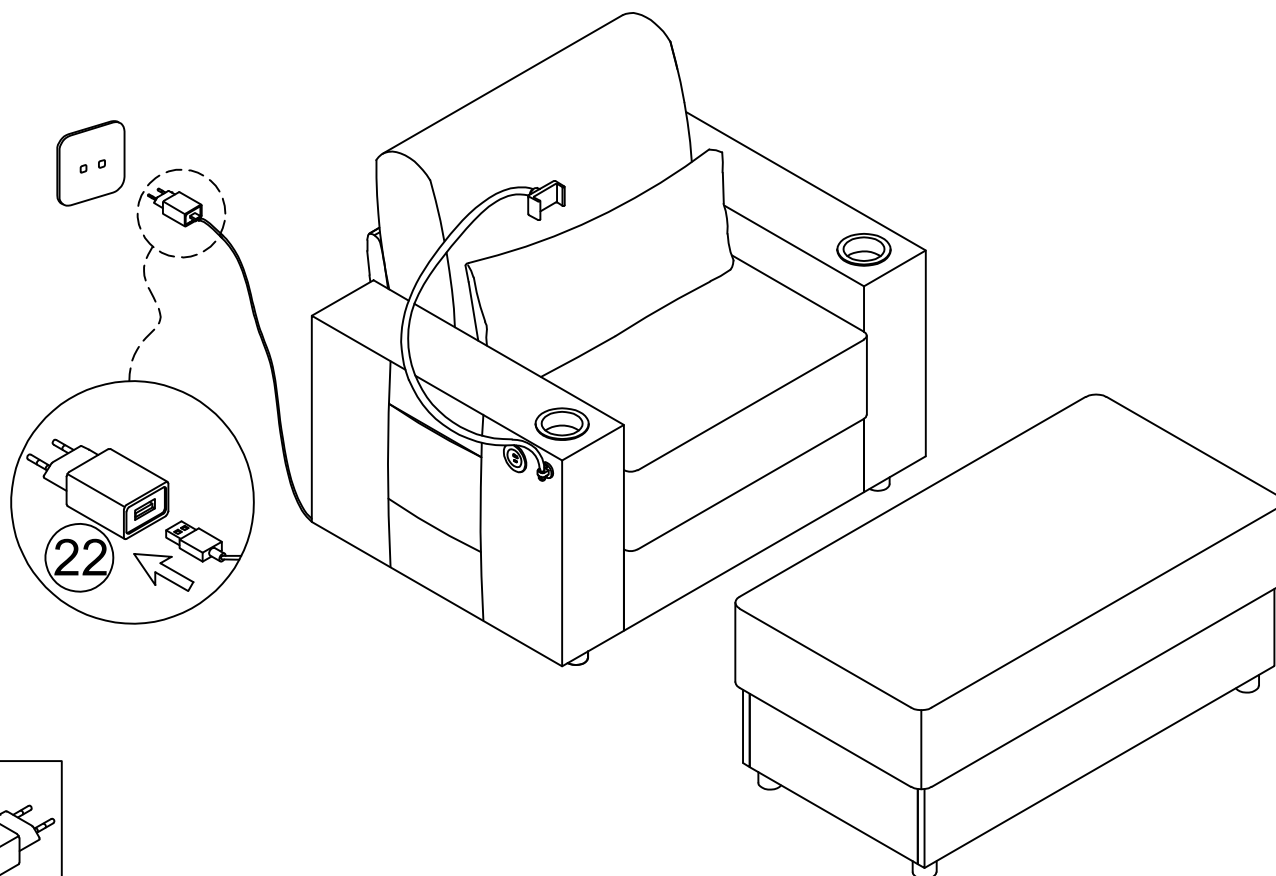

STEP 23

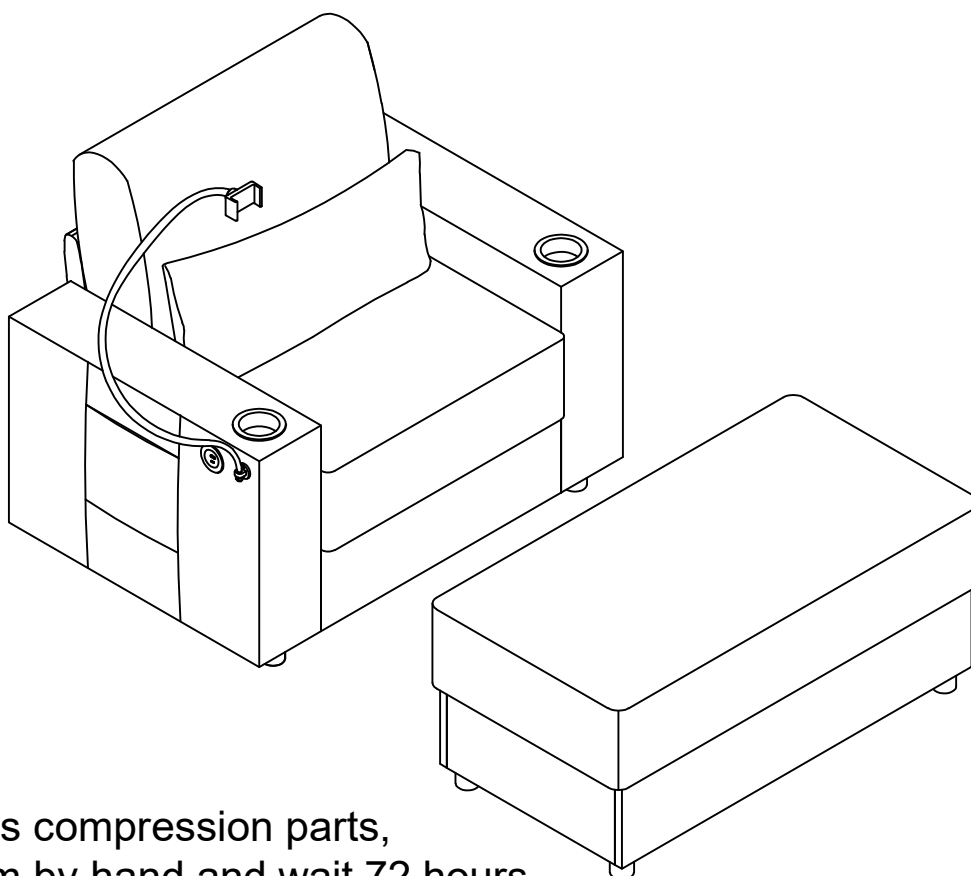

The product has compression parts,
Please pat them by hand and wait 72 hours,
the cushions will be recover.