



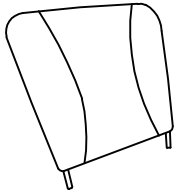
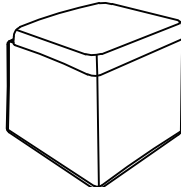




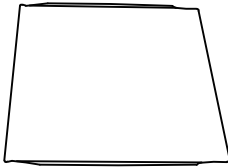



Assembly Instruction

PART LIST


Ax2 	Bx2 	Cx1 	Dx1 	Ex1 	
Fx1 	Gx4 	Hx2  M6*45mm screw	Ix4  M6*20mm screw	Jx14  M6*12mm screw	Kx1  Allen Wrench

STEP 1

Note: The holes on the side panels (A*2) and the rear legs(D) must be on the same side.

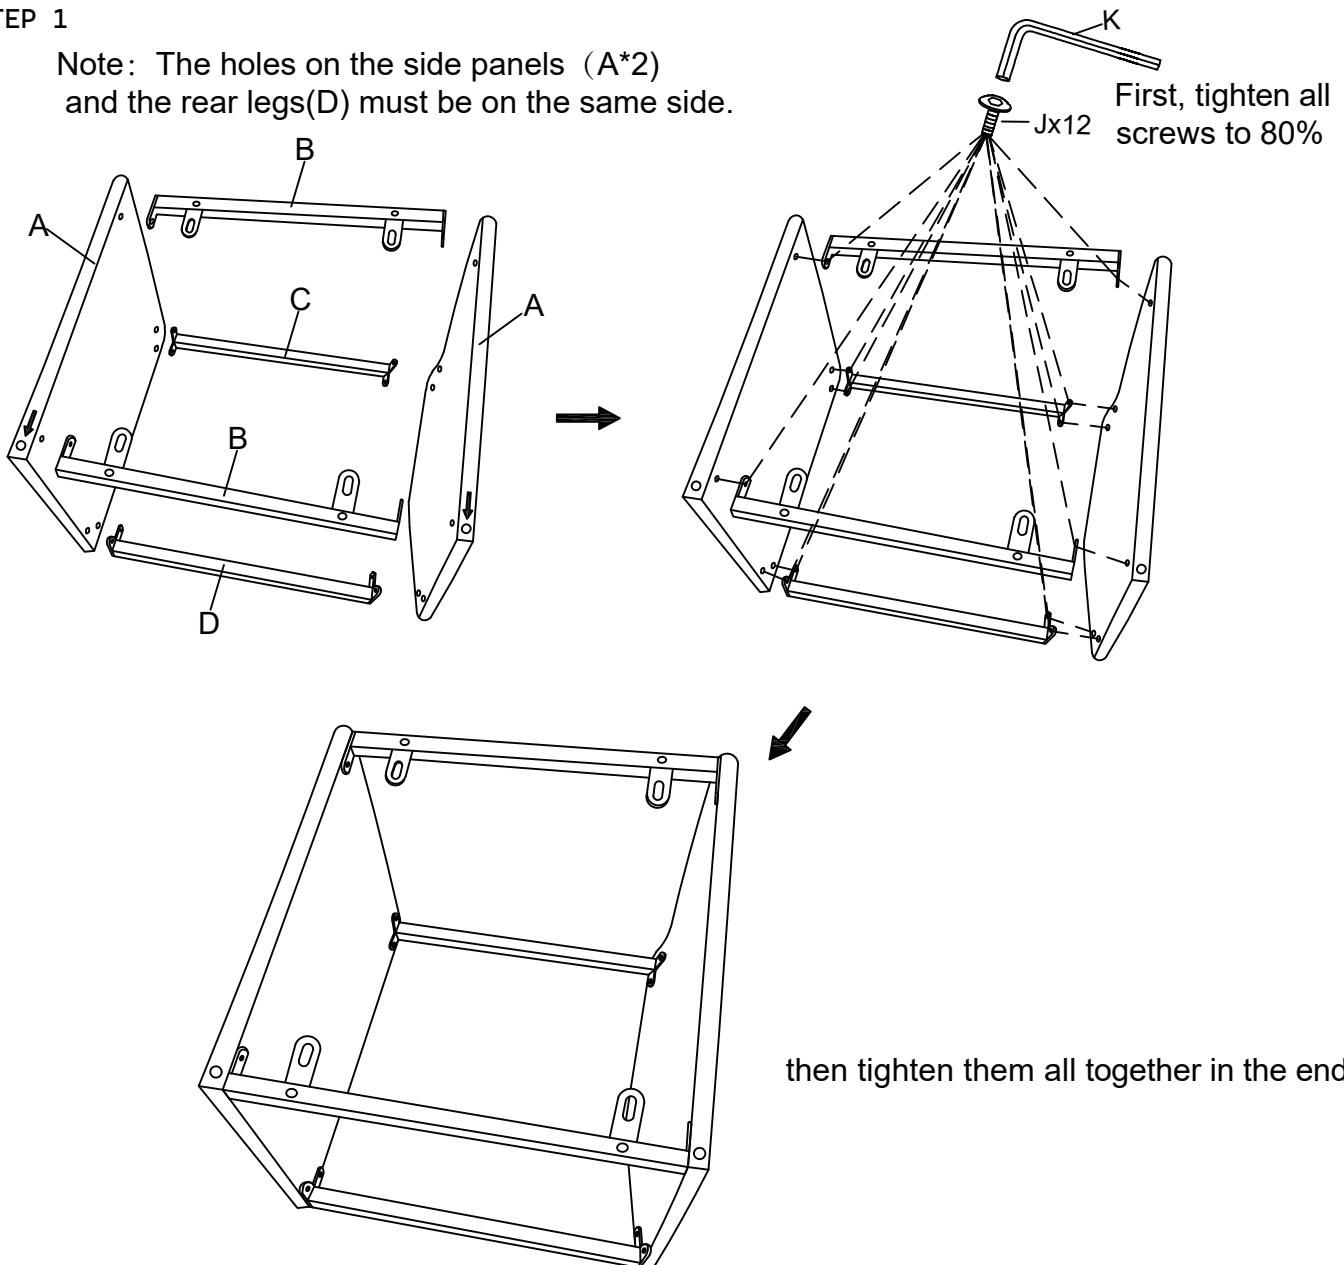


STEP 2

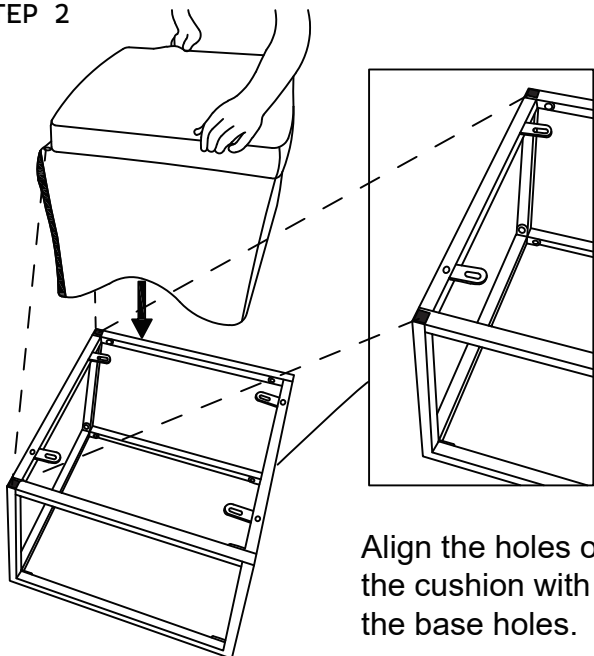


STEP 3

First, turn the chair sideways, then tighten all screws to 80%.

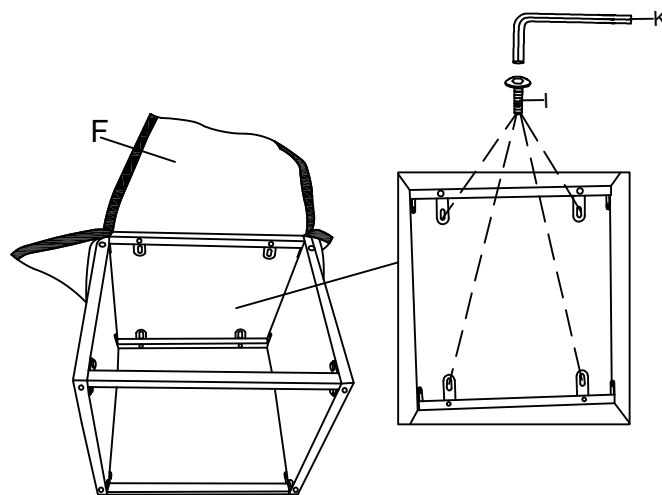


STEP 4

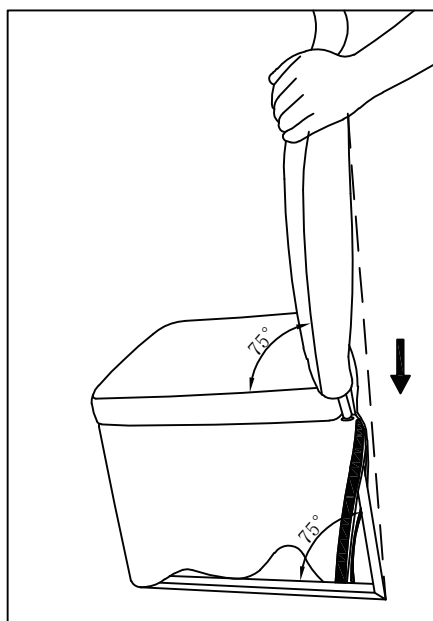

Align the backrest and the base at the same angle (tilt forward 75°), then insert the two steel tubes of the backrest into the corresponding holes on the base.


Note : If it doesn't align, you can adjust the seat cushion.

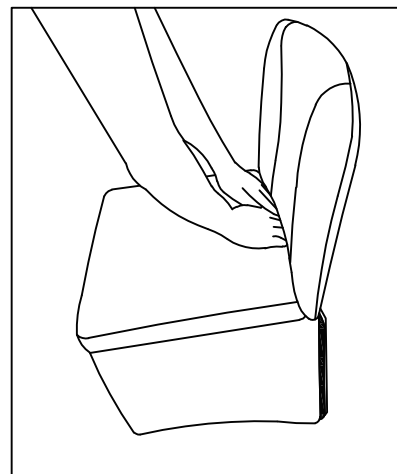


flatten and arrange the cushion foam.

STEP 5

The holes in the chair's backrest and those in the base need to be aligned. tighten all screws to 80%.

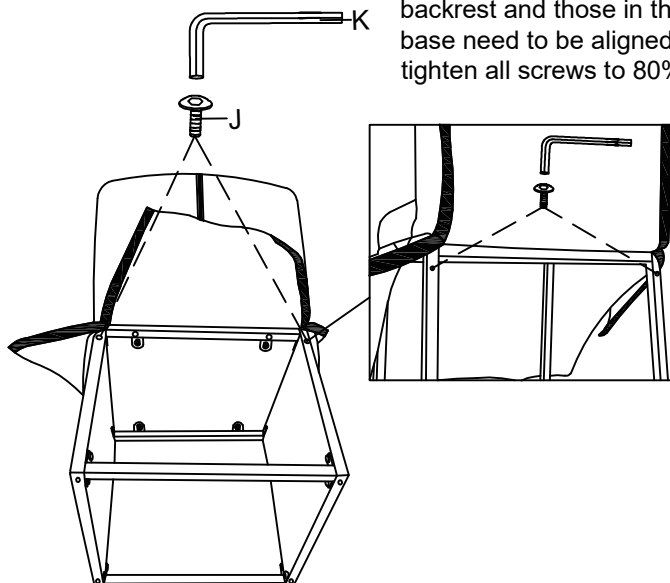


STEP 6

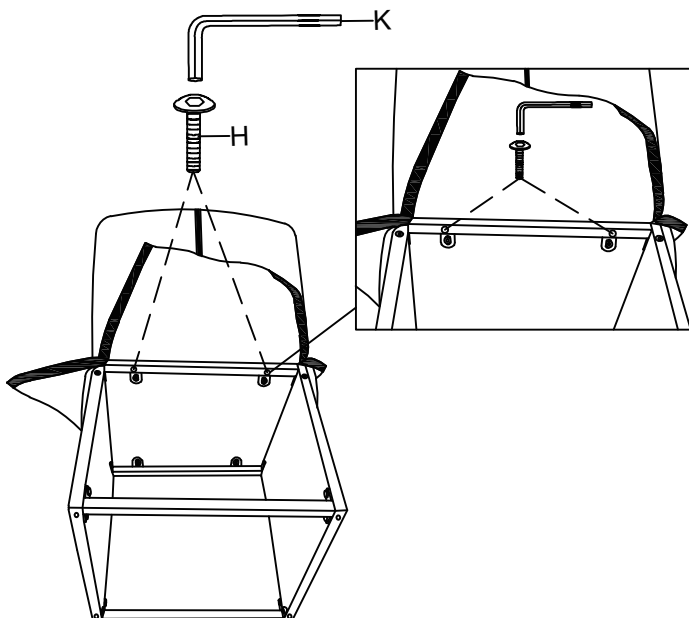


STEP 7


then tighten them all together in the end.

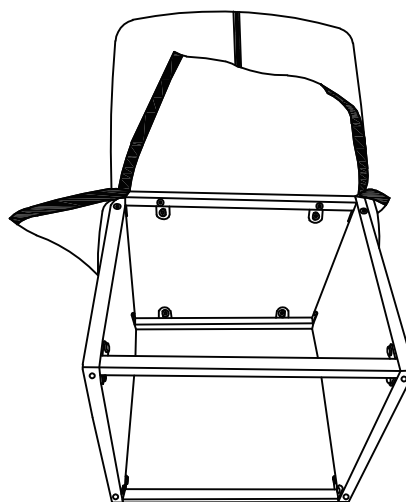

STEP 8

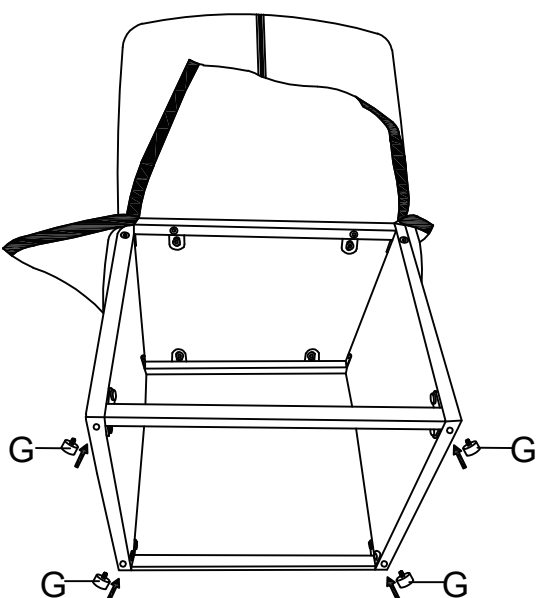


STEP 9

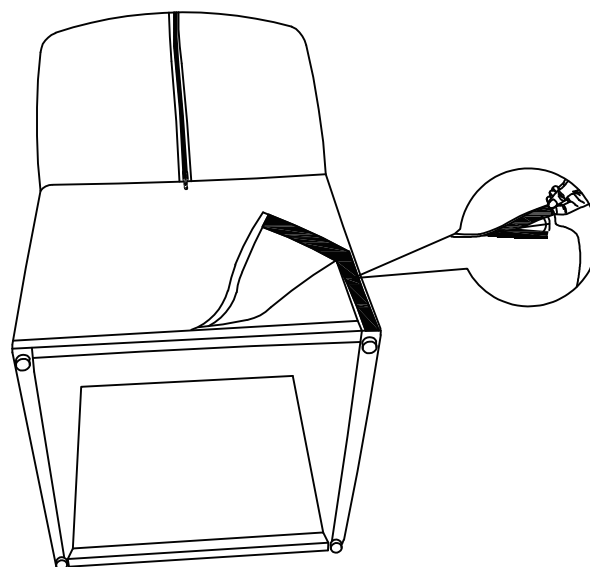


STEP 10


If you find the chair wobbling: Please loosen the 8 screws by 20%, then press the chair down until it is firmly against the ground, and finally tighten the screws again.

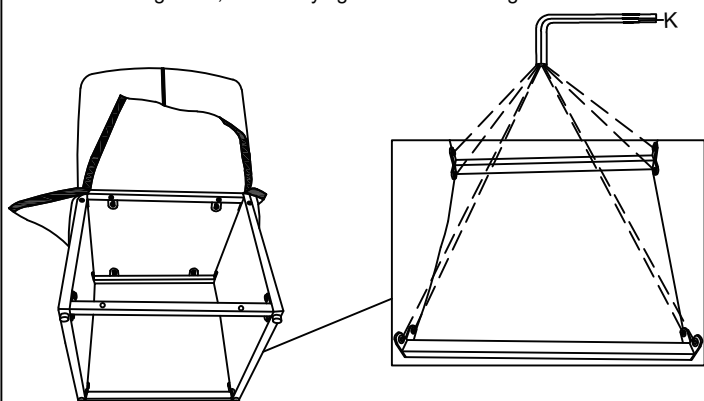


STEP 11

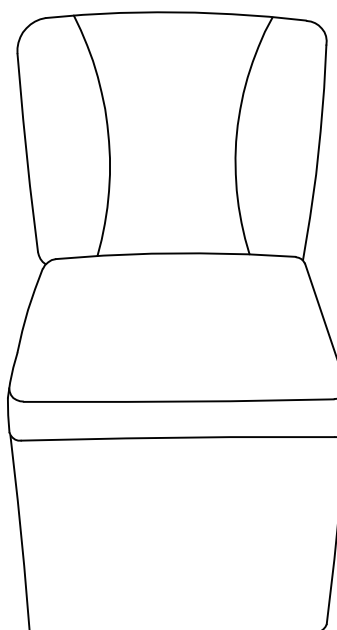


STEP 12

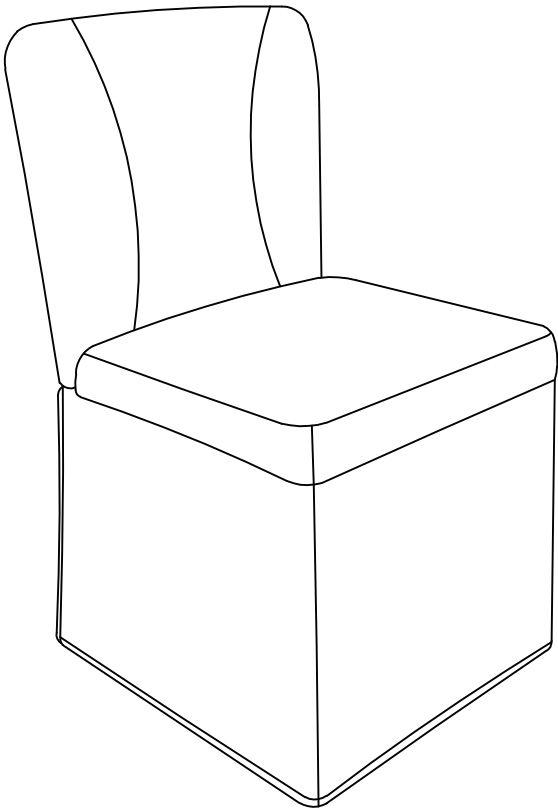

STEP 13

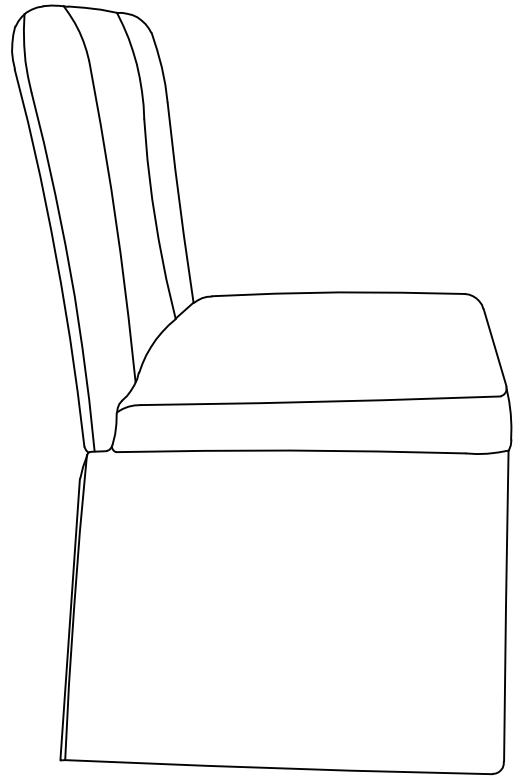

STEP 14

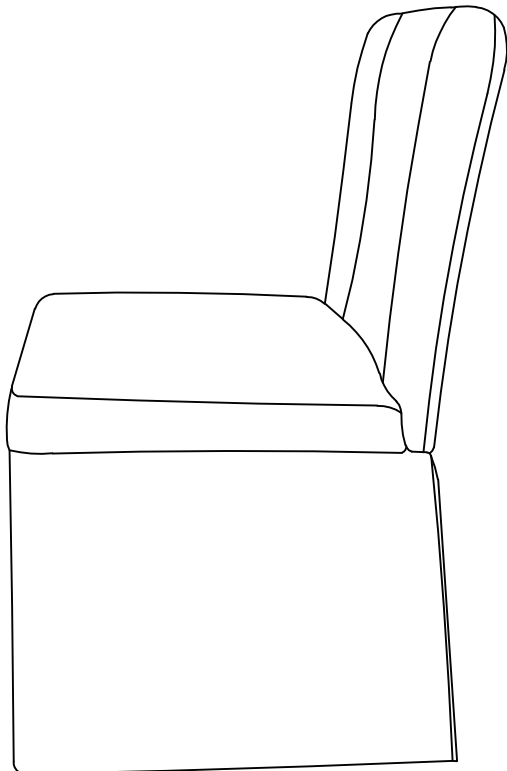

STEP 15

