Assembly Instructions

Caution: You must read this before you proceed

Care & Maintenance				
Ø	Not for commercial use. For residential use only.			
✓ ♣	Furniture may scratch floors. We recommend using furniture pads to protect your floors.			
Ø 🖺	Do not put hot items directly on furniture surface.			
ØÅ	Do not clean furniture with harsh cleansers or polish.			
Ø 🔅	Do not place furniture under direct sunlight.			
Ø 🗐	Do not place furniture near heating or cooling vents.			
Ø L	Do not write on furniture without a padded barrier to protect the surface.			
Ø 🔆	Do not place furniture outside . For indoor use only.			
Ø =	Stains may be removed with mild soap solution and damp cloth.			
Ø 🟋	Children should not climb or jump on the furniture.			
√ ©	Dust and pick-up spills using a clean, non-colored, lint-free cloth.			

Please look in the magic tape pouch for hardware packs and legs




Part List					
Label	Picture	Description	QTY		
А		Backrest	1		
В		Left Armrest	1		
С		Right Armrest	1		
D		Seat Base	1		
E		Front Rail	1		
F		Back Lever	1		
G		Seat Cushion	1		
Н		Back Cushion	2		
I	0	Leg	4		
J		Pillow	2		

Hardware List					
Label	Picture	Description	QTY		
1)	•	Bolt(M6*20MM)	4		
2	₩	Plastic Washer	4		
3	637	Metal Bracket	2		
4		Allen Wrench(S4)	1		
(5)		Allen Wrench(S5)	1		


Assembly Preparation

Before Beginning Assembly:

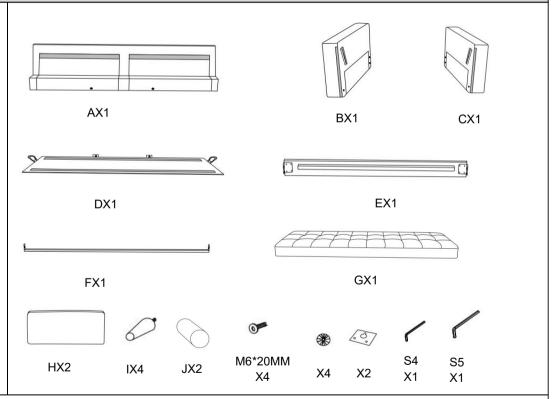




- Read instructions, cover to cover-
- - Have 2 adults on hand for assembly-
- Do not assemble on flooring or carpet-
- <u>-</u>
- Assemble on a clean non-marring surface (packing foam)-
- A)
- Save all packaging until finished-

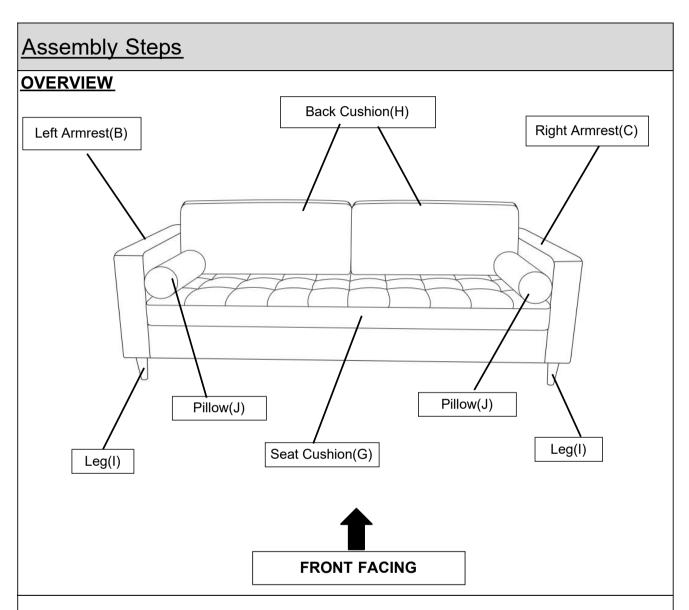


This Sofa has multiple parts and may require up to 60 minutes to assemble. To give you an overview of the Sofa parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.


Note: It is recommended that you have an adult partner to assist during the entire assembly process.

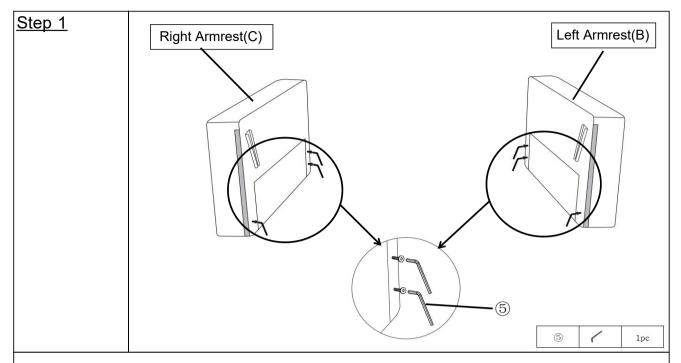


Loosen the 3 bolts in Left Armrest(B) around half inch by Allen Wrench(S5)(⑤). Repeat the same step to loosen 3 bolts in Right Armrest(C).

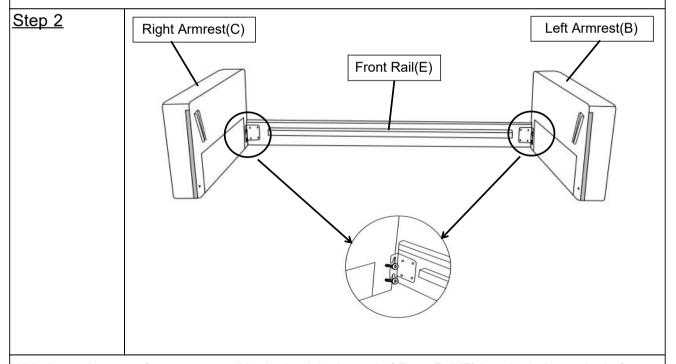

With the assistance of your partner, slide the hook in the end of Front Rail(E) into the bolts on the Left Armrest(B) and Right Armrest(C), as shown in Picture.

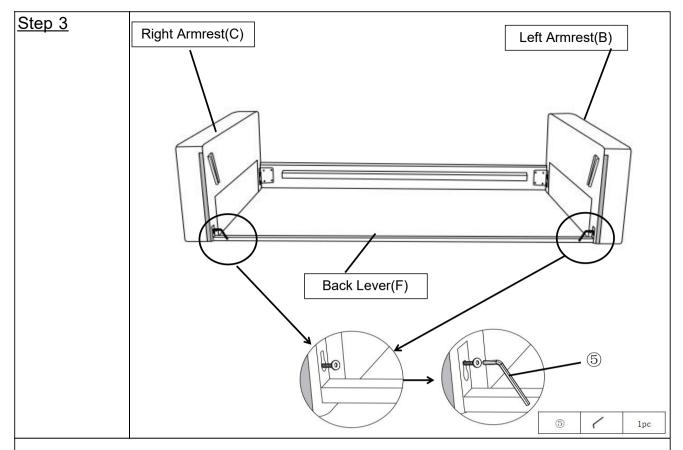

Slide the hook in the end of Back Lever(F) into the bolts on the Left Armrest(B) and Right Armrest(C), as shown in Picture. Tighten the Bolts with Allen Wrench(S5)(⑤).

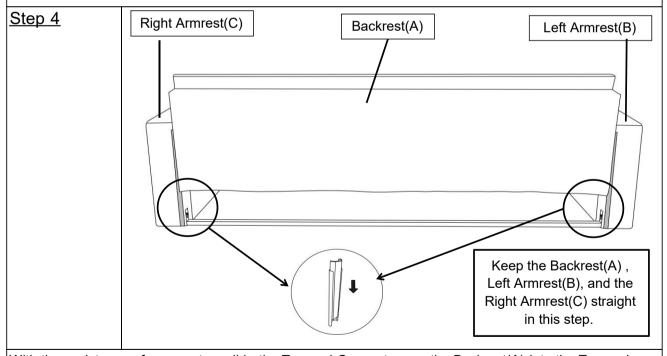

With the assistance of your partner, slide the Tapered Connectors on the Backrest(A) into the Tapered Connectors on the Left Armrest(B) as shown in the picture.


Repeat the same step with the Right Armrest(C).


Note: Make sure the Tapered Connectors on the Backrest(A) lock into the Tapered Connectors on the Left Armrest(B) and the Right Armrest(C).

NOTE:Keep the Backrest(A) and the back of the Left Armrest(B), and the Right Armrest(C) flat. Assistance from an adult partner is necessary for this assembly process.


During this assembly process - do exercise caution. You may need to use your hand to press down and or pave away the padded surface to facilitate the 'slip and slide' assembly.

Caution: Ensure that your fingers do not get caught or pinched in the assembly process.

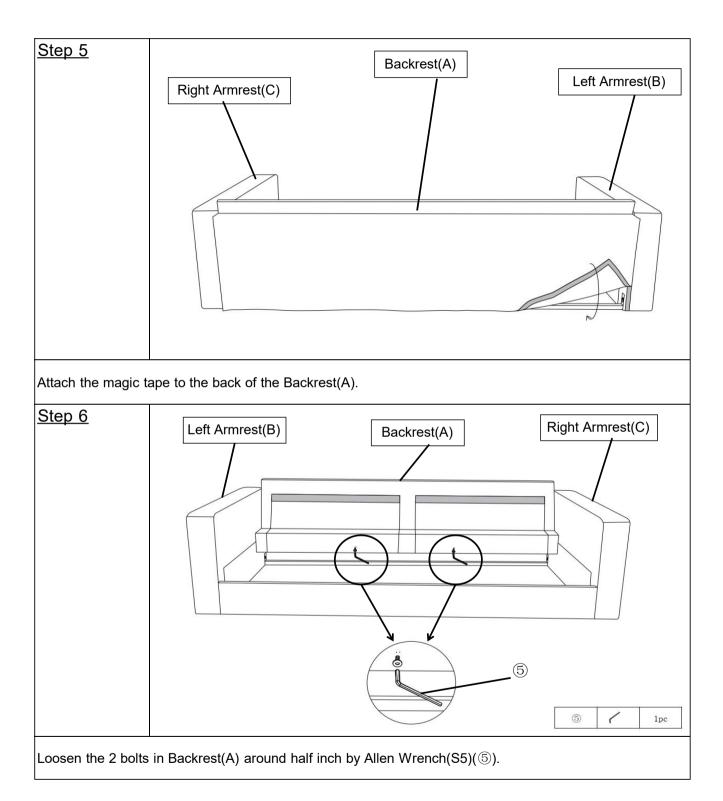

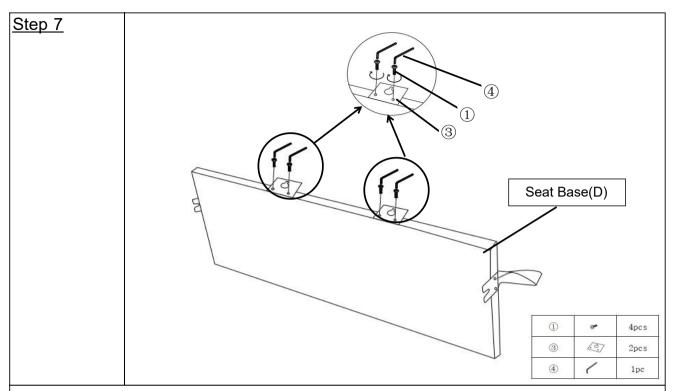


With assistance from your partner, screw the Bolts(1) and two Metal Brackets(3) into the pre-marked pilot holes / position at the Seat Base(D) with the Allen Wrench(4). Turn the Bolts in a clockwise direction. Tighten the bolts in place with a sequential manner.

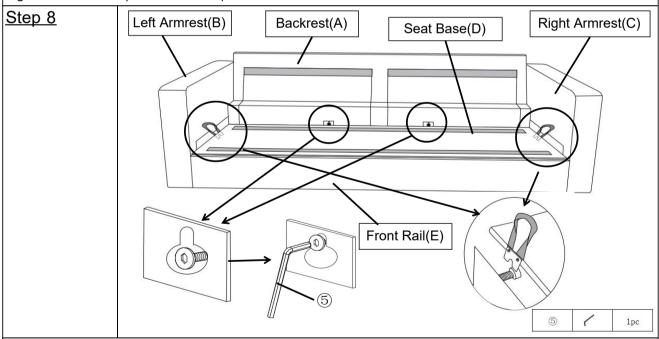


With the assistance of your adult partner, lift the rope on the two sides of Seat Base(D) by hand. Place the Seat Base(D) over the wooden bar on the back side of the Front Rail(E) and then slowly place it down on it as shown above.

Tighten the Bolts with Allen Wrench(S5)(⑤).

Note:All the u-shaped iron sheets need to be clamped to the bolt.

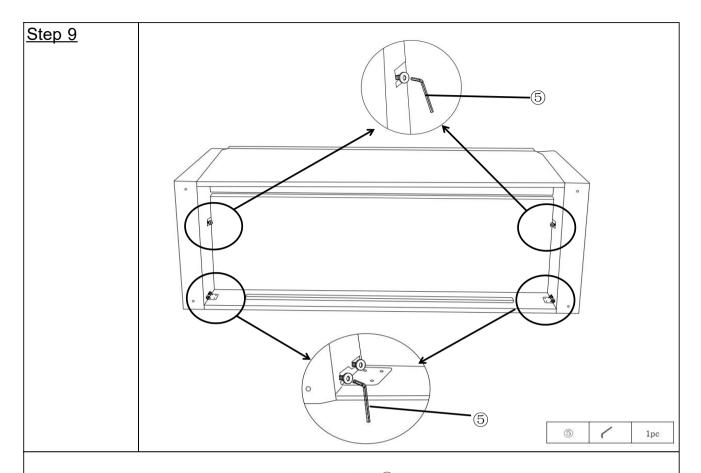

As shown above. Tighten the Bolts with Allen Wrench (S5)(⑤).

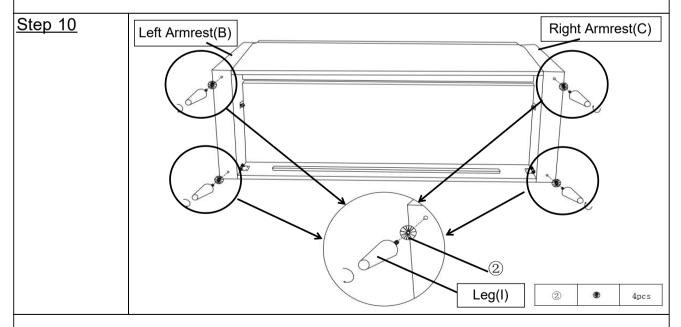

Install the Leg(I) to the Left Armrest(B) and Right Armrest(C) using a Plastic Washer(②) by turning clockwise until tight.

Repeat the same step with the remaining Legs(I).

