




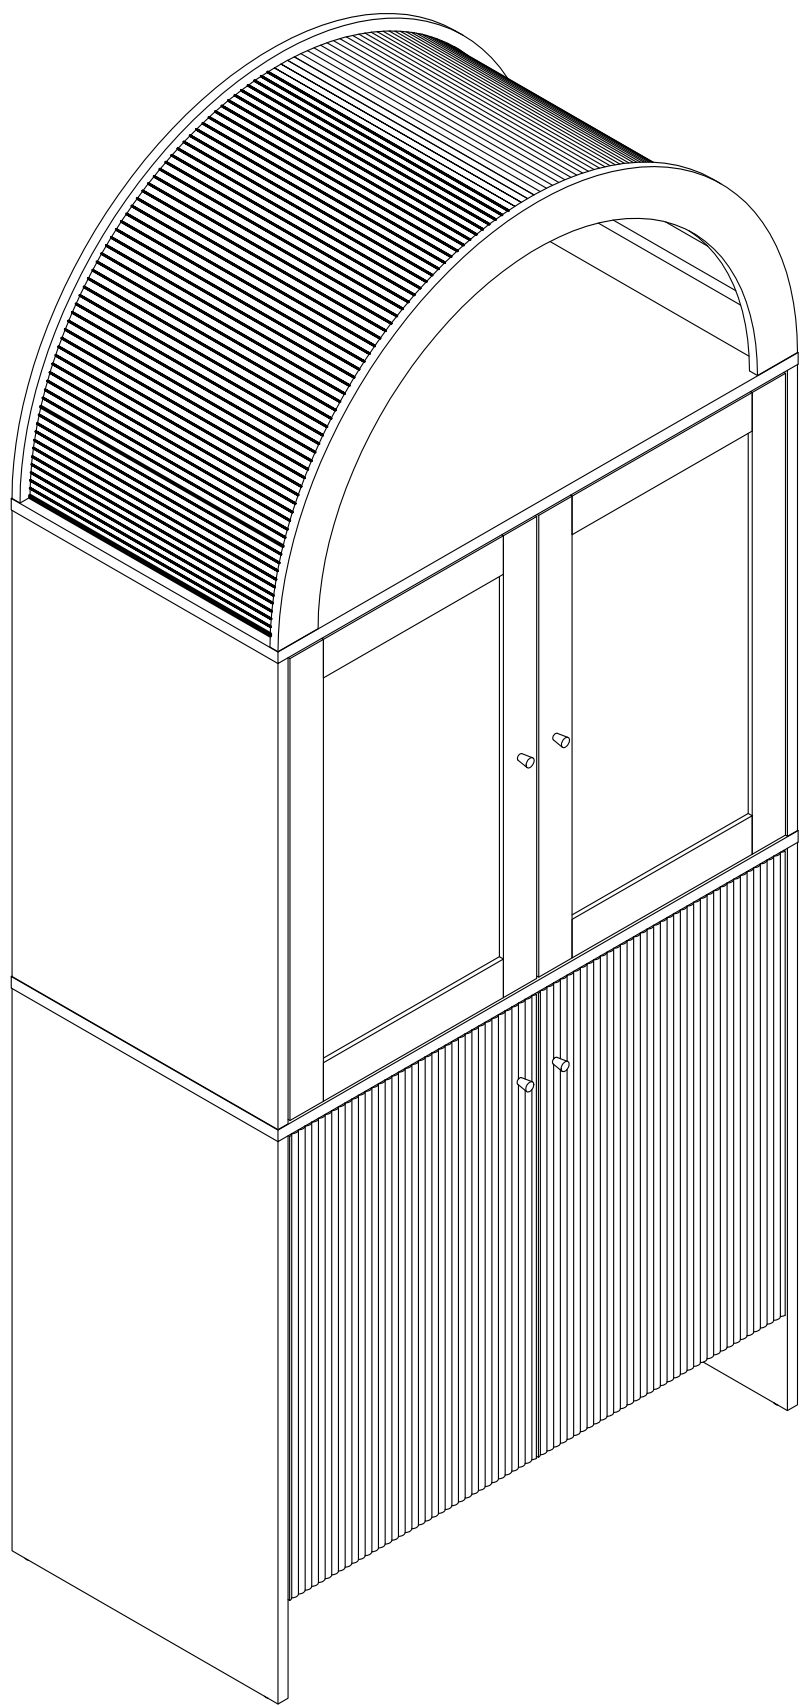
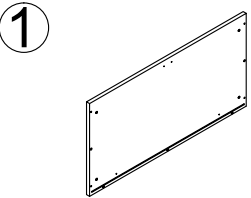
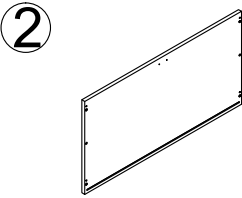
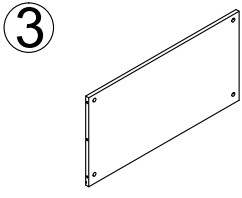
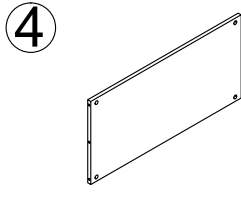
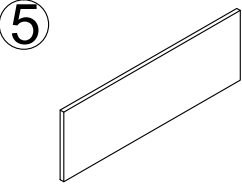
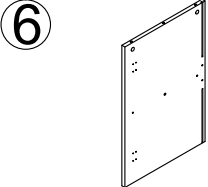
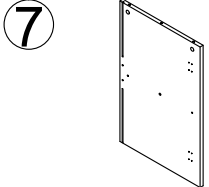
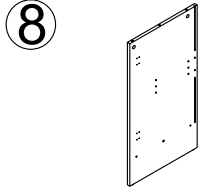
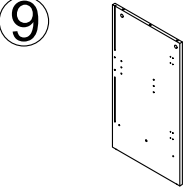
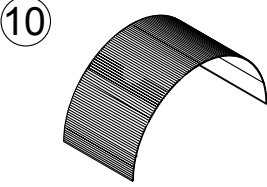
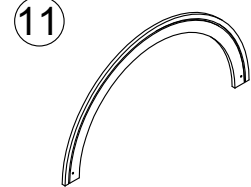
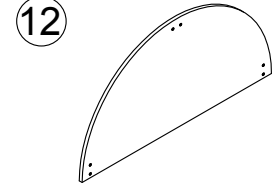
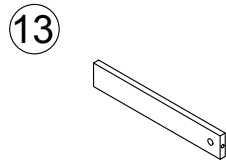
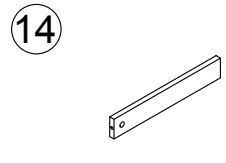
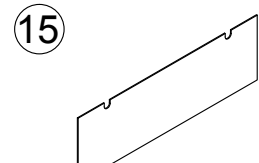
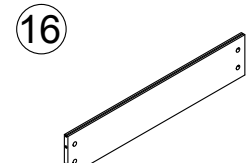
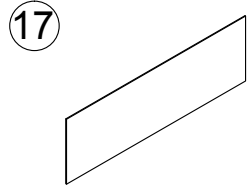
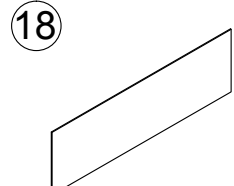
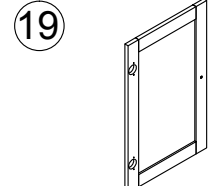
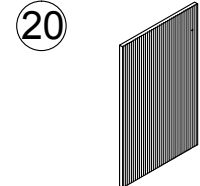
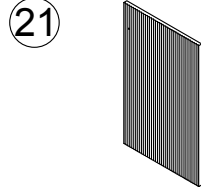


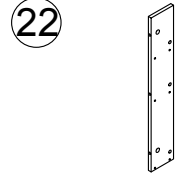

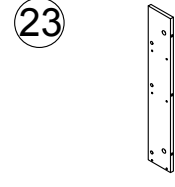

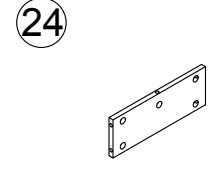

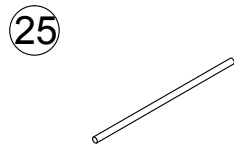

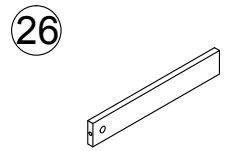









# Assembly Instruction





			
1PC	1PC	1PC	1PC
			
1PC	1PC	1PC	1PC
			
1PC	1PC	1PC	1PC
			
1PC	1PC	1PC	2PCS
			
1PC	2PCS	2PCS	1PC
			
1PC	2PCS	2PCS	6PCS
			
6PCS	1PC		


<b>A</b>	X65	<b>B</b>	X65	<b>C</b>	X22	<b>D</b>	X48	<b>E</b>	X1	<b>F</b>	X17	<b>G</b>	X18	<b>H</b>	X4	<b>I</b>	X4
																	
M6x35mm		Ø15x9mm		M3x16mm		M3.5x14mm		4mm		M5x40mm		Ø8x30mm		M4x20mm			
<b>J</b>	X4	<b>K</b>	X2	<b>M</b>	X2	<b>N</b>	X2	<b>O</b>	X8	<b>P</b>	X2	<b>Q</b>	X3	<b>S</b>	X16	<b>T</b>	X1
																	
Ø5x17mm		M4x35mm				Ø6x30mm				M4x12mm							


Cam Lock Fastening System

Insert the cam bolt into the hole first,then insert the cam lock and lock it.

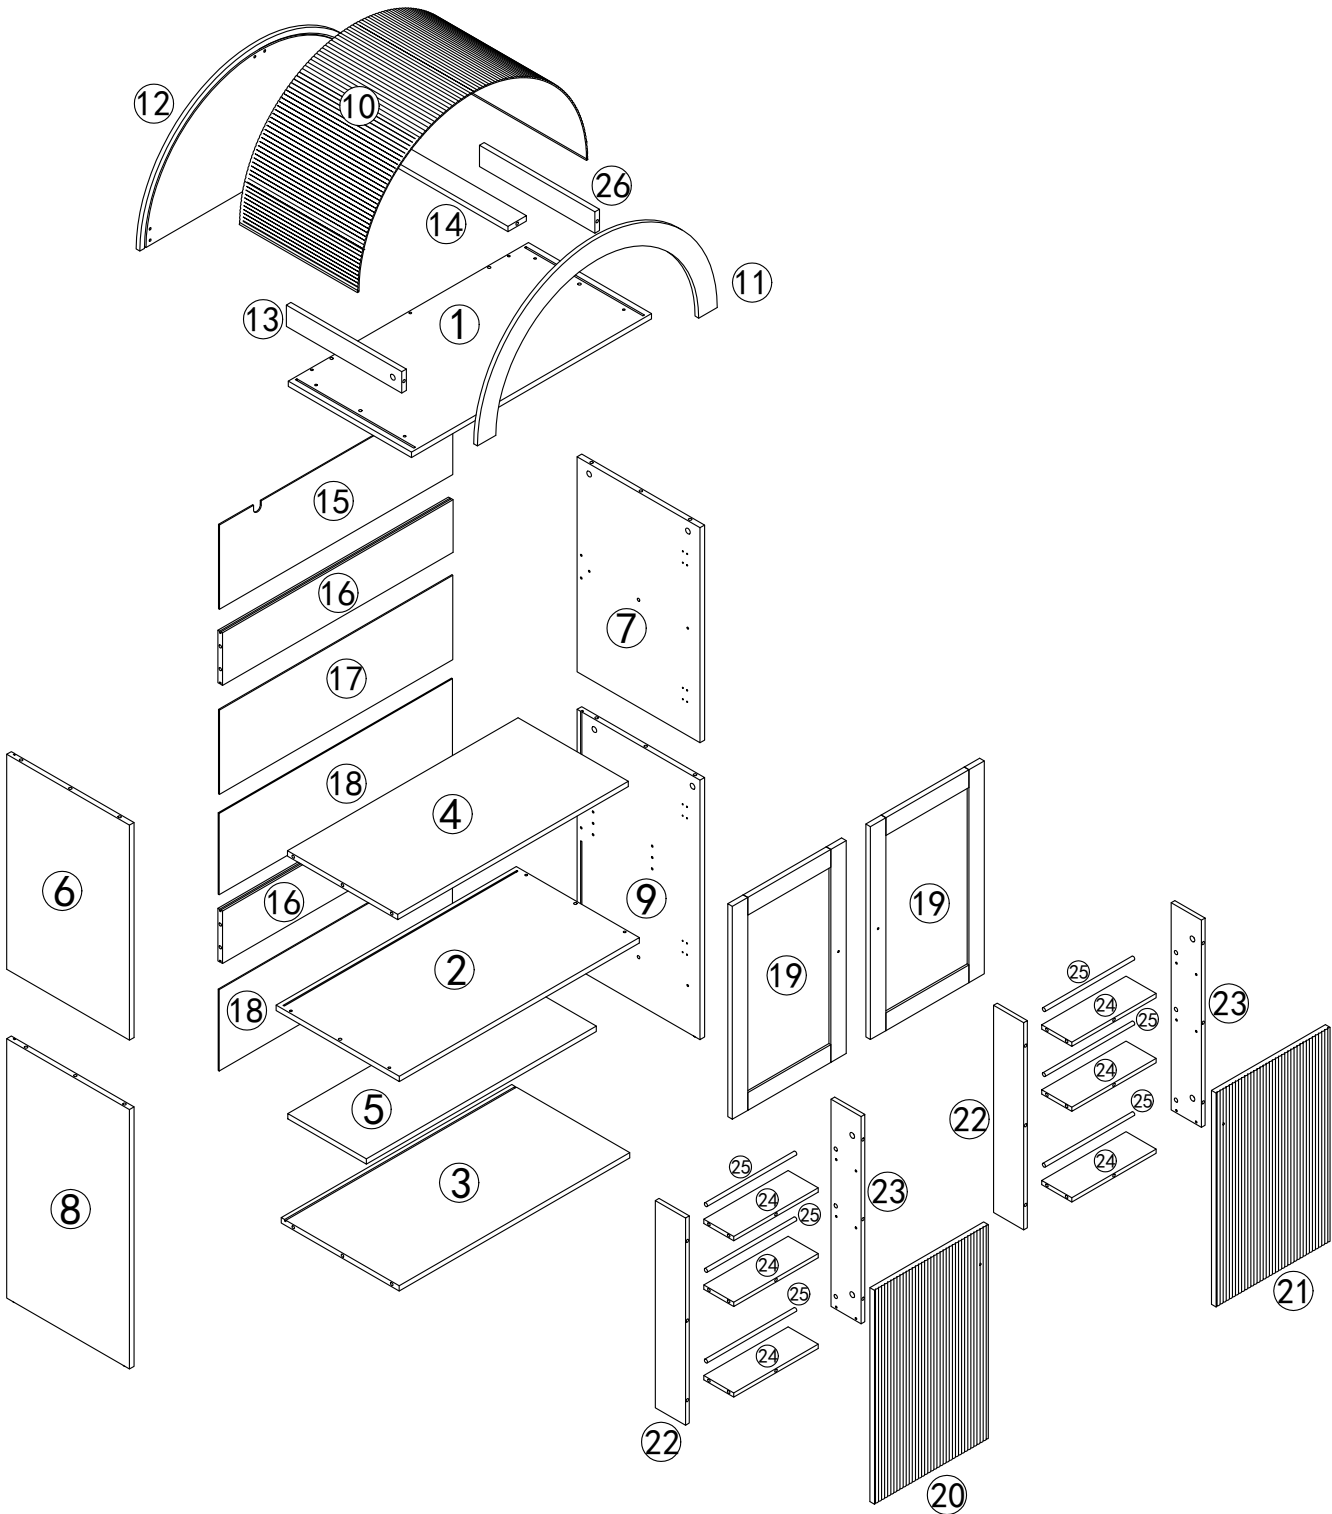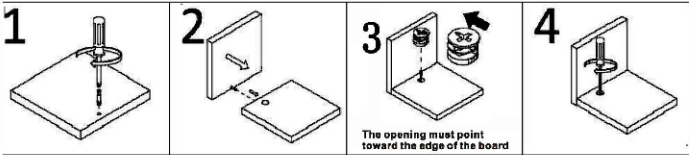



1

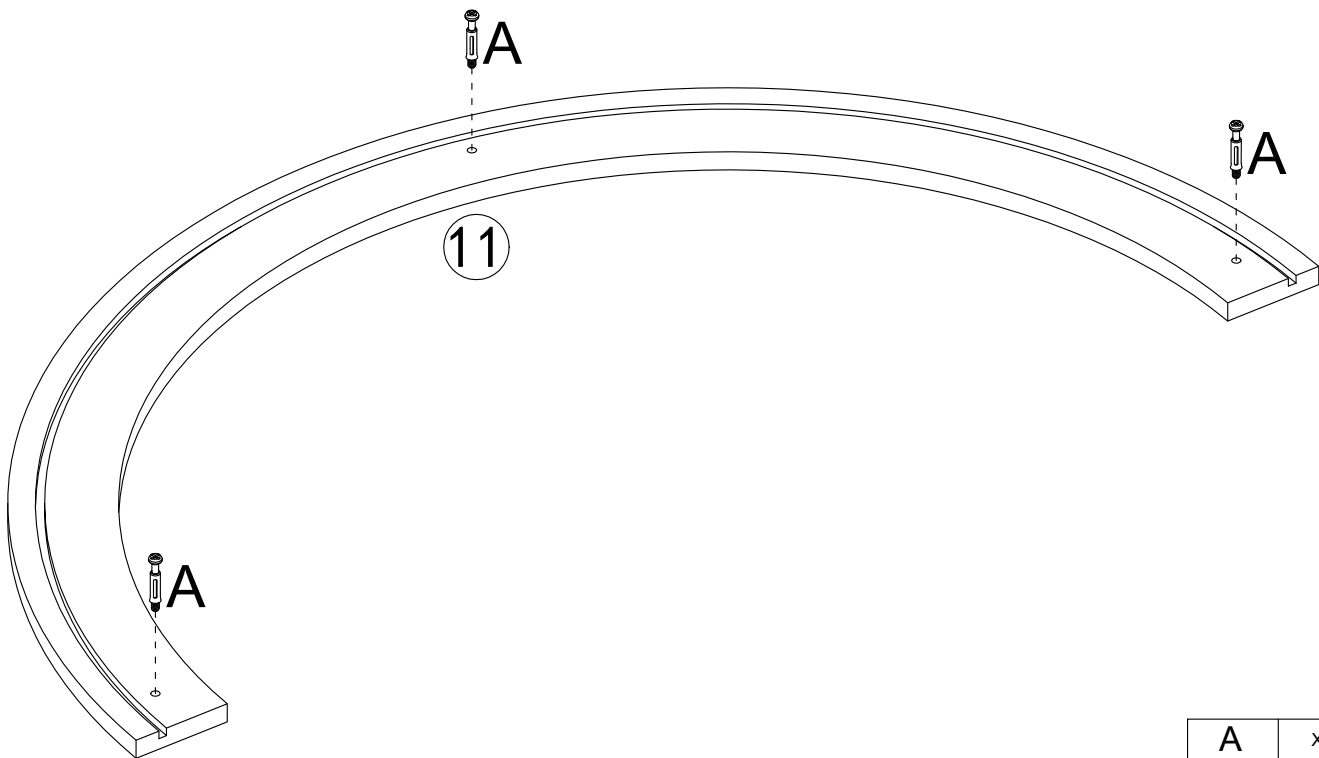


A	X3
	
M6x35mm	

2

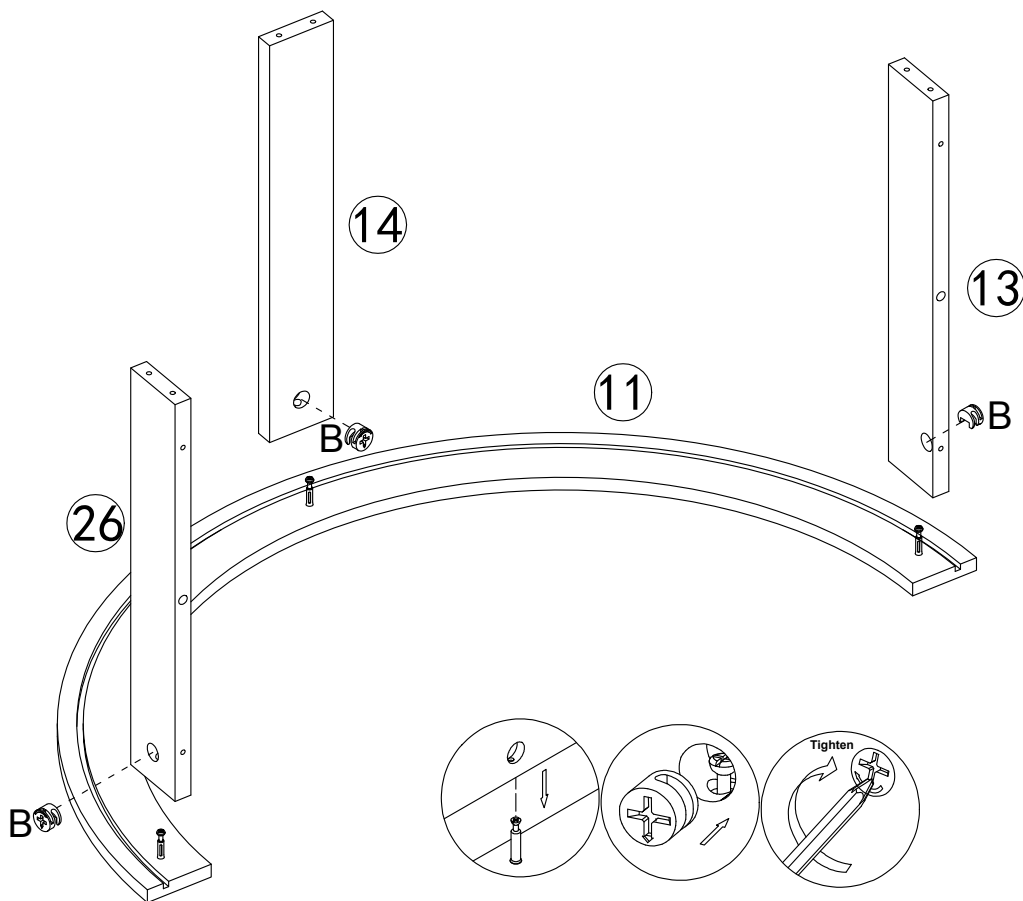



B	X3
	
Ø15x9mm	

3

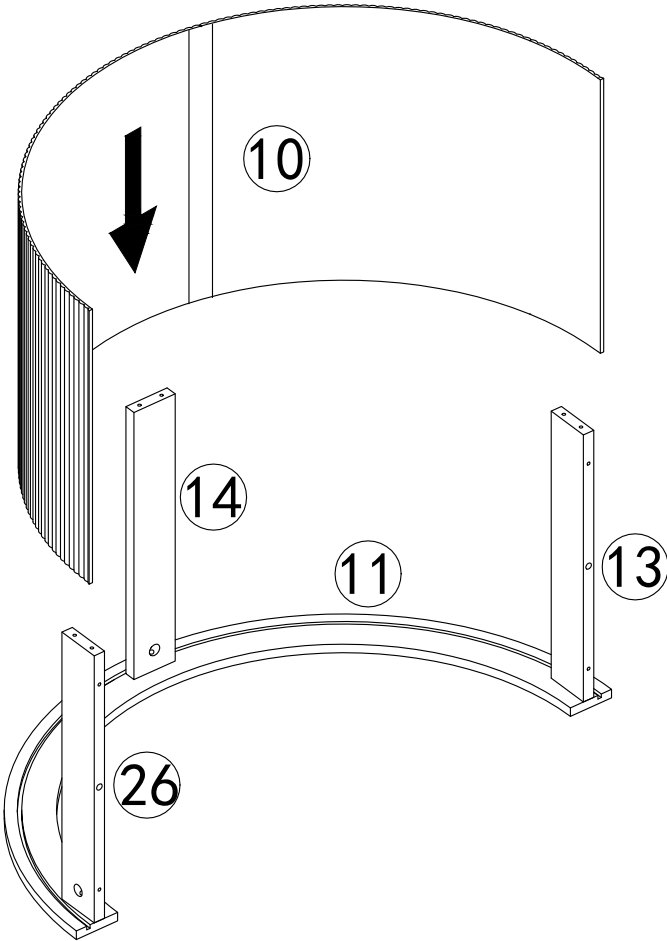



4

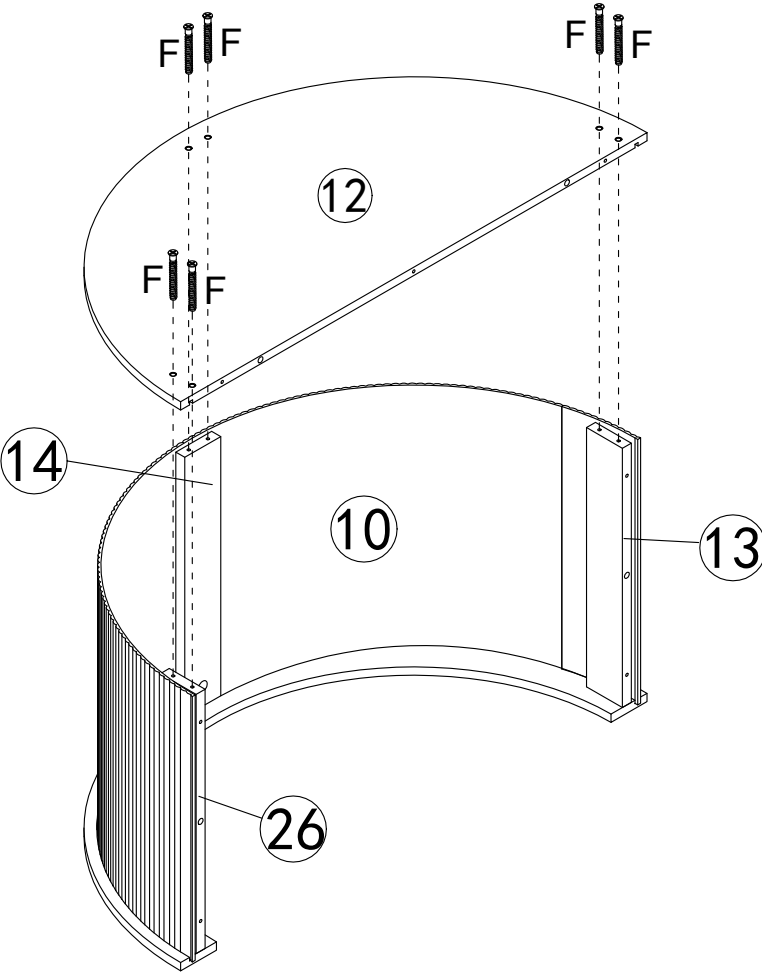



F	X6
	
M5x40mm	


5

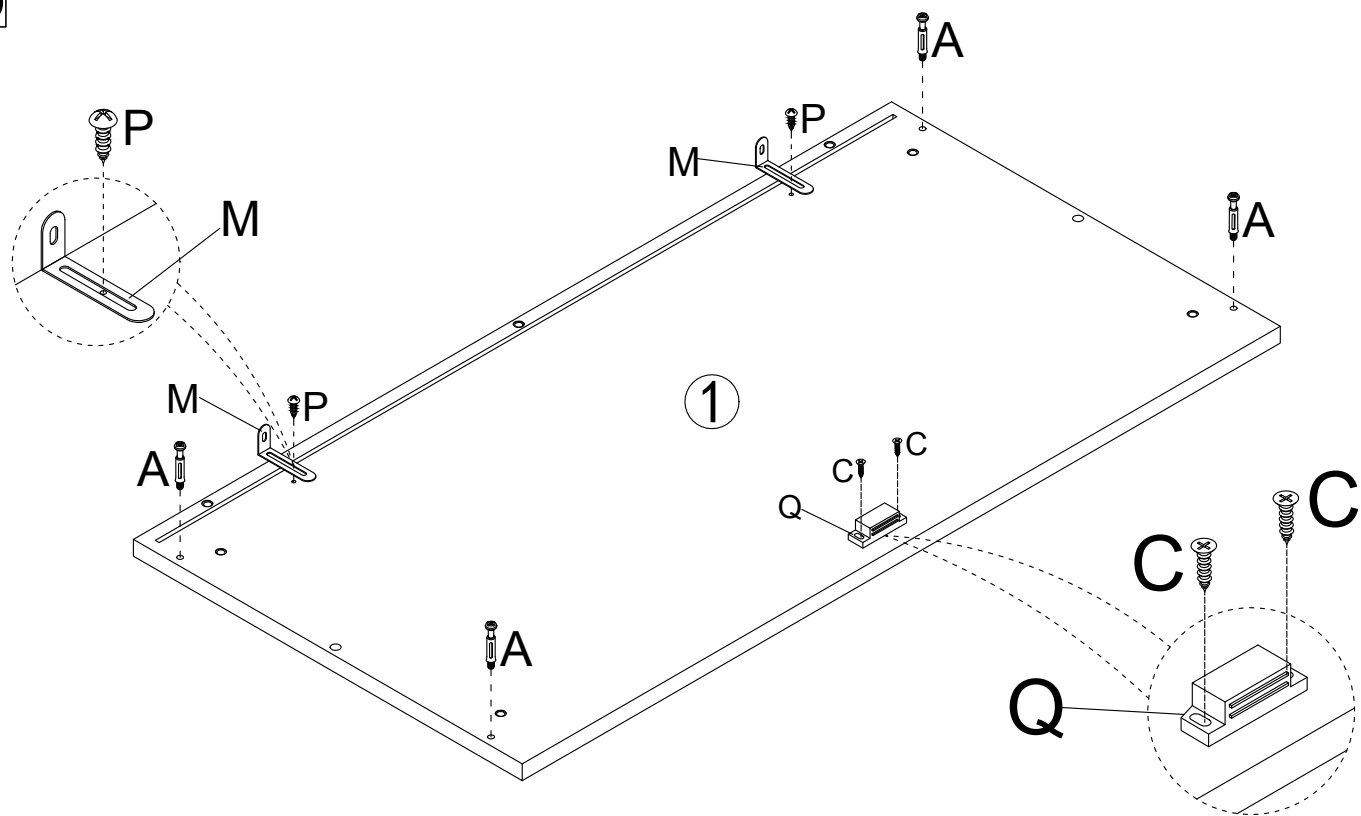


A	X4
	
M6x35mm	


C	X2
	
M3x16mm	


Q	X1
	


M	X2
	

P	X2
	
M4x14mm	


6

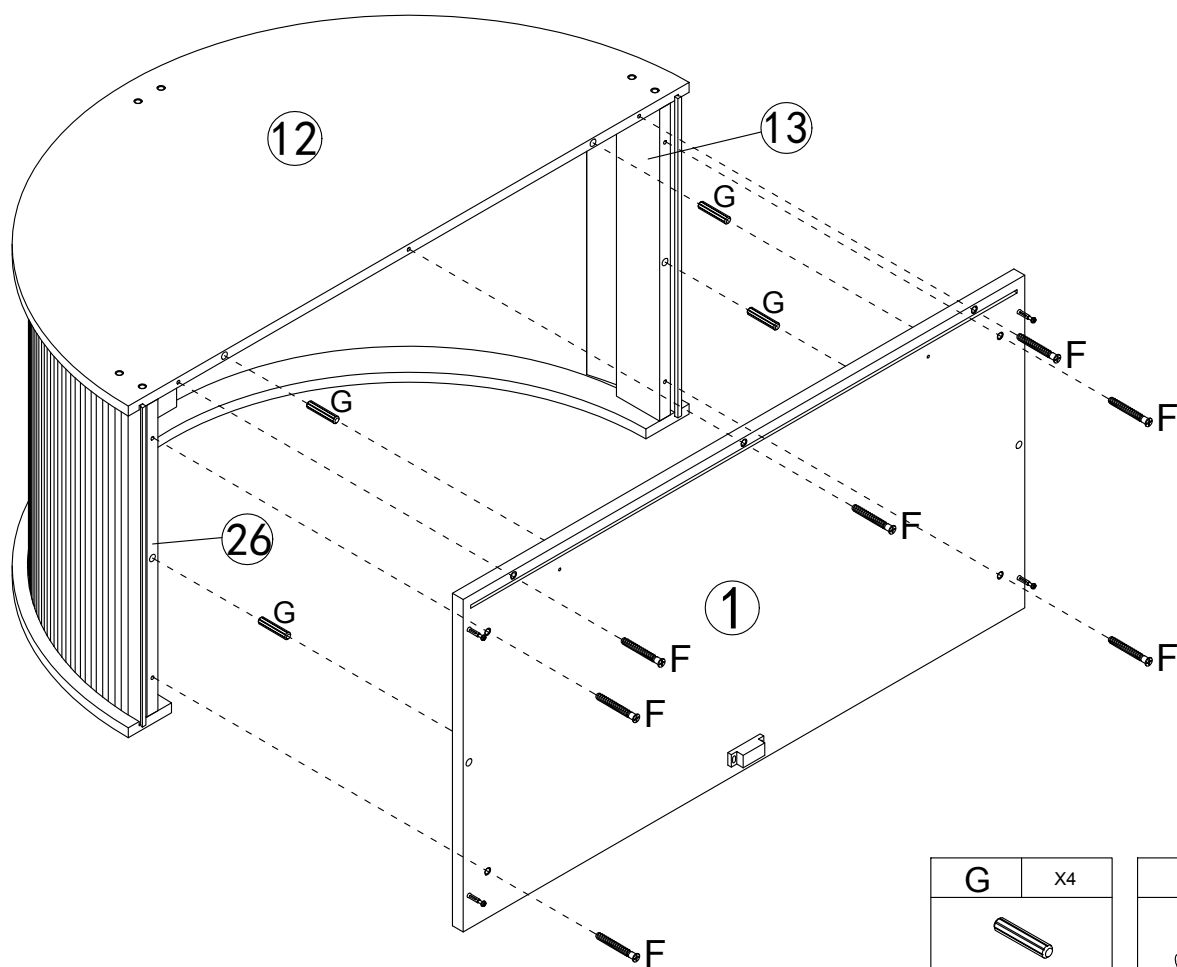


G	X4
	
Ø8x30mm	


F	X7
	
M5x40mm	


7

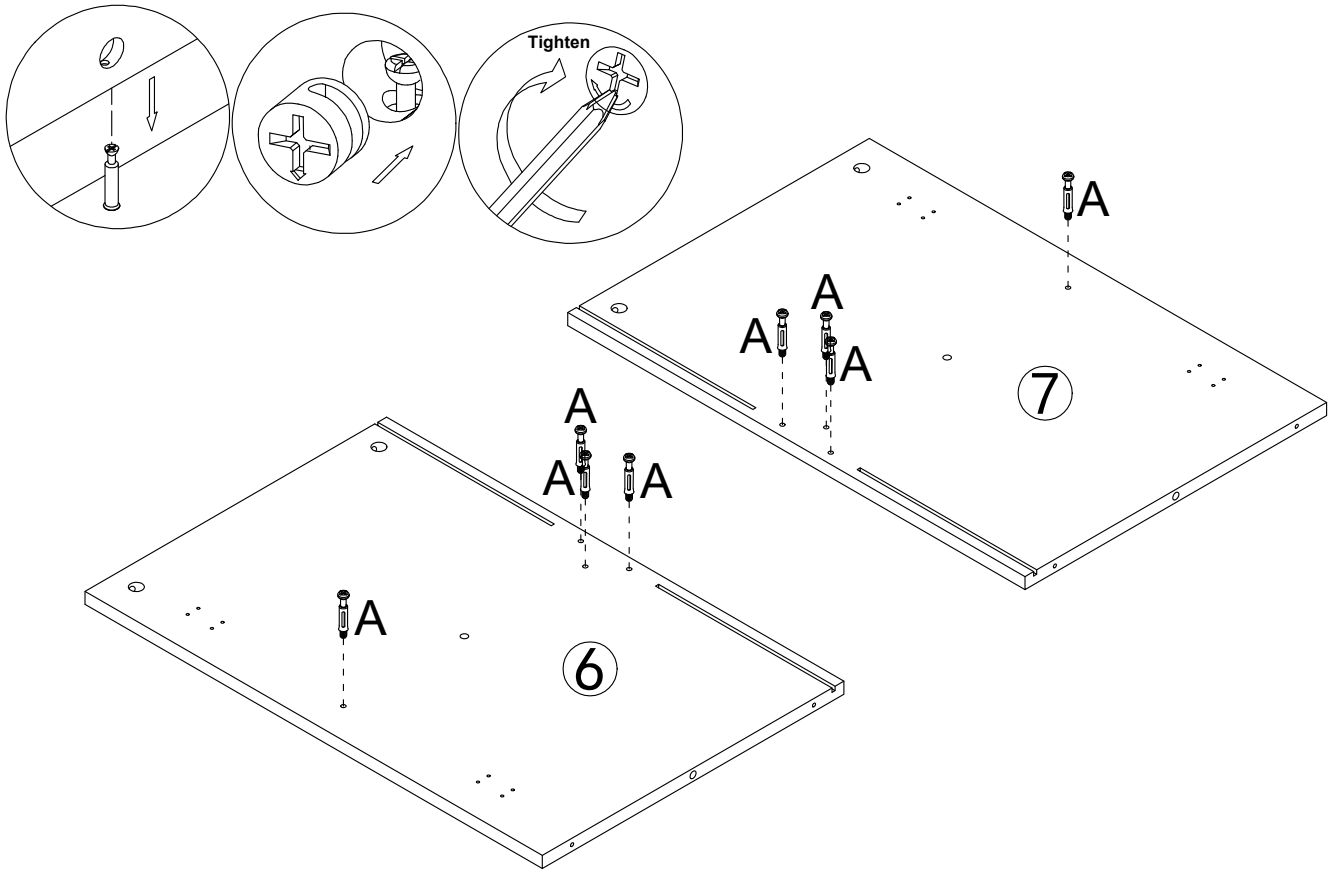


A	X8
	
M6x35mm	

8

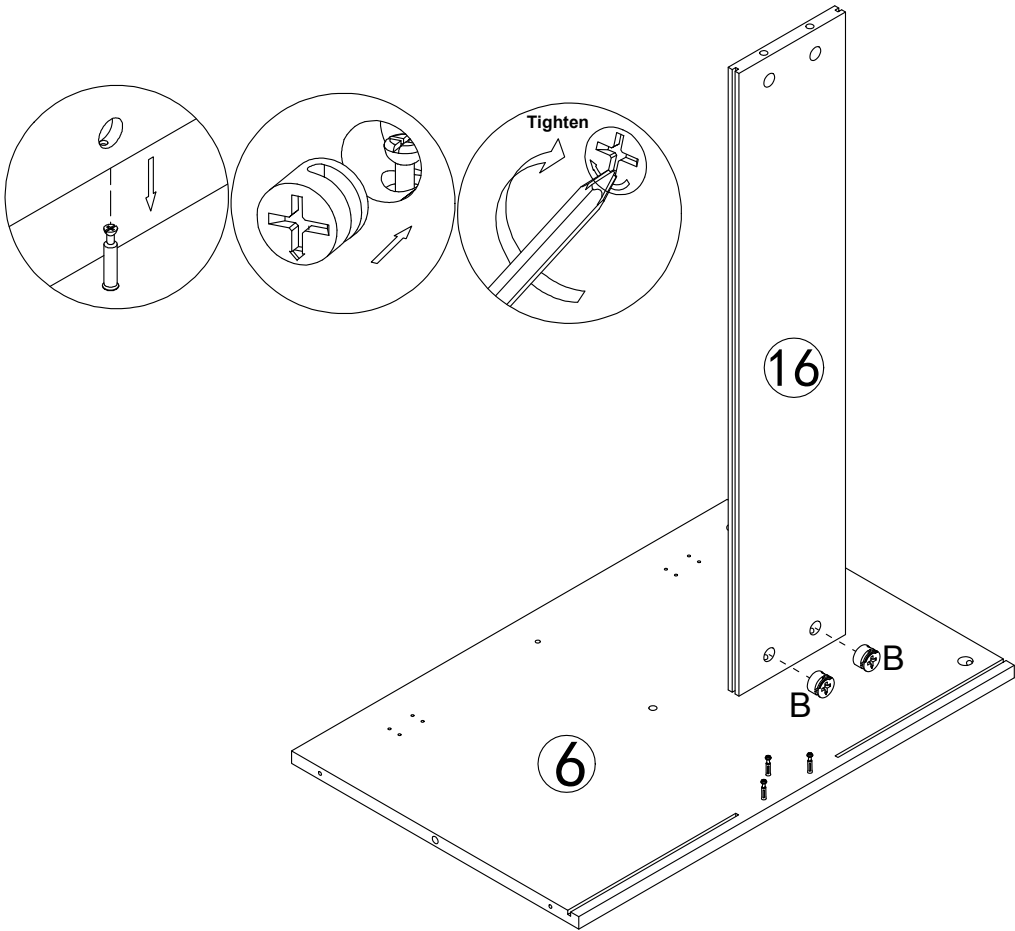


B	X2
	
Ø15x9mm	

9

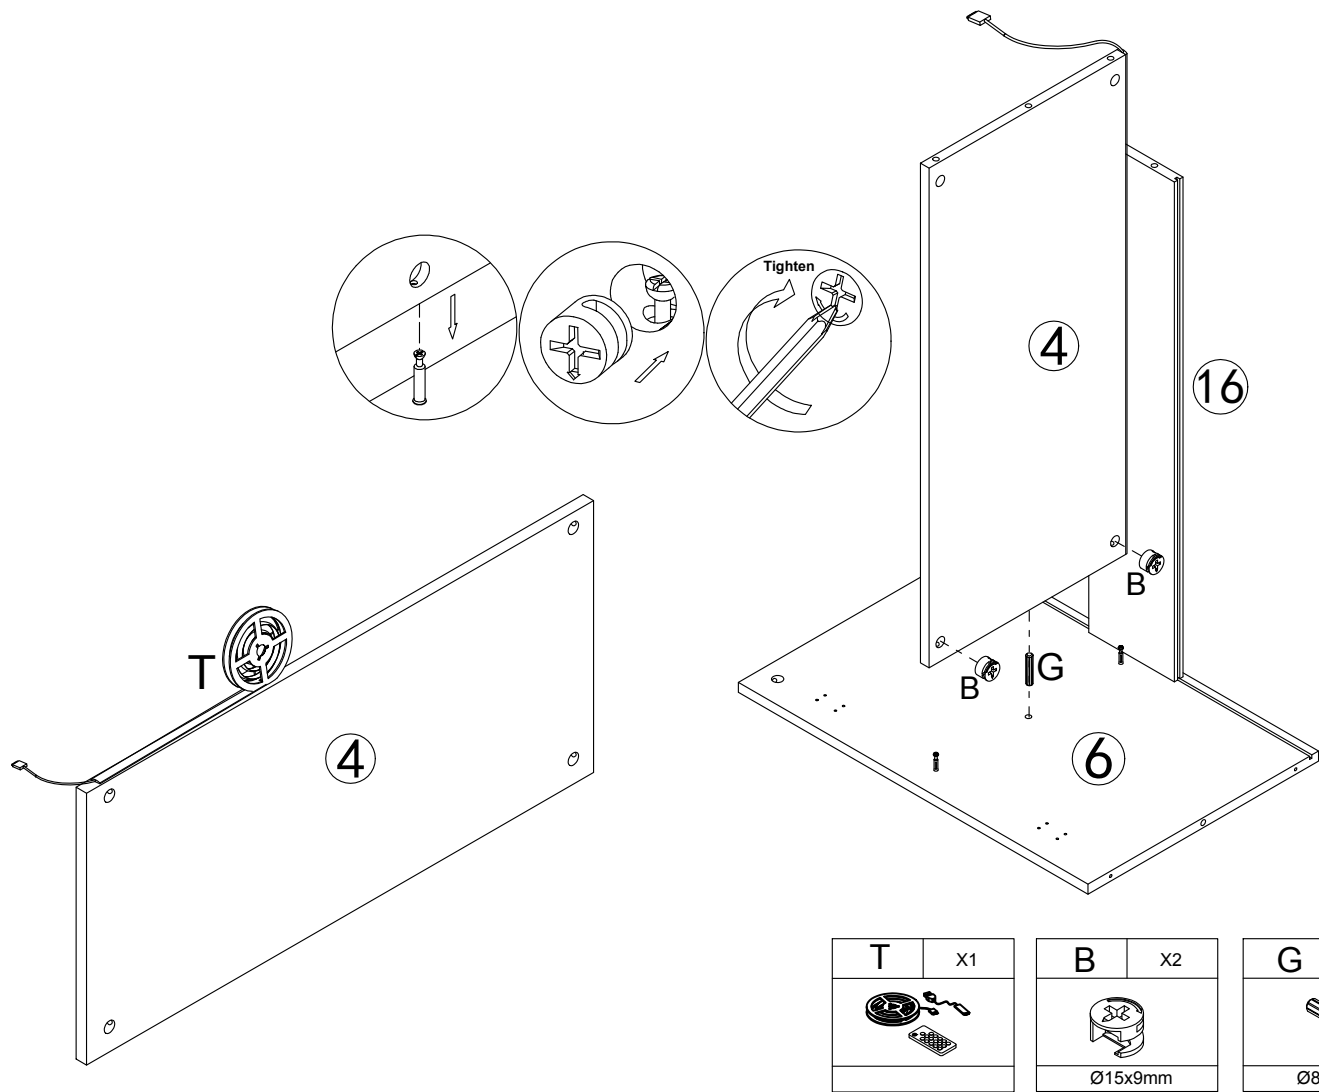


10

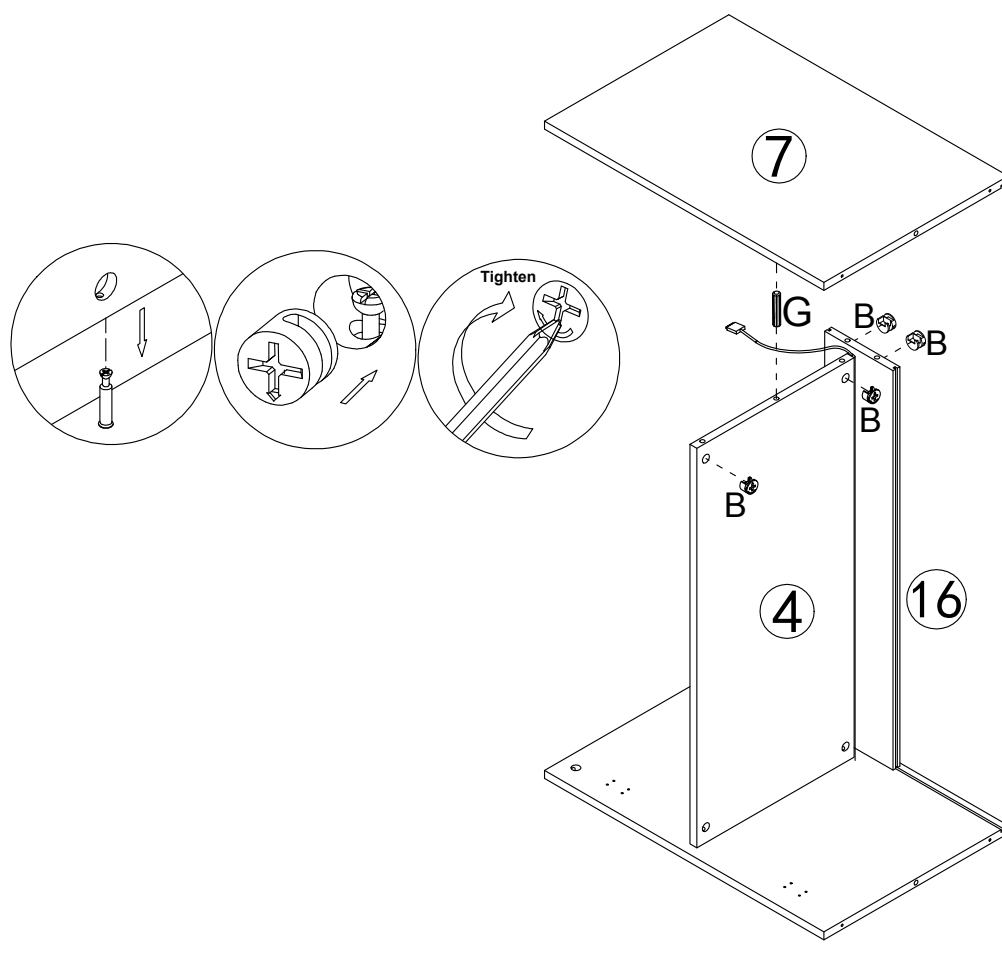




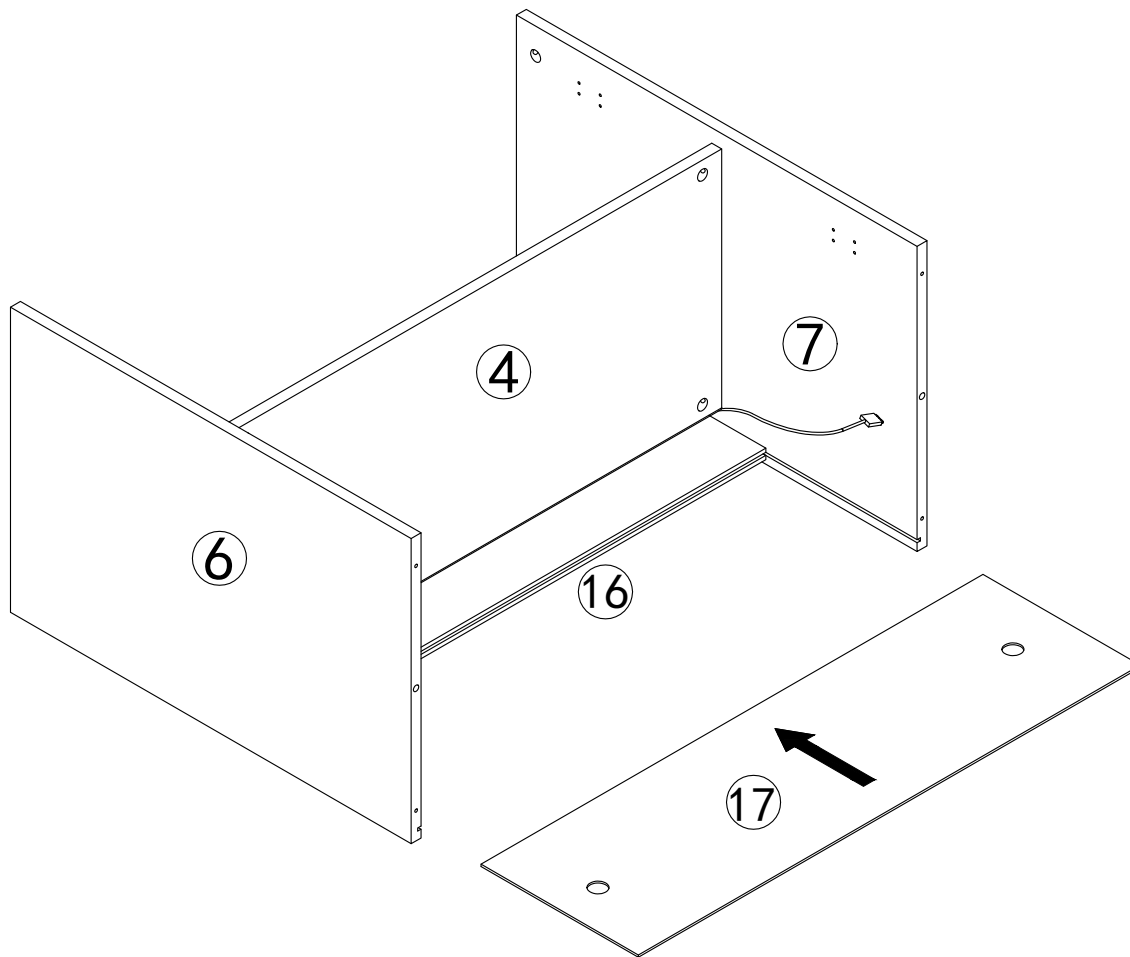

11

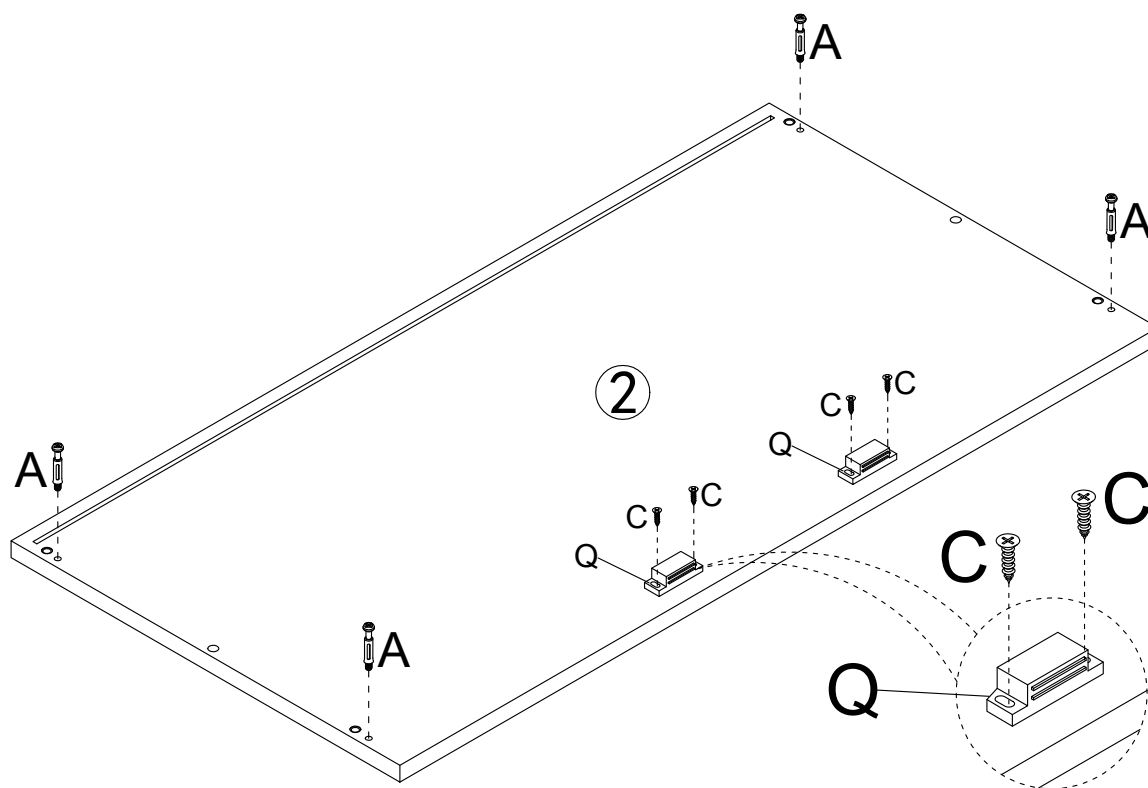


12




A	X4
	
M6x35mm	


C	X4
	
M3x16mm	

Q	X2
	


13

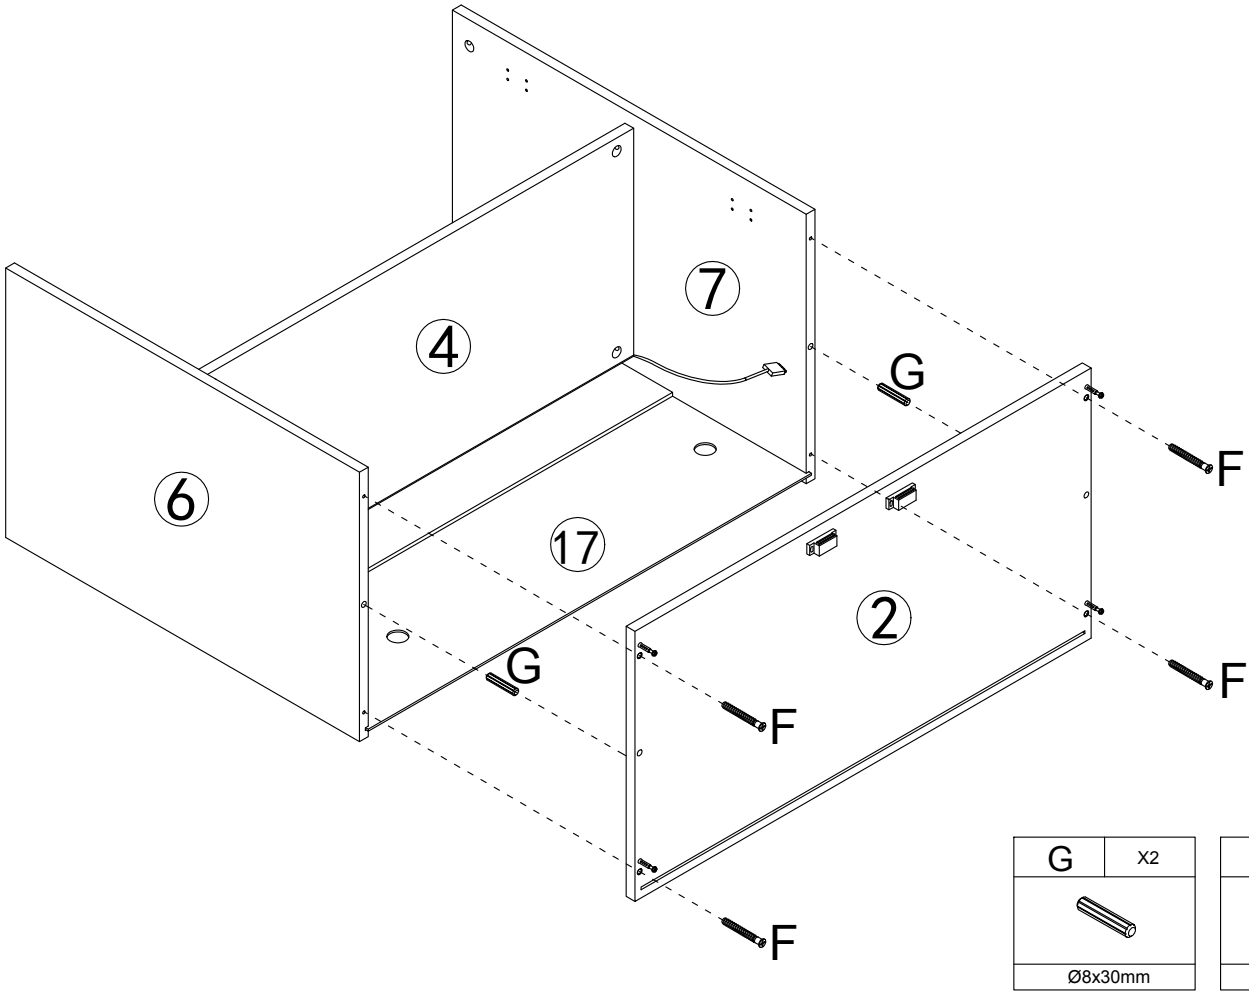


14

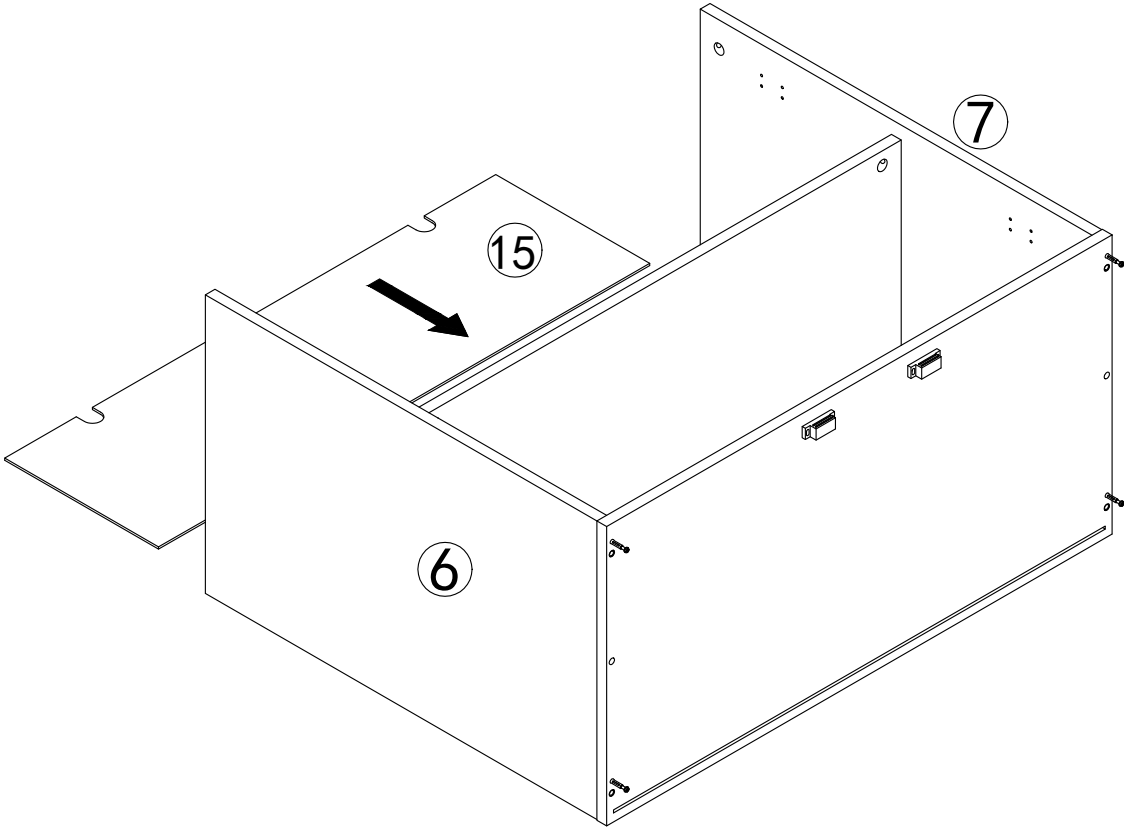


15

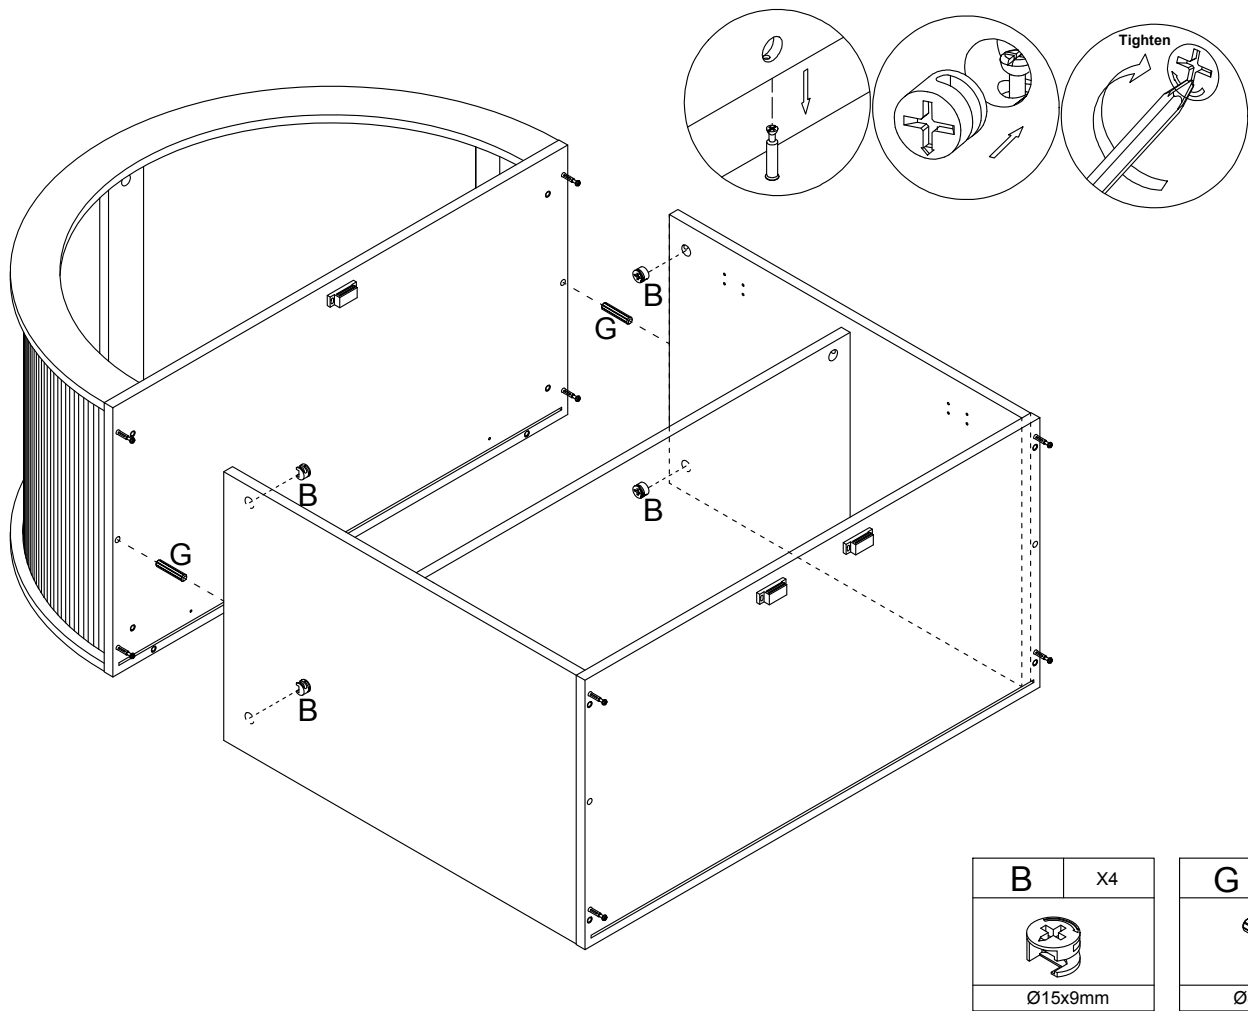


16

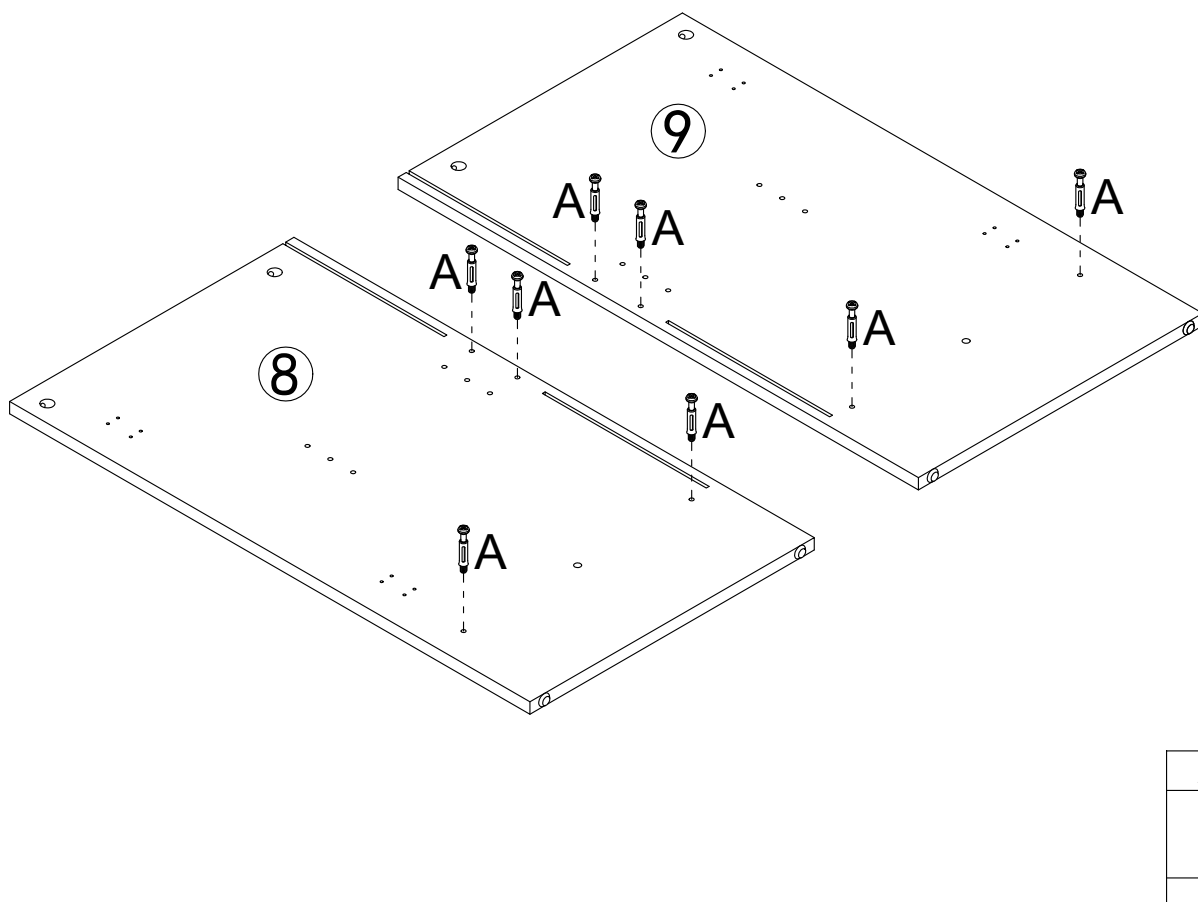



17

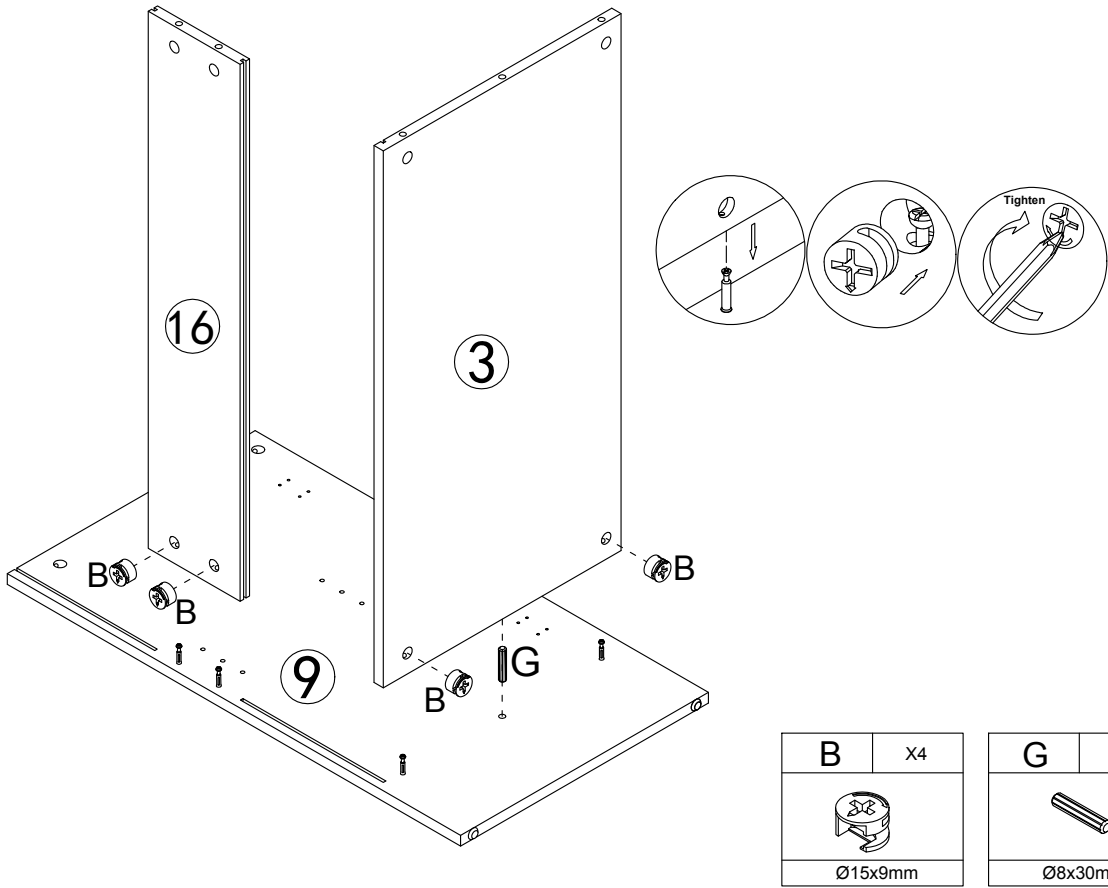

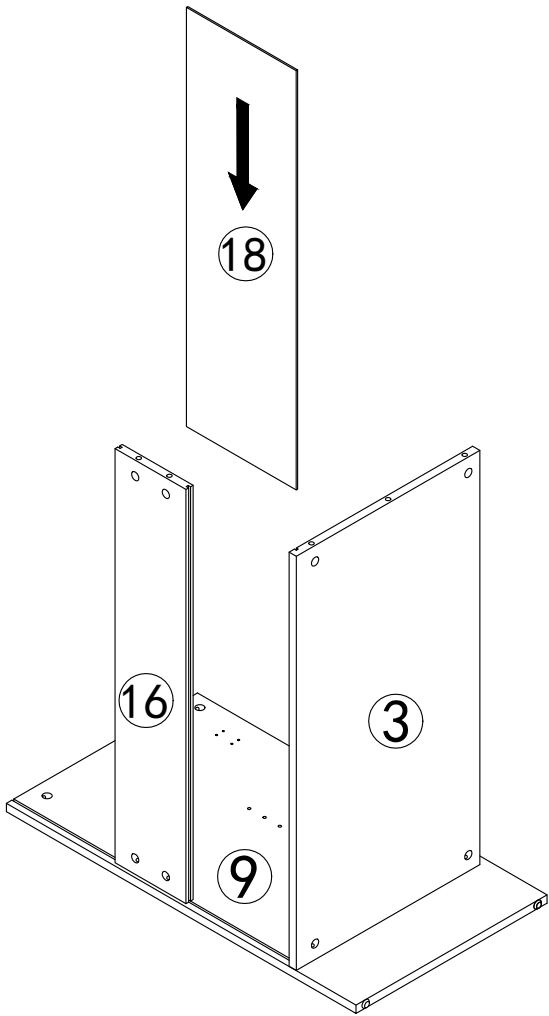

18

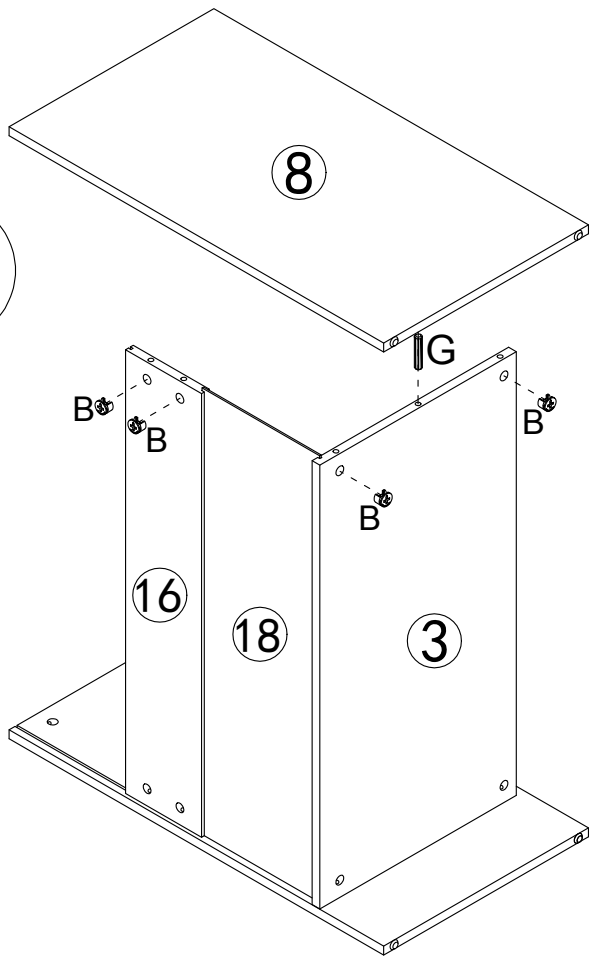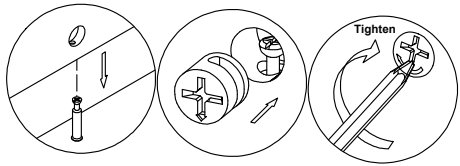


19




B	X4
	
Ø15x9mm	

G	X1
	
Ø8x30mm	


20

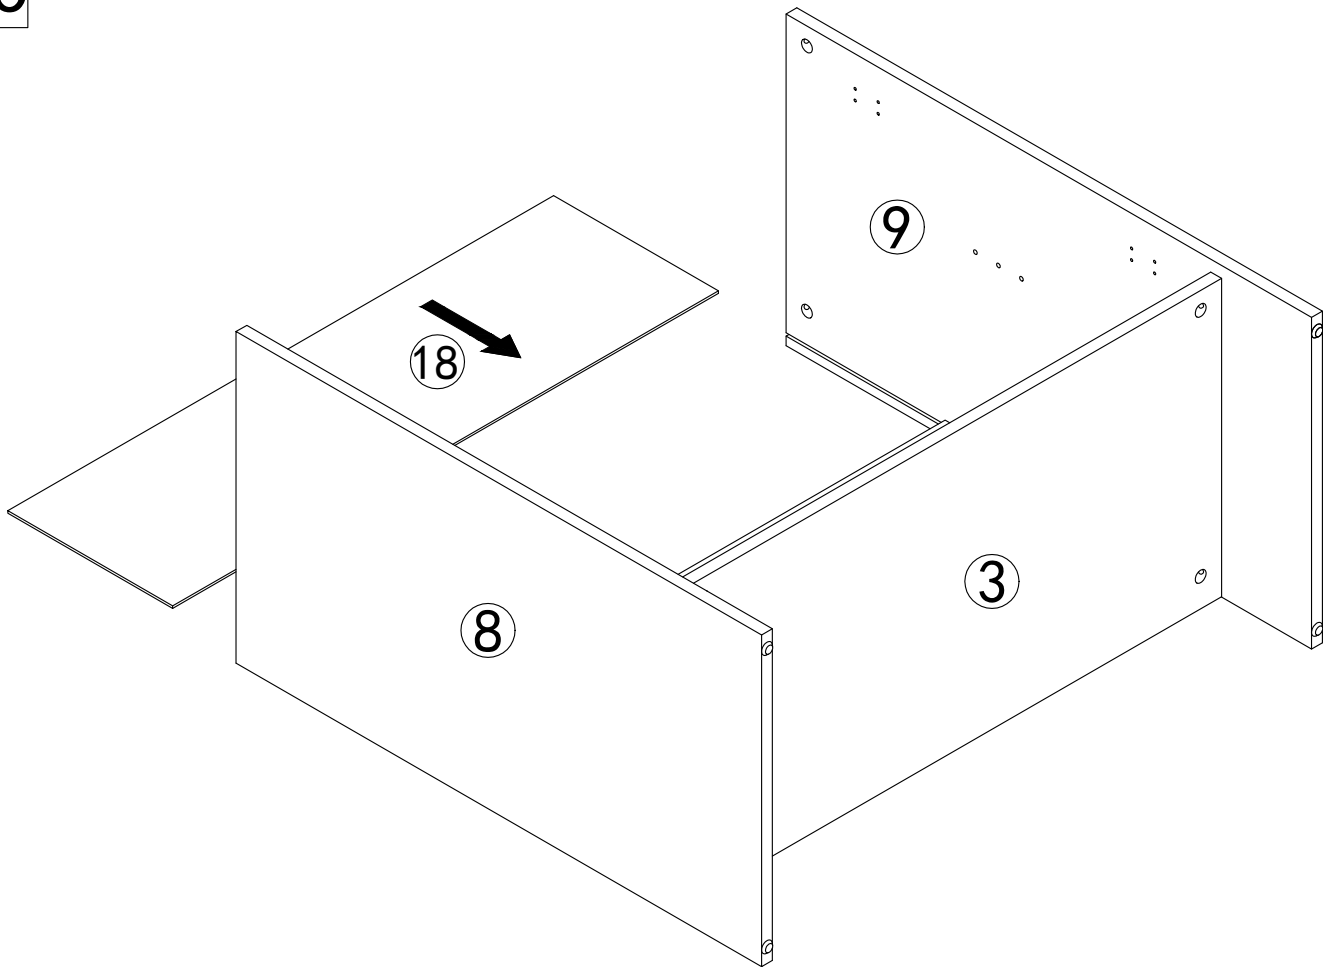




21

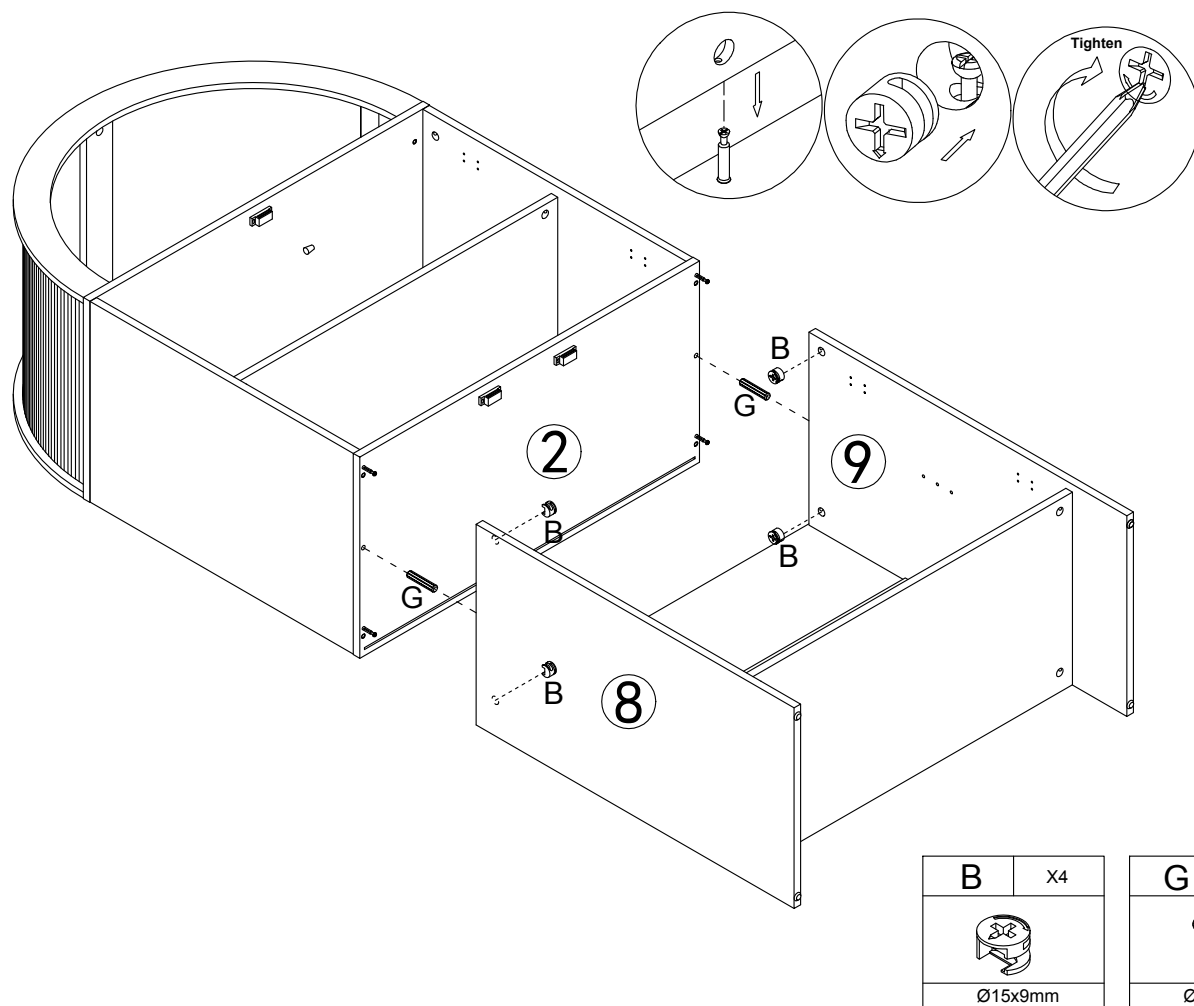


22


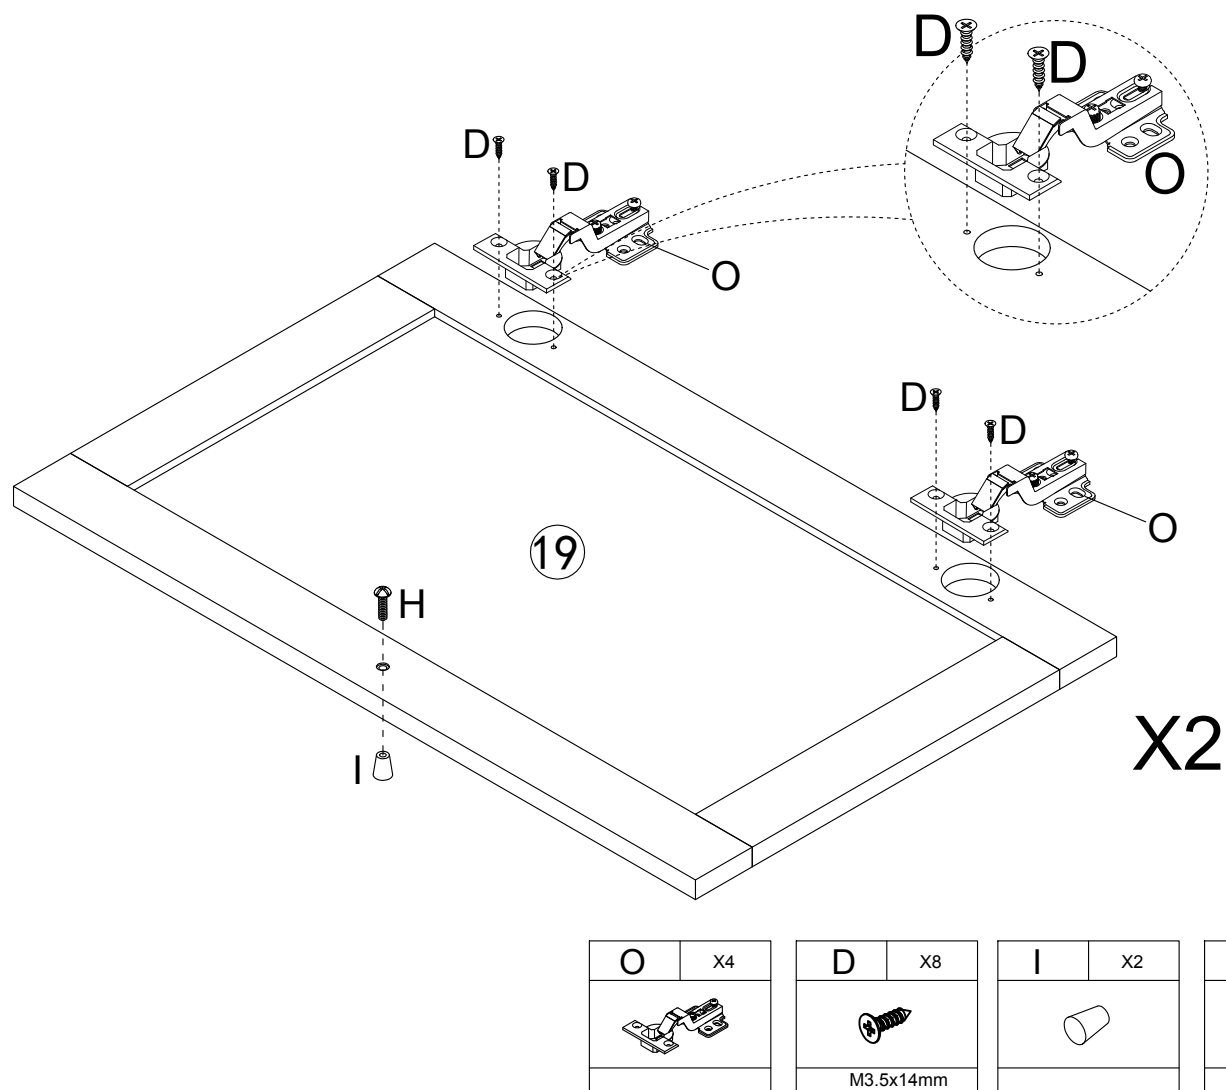



23

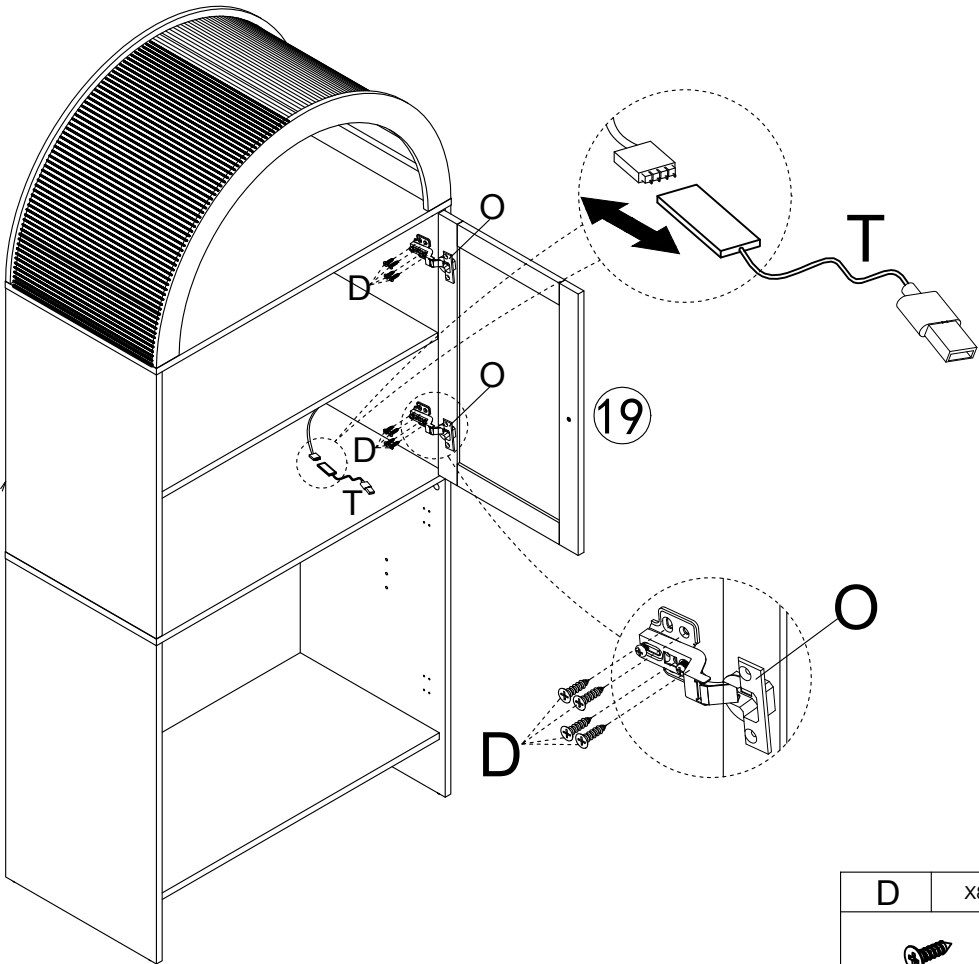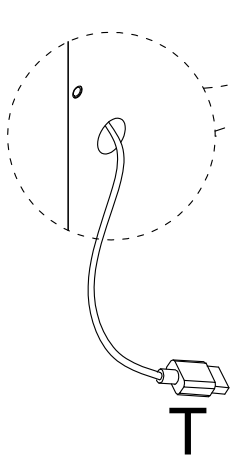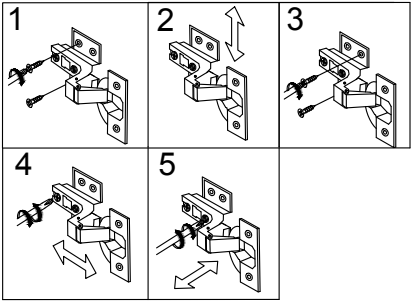


D	X8
	
M3.5x14mm	


24

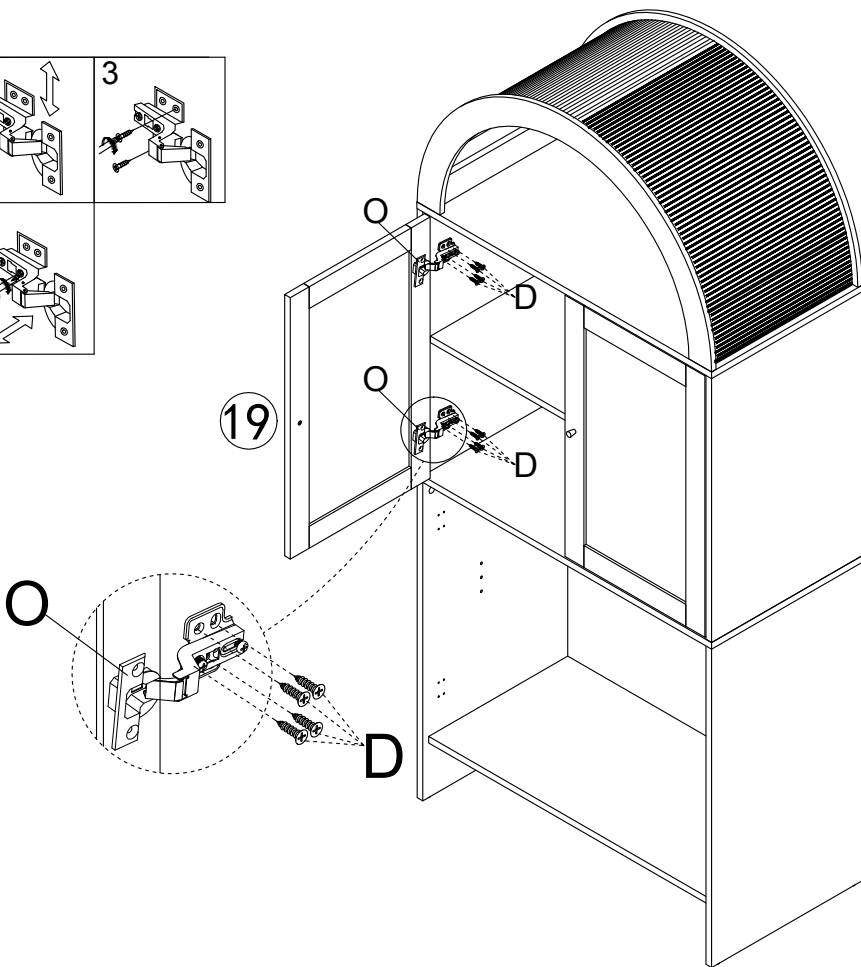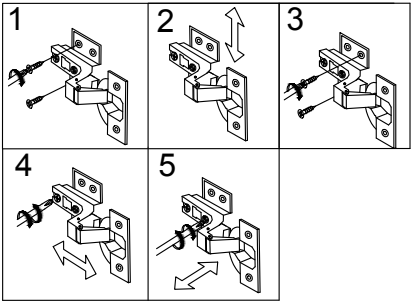


D	X8
	
M3.5x14mm	


25

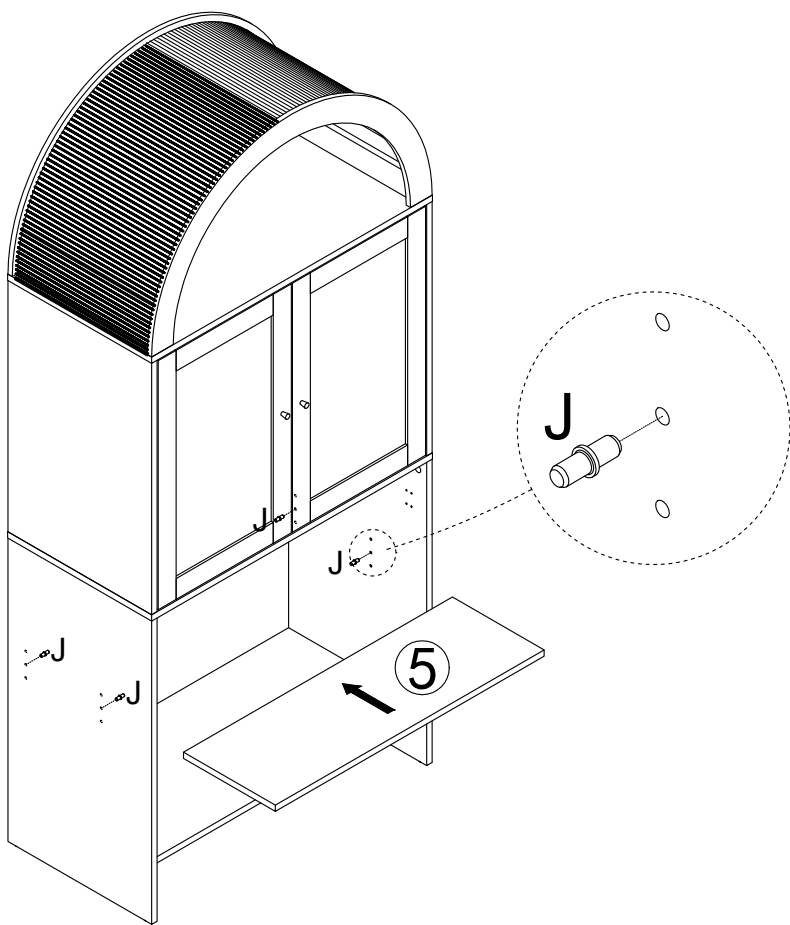

J	X4
	
Ø5x17mm	


26

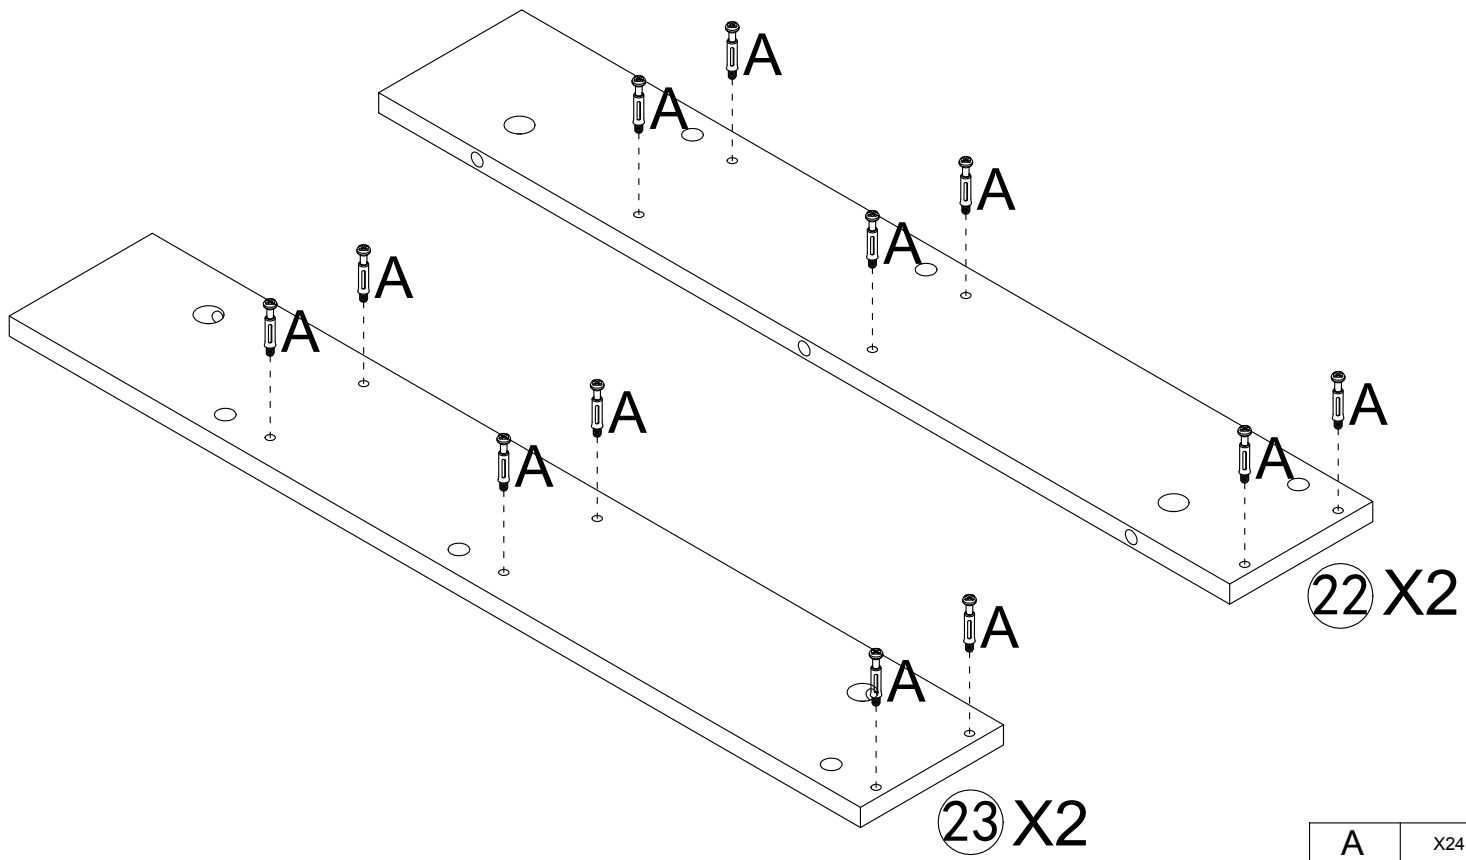


A	X24
	
M6x35mm	





27


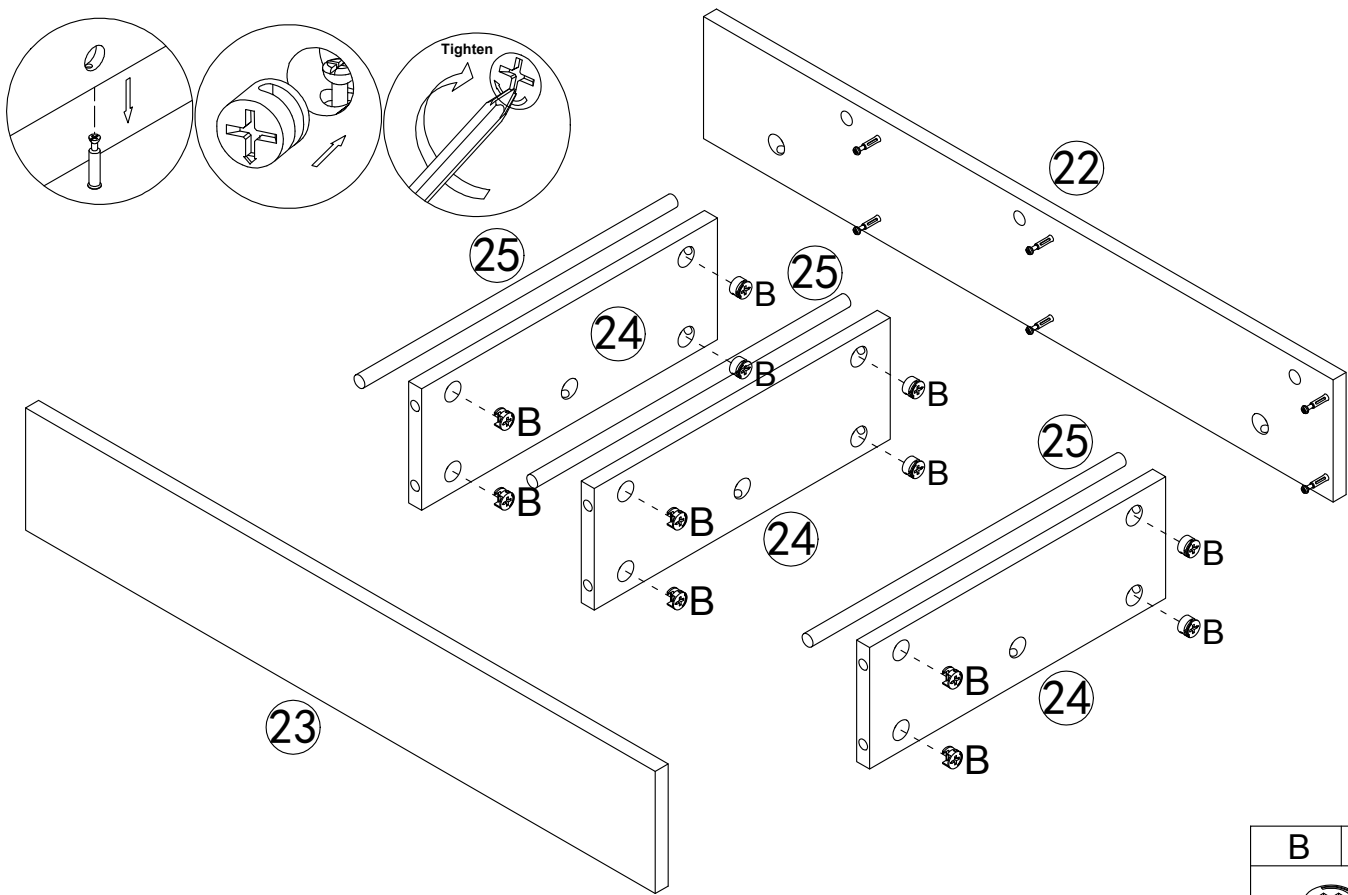




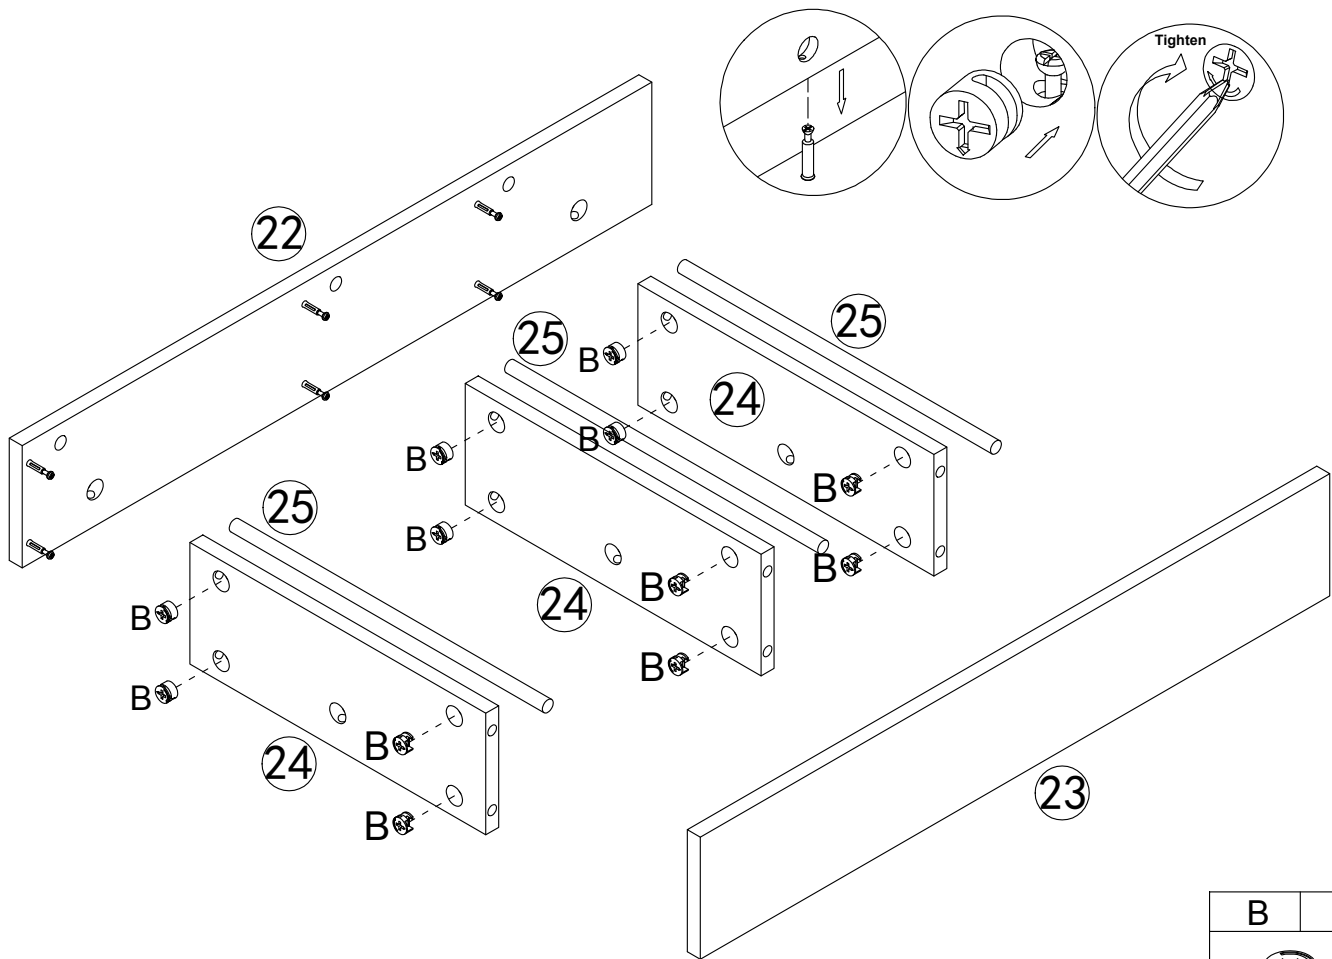


B	X12
	
Ø15x9mm	



28

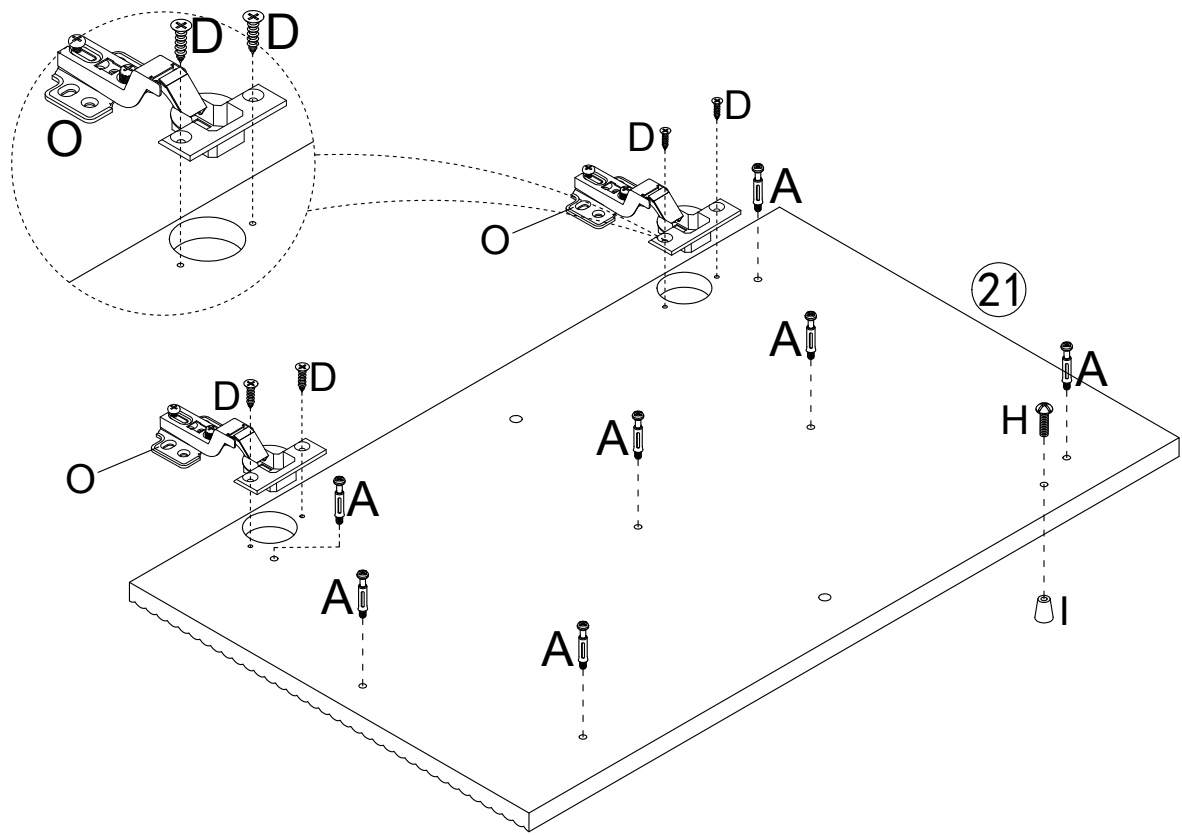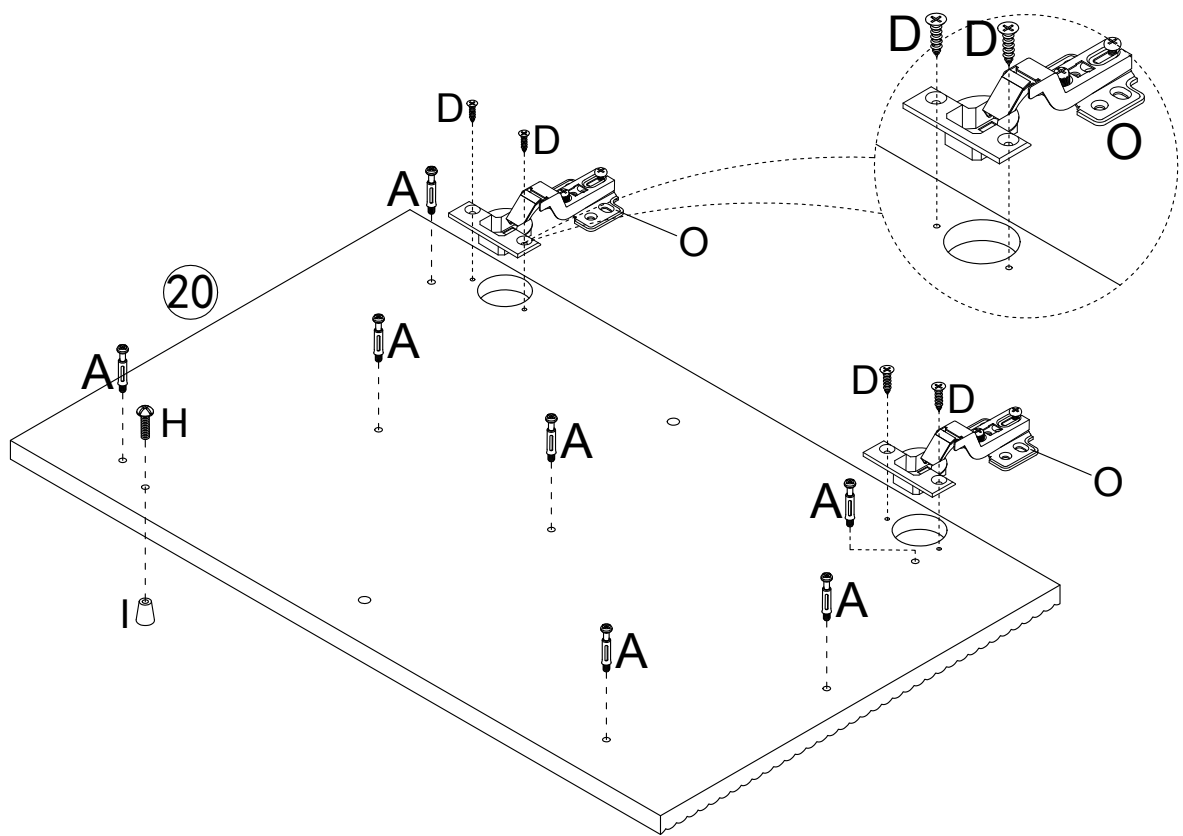



B	X12
	
Ø15x9mm	






A	X14	O	X4	D	X8	I	X2	H	X2
									
M6x35mm				M3.5x14mm				M4x20mm	

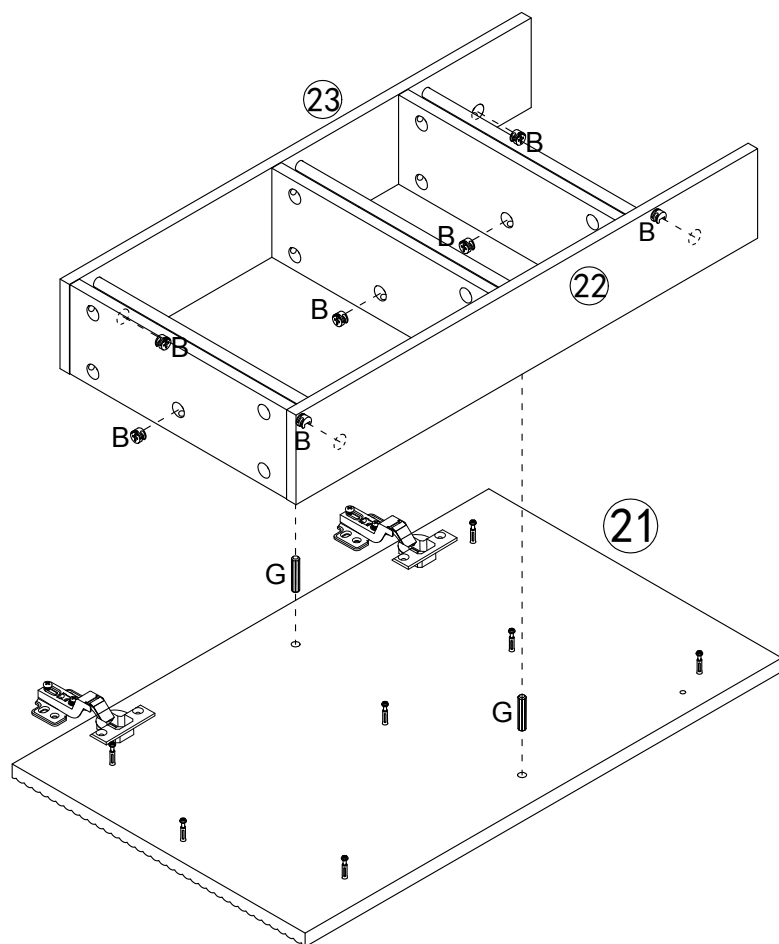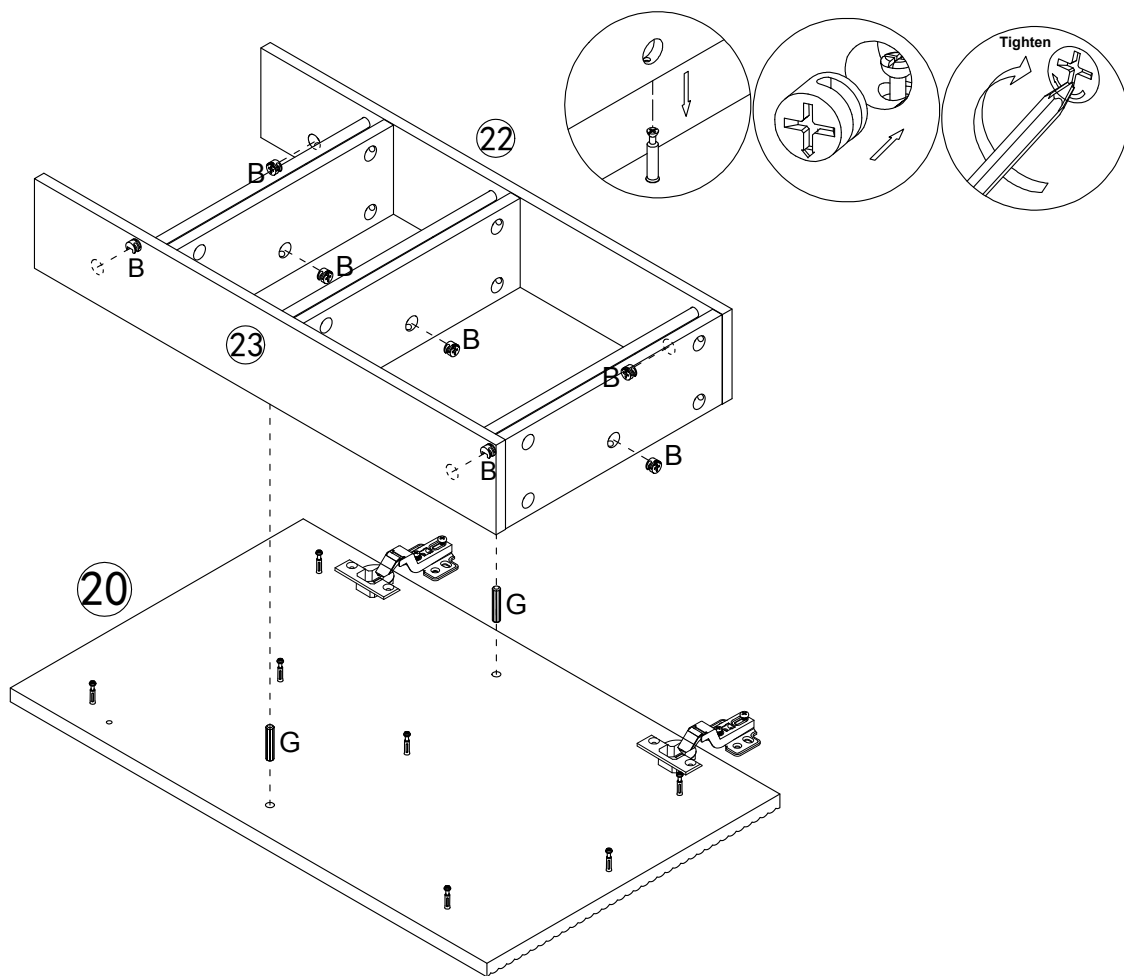



B	X14	G	X4
			
Ø15x9mm		Ø8x30mm	


31

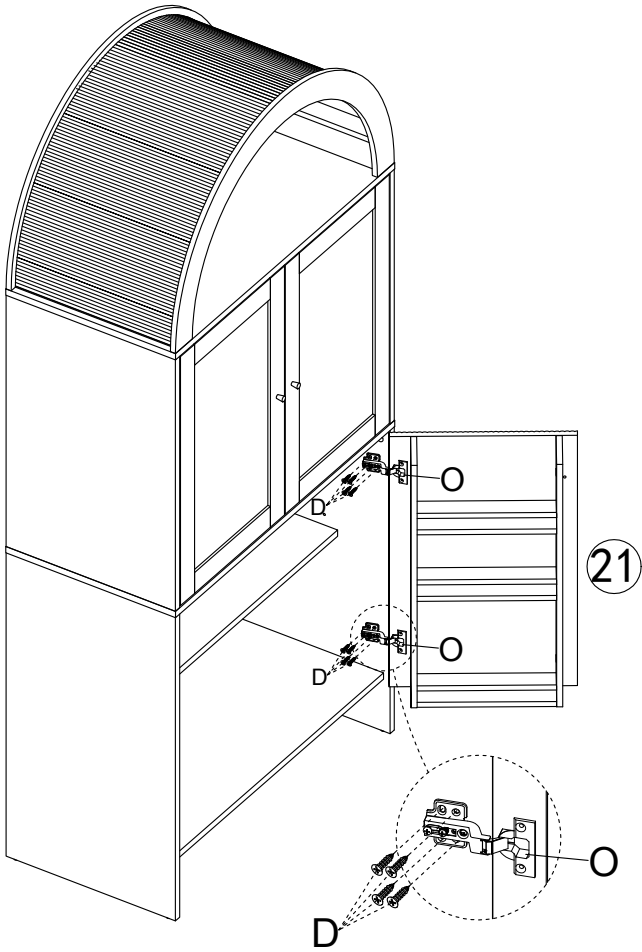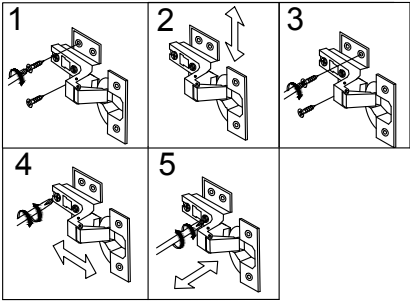


D	X8
	
M3.5x14mm	

32

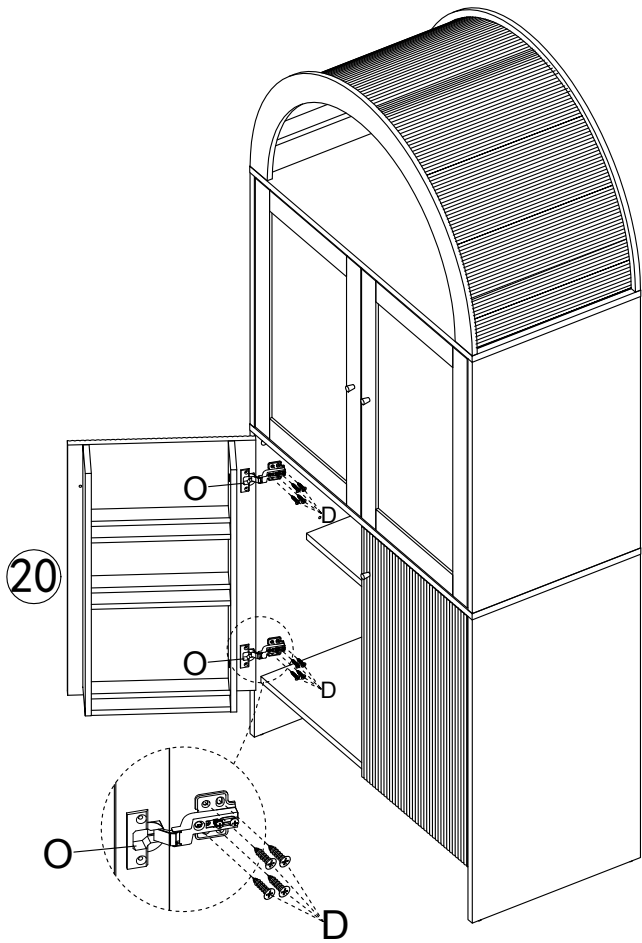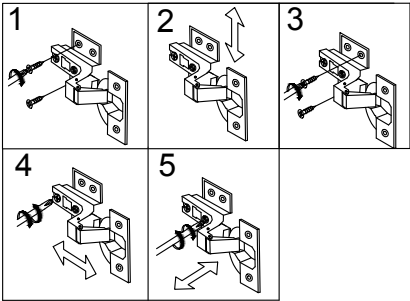


D	X8
	
M3.5x14mm	

33

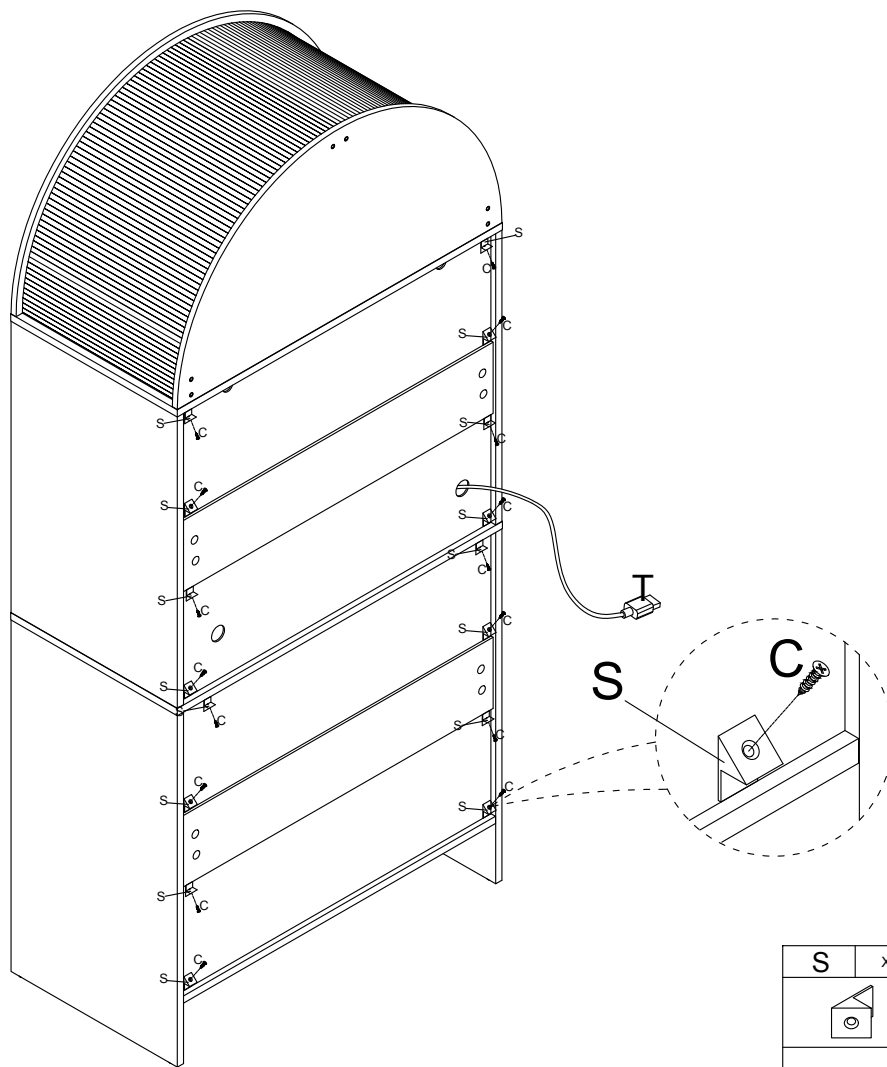

34

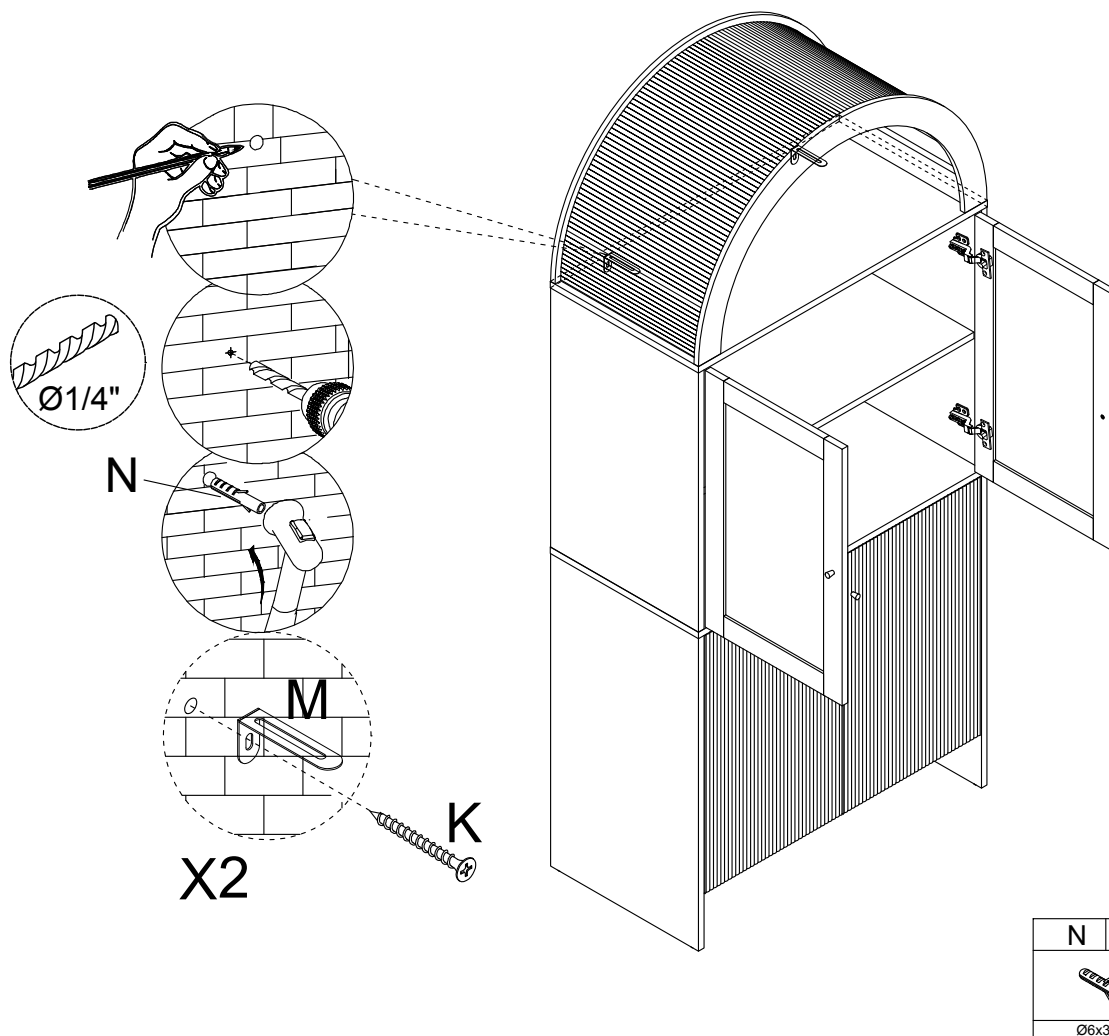

## 【Kindly Remember】

If the products you receive in this package are not all of the items you purchased, please be patient. The rest of the products will be delivered by other packages.  
If you would like to know where the rest of the package has arrived, please contact us through Amazon. We will get back to you within 12 hours.




### You can contact us in the following ways :

1.Find your order in the list and Select **【Problem with order】** .



2. Choose your topic from list displayed and Select **【Contact seller】** .

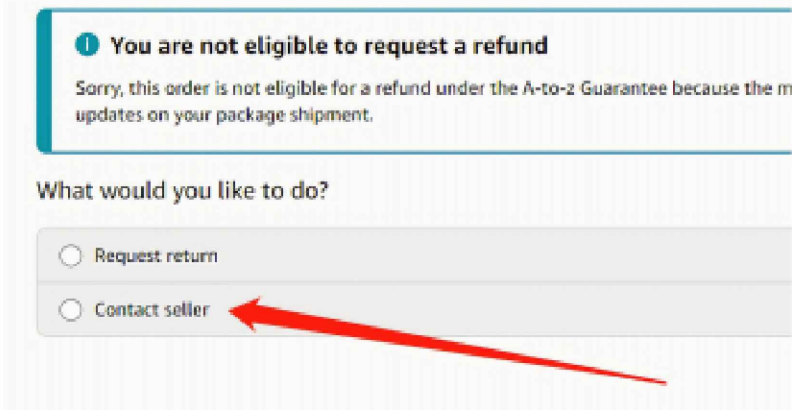

3. We will get back to you immediately as soon as we receive your message.

