



## **STOP**

We just wanted to thank you for allowing New Ridge Home to be a part of your home. If you love what you received, please take the time to write a review on the site you purchased from.

## **WAIT**

If there is any issue with your purchase, please contact us using the information found below. In many cases we have a part or hardware that will fix the issue without the hassle of having to return the item. To make a parts request, please note the following in your e-mail:

**SKU number on the box (starting with NR)**

**The part number or letter of the part on the instruction sheet**

**A brief description of the issue**

**Your name & address**

If possible, please also include a picture of the issue or the product.

Send request to: [kcovey@newridgehomegoods.com](mailto:kcovey@newridgehomegoods.com)

## **HOLD ON**

Don't forget to check out our website [www.newridgehomegoods.com](http://www.newridgehomegoods.com) where you will find our complete line of products, assembly instructions, and more.

From our entire team, Thank You for your business, we truly appreciate it!

# ASSEMBLY INSTRUCTIONS




## BARSTOOL






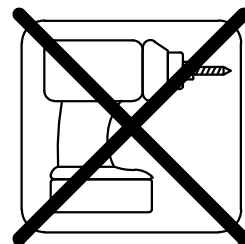
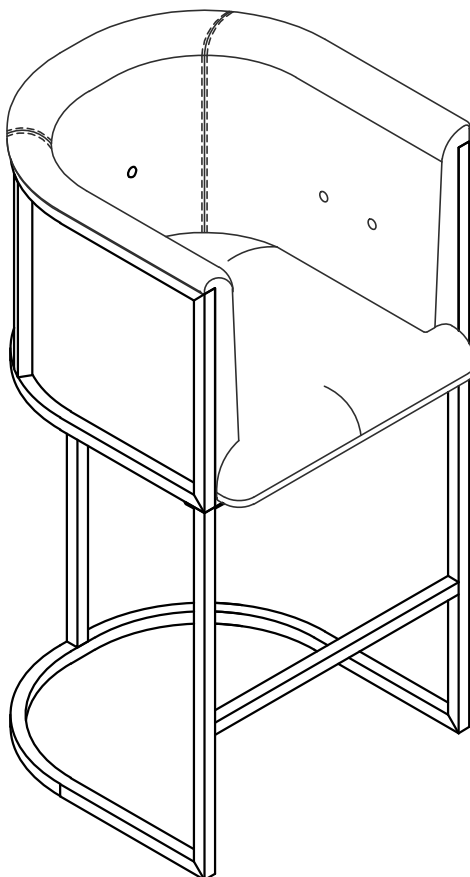
Do not fully tighten all screws until assembly is complete.

NR114001-PBS-BR  
NR114002-PCS-BR

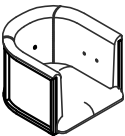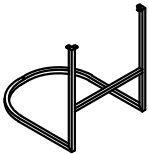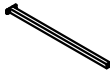NR114003-PBS-GR  
NR114004-PCS-GR

- |   |  |  |
|---|--|--|
| <b>1</b> STOOL BACK<br>WITH SEAT<br><br><br><br>1 PC | <b>2</b> FRONT LEG<br>FRAME<br><br><br><br>1 PC | <b>3</b> BACK LEG<br><br><br><br>1 PC |
|---|--|--|


- |   |  |   |
|---|--|---|
| <b>4</b> BOLT<br>Ø1/4" x 5/8"<br><br><br><br>6 PCS | <b>5</b> BOLT<br>Ø1/4" x 1-3/8"<br><br><br><br>1 PC | <b>6</b> ALLEN KEY<br>2-1/4" x 4mm<br><br><br><br>1 PC |
|---|--|---|




**No drills necessary.  
Do not use power  
screwdriver.**

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

- STEP 1** Attach Back Leg (3) to the Front Leg Frame (2) with bolts (5) using Allen key (6). Do not fully tighten the bolts at this step.

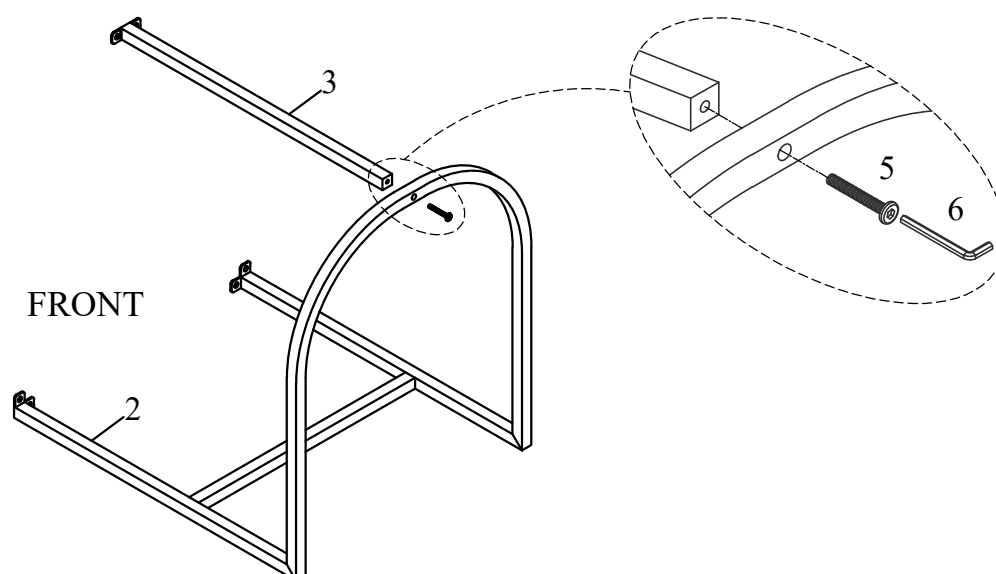


- STEP 2** Attach Front Leg Frame (2) and Back Leg (3) to the bottom of Stool back with seat (1) with bolts (4) using Allen key (6). Do not fully tighten the bolts at this step.

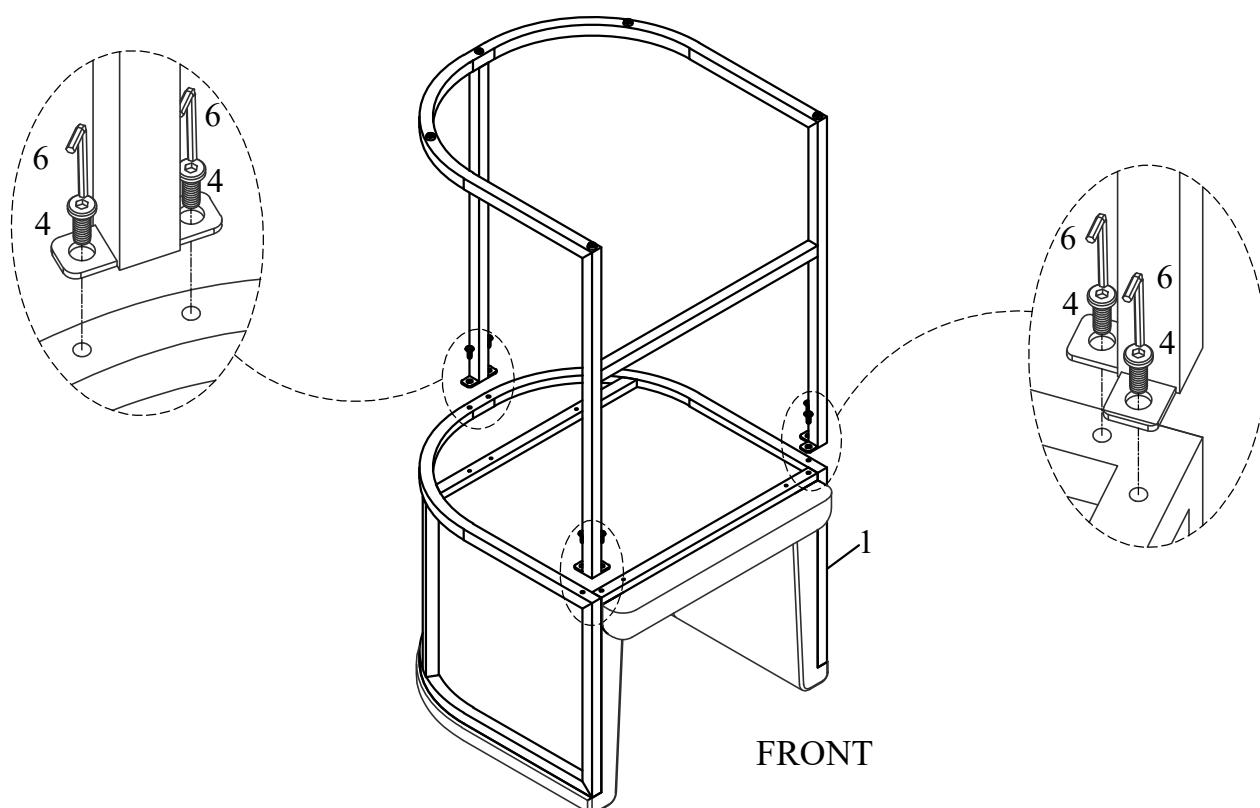


### STEP 3

Turn stool upright and place on flat surface.  
Adjust the Pre-installed Levelers at the bottom of  
Front Leg Frame (2) until the Stool is level with the ground.

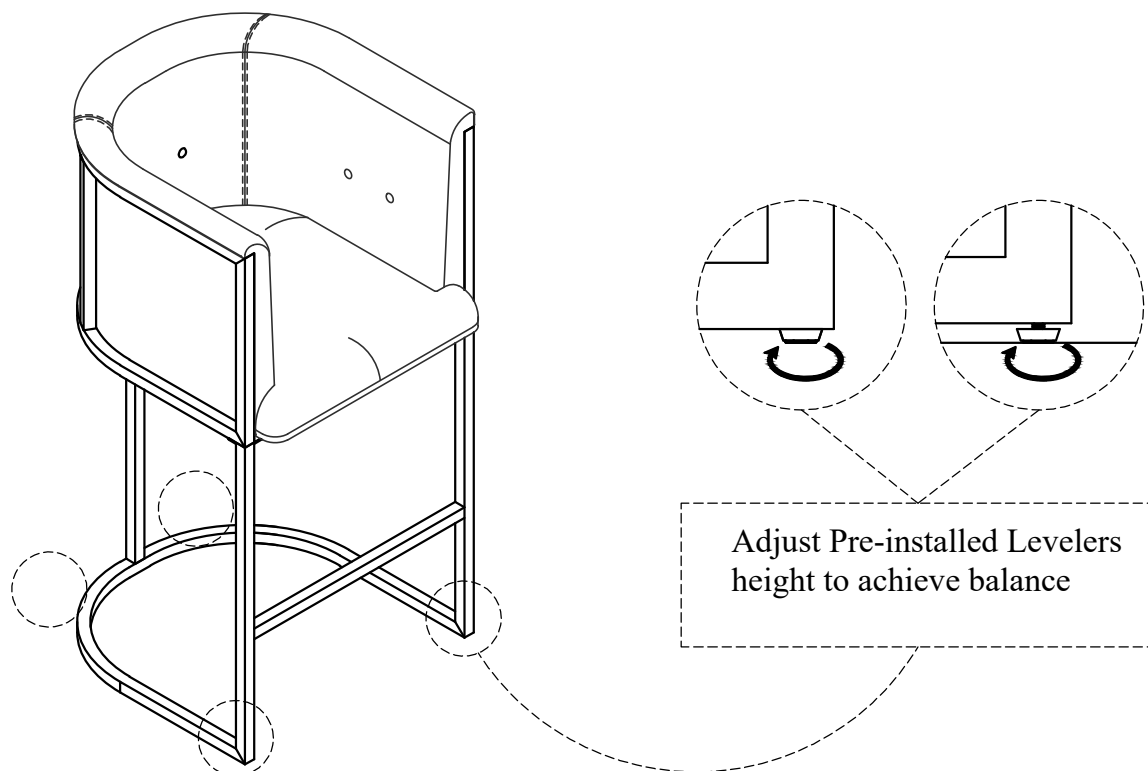

### STEP 4

Ensure the legs are aligned and seat is level, then fully tighten all bolts from  
Steps 1 and 2.

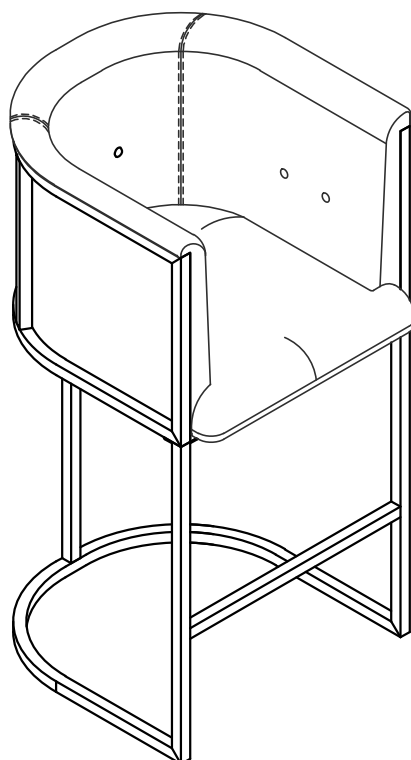

**COMPLETE**