


# **CROSLEY**

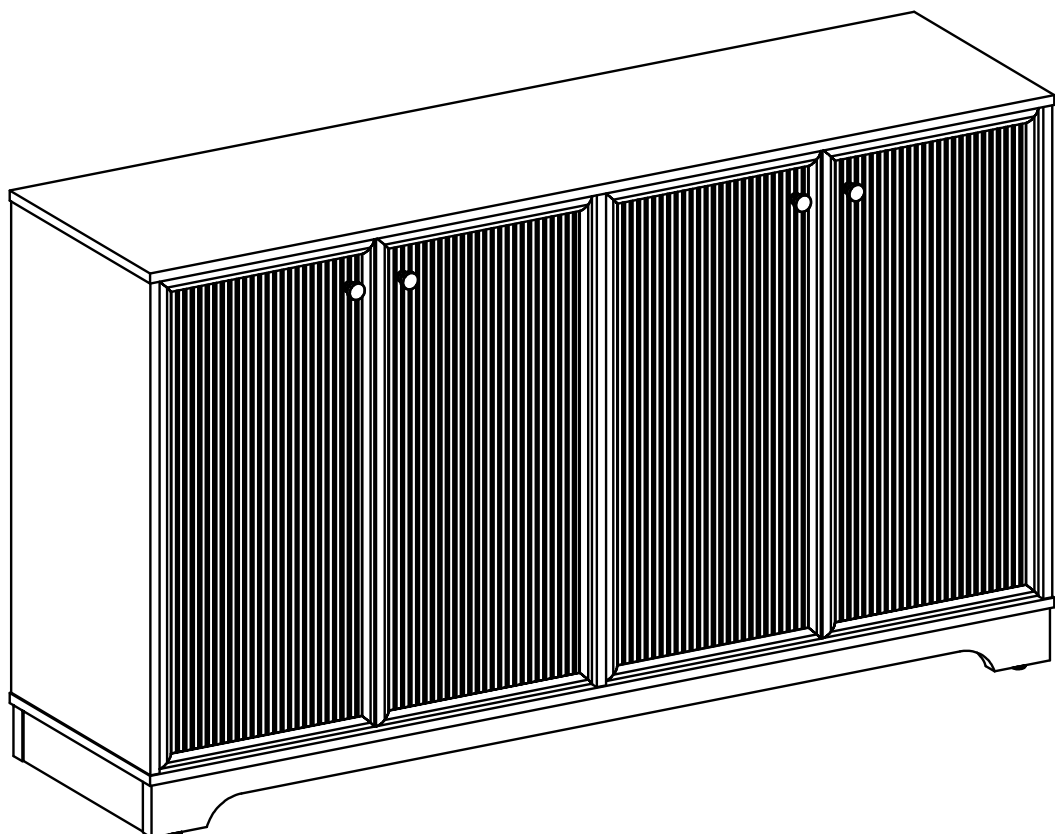













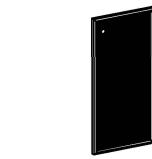

---

## FURNITURE










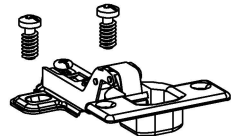


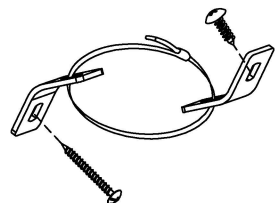


Sideboard  
CF4235



# PART LIST

<b>A</b> 	<b>B</b> 	<b>C</b> 	<b>D</b> 	<b>E</b> 
Top Panel 1 PC	Bottom Panel 1 PC	Left Panel 1 PC	Right Panel 1 PC	Partition Panel 1 PC
<b>F</b> 	<b>G</b> 	<b>H</b> 	<b>I</b> 	<b>J</b> 
Upper Back Panel 1 PC	Lower Back Panel 1 PC	Adjustable Shelf 2 PCS	Support Rail 2 PCS	Bottom Front Support 1 PC
<b>K</b> 	<b>L</b> 	<b>M</b> 	<b>N</b> 	<b>O</b> 
Bottom Back Support 1 PC	Bottom Side Support 2 PCS	Bottom Middle Support 1 PC	Left Door 2 PCS	Right Door 2 PCS
<b>P</b> 				
Cover 4 PCS				

# HARDWARE LIST

#1		#2		#3		#4		#5	 10 x 33.5 mm
Cam Lock 40 PCS (Extra 1)		Cam Bolt 40 PCS (Extra 1)		Cam Sticker 40 PCS (Extra 1)		Plastic Dowel 49 PCS (Extra 1)		Confirmat Screw 11 PCS (Extra 1)	
#6	 4 x 25 mm	#7		#8		#9		#10	
Bolt 4 PCS (Extra 1)		Adjustable Leveler 6 PCS (Extra 1)		Knob 4 PCS		Shelf Pin 8 PCS (Extra 1)		Full Curve Hinge 8 PCS	
#11		#12	 4 x 10 mm	#13		#14			
Allen Wrench 1 PC		Euro Screw 16 PCS (Extra 1)		Safety Strap Kit 1 SET		Binding Post 4 SETS (Extra 1)			
#15									
Wall Anchor 1 PC									

## ADDITIONAL TOOLS (not provided)

NOTE: It is not recommended to use power tools during assembly



Phillips Head Screwdriver


NOTE: Lay all parts on a soft surface, such as carpet to assemble unit.

NOTE: Plastic dowels are intended for alignment. Additional clearance between plastic dowel and pre-drilled hole is intentional for ease of assembly.

IMPORTANT NOTE: WE RECOMMEND AT LEAST TWO PEOPLE WORK TOGETHER TO ASSEMBLE UNIT.


Step 1. Screw cam bolts (part #2) into top panel (part A) and bottom panel (B) using phillips head screwdriver.

Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.

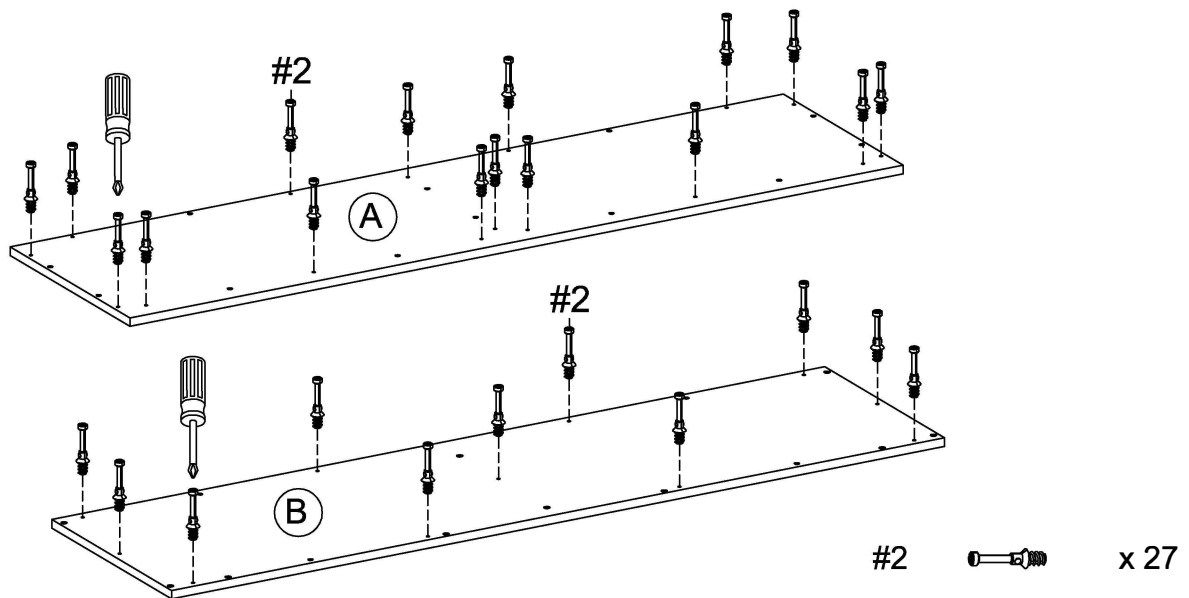


Step 2. Screw cam bolts (part #2) into left panel (part C) and right panel (D) using phillips head screwdriver.  
Insert cam locks (part #1) and plastic dowels (part #4) into left panel (part C), right panel (part D), partition panel (part E) and support rails (part I).

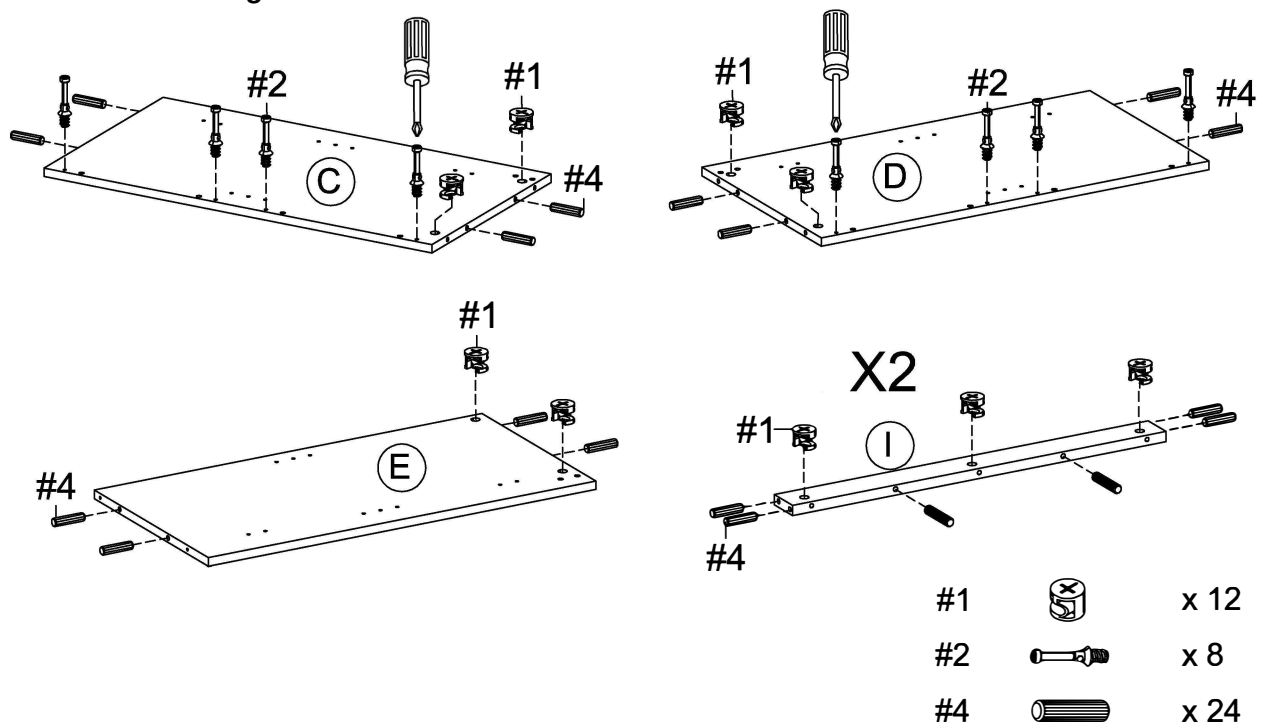

Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.



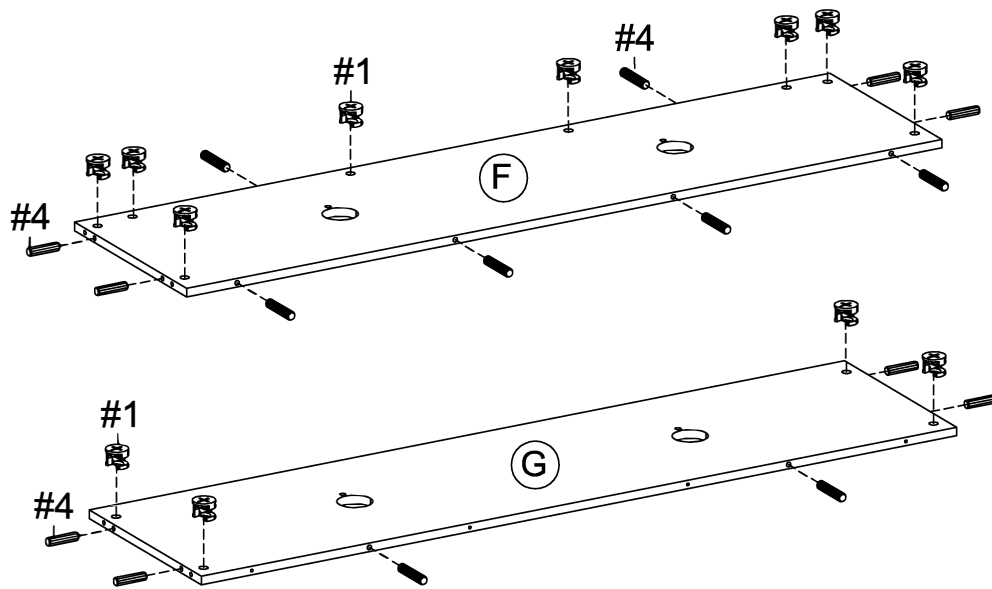


Step 3. Insert cam locks (part #1) and plastic dowels (part #4) into upper back panel (part F) and lower back panel (part G).







#1		x 12
#4		x 16



Step 4. Screw cam bolts (part #2) into bottom front support (part J) and bottom back support (part K) using phillips head screwdriver. Insert cam locks (part #1) and plastic dowels (part #4) into bottom front support (part J) and bottom back support (part K). Attach adjustable levelers (part #7) into bottom front support (part J) and bottom back support (part K).

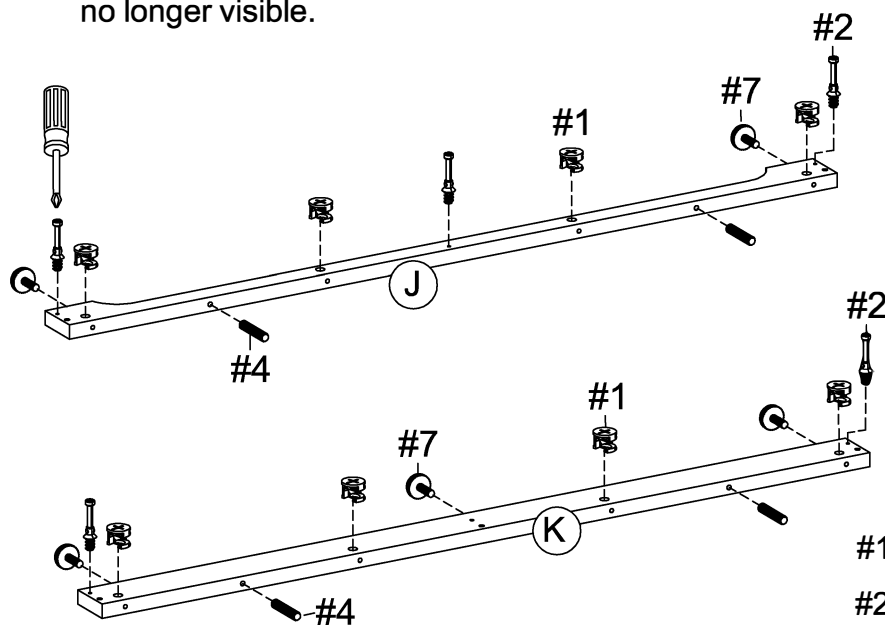


Note: Do not overtighten cam bolts. Stop tightening once threads on cam bolt are no longer visible.




#1		x 8
#2		x 5
#4		x 4
#7		x 5

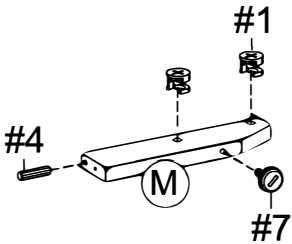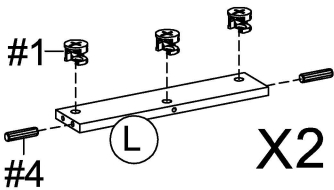Step 5. Insert cam locks (part #1) and plastic dowels (part #4) into bottom side supports (part L) and bottom middle support (part M).  
 Attach adjustable leveler (part #7) into bottom middle support (part M).




#1		x 8
#4		x 5
#7		x 1

Step 6. Attach upper back panel (part F) to lower back panel (part G).

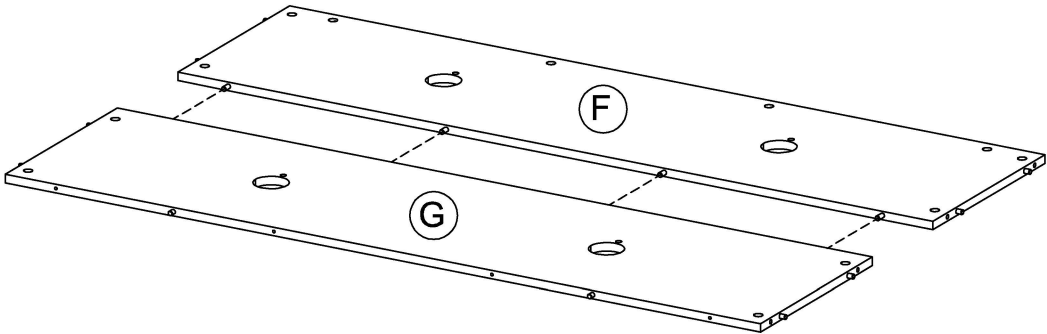


**Step 7. Attach left panel (part C) to back panels (parts F & G).**  
Use phillips head screwdriver to turn cam locks (part #1) clockwise to fasten.

**Note:** Cam locks must rotate a full 180°. See pictured insert.

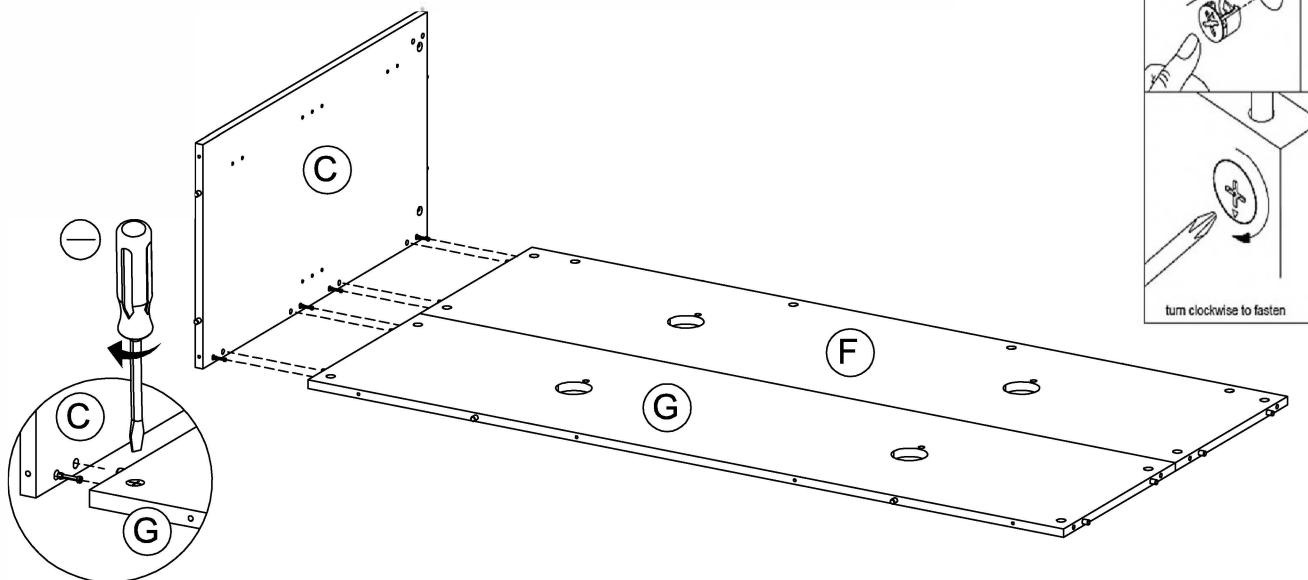


**Step 8. Attach support rails (part I), partition panel (part E) and right panel (D) to assembled unit (parts C, F & G).**  
Use phillips head screwdriver to turn cam locks (part #1) clockwise to fasten.

**Note:** Cam locks must rotate a full 180°. See pictured insert.

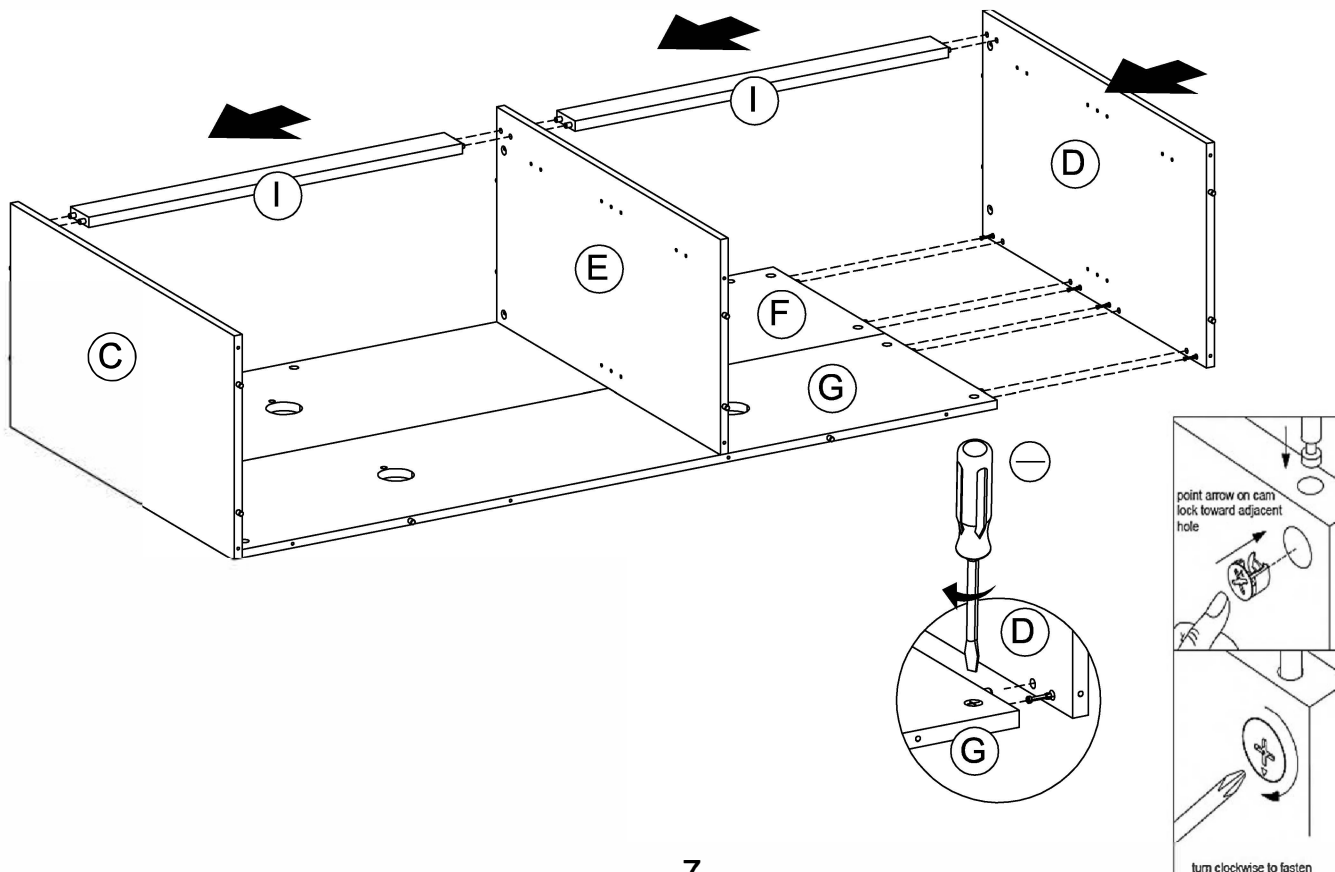



Step 9. Attach bottom panel (part B) to assembled unit (parts C, D, E & G) using confirmat screws (part #5) and phillips head screwdriver.

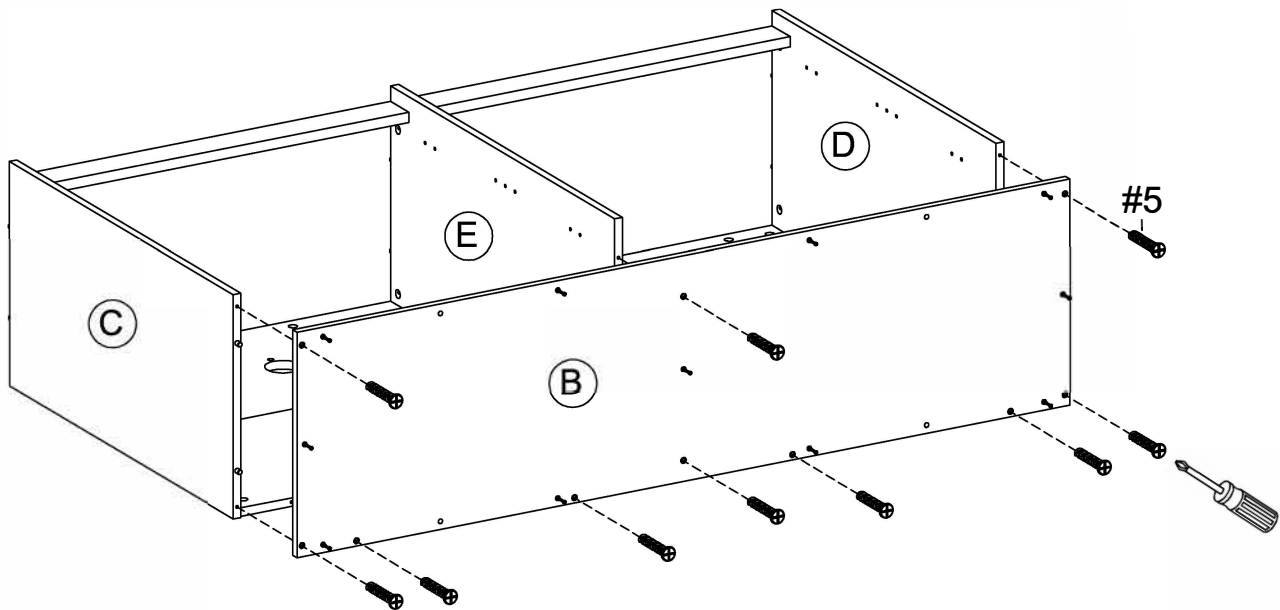

#5  x 10

Step 10. Attach bottom front support (part J) and bottom back support (part K) to bottom side supports (part L) and bottom middle support (part M) using confirmat screw (part #5) and phillips head screwdriver. Use phillips head screwdriver to turn cam locks (part #1) clockwise to fasten.


Note: Cam locks must rotate a full 180°. See pictured insert.

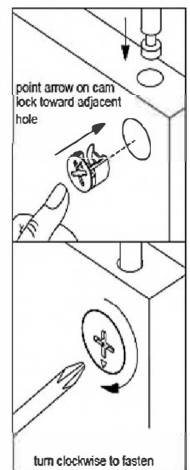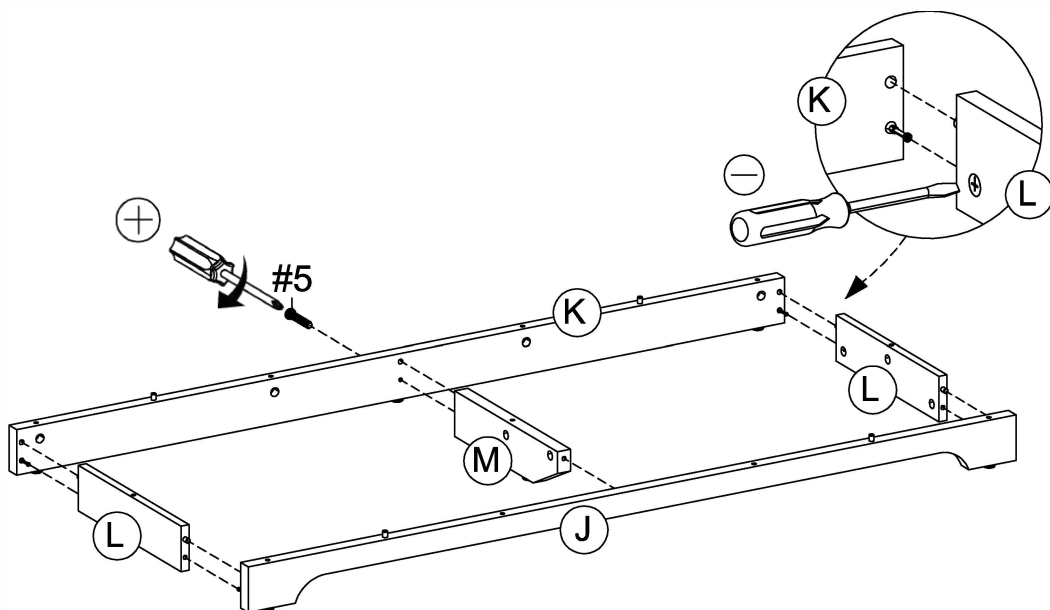

#5  x 1


**Step 11. Attach assembled unit (parts J, K, L & M) to bottom panel (part B).**  
Use phillips head screwdriver to turn cam locks (part #1) clockwise to fasten.

**Note:** Cam locks must rotate a full 180°. See pictured insert.

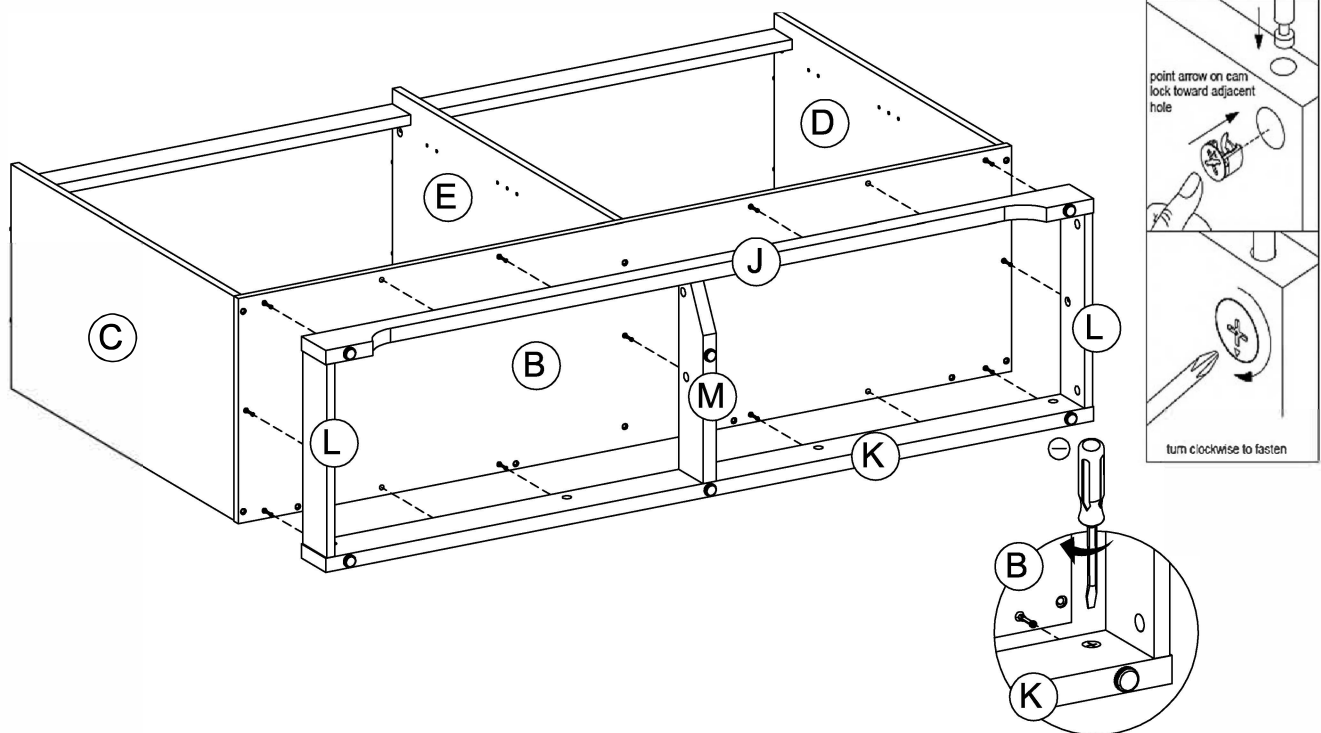


**Step 12. Carefully turn unit upright. Attach top panel (A) to assembled unit (parts C, D, E, F & I).**  
Use phillips head screwdriver to turn cam locks (part #1) clockwise to fasten.


**Note:** Cam locks must rotate a full 180°. See pictured insert.

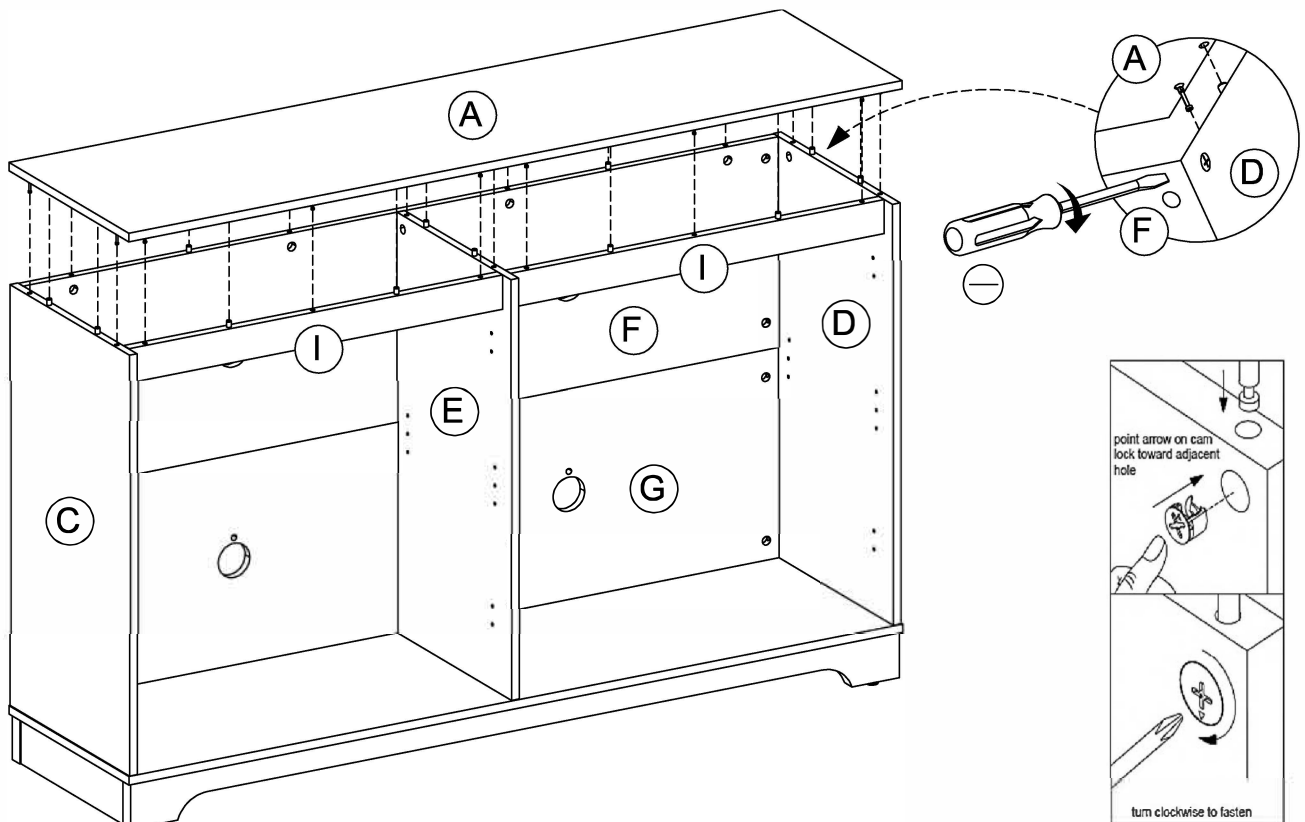


Step 13. Attach covers (part P) to back panels (parts F & G) using binding posts (part #14), allen wrench (part #11) and phillips head screwdriver.

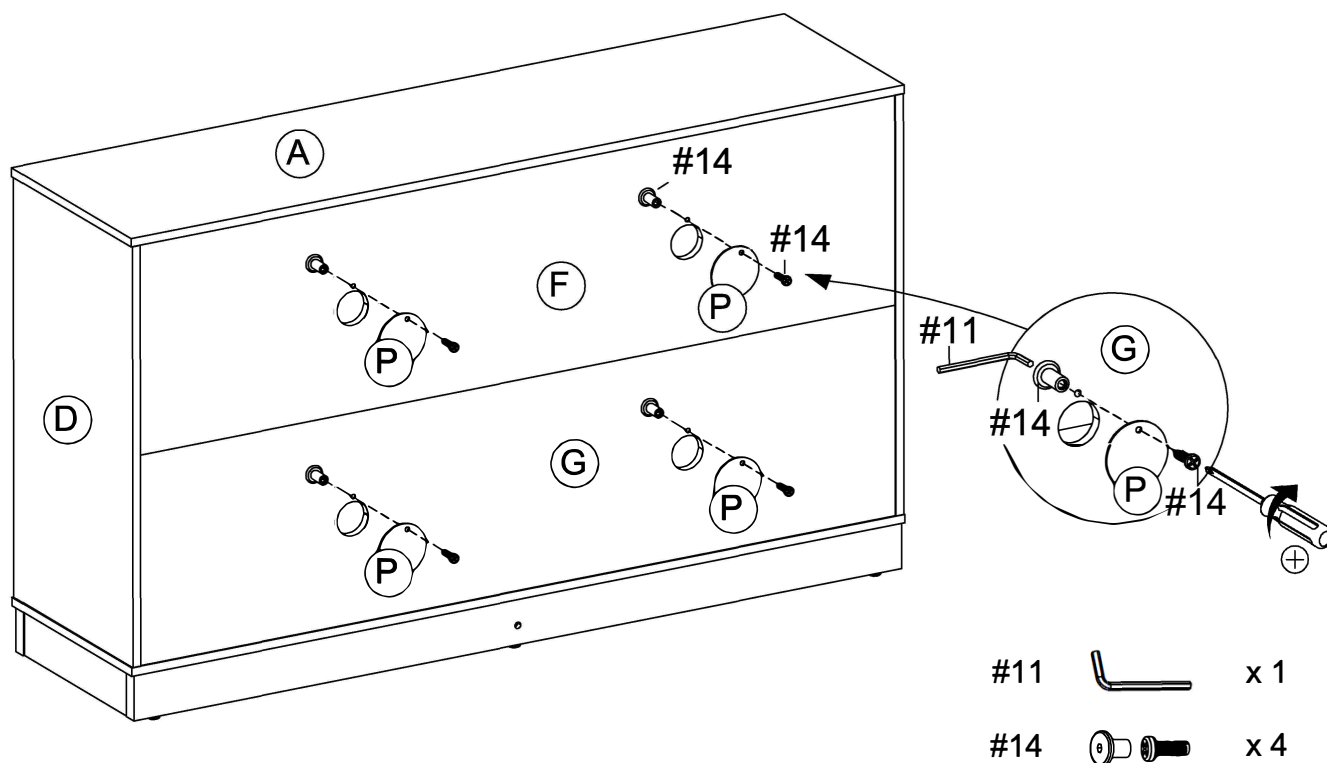


Step 14. Attach full curve hinges (part #10) to doors (parts N & O) using euro screws (part #12) and phillips head screwdriver.  
Attach knobs (part #8) to doors (parts N & O) using bolts (part #6) and phillips head screwdriver.

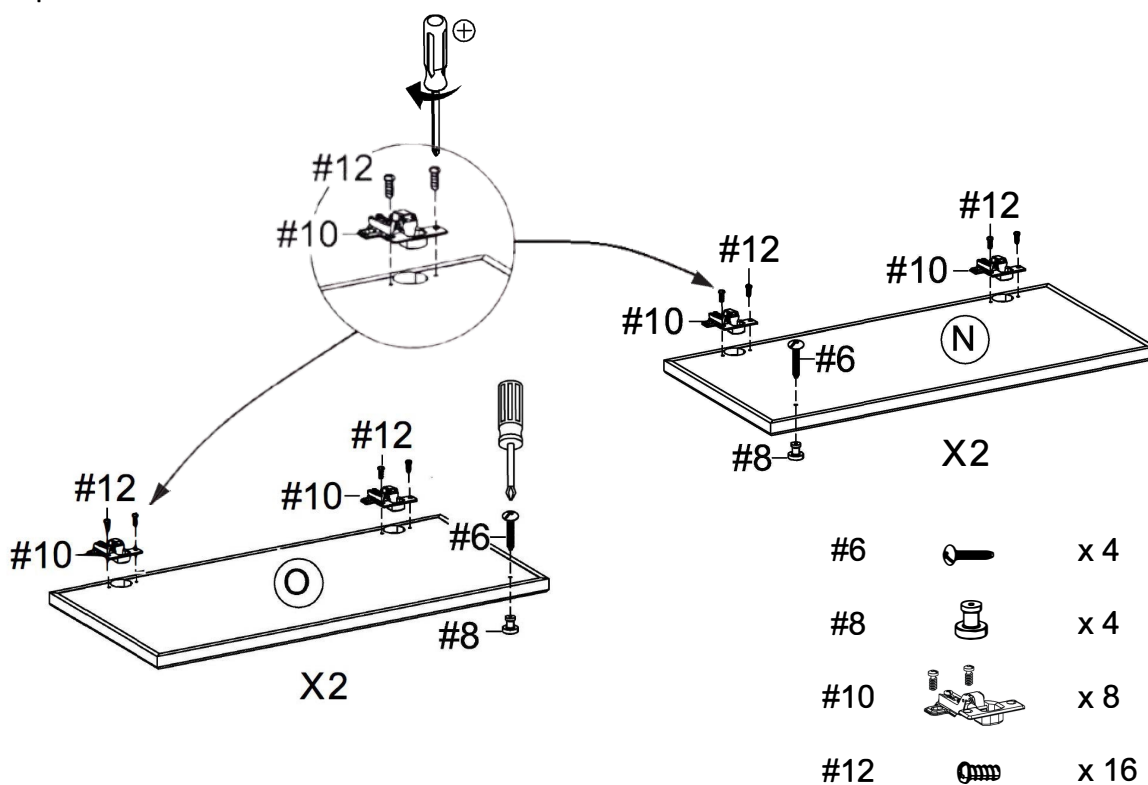

Step 15. Attach doors (parts N & O) with full curve hinges (part #10) to assembled unit (parts C, D & E) using phillips head screwdriver.

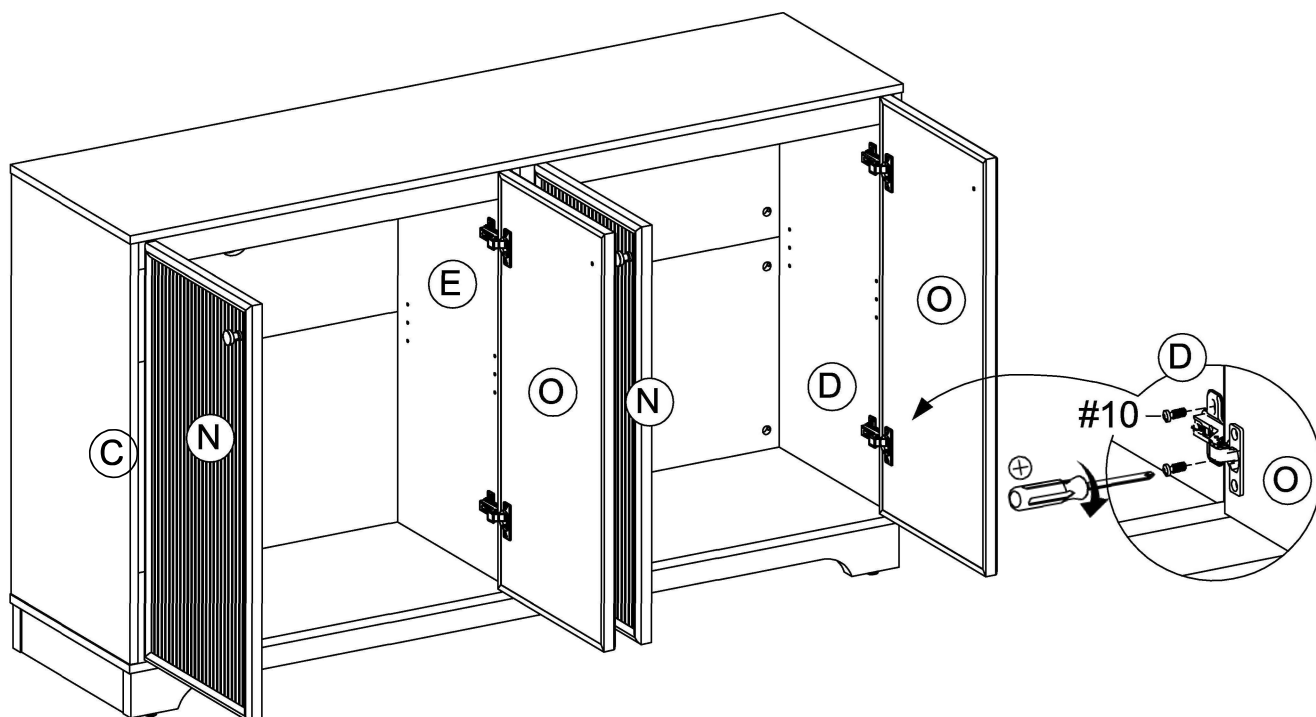


Step 16. Place shelf pins (part #9) into desired position and slide adjustable shelves (part H) into place.

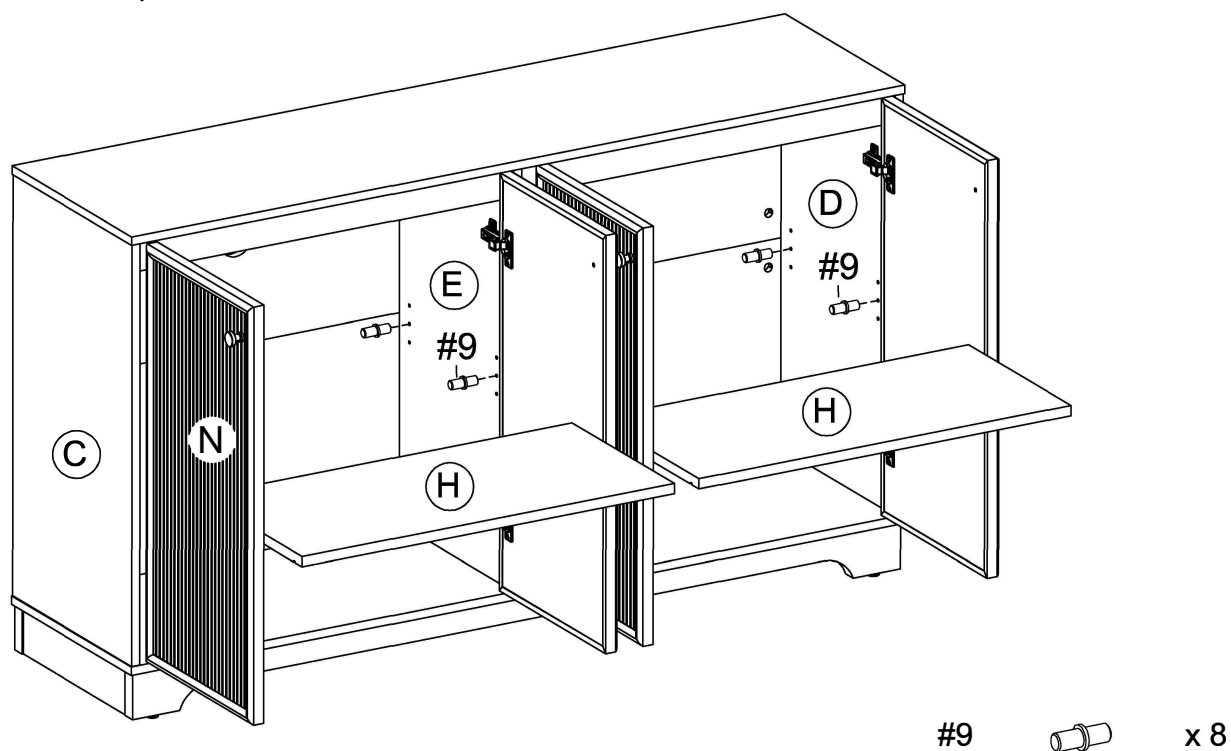

Step 17. Use cam stickers (part #3) to cover all cam locks (part #1).



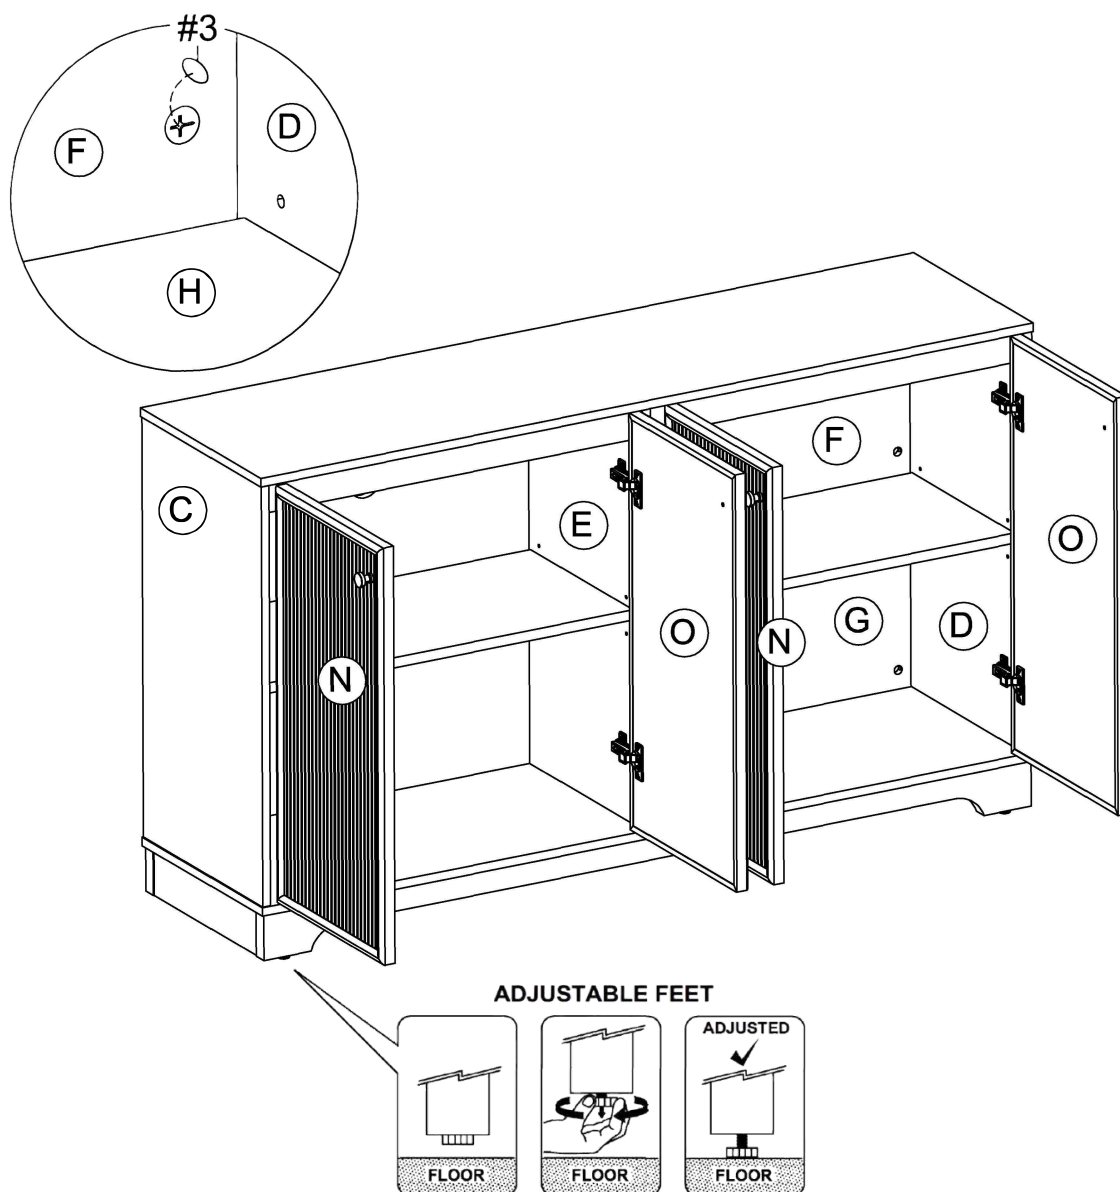



Note: It is important to adjust levelers once fully assembled and upright.  
Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust levelers as needed until it's firmly contact with the floor in new location.

Important: Safety strap kit (part #13) must be installed to prevent tipping, damage and/or injury.



#3  x 40

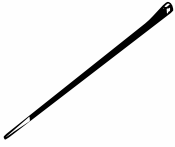



#13	A	B	C	D	#15
					
Safety Strap Kit 1 SET	Bracket 2 PCS	Short Screw 1 PC	Long Screw 1 PC	Safety Wall Strap 1 PC	Wall Anchor 1 PC

## SAFETY WALL STRAP INSTALLATION

**NOTE:** It is highly recommended to install this safety strap kit to prevent tipping, damage and/or injury.

1. Insert short screw (B) and safety wall strap (D) through bracket (A) and attach to top panel (part A) using phillips head screwdriver.
2. Drill 1 1/32" hole where you want to secure the unit. The drilled hole will be at the same height as hole in top panel (part A) where bracket (A) is attached. Tap wall anchor (part #15) into the hole.
3. Insert long screw (C) and safety wall strap (D) through bracket (A) into wall anchor (part #15) using phillips head screwdriver.


**Note:** This item is not intended for clothing storage use.

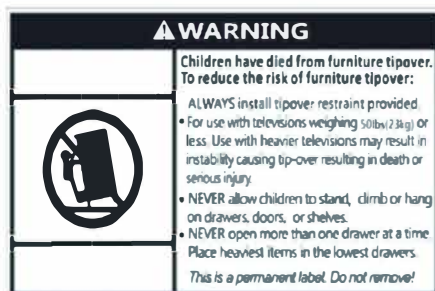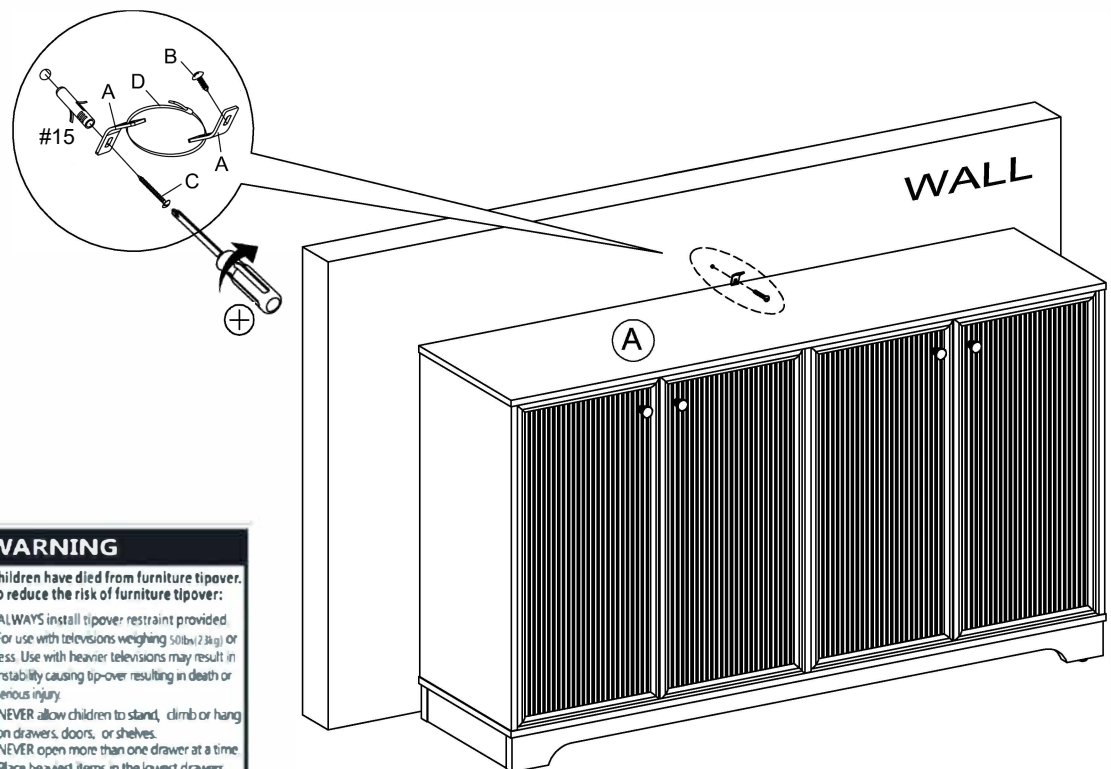

# ADJUST YOUR DOORS TO MAKE THE GAPS MORE EVEN (OPTIONAL).


## STEP 1

Open the door

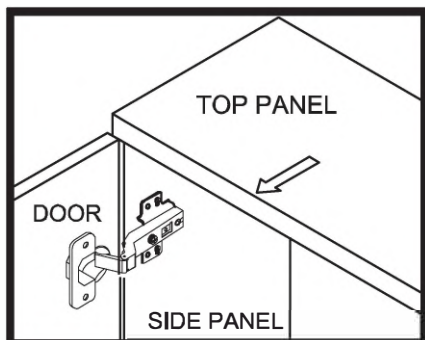


## STEP 2

Adjust the gap between door panel and side panel

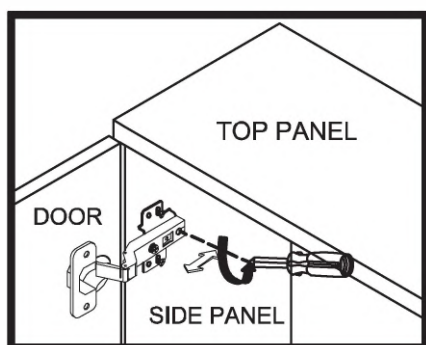


Loosen the screw indicated a little, adjust the hinge to right position (see step 2a & 2b), then tighten the screw.

### STEP 2a MOVE DOOR IN

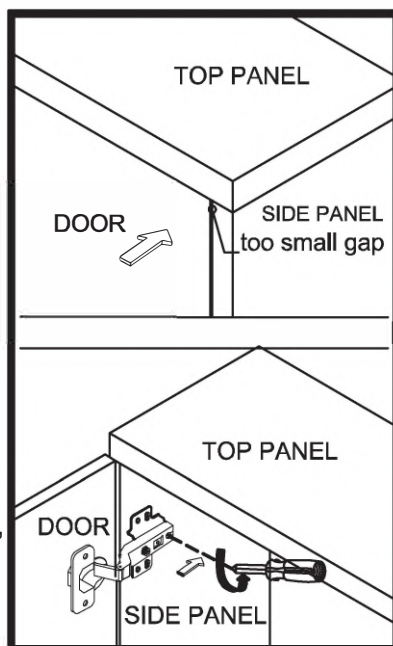

Push the hinge back a little.


### STEP 2b MOVE DOOR OUT

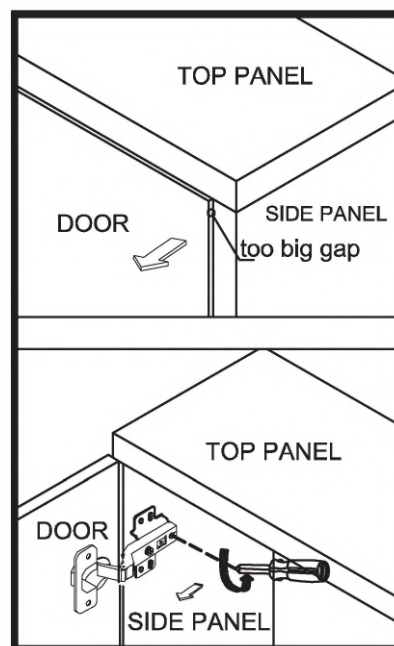

Pull the hinge forward a little.


## STEP 3

To adjust the gap between two door

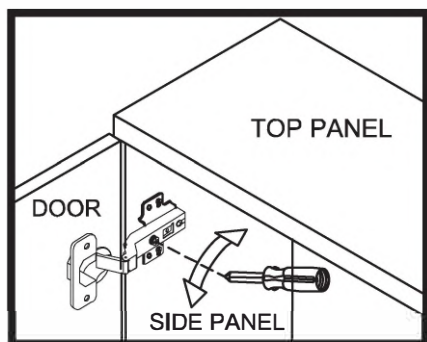


Loosen or tighten the screw indicated a little to adjust the gap between doors panels (see step 3a & step 3b)

### STEP 3a MOVE DOOR RIGHT

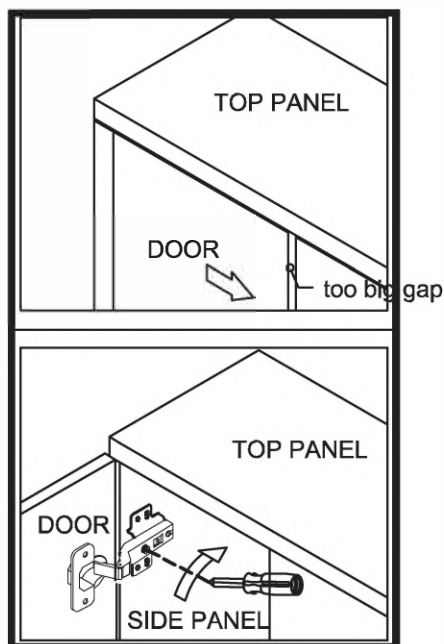

Turn the screw clockwise a little as shown to make the gap small.

### STEP 3b MOVE DOOR LEFT

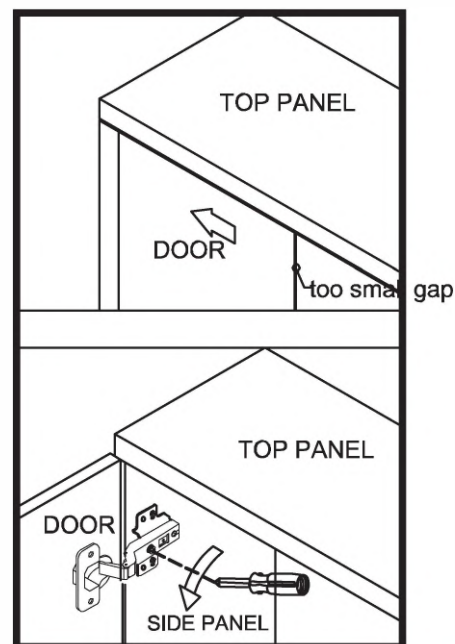

Turn the screw counterclockwise a little as shown to make the gap big.

**PO#75420**

**CF4235**

**MADE IN INDONESIA**