



## Kitchen Island CF3047

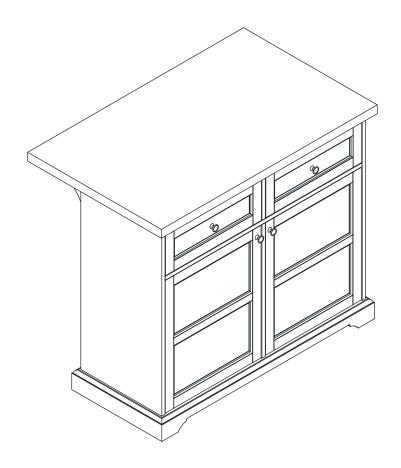

## PART LIST

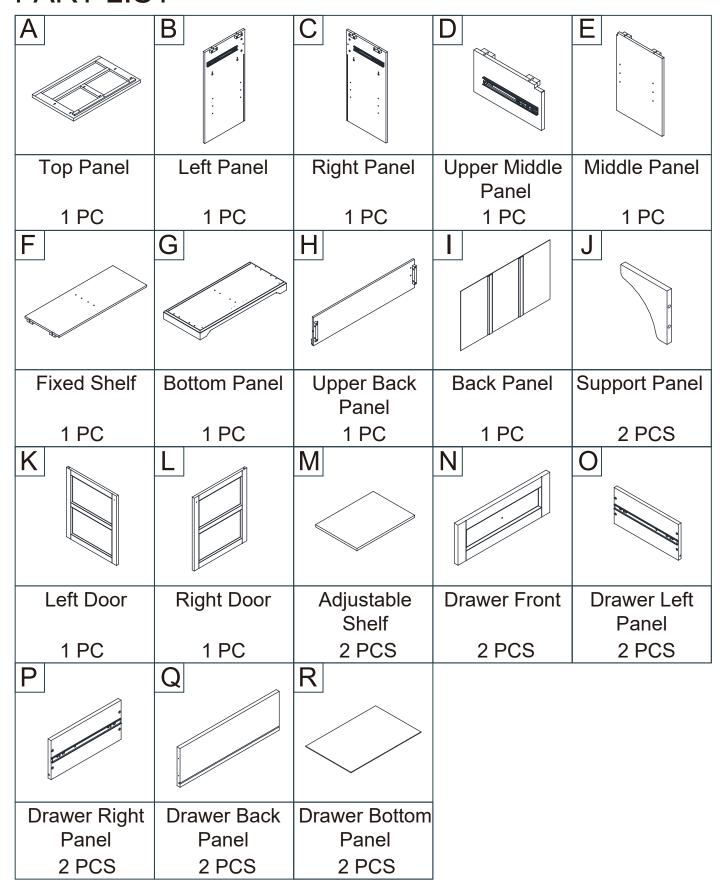

## HARDWARE LIST

#1	#2	#3	#4	#5
		(X) miniminino		
Ø8mm*1-1/8"	Ø1/4"*1-1/4"	3*25mm		
Wood Dowel	Bolt	Flat Head Screw	Shelf Holder	Magnet
22 PCS (Extra 1)	28 PCS (Extra 1)	16 PCS (Extra 1)	8 PCS (Extra 1)	4 PCS
#6	#7	#8	#9	
<i>√11111</i> €				
3*15mm		Ø5/32"*1"	4mm	
Round Head Screw	Knob	Round Head Bolt	Allen Wrench	
8 PCS	4 PCS	4 PCS	1 PC	

## ADDITIONAL TOOLS (Not Provided)

Note: It is not recommended to use power tools during assembly.




Phillips Head Screwdriver


Note: Wood dowels are intended for alignment. Additional clearance between wood dowel and pre-drilled hole is intentional for ease of assembly.

Step 1. Attach knobs (part #7) to left door (part K), right door (part L) and drawer fronts (part N) using round head bolts (part #8) and phillips head screwdriver.


Attach magnets (part #5) to fixed shelf (part F) and bottom panel (part G) using round head screws (part #6) and phillips head screwdriver.

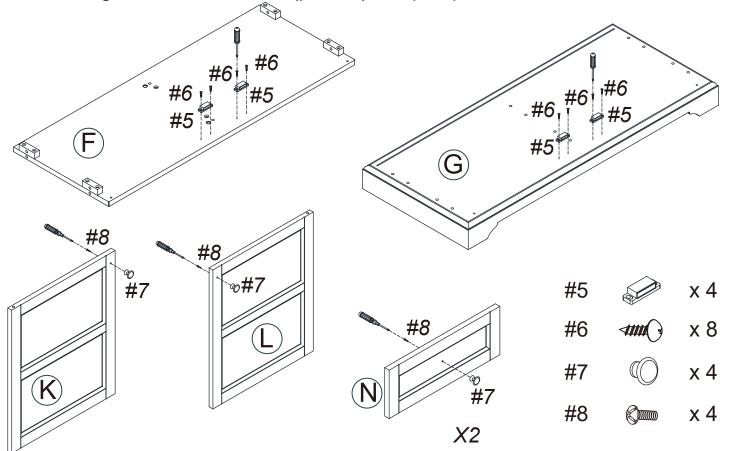


Step 2. Attach upper middle panel (part D) to fixed shelf (part F) using wood dowels (part #1), bolts (part #2) and allen wrench (part #9).

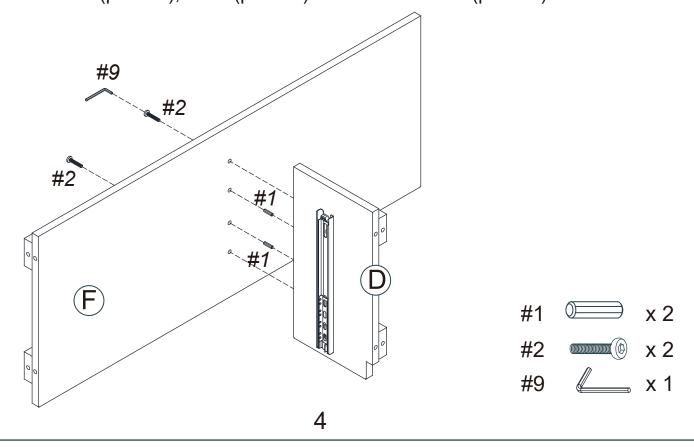


Step 3. Attach right panel (part C) to fixed shelf (part F) using wood dowels (part #1), bolts (part #2) and allen wrench (part #9).

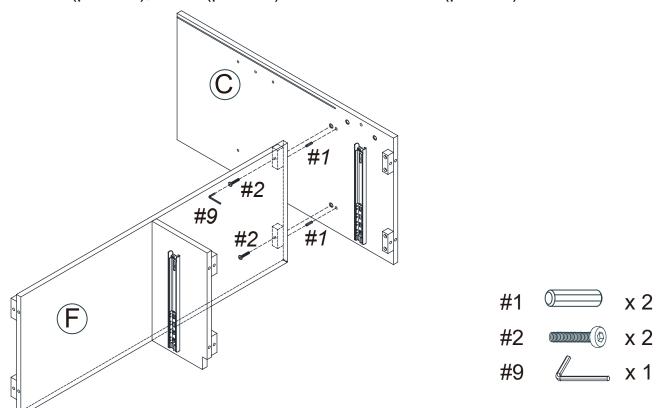


Step 4. Attach upper back panel (part H) to right panel (part C) using wood dowel (part #1), bolts (part #2) and allen wrench (part #9).

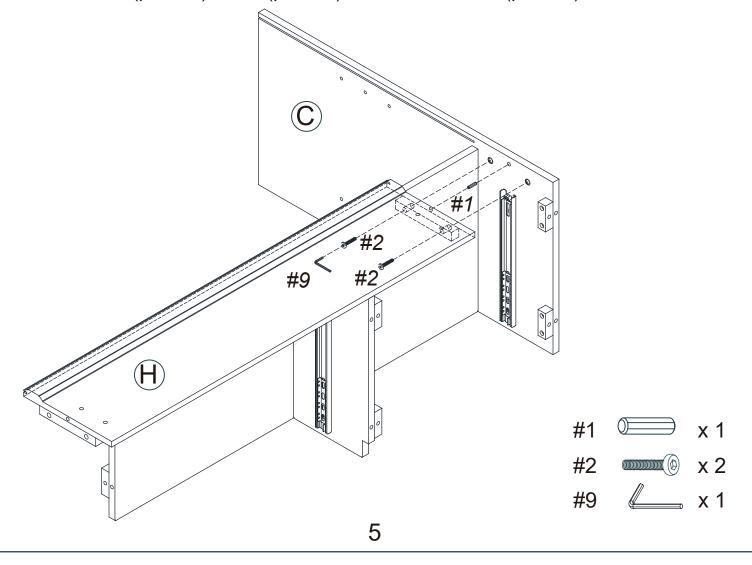


Step 5. Attach left panel (part B) to assembled unit (parts F & H) using wood dowels (part #1), bolts (part #2) and allen wrench (part #9).

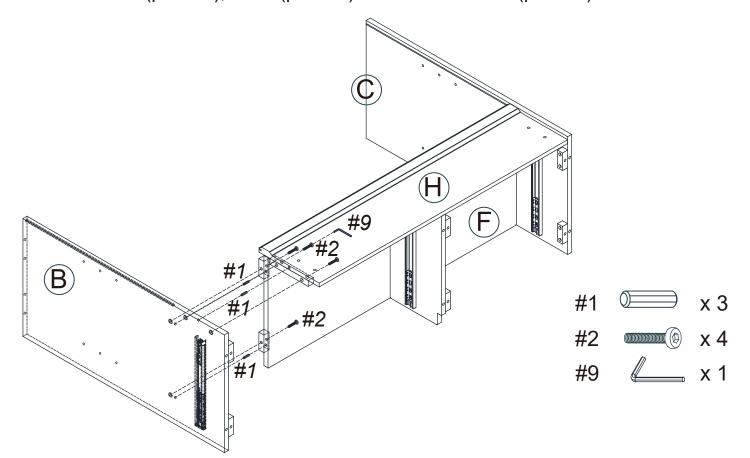


Step 6. Attach middle panel (part E) to fixed shelf (part F) using wood dowels (part #1), bolts (part #2) and allen wrench (part #9).

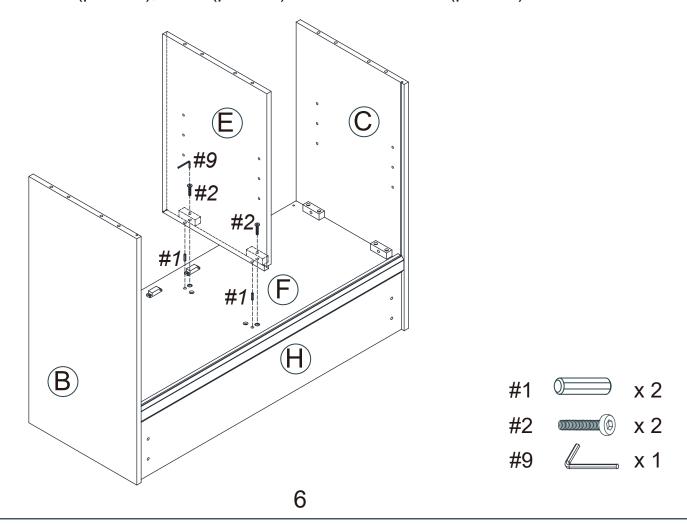

Step 7. Slide back panel (part I) into the grooves of assembled unit (parts B, C & H).

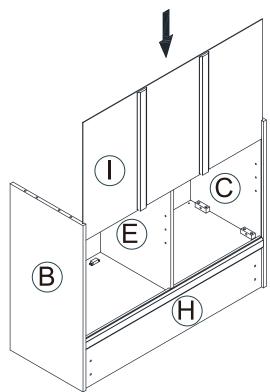


Step 8. Attach bottom panel (part G) to assembled unit (parts B, C, E & I) using wood dowels (part #1), bolts (part #2) and allen wrench (part #9).

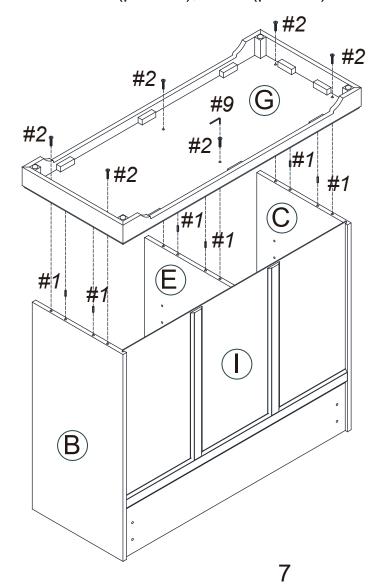


Step 9. Carefully turn unit upright.


Attach support panels (part J) to upper back panel (part H) using bolts (part #2) and allen wrench (part #9).

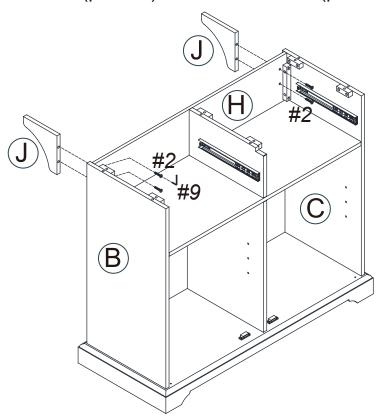

Step 10. Attach top panel (part A) to assembled unit (part B, C, D & H) using wood dowels (part #1), bolts (part #2) and allen wrench (part #9).

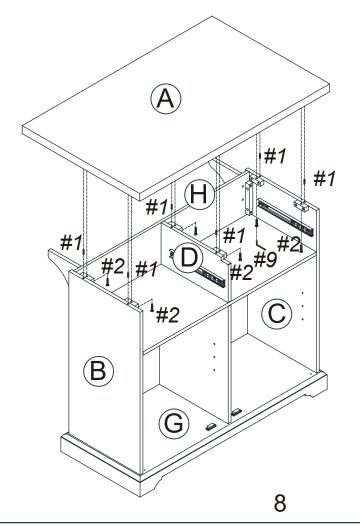


Step 11. Attach drawer left panel (part O) and drawer right panel (part P) to drawer back panel (part Q) using flat head screws (part #3) and phillips head screwdriver. Slide drawer bottom panel (part R) into the assembled unit (parts O, P & Q). Attach drawer front (part N) to assembled unit (parts O, P & R) using flat head screws (part #3) and phillips head screwdriver.

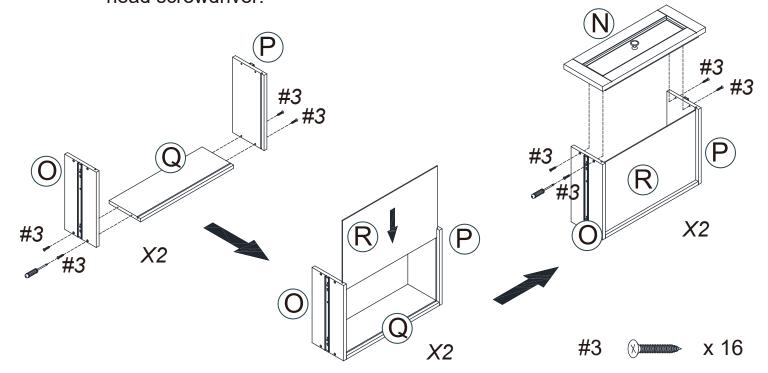


Step 12. Slide assembled drawers into place.

Note: To release trigger disconnect levers push one side up and the other down.

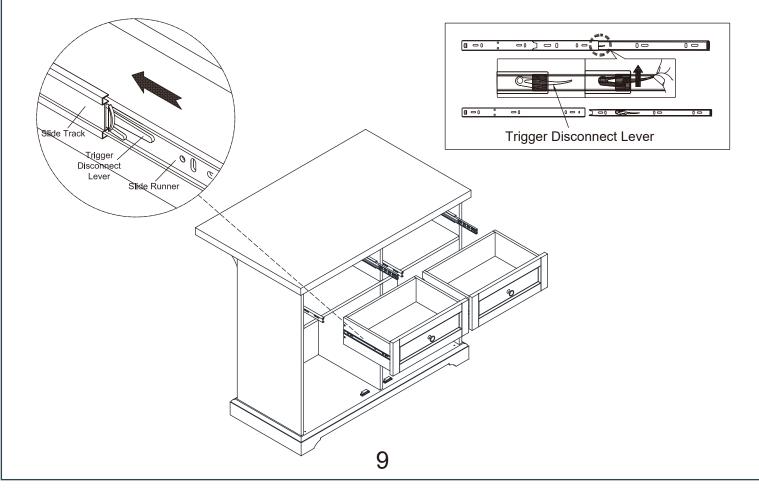

Step 13. Place shelf holders (part #4) into desired position and slide adjustable

shelves (part M) into place.

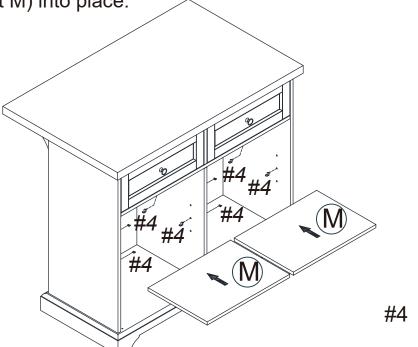


x 8

Step 14. Attach left door (part K) and right door (part L) by placing pin hinges (pre-installed in door) in the pre-drilled hole of bottom panel (part G). Then depress the top spring-loaded pin hinges so it can be placed in the pre-drilled hole of fixed shelf (part F).

Note: Be sure top and bottom pin hinges are fully extended to secure

doors in place.

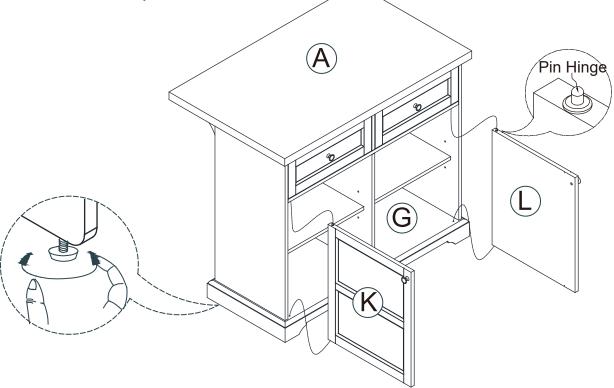

Note: It is important to adjust levelers once fully assembled and upright. Extend adjustable leveler until it's firmly in contact with the floor. If relocating, adjust leveler as needed until it's firmly in contact with the floor in new location.