


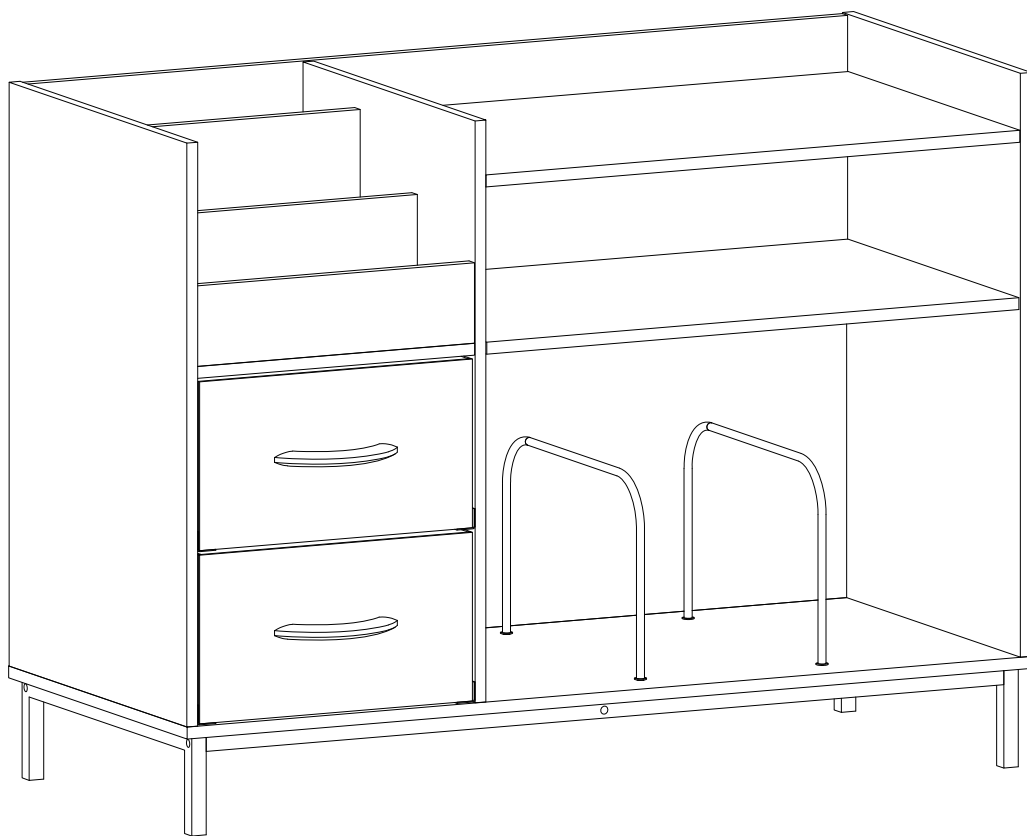
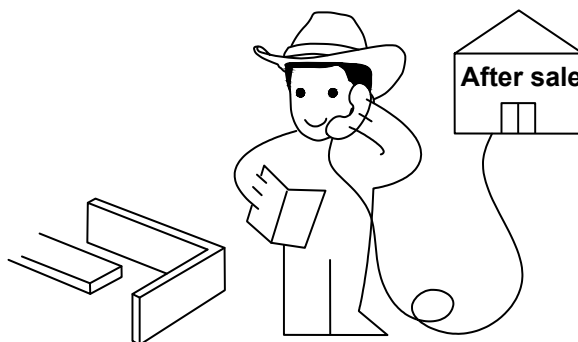
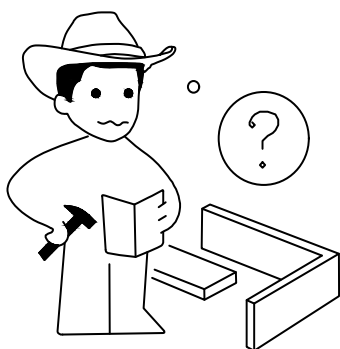
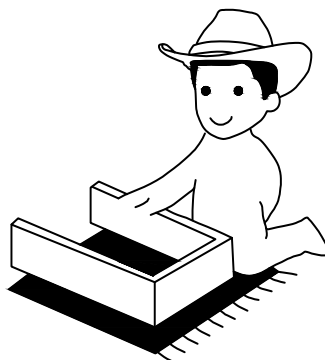
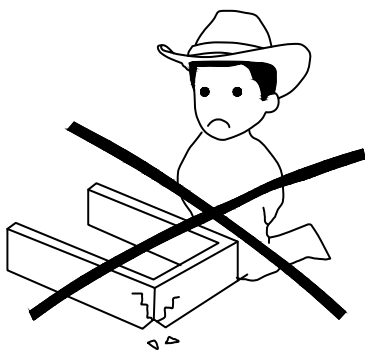
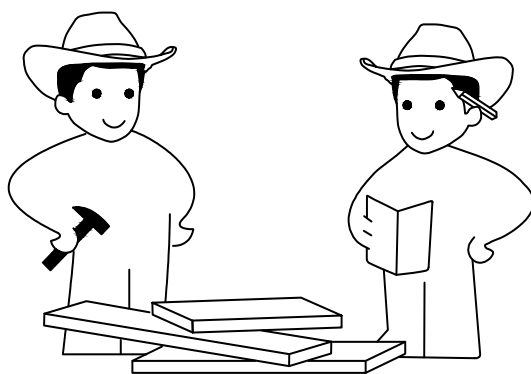
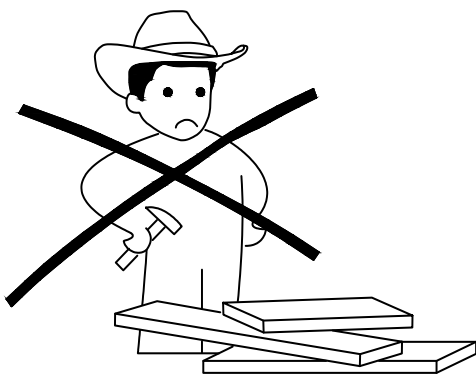
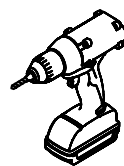




B01SC-015NSM

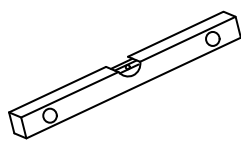


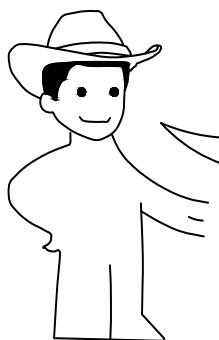


1x1*pc

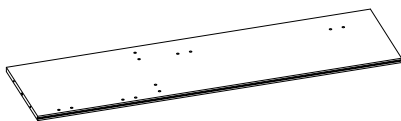


2x1*pc

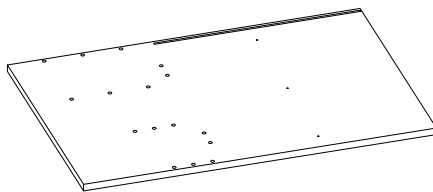


3x1*pc

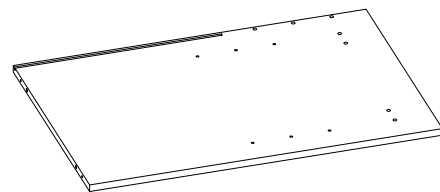


4x1*pc

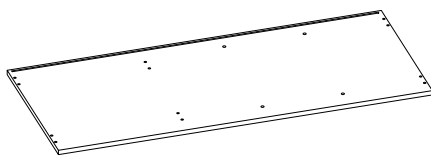


5x1*pc

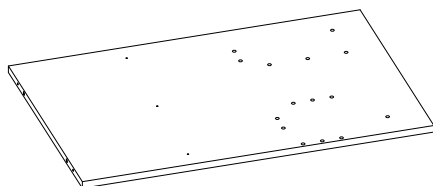


6x1*pc

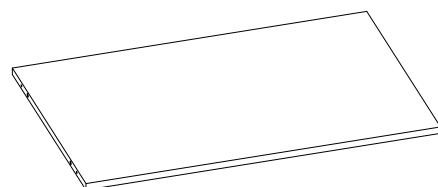


7x1*pc

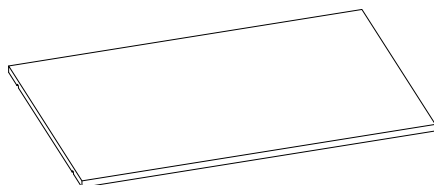


8x1*pc

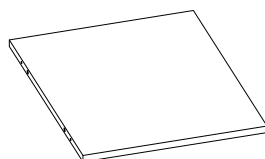


9x1*pc




10x1*pc

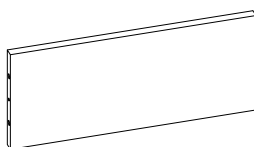


11x1*pc

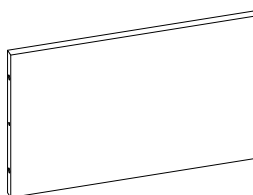

12x1*pc

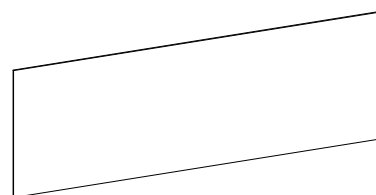


13x2*pcs

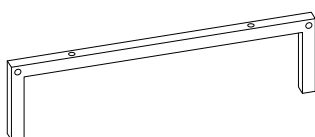



14x2*pcs





15x1*pc




16x2*pcs

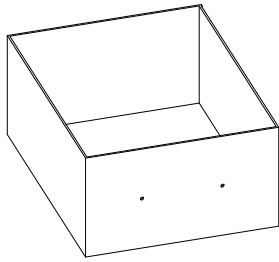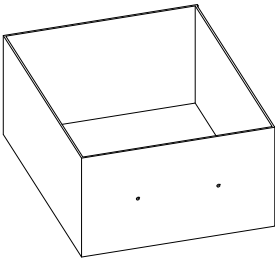


17x2*pcs

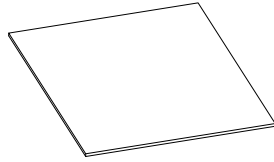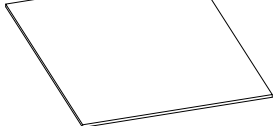


Ax30*pcs

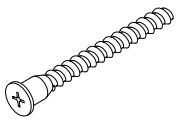

Bx34*pcs





Cx16*pcs

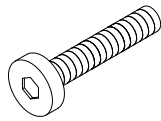


Dx2*pcs





Ex4*pcs





Fx6*pcs



Gx4*pcs



Hx8*pcs




Kx4*pcs




Lx30*pcs





Mx1*pc




Px1*pc



Nx1*pc




Ox1*pc



lx2*pcs









Qx4*pcs



Rx4*pcs





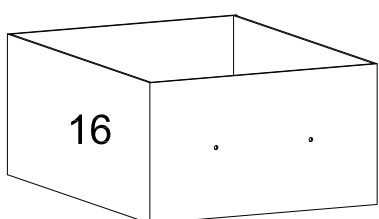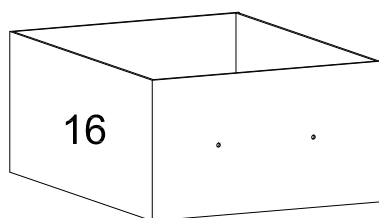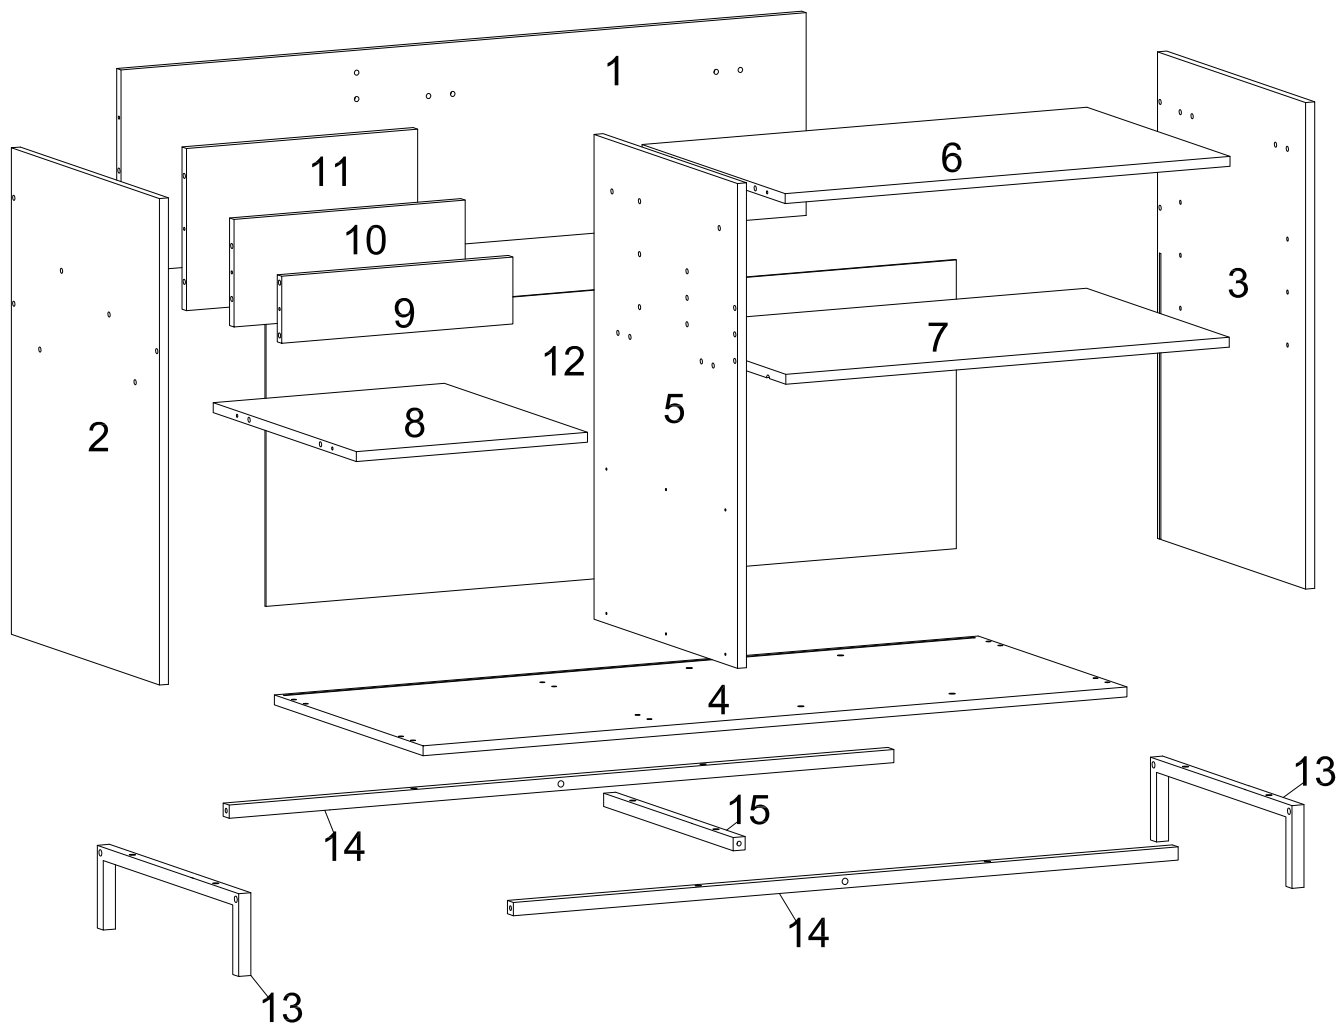

×2

1

Place accessory M on the side panel and secure them with three screws.

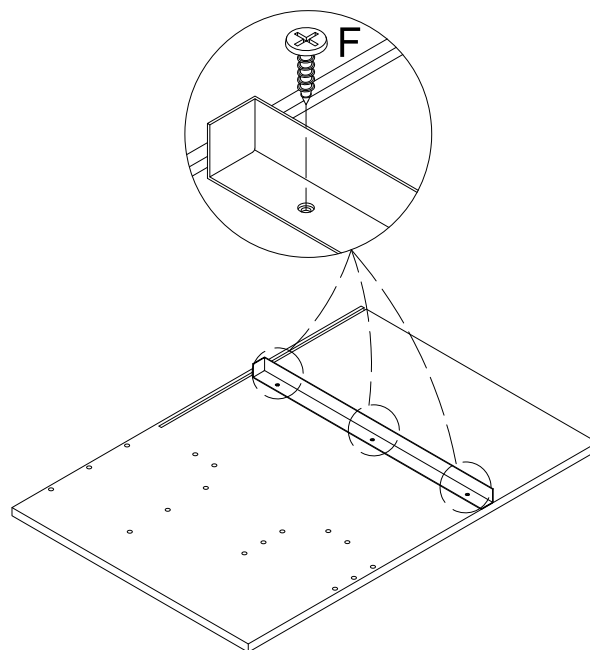
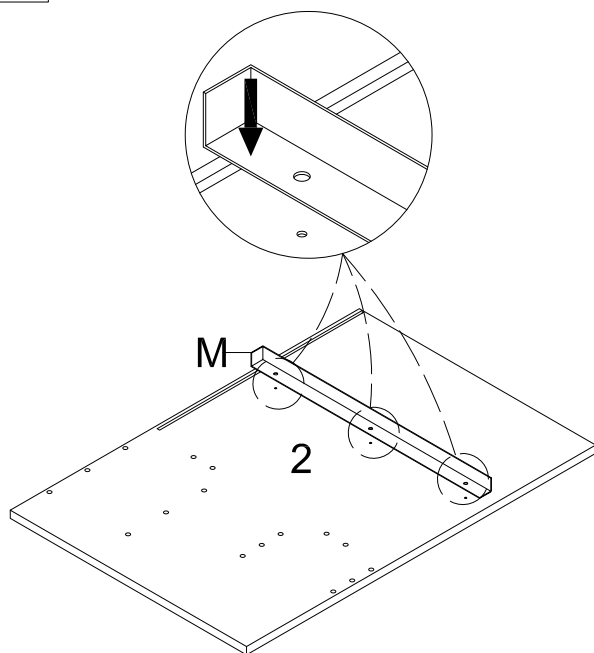


Fx3



2

Place accessory P on the side panel and secure them with three screws.

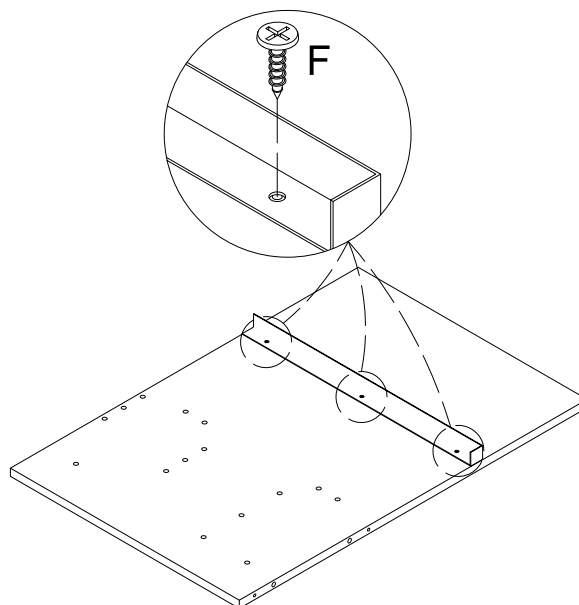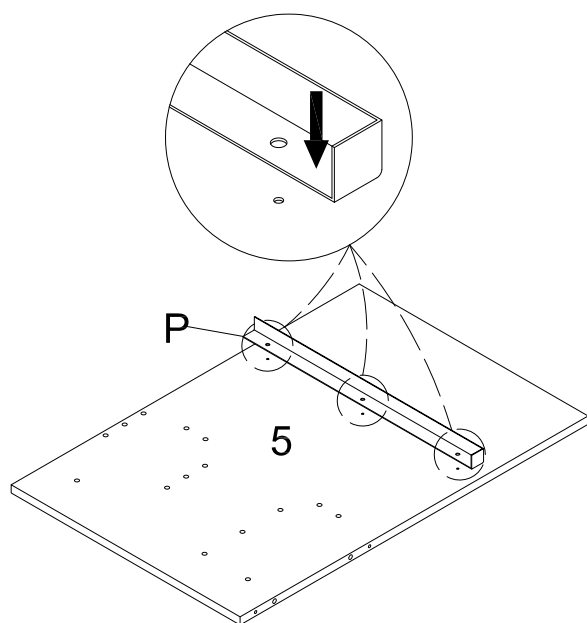


Fx3




3


Put these two panels together and secure them with two wooden tenons and two screws.

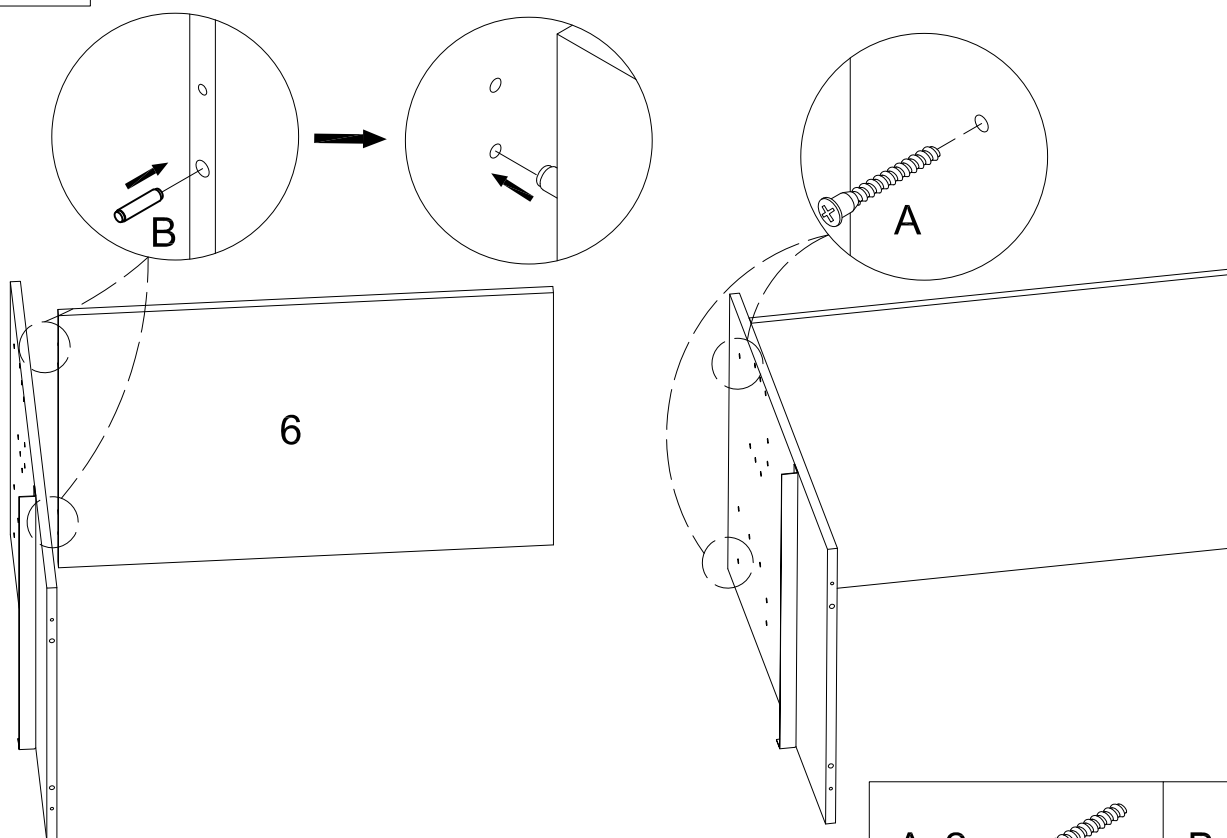

Ax2




Bx2




4


Put these panels together and secure them with two wooden tenons and two screws.

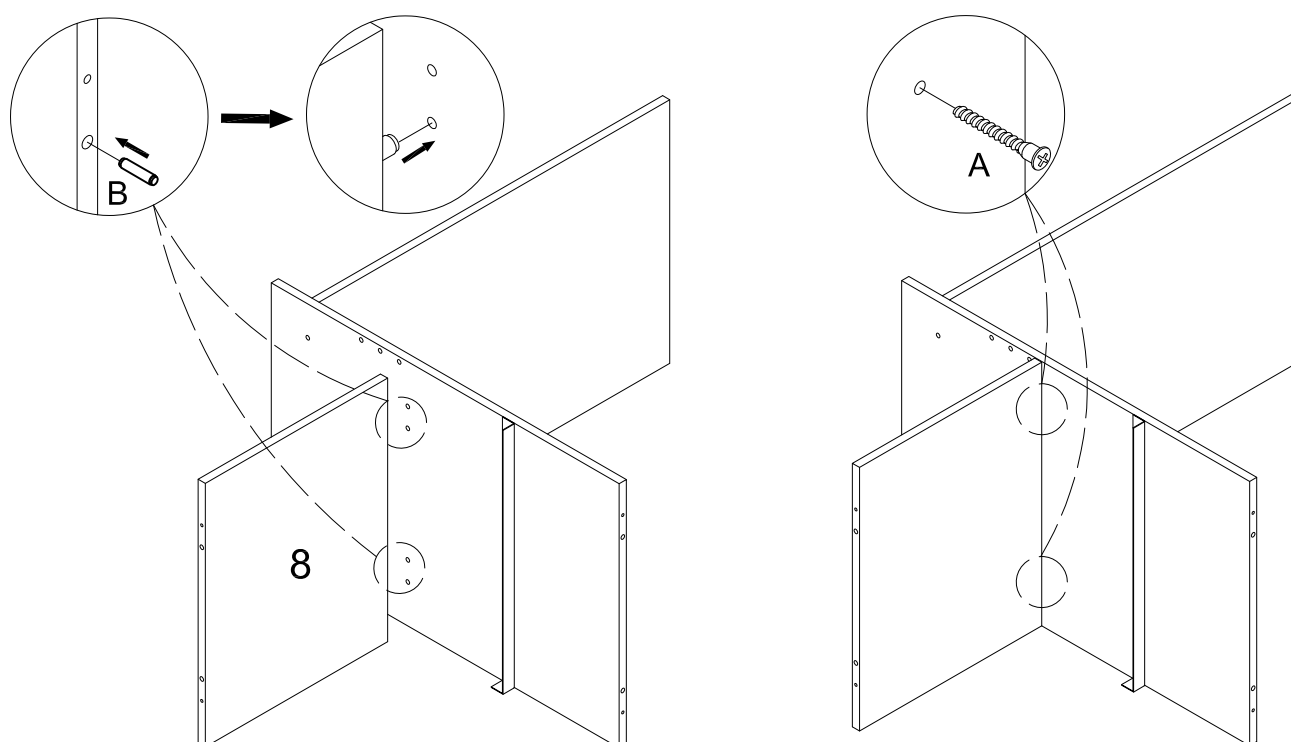

Ax2





Bx2




5


Put these panels together and secure them with six wooden tenons and six screws.

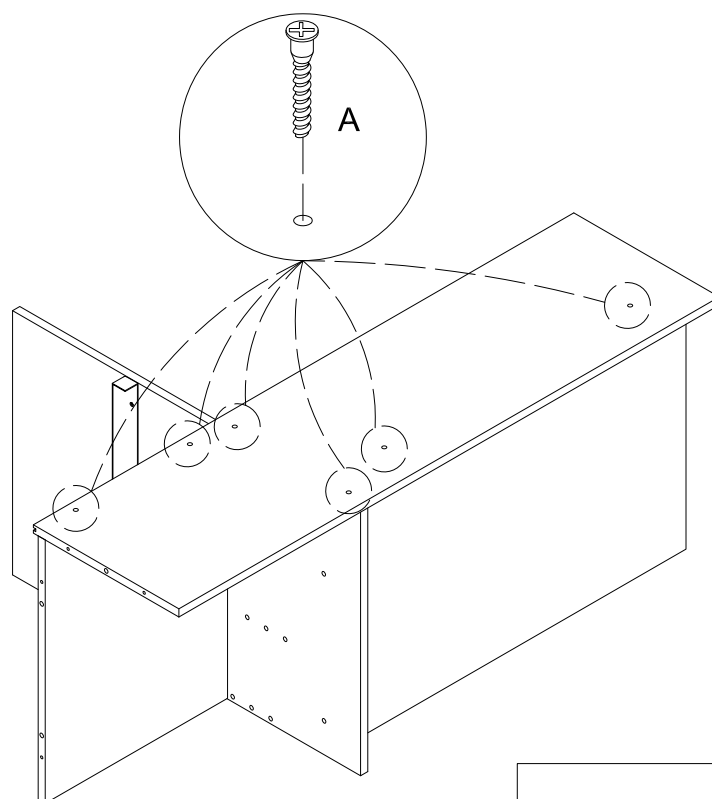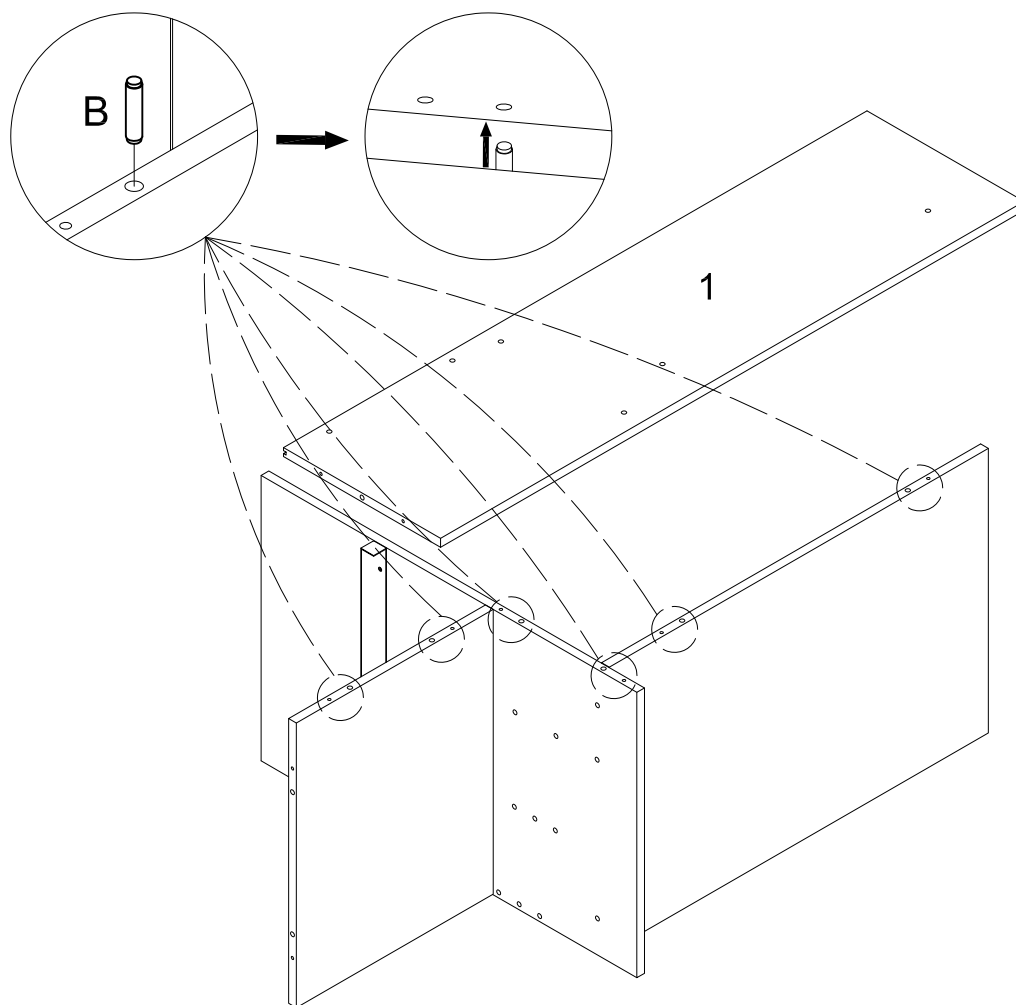

Ax6




Bx6




6

Put these panels together and secure them with three wooden tenons and four screws.

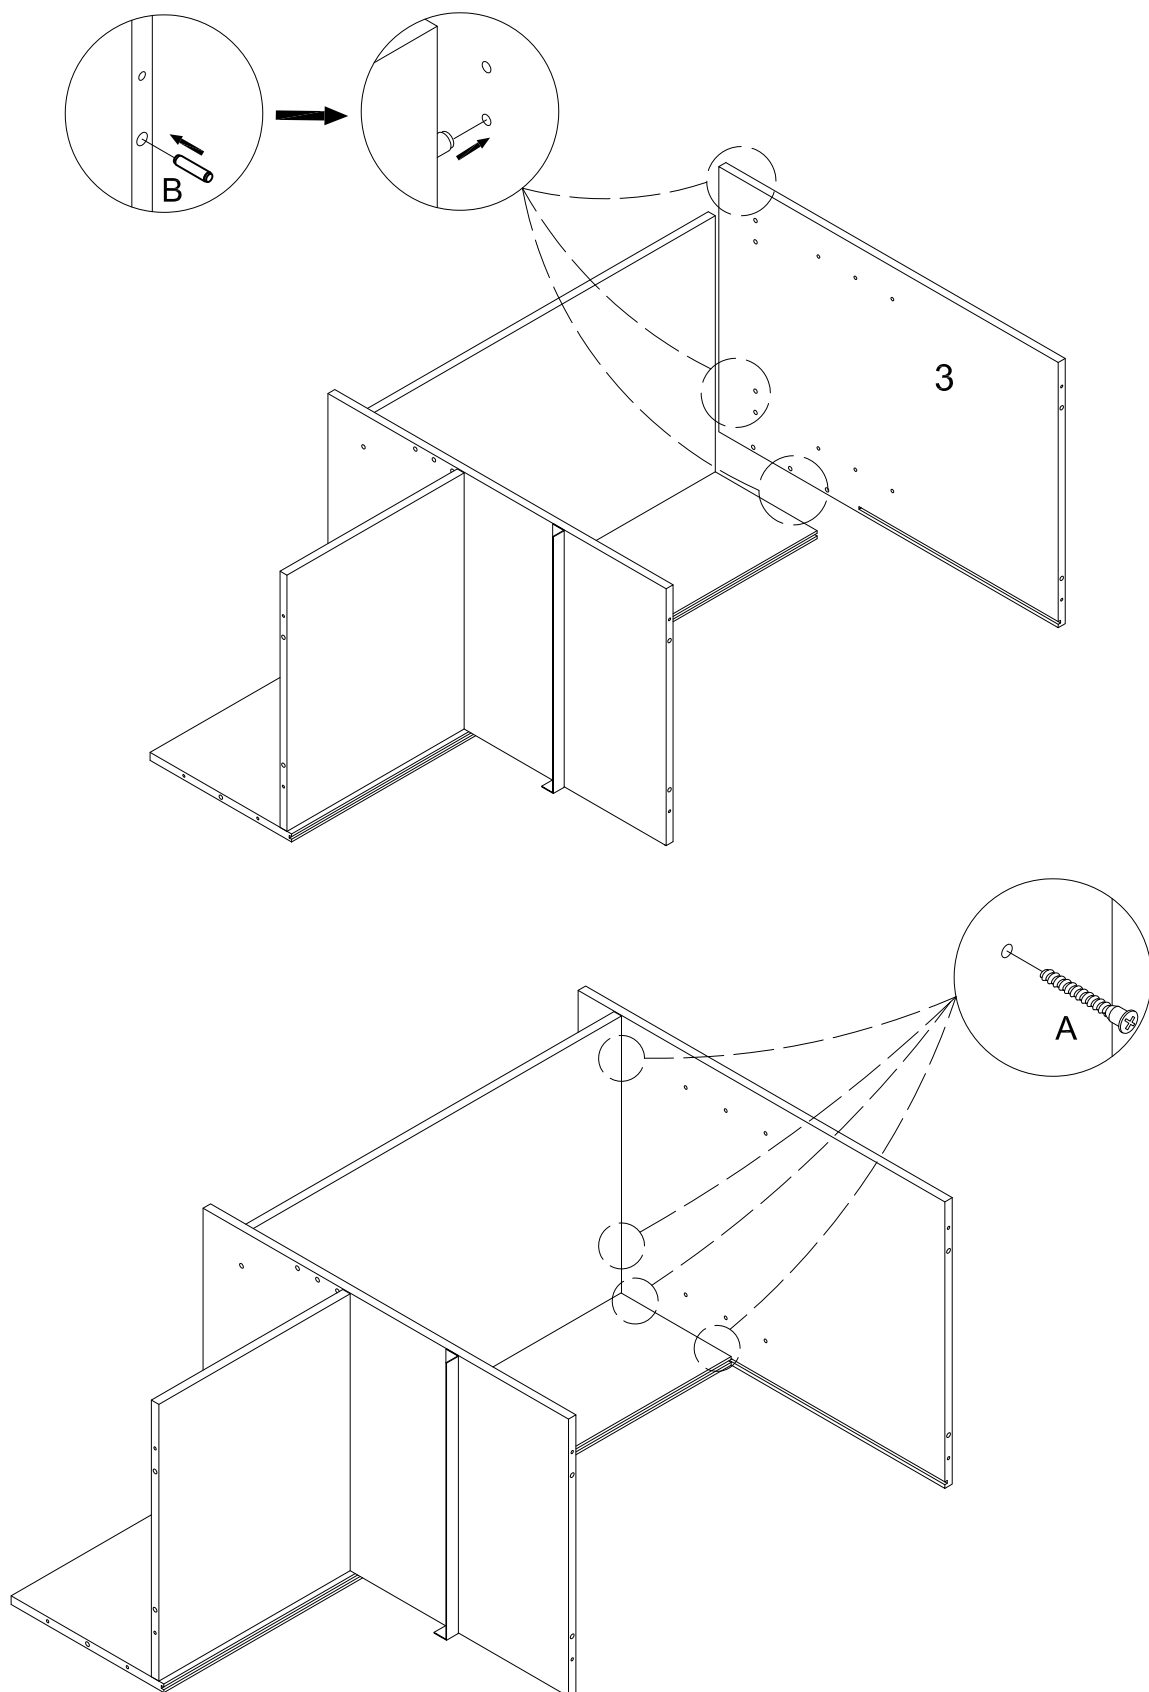

Ax4




Bx3




7


Put these panels together and secure them with six wooden tenons and three screws.

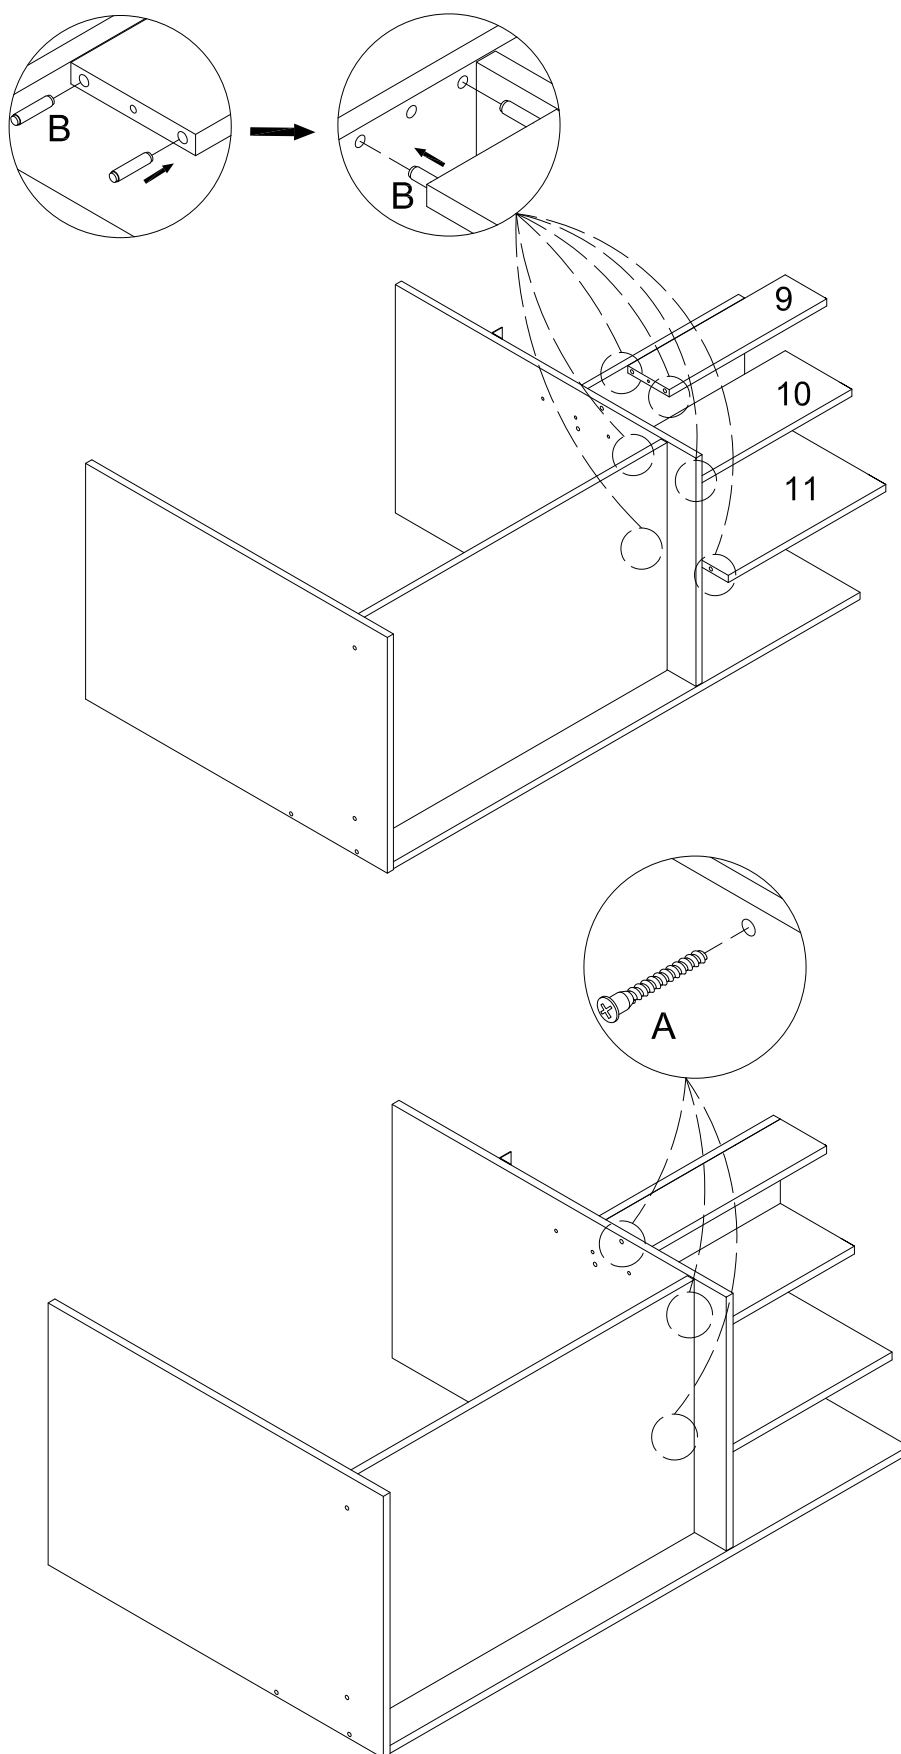

Ax3





Bx6




8


Put these panels together and secure them with nine wooden tenons and seven screws.

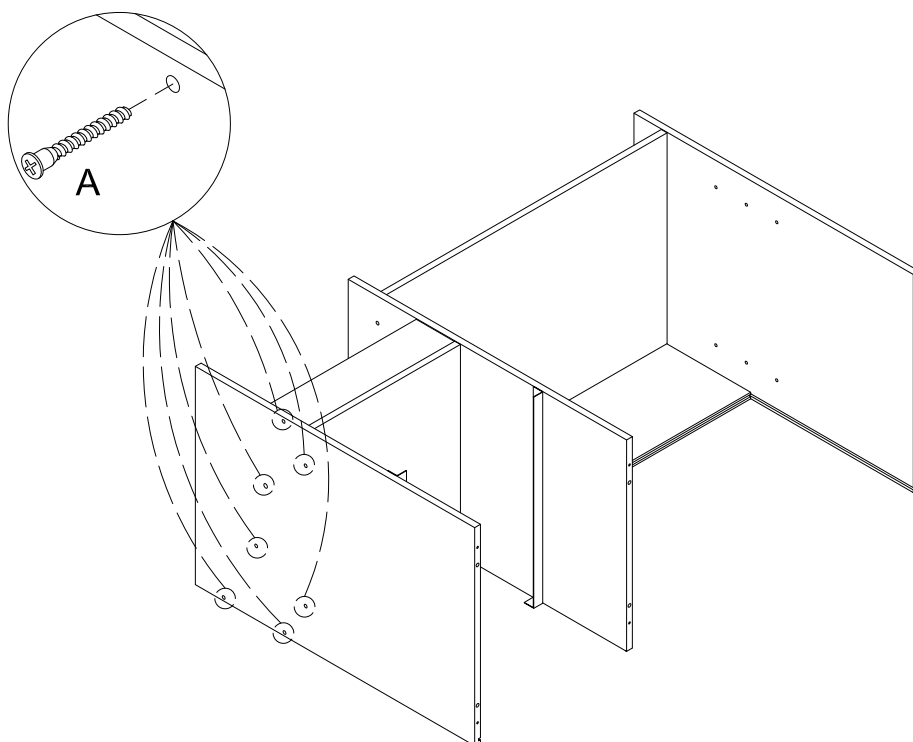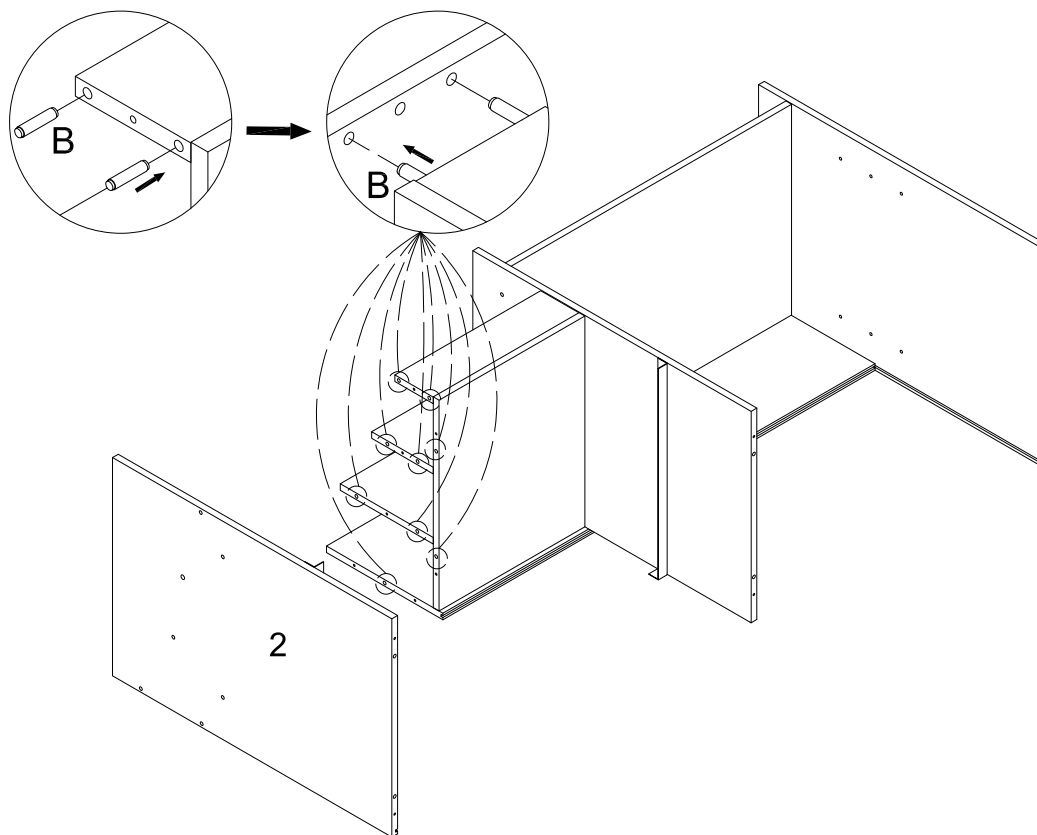

Ax7





Bx9




9

Insert the thin plate into the slot.

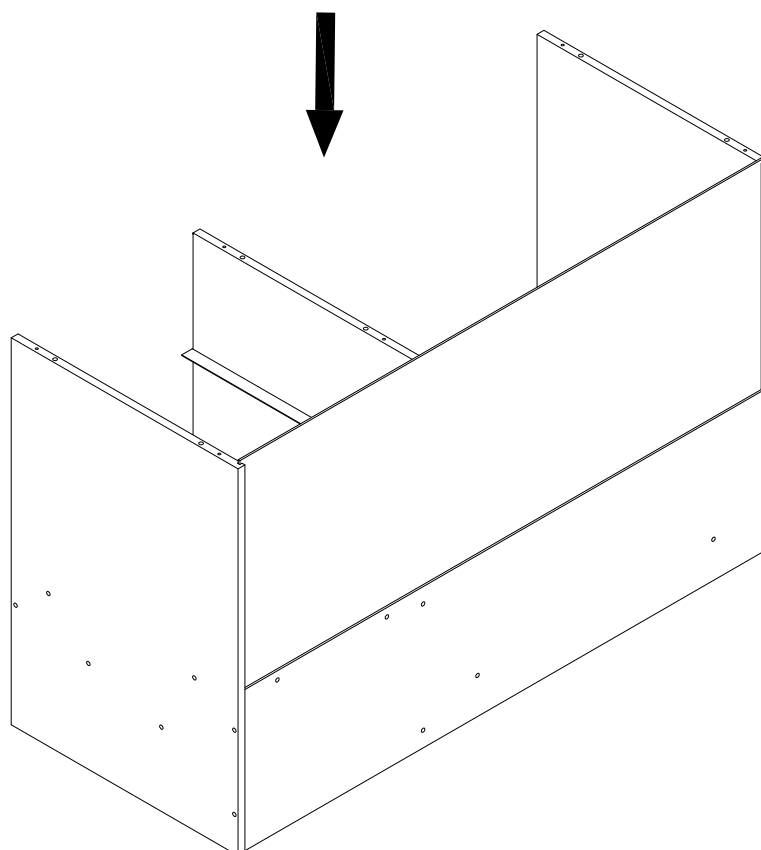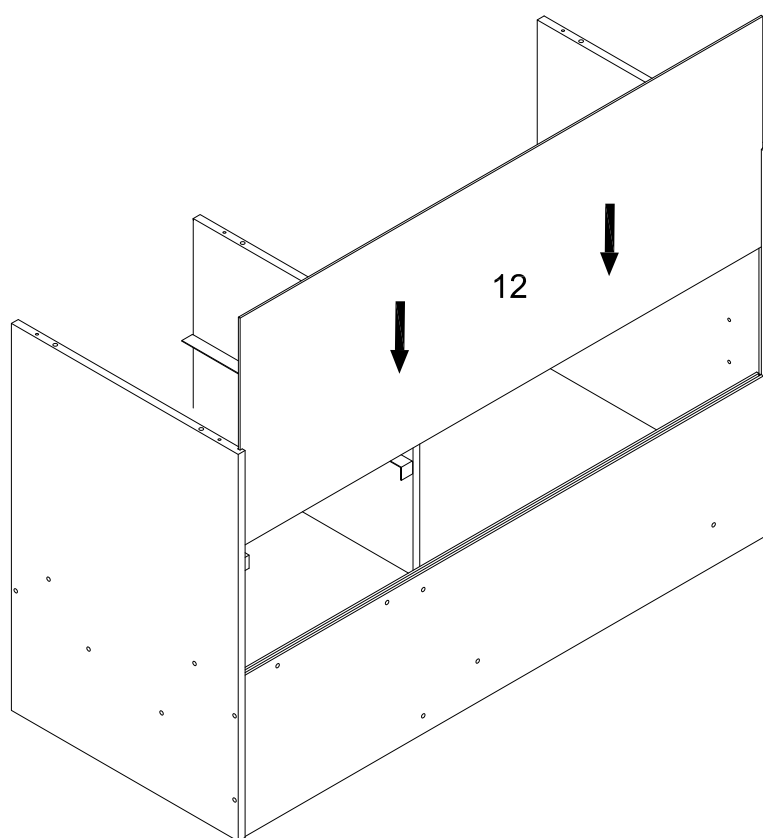


10


Put these panels together and secure them with six wooden tenons and six screws.

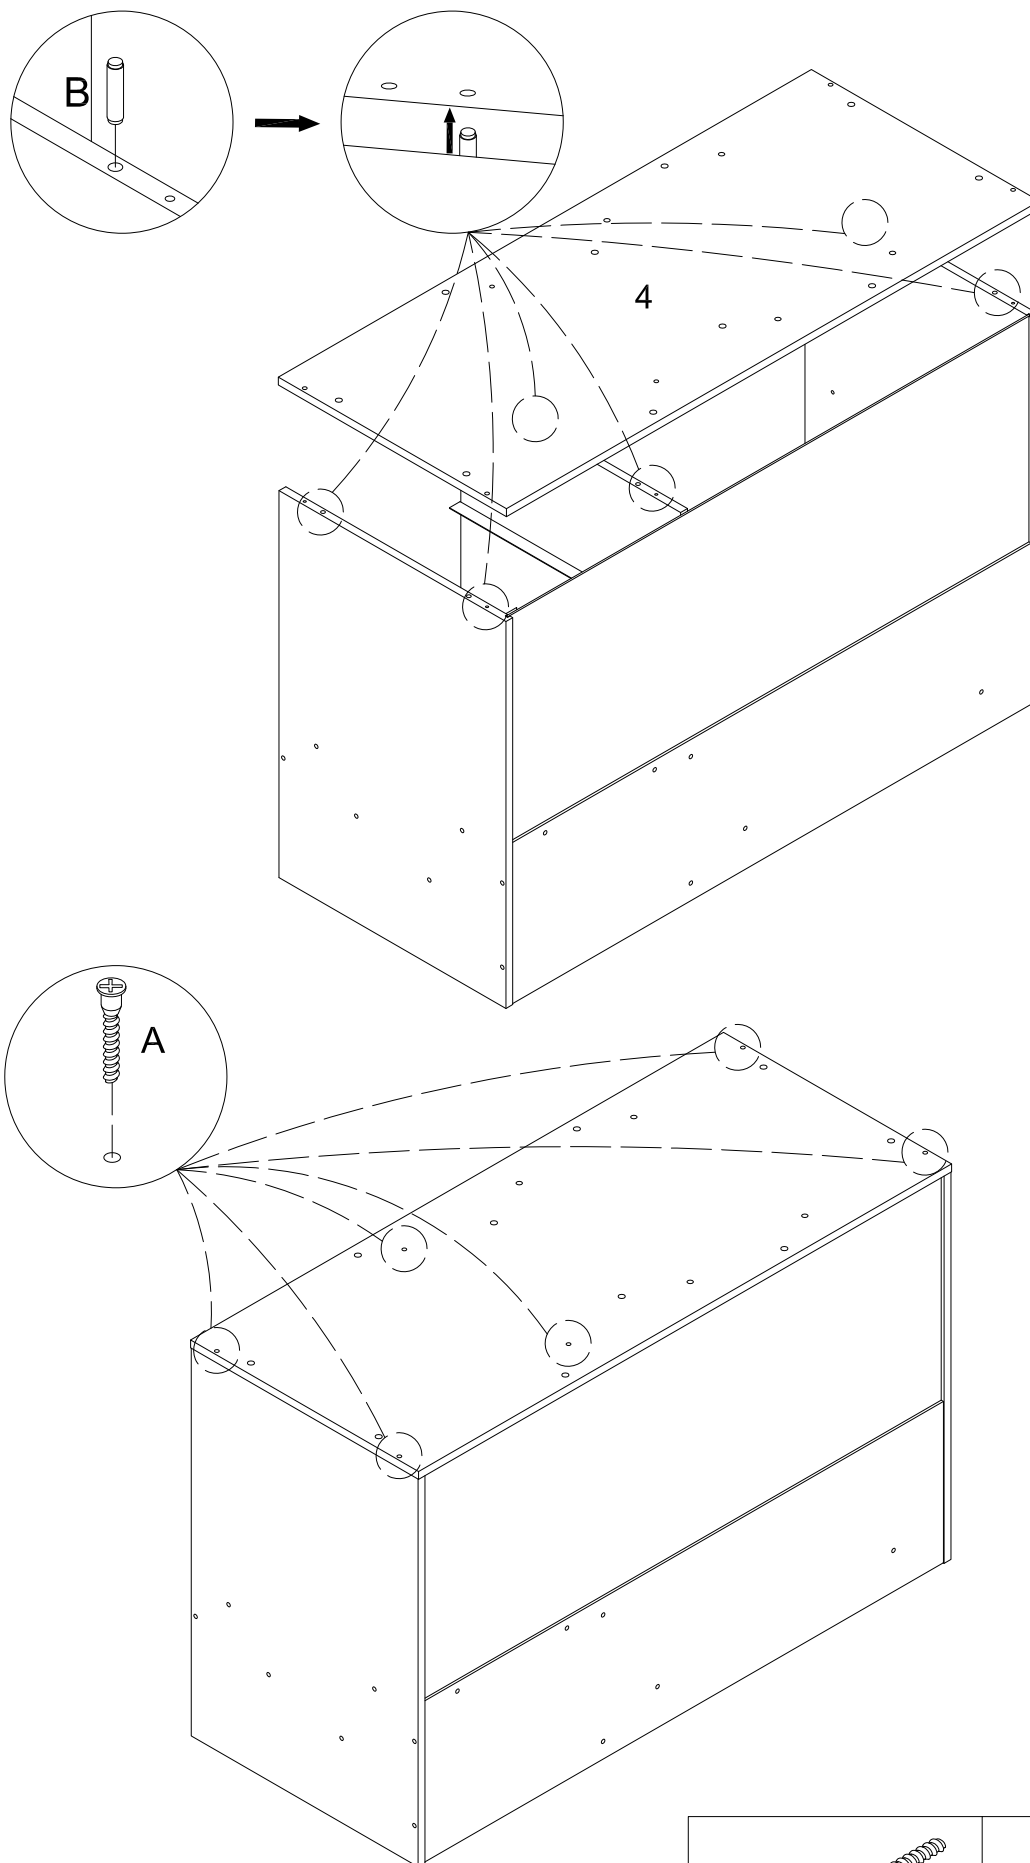

Ax6




Bx6



11

Put these iron pipes together and connect them with two screws.

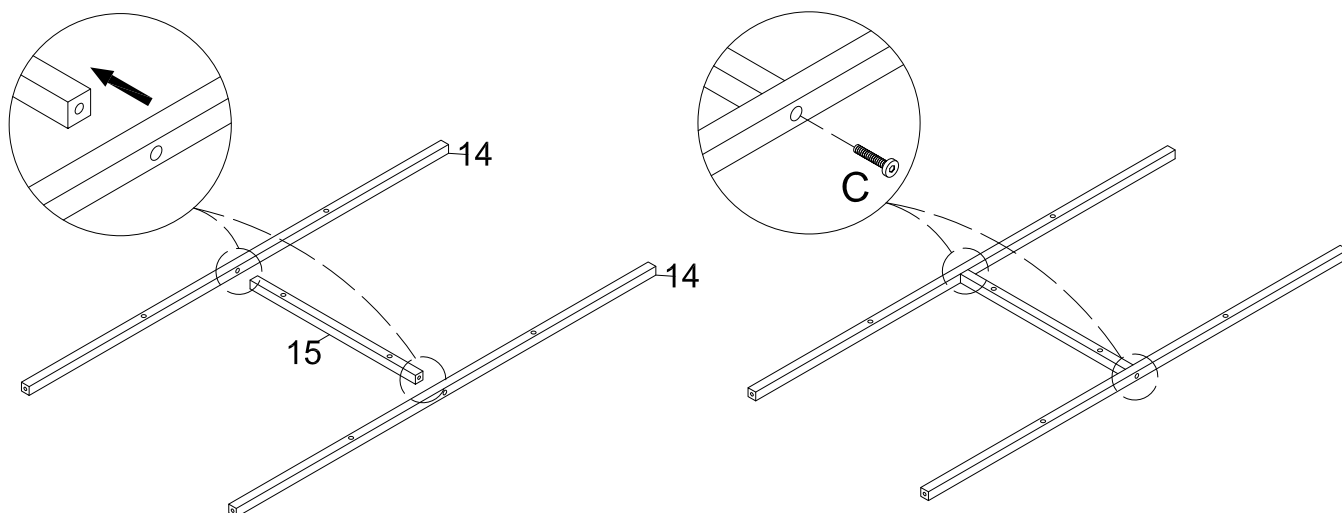


Cx2




12

Put these iron pipes together and connect them with four screws.


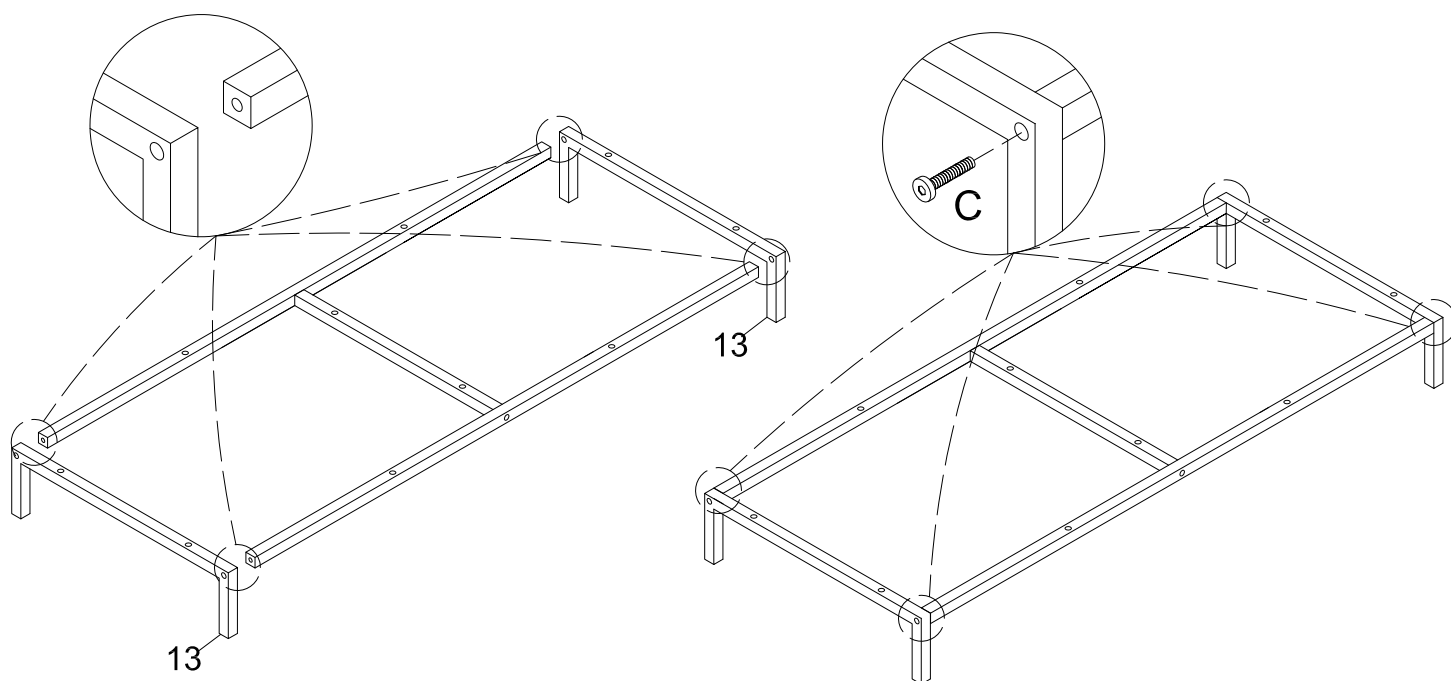


Cx4



13

Put these iron frames and wooden boards together and connect them with ten screws.

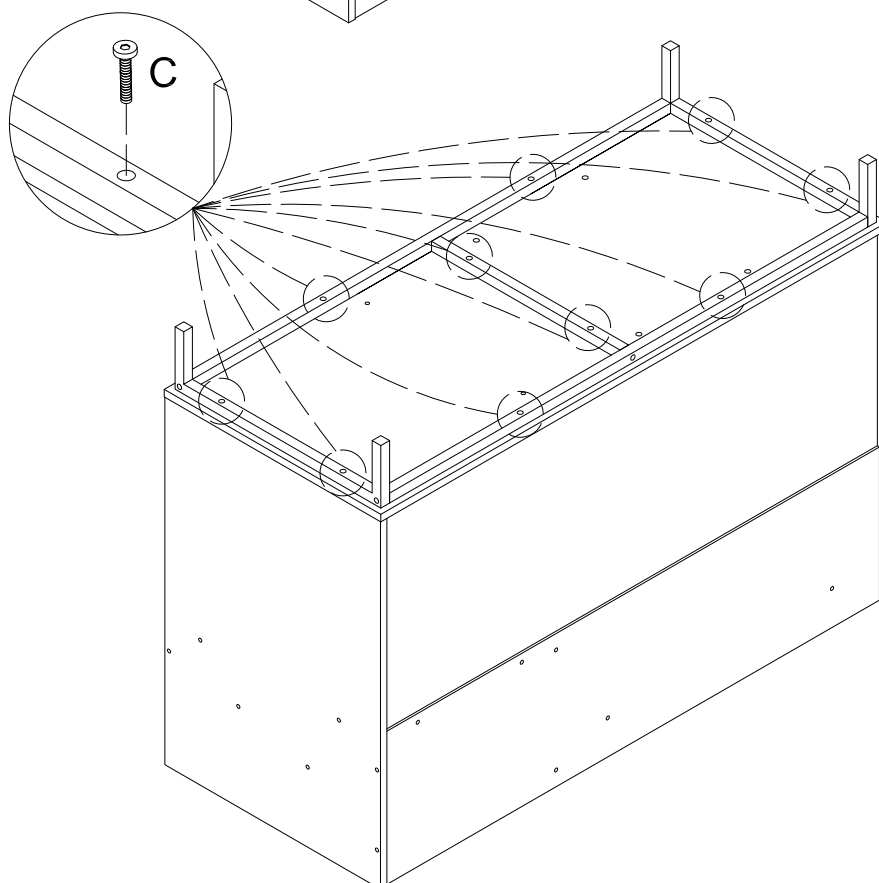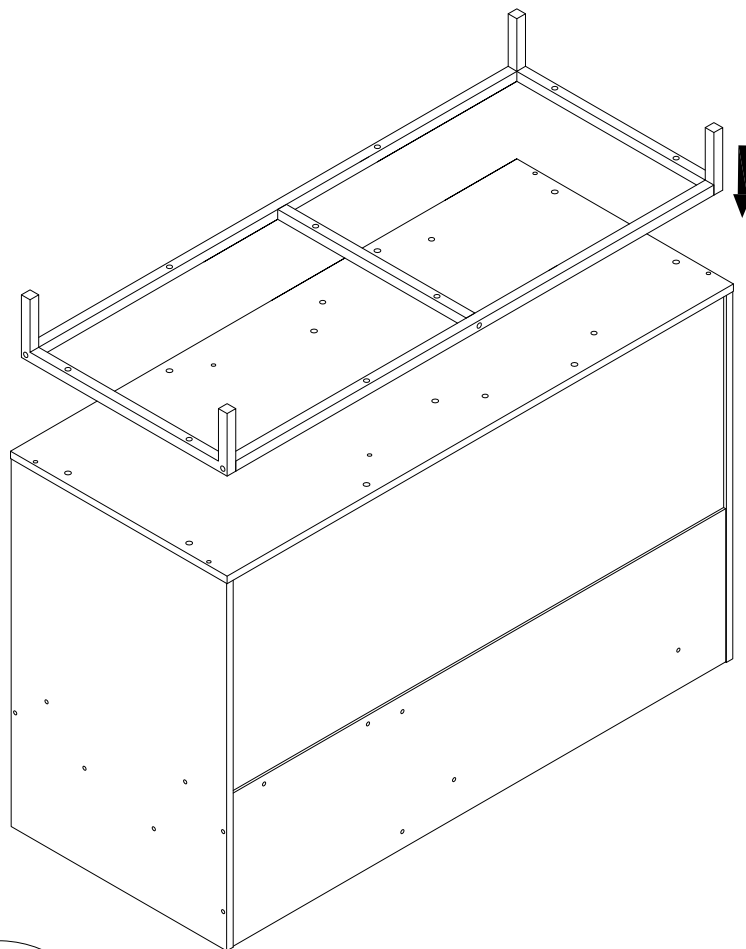


Cx10



14

Place the four backboards on the thin plate and secure them with four screws.

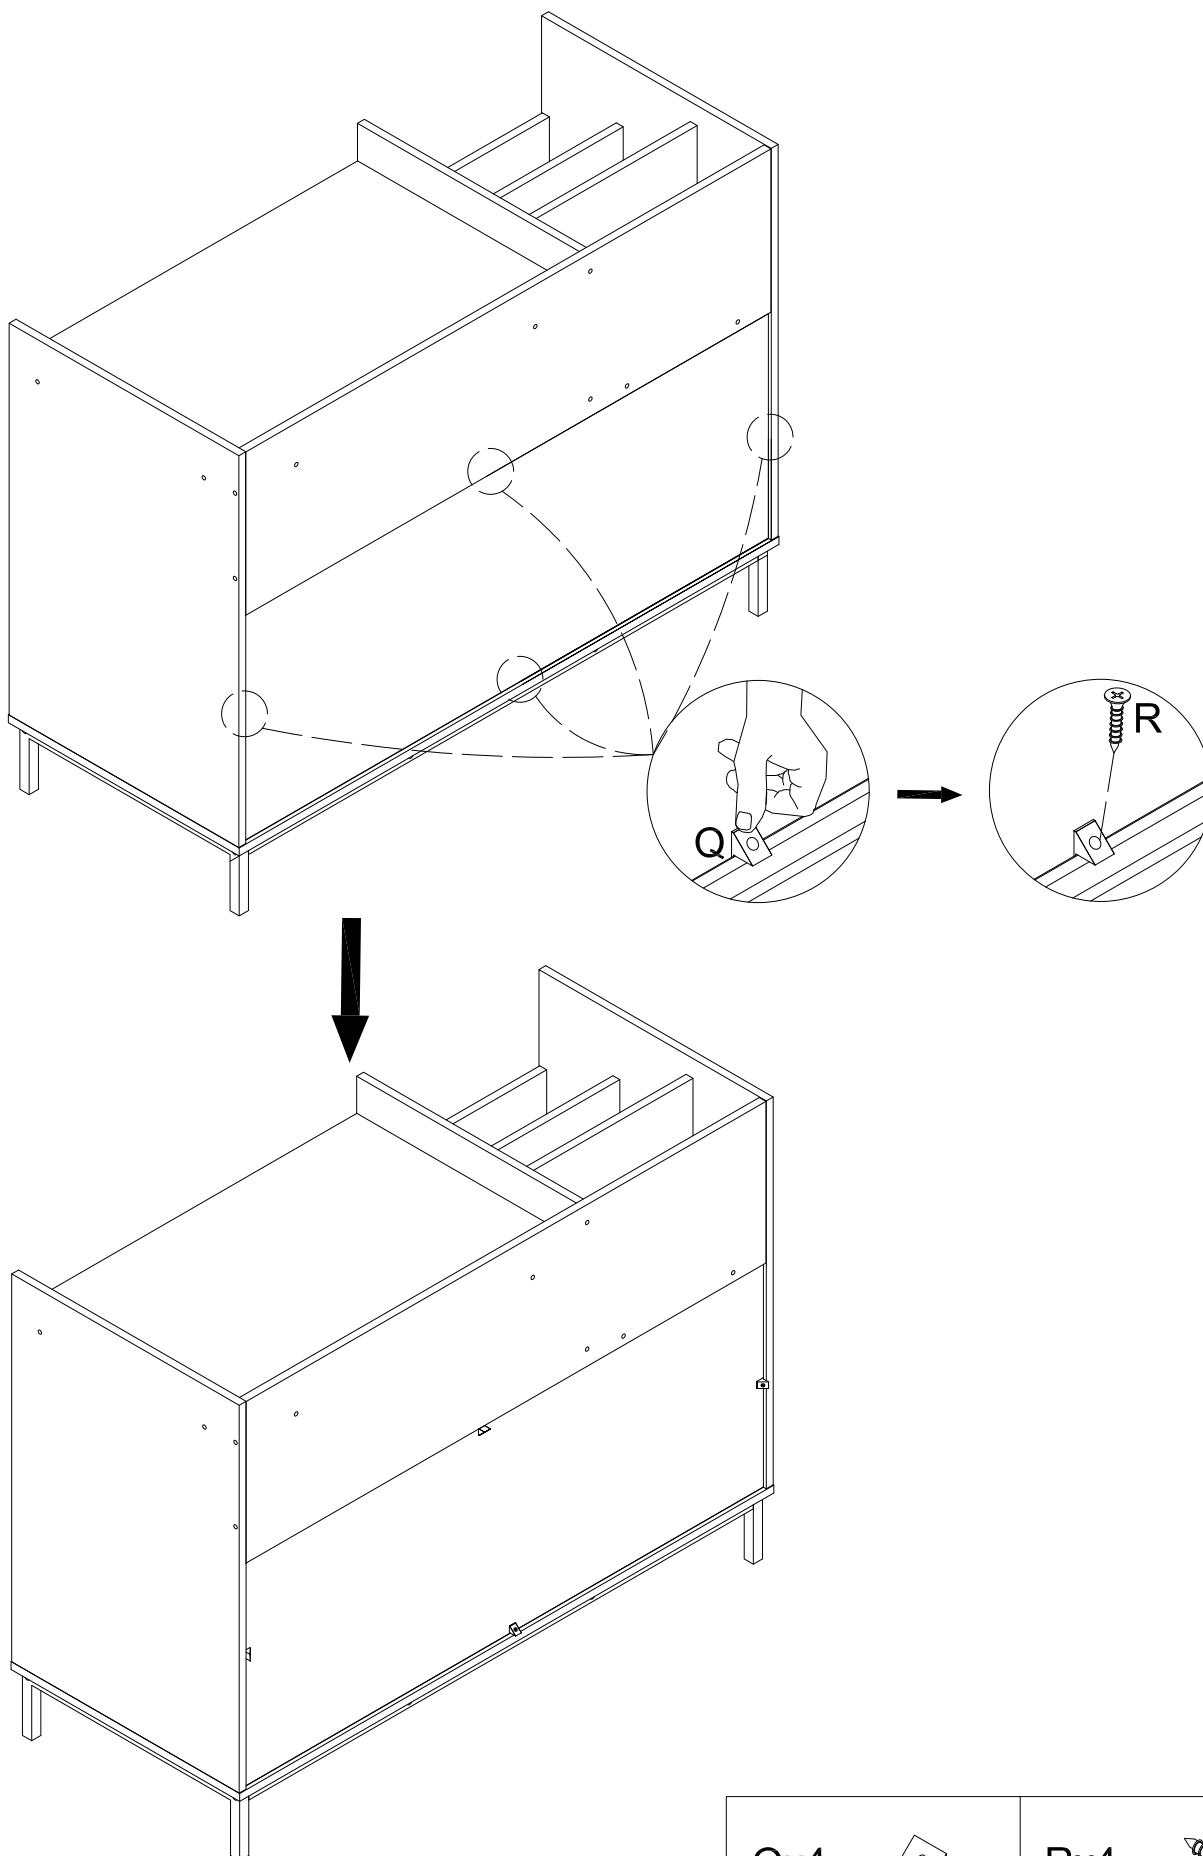

Qx4






Rx4



15

Insert two iron wires into the board and secure them with four nuts and padding .

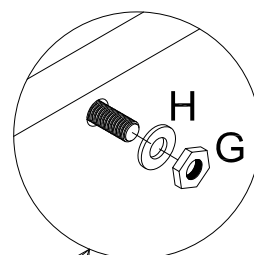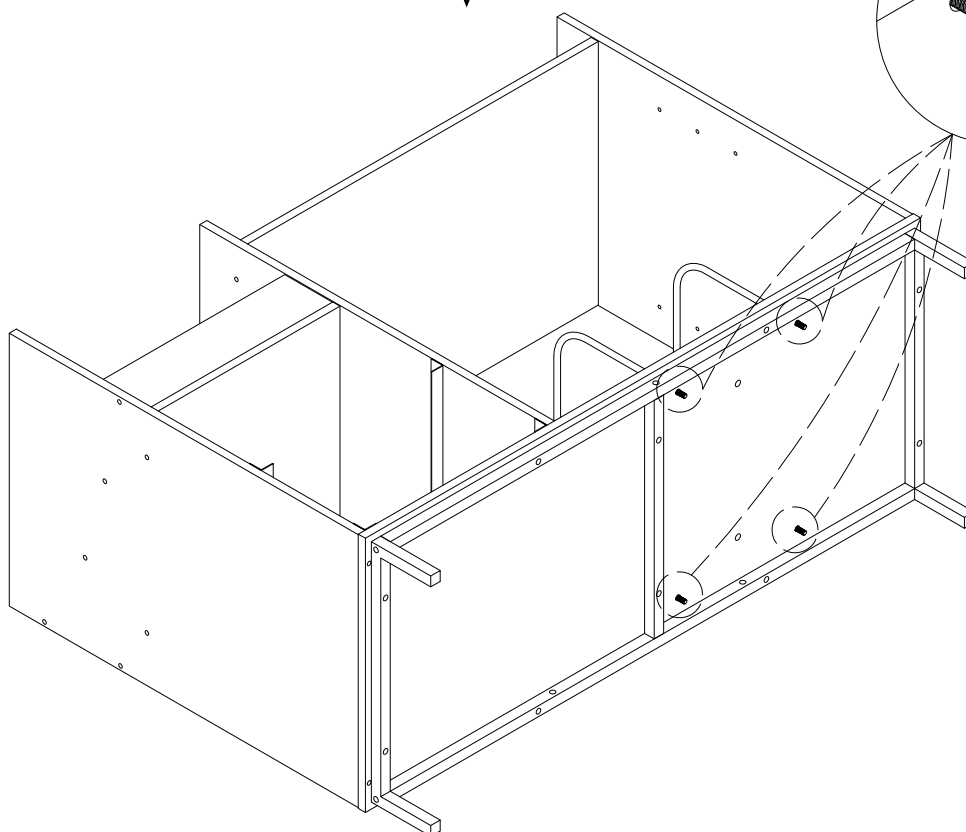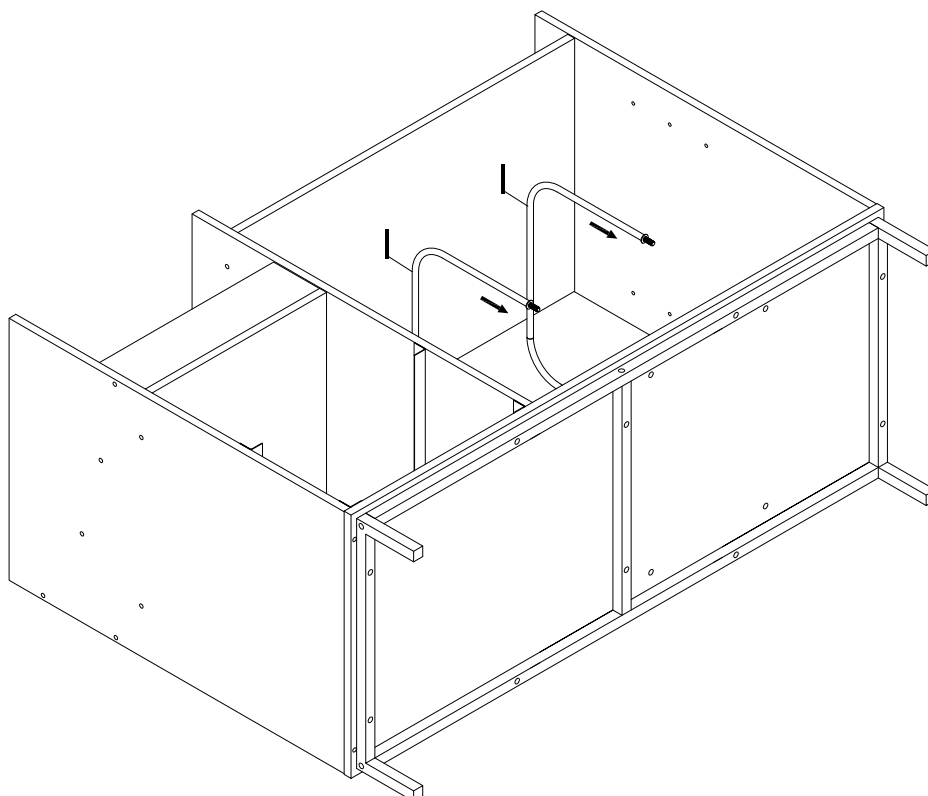


1x2



Hx4





Gx4




16

Insert the laminated board holder into the board and place the laminated board on the laminated board holder.

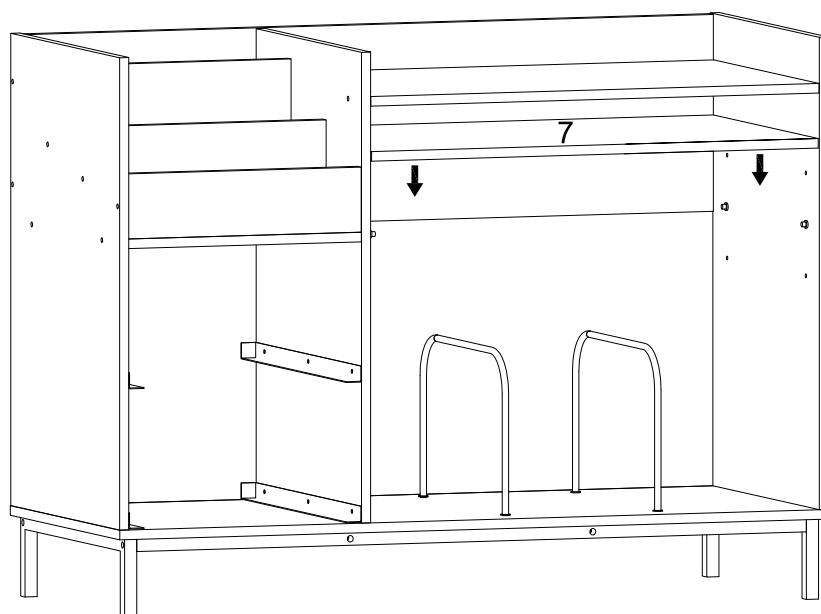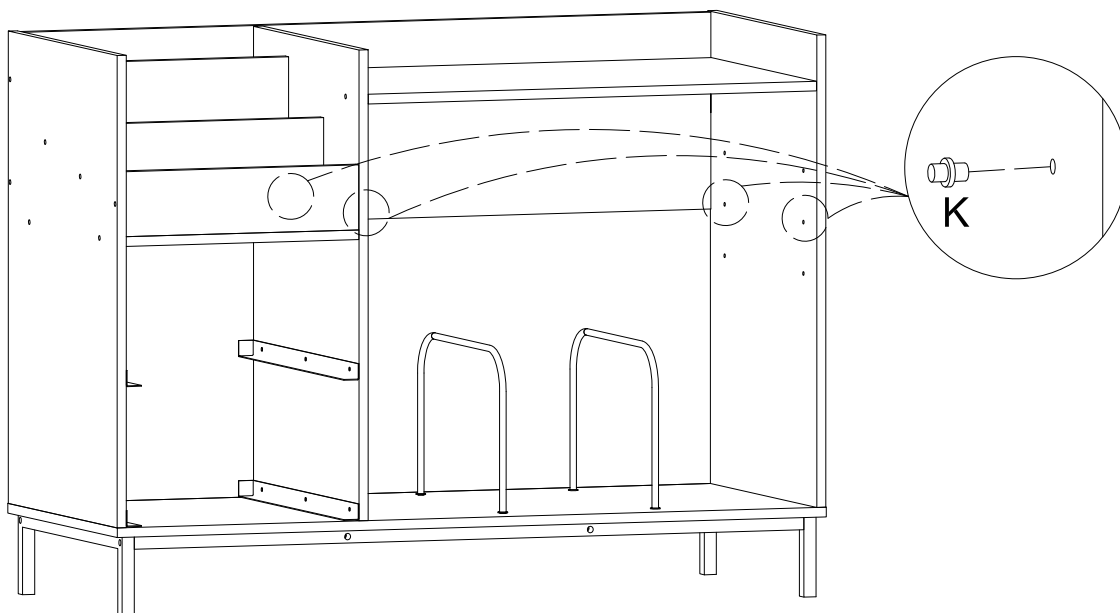


Kx4



17

Pull two cloths together, place the padding inside and lock the handle with four nuts and padding.

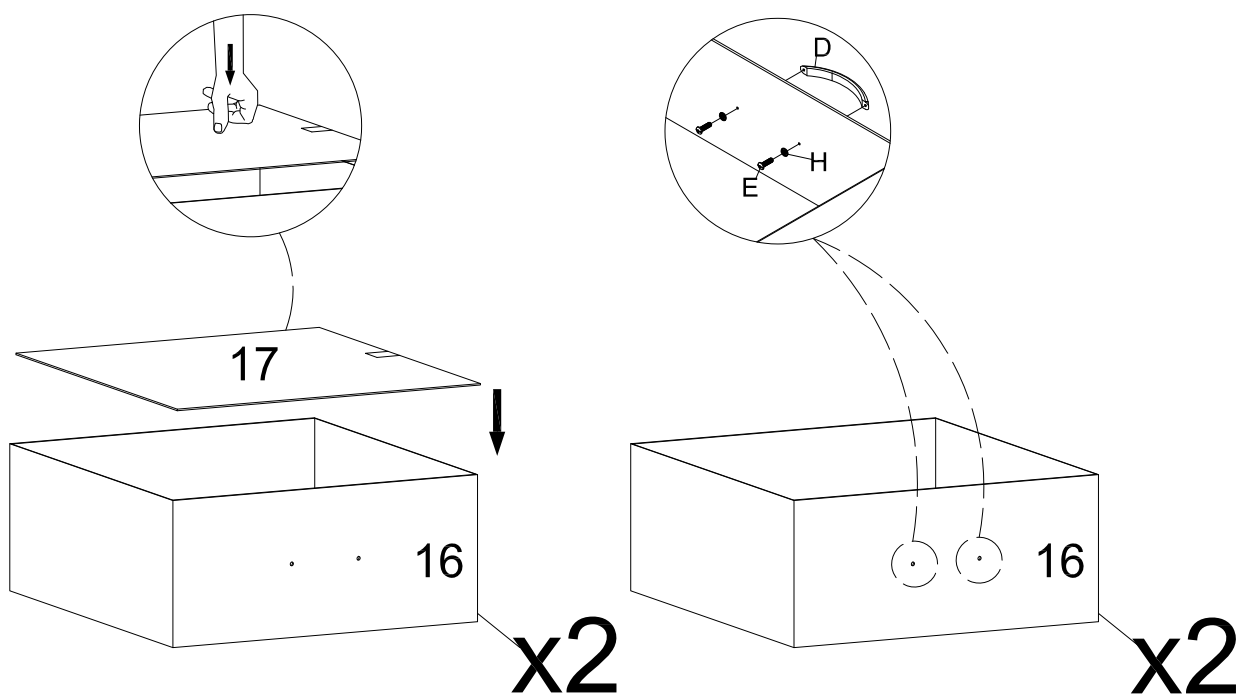

Dx2



Ex4




Hx4




18

Put the fabric drawer into the drawer holder.


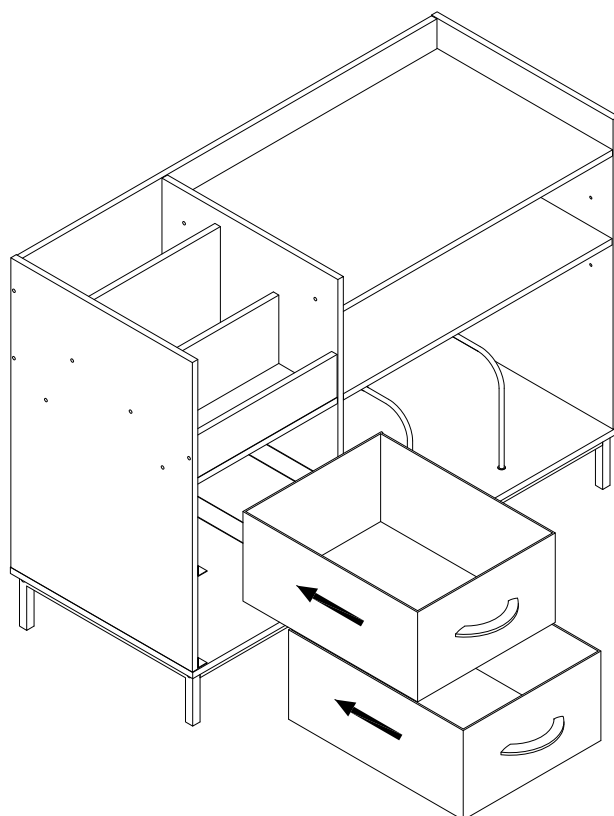


19

Attach visible holes with hole stickers.

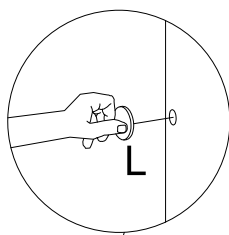

Hole position is hidden by pasting a hole sticker !

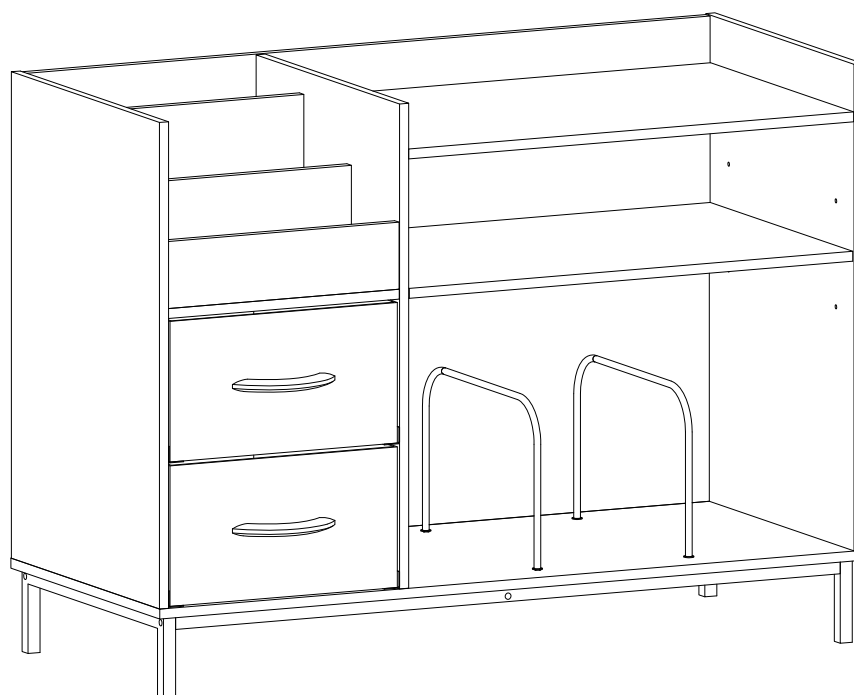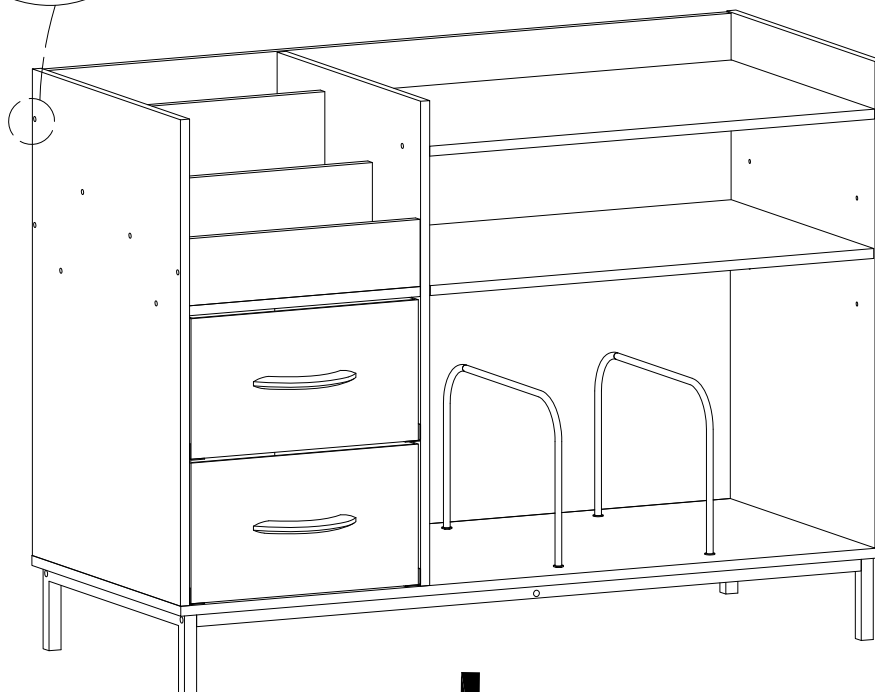

Lx30

