








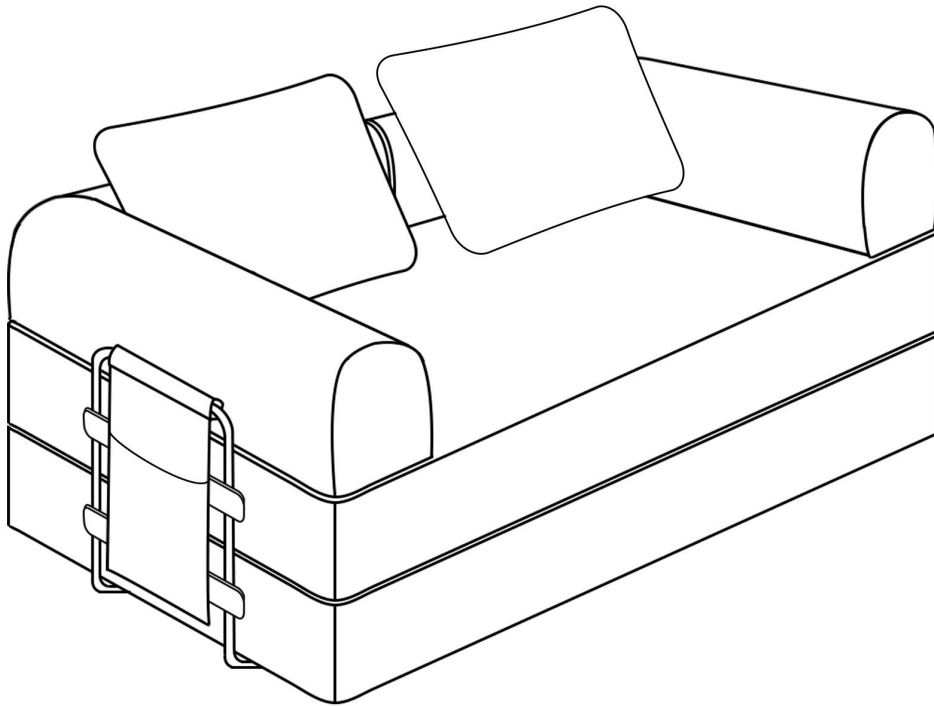



ASSEMBLY INSTRUCTIONS



No.	ITEM	SKETCH	QTY
(A)	Cushion		2pcs
(B)	L-Shaped Pillow		2pcs
(C)	Pillow		2pcs
(D)	Storage Bag		1pc
(E)	Iron Frame		4pcs
(F)	Iron Frame		4pcs
(G)	Iron Frame		4pcs
(H)	Iron Frame		4pcs
(I)	Allen Bolts M6*15/32"		8pcs
(J)	Allen Wrench M6		1pc

This compression sofa requires 72 hours for full restoration.


Please feel free to contact us if you have any questions, Thank you.

Customer Service Email: help@mwbffurniture.com




Note: After installation,
give them 72h to recover


1

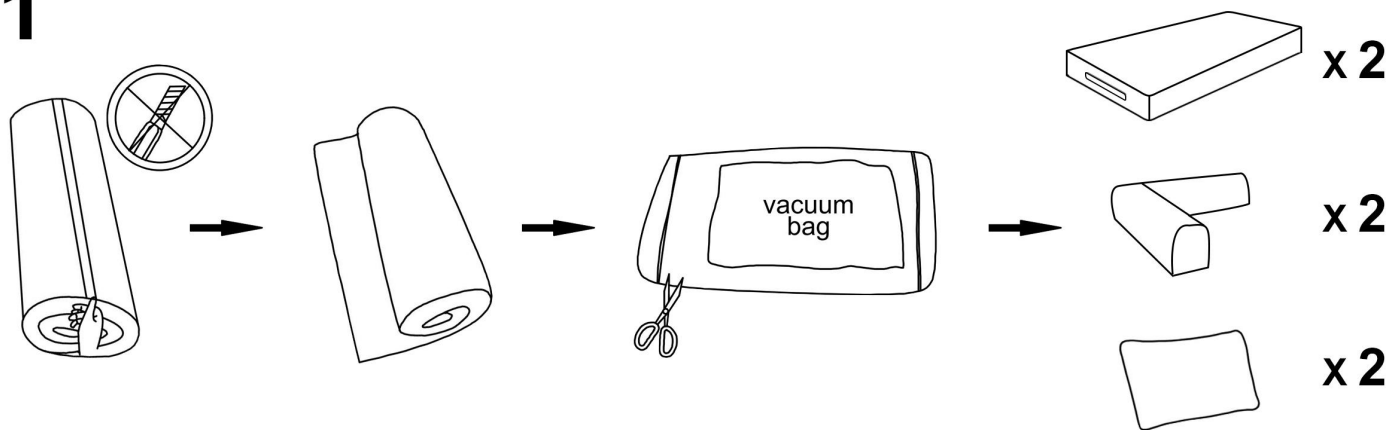

2

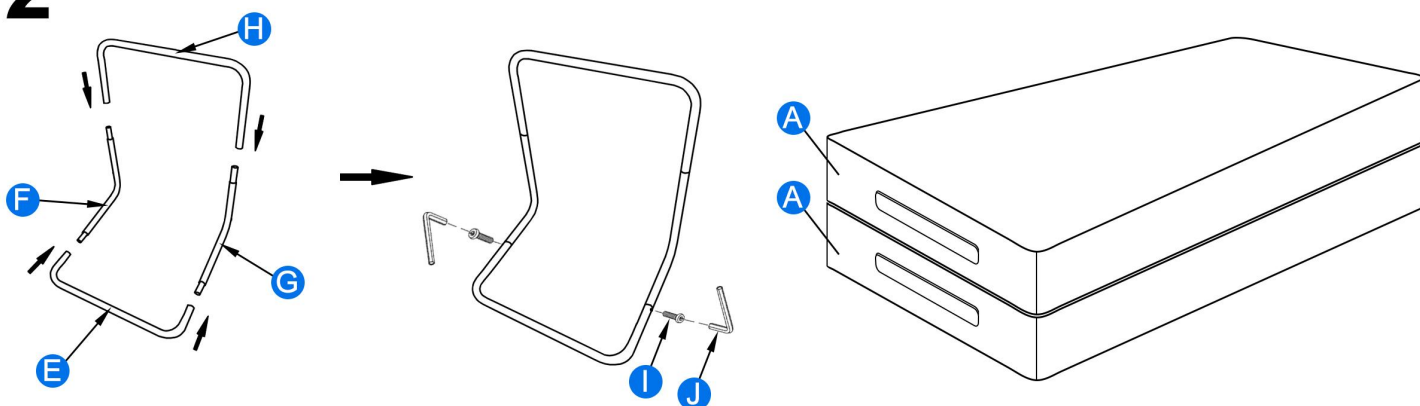

3

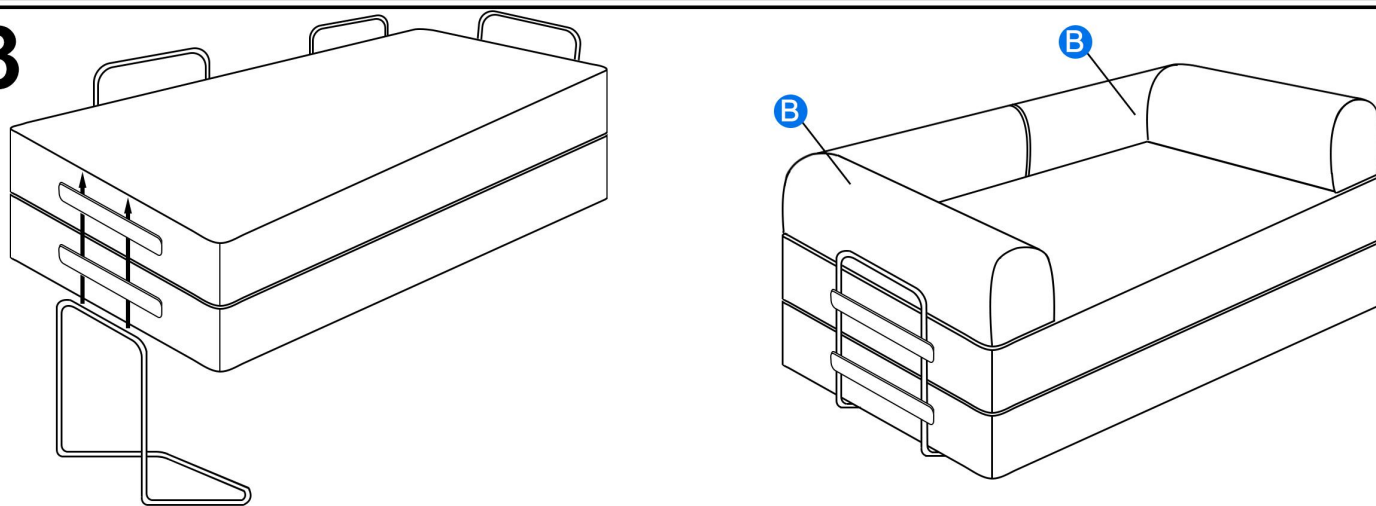

4

