


Coffee Table Installation

Tools You Will Need: Tools You May Need



philis head screwdrier
rewuired of assembly
(not include)



hammer
(not include)



electric drill
(not inclue)



Assembly video


Before the Installation

1. Do not throw away packing materials until assembly is complete for small parts may come loose inside the carton during shipment. If parts are missing, please contact us.
2. Assemble this item on a soft surface, such as carpet to protect the finish.
3. Proper assembly of this item requires 2 people.
4. Periodically check to ensure that all connections are tight.
5. It is recommended that installation of the product be done by a qualified licensed furniture assembler.


Care and Cleaning

1. To protect the finish, avoid use chemicals and household cleaners.
2. All hot serving dishes should be placed on a pad.
3. Any liquid spilled onto the top should be cleaned up immediately with a damp cloth.








Parts List

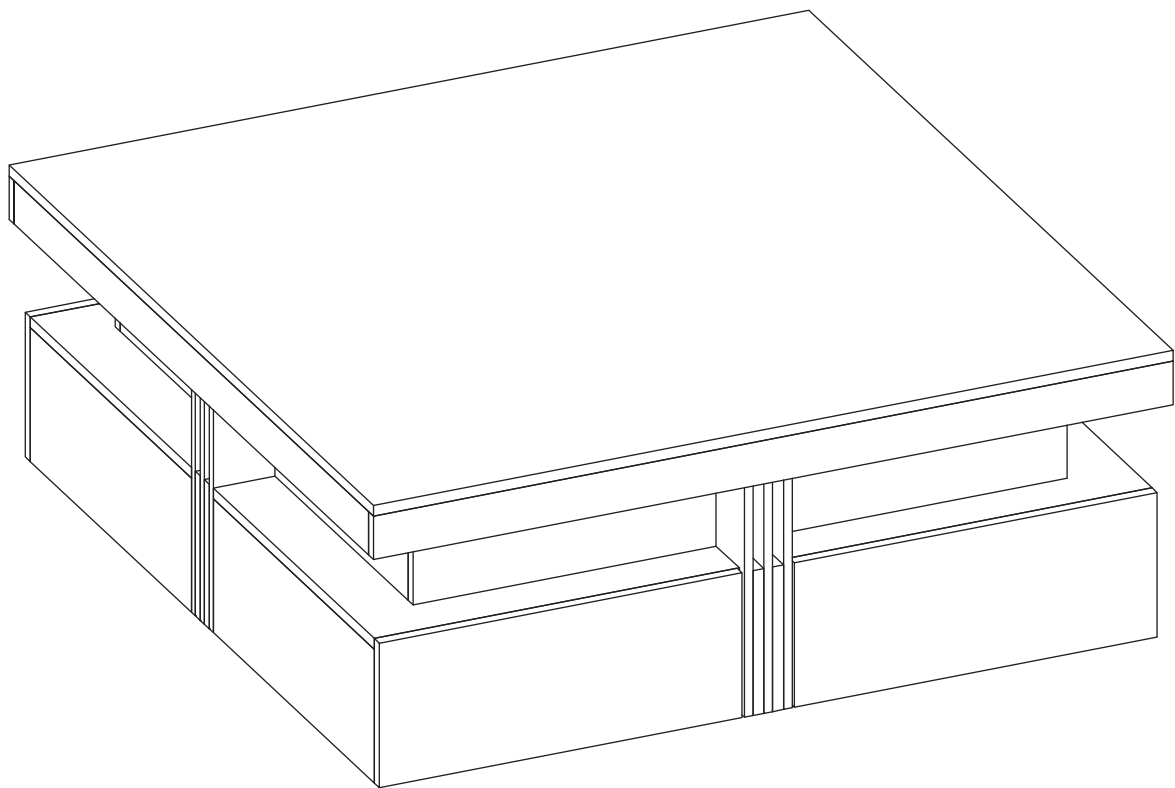




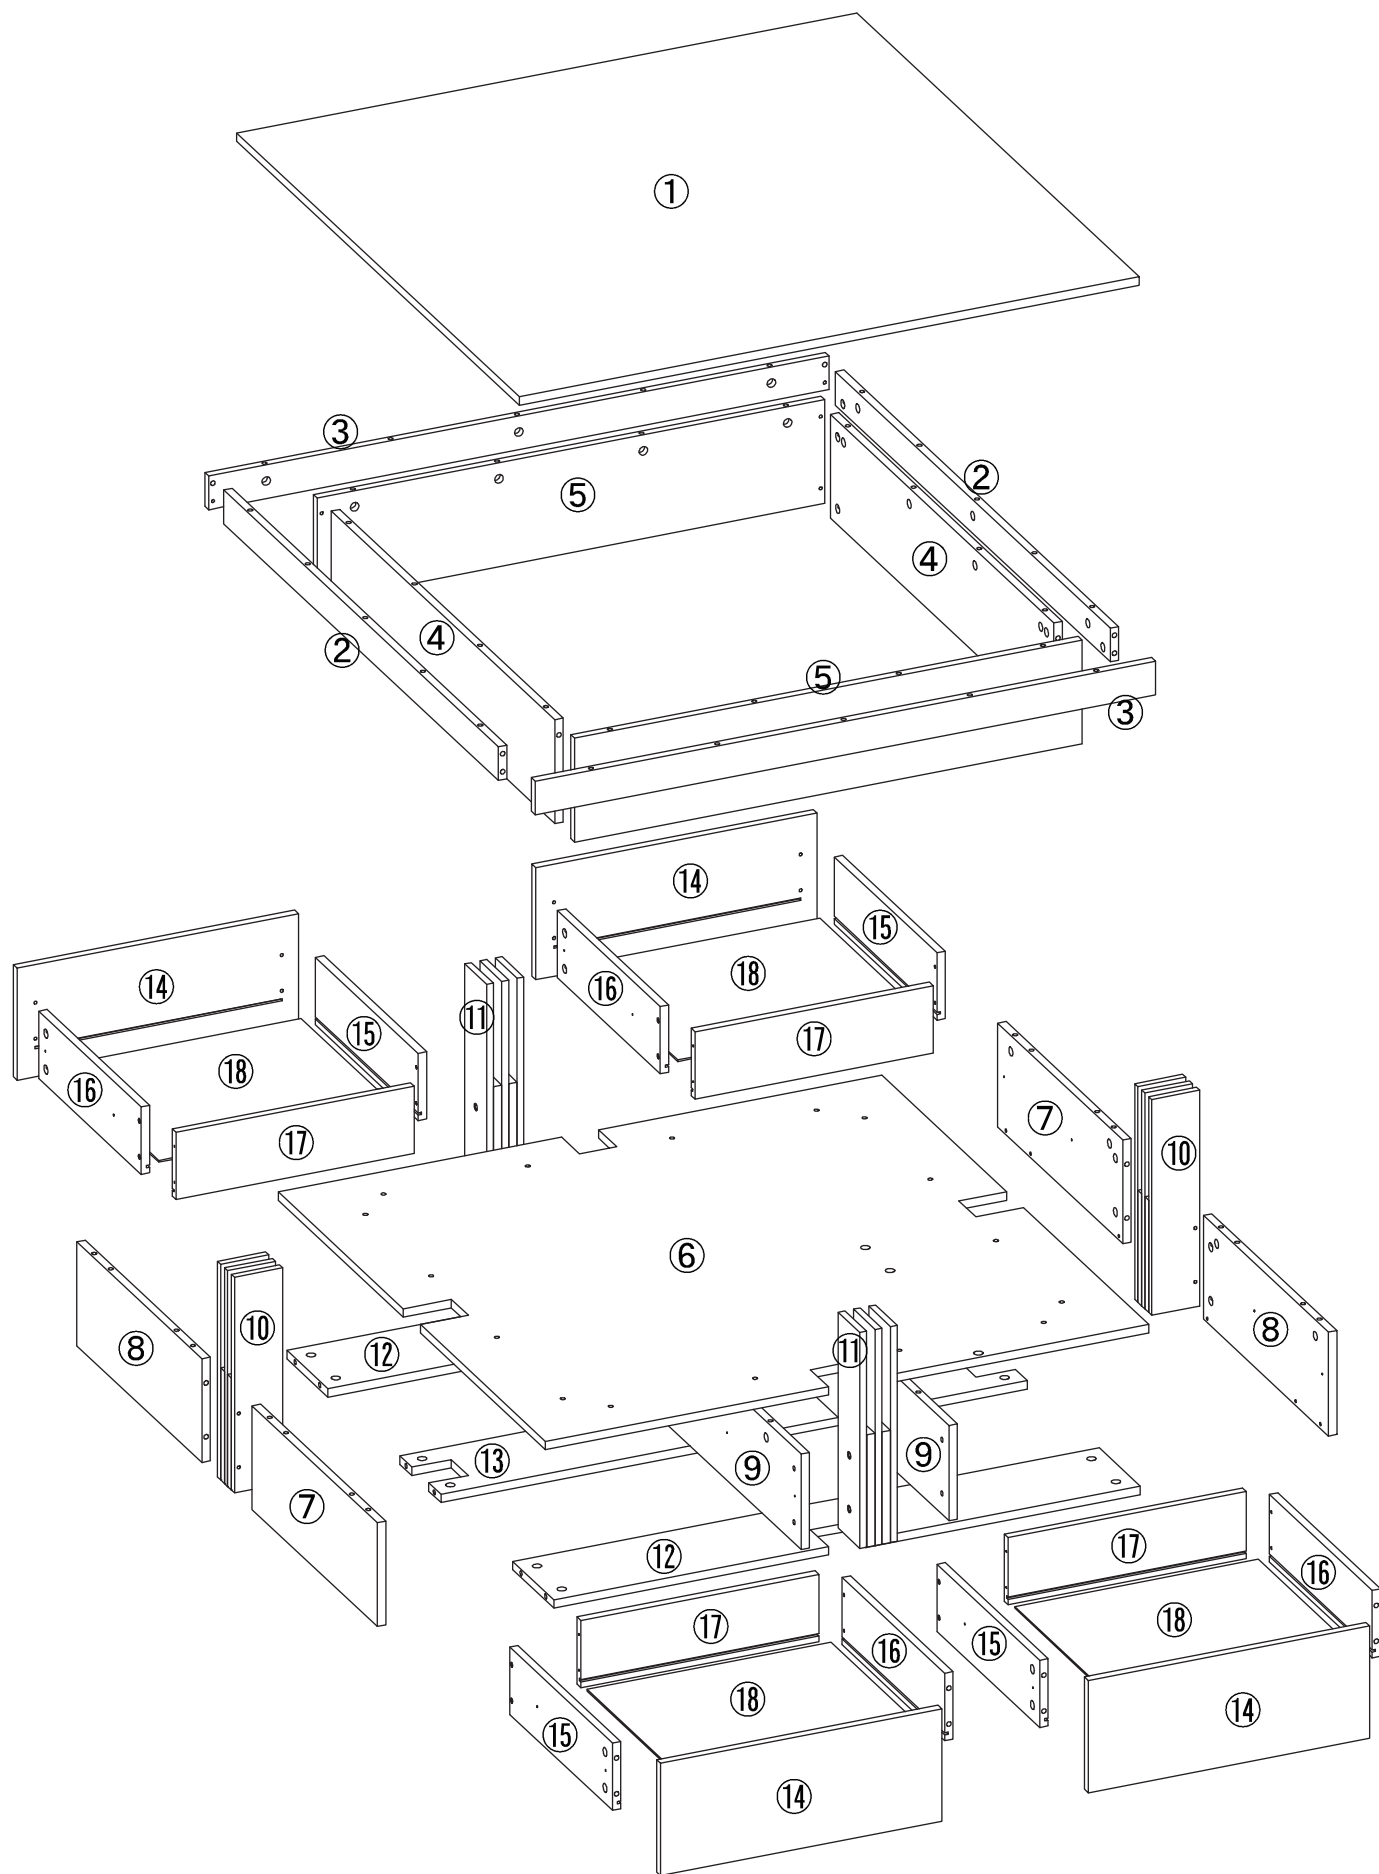







Note: Do not fully tighten all bolts until all parts are in place. Failure to follow these instructions may cause the bolt to misalign during assembly.


















Parts List for N735P359401

①  x1	②  x2	③  x2	⑥  x1	⑨  x2
⑫  x2	⑬  x1			


Parts List for N735P359402

④  x2	⑤  x2	⑦  x2	⑧  x2	⑩  x2
⑪  x2	⑭  x4	⑮  x4	⑯  x4	⑰  x4
⑱  x4				


Hardware List for N735P359402

A  6x40mm x90	B  ø15x12mm x50	C  ø8x40mm x24	D  5x40mm x22	E  M4x35mm x8
F  400mm x8	G  400mm x8	H  M4x12mm x 64	I  M4x35mm x16	J  ø30x20mm x6
K  M4x20mm x6	L  ø15x9.5mm x40	M  M4 x1	N  x90	O  x4

STEP1

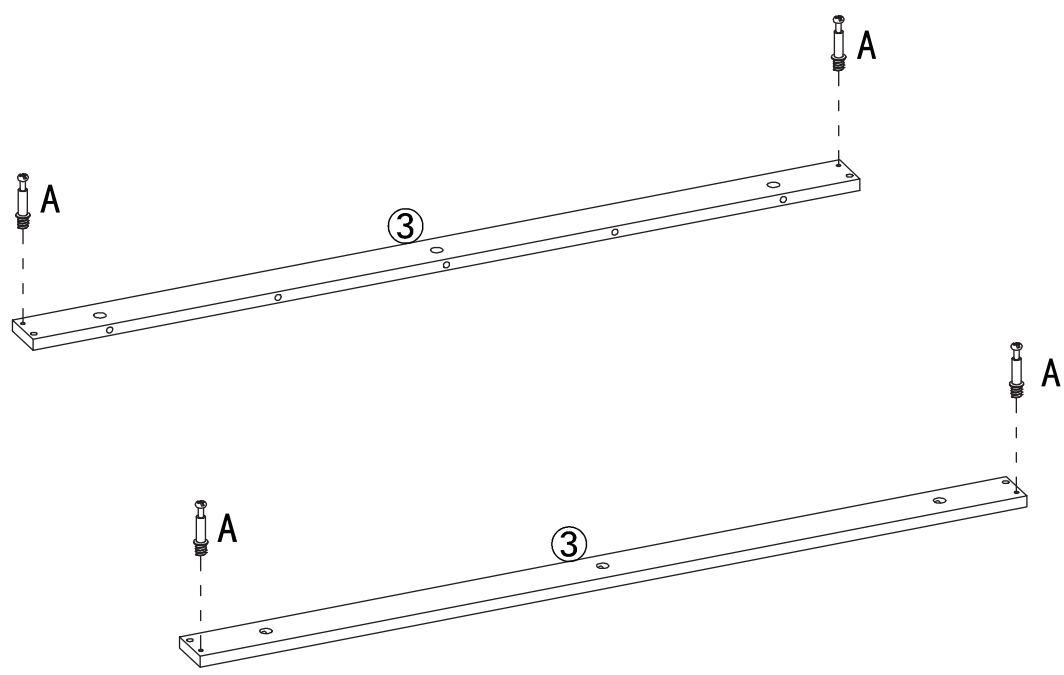


A




6x40mm

x4

STEP2

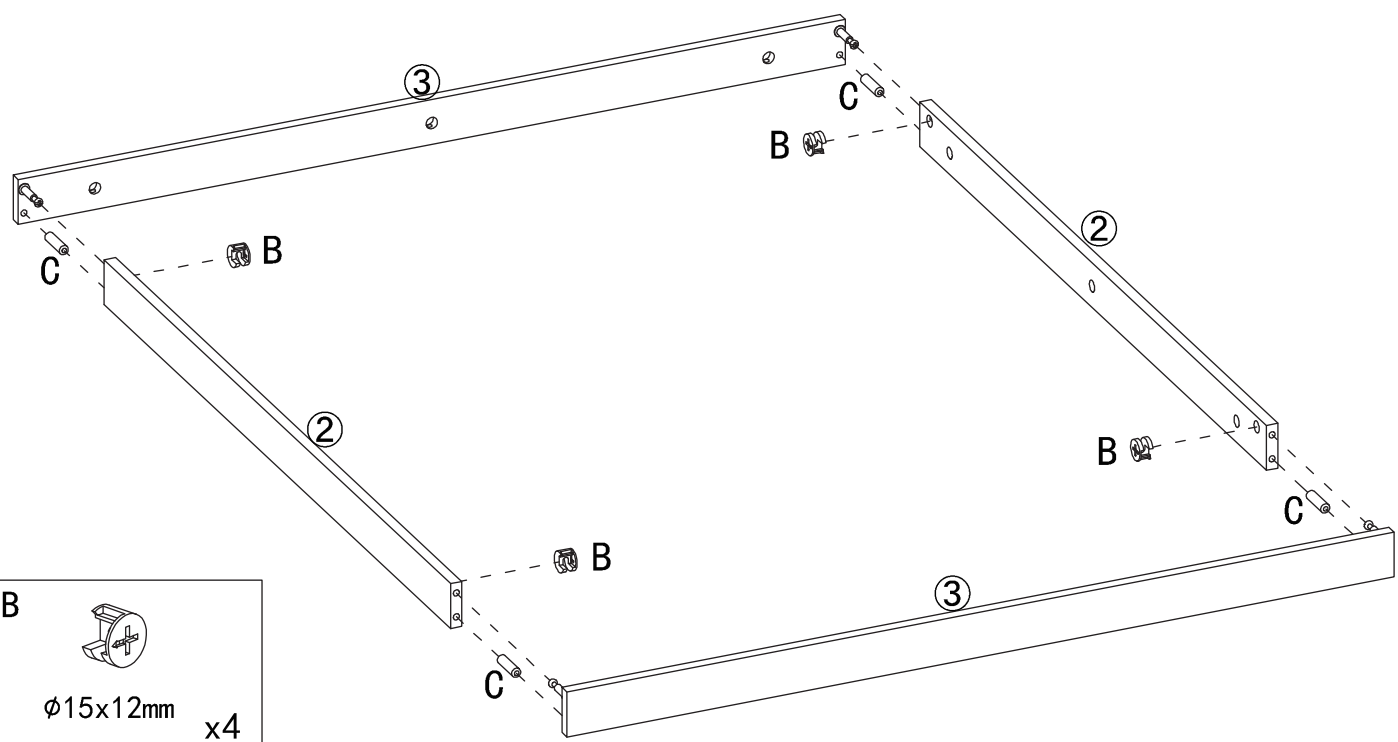


B



ø15x12mm

x4


C




ø8x40mm

x4

STEP3

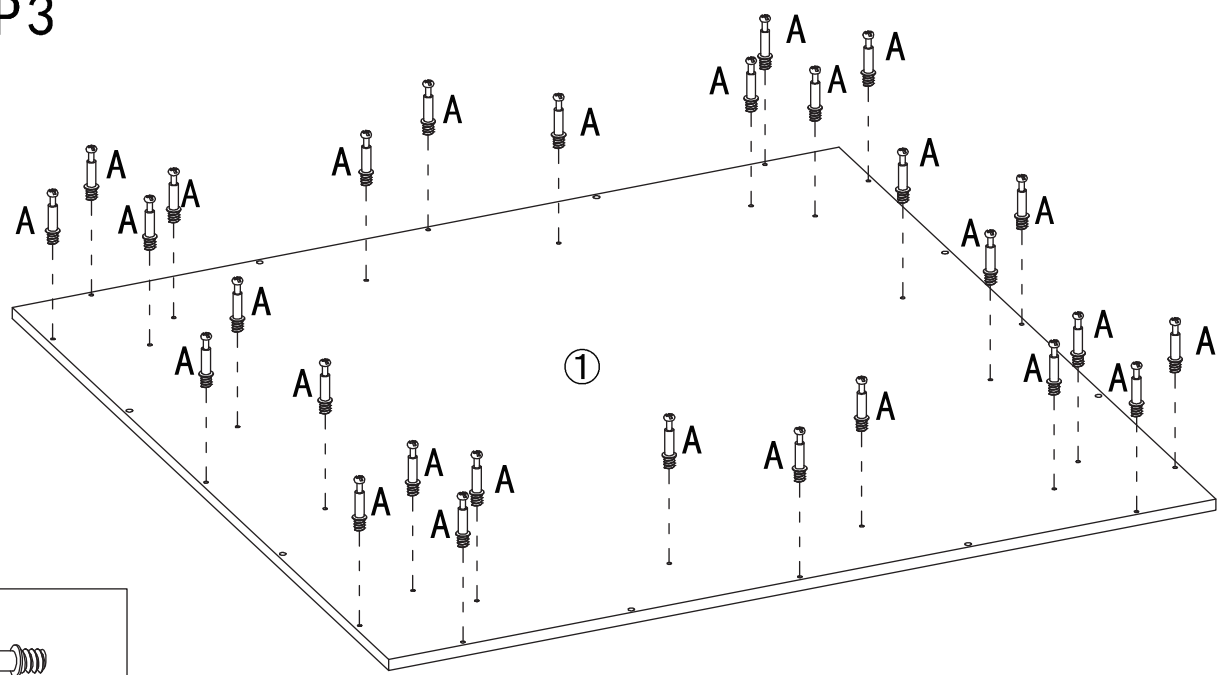


A




6x40mm x28

STEP4

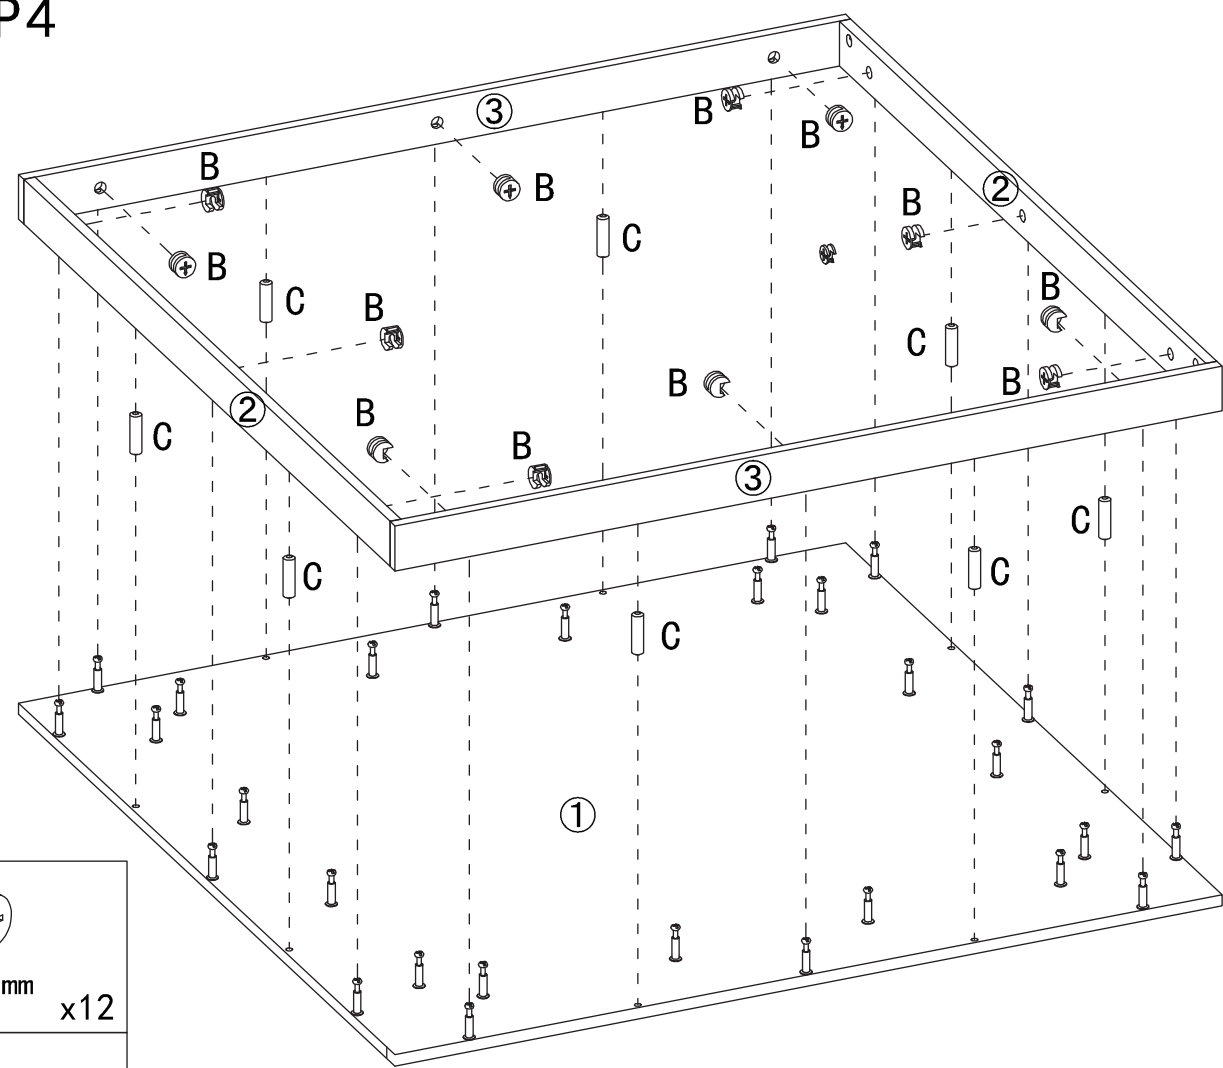


B





ø15x12mm x12

C





ø8x40mm x8


STEP5

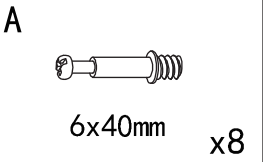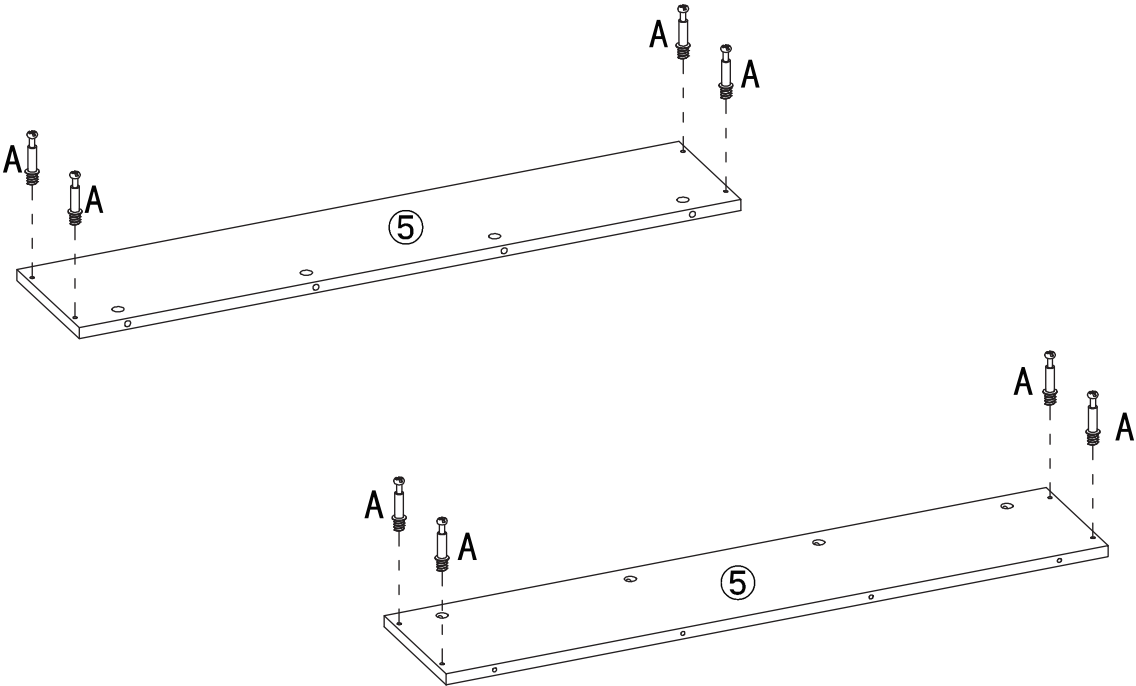


STEP6

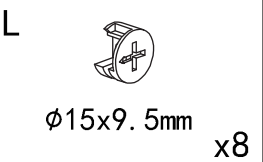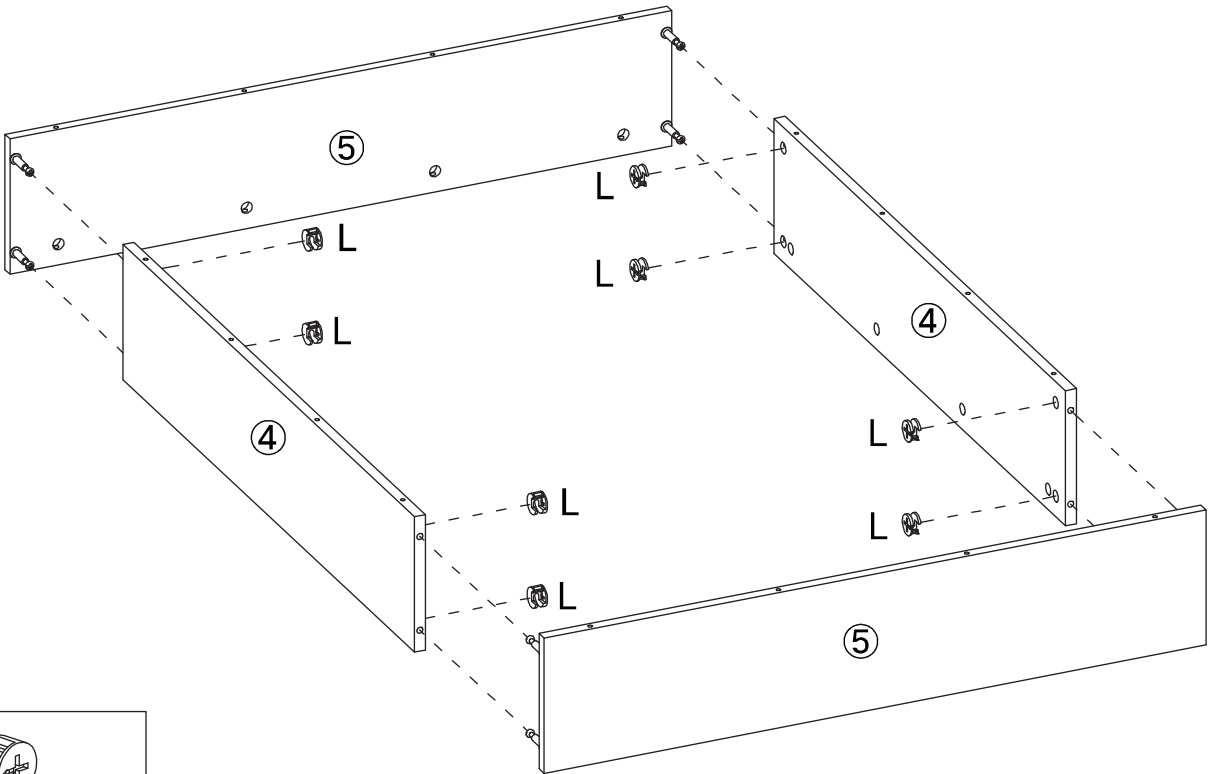

STEP7

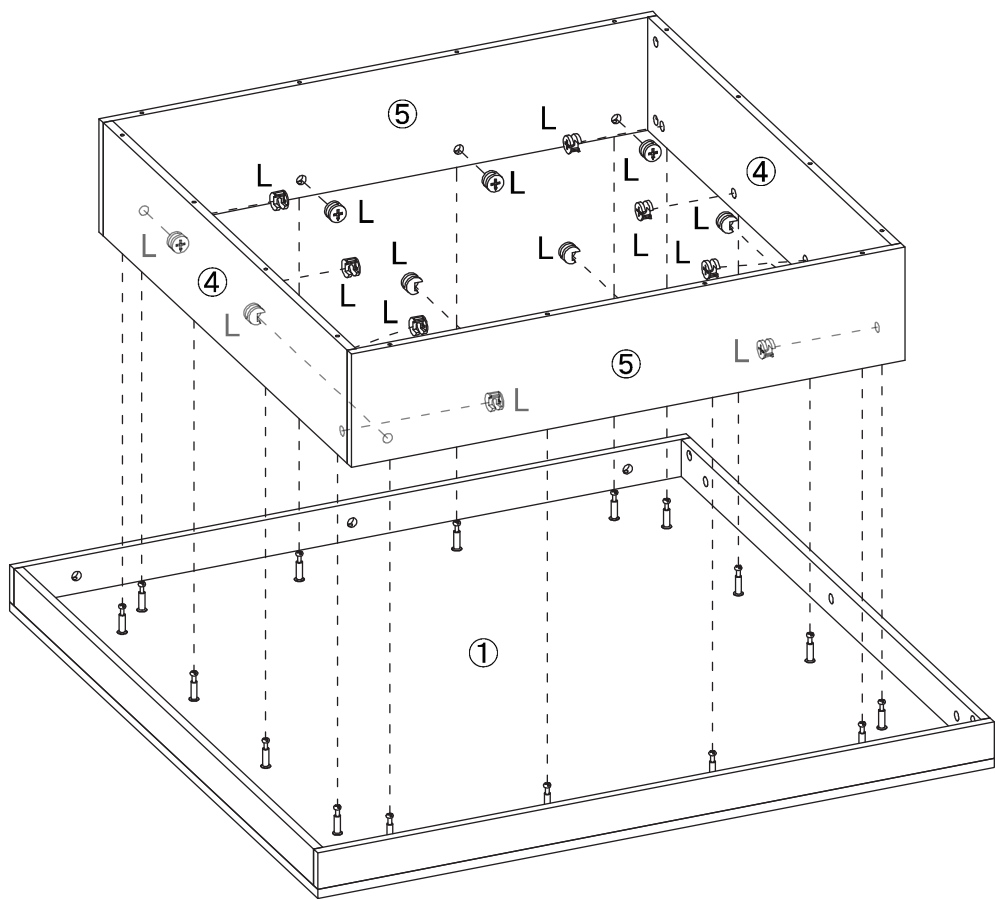


L




Ø15x9.5mm
x16

STEP8

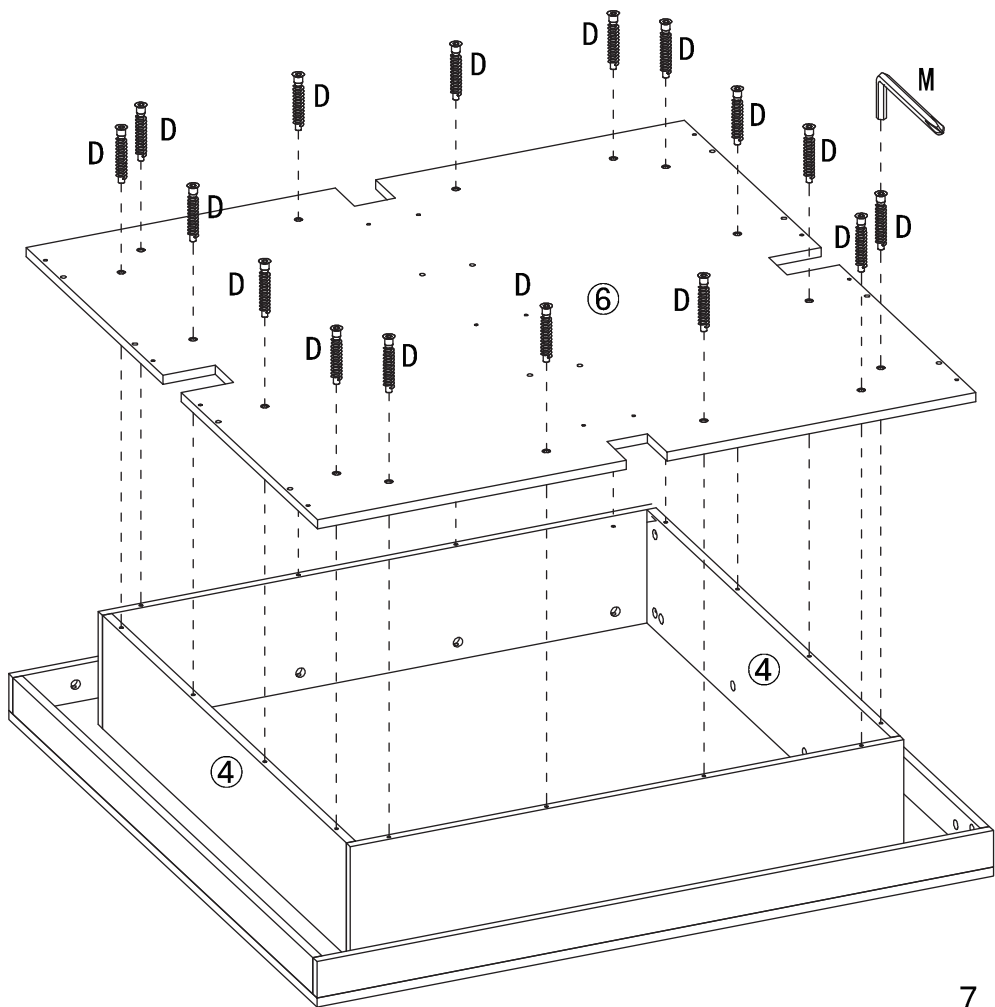


D




5x40mm
x16

M




M4
x1

STEP9




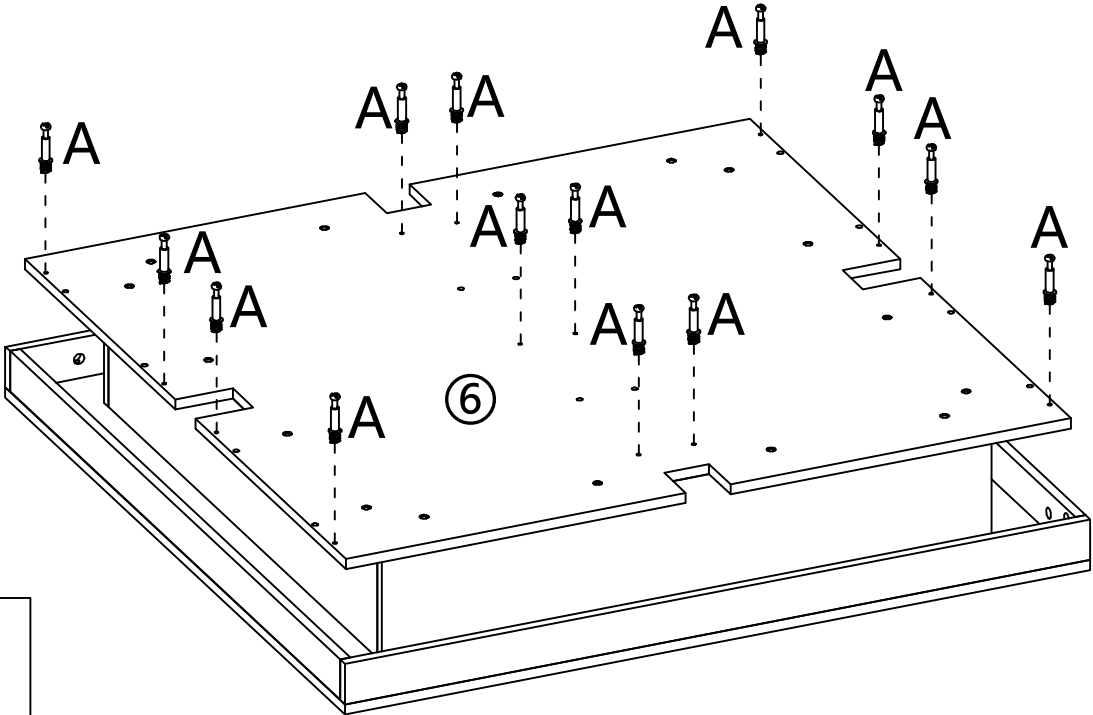


A




6x40mm
x14

STEP10

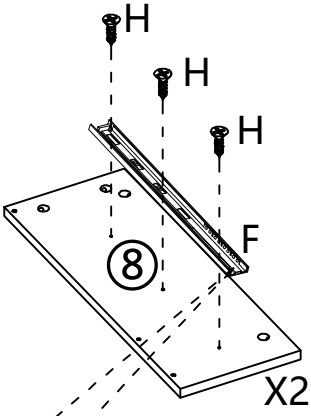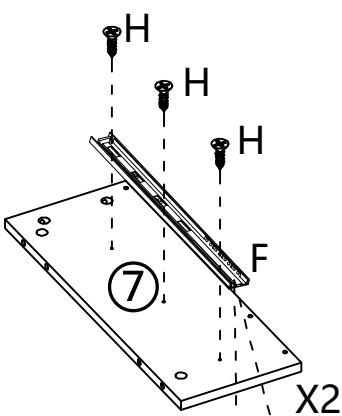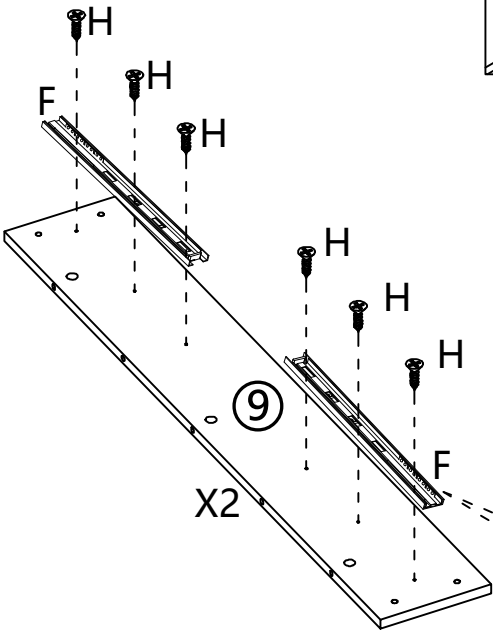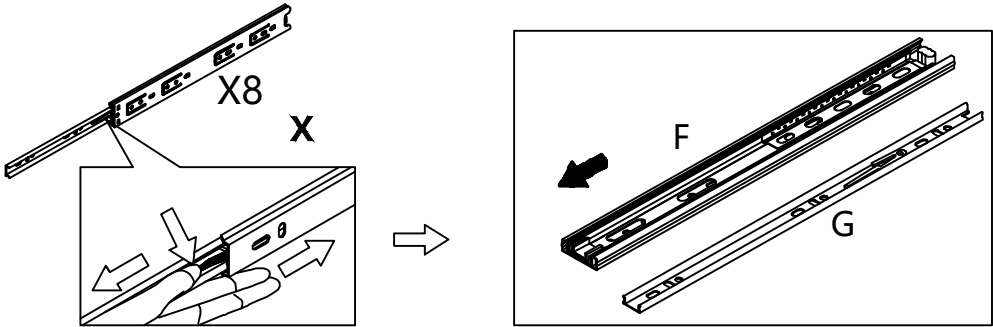


F

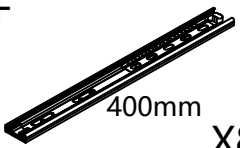




400mm
X8

H




M4x12mm
X24


STEP11

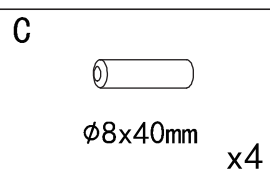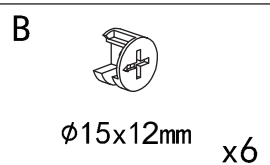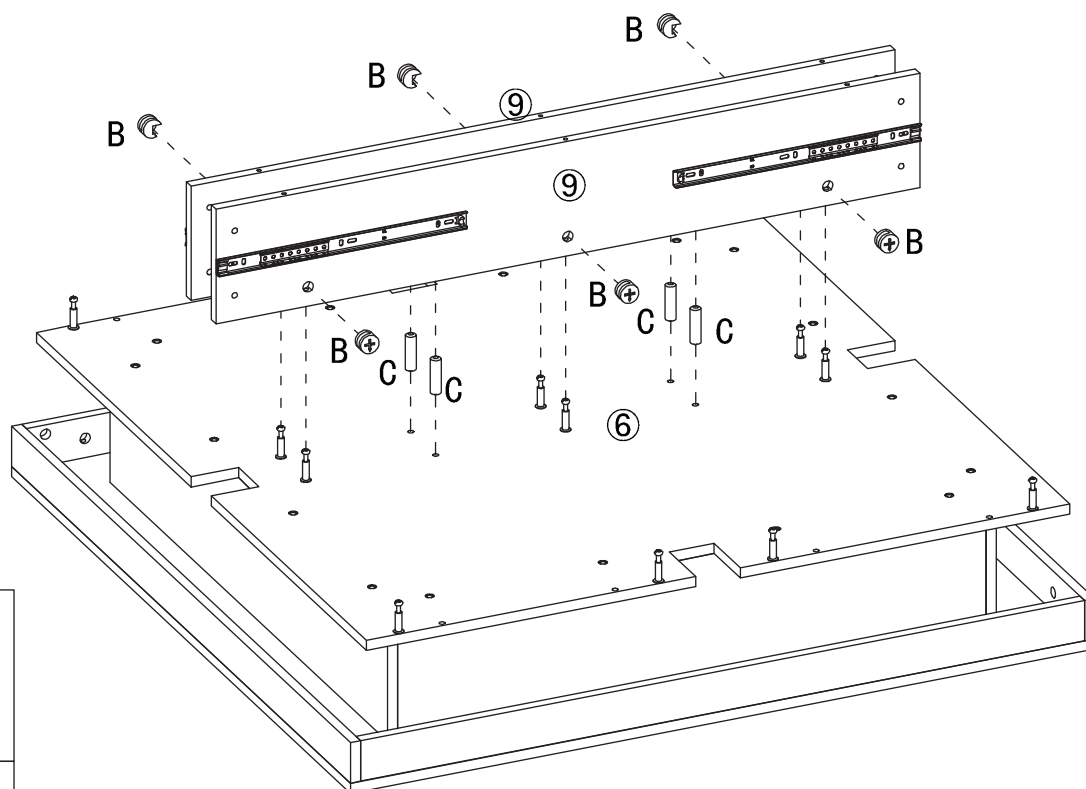


STEP12

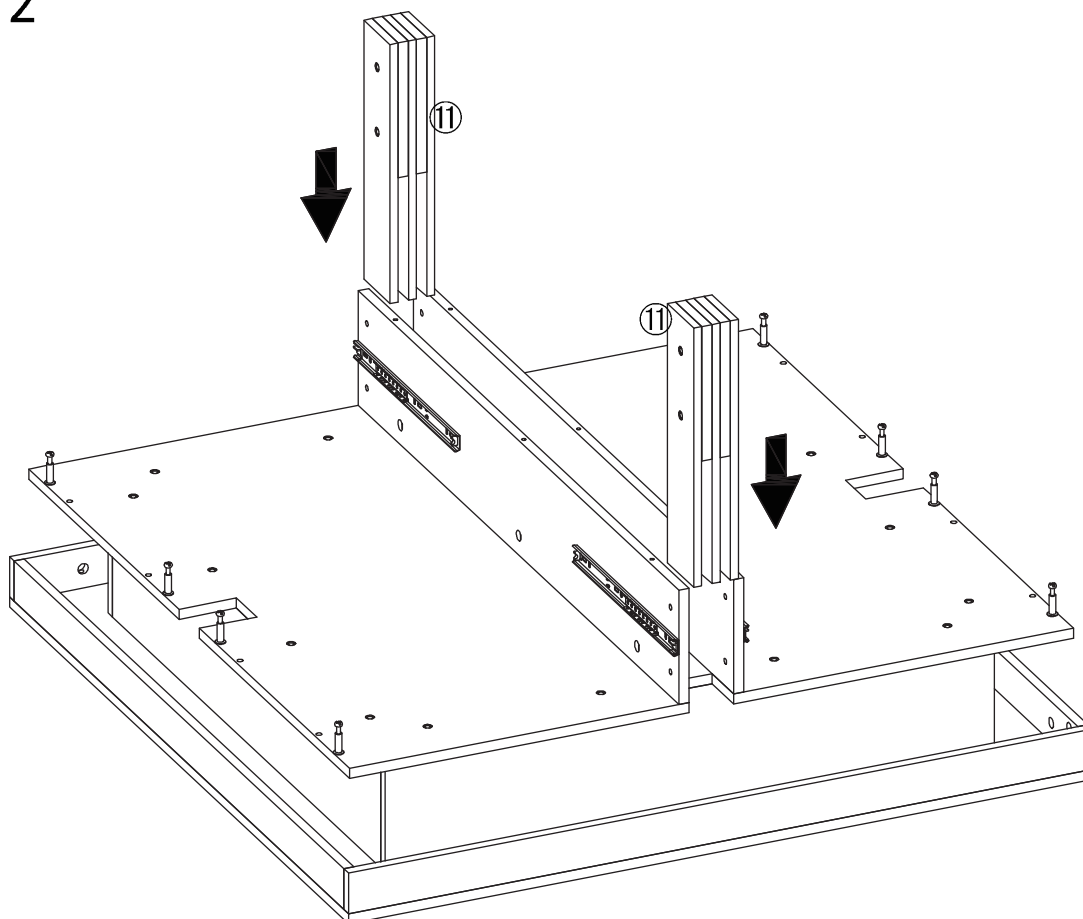

STEP13

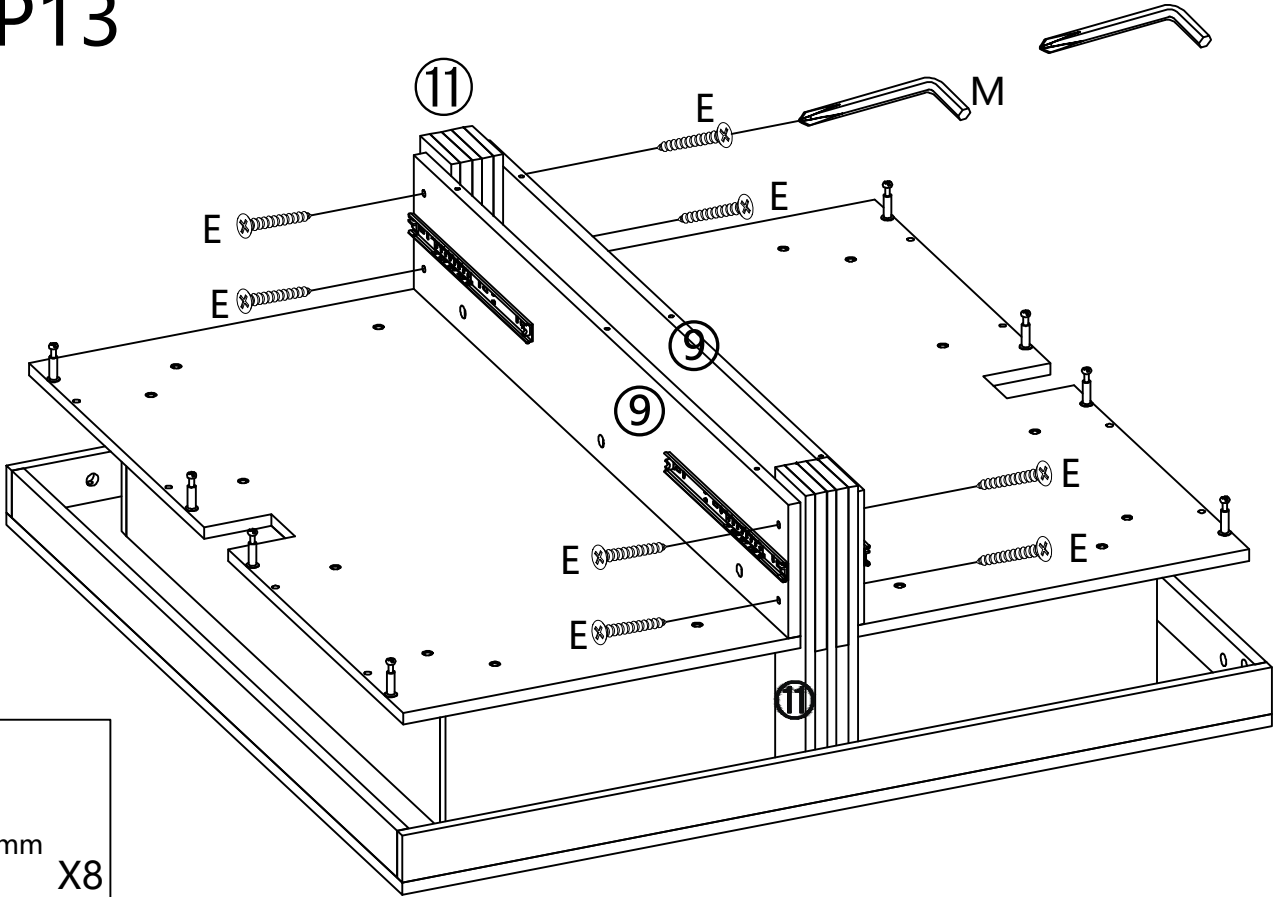


E



M4x35mm

X8


M




M4

x1

STEP14

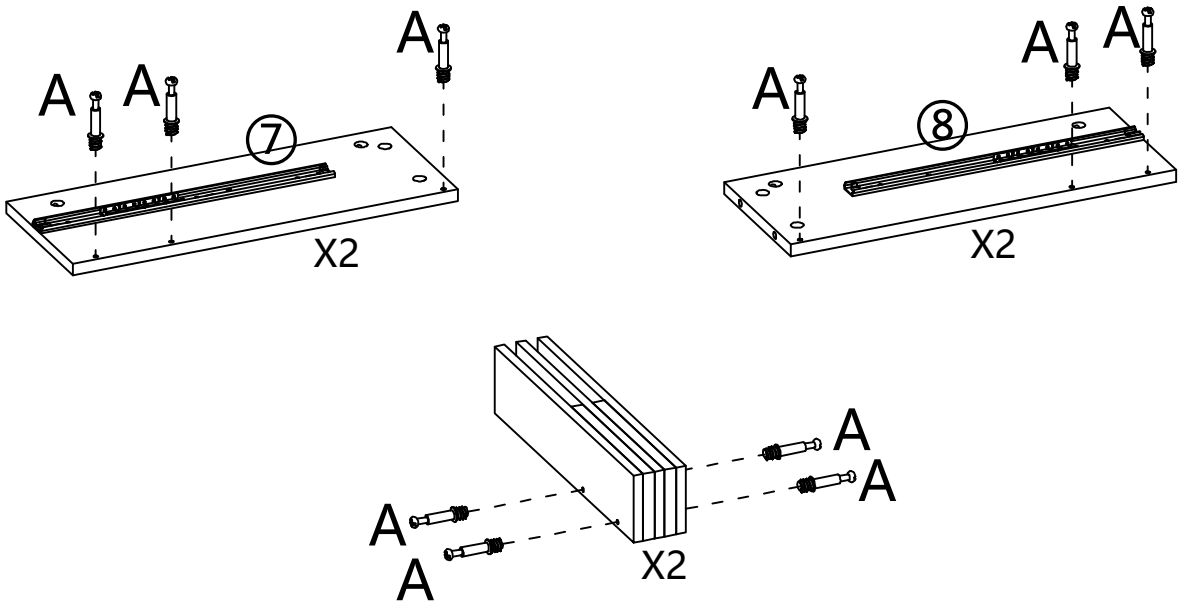


A




6x40mm

x20

STEP15

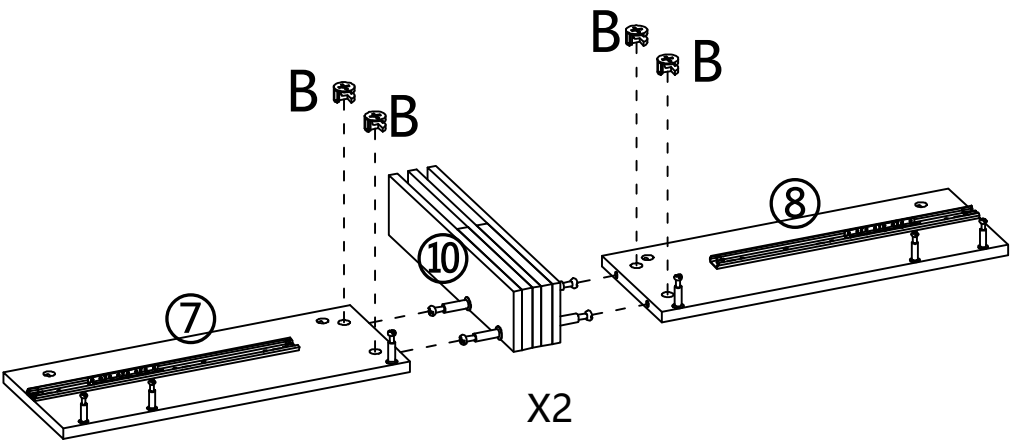


B





Ø15*12mm


X8

STEP16

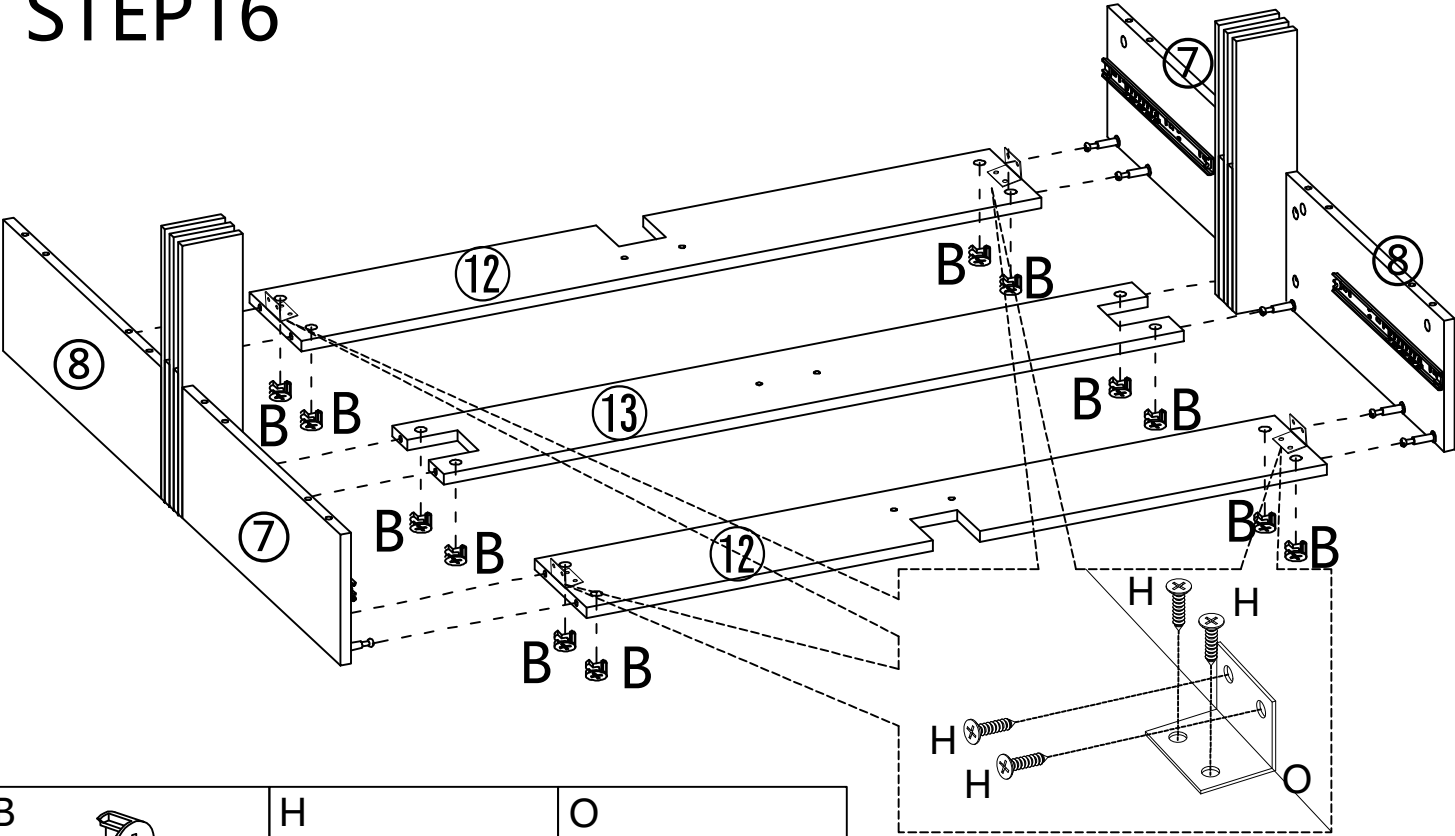


<p>B</p>  <p>Ø15*12mm</p> <p>X12</p>	<p>H</p>  <p>M4x12mm</p> <p>x16</p>	<p>O</p>  <p>x4</p>
--	---	---

STEP17

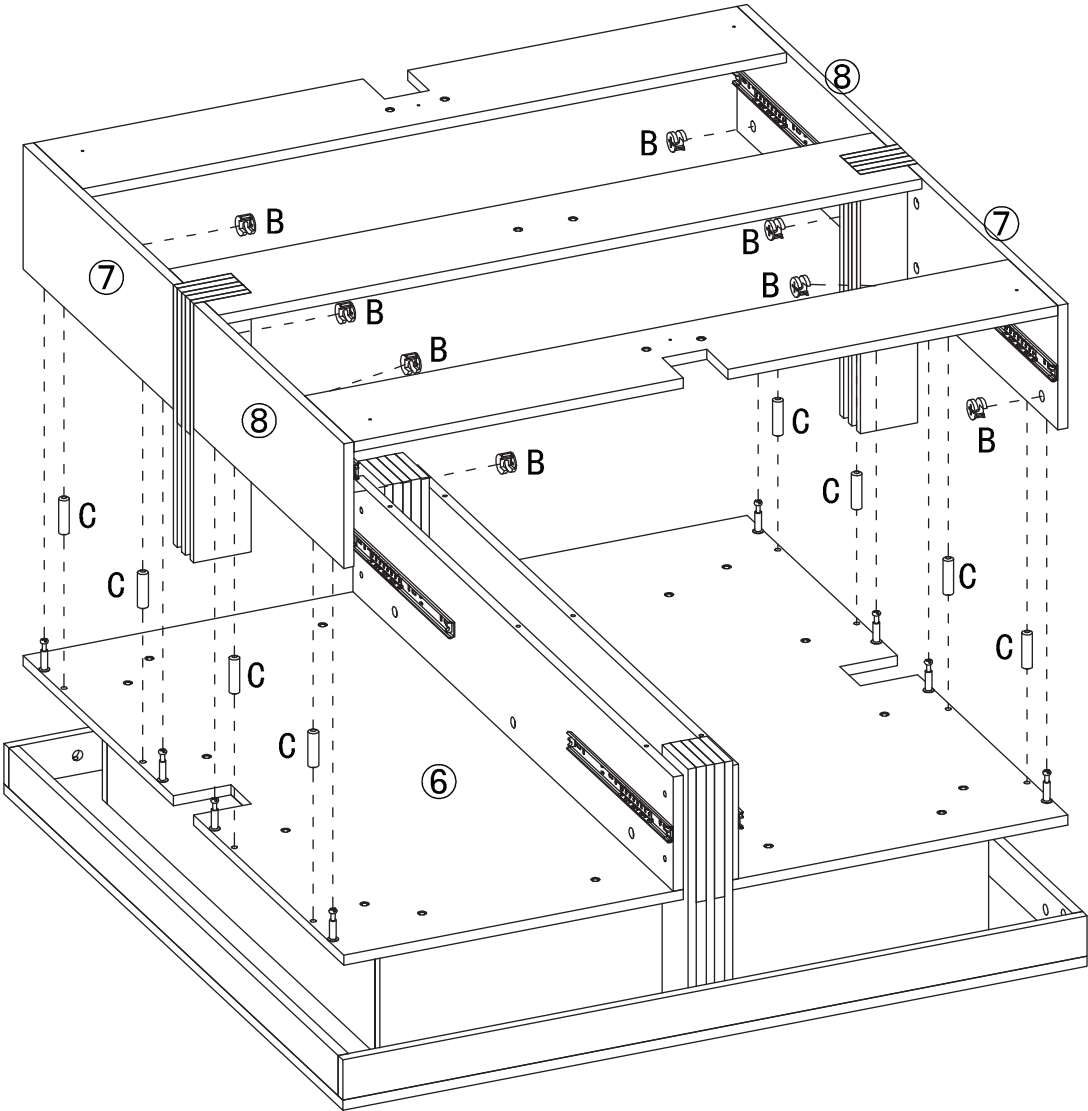


B




$\phi 15 \times 12 \text{mm}$ x8

C




$\phi 8 \times 40 \text{mm}$ x8

STEP18

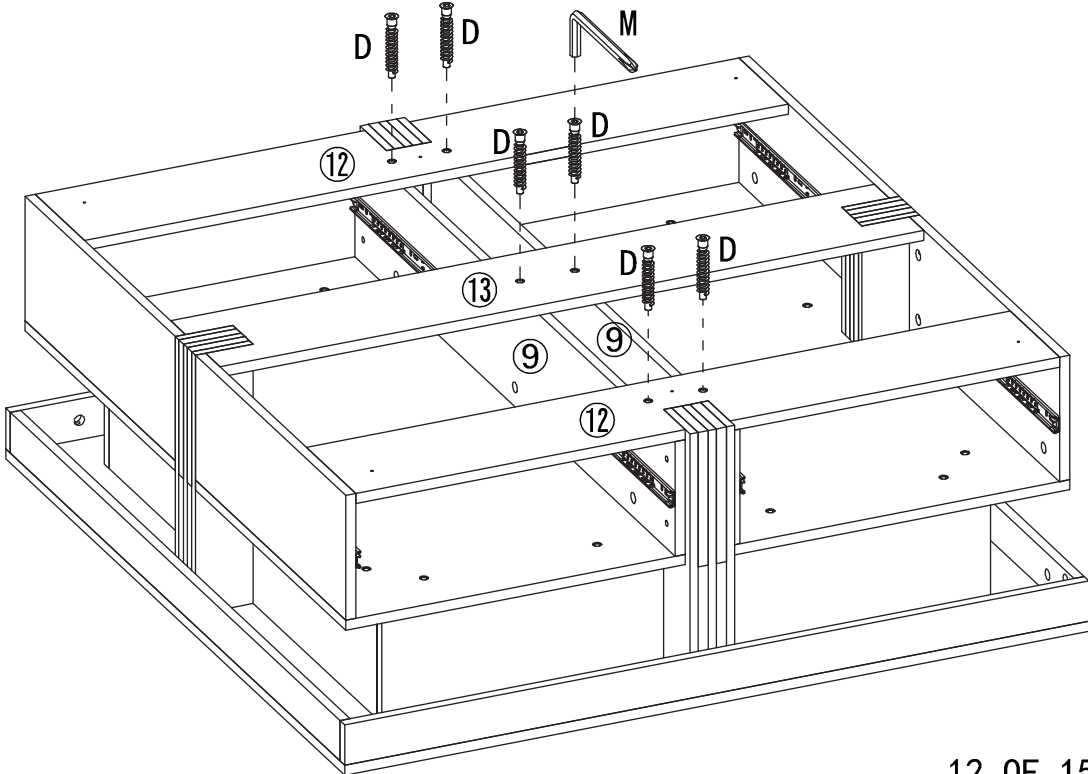


D





5 x 40mm x6

M




M4 x1



STEP19

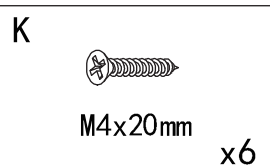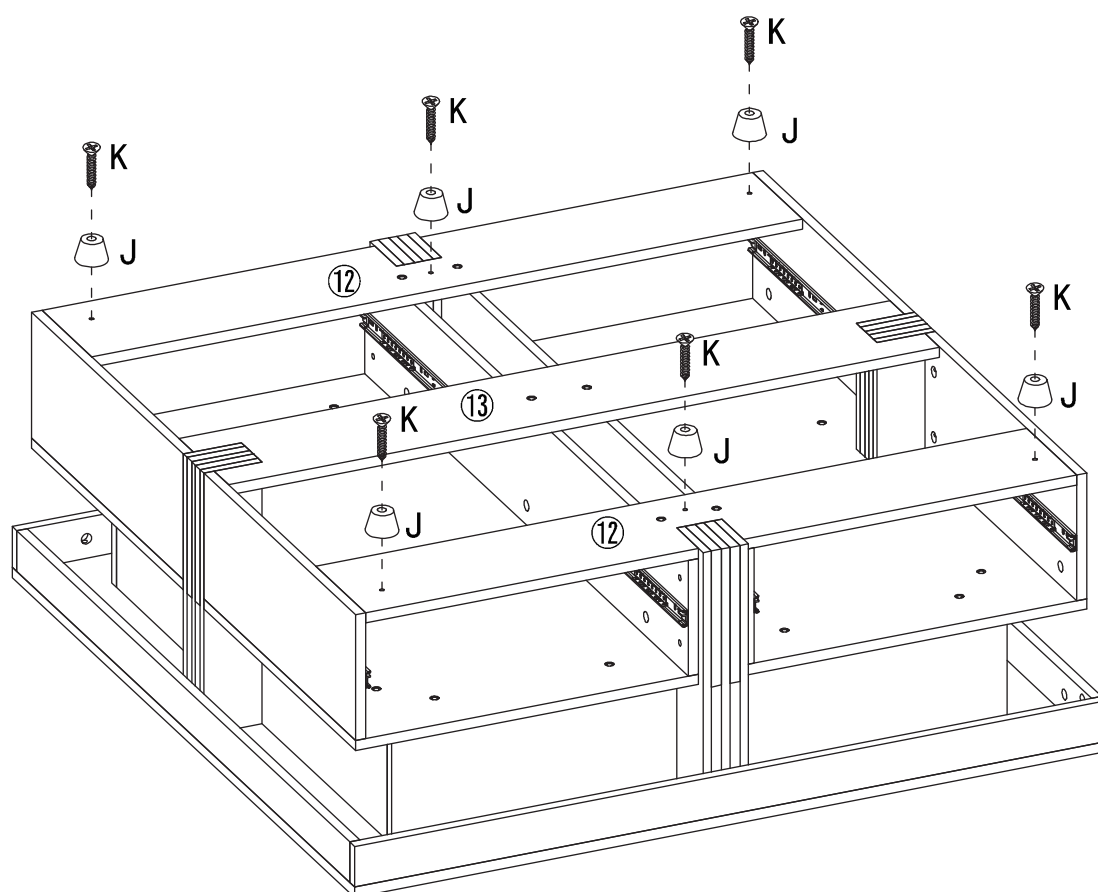


STEP20

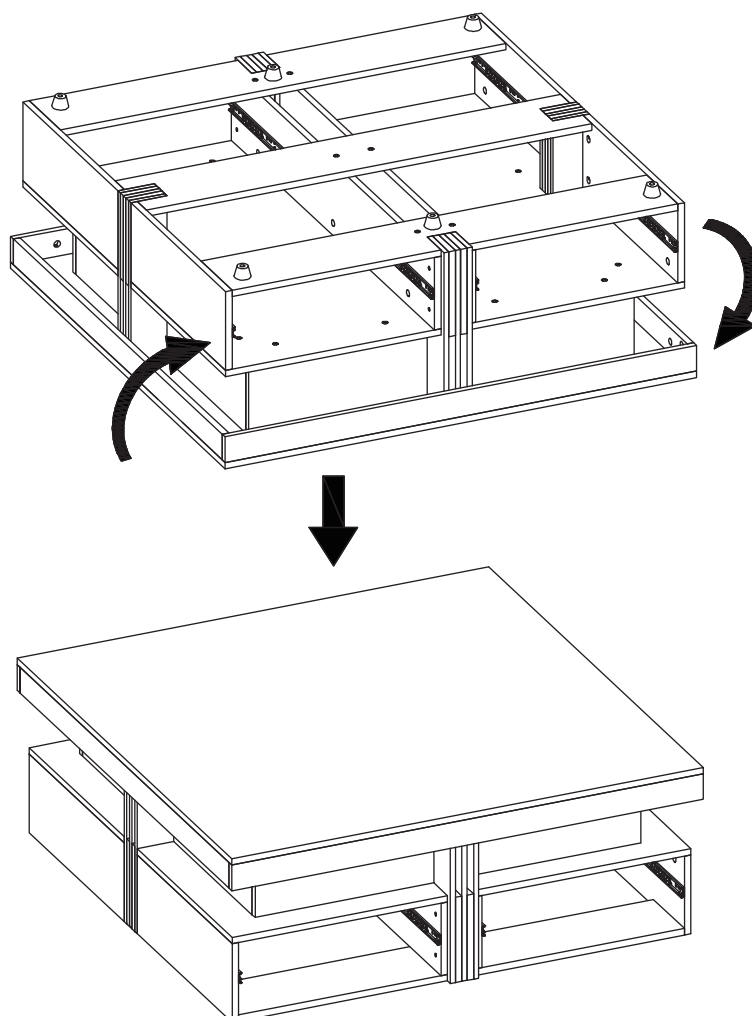

STEP21

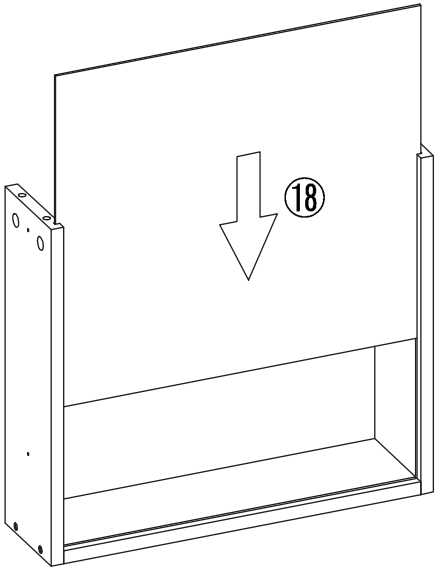
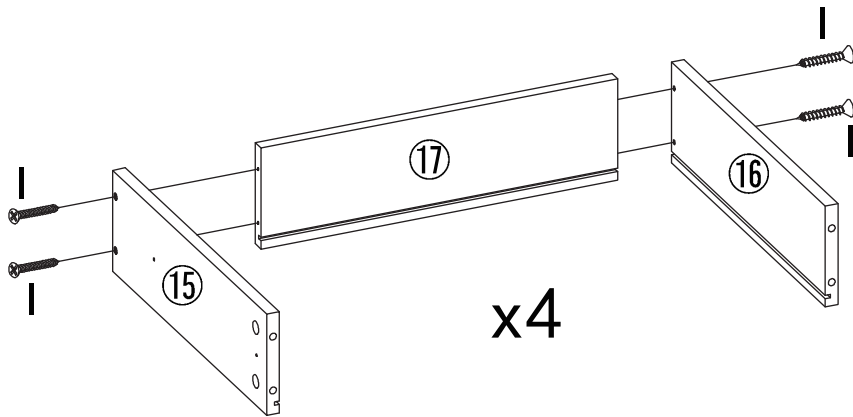


I




M4x35mm x16

STEP22

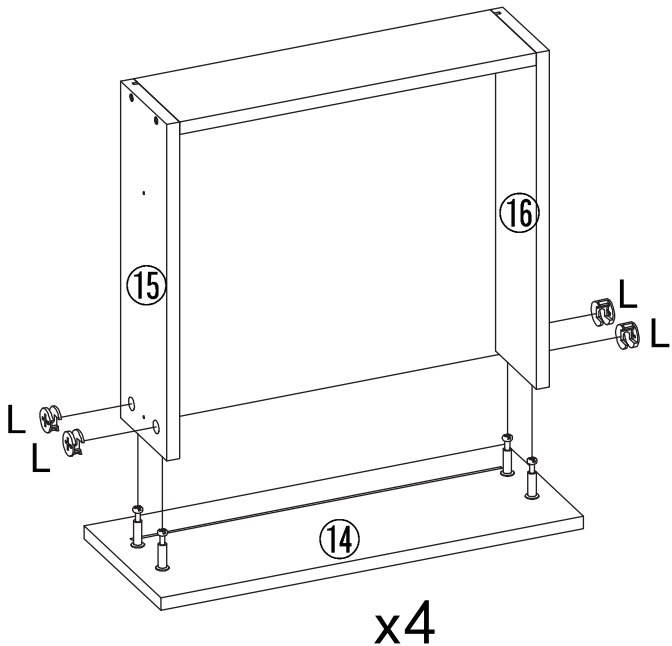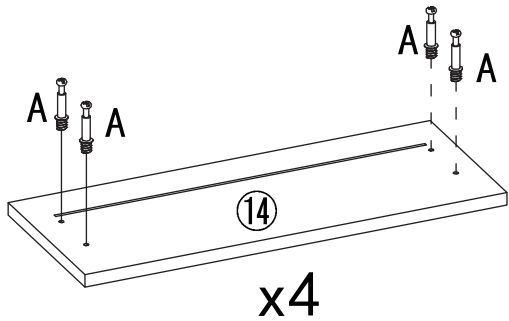


A




6x40mm x16

L



ø15x9.5mm x16

STEP23

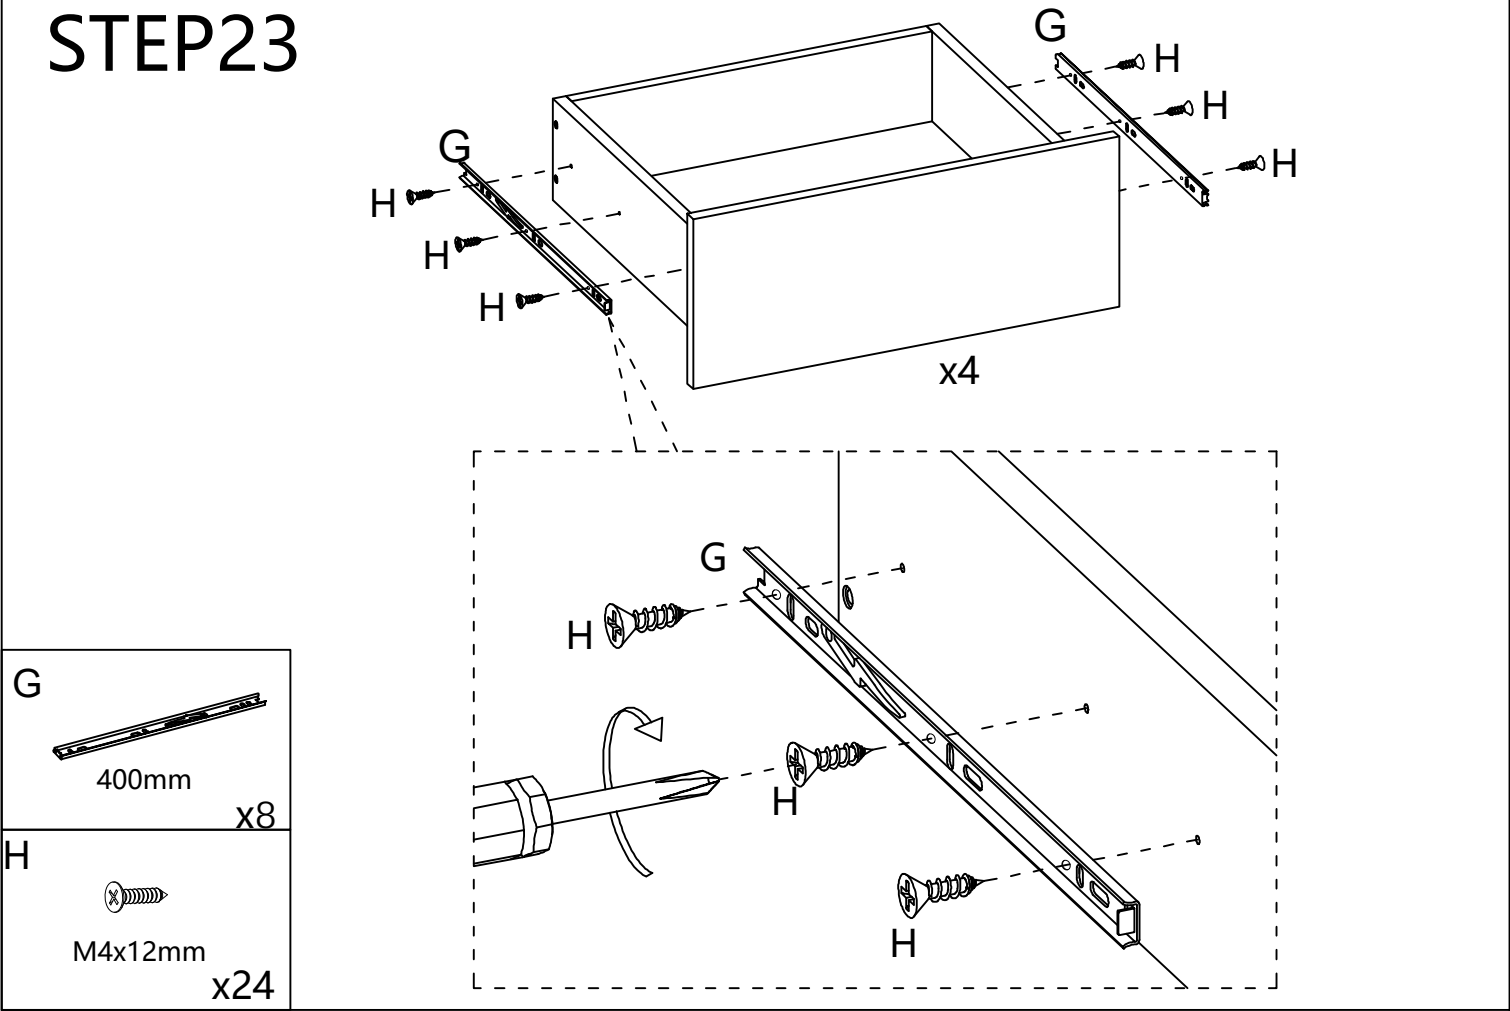

STEP24

