


ASSEMBLY INSTRUCTIONS

BATH VANITY-CABINET

SKU - N725P350849


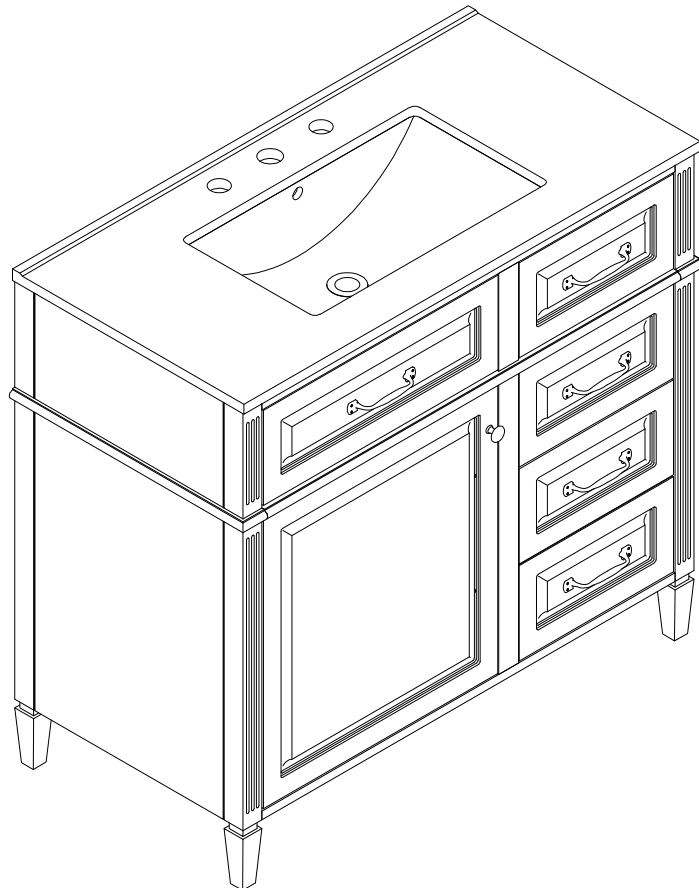


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED


***Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe!!!**
*** Please assemble on a clean soft surface to avoid damage.**

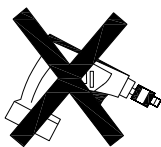


+

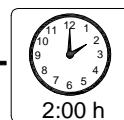

Tools Required



(Not included)




(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE

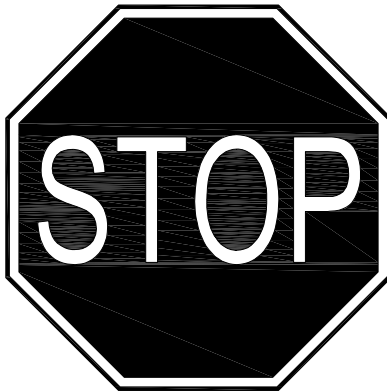

**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

**If you find that you have any trouble with assembly or
missing or damaged parts please contact the seller.**

Before Installation

Important-Please read these instructions fully before starting assembly


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.

Cam Lock Assembly Instructions










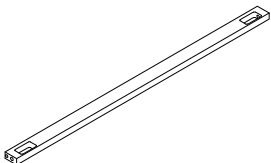
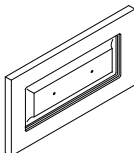


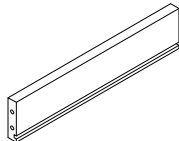
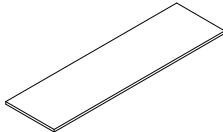
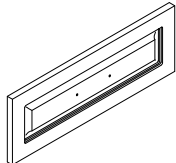
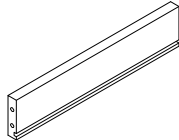
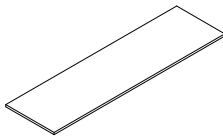

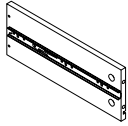
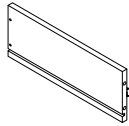
	<p>Diagram A</p>	<p>Insert Cam Ball into hole as shown in diagram A.</p>
	<p>Diagram B</p>	<p>Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the cam Lock to be misaligned and unable to interlock properly.</p>
	<p>Diagram C</p>	<p>Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.</p>
<p>Connect the panels together.</p>		
<p>Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.</p>		
<p>To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i></p>		

Detail View

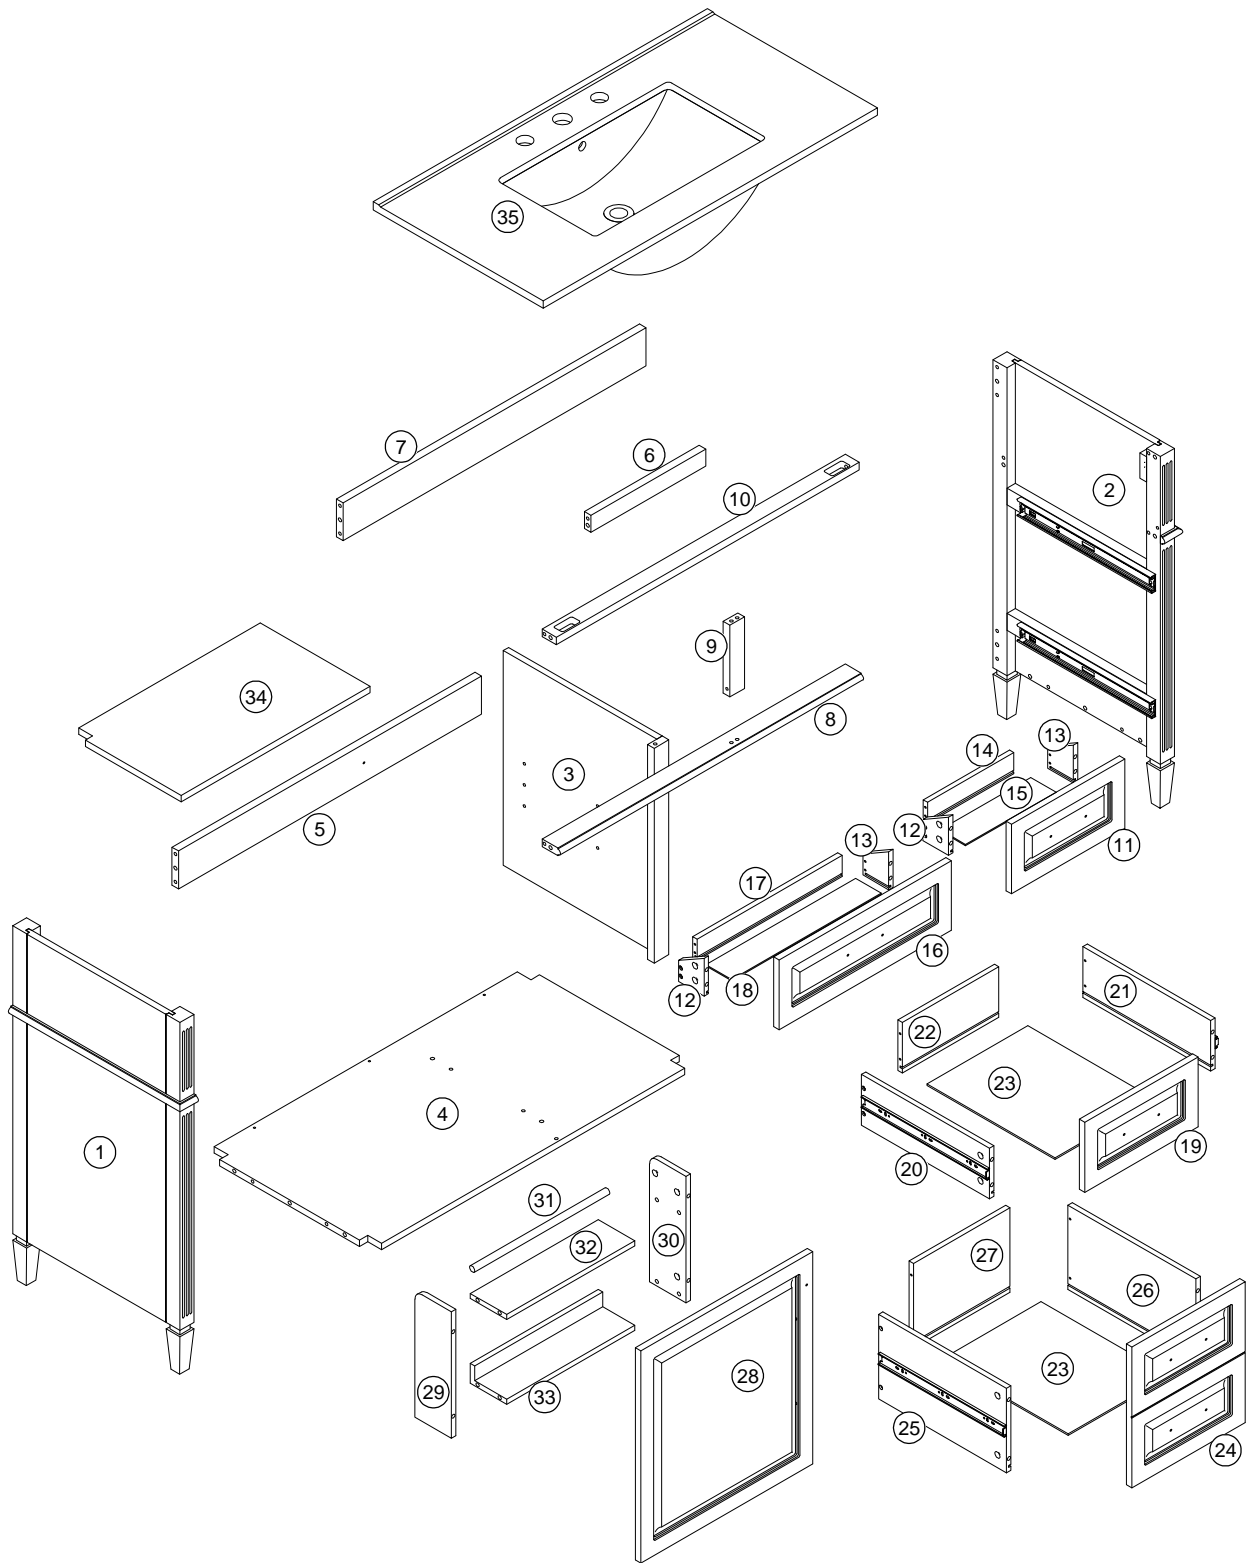


Identifying the Hardware-Identify the hardware using the illustrations below.

SKU -N725P350849

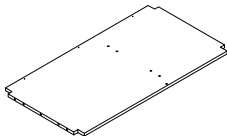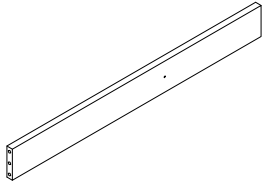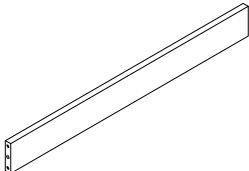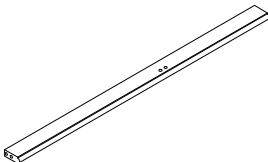1  Side Frame (L) - 1pc	2  Side Frame (R) - 1pc	3  Middle Panel - 1pc
4  Bottom Panel - 1pc	5  Bottom Rear Crossbar - 1pc	6  Side Rear Crossbar - 1pc
7  Top Rear Crossbar - 1pc	8  Middle front Crossbar - 1pc	9  Vertical Front bar - 1pc
10  Top Front Crossbar - 1pc	11  Flip Drawer Face (R) - 1pc	12  Drawer Side Panel (L) - 1pc
13  Drawer Side Panel (R) - 1pc	14  Drawer Back Panel - 1pc	15  Drawer Bottom Panel - 1pc
16  Flip Drawer Face (L) - 1pc	17  Drawer Back Panel - 1pc	18  Drawer Bottom Panel - 1pc
19  Drawer Face - 1pc	20  Drawer Side Panel (L) - 1pcs	21  Drawer Side Panel (R) - 1pc


SKU -N725P350849

22




Drawer Back Panel - 1pc

23

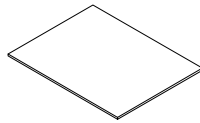


Drawer Bottom Panel - 2pcs

24

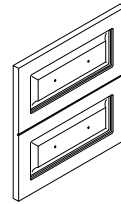


Drawer Face - 1pc

25

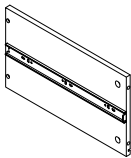


Drawer Side Panel (L) - 1pcs

26

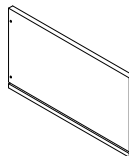


Drawer Side Panel (R) - 1pc

27



Drawer Back Panel - 1pc

28



Door Cabinet - 1pc

29



Door Side Panel (L) - 1pc

30




Door Side Panel (R) - 1pc

31




Round Bar - 1pc

32




Door Mid Panel - 1pc

33




Door Bottom Panel - 1pc

34

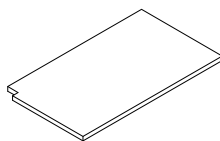








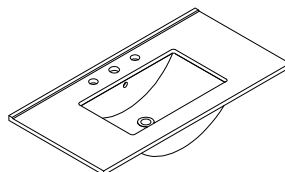













Adjustable Shelf - 1pc

35








Sink - 1pc

Hardware Lists N725P350849

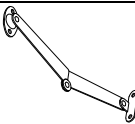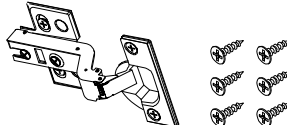A  M6x30mm	B  Ø1/4 "x13x1mm	C  Ø6*32mm
Hex-Head bolt (8pcs)	Washer (8pcs)	Three in on bolts (42pcs)
D  Ø14.5*9.5mm	E  45*12*1mm 45*17*14mm	F  Ø3.5x12mm
Three in one locks (42pcs)	Plastic Door Magnet (3 set)	Flat head screw (26pcs)
G  Ø8x30mm	H  Pin shelf (4pcs)	I  K4mm
Wood dowel (22pcs)	Pin shelf (4pcs)	Allen key (2pcs)
J  Ø4x25mm	K  Handle (1pcs)	L  Handle (5pcs)
Flat head screw (4pcs)	Handle (1pcs)	Handle (5pcs)
M  Ø3.5x15mm	N  Left elbow hinge (1pc)	O  Rotary Hinge(2 sets)
Round head screw (6pcs)	Left elbow hinge (1pc)	Rotary Hinge(2 sets)
P  Ø10x10mm	Q  M4x35mm	R  M4x22mm
Plastic Canopy (16pcs)	Round head screw (16psc)	Handle screw (11pcs)
S  Right elbow hinge (1pc)	T  Damping hinge (2 sets)	U  Anti fall Hardware (2 sets)
Right elbow hinge (1pc)	Damping hinge (2 sets)	Anti fall Hardware (2 sets)

STEP:1

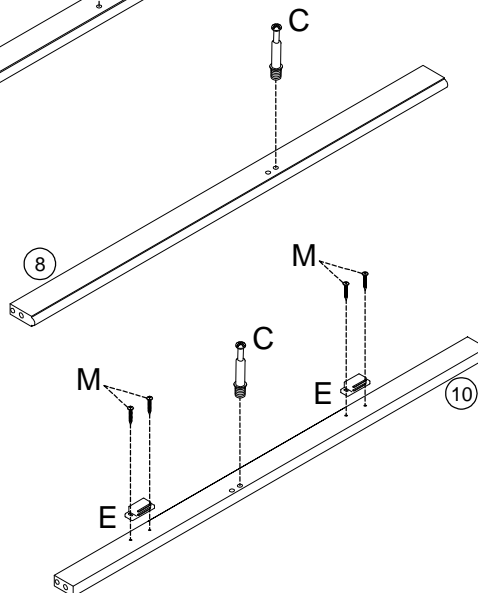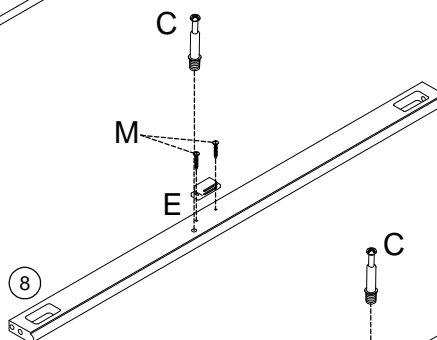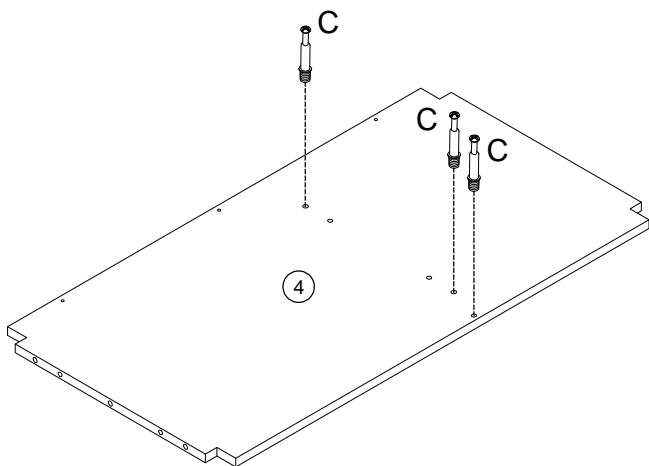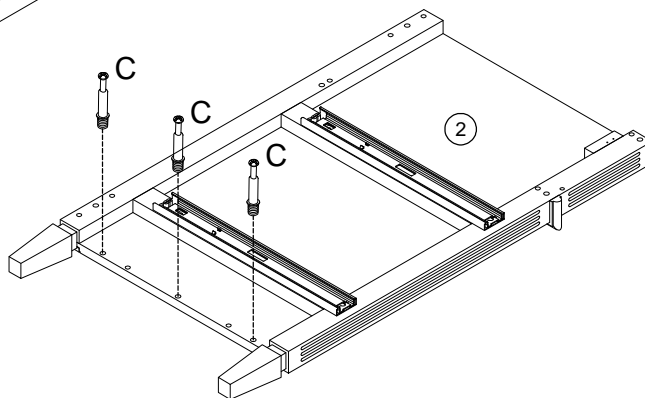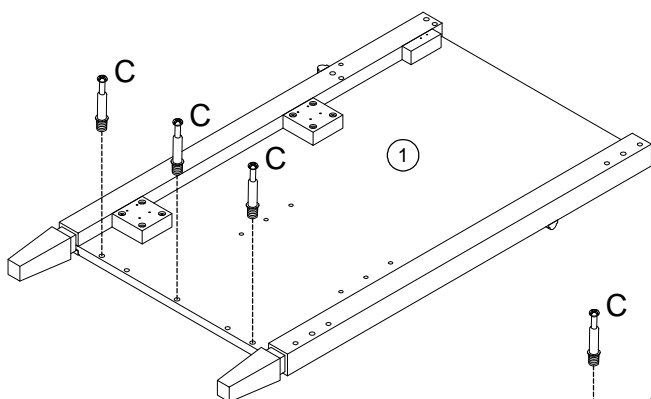


C



12pcs

E






3pcs


M



6pcs

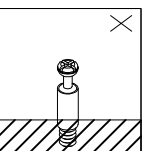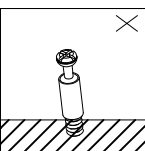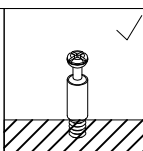

STEP:2

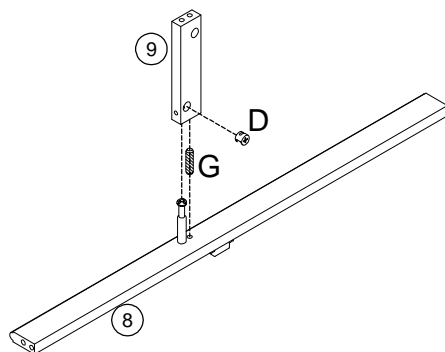

D




1pc

G



1pc

STEP:3

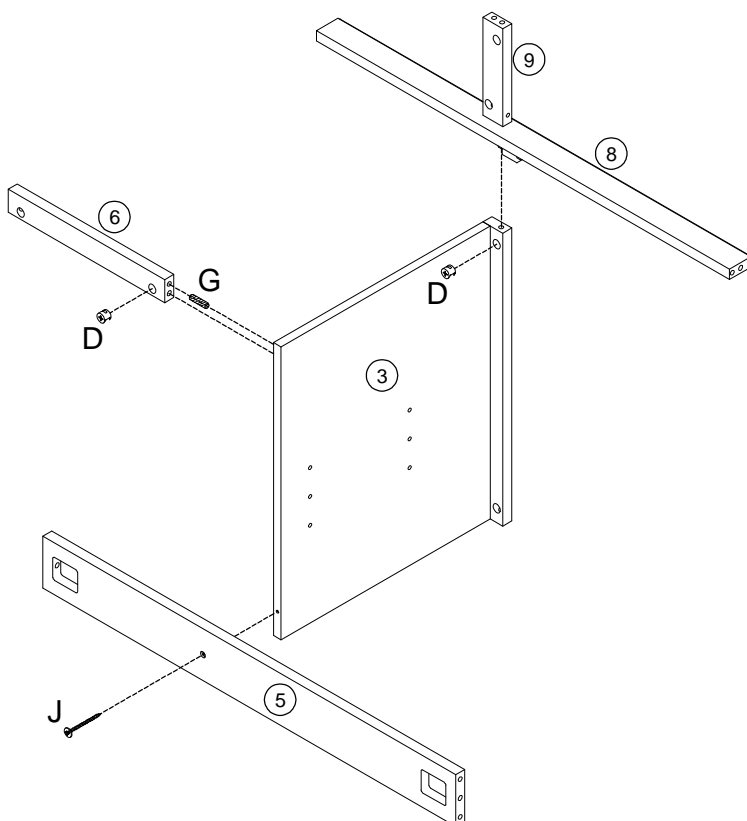

D



2pcs

G




1pc


J



1pc

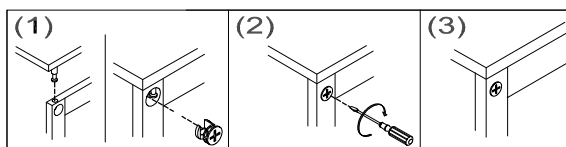

STEP:4

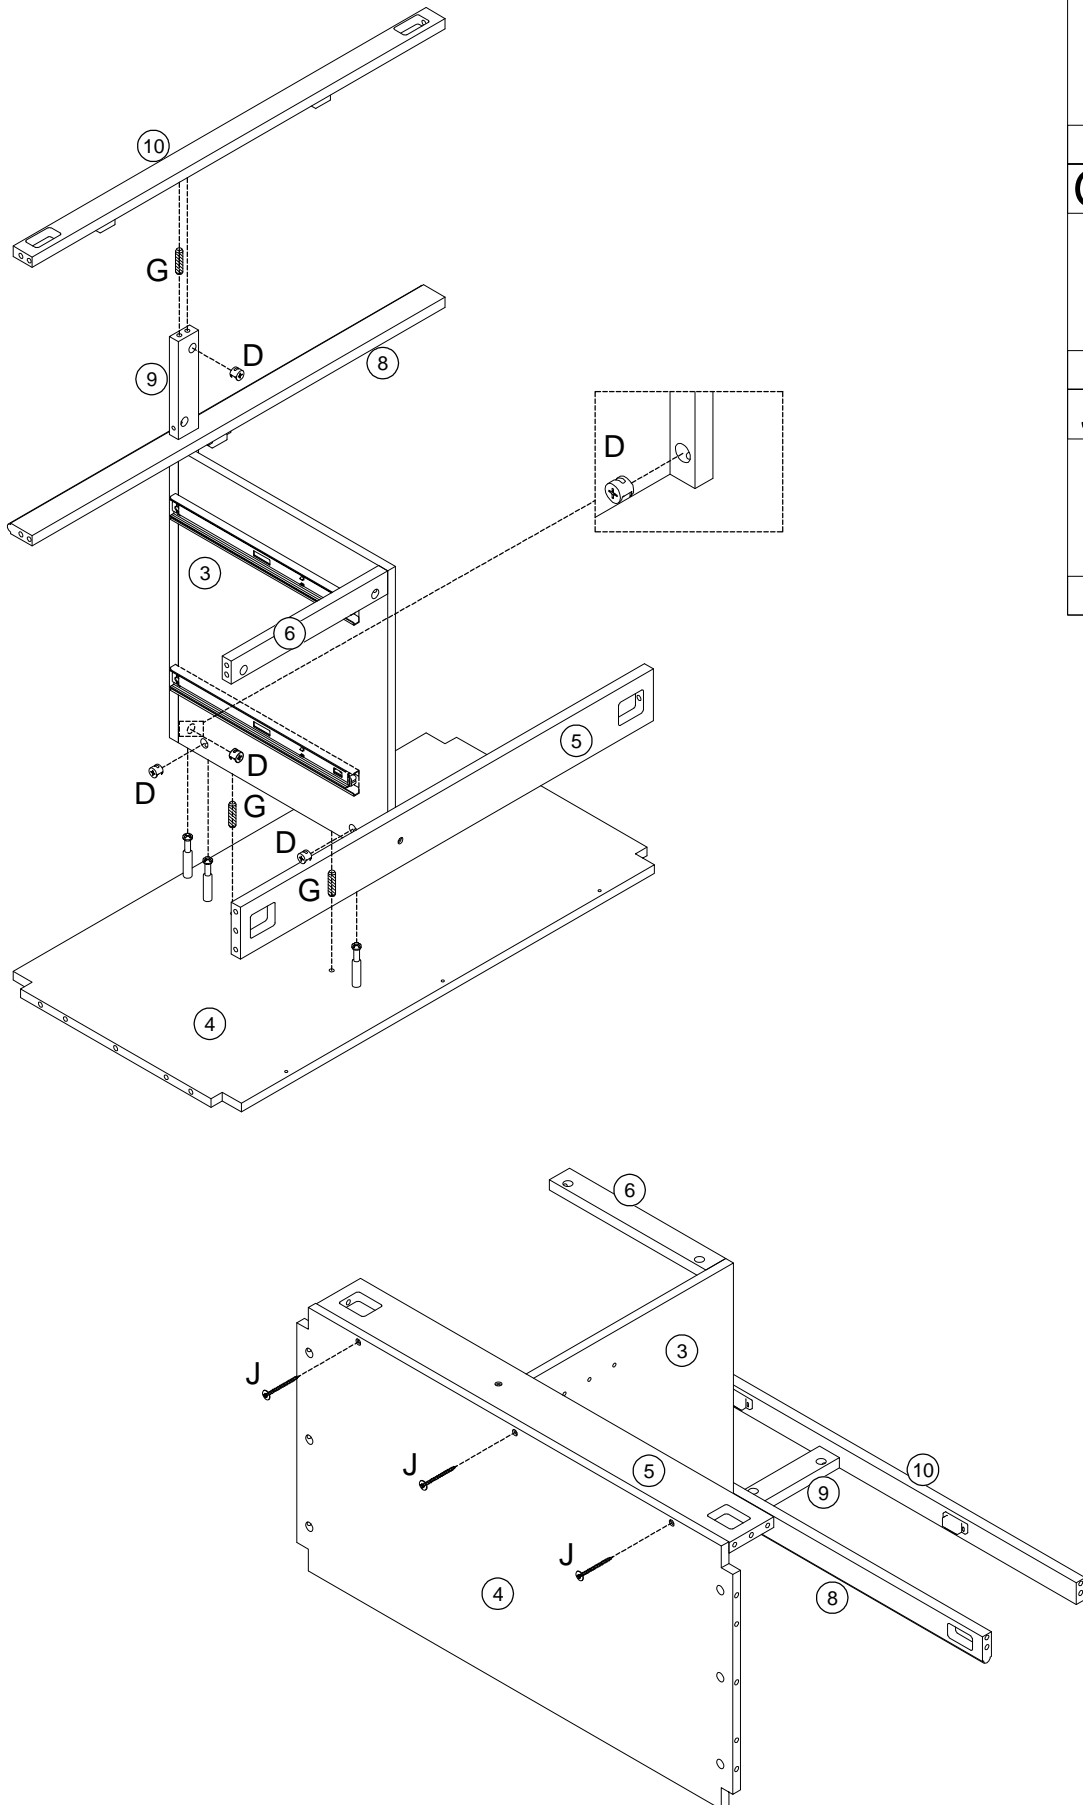

D



4pcs

G




3pcs










J





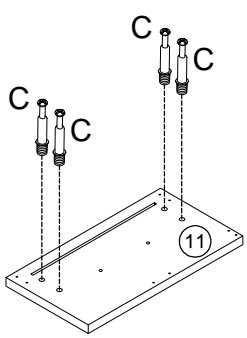


3pcs


STEP:5







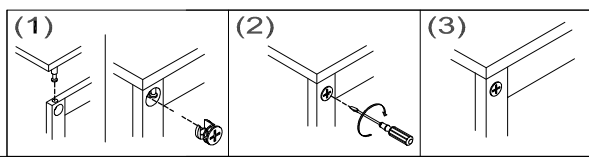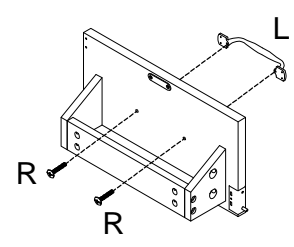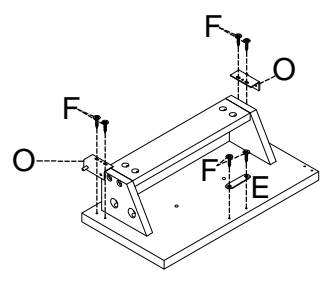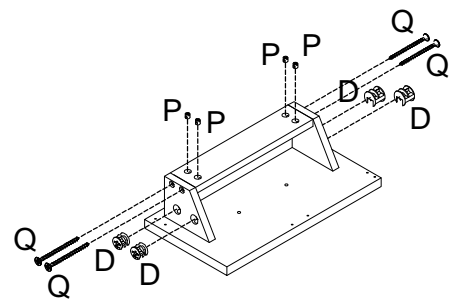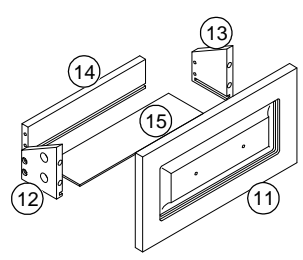

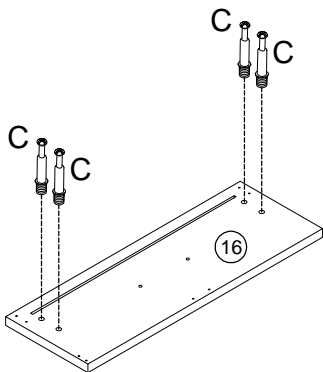







C	D	E	F	P
				
4pcs	4pcs	1pc	6pcs	4pcs
Q	L	R	O	
				
4pcs	1pcs	2pcs	2pcs	







STEP:6






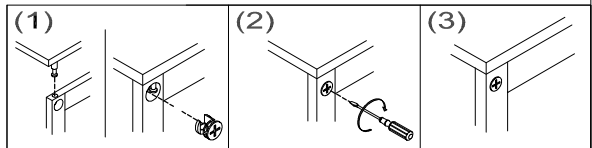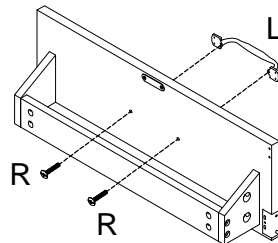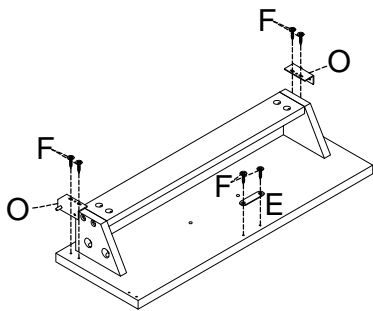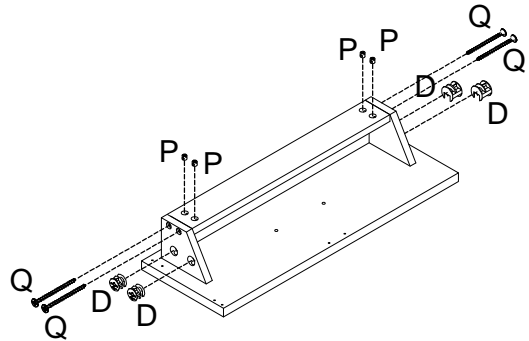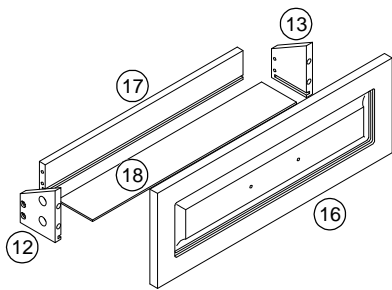C	D	E	F	P
				
4pcs	4pcs	1pc	6pcs	4pcs
Q	L	R	O	
				
4pcs	1pcs	2pcs	2pcs	






STEP:7


A	B
	
4pcs	4pcs
D	G
	
4pcs	9pcs

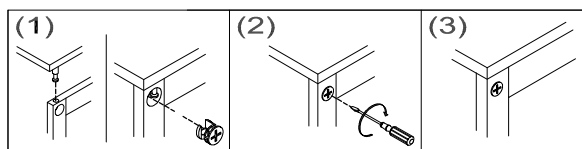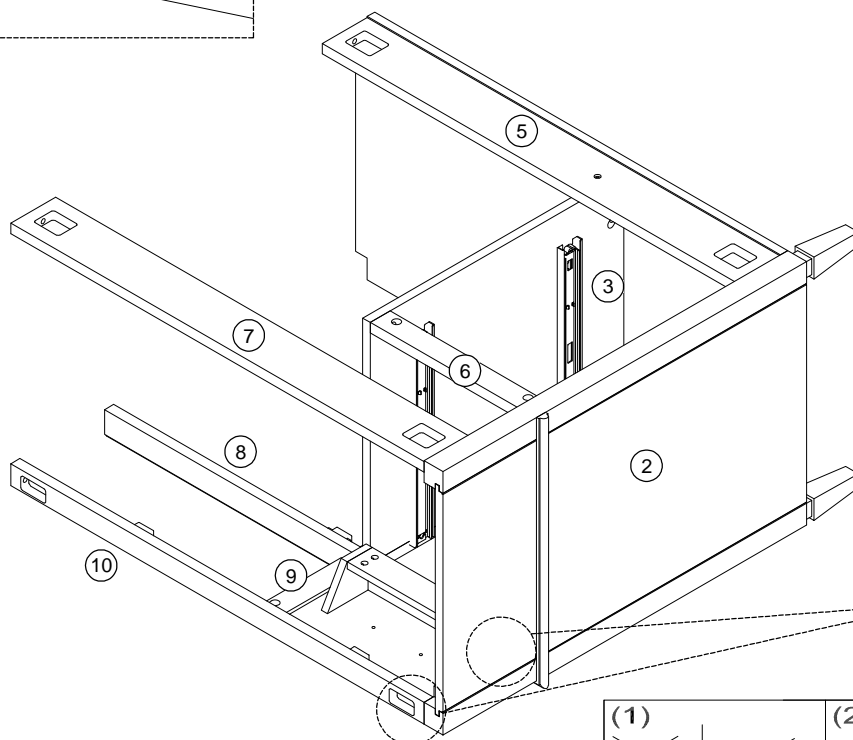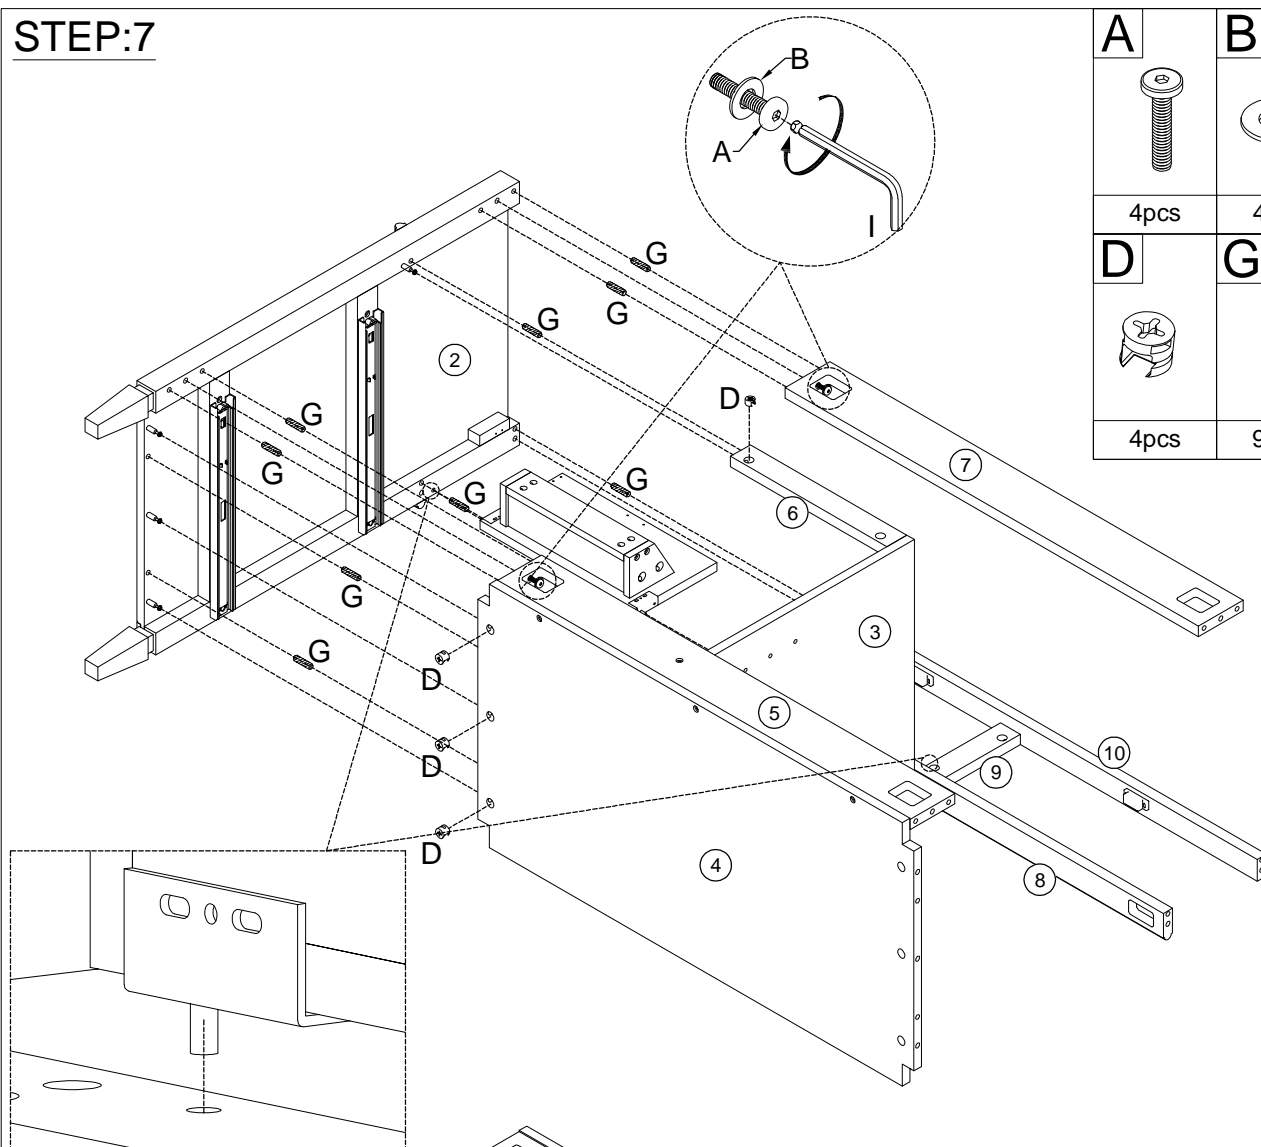

STEP:8

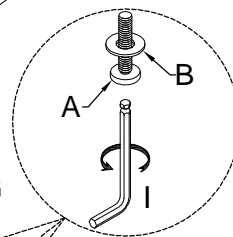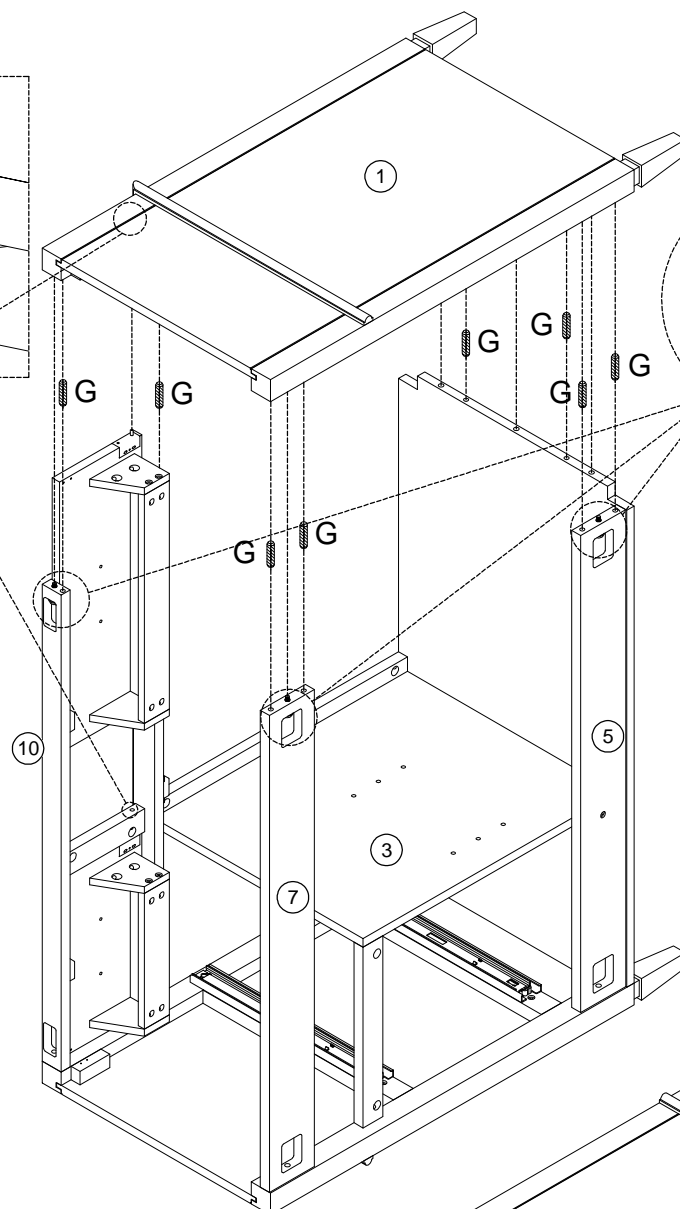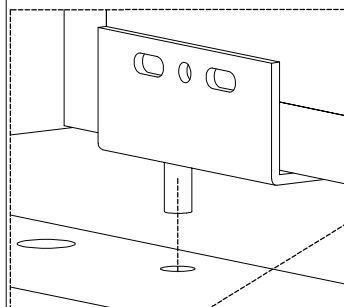

A



4pcs

B



4pcs

D





3pcs




G

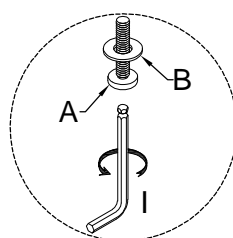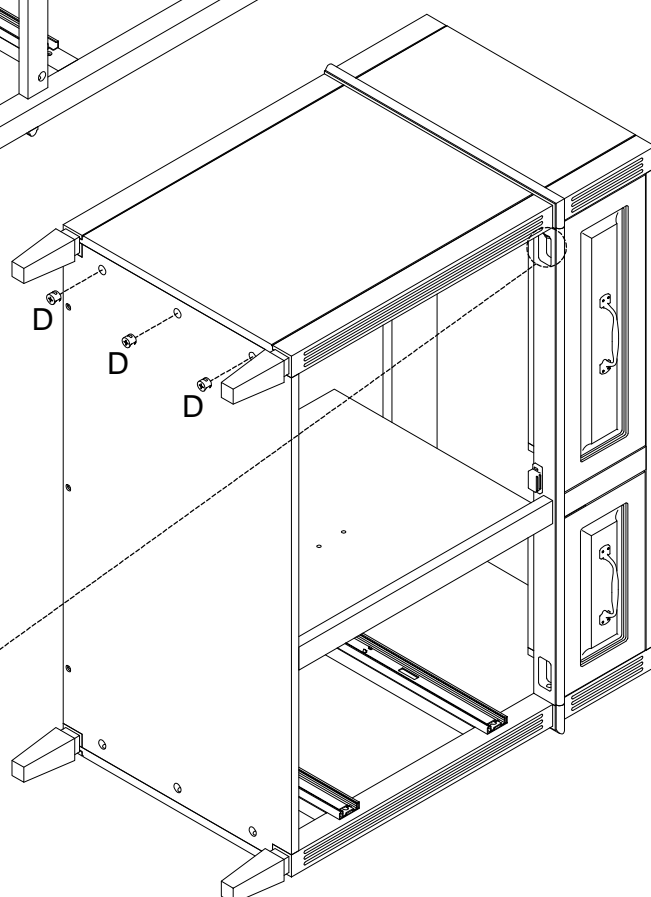


8pcs






STEP:9







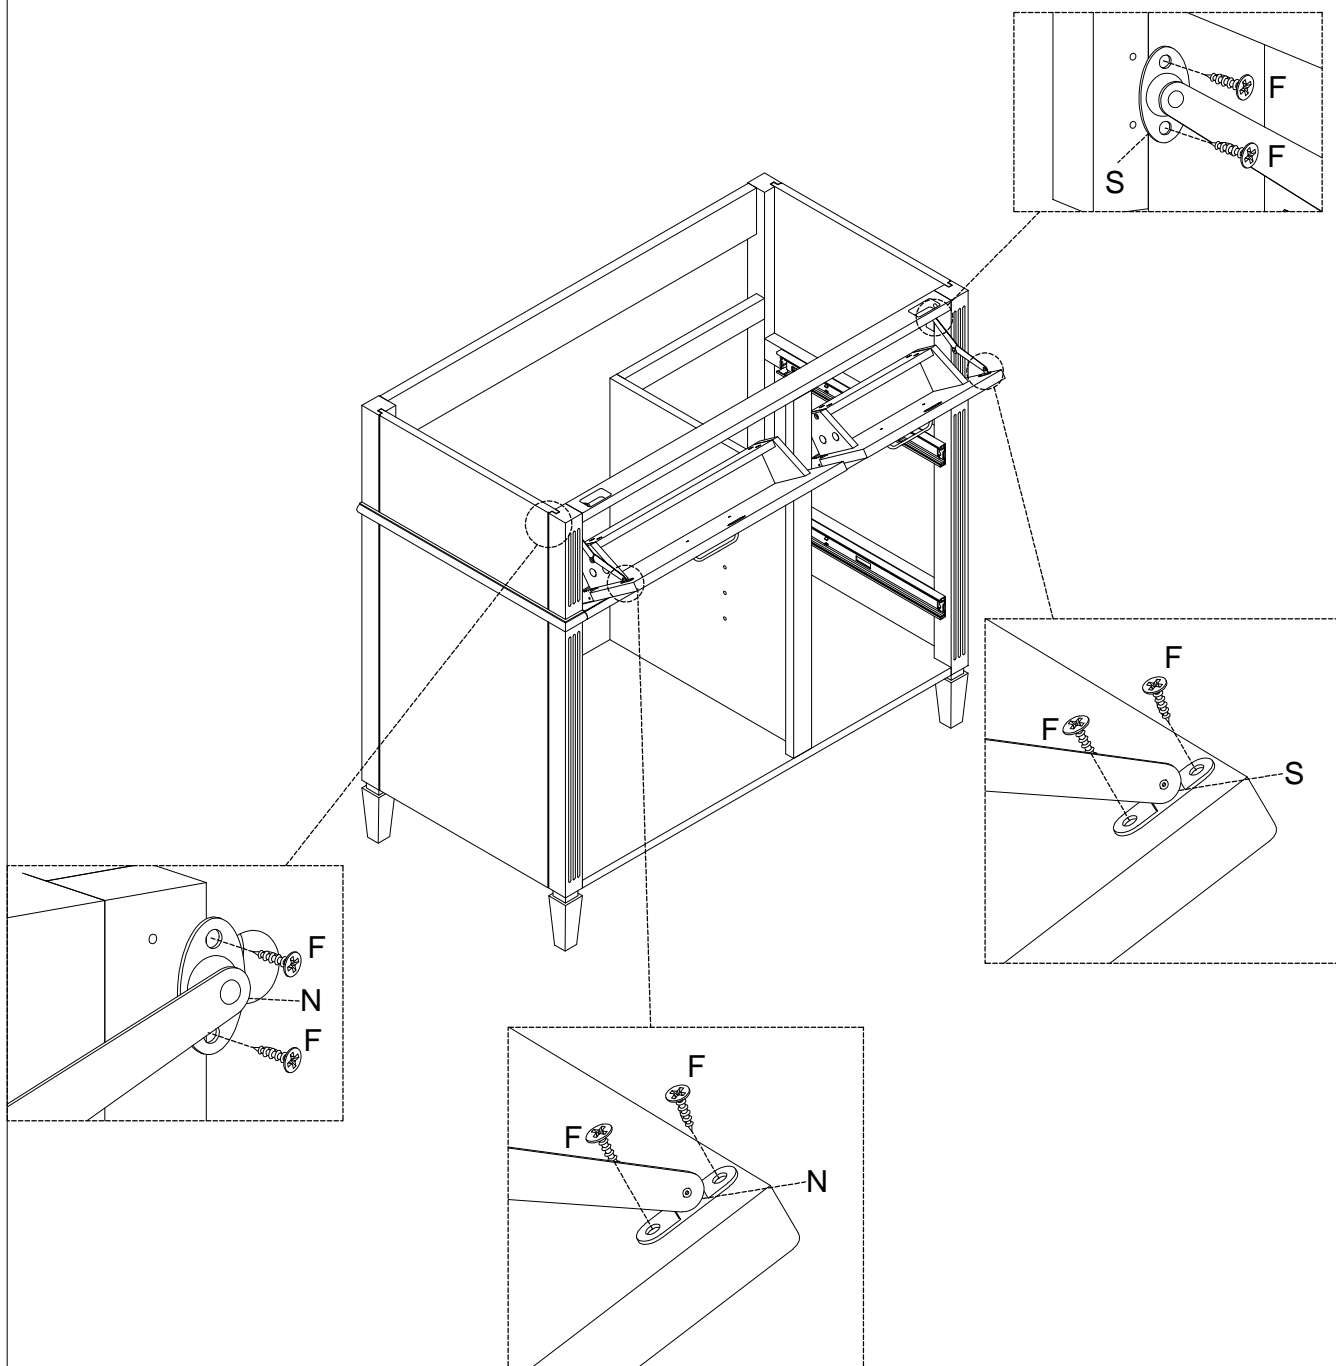F	N	S
		
8pcs	1pc	1pc







*** Please note that hinges U and V are different, please do not install them backwards.**

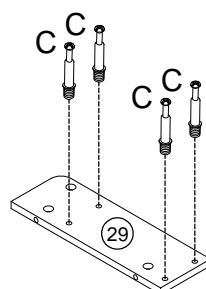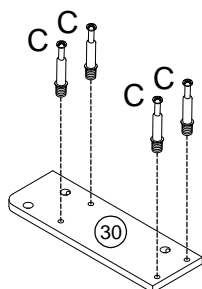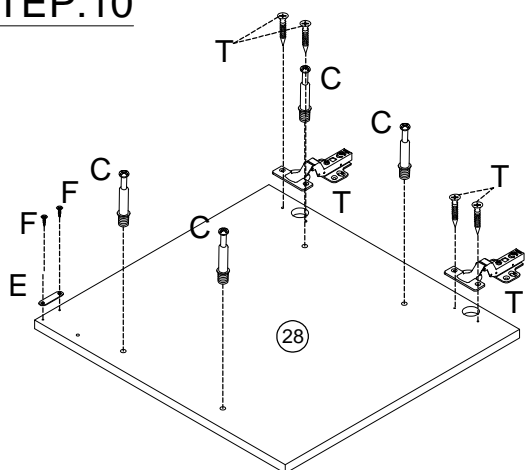
STEP:10





C	D
	
12pcs	12pcs
E	F
	
1pcs	2pcs
T	T
	
2pcs	4pcs

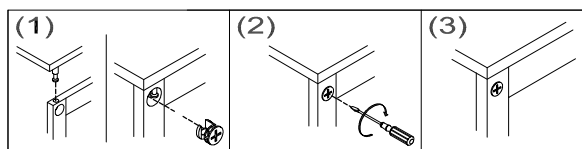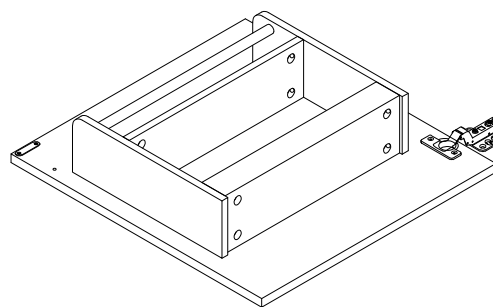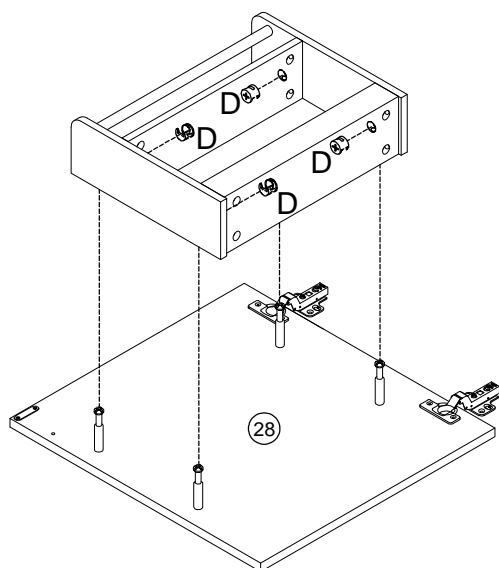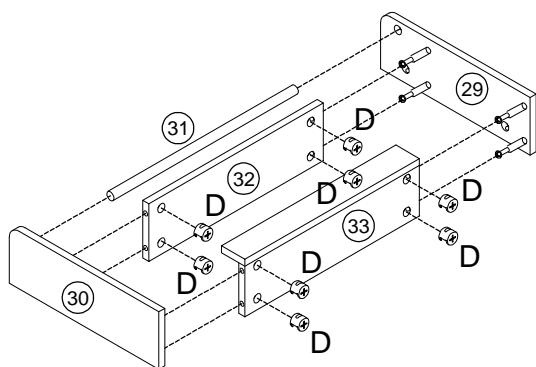



STEP:11

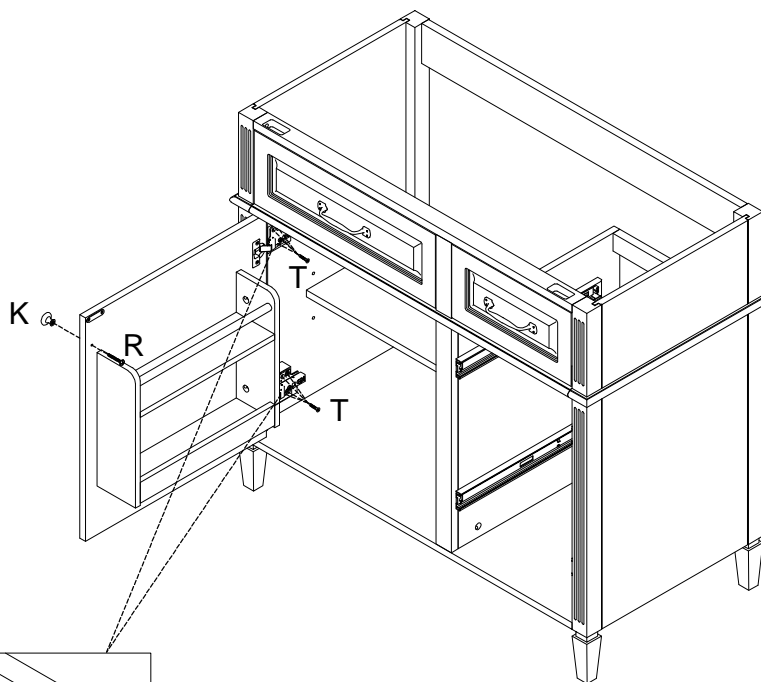



K	R	T
1pc	1pc	8pcs

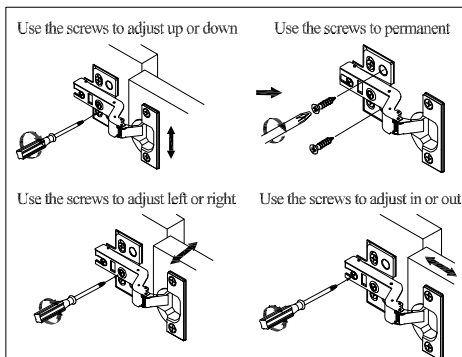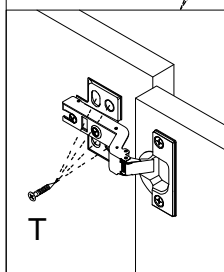


STEP:12

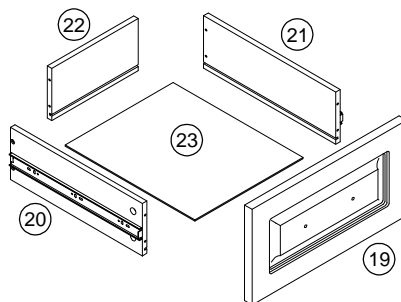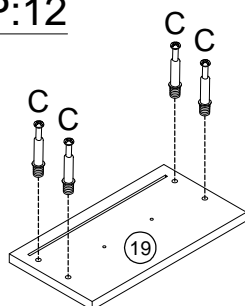







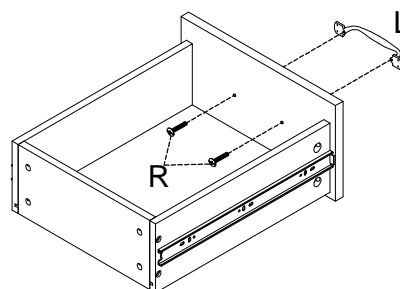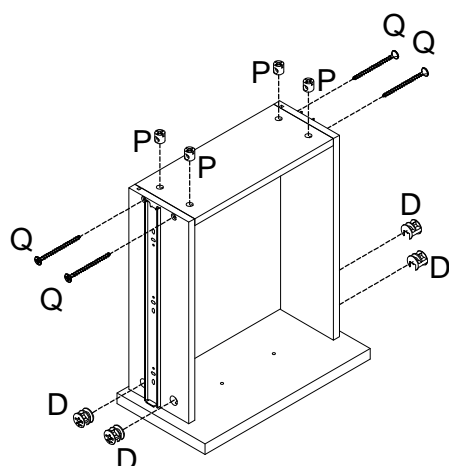
C	D	L
4pcs	4pcs	1pcs
R	P	Q
2pcs	4pcs	4pcs

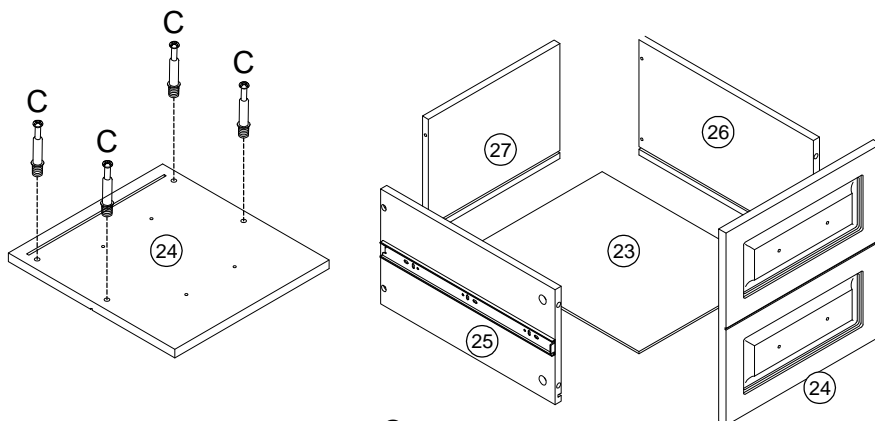


STEP:13





C	D	L
		
4pcs	4pcs	2pcs
R	P	Q
		
4pcs	4pcs	4pcs


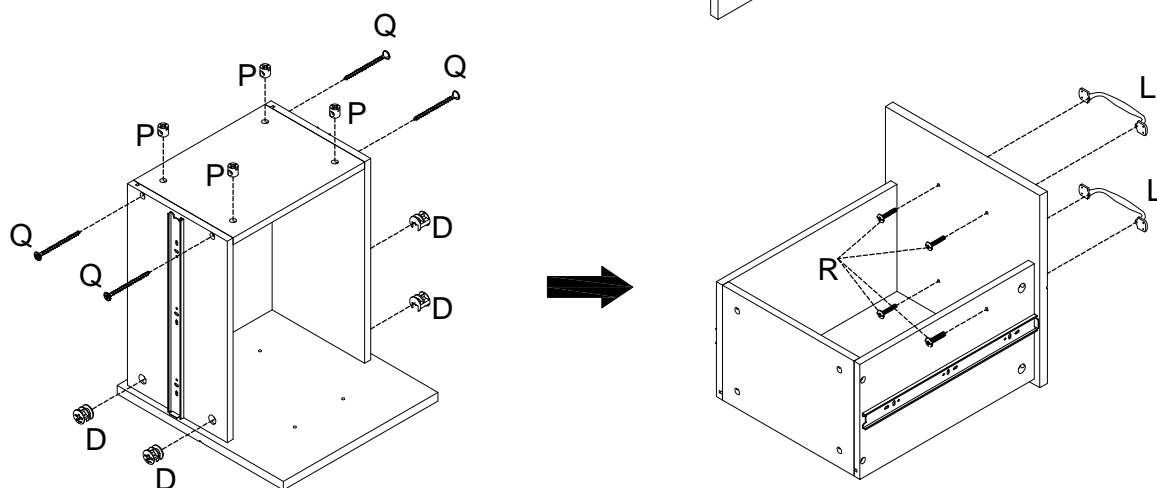


STEP:14

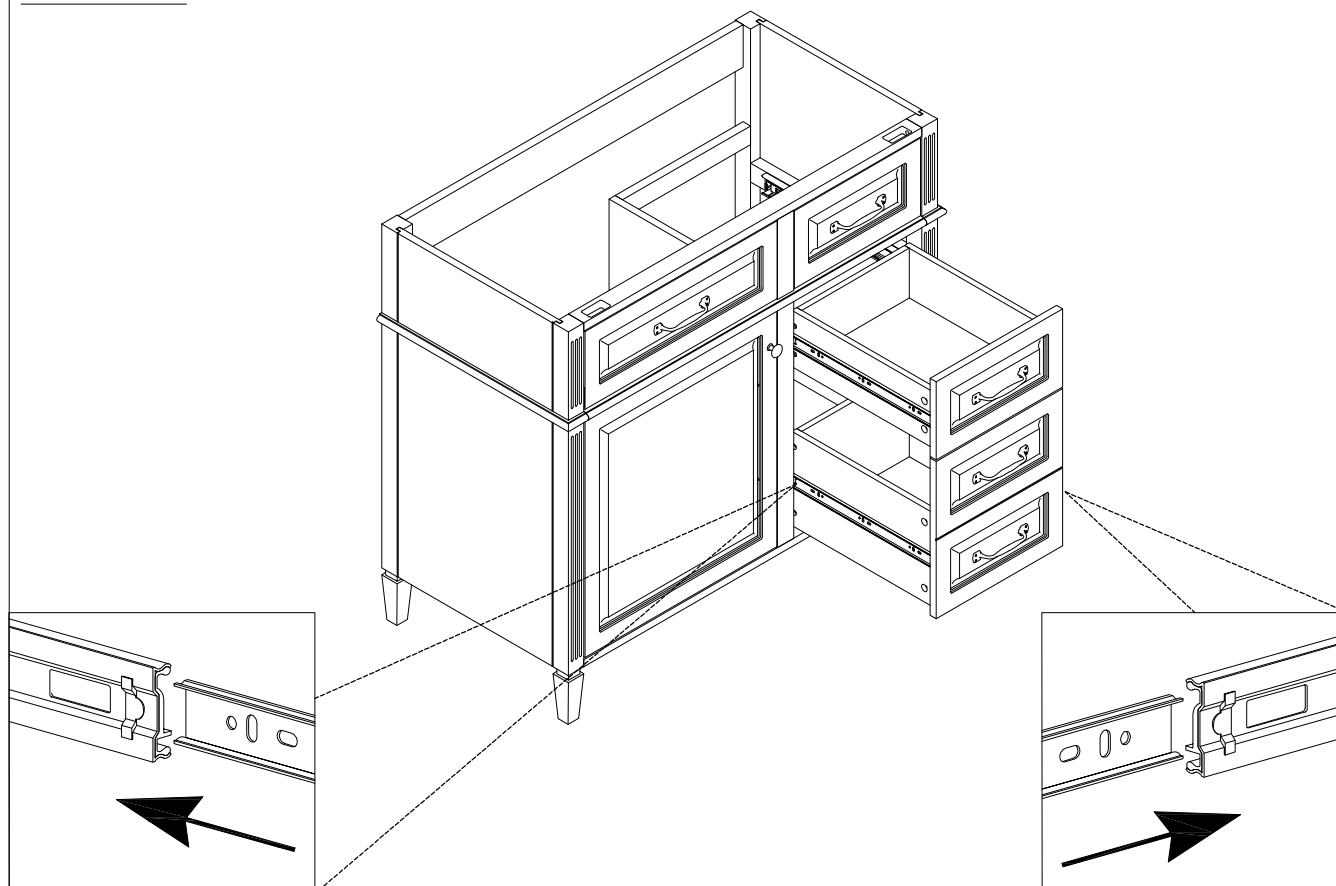


STEP:15


F	H
	
4pcs	4pcs

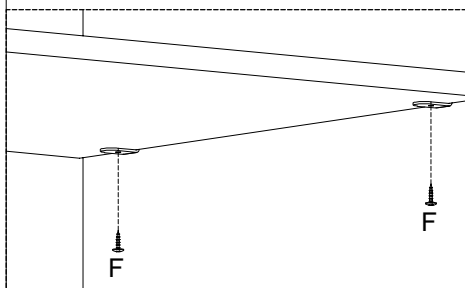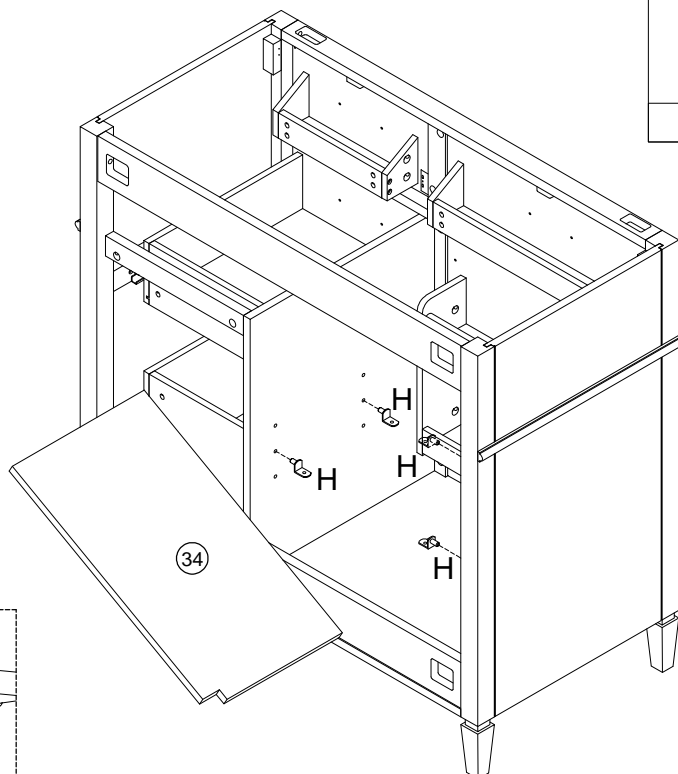



STEP:16

U

2pcs


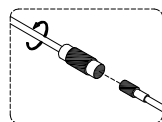
Wall

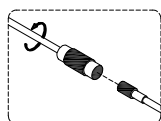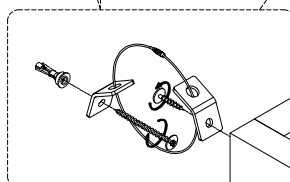

U




U

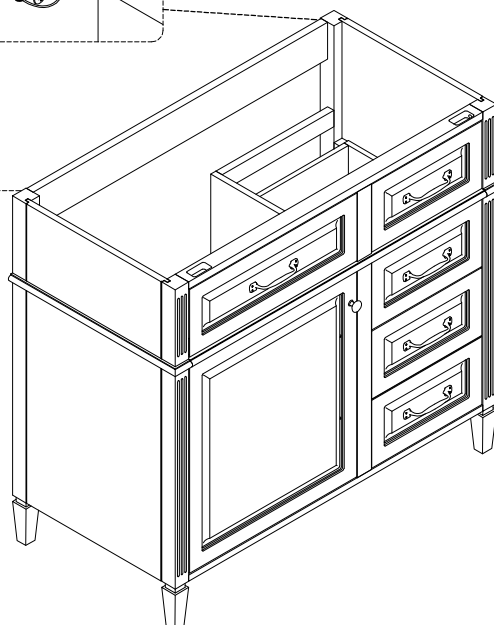
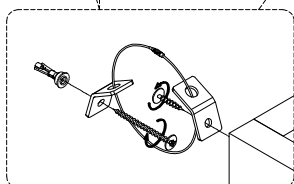


STEP:17


Install the sink on the cabinet with glue.
Let stand for 24 hours

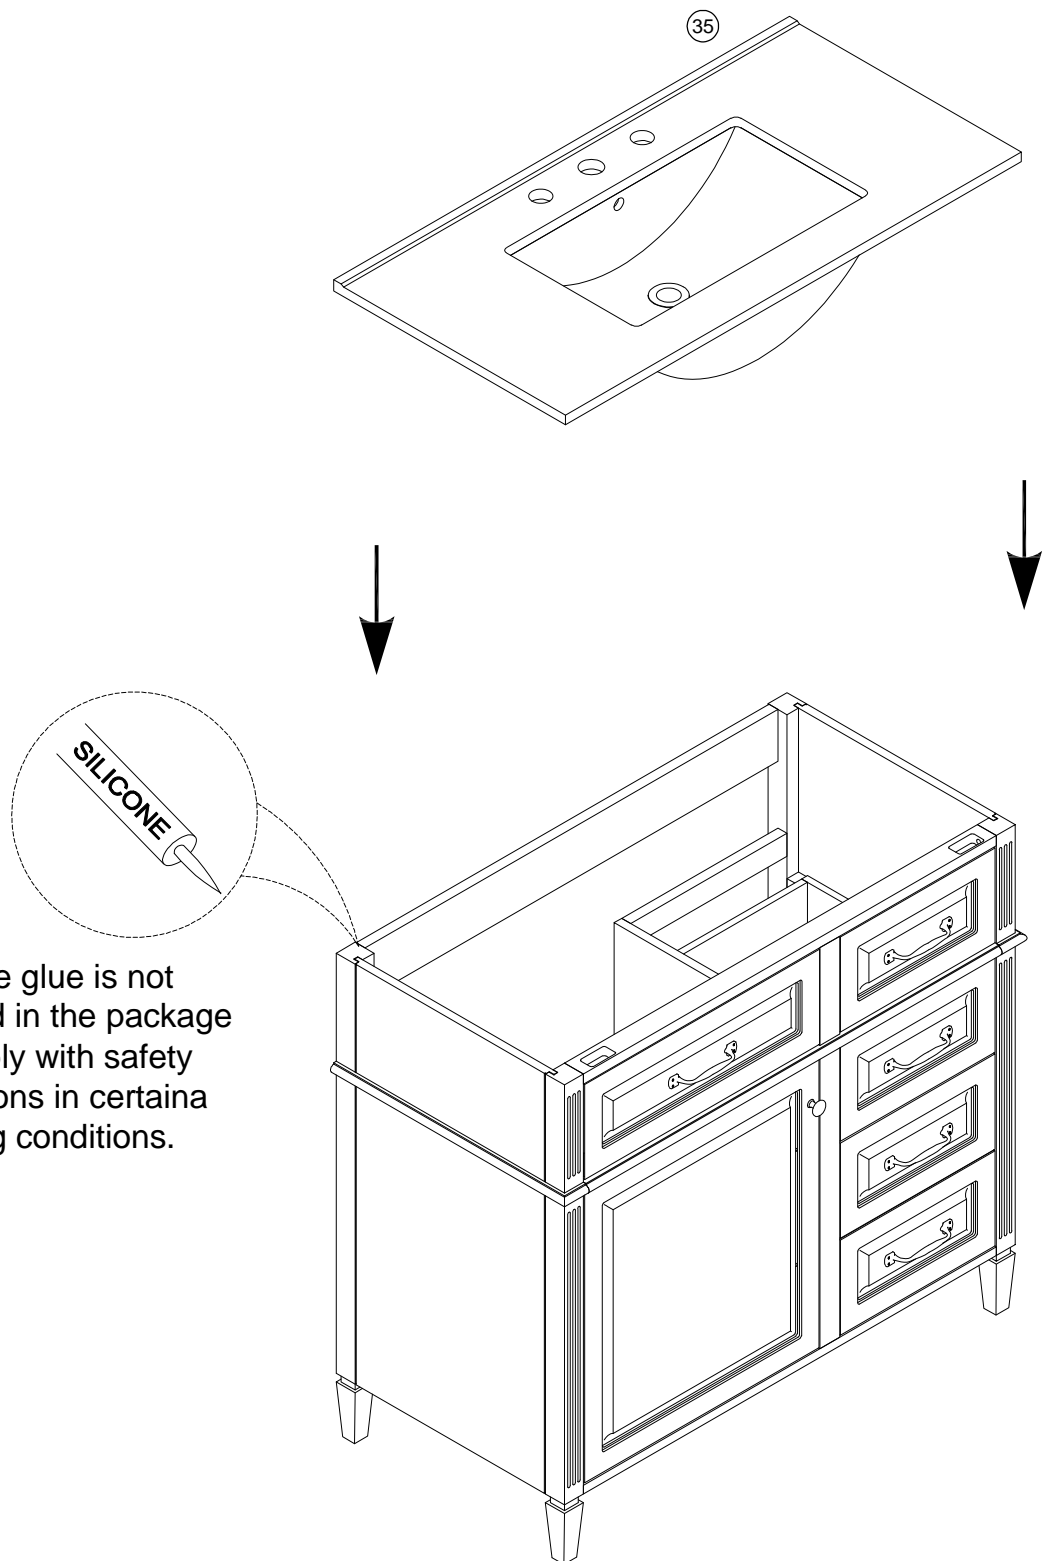

*Silicone glue is not included in the package to comply with safety regulations in certain shipping conditions.

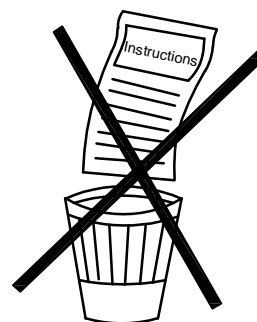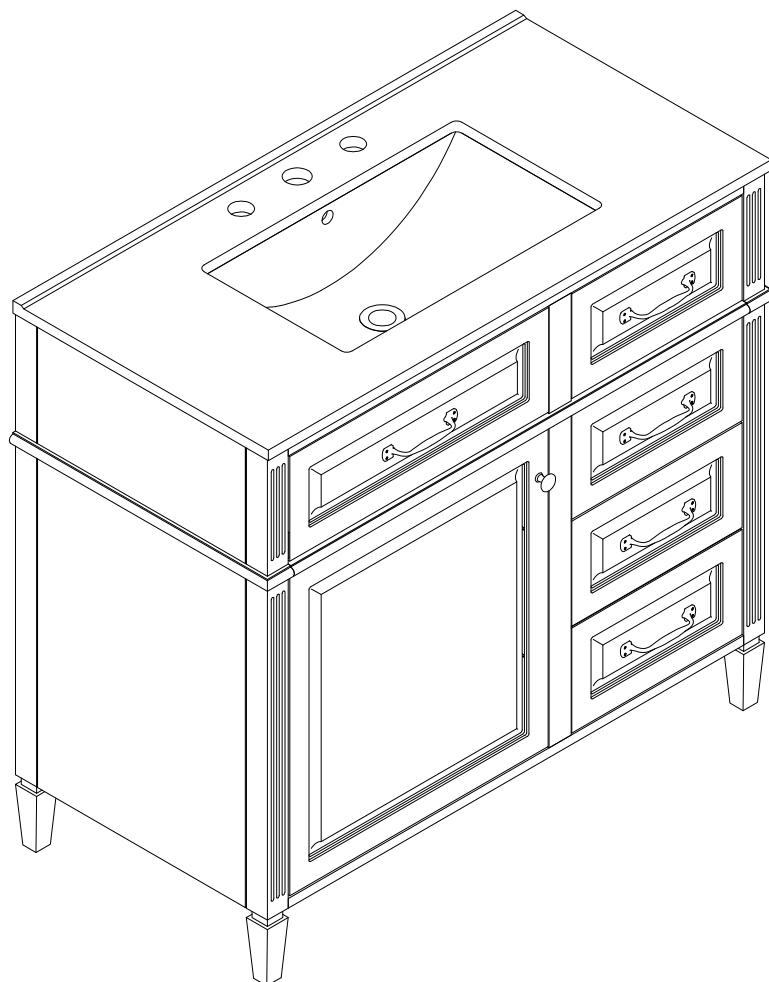

HINGE ADJUSTMENTS

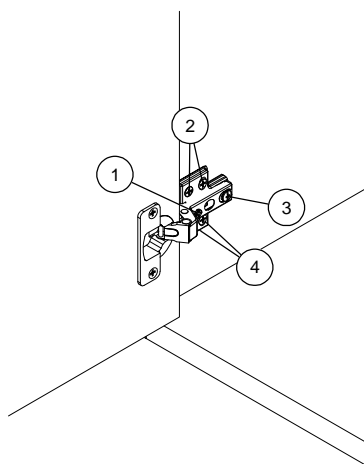


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

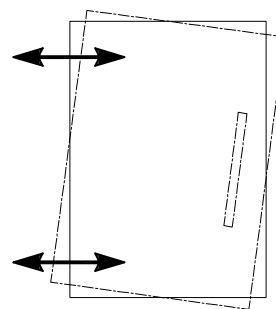


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

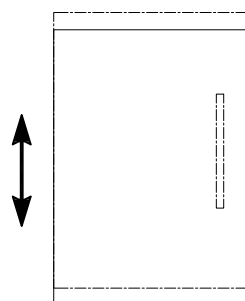

③ Forward and back adjustment

