












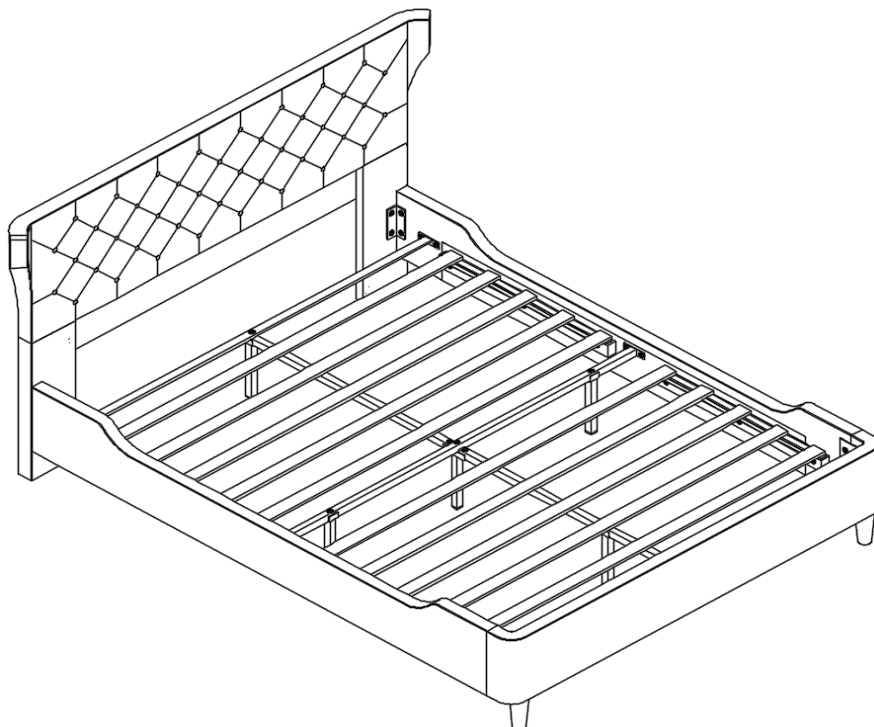
Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  • Not for commercial use. For residential use only.
 - ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  • Do not put hot items directly on furniture surface.
 - ⊘  • Do not clean furniture with harsh cleansers or polish.
 - ⊘  • Do not place furniture under direct sunlight.
 - ⊘  • Do not place furniture near heating or cooling vents.
 - ⊘  • Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  • Do not place furniture outside . For indoor use only.
 - ⊘  • Stains may be removed with mild soap solution and damp cloth.
 - ⊘  • Children should not climb or jump on the furniture.
-
- ✓  • Dust and pick-up spills using a clean, non-colored, lint-free cloth.

BED




























NOTE : This Bed is NOT a TOY.

Keep your child / children at bay during the assembly process.

The Daybed is **HEAVY**.













To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting the product.

Parts List			
Label	Picture	Description	QTY
A1		Front and back support foot	2
A2		Middle support foot	1
A3		Side support foot	2
A4		Angle iron	2
A5		Bedside connecting rod	1
A6		Middle connecting rod	1
A7		Center connecting rod	1
A8		Bed tail connecting rod	1
A9		Square tube	2
B1		Headboard	1
B2		Footboard	1
B3		Left side panel	1
B4		Right side panel	1
B5		Left wing panel	1
B6		Right wing panel	1
B7		The baffle under the head of the bed	1
B8		Slat	2
B9		Metal plate	2
C1		Plastic feet	2
C2		Non-slip pads	2
Hardware			
Label	Picture	Description	QTY
①		Allen Wrench	1
②		Bolt(M8 x 50mm)	15
③		Bolt(M8 x 20mm)	18
④		Washer	46
⑤		Bolt(M8 x 35mm)	13





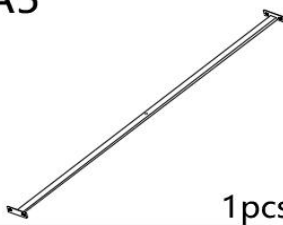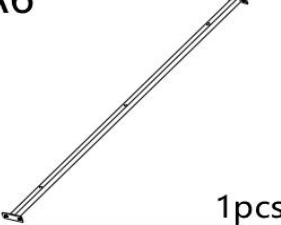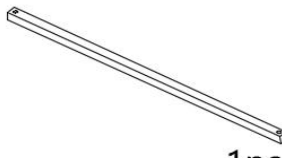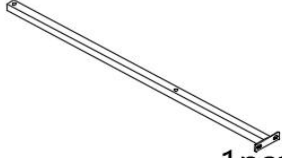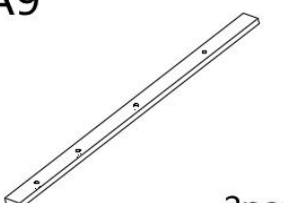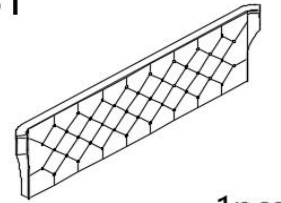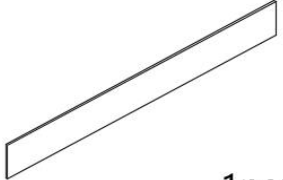
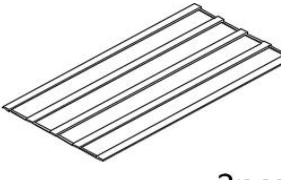



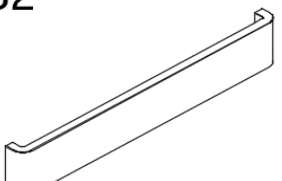
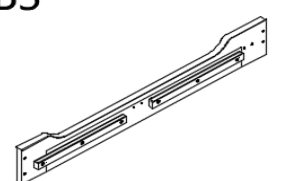
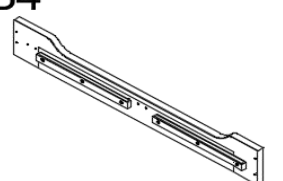

Assembly Preparation

Before
Beginning
Assembly:

N761P352151

A5  1pcs	A6  1pcs	A7  1pcs	A8  1pcs
A9  2pcs	B1  1pcs	B5  1pcs	B6  1pcs
B7  1pcs	B8  2pcs	C1  2pcs	C2  2pcs

N761P352152

A1  2pcs	A2  1pcs	A3  2pcs	A4  2pcs	
1  M8 1pcs	2  M8*50 15pcs	3  M8*20 18pcs	4  M8*19 46pcs	5  M8*35 13pcs
B2  1pcs	B3  1pcs	B4  1pcs	B9  2pcs	



- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-




- Do not assemble on flooring or carpet-



- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

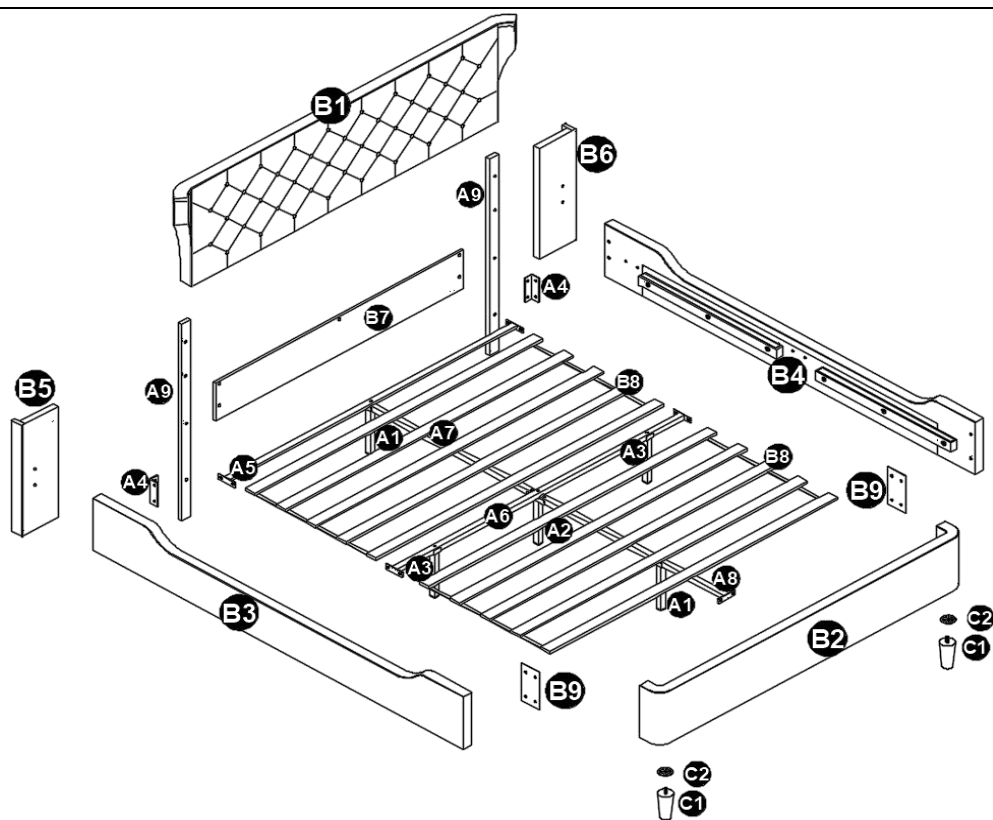

This Bed has multiple parts and may require up to 60 minutes to assemble.
To give you an overview of the Bed parts, the above picture is to help you put the various Bed parts into perspective.
Please read through the instructions below to familiarise yourself with the parts and steps before assembly.




Step 1

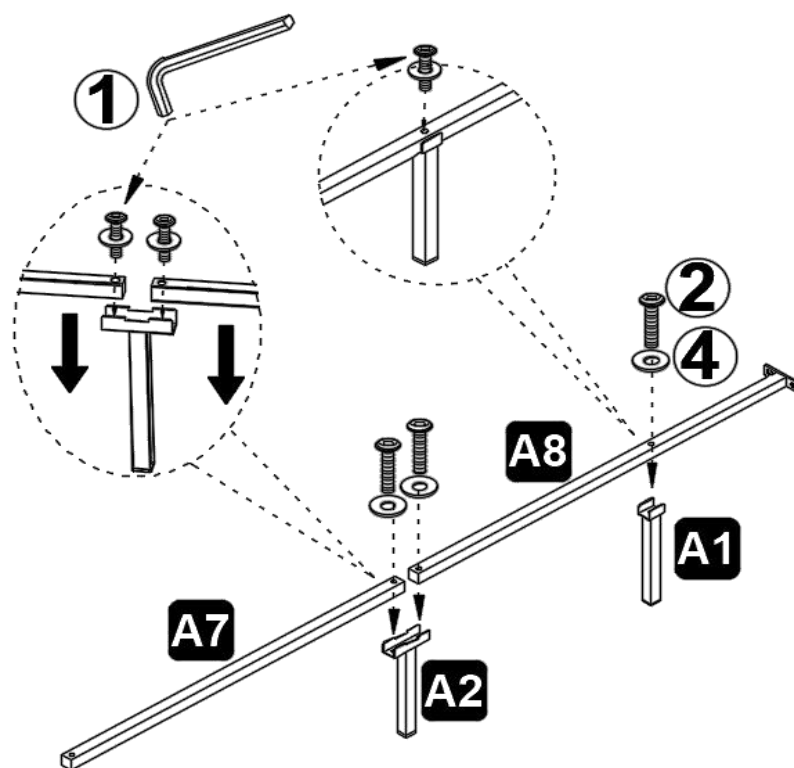
- | | | |
|---|--|----|
| ① | | X1 |
| ② | | X3 |
| ④ | | X3 |



Use Allen wrench (1), Bolt (2), Washer (4) to fix the front and rear connecting rods (A7&A8) to the metal foot (A2&A1) as shown in the figure.




Step 2

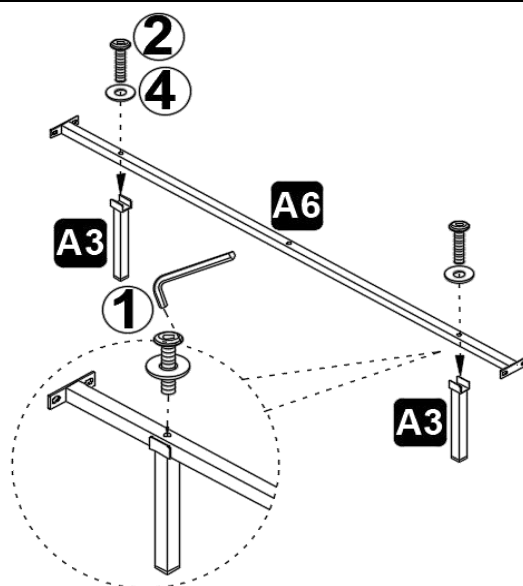
- | | | |
|---|---|----|
| ① |  | X1 |
| ② |  | X2 |
| ④ |  | X2 |



Use Allen wrench (1), Bolt (2) and Washer (4) to fix the middle connecting rod (A6) on the side middle foot (A3) as shown in the figure.


Step 3

- | | | |
|---|---|----|
| ① |  | X1 |
| ② |  | X2 |
| ④ |  | X2 |

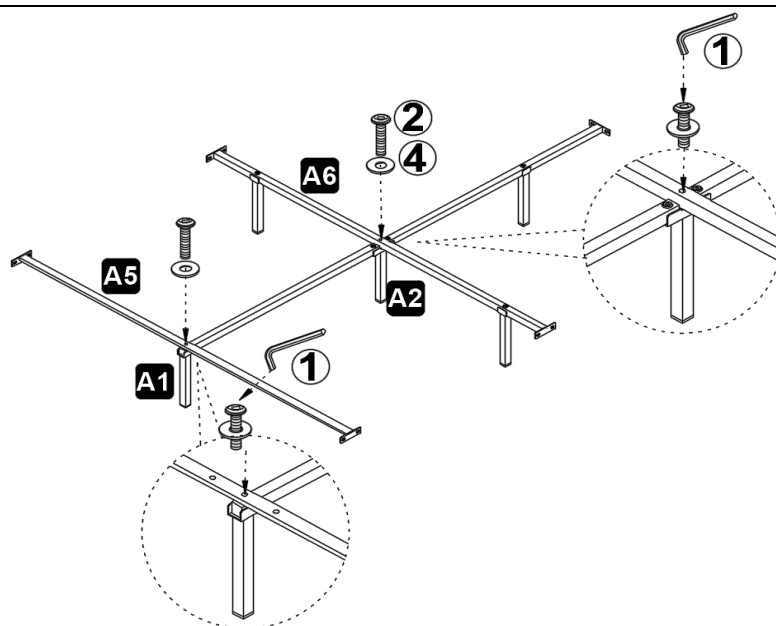




Use the Allen wrench (1), Bolt (2), Washer (4) to fix the front connecting rod (A5) to the front middle foot (A1) as shown in the figure, and the middle connecting rod (A6) to the middle foot (A2).


Step 4

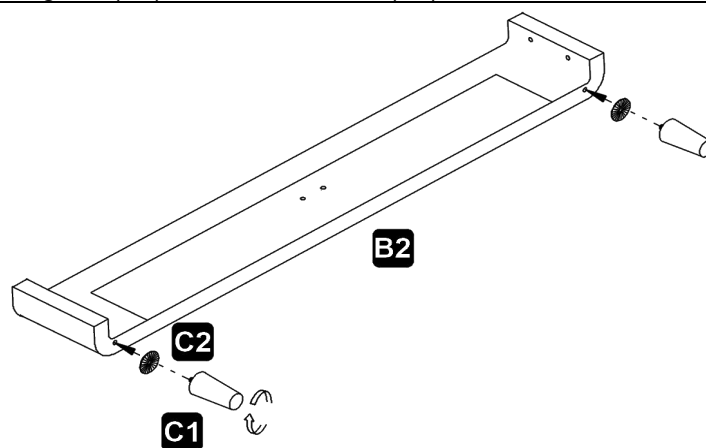

The plastic foot (C1) and the anti-slip Washer (C2) are fixed clockwise at the corresponding position of the end of the bed (B2).




Step 5

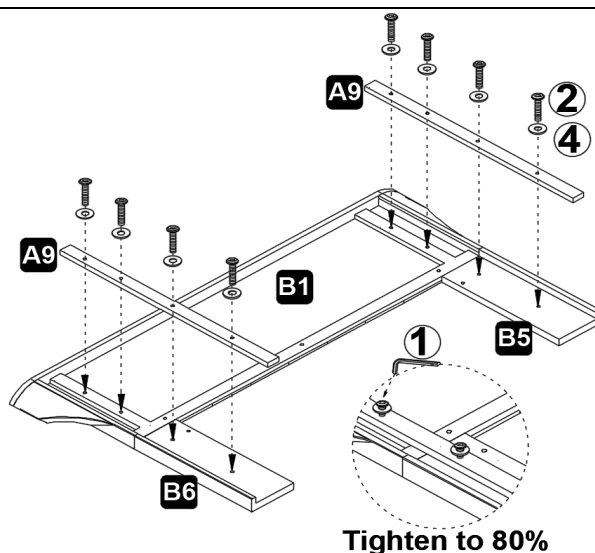
- ①  X1
- ②  X8
- ④  X8



Use the Allen wrench (1), Bolt (2) and Washer (4) to secure the bedside (B1) and bedpost (B5&B6) with a square tube (A9).




Step 6

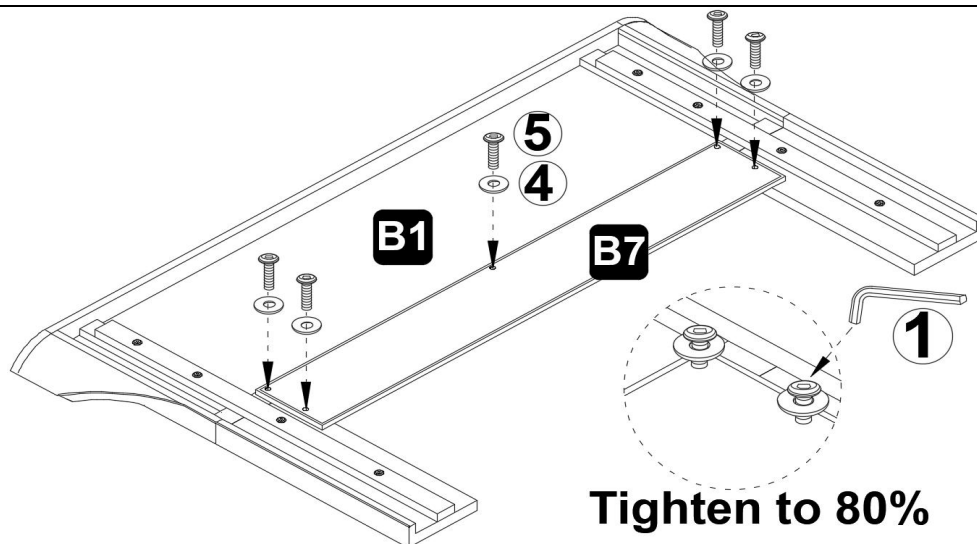
- ①  X1
- ⑤  X5
- ④  X5



Use Allen wrench(1), bolt (5) and Washer (4) to fix the lower plate (B7) on the Headboard (B1) .




Step 7

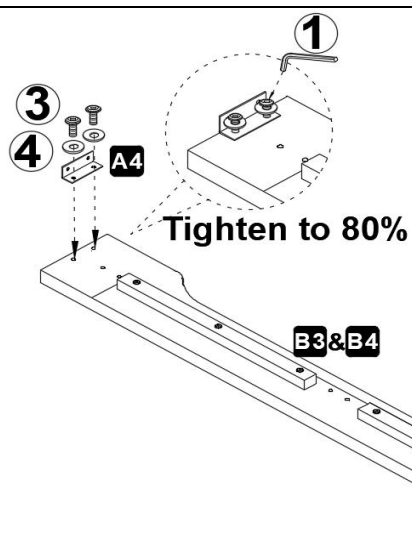
- ①  X1
- ③  X4
- ④  X4



Use Allen wrench (1), bolt (3) and Washer (4) to secure the angle iron (A4) to the bed side panel (B3&B4).




Step 8

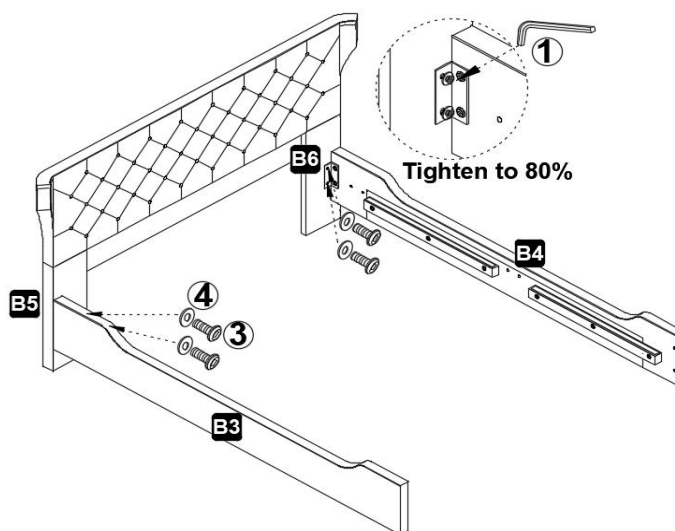
- ①  X1
- ③  X4
- ④  X4



Use Allen wrench (1), Bolt (3) and Washer (4) to fix the bed side (B3&B4) on the bed post (B5&B6).




Step 9

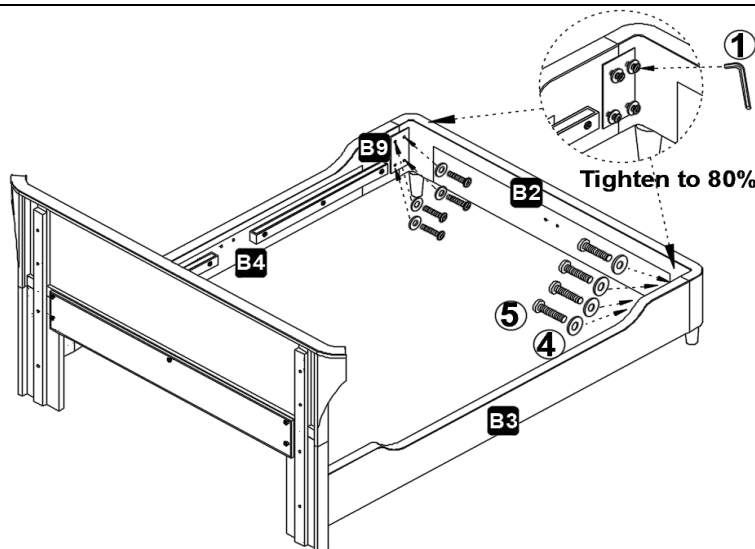
- ①  X1
- ⑤  X8
- ④  X8



Use Allen wrench (1), Bolt (5) and Washer (4) to fix the bed tail (B2) and the bed side plate (B3&B4) with metal plates (B9).


Step 10

- ①  X1
- ③  X10
- ④  X10

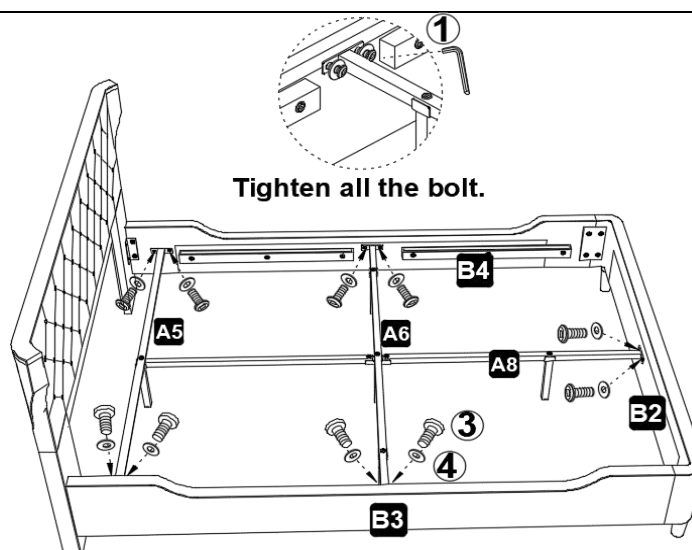


Use hex wrench (1), bolt (3) and washer (4) to fix the left and right ends of the bedside connecting rod (A5) and the middle connecting rod (A6) on the left panel (B3) and the right panel (B4), and fix the bed tail connecting rod (A8) to the end of the bed (B2).

Step 11

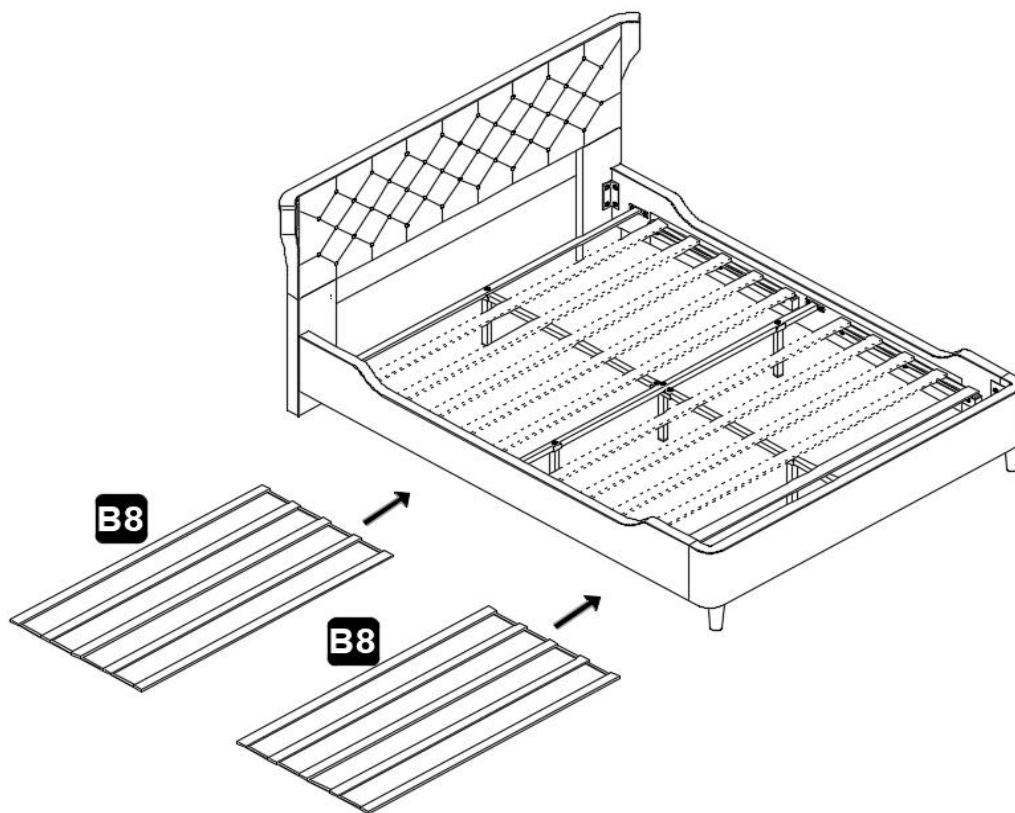

Place the bed frame strip (B8) on the assembled bed frame and paste the magic strip into place.

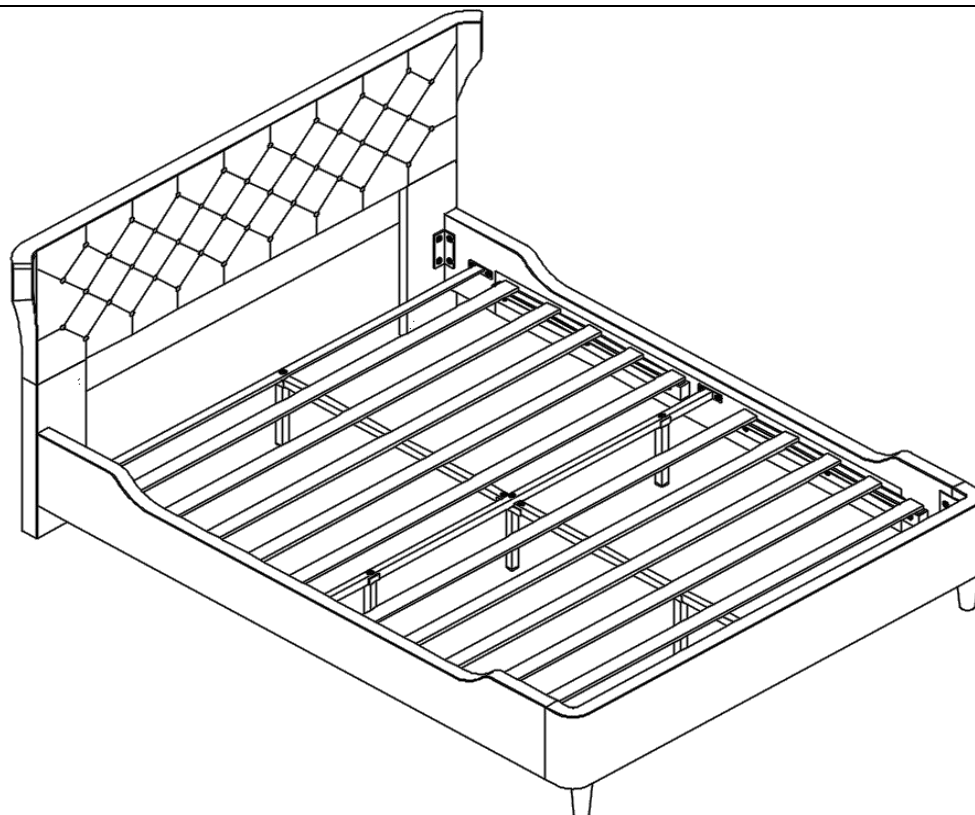

Your bed is ready for use.

Note: After assembly and before using the bed, inspect to make sure all parts are properly connected and securely fastened.