

WARNING!!

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping.

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains, to help prevent tip-over








1. **NEVER** put a TV or other heavy objects on top of this product".
2. Do not stand on the product

 WARNING	
	<p>Children have died from furniture tipover. To reduce the risk of furniture tipover:</p> <ul style="list-style-type: none">-ALWAYS install anti-tip device provided.-NEVER put a TV on this product.-NEVER allow children to stand, climb, or hang on any drawers, doors, or shelves.-NEVER open more than one drawer at a time.-Place heaviest items in the lowest drawers. <p><i>This is a permanent label. Do not remove!</i></p>
	

Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance


- ⊘  • Not for commercial use. For residential use only.
- ✓  • Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- ⊘  • Do not put hot items directly on furniture surface.
- ⊘  • Do not clean furniture with harsh cleansers or polish.
- ⊘  • Do not place furniture under direct sunlight.
- ⊘  • Do not place furniture near heating or cooling vents.
- ⊘  • Do not write on furniture without a padded barrier to protect the surface.
- ⊘  • Do not place furniture outside . For indoor use only.
- ⊘  • Stains may be removed with mild soap solution and damp cloth.
- ⊘  • Children should not climb or jump on the furniture.







- Dust and pick-up spills using a clean, non-colored, lint-free cloth.

Please look in carton for hardware packs and legs.








CABINET

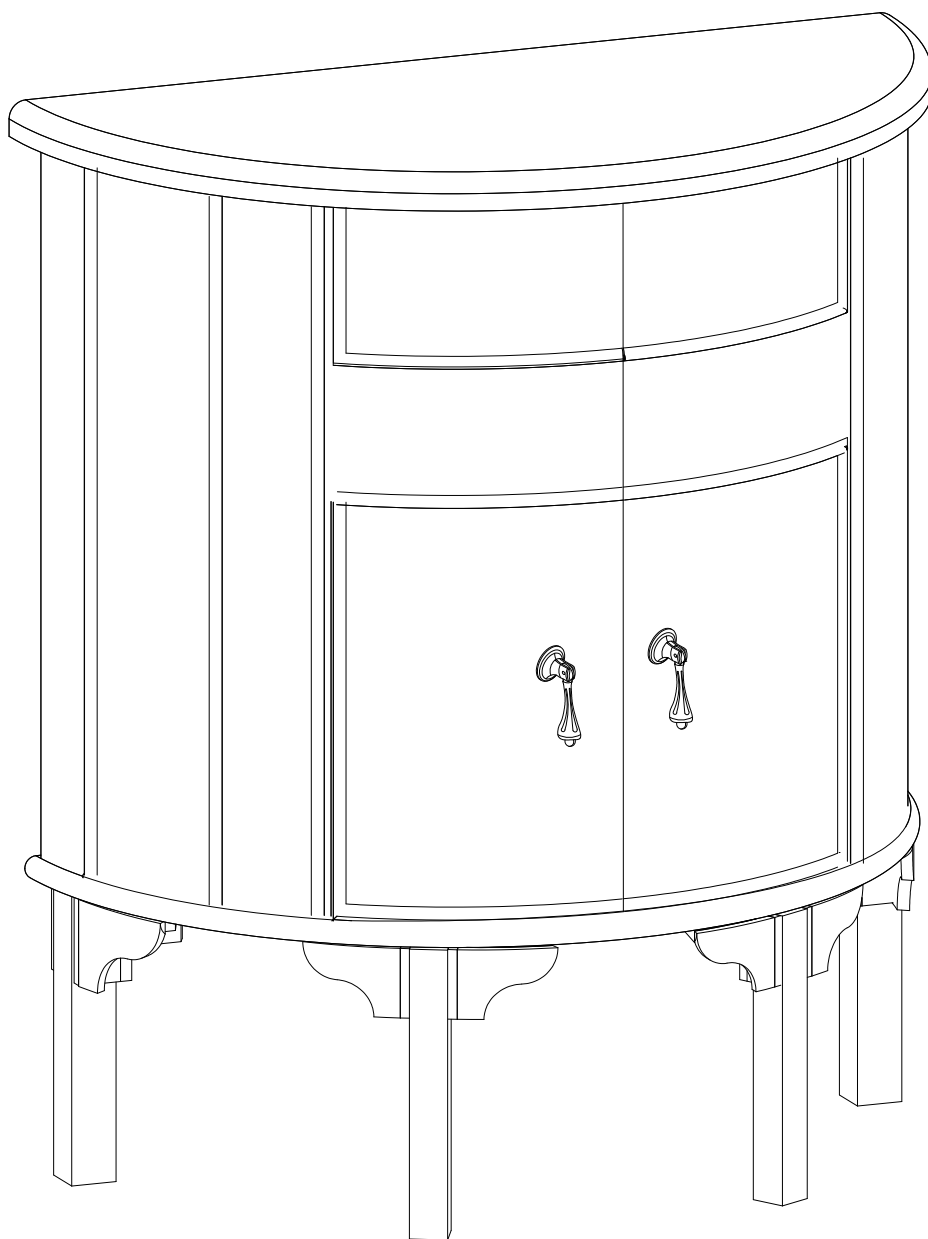

Parts List

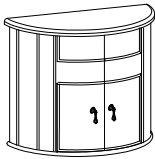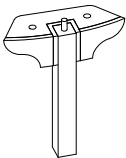
Label	Picture	Description	QTY
A		Cabinet Body	1
B		Middle Leg	2
C		Left Leg	1
D		Right Leg	1








Hardware

Label	Picture	Description	QTY
1		Bolt (M8*30mm)	8+1
2		Washer	8+1
3		Screwdriver	1
Tipover Restraint Device Hardware			
4		Anti-tip Wall Bracket	2
5		Expansion Plug	2
6		Long Screw (M4*40mm)	2+1
7		Short Screw (M4*12mm)	2+1

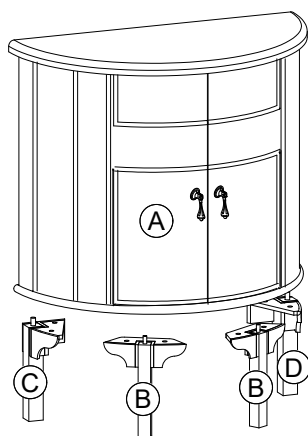Assembly Preparation

Before
Beginning
Assembly:



-  ① x 8 + 1
-  ② x 8 + 1
-  ③ x 1
-  ④ x 2
-  ⑤ x 2
-  ⑥ x 2 + 1
-  ⑦ x 2 + 1




- Read instructions, cover to cover-



- Have 2 adults on hand for assembly-



- Do not assemble on flooring or carpet-




- Assemble on a clean non-marring surface (packing foam)-




- Save all packaging until finished-

Assembly Preparation

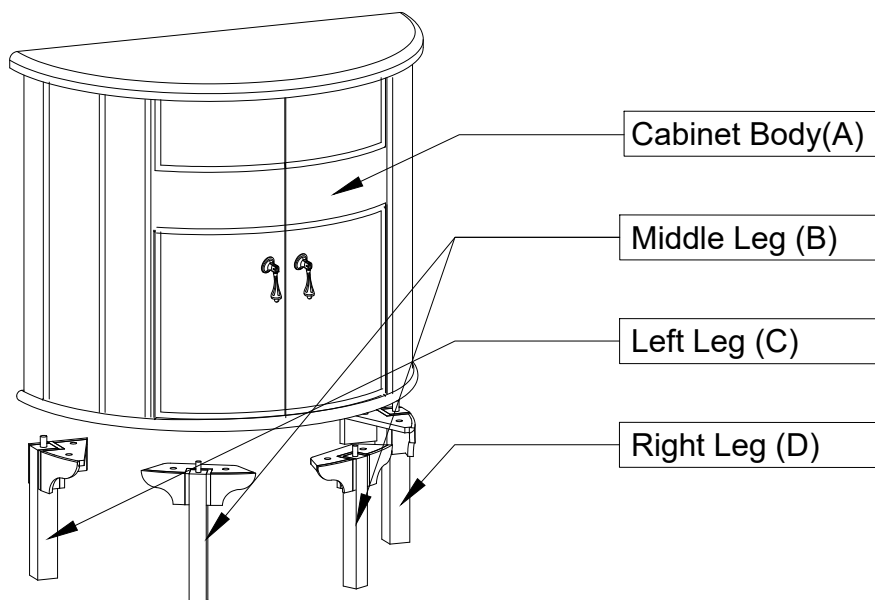


This cabinet has multiple parts and may require up to some 20 minutes to assemble. To give you an overview of the cabinet parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

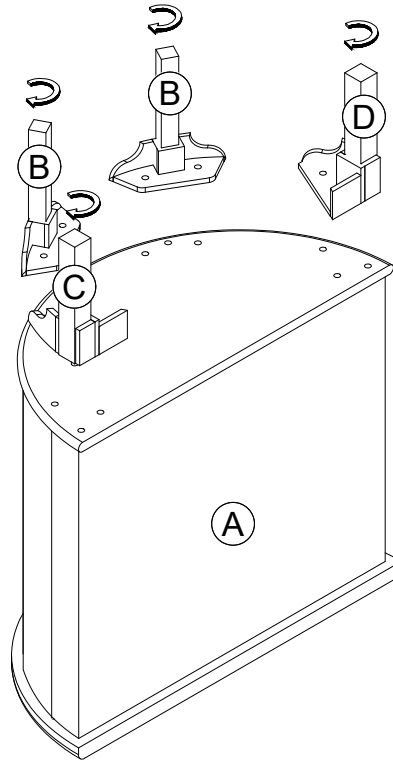


Align middle leg(B)、left leg(C)、 right leg(D) with cabinet body(A).

Step 2

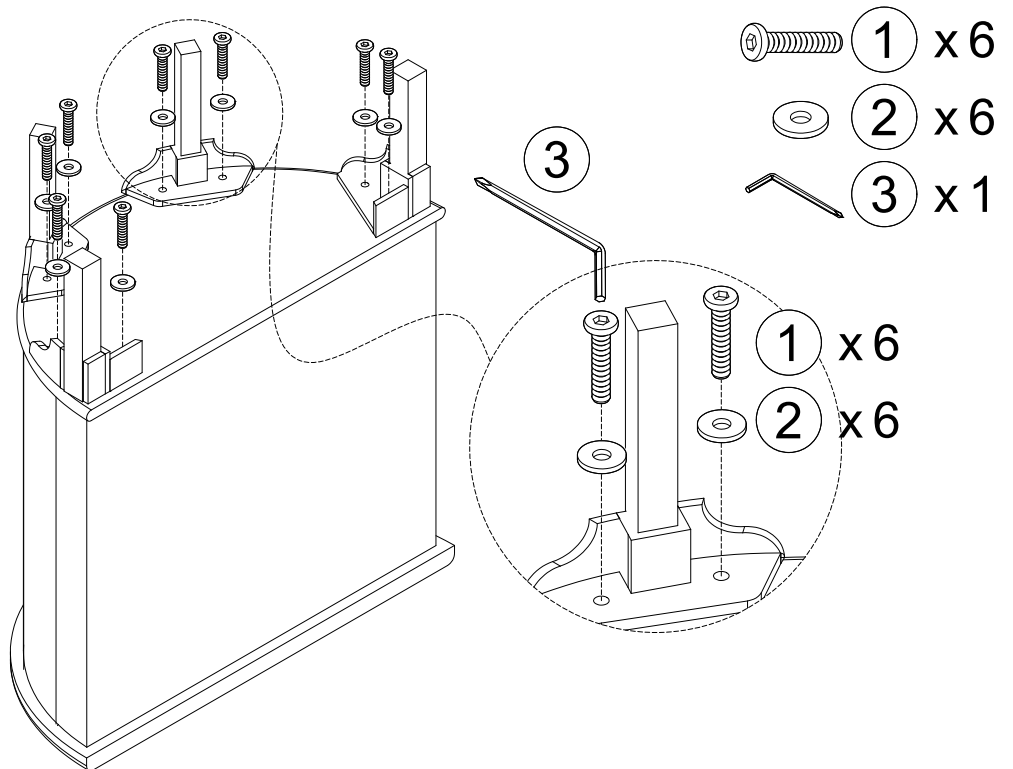


Attach middle leg(B)、left leg(C)、 right leg(D) to cabinet body(A) with bolt(①) and washer (②) using screwdriver (③).

Step 3

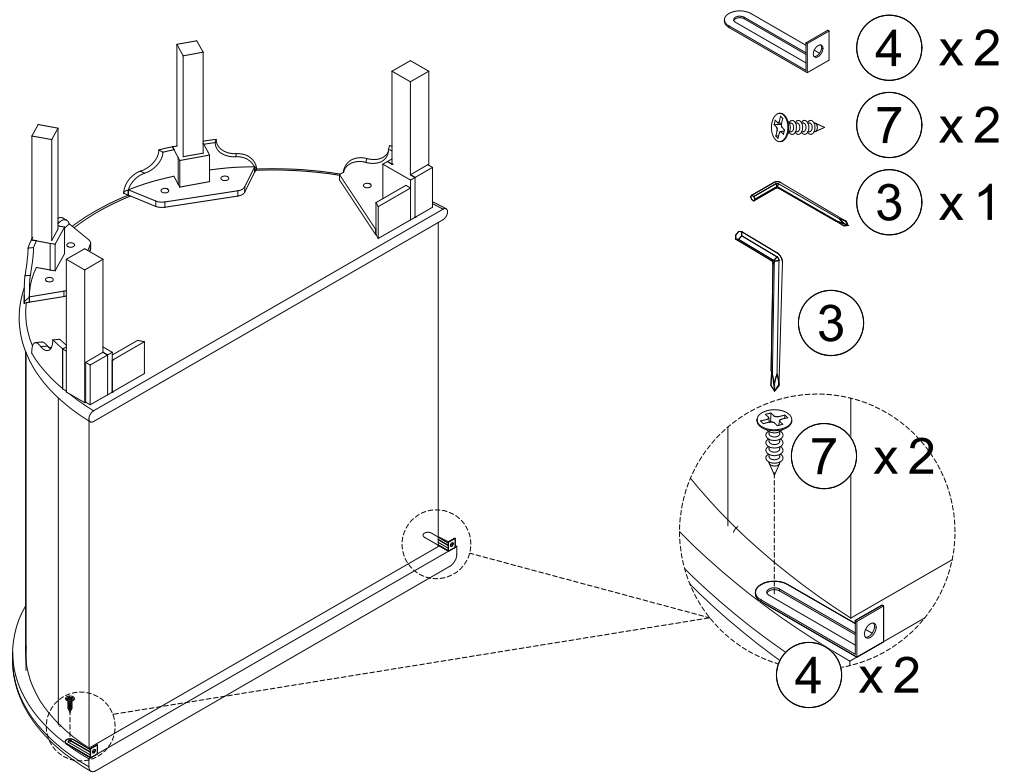


Attach long side of anti-tip wall bracket (④) at the 2 sides of the cabinet top with short screw(⑦) using screwdriver (③).

Step 4

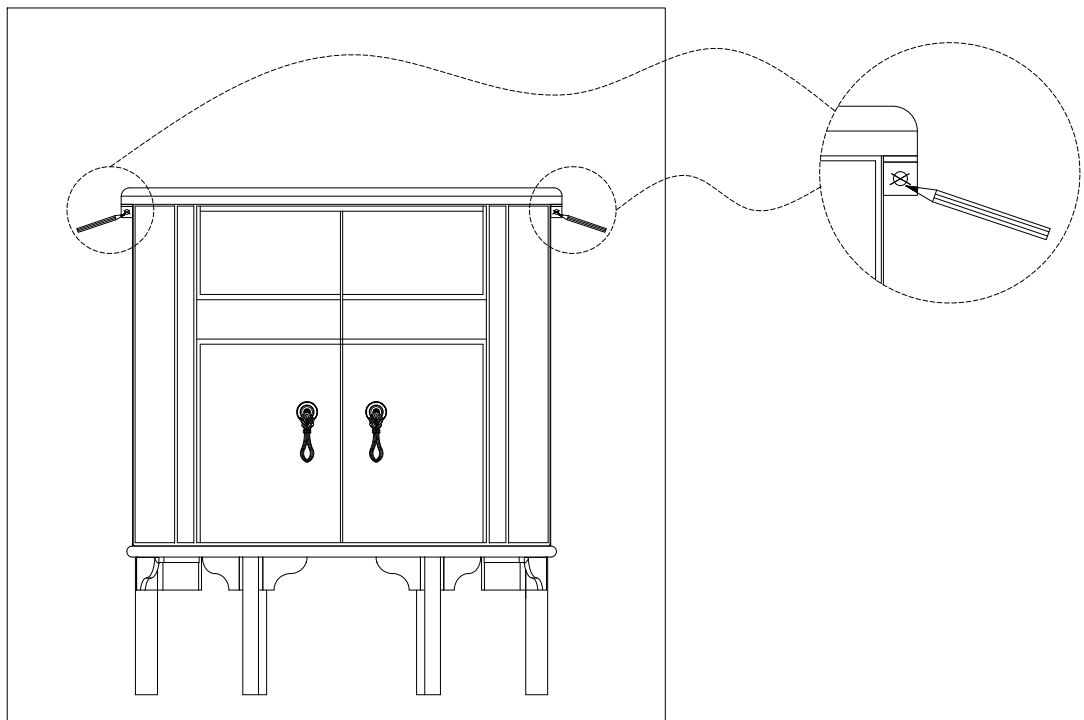


Place the cabinet against the wall. Mark the position for extension plug.

Step 5

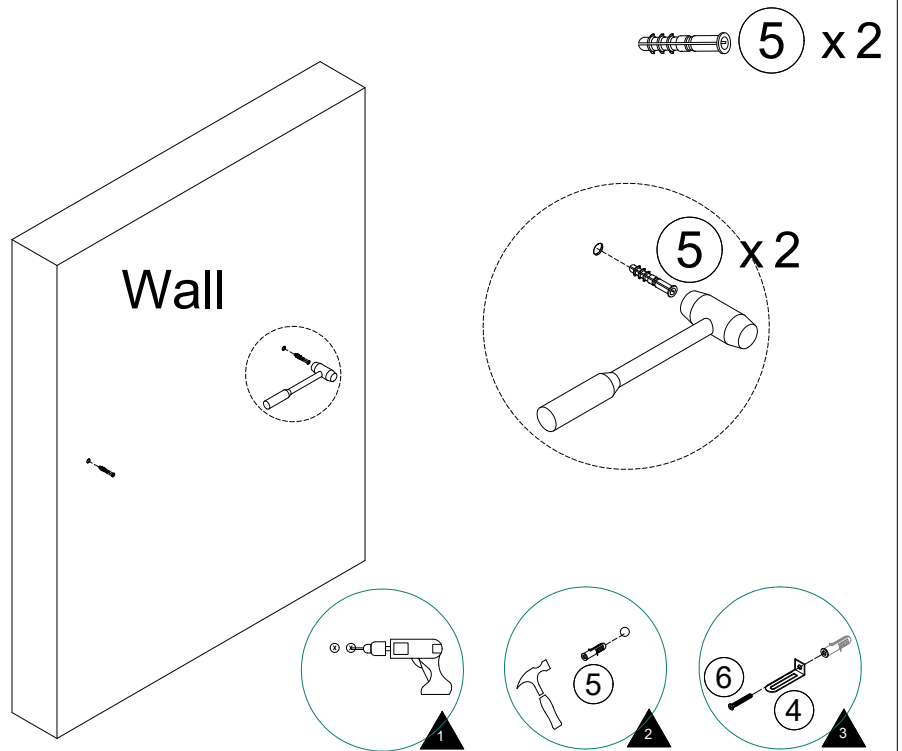


Drill holes on the wall in marking position, Insert the expansion plug(⑤).

Step 6

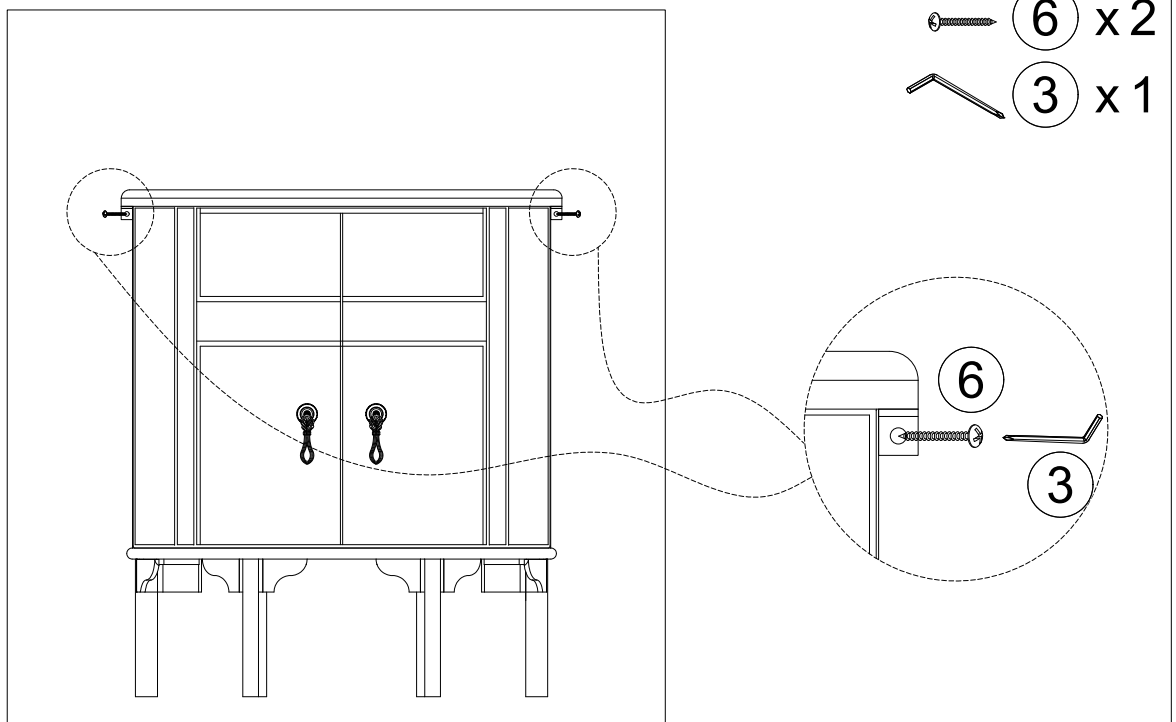

Align with the expansion plug (⑤), install the short side of anti-tip wall bracket (④) on the wall with long screw (⑥) using screwdriver(③). Ensure the brackets are level and aligned with the wall before drilling.

Step 7

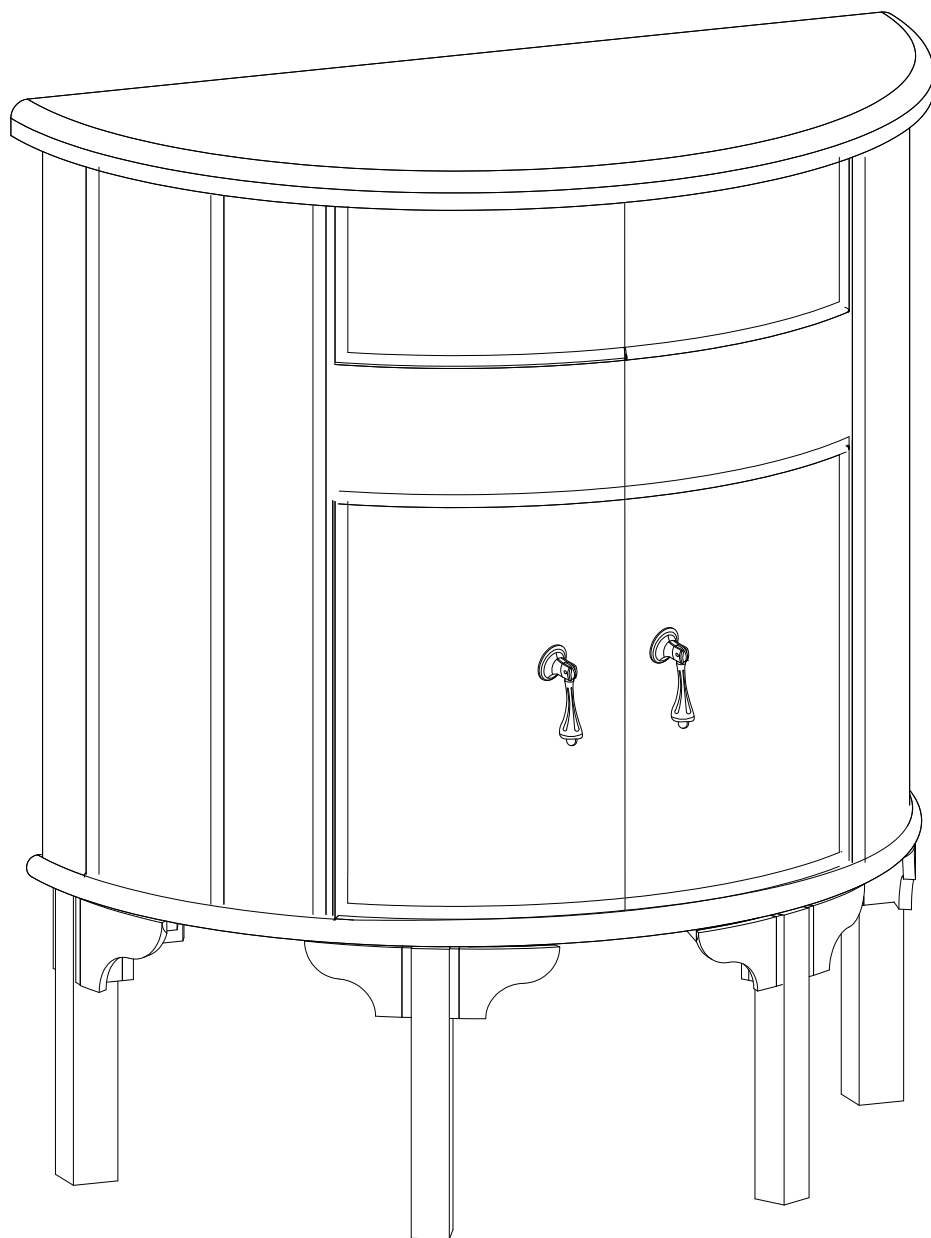

The cabinet is ready to use.