
Assembly Instructions

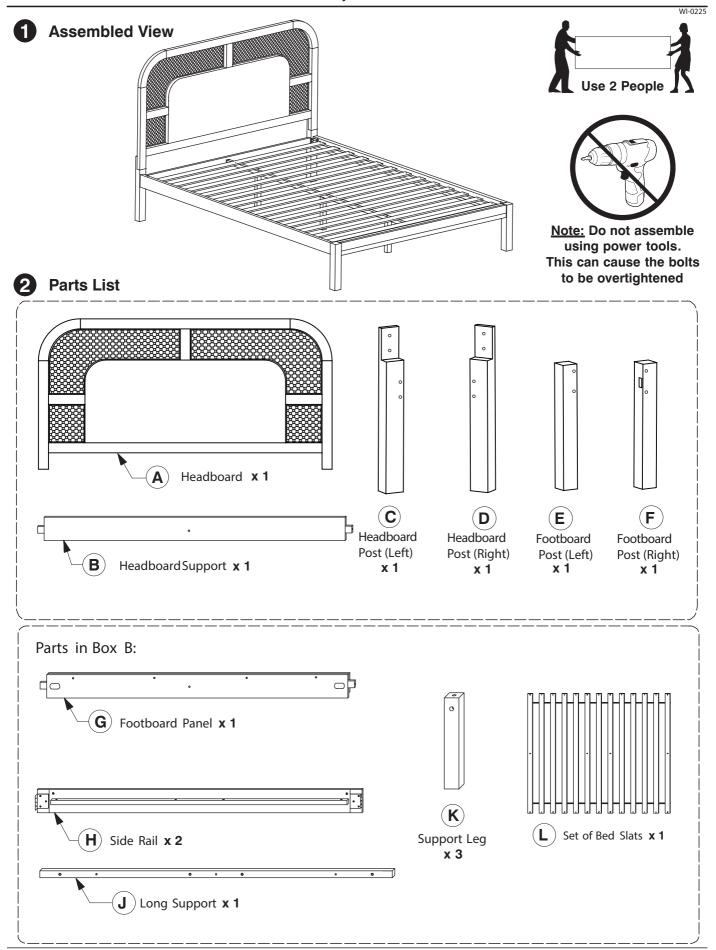


Assembly Instructions


WI-0225 **Hardware List** M6 x 15mm M6 x 90mm JCB M6 x 20mm M6 x 40mm M6 x 50mm JCB x4 х3 JCB x8 JCB x 16 JCB x4 Wood Screw Center Rail Barrel Nut **10**) Spring Washer Adjustable (M4 x 32mm) x 18 х3 Bracket x 2 Foot x 3 x 12 **11**) Flat Washer M4 Allen Key 12 x 12 4 Assembled the Support Leg (K) 5 to the Long Support (J). Note: Extra holes on top 8 Fit the Center Rail Bracket (9) to the Headboard Support (B). B **1** 9 Short Tab of Metal Bracket (9)

WI-0225


6 Assemble the Headboard Support (B) to the Headboard Post (C & D).

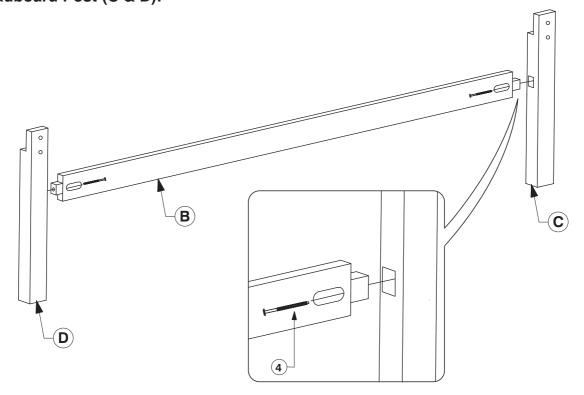


Assemble the Footboard Panel (G) to the Footboard Post (E & F).

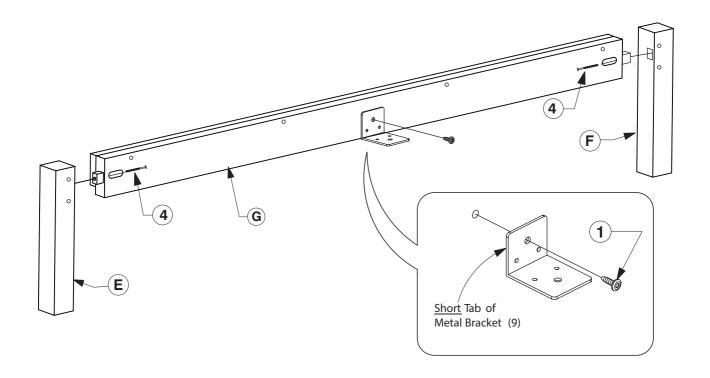


0255 Queen Bed Assembly Instructions

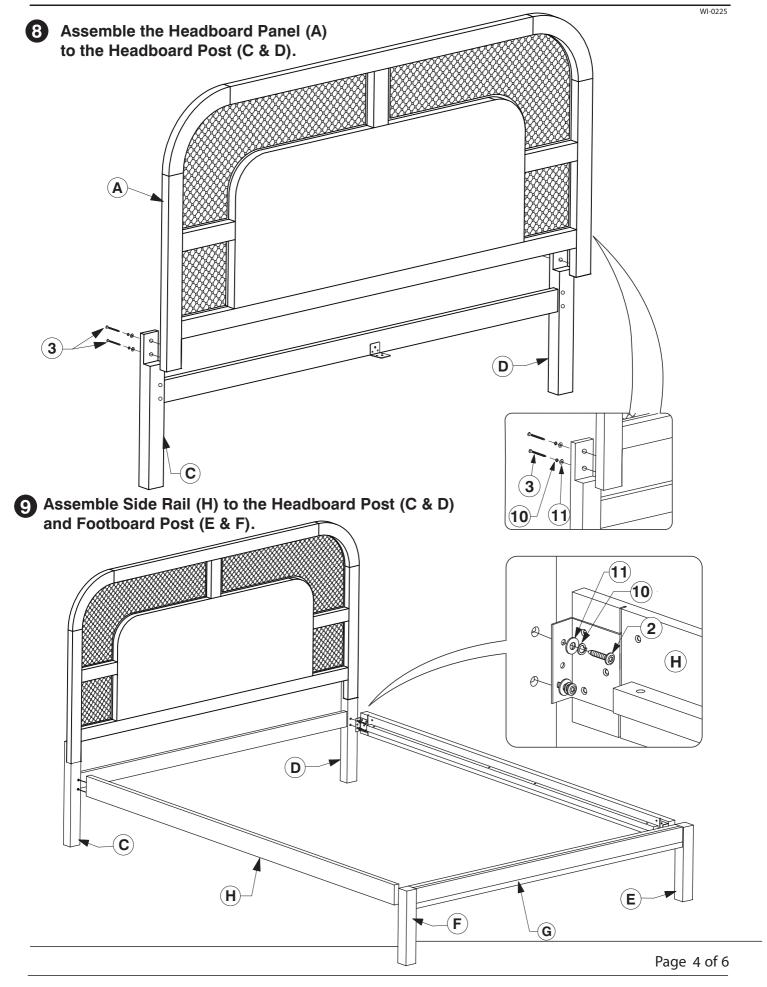

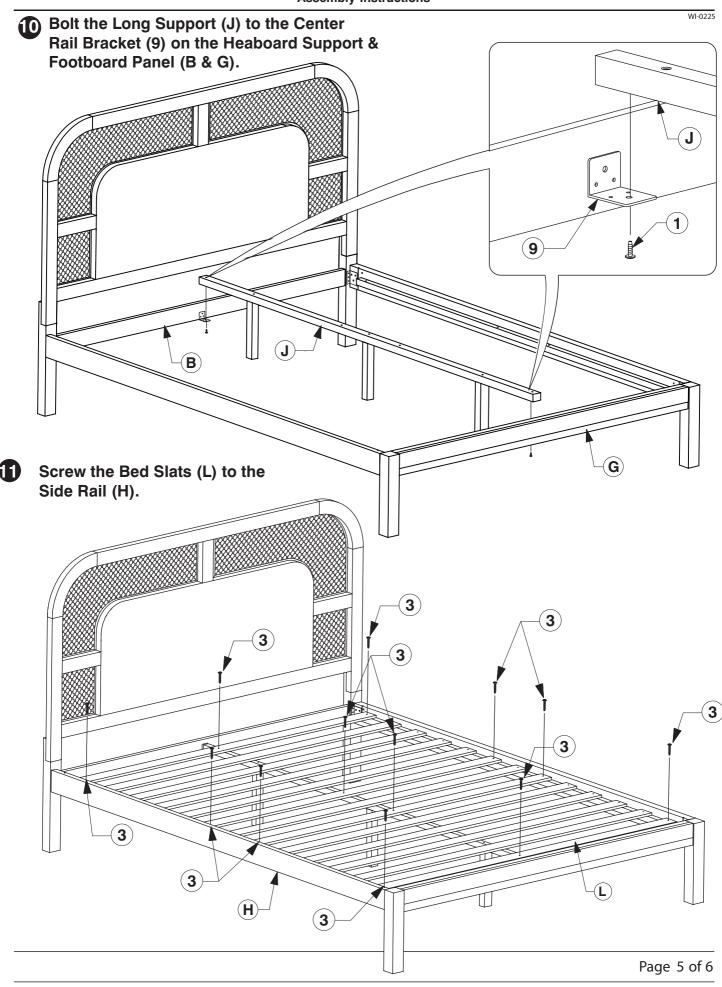

Bolt the Bed Slats (L) to the Side Rail (H).

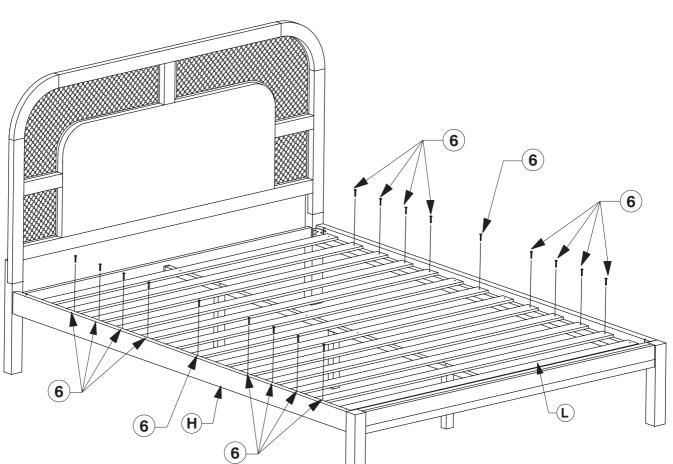

WI-0225