























Assembly Instructions


Care & Maintenance

 	<ul style="list-style-type: none">● Not for commercial use. For residential use only.
 	<ul style="list-style-type: none">● Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 	<ul style="list-style-type: none">● Do not put hot items directly on furniture surface.
 	<ul style="list-style-type: none">● Do not clean furniture with harsh cleansers or polish.
 	<ul style="list-style-type: none">● Do not place furniture under direct sunlight.
 	<ul style="list-style-type: none">● Do not place furniture near heating or cooling vents.
 	<ul style="list-style-type: none">● Do not write on furniture without a padded barrier to protect the surface.
 	<ul style="list-style-type: none">● Do not place furniture outsideFor indoor use only.
 	<ul style="list-style-type: none">● Stains may be removed with mild soap solution and damp cloth.
 	<ul style="list-style-type: none">● Children should not climb or jump on the furniture.
 	<ul style="list-style-type: none">● Dust and pick-upspills using a clean, non-colored, lint-free cloth.




Please look in the box for hardware packs and legs.

Sets often ship in multiple boxes and may arrive a day or two apart.

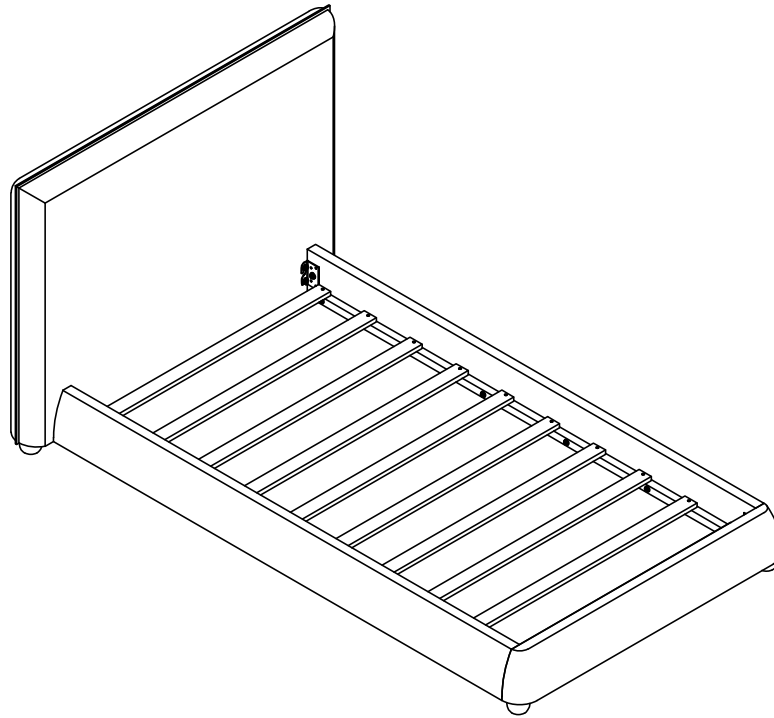



TWIN Bed N757P342192W

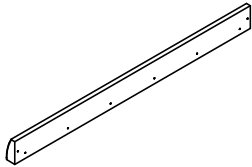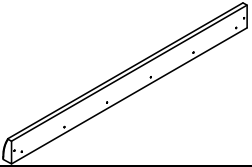


Part List









③		Side Rail(R)	1pc
④		Side Rail(L)	1pc
⑩		Footboard	1pc

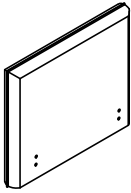Part List

Label	Picture	Description	QTY
①		Headboard	1pc
⑥		Slats with 2 pre-holes	10pcs
⑨		Support Rail	4pcs
⑪		Bed leg	4pcs

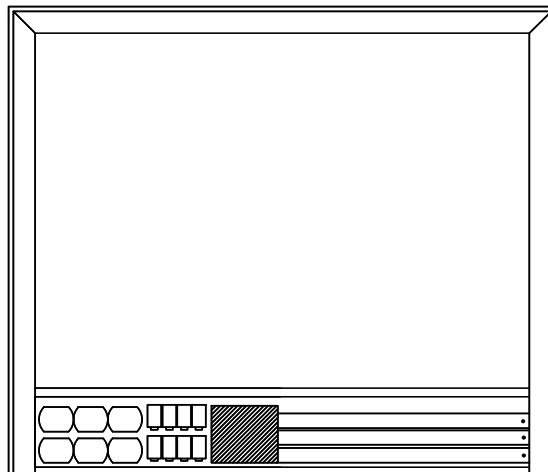








Noted : Bed leg(11),Slats with 2 pre-holes(6),Support Rail(9) and Hardware package are packaged behind the Headboard (L) (2).



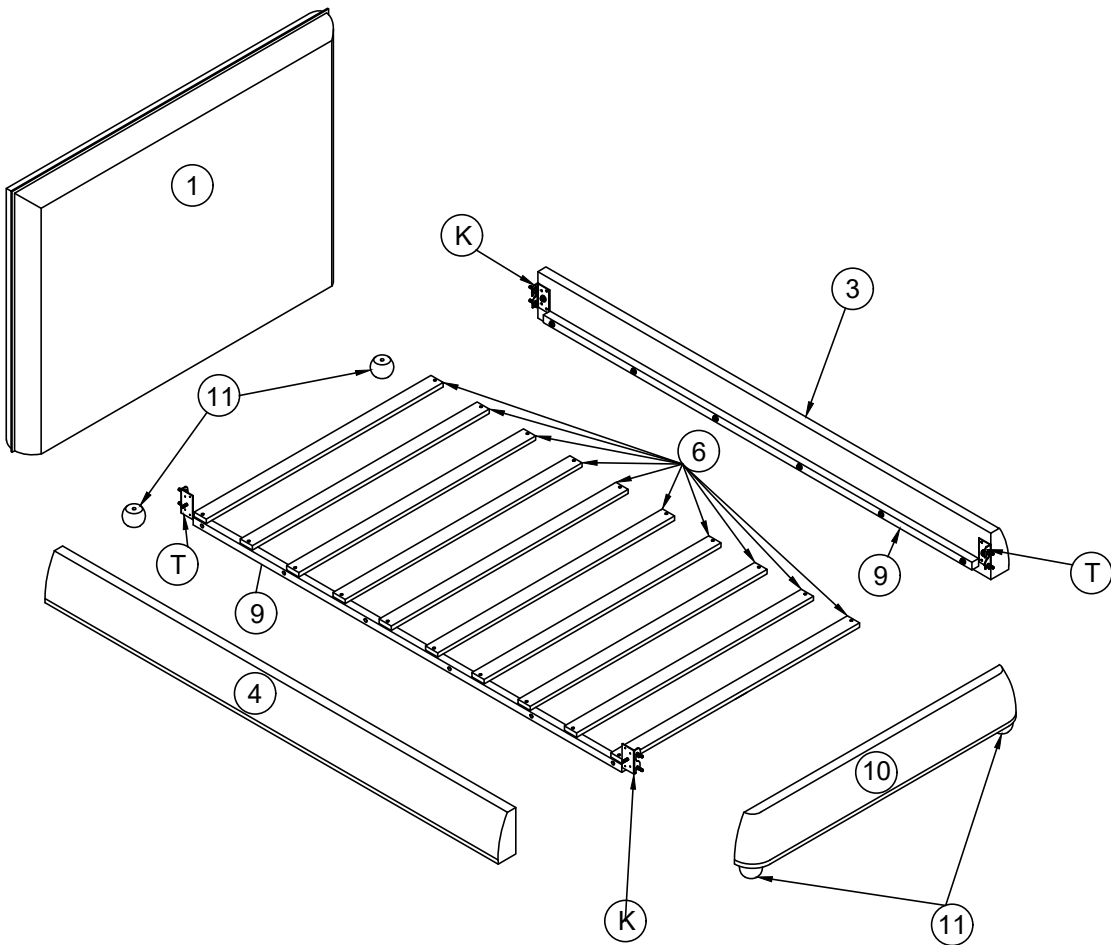


Label	Picture	Description	QTY
(A)		Screw(4x30mm)	36+1pcs
(B)		Bolts(5/16x30mm)	12+1pcs
(C)		Bolts(5/16x50mm)	16+1pcs
(E)		Lock washer(5/16)	28+1pcs
(F)		Flat washer(5/16x20mm)	28+1pcs
(T)		Metal pad(L)	2pcs
(K)		Metal pad(R)	2pcs
(M)		Allen Wrench(M4)	1+1

Assembly Preparation

Before Beginning assembly:




A  x 36pcs+1	C  x 16pcs+1	E  x 28pcs+1	F  x 28pcs+1
B  x 12pcs+1			M  x 1pcs+1

-  Read the instructions cover to cover
-  Have 2 adults on hand for assembly
-  Do not assemble on flooring or carpet
-  Assemble on a clean, non-marring surface (packing foam)
-  Save all packaging until finished

Assembly Steps

OVERVIEW


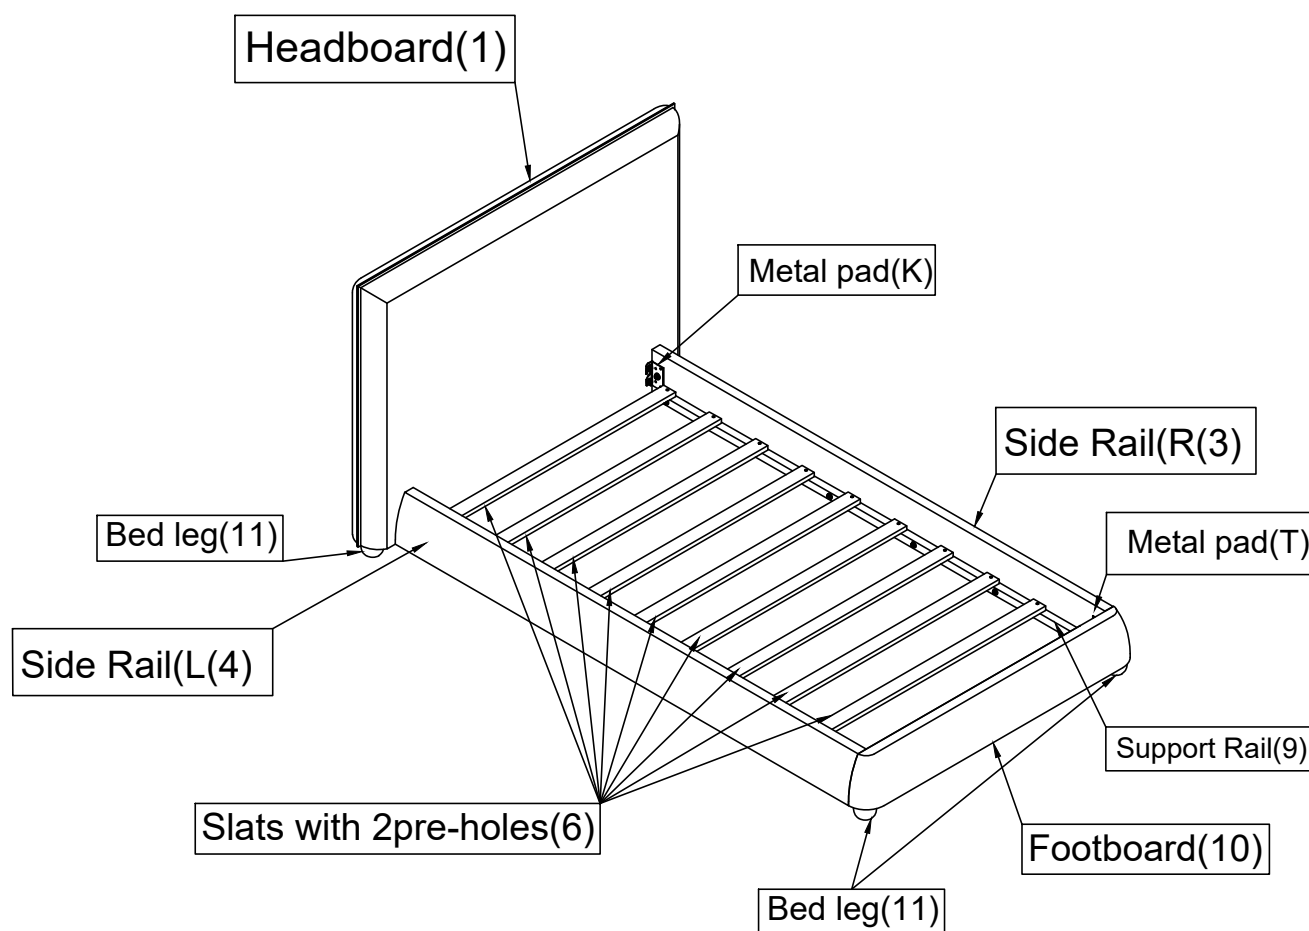


FRONT FACING

This Bed have multiple parts and may require up to 30 minutes to assemble. To give you an overview of the Bed parts, the above picture is to help you put the various parts into perspective. Please read through the instructions below to familiarise yourself with the parts and steps before assembly.



Note: It is recommended that you have an adult partner to assist during the entire assembly process.

Step 1

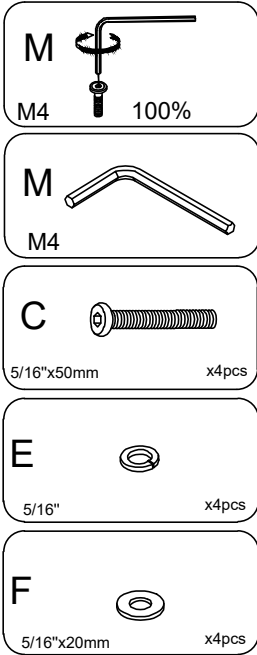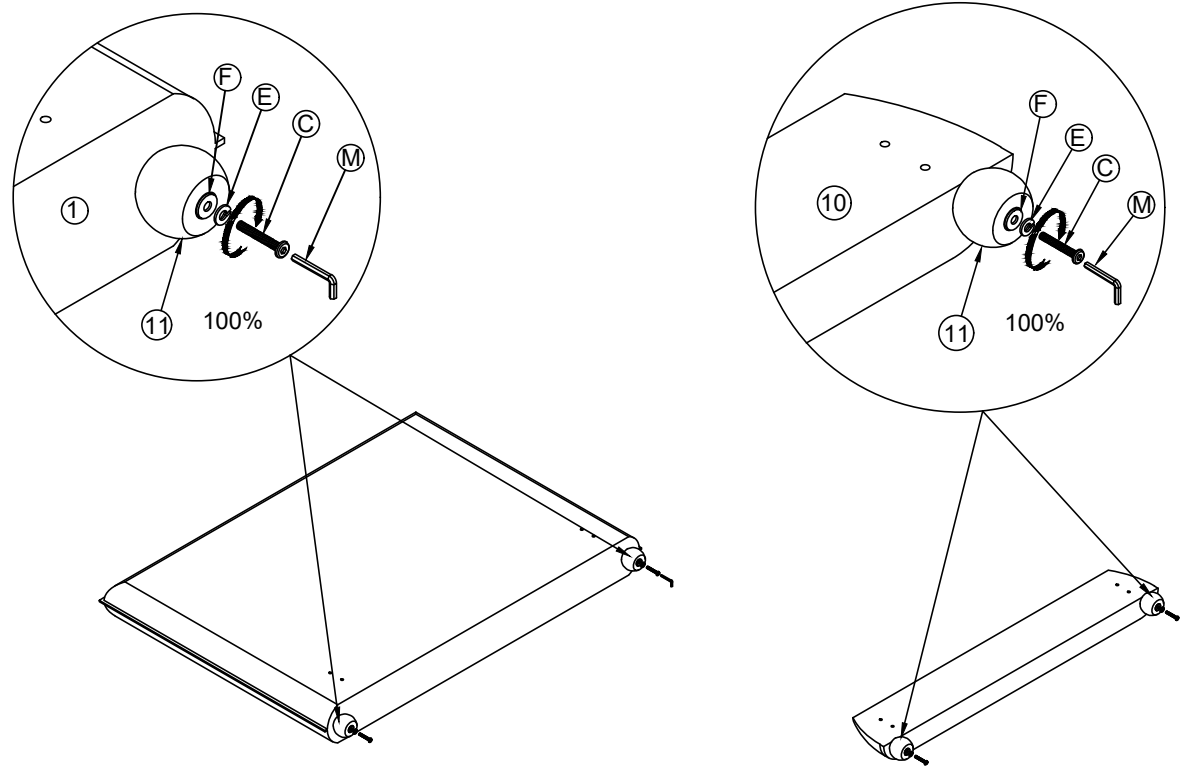


Attach the Bed Legs(11) to the Headboard (1) and the Footboard (11).By using the Bolts (C), the Flat Washer(F) and the Lock Washer(E) with M4 Allen Wrench(M)

Step 2

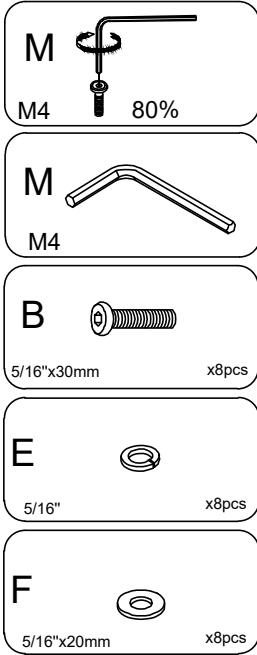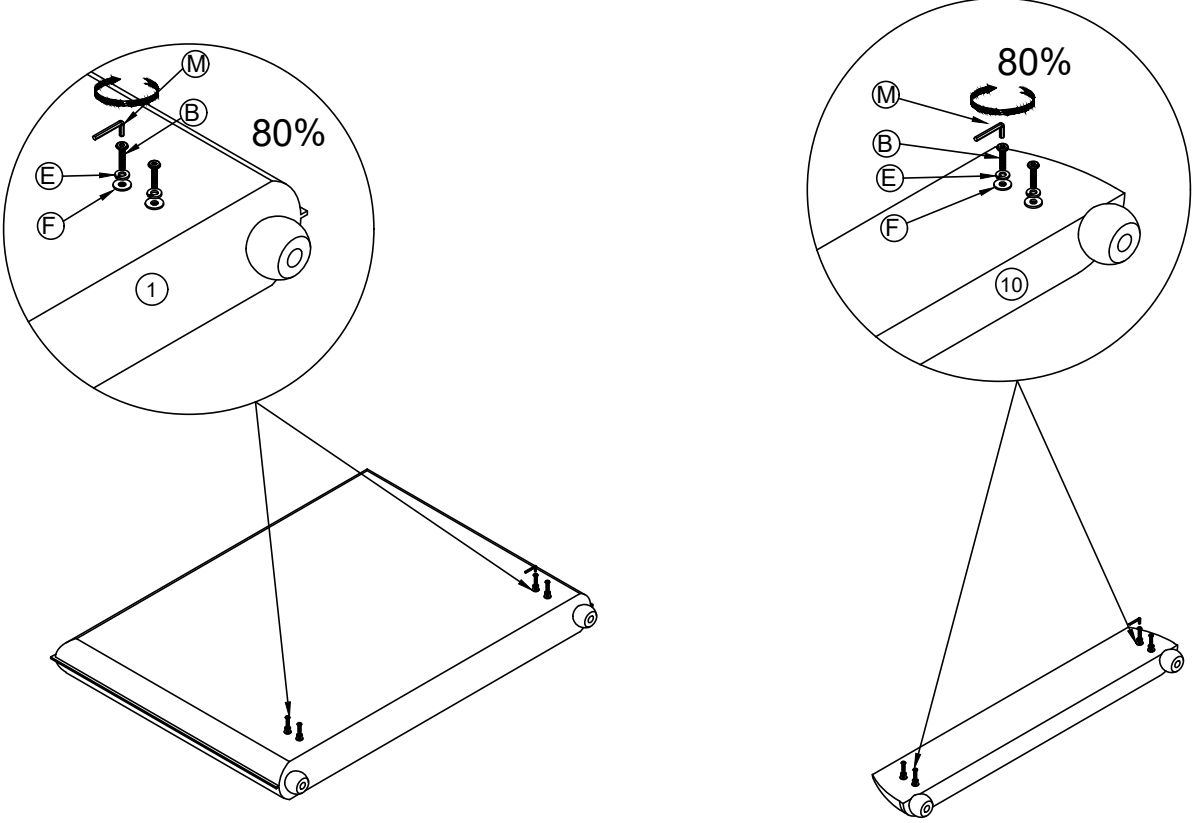

Use Bolts (B) and Lock Washer (E) with Flat Washer (F).Then attach 1/2 Bolts (B) to the Headboard(R)(1), Headboard(L)(2) and Footboard (10).


Step 3

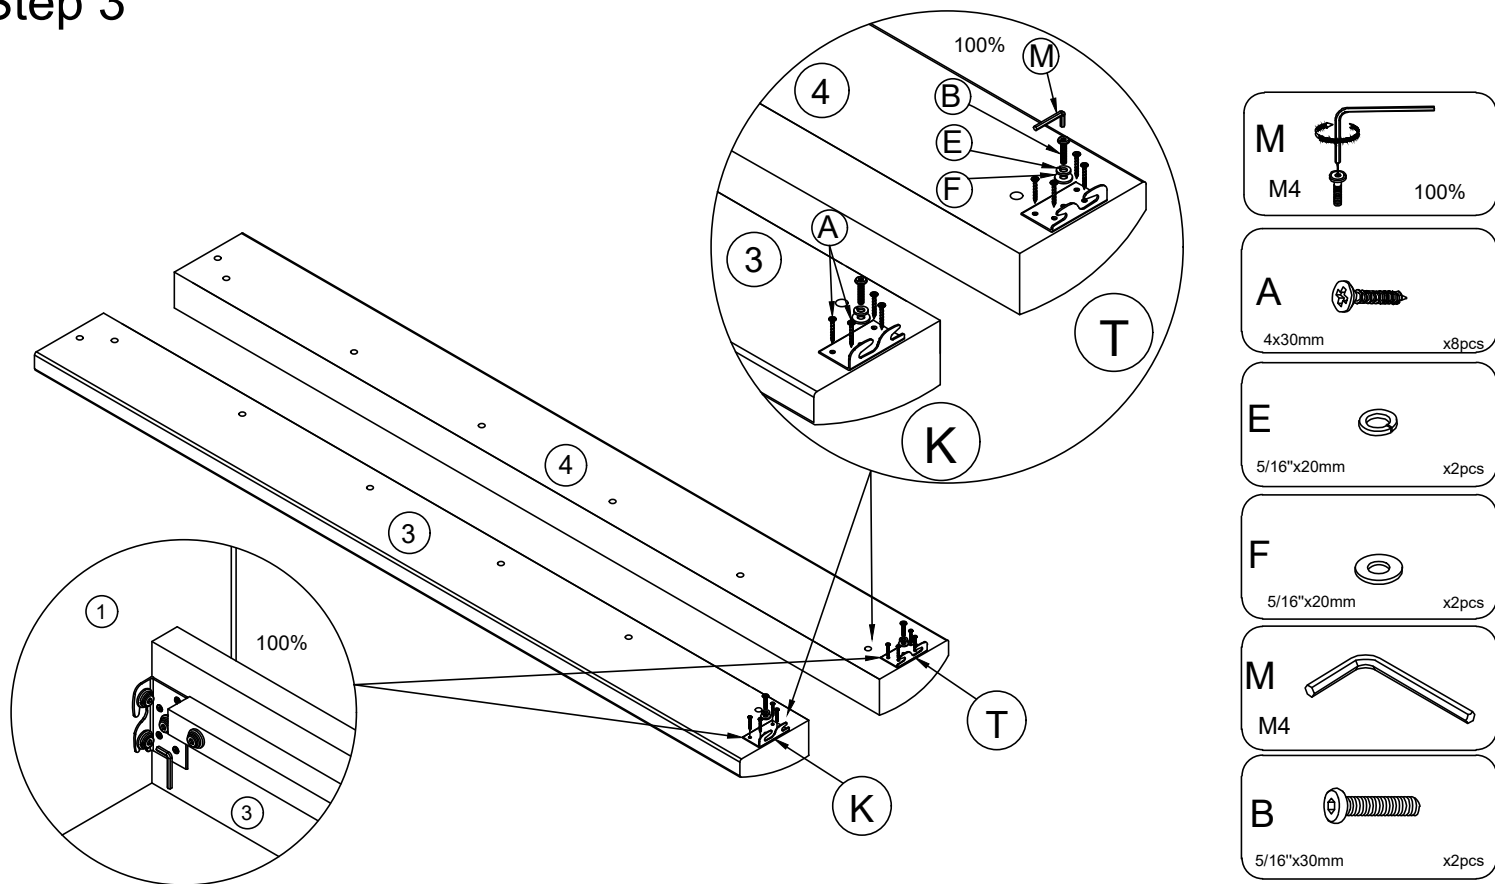

Attach the Metal pad (K) to the Side Rail (R) (3), attach the Metal pad (T) to the Side Rail (L) (4). By using the Bolts (B) and Flat Washer (F) with the Lock Washer (E) and Screw (A) to connect the Metal pad and the Side Rail

Note: The Metal pad hook is facing down and this place is connected to the Headboard(R) (1) and Headboard (L)(2).

Step 4






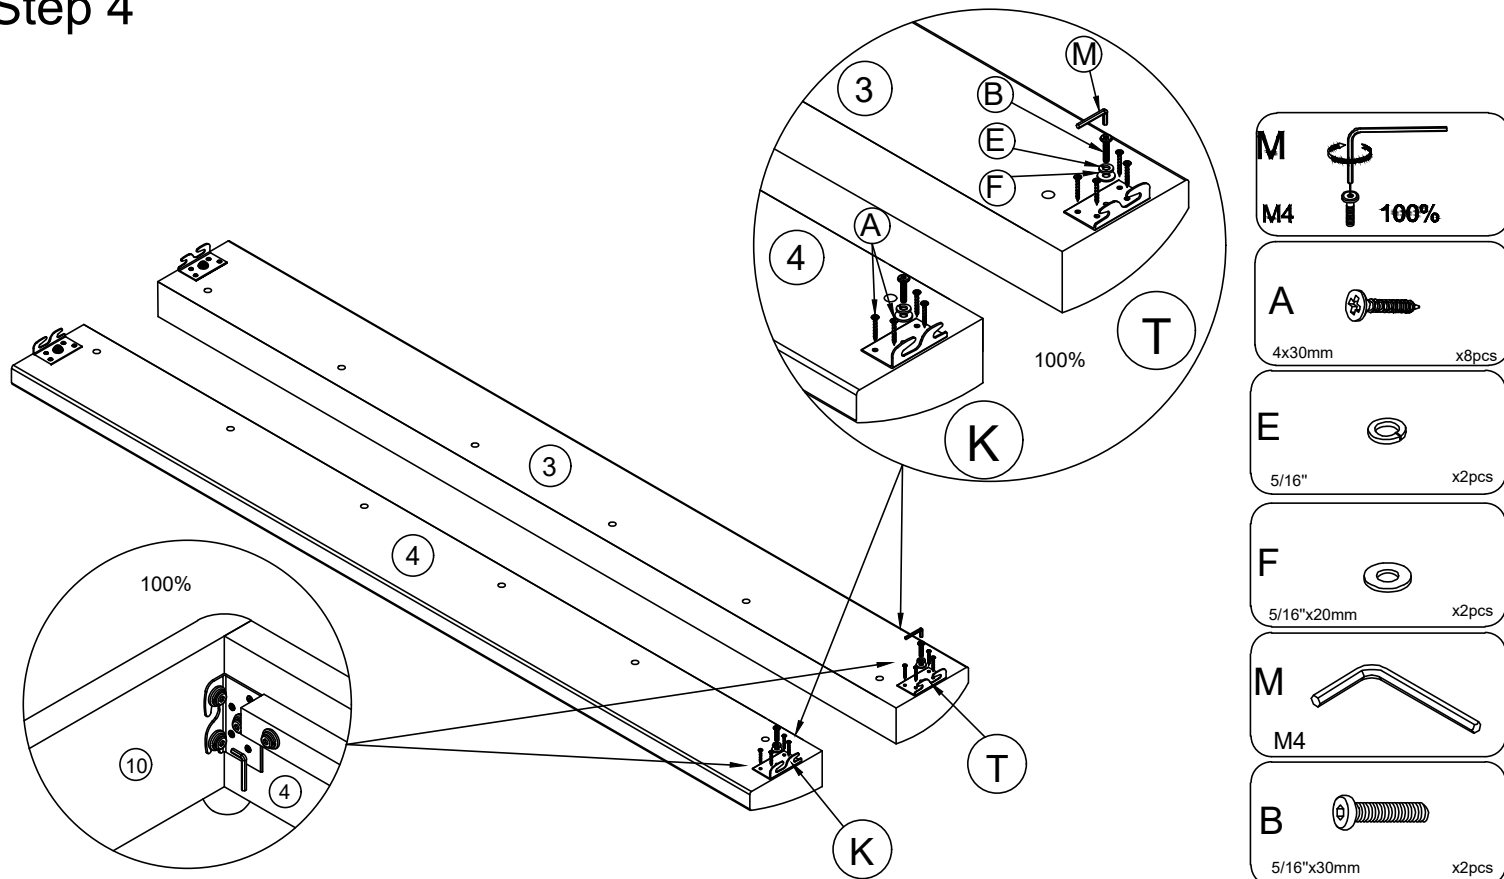


Use the Metal pad (T) to attach to the Side Rail (3), use the Metal pad (K) to attach the Side Rail (4).

By using the Screw (A) and the Bolts (B) with M4 Allen Wrench (M) to connect the Metal pad and the Side Rail





Note :The direction of the Metal Pad and this place is connected to the Footboard (10).

Step 5

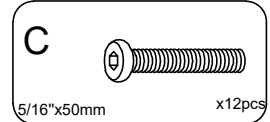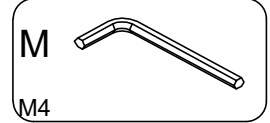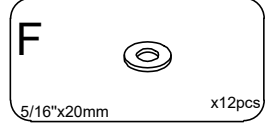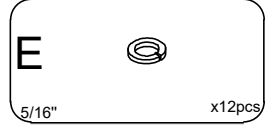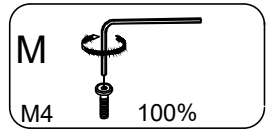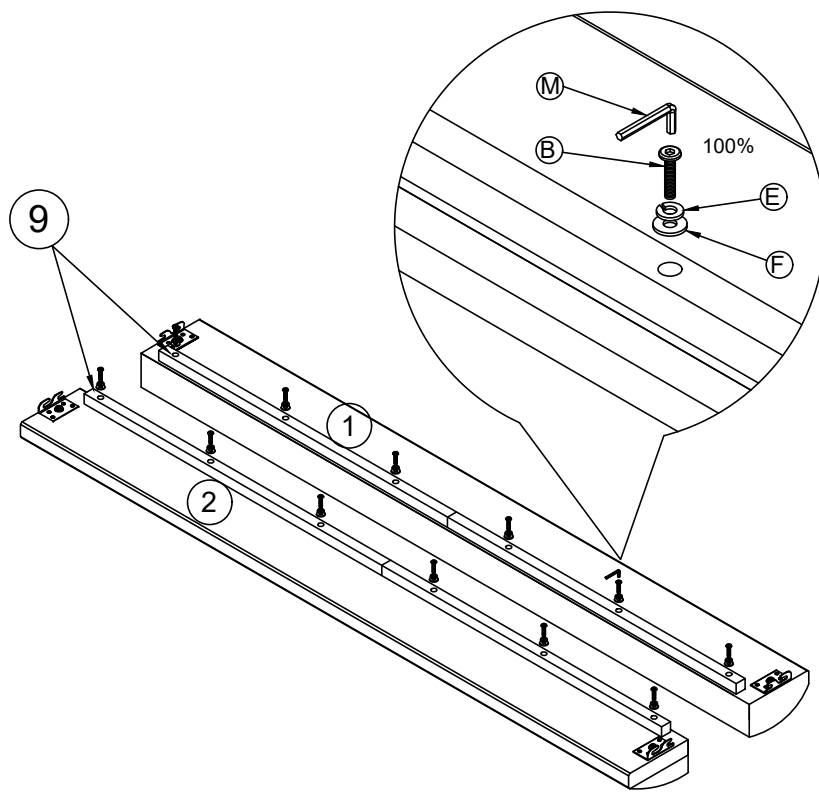



Attach the Support Rail (9) to the Side Rail (3) and the Side Rail (4). By using the Bolts (C), the Flat Washer (F) and the Lock Washer (E) with M4 Allen Wrench (M)

Step 6

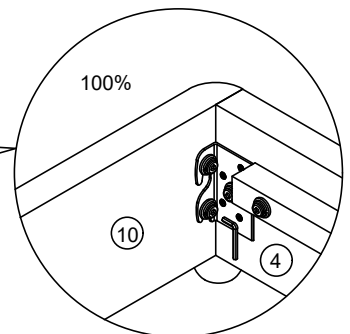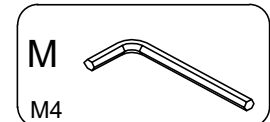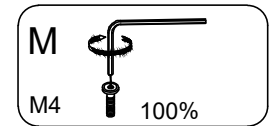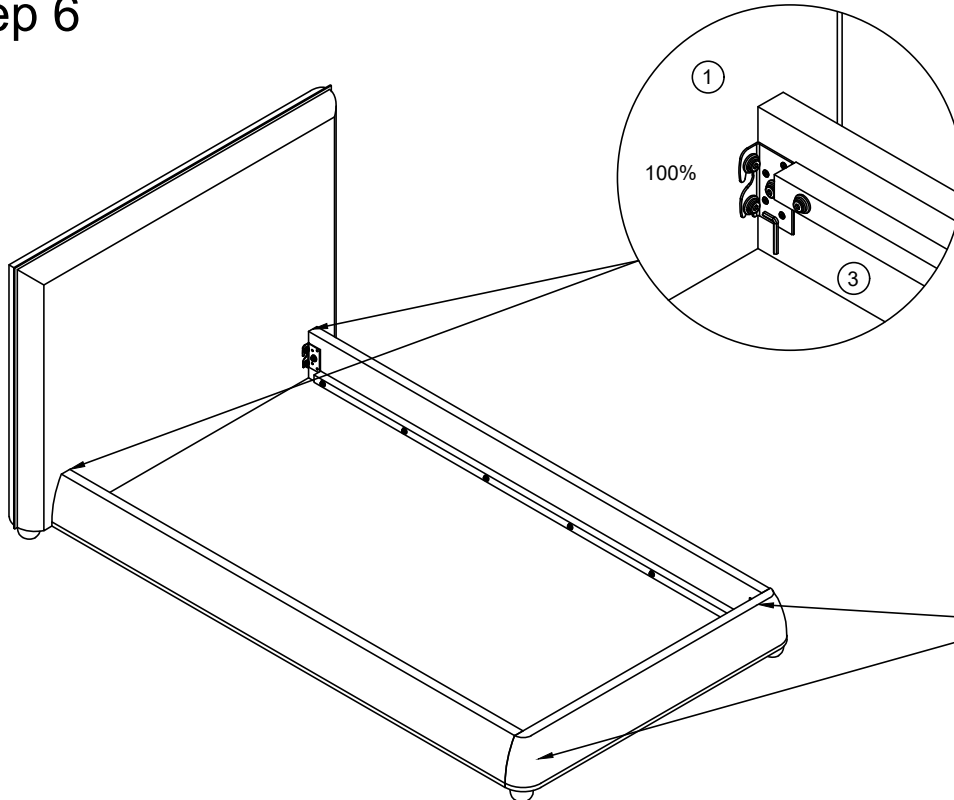



Attach the Side Rail (3) to the Headboard (R) (1) and the Side Rail (4) to the Headboard (L) (2), by using M4 Allen Wrench (M) to tighten the Bolts (B). Then attach the Footboard (10) to the Side Rail (3) and the Side Rail (4) by using M4 Allen Wrench (M) to tighten the Bolts (B). (Note: the direction of the Metal pad is down)

Step 7

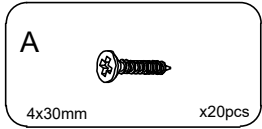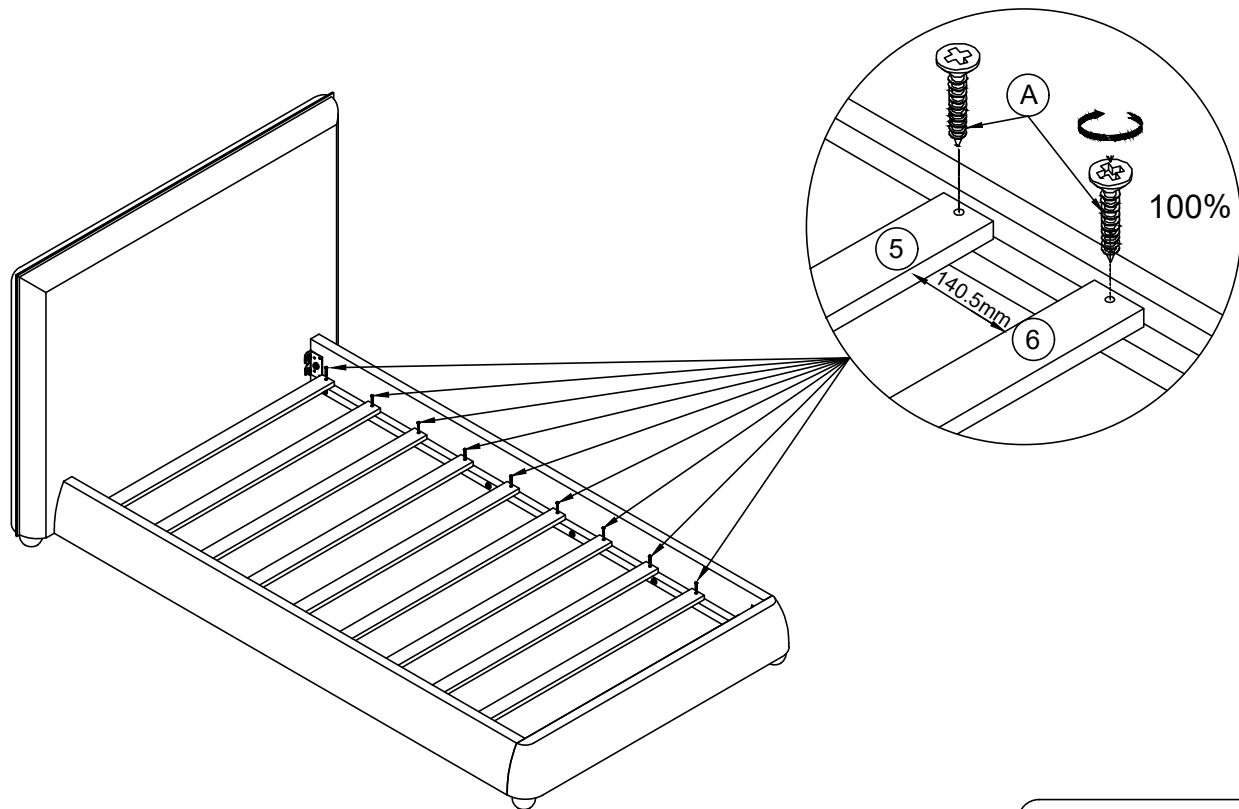


Assemble the Slats with 2pre-holes (6) to the bed Sides Rail (R)(3). Use screw A

Step 8

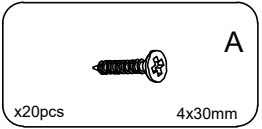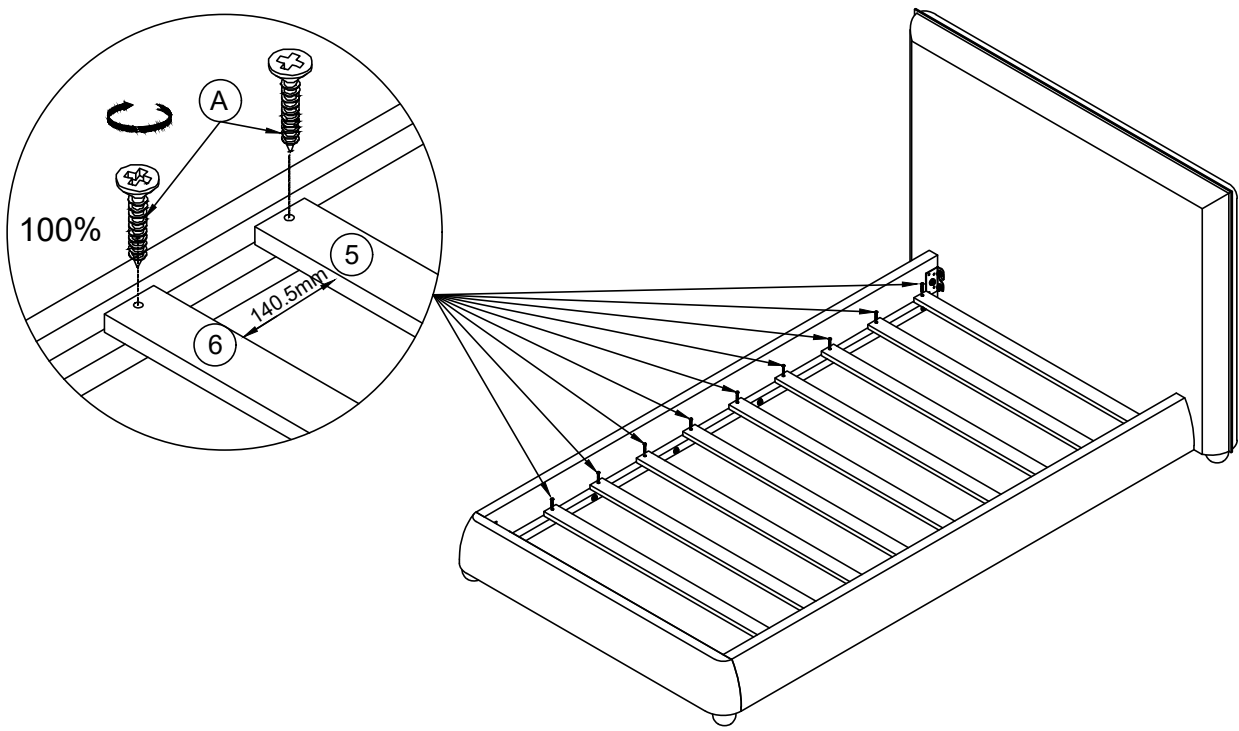

Assemble the Slats with 2pre-holes (6) to the bed Sides Rail (L)(4). Use screw A

Finish

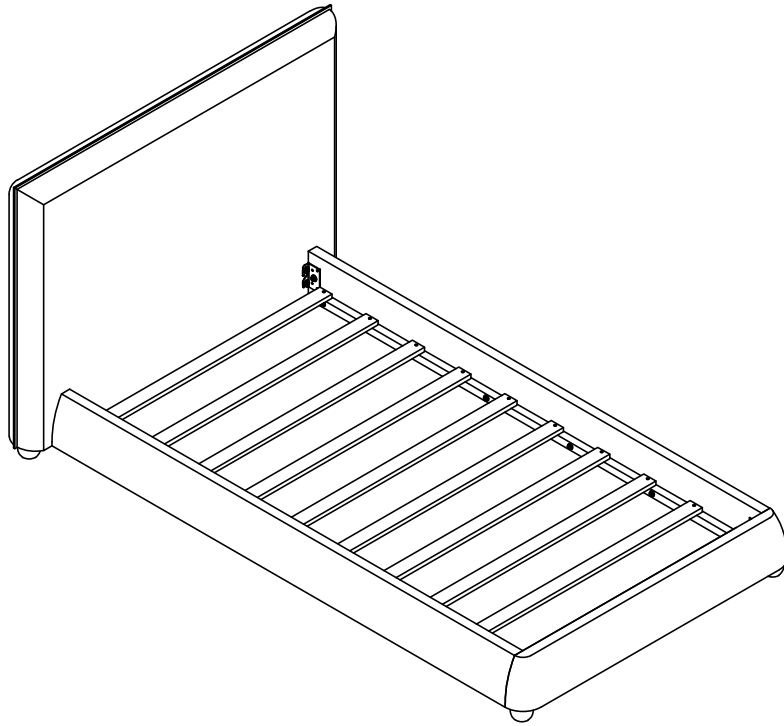

Thank you for your trust and preference in using our products.
The product will bring you a peaceful sleep forever