

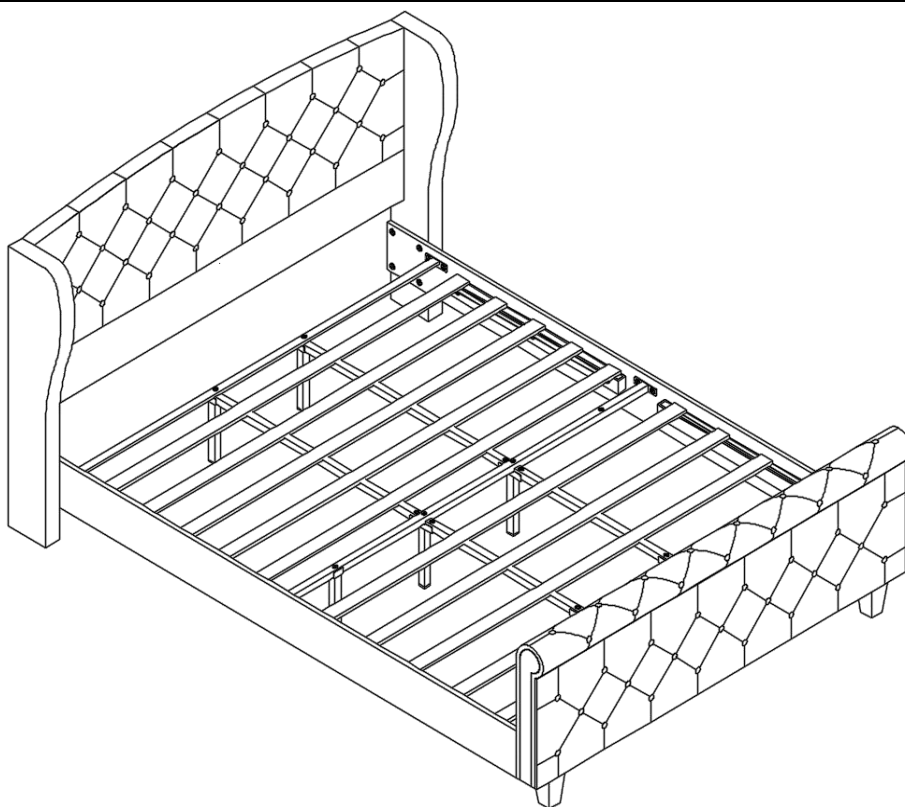
Assembly Instructions

Caution : You must read this before you proceed

Care & Maintenance

- ⊘  Not for commercial use. For residential use only.
 - ✓  Furniture may scratch floors. We recommend using furniture pads to protect your floors.
 - ⊘  Do not put hot items directly on furniture surface.
 - ⊘  Do not clean furniture with harsh cleansers or polish.
 - ⊘  Do not place furniture under direct sunlight.
 - ⊘  Do not place furniture near heating or cooling vents.
 - ⊘  Do not write on furniture without a padded barrier to protect the surface.
 - ⊘  Do not place furniture outside . For indoor use only.
 - ⊘  Stains may be removed with mild soap solution and damp cloth.
 - ⊘  Children should not climb or jump on the furniture.
-
- ✓  Dust and pick-up spills using a clean, non-colored, lint-free cloth.

BED
















NOTE : This Bed is NOT a TOY.

Keep your child / children at bay during the assembly process.

The Daybed is **HEAVY**.

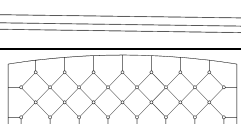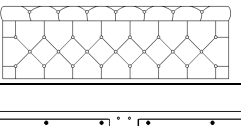



To prevent injury to yourself or damage to the product a minimum of two adults are required whenever moving or lifting the product.

Parts List			
Label	Picture	Description	QTY
A1		Front and back support foot	4
A2		Middle support foot	2
A3		Side support foot	2
A4		Angle iron	4
A5		Non-slip pads	4
A6		Bedside connecting rod	1
A7		Middle connecting rod	1
A8		Bed tail connecting rod	2
A9		Center connecting rod	2
B1		Headboard	1
B2		Footboard	1
B3		Left side panel	1
B4		Right side panel	1
B5		Right wing panel	1
B6		Left wing panel	1
B7		The baffle under the head of the bed	1
B8		Slat	2
C		Plastic feet	2
Hardware			
Label	Picture	Description	QTY
①		Allen Wrench	1
②		Bolt(M8 x 50mm)	24
③		Bolt(M8 x 20mm)	28
④		Washer	52




Assembly Preparation

Before
Beginning
Assembly:

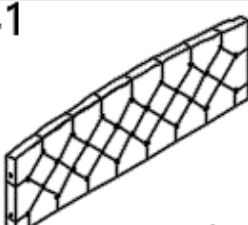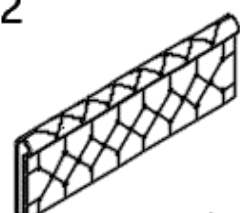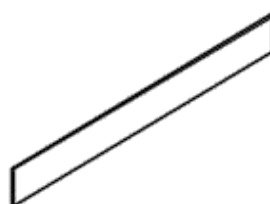N761P350923

A1  4pcs	A2  2pcs	A3  2pcs	A4  4pcs	
A5  4pcs	A6  1pcs	A7  1pcs	A8  2pcs	A9  2pcs
1  M8 1pcs	2  M8*50 24pcs	3  M8*20 28pcs	4  M8*19 52pcs	
B1  1pcs	B2  1pcs	B5  1pcs	B6  1pcs	
B7  1pcs	C  2pcs			

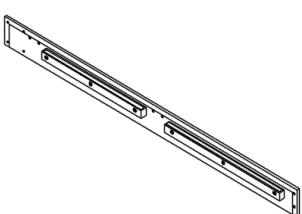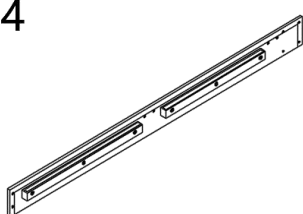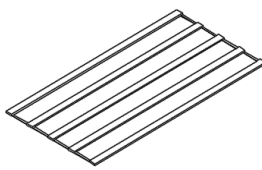N761P350818

B3  1pcs	B4  1pcs	B8  2pcs
---	---	---



• Read instructions, cover to cover-



• Have 2 adults on hand for assembly-



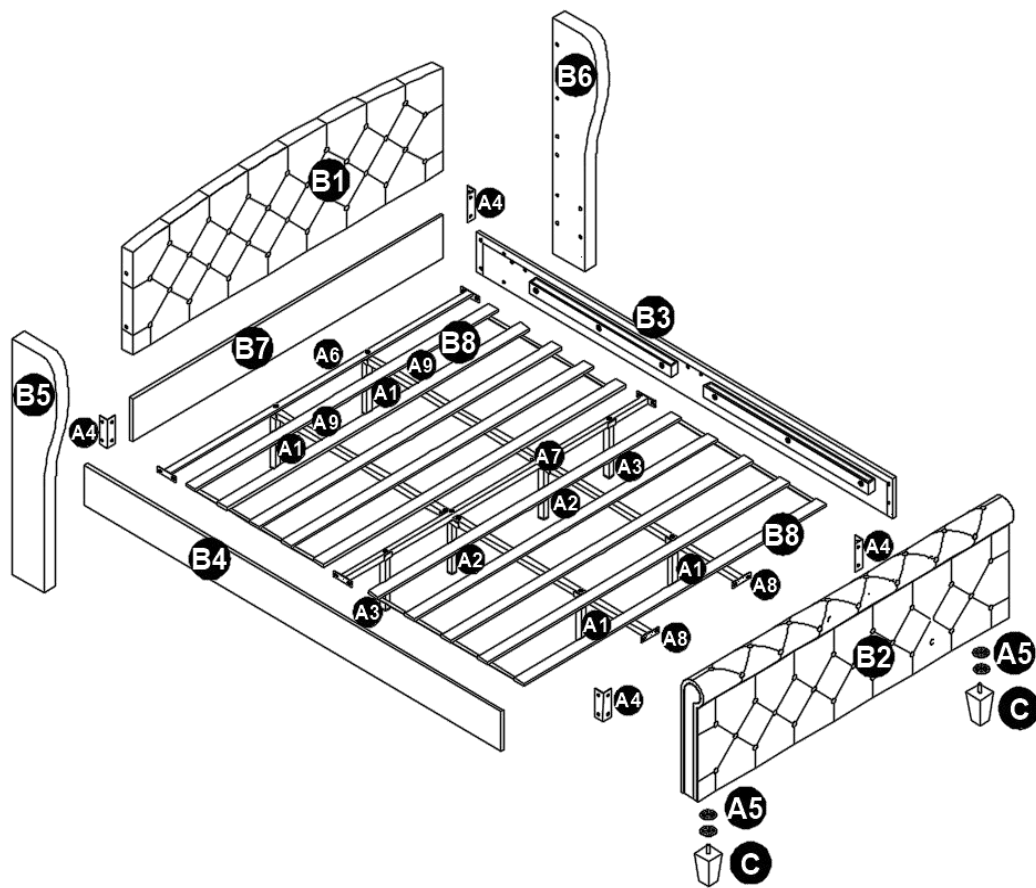
• Do not assemble on flooring or carpet-



• Assemble on a clean non-marring surface (packing foam)-




• Save all packaging until finished-



This Bed has multiple parts and may require up to 60 minutes to assemble.
To give you an overview of the Bed parts, the above picture is to help you put the various Bed parts into perspective.
Please read through the instructions below to familiarise yourself with the parts and steps before assembly.

Step 1

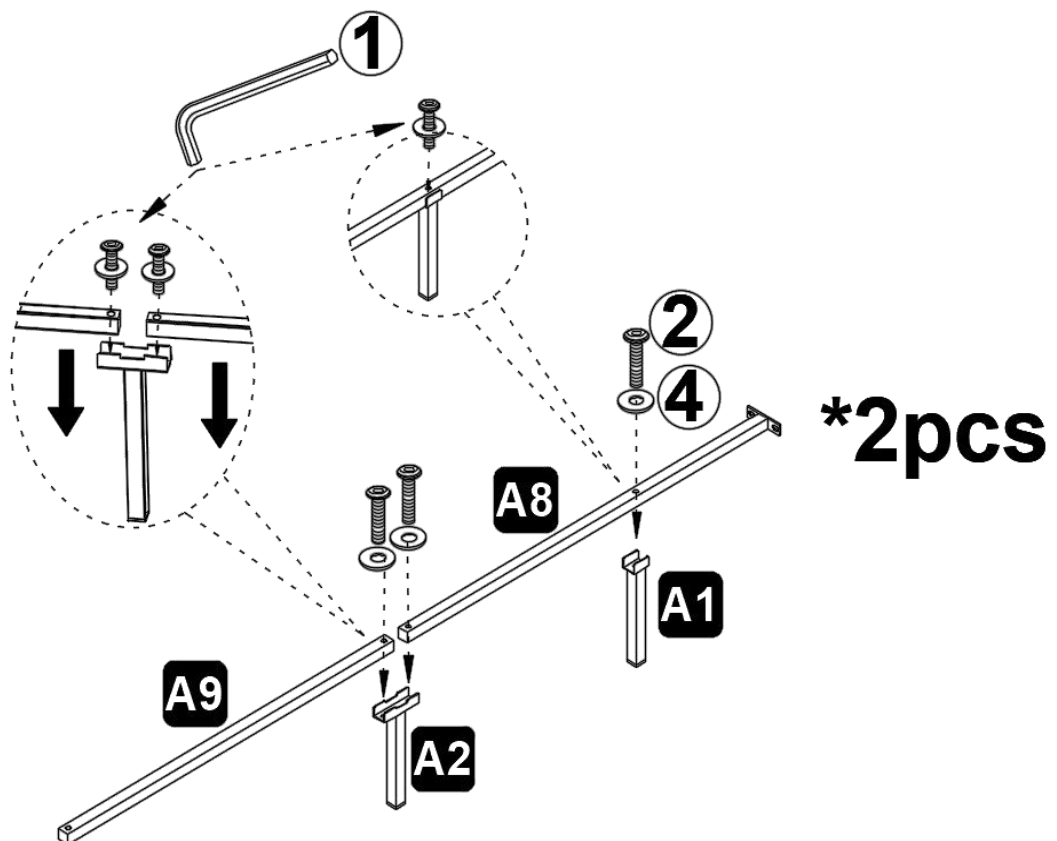
- ①  X1
- ②  X6
- ④  X6



As shown in the figure, use allen wrench (1), bolt (2), washer (4) to fix the front and rear connecting rods center connecting rod (A9) and bed tail connecting rod (A8) to the middle support foot (A2) and front and back support foot (A1).

Step 2


- | | | |
|---|---|----|
| ① |  | X1 |
| ② |  | X2 |
| ④ |  | X2 |

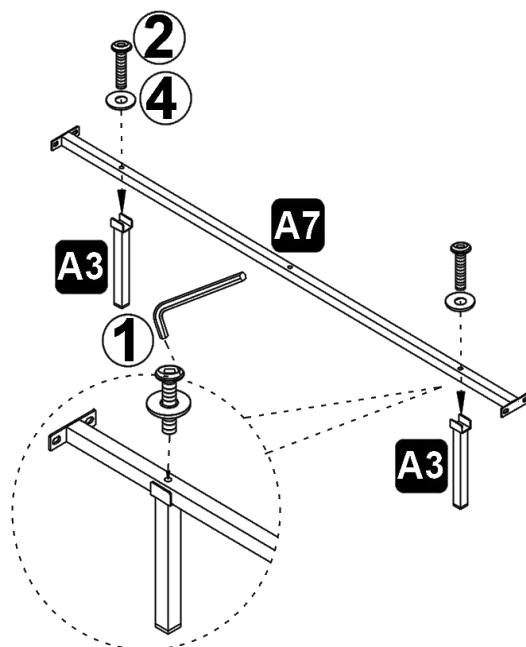

Use the allen wrench (1), bolt (2), washer(4) to fix the bedside connecting rod (A6) to the front and back support foot (A1) as shown in the figure, and the middle connecting rod (A7) to the middle support foot (A2).


Step 3

- | | | |
|---|---|----|
| ① |  | X1 |
| ② |  | X4 |
| ④ |  | X4 |

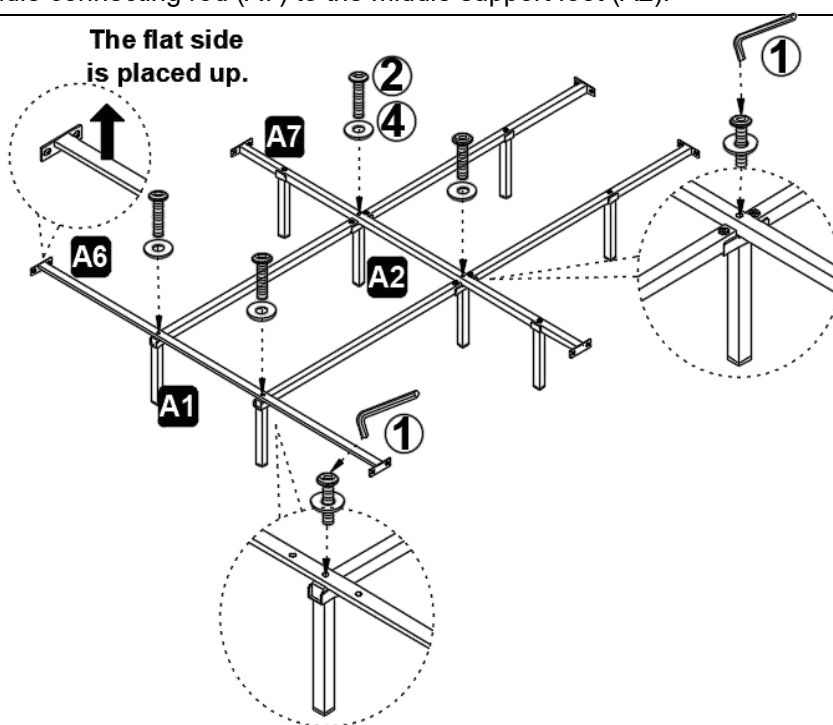

Use the allen wrench (1), bolt (2), washer(4) to fix the bedside connecting rod (A6) to the front and back support foot (A1) as shown in the figure, and the middle connecting rod (A7) to the middle support foot (A2).

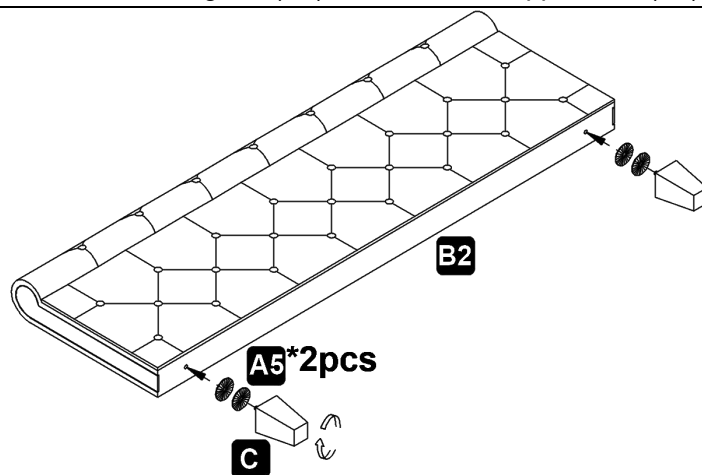
Step 4



The plastic feet (C) and the non-slip pads (A5) are fixed clockwise at the corresponding position of the end of the footboard (B2).

Step 5

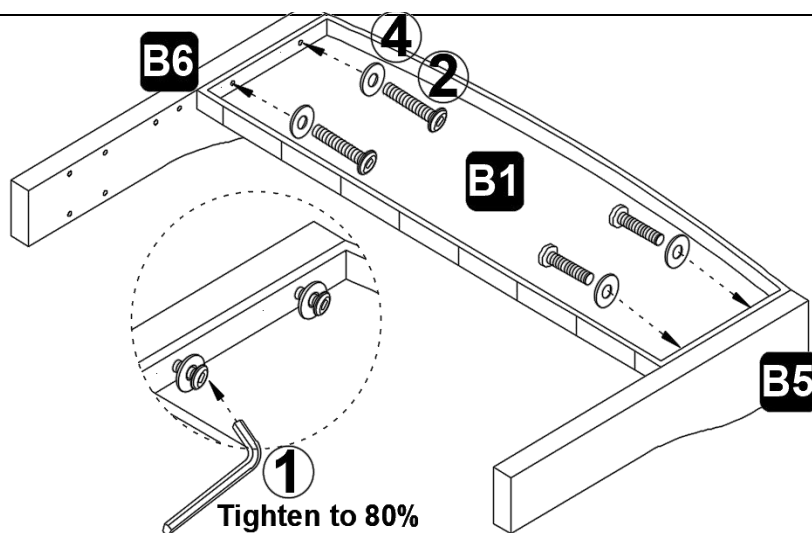
- ①  X1
- ②  X4
- ④  X4



Align the hole of the head of the headboard (B1) with the hole in the right wing panel (B5) and left wing panel (B6), and then fix it with allen wrench (1), bolt (2), washer(4).

Step 6

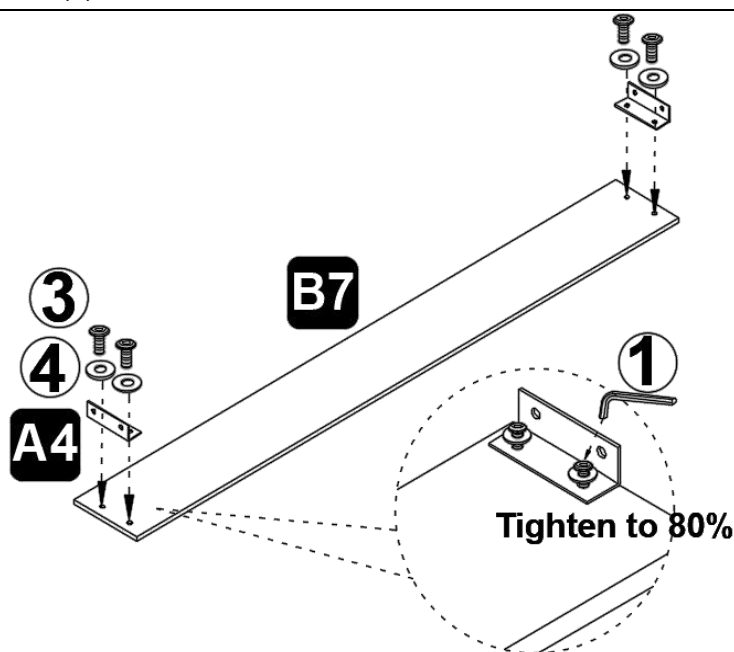
- ①  X1
- ③  X4
- ④  X4



Use allen wrench (1), bolt (3) and washer (4) to secure the angle iron (A4) to the baffle under the head of the bed (B7) at the head of the bed.

Step 7

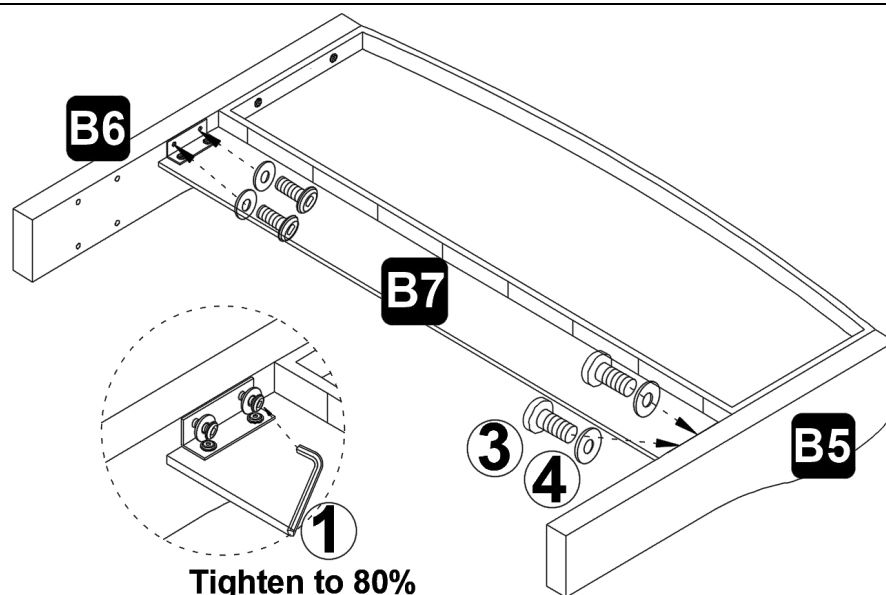
- ①  X1
- ③  X4
- ④  X4



Use allen wrench (1), bolts (3) and washers (4) to fix the the baffle under the head of the bed (B7) on the head of the bed and then the right wing panel (B5) and left wing panel (B6).

Step 8

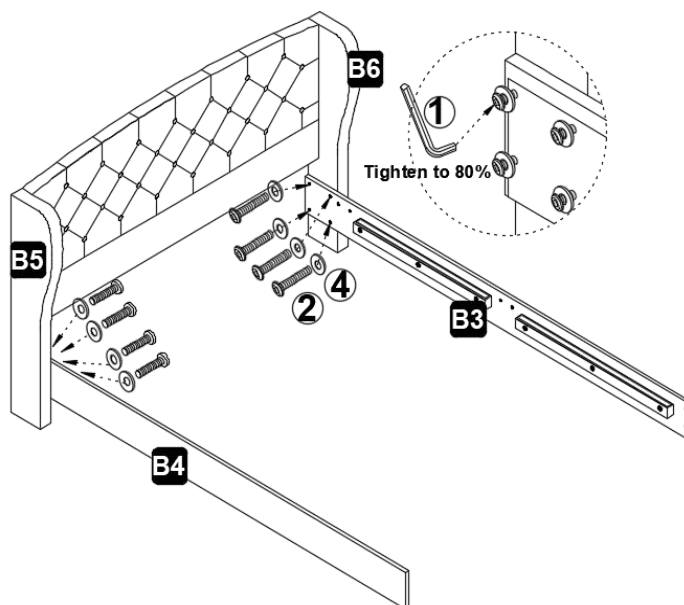
- ①  X1
- ②  X8
- ④  X8



Use allen wrench (1), bolt (2), washer(4) to fix the right wing panel (B5) and left wing panel (B6) on the left side panel (B3) and right side panel (B4).

Step 9

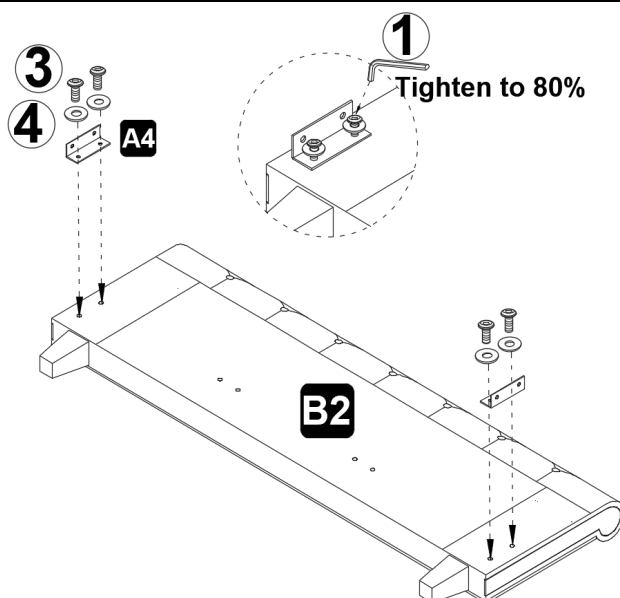
- ①  X1
- ③  X4
- ④  X4



Use the allen wrench (1), bolt (3), washer (4) to fix the angle iron (A4) to the footboard (B2).

Step 10

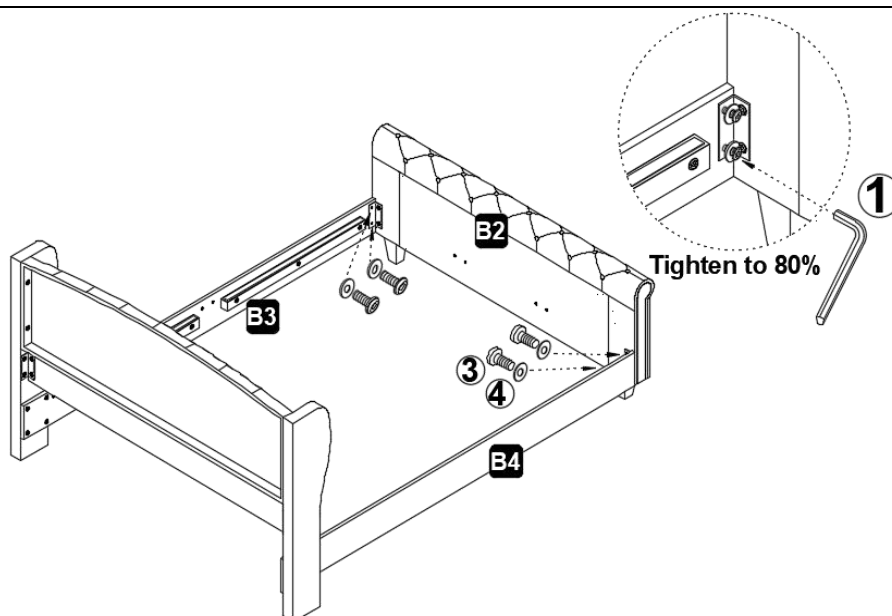
- ①  X1
- ③  X4
- ④  X4



Use allen wrench (1), bolt (3) and washer (4) to fix the left side panel (B3) and right side panel (B4) on footboard (B2)


Step 11

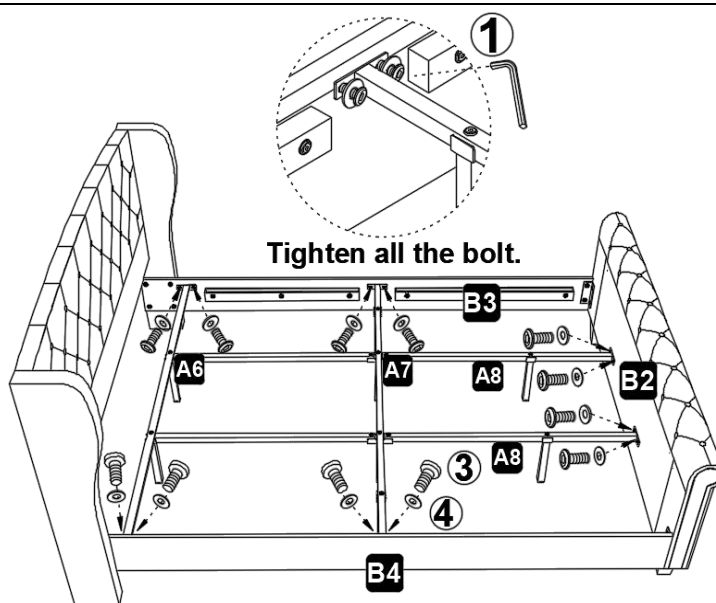- ①  X1
- ③  X12
- ④  X12




Use allen wrench (1), bolt (2) and washer (4) to fix the left and right ends of the bedside connecting rod (A6) and the middle connecting rod (A7) on the left panel (B3) and the right panel (B4), and fix the bed tail connecting rod (A8) to the footboard (B2).

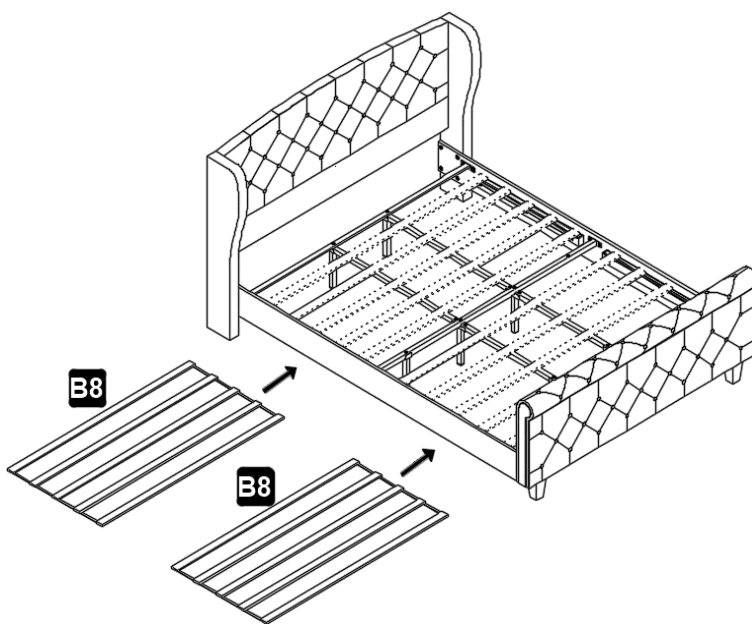Step 12



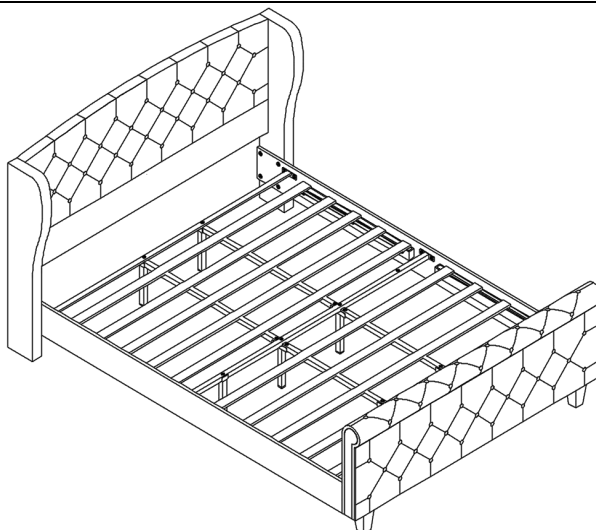Place the slat (B8) on the assembled bed frame and paste the magic strip into place.



Your bed is ready for use.

Note: After assembly and before using the bed, inspect to make sure all parts are properly connected and securely fastened.