


Assembly Instruction


Item: GMB05

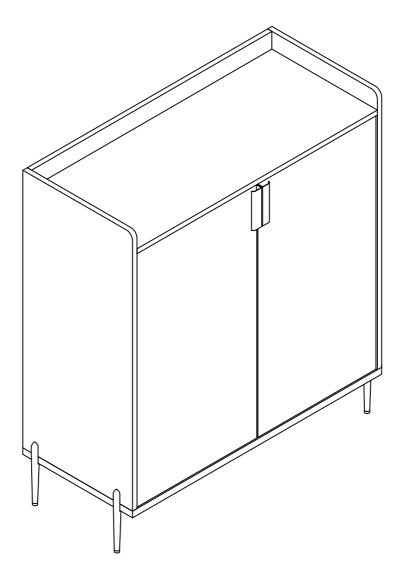


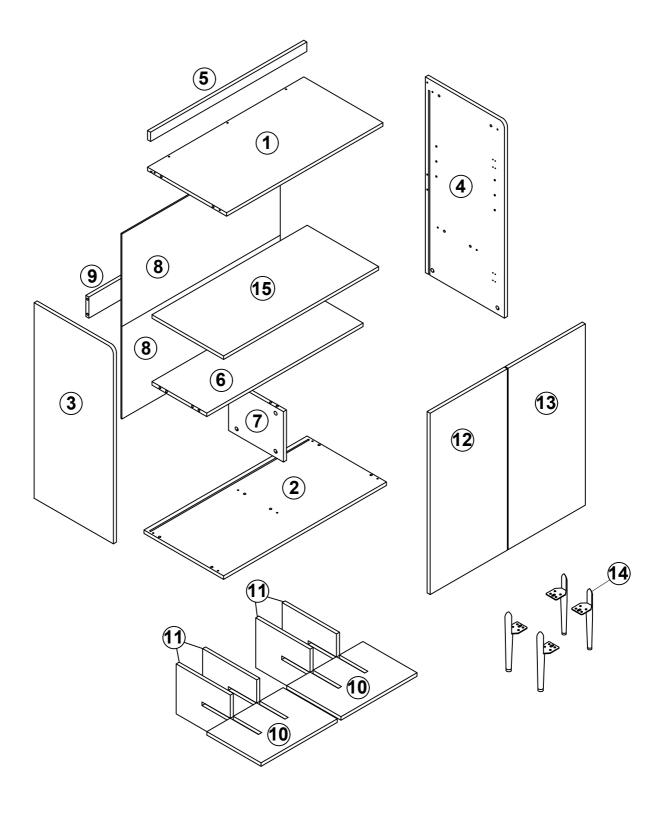



HARDWARE

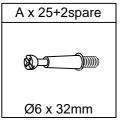


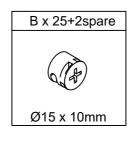


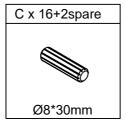


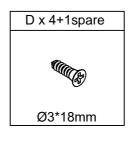


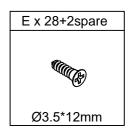





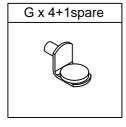





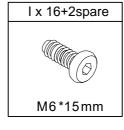

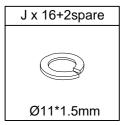

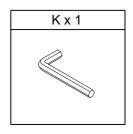

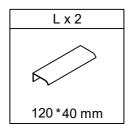


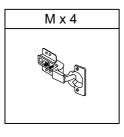




Installation of Cams and Pins

Screw the pin into the hole. To set the cams correctly, ensure that the arrow on the cam is opening to the hole of the pin it is locking. Lock the cam by turning the cam head with a screwdriver until it is tightened. Please do not use an electric screwdriver to assemble the unit.

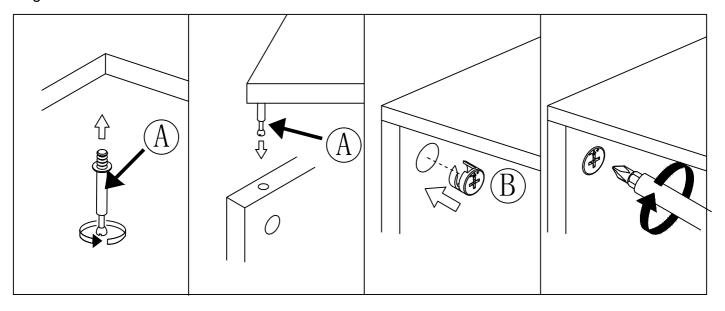


Read each step carefully before starting. It is very important that each step of instruction is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.

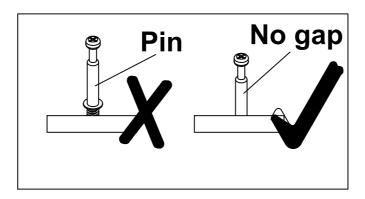


HING ADJUSTMENT GUIDE


It may be necessary to adjust the hinges so that the doors align. Use the instructions below as a guide.

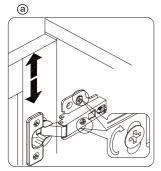


Up and Down Adjustment
To adjust the door vertically loosen the screw as shown and move up and down as needed.

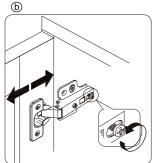


Front and Back Adjustment
To adjust the gap from the door to the main
frame turn the screw clockwise or anti-clockwise
as needed.

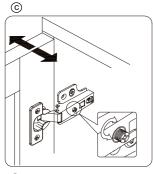


Left and Right Adjustment
To adjust the door laterally adjust the screw
as shown by turning clockwise or
anti-clockwise.

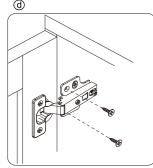



Please fix other screws.

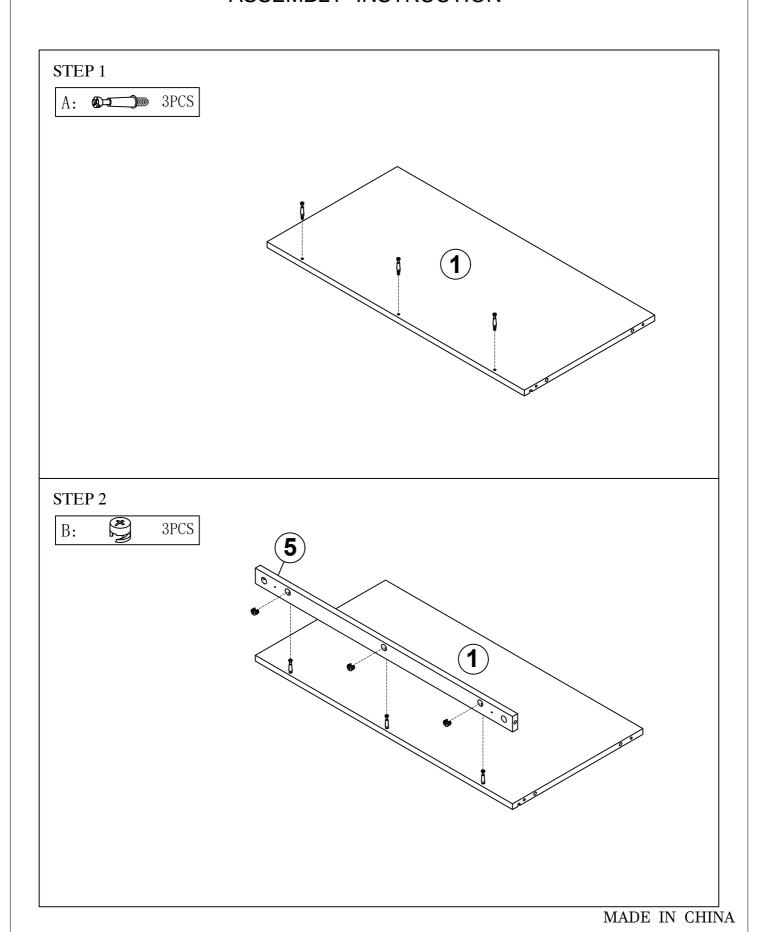


MADE IN CHINA

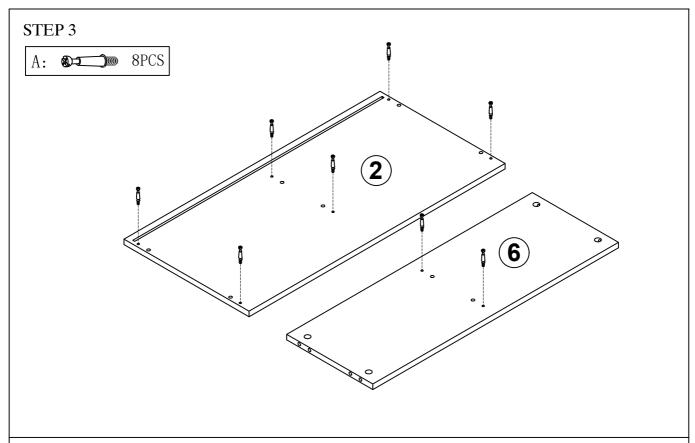


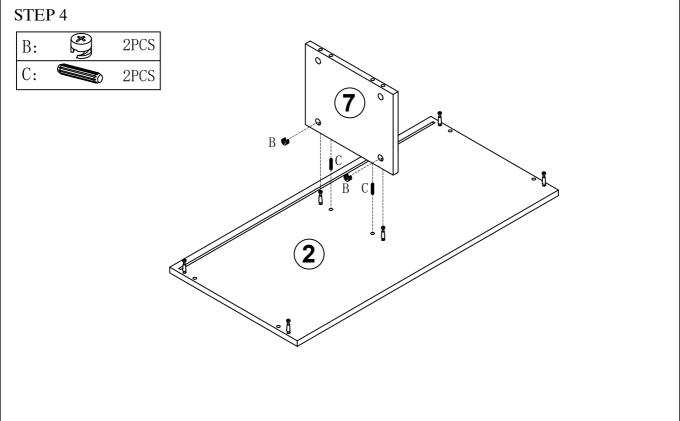


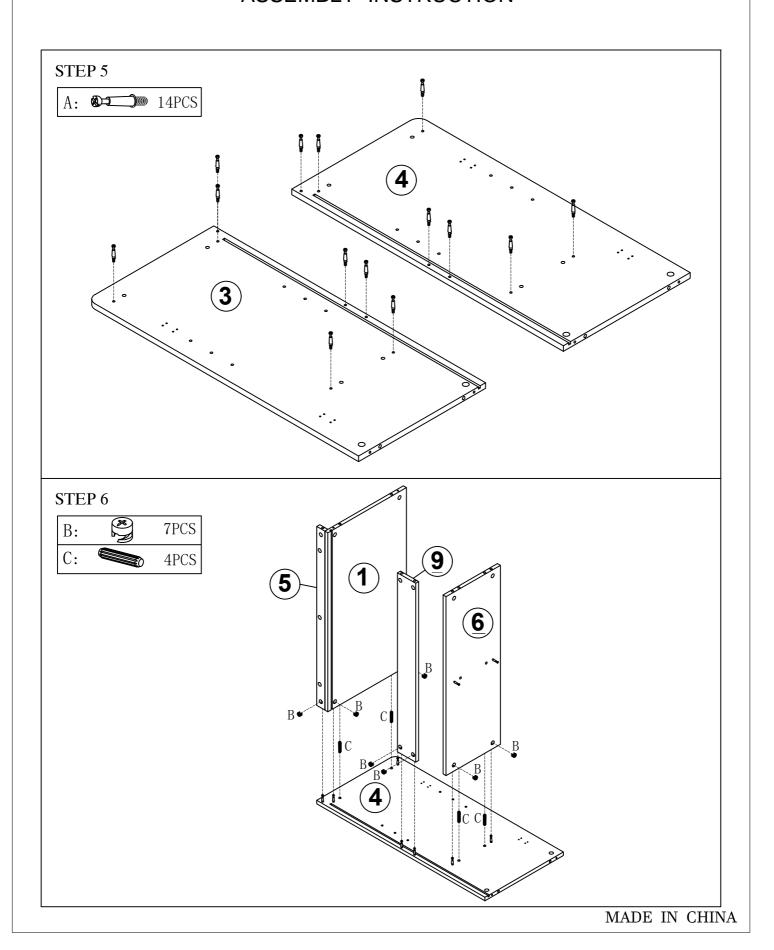


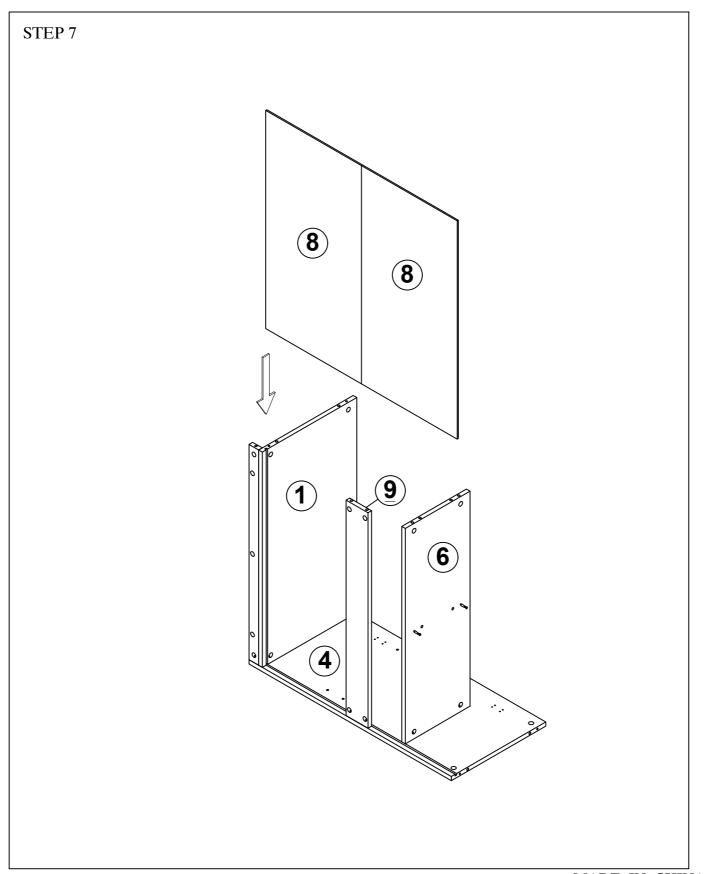


MADE IN CHINA

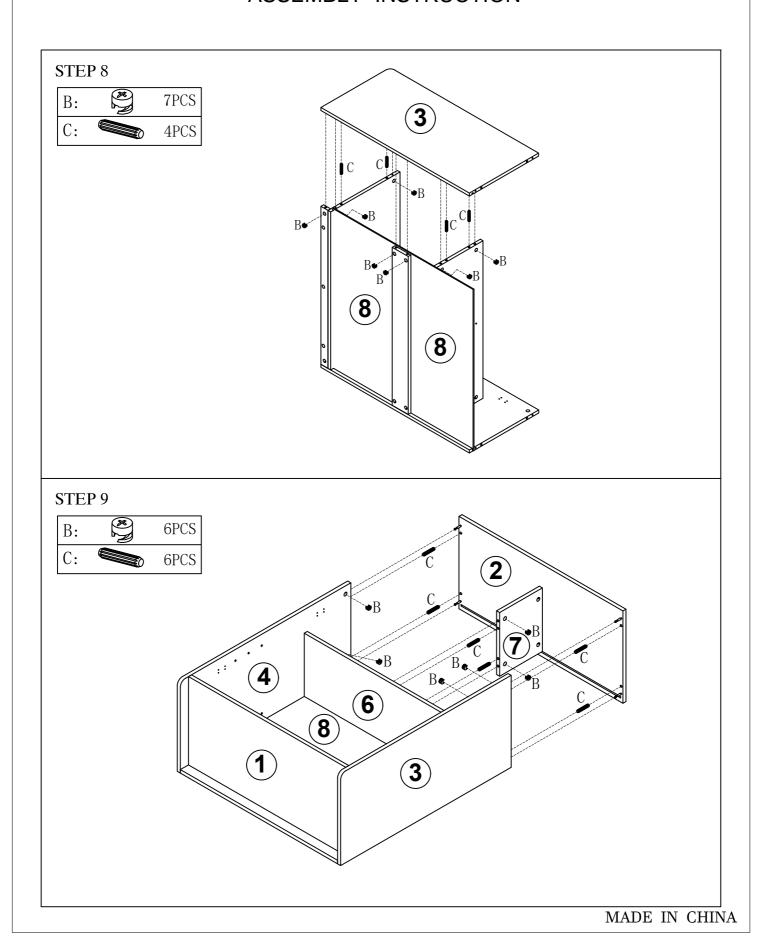


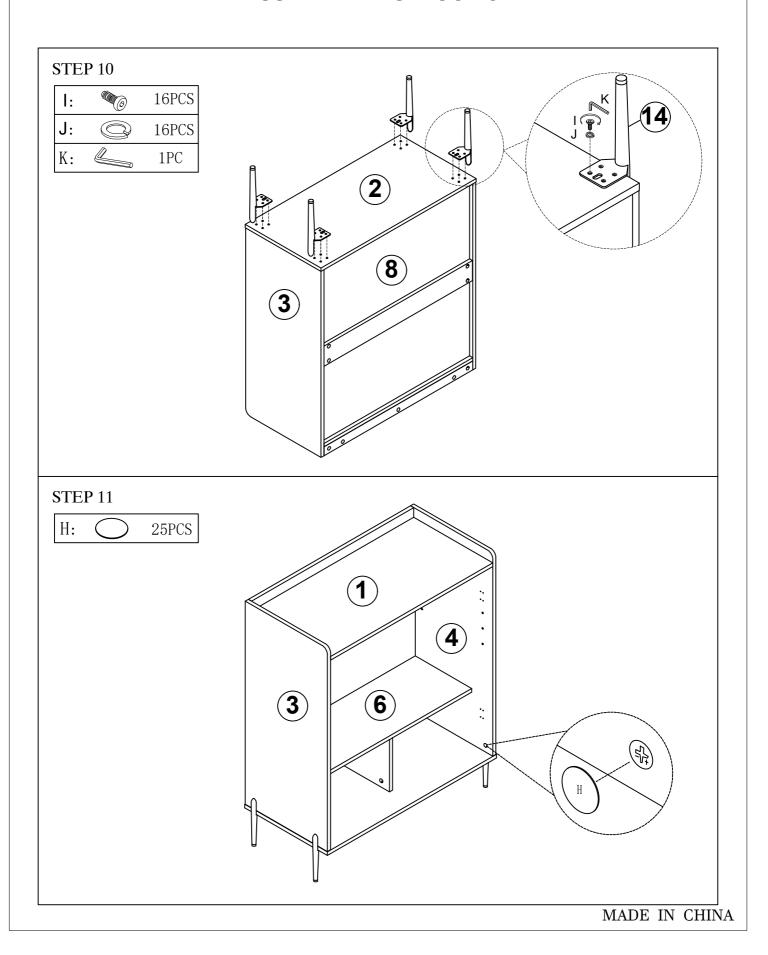

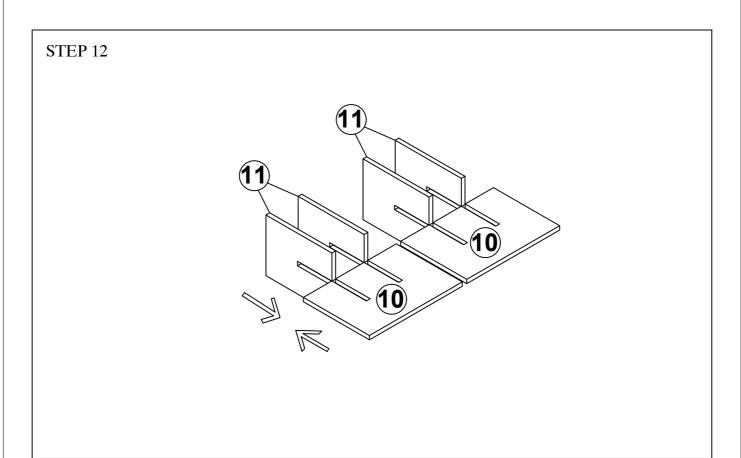


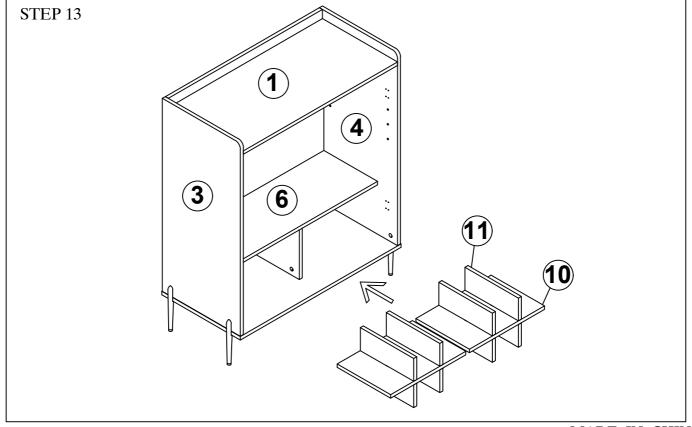


MADE IN CHINA

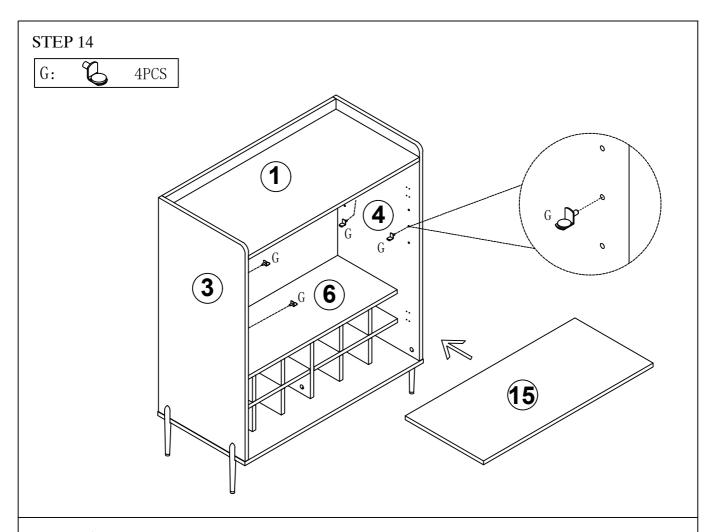




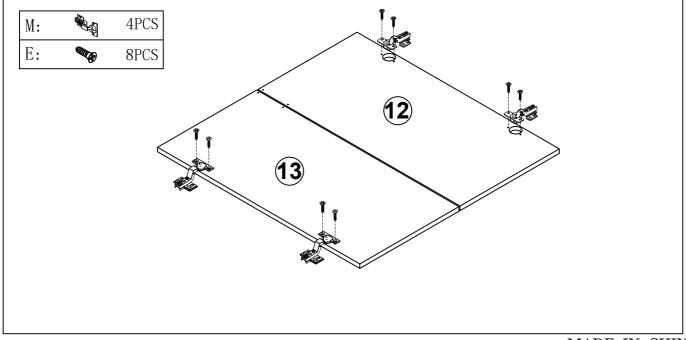

MADE IN CHINA

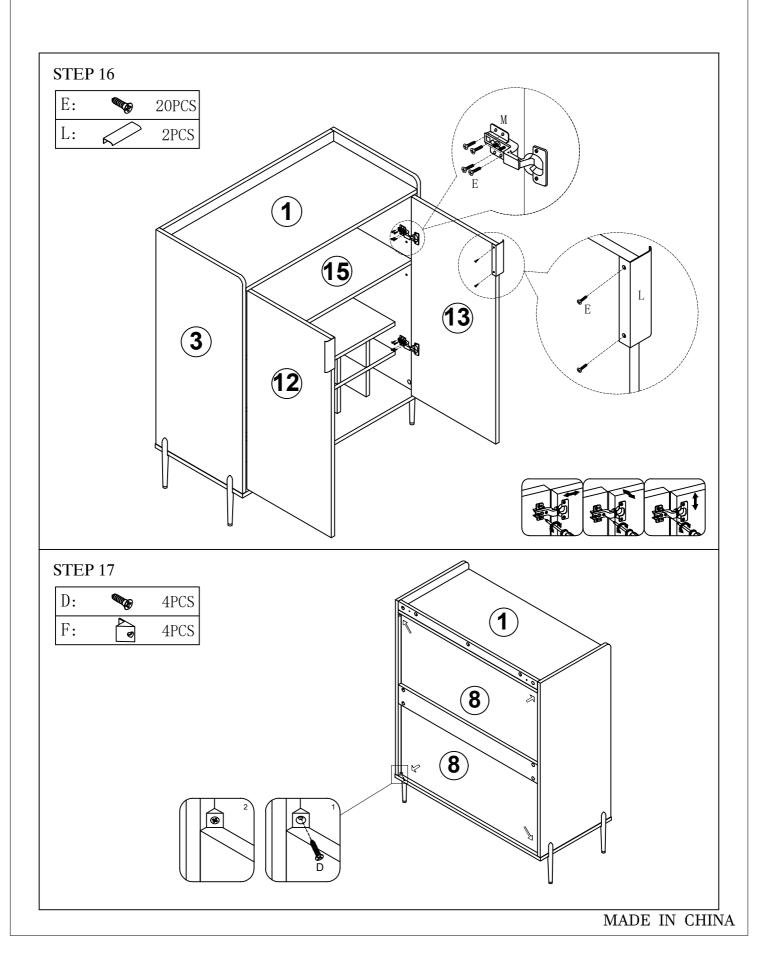

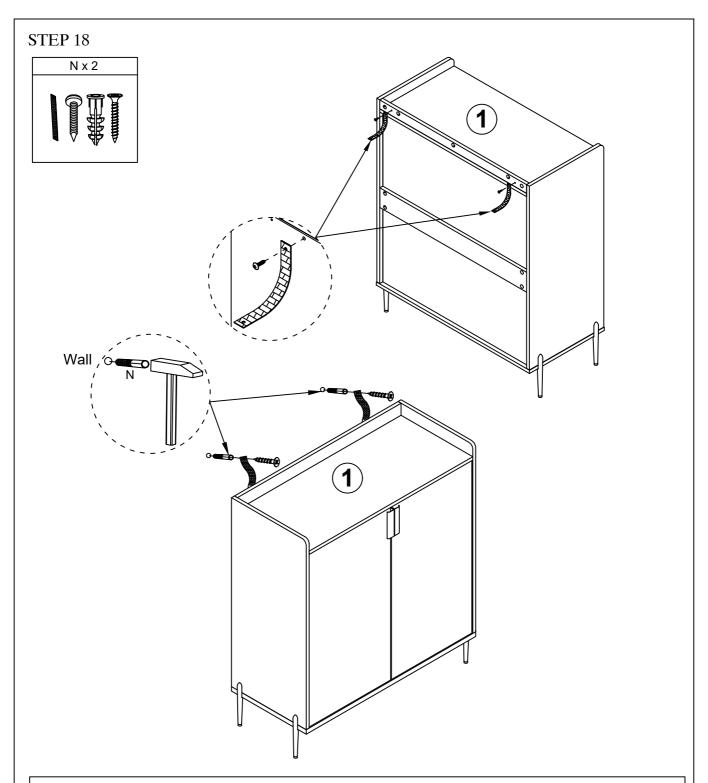

If it is a solid wall, please use expansion and self-tapping screws, if it is a wooden wall, only use self-tapping screws, please do not overtighten the screws