




28R16 Installation Instructions

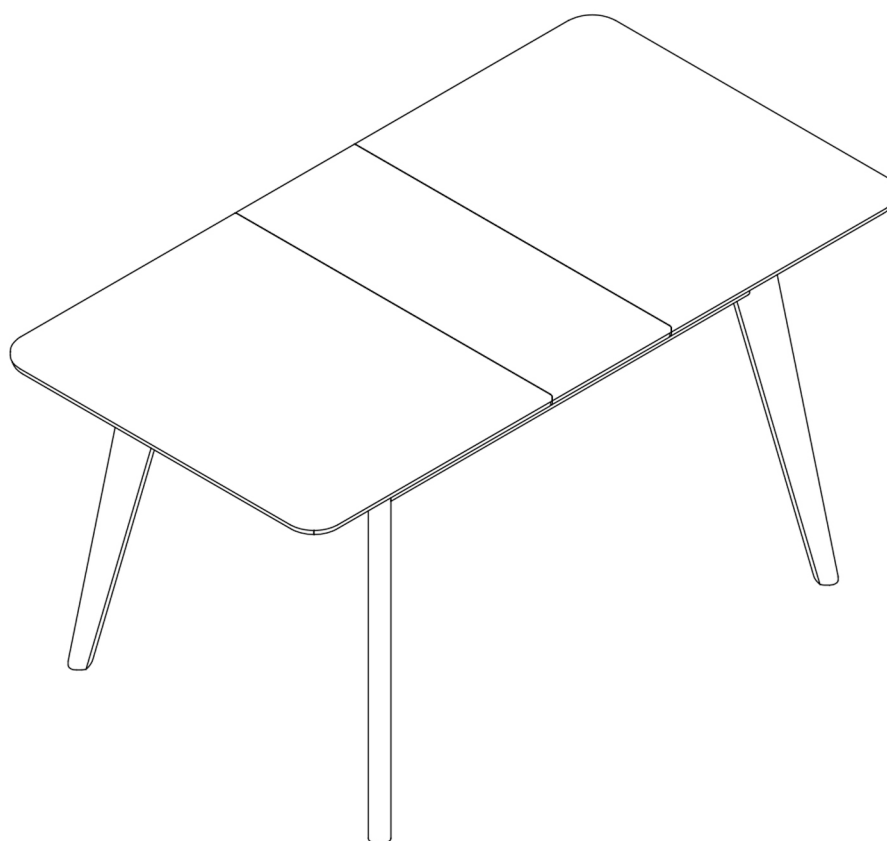

1. Place the product upside down on the carpet

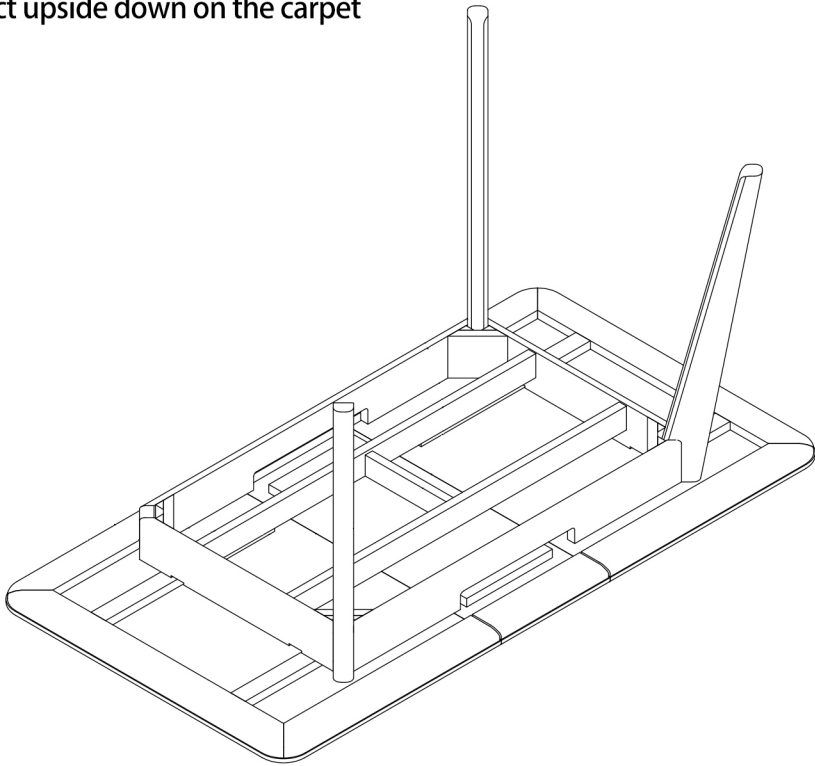

2. Then install the table legs on the dining table; Finally, slip in parts D, C and B in turn and tighten the nuts with a wrench

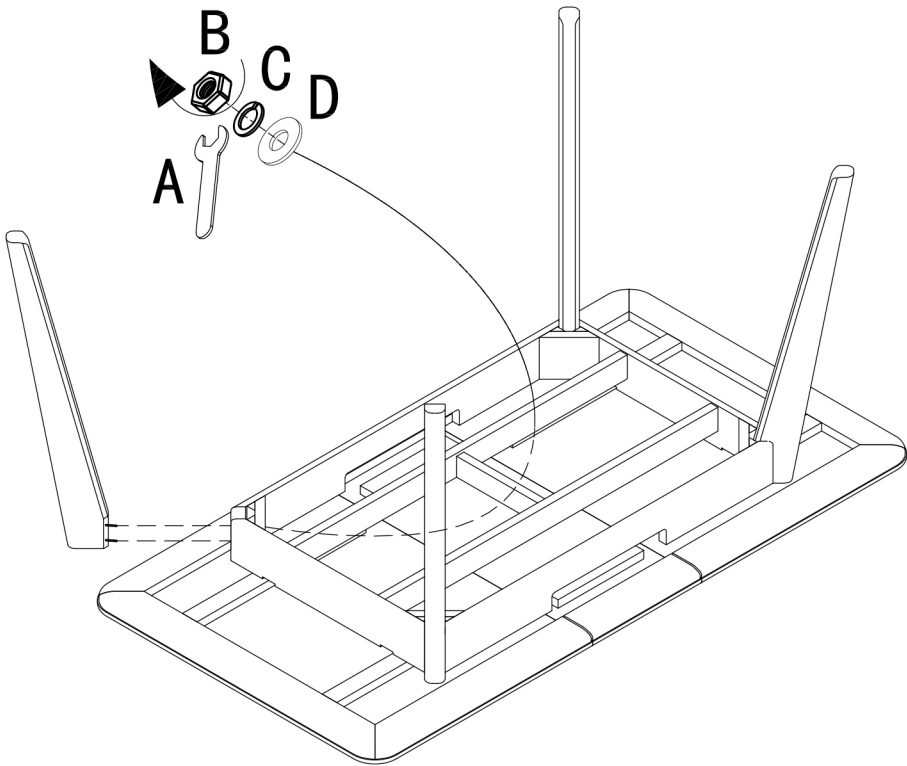

			
A: Open-End Wrenches 14#*1	B: Nuts M8*14=8	C: Bullet washers Ø8*13=8	D: Flat washers Ø8*22=8